

# **Accellera Standard OVL V2**

## **Library Reference Manual**

Software Version 2.0rc

June 2007



© 2005-2007 Accellera Organization, Inc.  
All rights reserved.

## STATEMENT OF USE OF ACCELLERA STANDARDS

Accellera Standards documents are developed within Accellera and the Technical Committees of Accellera Organization, Inc. Accellera develops its standards through a consensus development process, approved by its members and board of directors, which brings together volunteers representing varied viewpoints and interests to achieve the final product. Volunteers are not necessarily members of Accellera and serve without compensation. While Accellera administers the process and establishes rules to promote fairness in the consensus development process, Accellera does not independently evaluate, test, or verify the accuracy of any of the information contained in its standards.

Use of an Accellera Standard is wholly voluntary. Accellera disclaims liability for any personal injury, property or other damage, of any nature whatsoever, whether special, indirect, consequential, or compensatory, directly or indirectly resulting from the publication, use of, or reliance upon this, or any other Accellera Standard document. By using an Accellera standard, you agree to defend, indemnify and hold harmless Accellera and their directors, officers, employees and agents from and against all claims and expenses, including attorneys' fees, arising out of your use of an Accellera Standard.

Accellera does not warrant or represent the accuracy or content of the material contained herein, and expressly disclaims any express or implied warranty, including any implied warranty of merchantability or suitability for a specific purpose, or that the use of the material contained herein is free from patent infringement. Accellera Standards documents are supplied ?AS IS.?

The existence of an Accellera Standard does not imply that there are no other ways to produce, test, measure, purchase, market, or provide other goods and services related to the scope of an Accellera Standard. Furthermore, the viewpoint expressed at the time a standard is approved and issued is subject to change due to developments in the state of the art and comments received from users of the standard. Every Accellera Standard is subjected to review periodically for revision and update. Users are cautioned to check to determine that they have the latest edition of any Accellera Standard.

In publishing and making this document available, Accellera is not suggesting or rendering professional or other services for, or on behalf of, any person or entity. Nor is Accellera undertaking to perform any duty owed by any other person or entity to another. Any person utilizing this, and any other Accellera Standards document, should rely upon the advice of a competent professional in determining the exercise of reasonable care in any given circumstances.

Accellera may change the terms and conditions of this Statement of Use from time to time as we see fit and in our sole discretion. Such changes will be effective immediately upon posting, and you agree to the posted changes by continuing your access to or use of an Accellera Standard or any of its content in whatever form.

Interpretations: Occasionally questions may arise regarding the meaning of portions of standards as they relate to specific applications. When the need for interpretations is brought to the attention of Accellera, Accellera will initiate action to prepare appropriate responses. Since Accellera Standards represent a consensus of concerned interests, it is important to ensure that any interpretation has also received the concurrence of a balance of interests. For this reason, Accellera and the members of its Technical Committees are not able to provide an instant response to interpretation requests except in those cases where the matter has previously received formal consideration.

Comments for revision of Accellera Standards are welcome from any interested party, regardless of membership affiliation with Accellera. Suggestions for changes in documents should be in the form of a proposed change of text, together with appropriate supporting comments. Comments on standards and requests for interpretations should be addressed to:

Accellera Organization, 1370 Trancas Street #163, Napa, CA 94558 USA  
E-mail: [interpret-request@lists.accellera.org](mailto:interpret-request@lists.accellera.org)

Note: Attention is called to the possibility that implementation of this standard may require use of subject matter covered by patent rights. By publication of this standard, no position is taken with respect to the existence or validity of any patent rights in connection therewith. Accellera shall not be responsible for identifying patents for which a license may be required by an Accellera standard or for conducting inquiries into the legal validity or scope of those patents that are brought to its attention.

Accellera is the sole entity that may authorize the use of Accellera-owned certification marks and/or trademarks to indicate compliance with the materials set forth herein.

Authorization to photocopy, redistribute, publish, create derivative works from, sub-license or charge others to access or use, participate in the transfer or sale of, or directly or indirectly commercially exploit in whole or part of any Accellera standard for internal or personal use must be granted by Accellera Organization, Inc., provided that permission is obtained from and any required fee is paid to Accellera. To arrange for authorization please contact Lynn Horobin, Accellera, 1370 Trancas Street #163, Napa, CA 94558, phone (707) 251-9977, e-mail [lynnh@accellera.org](mailto:lynnh@accellera.org). Permission to photocopy portions of any individual standard for educational classroom use can also be obtained from Accellera.



## Overview of this standard

This section describes the purpose and organization of this standard, the Accellera Standard V1 Open Verification Library (Std. OVL) libraries implemented in IEEE Std. 1364-1995 Verilog and SystemVerilog 3.1a, Accellera's extensions to IEEE Std. 1364-2001 Verilog Hardware Description Language and Library Reference Manual (LRM)

## Intent and scope of this document

The intent of this standard is to define Std. OVL accurately. Its primary audience is designers, integrators and verification engineers to check for good/bad behavior, and provides a single and vendor-independent interface for design validation using simulation, semi-formal and formal verification techniques. By using a single well-defined interface, the OVL bridges the gap between the different types of verification, making more advanced verification tools and techniques available for non-expert users.

From time to time, it may become necessary to correct and/or clarify portions of this standard. Such corrections and clarifications may be published in separate documents. Such documents modify this standard at the time of their publication and remain in effect until superseded by subsequent documents or until the standard is officially revised.

## ACKNOWLEDGEMENTS

These Accellera Standard OVL Libraries and Library Reference Manual (LRM) were specified and developed by experts from many different fields, including design and verification engineers, Electronic Design Automation companies and members of the OVL VSVA technical committee.

The following contributors were involved in the creation of previous versions of the OVL: Shalom Bresticker, Bryan Bullis, Ben Cohen, Harry Foster, Himanshu Goel, Vijay Gupta, Brent Hayhoe, Richard Ho, Narayanan Krishnamurthy, David Lacey, Jim Lewis, Andrew MacCormack, Erich Marschner, Paul Menchini, Torkil Oelgaard, Joseph Richards, Vinaya Singh, Sean Smith, Andy Tsay and others.

The OVL VSVA technical committee and chair reports to Accellera TCC Chairman:

TCC Chairman Johnny Srouji / IBM

The following individuals contributed to the creation, editing and review of the Accellera Standard OVL V1 Libraries and LRM

Eduard Cerny/Synopsys

Harry Foster/Jasper Design Automation

Dmitry Korchemny/Intel

Kenneth Elmkjær Larsen/Mentor Graphics (OVL-VSVA Chair)

David Lacey/Hewlett Packard

Uma Polisetti/Agilent

Ramesh Sathianathan/Mentor Graphics

Chris Shaw/Mentor Graphics

Sundaram Subramanian/Mentor Graphics

Bipul Talukdar/Mentor Graphics

Manoj Kumar Thottasseri/Synopsys

Mike Turpin/ARM

Major version 2.0 released April 2007



# Table of Contents

---

## Chapter 1

<b>Introduction</b>	<b>6</b>
About this Manual	6
Notational Conventions	7
Assertion Syntax Format	7
References	8

## Chapter 2

<b>OVL Basics</b>	<b>9</b>
OVL Assertion Checker Implementation	10
OVL Assertion Checker Characteristics	11
Checker Class	11
Checker Parameters	11
Checker Ports	14
Assertion Checks	17
Cover Points	18
OVL Use Model	19
Setting the Implementation Language	19
Generating Synthesizable Logic	20
Enabling Assertion and Coverage Logic	20
Setting Checker Parameter Defaults	21
Disabling Clock/Reset Gating	21
Using a Global Reset	22
Checking of X and Z Values	22
Reporting Assertion Information	22
Fatal Error Processing	23
OVL Library	24
Library Characteristics	24
Library Layout	25
Header Files	25

## Chapter 3

<b>OVL Checker Data Sheets</b>	<b>36</b>
ovl_always	37
ovl_always_on_edge	40
ovl_arbiter	44
ovl_bits	49
ovl_change	52
ovl_code_distance	58
ovl_cycle_sequence	61
ovl_decrement	67

## Table of Contents

---

ovl_delta . . . . .	70
ovl_even_parity . . . . .	73
ovl_fifo . . . . .	76
ovl_fifo_index . . . . .	82
ovl_frame . . . . .	87
ovl_handshake . . . . .	93
ovl_hold_value . . . . .	100
ovl_implication . . . . .	104
ovl_increment . . . . .	107
ovl_memory_async . . . . .	110
ovl_memory_sync . . . . .	115
ovl_multiport_fifo . . . . .	122
ovl_mutex . . . . .	131
ovl_never . . . . .	133
ovl_never_unknown . . . . .	136
ovl_never_unknown_async . . . . .	139
ovl_next . . . . .	142
ovl_next_state . . . . .	147
ovl_no_contention . . . . .	151
ovl_no_overflow . . . . .	155
ovl_no_transition . . . . .	158
ovl_no_underflow . . . . .	162
ovl_odd_parity . . . . .	165
ovl_one_cold . . . . .	168
ovl_one_hot . . . . .	172
ovl_proposition . . . . .	175
ovl_quiescent_state . . . . .	178
ovl_range . . . . .	182
ovl_reg_loaded . . . . .	185
ovl_req_ack_unique . . . . .	189
ovl_req_requires . . . . .	192
ovl_stack . . . . .	196
ovl_time . . . . .	201
ovl_transition . . . . .	207
ovl_unchange . . . . .	211
ovl_valid_id . . . . .	216
ovl_value . . . . .	221
ovl_width . . . . .	224
ovl_win_change . . . . .	227
ovl_win_unchange . . . . .	231
ovl_window . . . . .	235
ovl_zero_one_hot . . . . .	238

## Chapter 4

<b>OVL Defines . . . . .</b>	<b>241</b>
Global Defines . . . . .	241
Defines Common to All Assertions . . . . .	243
Defines for Specific Assertions . . . . .	245

# Chapter 1

## Introduction

---

Welcome to the Accellera standard Open Verification Library V2 (OVL). The OVL is composed of a set of assertion checkers that verify specific properties of a design. These assertion checkers are instantiated in the design establishing a single interface for design validation.

OVL V2 is an extension of OVL V1. The OVL V2 augments the structure of the V1 original checkers by adding parameters, ports and control logic. These new checker versions are similar, but not completely identical to their V1 counterparts. The V1 checker types were named with an “assert\_” prefix and their V2 counterparts are named with an “ovl\_” prefix, with the same base names. For backward compatibility, all OVL V1 checkers (assert\_\* checkers) are available and supported in OVL V2. So, all existing code utilizing OVL V1 will function the same with OVL V2 (except for bug fixes and enhancements).

The OVL provides designers, integrators and verification engineers with a single, vendor-independent interface for design validation using simulation, hardware acceleration or emulation, formal verification and semi-/hybrid-/dynamic-formal verification tools. By using a single, well defined, interface, the OVL bridges the gap between different types of verification, making more advanced verification tools and techniques available for non-expert users.

This document provides the reader with a set of data sheets that describe the functionality of each assertion checker in the OVL V2, as well as examples that show how to embed these assertion checkers into a design.

## About this Manual

It is assumed the reader is familiar with hardware description languages and conventional simulation environments. This document targets designers, integrators and verification engineers who intend to use the OVL in their verification flow and to tool developers interested in integrating the OVL in their products. This document has the following chapters:

- OVL Basics  
Fundamental information about the OVL library, including usage and examples.
- OVL Assertion Data Sheets  
Data sheet for each type of OVL assertion checker.
- OVL Defines  
Information about the define values used in general and for configuring the checkers.

# Notational Conventions

The following textual conventions are used in this manual:

- emphasis*     Italics in plain text are used for two purposes: (1) titles of manual chapters and appendixes, and (2) terminology used inside defining sentences.
- variable*     Italics in courier text indicate a meta-variable. You must replace the meta-variable with a literal value when you use the associated statement.
- literal*        Regular courier text indicates literal words used in syntax statements or in output.

Syntax statements appear in sans-serif typeface as shown here. In syntax statements, words in italics are meta-variables. You must replace them with relevant literal values. Words in regular (non-italic) sans-serif type are literals. Type them as they appear. Except for the following meta-characters, regular characters in syntax statements are literals. The following meta-characters have the given syntactical meanings. **You do not type these characters.**

- [ ]            Square brackets indicate an optional entry.

## Assertion Syntax Format

All Verilog assertion checkers defined by the Open Verification Library initiative observe the following BNF format, defined in compliance with Verilog Module instantiation of the IEEE Standard 1364-1995 *Verilog Hardware Description Language*.

```
assertion_instantiation ::= ovl_identifier
                           [ parameter_value_assignment ] module_instance ;

parameter_value_assignment ::= #( severity_level
                                [ , other parameter expressions ] , property_type , msg , coverage_level )

module_instance ::= name_of_instance ( [ list_of_module_connections ] )

name_of_instance ::= module_instance_identifier

list_of_module_connections ::=
    ordered_port_connection [ , ordered_port_connection ]
    | named_port_connection [ , named_port_connection ]

ordered_port_connection ::= [ expression ]

named_port_connection ::= .port_identifier ( [ expression ] )

ovl_identifier ::= ovl_type_identifier

type_identifier ::= identifier
```

## References

The following is a list of resources related to design verification and assertion checkers.

- Bening, L. and Foster, H., *Principles of Verifiable RTL Design, a Functional Coding Style Supporting Verification Processes in Verilog*, 2nd Ed., Kluwer Academic Publishers, 2001.
- Bergeron, J., *Writing Testbenches: Functional Verification of HDL Models*, Kluwer Academic Publishers, 2000.
- *CheckerWare Data Book*, Release 2.4, 0-In Functional Verification Group, Mentor Graphics, 2006.
- *Assertions in Simulation User Guide*, Release 2.4, 0-In Functional Verification Group, Mentor Graphics, 2006.
- *Formal Verification User Guide*, Release 2.4, 0-In Functional Verification Group, Mentor Graphics, 2006.



## Chapter 2

# OVL Basics

---

The OVL is composed of a set of assertion checkers that verify specific properties of a design. These assertion checkers are instantiated in the design establishing a single interface for design validation.

OVL assertion checkers are instances of modules whose purpose in the design is to guarantee that some conditions hold true. Assertion checkers are composed of one or more properties, a message, a severity and coverage.

- Properties are design attributes that are being verified by an assertion. A property can be classified as a combinational or temporal property.

A combinational property defines relations between signals during the same clock cycle while a temporal property describes the relation between the signals over several (possibly infinitely many) cycles.

- Message is a string that is displayed in the case of an assertion failure.
- Severity represents whether the error captured by the assertion library is a major or minor problem.
- Coverage consists of flags that indicate whether or not specific corner-case events occur and counts that tote up the occurrences of specific common events.

Assertion checkers benefit users by:

- Testing internal points of the design, thus increasing observability of the design.
- Simplifying the diagnosis and detection of bugs by constraining the occurrence of a bug to the assertion checker being checked.
- Allowing designers to use the same assertions for both simulation and formal verification.

## OVL Assertion Checker Implementation

Assertion checkers address design verification concerns and can be used as follows to increase design confidence:

- Combine assertion checkers to increase the coverage of the design (for example, in interface circuits and corner cases).
- Include assertion checkers when a module has an external interface. In this case, assumptions on the correct input and output behavior should be guarded and verified.
- Include assertion checkers when interfacing with third party modules, since the designer may not be familiar with the module description (as in the case of IP cores), or may not completely understand the module. In these cases, guarding the module with assertion checkers may prevent incorrect use of the module.

Usually there is a specific assertion checker suited to cover a potential problem. In other cases, even though a specific assertion checker might not exist, a combination of two or three assertion checkers can provide the desired coverage. The number of actual assertions that must be added to a specific design may vary from a few to thousands, depending on the complexity of the design and the complexity of the properties that must be checked.

Writing assertion checkers for a given design requires careful analysis and planning for maximum efficiency. While writing too few assertions might not increase the coverage on a design, writing too many assertions may increase verification time, sometimes without increasing the coverage. In most cases, however, the runtime penalty incurred by adding assertion checkers is relatively small.

# OVL Assertion Checker Characteristics

## Checker Class

OVL assertion checkers are partitioned into the following checker classes:

- Combinational assertions — behavior checked with combinational logic.
- 1-cycle assertions — behavior checked in the current cycle.
- 2-cycle assertions — behavior checked for transitions from the current cycle to the next.
- *n*-cycle assertions — behavior checked for transitions over a fixed number of cycles.
- Event-bounded assertions — behavior is checked between two events.

## Checker Parameters

Each OVL assertion checker has its own set of parameters as described in its corresponding data sheet. The following parameters are (typically) common to all checkers: *severity\_level*, *property\_type*, *msg*, *coverage\_level*, *clock\_edge*, *reset\_polarity* and *gating\_type*. Each of these types of parameters has a default value used when the corresponding checker parameter is unspecified in the checker instance specification. These defaults are set by the following global defines (which can be modified): ‘OVL\_SEVERITY\_DEFAULT’, ‘OVL\_PROPERTY\_DEFAULT’, ‘OVL\_MSG\_DEFAULT’, ‘OVL\_COVER\_DEFAULT’, ‘OVL\_CLOCK\_EDGE\_DEFAULT’, ‘OVL\_RESET\_POLARITY\_DEFAULT’ and ‘OVL\_GATING\_TYPE\_DEFAULT’ (see “[Setting Checker Parameter Defaults](#)” on page 21).

### *severity\_level*

A checker’s “severity level” determines how to handle an assertion violation. The *severity\_level* parameter sets the checker’s severity level and can have one of the following values:

‘OVL_FATAL	Runtime fatal error.
‘OVL_ERROR	Runtime error.
‘OVL_WARNING	Runtime warning.
‘OVL_INFO	No improper design functionality.

If *severity\_level* is not one of these values, the checker issues the following message:

```
Illegal option used in parameter 'severity_level'
```

## *property\_type*

A checker's "property type" determines whether to use the assertion as an assert property or an assume property (for example, a property that a formal tool uses to determine legal stimuli). The property type also selects whether to assert/assume X/Z value checks or not. The *property\_type* parameter sets the checker's property type and can have one of the following values:

<code>'OVL_ASSERT</code>	Assert assertion check and X/Z check properties.
<code>'OVL_ASSUME</code>	Assume assertion check and X/Z check properties.
<code>'OVL_ASSERT_2STATE</code>	Assert assertion check properties. Ignore X/Z check properties.
<code>'OVL_ASSUME_2STATE</code>	Assume assertion check properties. Ignore X/Z check properties.
<code>'OVL_IGNORE</code>	Ignore assertion check and X/Z check properties.

If *property\_type* is not one of these values, an assertion violation occurs and the checker issues the following message:

```
Illegal option used in parameter 'property_type'
```

## *msg*

The default value of `'OVL_MSG_DEFAULT` is "VIOLATION". Changing this define provides a default message printed when a checker assertion is violated. To override this default message for an individual checker, set the checker's *msg* parameter.

## *coverage\_level*

A checker's "coverage level" determines the cover point information reported by the individual checker. The *coverage\_level* parameter sets the checker's coverage level. This parameter can be any logical bitwise-OR of the defined cover point type values (["Cover Points"](#) on page 18 and ["Monitoring Coverage"](#) on page 20):

<code>'OVL_COVER_SANITY</code>	Report SANITY cover points.
<code>'OVL_COVER_BASIC</code>	Report BASIC cover points.
<code>'OVL_COVER_CORNER</code>	Report CORNER cover points.
<code>'OVL_COVER_STATISTIC</code>	Report STATISTIC cover points.

For example, if the *coverage\_level* parameter for an instance of the `assert_range` checker is:

```
'OVL_COVER_BASIC | 'OVL_COVER_CORNER
```

then the checker reports all three `assert_range` cover points (*cover\_cover\_test\_expr\_change*, *cover\_test\_expr\_at\_min* and *cover\_test\_expr\_at\_max*). To simplify instance specifications, two additional cover point values are defined:

<code>'OVL_COVER_NONE</code>	Disable coverage reporting.
<code>'OVL_COVER_ALL</code>	Report information for all cover points.

### *clock\_edge*

A checker's "clock edge" selects the active edges for the *clock* input to the checker. Edge-triggered checkers perform their analyses—which include evaluating inputs, checking assertions and updating counters—at the active edges of their clocks. The elapsed time from one active clock edge to the next is referred to as a *clock cycle* (or simply *cycle*). The *clock\_edge* parameter specifies the checker's active clock edges and can have one of the following values:

<code>'OVL_POSEDGE</code>	Rising edges are active clock edges.
<code>'OVL_NEGEDGE</code>	Falling edges are active clock edges.

### *reset\_polarity*

A checker's "reset polarity" selects the *active level* of the checker *reset* input. When reset becomes active, the checker clears pending properties and internal values (coverage point values remain unchanged). A subsequent edge of the *reset* signal makes *reset* inactive, which initializes and activates the checker. The *reset\_polarity* parameter sets the checker's reset polarity and can have one of the following values:

<code>'OVL_ACTIVE_LOW</code>	<i>Reset</i> is active when FALSE.
<code>'OVL_ACTIVE_HIGH</code>	<i>Reset</i> is active when TRUE.

### *gating\_type*

A checker's "gating type" selects the signal gated by the *enable* input. The *gating\_type* parameter can be set to one of the following values:

<code>'OVL_GATE_NONE</code>	Checker ignores the <i>enable</i> input.
<code>'OVL_GATE_CLOCK</code>	Checker pauses when <i>enable</i> is FALSE. The checker treats the current cycle as a NOP. Checks, counters and internal values remain unchanged.
<code>'OVL_GATE_RESET</code>	Checker resets (as if the <i>reset</i> input became active) when <i>enable</i> is FALSE.

## Checker Ports

Each OVL assertion checker has its own set of ports as described in its corresponding data sheet. The following ports are (typically) common to all checkers.

### clock

Each “edge-triggered” assertion checker has a clocking input port named *clock*. All of the checker’s sampling, assertion checking and coverage collection tasks are performed at “active” edges of the checker’s *clock* input. The active clock edges are set by the checker’s *clock\_edge* parameter (page 13): ‘OVL\_POSEDGE (rising edges) or ‘OVL\_NEGEDGE (falling edges). The default *clock\_edge* parameter is set by the following global variable:

<pre>'OVL_CLOCK_EDGE_ DEFAULT</pre>	<p>Sets the default <i>clock_edge</i> parameter value for checkers. Default: ‘OVL_POSEDGE.</p>
-------------------------------------	--

### Gating clock

If a checker’s *gating\_type* parameter (page 13) is set to ‘OVL\_GATE\_CLOCK, the checker’s *enable* signal ‘gates’ the *clock* input to the checker. Here the actual clock signal used internally by the checker is the gated clock formed combinationally from *clock* and *enable*. Deasserting *enable* in effect pauses the checker at the current state. No data ports are sampled; no checking is performed; no counters are incremented; and no coverage data are collected. When *enable* asserts again, the checker continues from the state it was “paused” by *enable*.

The internal clock for a checker (called *clk*) is formed combinationally from *clock* and possibly *enable* (based on the gating type and active clock edge for the checker) using the following logic:

```
wire gclk, clk;
`ifdef OVL_GATING_OFF
    assign gclk = clock; // Globally disabled gating
`else
    // LATCH based gated clock
    reg clken;
    always @ (clock or enable) begin
        if (clock == 1'b0)
            clken <= enable;
    end
    assign gclk = (gating_type == 'OVL_GATE_CLOCK) ? clock & clken
                  : clock; // Locally disabled gating
`endif // OVL_GATING_OFF
// clk (programmable edge & optional gating)
assign clk = (clock_edge == 'OVL_POSEDGE) ? gclk : ~gclk;
```

Note that setting the ‘OVL\_GATING\_OFF define disables clock (and reset) gating for all checkers.

## reset

Each assertion checker has a reset input port named *reset*. Associated with the *reset* port is the checker's *reset\_polarity* parameter: 'OVL\_ACTIVE\_LOW (*reset* active when FALSE) or 'OVL\_ACTIVE\_HIGH (*reset* active when TRUE). The default *reset\_polarity* parameter is set by the following global variable:

```
'OVL_RESET_POLARITY_
DEFAULT
```

Sets the default *reset\_polarity* parameter value for checkers.  
Default: 'OVL\_ACTIVE\_LOW.

When a checker that is not in reset mode samples an active *reset*, the checker enters reset mode. The checker cancels pending assertion checks and freezes coverage data at their current values. At the next active clock edge that *reset* is not active, the checker exits reset mode. The checker initializes assertion properties and the checker behaves as it started from its initialized state—except coverage data continues from the values frozen during the reset interval.

## Gating reset

If a checker's *gating\_type* parameter is set to 'OVL\_GATE\_RESET, its *enable* signal 'gates' the *reset* input to the checker. Here the reset signal used internally by the checker is the gated input formed combinationally from *reset* and *enable* (and inverted if *reset* is active high). The *enable* input acts as a second, active-low reset.

The internal reset for a checker (called *reset\_n*) is formed combinationally from *reset* and possibly *enable* using the following logic:

```
wire greset, reset_n;
`ifdef OVL_GATING_OFF
    assign greset = reset; // Globally disabled gating
`else
    assign greset = (gating_type == 'OVL_GATE_RESET) ? reset & enable
                  : reset; // Locally disabled gating
`endif // OVL_GATING_OFF
// reset_n (programmable polarity & optional gating)
assign reset_n = (reset_polarity == 'OVL_ACTIVE_LOW) ? greset : ~greset;
```

## Global Reset

The *reset* port assignments of all assertion checkers can be overridden and controlled by the following global variable:

```
'OVL_GLOBAL_RESET=
reset_signal
```

Overrides the *reset* port assignments of all assertion checkers with the specified global *reset\_signal*. Checkers ignore their *reset\_polarity* parameters and treat the global reset as an active-low reset. Default: each checker's reset is specified by the *reset* port and *reset\_polarity* parameters.

Internally, each checker uses the reset signal defined by ‘OVL\_RESET\_SIGNAL:

```
// Selecting global reset or local reset for the checker reset signal
`ifdef OVL_GLOBAL_RESET
    `define OVL_RESET_SIGNAL `OVL_GLOBAL_RESET
`else
    `define OVL_RESET_SIGNAL reset_n
`endif
```

## enable

Each assertion checker has an enabling input port named *enable*. This input is used to gate either the *clock* or *reset* signals for the checker (effectively pausing or resetting the checker). The effect of the enable port on the checker is determined by the checker’s *gating\_type* parameter ([page 13](#)):

- ‘OVL\_GATE\_NONE (no effect),
- ‘OVL\_GATE\_CLOCK (gate *clock*, see “[Gating clock](#)” on page 14) or
- ‘OVL\_GATE\_RESET (gate *reset*, see “[Gating reset](#)” on page 15).

The default *gating\_type* parameter is set by the following global variable:  
‘OVL\_GATING\_TYPE\_DEFAULT (default: ‘OVL\_GATE\_CLOCK).

## fire

Each assertion checker has a fire signal output port named *fire*. Future OVL releases might extend this output, so extra bits are reserved for future use. For the V2.0 release of OVL, this is a 3-bit port:

```
`define OVL_FIRE_WIDTH 3
```

The *fire* output port has the following bits:

fire[0]	Assertion fired in 2-state mode (an assertion check violation).
fire[1]	X/Z check fired in non-2-state mode.
fire[2]	Coverage fired.

Each *fire* output bit is a registered output (i.e., it is implemented in a clocked process) that goes TRUE for one ‘cycle’ after the event and then resets to FALSE. If clock-gating is enabled (i.e., the default case) and *enable* deasserts at a clock edge where a *fire* bit asserts, then the *fire* bit remains TRUE while the checker is paused (i.e., until *enable* asserts again).



## Assertion Checks

Each assertion checker verifies that its parameter values are legal. If an illegal option is specified, the assertion fails. The assertion checker also checks at least one assertion. Violation of any of these assertions is an *assertion failure*. The data sheet for the assertion shows the various failure types for the assertion checker (except for incorrect option values for *severity\_level*, *property\_type*, *coverage\_level*, *clock\_edge*, *reset\_polarity* and *gating\_type*).

For example, the `ovl_frame` checker data sheet shows the following types of assertion failures:

FRAME	Value of <i>test_expr</i> was TRUE before <i>min_cks</i> cycles after <i>start_event</i> was sampled TRUE or its value was not TRUE before <i>max_cks</i> cycles transpired after the rising edge of <i>start_event</i> .
illegal start event	The <i>action_on_new_start</i> parameter is set to 'OVL_ERROR_ON_NEW_START and <i>start_event</i> expression evaluated to TRUE while the checker was monitoring <i>test_expr</i> .
<code>min_cks &gt; max_cks</code>	The <i>min_cks</i> parameter is greater than the <i>max_cks</i> parameter (and <i>max_cks</i> > 0). Unless the violation is fatal, either the minimum or maximum check will fail.

## X/Z Checks

Assertion checkers can produce indeterminate results if a checker port value contains an X or Z bit when the checker samples the port. (Note that a checker does not necessarily sample every port at every active clock edge.) To assure determinate results, assertion checkers have special assertions for X/Z checks. These assertions fall into two groups: explicit X/Z checks and implicit X/Z checks (see [“Using a Global Reset”](#) on page 22).

### Explicit X/Z Checks

Two assertion checker types are specifically designed to verify that their associated expressions have known and driven values: `ovl_never_unknown` and `ovl_never_unknown_async`. Each has a single assertion check:

<code>test_expr</code> contains X/Z value	Expression evaluated to a value with an X or Z bit, and 'OVL_XCHECK_OFF is not set.
---	---

Explicit X/Z checking is implemented when instances of these checkers are added explicitly to verify relevant expressions. Setting 'OVL\_XCHECK\_OFF turns off all X/Z checks, both explicit and implicit (in particular, all `ovl_never_unknown` and `ovl_never_unknown_async` checkers are excluded).

## Implicit X/Z Checks

All assertion checker types — except `ovl_never_unknown` and `ovl_never_unknown_async` — have implicit X/Z checks. These are assertions that ensure specific checker ports have known and driven values when the checker samples the ports. For example, the `ovl_frame` checker type as the following implicit X/Z checks:

```
test_expr contains X    Expression value was X or Z.
or Z

start_event contains X  Start event value was X or Z.
or Z
```

Implicit checking is implemented inside the checker logic itself. Setting ‘`OVL_IMPLICIT_XCHECK_OFF`’ turns off the implicit X/Z checks, but not the explicit X/Z checks.

## Cover Points

Each assertion type (typically) has a set of cover points and each cover point is categorized by its cover point type. For example, the `ovl_range` assertion type has the following cover points:

```
cover_cover_test_expr_ BASIC — Expression changed value.
change

cover_test_expr_at_min CORNER — Expression evaluated to min.
cover_test_expr_at_max CORNER — Expression evaluated to max.
```

The various cover point types are:

SANITY	Event that indicates that the logic monitored by the assertion checker was activated at least at a minimal level.
BASIC	Event that indicates that the logic monitored by the assertion checker assumed a state requisite for relevant assertion checking to occur.
CORNER	Event that indicates that the logic monitored by the assertion checker assumed a state that represents a corner-case behavior.
STATISTIC	Counts of relevant states assumed by the logic monitored by the assertion checker.

## OVL Use Model

An Accellera Standard OVL library user specifies preferred control settings with standard global variables defined in the following:

- A Verilog file loaded in before the libraries.
- Specifies settings using the standard `+define` options in Verilog verification engines (via a setup file or at the command line).

## Setting the Implementation Language

The Accellera Standard OVL is implemented in the following HDL languages: Verilog 95, SVA 3.1a and PSL 1.1. The following global variables select the implementation language:

<code>'OVL_VERILOG</code>	(default) Creates assertion checkers defined in Verilog.
<code>'OVL_SVA</code>	Creates assertion checkers defined in System Verilog.
<code>'OVL_PSL</code>	Creates assertion checkers defined in PSL (Verilog flavor).

In the case a user of the library does not specify a language, by default the library is automatically set to `'OVL_VERILOG`.

### Note



Only one library can be selected. If the user specifies both `'OVL_VERILOG` and `'OVL_SVA` (or `'OVL_PSL`), the `'OVL_VERILOG` is undefined in the header file. Editing the header file to disable this behavior will result in compile errors.

## Instantiation in an SVA Interface Construct

If an OVL checker is instantiated in a System Verilog interface construct, the user should define the following global variable:

<code>'OVL_SVA_INTERFACE</code>	Ensures OVL assertion checkers can be instantiated in a System Verilog interface construct. Default: not defined.
---------------------------------	---

## Limitations for PSL

The PSL implementation does not support modifying the *severity\_level* and *msg* parameters. These parameters are ignored and the default values are used:

<i>severity_level</i>	<code>'OVL_ERROR</code>
<i>msg</i>	<code>"VIOLATION"</code>

## Generating Synthesizable Logic

The following global variable ensures all generated OVL logic is synthesizable:

<code>'OVL_SYNTHESIS</code>	Ensures OVL logic is synthesizable. Default: not defined.
-----------------------------	---

## Enabling Assertion and Coverage Logic

The Accellera Standard OVL consists of two types of logic: assertion logic and coverage logic. These capabilities are controlled via the following standard global variables:

<code>'OVL_ASSERT_ON</code>	Activates assertion logic. Default: not defined.
<code>'OVL_COVER_ON</code>	Activates coverage logic. Default: not defined.

If both of these variables are undefined, the assertion checkers are not activated. The instantiations of these checkers will have no influence on the verification performed.

## Asserting, Assuming and Ignoring Properties

The OVL checkers' assertion logic—if activated (by the `'OVL_ASSERT_ON` global variable)—identifies a design's legal properties. Each particular checker instance can verify one or more assertion checks (depending on the checker type and the checker's configuration).

Whether a checker's properties are asserts (i.e., checks) or assumes (i.e., constraints) is controlled by the checker's *property\_type* parameter. In addition, *property\_type* can turn on and off X/Z checks:

<code>'OVL_ASSERT</code>	Assertion checks and X/Z checks are asserts.
<code>'OVL_ASSUME</code>	Assertion checks and X/Z checks are assumes.
<code>'OVL_ASSERT_2STATE</code>	Assertion checks are asserts. X/Z checks are excluded.
<code>'OVL_ASSUME_2STATE</code>	Assertion checks are assumes. X/Z checks are excluded.
<code>'OVL_IGNORE</code>	Ignore (exclude) assertion checks and X/Z check properties.

A single assertion checker cannot have some checks asserts and other checks assumes. However, you often can implement this behavior by specifying two checkers.

## Monitoring Coverage

The `'OVL_COVER_ON` define activates coverage logic in the checkers. This is a global switch that turns coverage monitoring on.

## Setting Checker Parameter Defaults

All common parameters for checkers and some parameters common to specific checker types have default parameter values. These are the parameter values assumed by the checker when the parameter is not specified. The `std_ovl_defines.h` sets the values of these defaults (i.e., to default default values), but the default values can be overridden by redefining them. The following Verilog defines set the values of these default parameter values for the common checker parameters:

<code>'OVL_SEVERITY_DEFAULT</code>	Value of <i>severity_level</i> to use when it is not specified. The value defined in <code>std_ovl_defines.h</code> is <code>'OVL_ERROR</code> .
<code>'OVL_PROPERTY_DEFAULT</code>	Value of <i>property_type</i> to use when it is not specified. The value defined in <code>std_ovl_defines.h</code> is <code>'OVL_ASSERT</code> .
<code>'OVL_MSG_DEFAULT</code>	Value of <i>msg</i> to use when it is not specified. The value defined in <code>std_ovl_defines.h</code> is <code>"VIOLATION"</code> .
<code>'OVL_COVER_DEFAULT</code>	Value of <i>coverage_level</i> to use when it is not specified. The value defined in <code>std_ovl_defines.h</code> is <code>'OVL_COVER_BASIC</code> .
<code>'OVL_CLOCK_EDGE_DEFAULT</code>	Value of <i>clock_edge</i> to use when it is not specified. The value defined in <code>std_ovl_defines.h</code> is <code>'OVL_POSEDGE</code> .
<code>'OVL_RESET_POLARITY_DEFAULT</code>	Value of <i>reset_polarity</i> to use when it is not specified. The value defined in <code>std_ovl_defines.h</code> is <code>'OVL_ACTIVE_LOW</code> .
<code>'OVL_GATING_TYPE_DEFAULT</code>	Value of <i>gating_type</i> to use when it is not specified. The value defined in <code>std_ovl_defines.h</code> is <code>'OVL_GATE_CLOCK</code> .

## Disabling Clock/Reset Gating

By default, if a checker's *gating\_type* parameter is `'OVL_GATE_CLOCK`, the checker's internal clock logic is gated by the checker's *enable* input. Similarly, by default, if a checker's *gating\_type* parameter is `'OVL_GATE_RESET`, the checker's internal reset logic is gated by the checker *enable* input. Setting the following define, overrides this behavior:

<code>'OVL_GATING_OFF</code>	Turns off clock/reset gating, effectively setting all <i>gating_type</i> parameters to <code>'OVL_GATE_NONE</code> , so checkers ignore their <i>enable</i> inputs. Default: gating type specified by each checker's <i>gating_type</i> parameter.
------------------------------	--

## Using a Global Reset

The *reset* port assignments of all assertion checkers can be overridden and controlled by the following global variable:

<code>'OVL_GLOBAL_RESET= reset_signal</code>	Overrides the <i>reset</i> port assignments of all assertion checkers with the specified global <i>reset_signal</i> . Checkers ignore their <i>reset_polarity</i> parameters and treat the global reset as an active-low reset. Default: each checker's reset is specified by the <i>reset</i> port and <i>reset_polarity</i> parameters.
--	---

## Checking of X and Z Values

By default, OVL assertion checker logic includes logic implementing assertion checks for X and Z bits in the values of checker ports when they are sampled. To exclude part or all of this X/Z checking logic, specify one of the following global variables:

<code>'OVL_IMPLICIT_XCHECK_ OFF</code>	Turns off implicit X/Z checks.
<code>'OVL_XCHECK_OFF</code>	Turns off all X/Z checks (implicit and explicit).

## Reporting Assertion Information

By default, (if the assertion logic is active) every assertion violation is reported and (if the coverage logic is active) every captured coverage point is reported. The user can limit this reporting and can also initiate special reporting at the start and end of simulation.

## Limiting a Checker's Reporting

Limits on the number of times assertion violations and captured coverage points are reported are controlled by the following global variables:

<code>'OVL_MAX_REPORT_ERROR</code>	Discontinues reporting a checker's assertion violations if the number of times the checker has reported one or more violations reaches this limit. Default: unlimited reporting.
<code>'OVL_MAX_REPORT_COVER_ POINT</code>	Discontinues reporting a checker's cover points if the number of times the checker has reported one or more cover points reaches this limit. Default: unlimited reporting.

These maximum limits are for the number of times a checker instance issues a message. If a checker issues multiple violation messages in a cycle, each message is counted as a single error report. Similarly, if a checker issues multiple coverage messages in a cycle, each message is counted as a single cover report.

## Reporting Initialization Messages

The checkers' configuration information is reported at initialization time if the following global variable is defined:

<code>'OVL_INIT_MSG</code>	Reports configuration information for each checker when it is instantiated at the start of simulation. Default: no initialization messages reported.
----------------------------	--

For each assertion checker instance, the following message is reported:

```
OVL_NOTE: V2.0: instance_name initialized @ hierarchy Severity:
severity_level, Message: msg
```

## End-of-simulation Signal to ovl\_quiescent\_state Checkers

The `ovl_quiescent_state` assertion checker checks that the value of a state expression equals a check value when a sample event occurs. These checkers also can perform this check at the end of simulation by setting the following global variable:

<code>'OVL_END_OF_SIMULATION =eos_signal</code>	Performs quiescent state checking at end of simulation when the <i>eos_signal</i> asserts. Default: not defined.
---	--

## Fatal Error Processing

When a checker reports a runtime fatal error (*severity\_level* is 'OVL\_FATAL'), simulation typically continues for a certain amount of time and then the simulation ends. However, the OVL logic can be configured so that runtime fatal errors do not end simulation. These behaviors are controlled by the following global variables:

<code>'OVL_RUNTIME_AFTER_ FATAL=time</code>	Number of time units from a fatal error to end of simulation. Default: 100.
<code>'OVL_FINISH_OFF</code>	Fatal errors do not stop simulation. Default: fatal error ends simulation after 'OVL_RUNTIME_AFTER_FATAL time units.

# OVL Library

## Library Characteristics

The OVL library has the following characteristics:

- All Verilog assertion checkers conform to Verilog IEEE Standard 1364-1995.
- All System Verilog assertion checkers conform to Accellera SVA 3.1a.
- Header files use file extension `.h`.
- Verilog files with assertion module/interfaces use extension `.vlib` and include assertion logic files in the language specified by the user.
- Verilog files with assertion logic use file extension `_logic.v`.
- System Verilog files with assertion logic use file extension `_logic.sv`.
- The name of an OVL assertion checker is `assert_name`, where the *name* is a descriptive identifier.
- Parameter settings are passed via literals to make configuration of assertion checkers consistent and simple to use by end users.
- Parameters passed to assertion checkers are checked for legal values
- Each assertion checker includes `std_ovl_defines.h` defining all global variables and `std_ovl_task.h` defining all OVL system tasks.
- Global variables are named `OVL_name`.
- System tasks are named `ovl_taskname_t`.
- Assertion checkers are initialized explicitly so that they work in a deterministic way without reset.
- Assertion checkers are backward compatible in behavior with existing OVL Verilog libraries (to the extent it is possible).



## Library Layout

The Accellera OVL standard library has the following structure:

<code>\$STD_OVL_DIR</code>	Installation directory of Accellera OVL library.
<code>\$STD_OVL_DIR/vlog95</code>	Directory with assertion logic described in Verilog 95.
<code>\$STD_OVL_DIR/sva31a</code>	Directory with assertion logic described in SVA 3.1a.
<code>\$STD_OVL_DIR/psl11</code>	Directory with assertion logic described in PSL 1.1.
<code>\$STD_OVL_DIR/psl11/vunits</code>	Directory with PSL1.1 vunits for binding with the assertion logic.

For example:

```
shell prompt> ls -l $STD_OVL_DIR
std_ovl/assert_always.vlib
std_ovl/assert_always_on_edge.vlib
.
.
.
std_ovl/std_ovl_defines.h
std_ovl/std_ovl_task.h
.
.
.
std_ovl/psl11:
std_ovl/psl11/assert_always_logic.vlib
std_ovl/psl11/assert_always_on_edge_logic.vlib
.
.
.
std_ovl/psl11/vunits:
std_ovl/psl11/vunits/assert_always.psl
std_ovl/psl11/vunits/assert_always_on_edge.psl
.
.
.
std_ovl/sva31a:
std_ovl/sva31a/assert_always_logic.vlib
std_ovl/sva31a/assert_always_on_edge_logic.vlib
.
.
.
std_ovl/vlog95:
std_ovl/vlog95/assert_always_logic.v
std_ovl/vlog95/assert_always_on_edge_logic.v
.
.
.
```

## Header Files

### `std_ovl_defines.h`

```
// Accellera Standard V2.0 Open Verification Library (OVL).
// Accellera Copyright (c) 2005-2007. All rights reserved.

`ifndef OVL_STD_DEFINES_H
// do nothing
`else
`define OVL_STD_DEFINES_H
```

```
`define OVL_VERSION "V2.0"

`ifdef OVL_ASSERT_ON
  `ifdef OVL_PSL
    `ifdef OVL_VERILOG
      `undef OVL_PSL
    `endif
    `ifdef OVL_SVA
      `ifdef OVL_PSL
        `undef OVL_PSL
      `endif
    `endif
  `endif
`else
  `ifdef OVL_VERILOG
    `else
      `define OVL_VERILOG
    `endif
    `ifdef OVL_SVA
      `undef OVL_VERILOG
    `endif
  `endif
`endif

`ifdef OVL_COVER_ON
  `ifdef OVL_PSL
    `ifdef OVL_VERILOG
      `undef OVL_PSL
    `endif
    `ifdef OVL_SVA
      `ifdef OVL_PSL
        `undef OVL_PSL
      `endif
    `endif
  `else
    `ifdef OVL_VERILOG
      `else
        `define OVL_VERILOG
      `endif
      `ifdef OVL_SVA
        `undef OVL_VERILOG
      `endif
    `endif
  `endif
`endif

`ifdef OVL_ASSERT_ON
  `ifdef OVL_SHARED_CODE
    `else
      `define OVL_SHARED_CODE
    `endif
  `else
    `ifdef OVL_COVER_ON
      `ifdef OVL_SHARED_CODE
        `else
          `define OVL_SHARED_CODE
        `endif
      `endif
    `endif
  `endif
`endif
```

```
// specifying interface for System Verilog
`ifdef OVL_SVA_INTERFACE
    `define module interface
    `define endmodule endinterface
`else
    `define module module
    `define endmodule endmodule
`endif

// Selecting global reset or local reset for the checker reset signal
`ifdef OVL_GLOBAL_RESET
    `define OVL_RESET_SIGNAL `OVL_GLOBAL_RESET
`else
    `define OVL_RESET_SIGNAL reset_n
`endif

// active edges
`define OVL_NOEDGE 0
`define OVL_POSEDGE 1
`define OVL_NEGEDGE 2
`define OVL_ANYEDGE 3

// default edge_type (ovl_always_on_edge)
`ifdef OVL_EDGE_TYPE_DEFAULT
    // do nothing
`else
    `define OVL_EDGE_TYPE_DEFAULT `OVL_NOEDGE
`endif

// severity levels
`define OVL_FATAL 0
`define OVL_ERROR 1
`define OVL_WARNING 2
`define OVL_INFO 3

// default severity level
`ifdef OVL_SEVERITY_DEFAULT
    // do nothing
`else
    `define OVL_SEVERITY_DEFAULT `OVL_ERROR
`endif

// coverage levels (note that 3 would set both SANITY & BASIC)
`define OVL_COVER_NONE 0
`define OVL_COVER_SANITY 1
`define OVL_COVER_BASIC 2
`define OVL_COVER_CORNER 4
`define OVL_COVER_STATISTIC 8
`define OVL_COVER_ALL 15

// default coverage level
`ifdef OVL_COVER_DEFAULT
    // do nothing
`else
    `define OVL_COVER_DEFAULT `OVL_COVER_BASIC
`endif
```

```
// property type
`define OVL_ASSERT      0
`define OVL_ASSUME      1
`define OVL_IGNORE      2
`define OVL_ASSERT_2STATE 3
`define OVL_ASSUME_2STATE 4

// fire bit positions (first two also used for xcheck input to error_t)
`define OVL_FIRE_2STATE 0
`define OVL_FIRE_XCHECK 1
`define OVL_FIRE_COVER  2

// default property type
`ifdef OVL_PROPERTY_DEFAULT
    // do nothing
`else
    `define OVL_PROPERTY_DEFAULT `OVL_ASSERT
`endif

// default message
`ifdef OVL_MSG_DEFAULT
    // do nothing
`else
    `define OVL_MSG_DEFAULT "VIOLATION"
`endif

// necessary condition
`define OVL_TRIGGER_ON_MOST_PIPE    0
`define OVL_TRIGGER_ON_FIRST_PIPE  1
`define OVL_TRIGGER_ON_FIRST_NOPIPE 2

// default necessary_condition (ovl_cycle_sequence)
`ifdef OVL_NECESSARY_CONDITION_DEFAULT
    // do nothing
`else
    `define OVL_NECESSARY_CONDITION_DEFAULT `OVL_TRIGGER_ON_MOST_PIPE
`endif

// action on new start
`define OVL_IGNORE_NEW_START    0
`define OVL_RESET_ON_NEW_START 1
`define OVL_ERROR_ON_NEW_START 2

// default action_on_new_start (e.g. ovl_change)
`ifdef OVL_ACTION_ON_NEW_START_DEFAULT
    // do nothing
`else
    `define OVL_ACTION_ON_NEW_START_DEFAULT `OVL_IGNORE_NEW_START
`endif

// inactive levels
`define OVL_ALL_ZEROS 0
`define OVL_ALL_ONES  1
`define OVL_ONE_COLD  2
```

```
// default inactive (ovl_one_cold)
`ifndef OVL_INACTIVE_DEFAULT
    // do nothing
`else
    `define OVL_INACTIVE_DEFAULT `OVL_ONE_COLD
`endif

// ovl 2.0 new interface
`define OVL_ACTIVE_LOW 0
`define OVL_ACTIVE_HIGH 1

`define OVL_GATE_NONE 0
`define OVL_GATE_CLOCK 1
`define OVL_GATE_RESET 2

`define OVL_FIRE_WIDTH 3

`ifndef OVL_CLOCK_EDGE_DEFAULT
    // do nothing
`else
    `define OVL_CLOCK_EDGE_DEFAULT `OVL_POSEDGE
`endif

`ifndef OVL_RESET_POLARITY_DEFAULT
    // do nothing
`else
    `define OVL_RESET_POLARITY_DEFAULT `OVL_ACTIVE_LOW
`endif

`ifndef OVL_GATING_TYPE_DEFAULT
    // do nothing
`else
    `define OVL_GATING_TYPE_DEFAULT `OVL_GATE_CLOCK
`endif

// ovl runtime after fatal error
`define OVL_RUNTIME_AFTER_FATAL 100

// Covergroup define
`ifndef OVL_COVER_ON
    `ifndef OVL_COVERGROUP_OFF
    `else
    `define OVL_COVERGROUP_ON
    `endif // OVL_COVERGROUP_OFF
`endif // OVL_COVER_ON

// Ensure x-checking logic disabled if ASSERTs are off
`ifndef OVL_ASSERT_ON
`else
    `define OVL_XCHECK_OFF
    `define OVL_IMPLICIT_XCHECK_OFF
`endif

`endif // OVL_STD_DEFINES_H
```

## std\_ovl\_init.h

```
// Accellera Standard V2.0 Open Verification Library (OVL).
// Accellera Copyright (c) 2005-2007. All rights reserved.

`ifndef OVL_SHARED_CODE
`ifndef OVL_SYNTHESIS
`else
`ifndef OVL_INIT_MSG
    initial
        ovl_init_msg_t; // Call the User Defined Init Message Routine
`endif // OVL_INIT_MSG
`endif // OVL_SYNTHESIS
`endif // OVL_SHARED_CODE
```

## std\_ovl\_clock.h

```
// Accellera Standard V2.0 Open Verification Library (OVL).
// Accellera Copyright (c) 2005-2007. All rights reserved.

`ifndef OVL_SHARED_CODE
    wire gclk, clk;
`ifndef OVL_GATING_OFF
    assign gclk = clock; // Globally disabled gating
`else
    // LATCH based gated clock
    reg clken;
    always @ (clock or enable) begin
        if (clock == 1'b0)
            clken <= enable;
    end
    assign gclk = (gating_type == `OVL_GATE_CLOCK) ? clock & clken
                  : clock; // Locally disabled gating
`endif // OVL_GATING_OFF
    // clk (programmable edge & optional gating)
    assign clk = (clock_edge == `OVL_POSEDGE) ? gclk : ~gclk;
`endif // OVL_SHARED_CODE
```

## std\_ovl\_reset.h

```
// Accellera Standard V2.0 Open Verification Library (OVL).
// Accellera Copyright (c) 2005-2007. All rights reserved.

`ifndef OVL_SHARED_CODE
    wire greset, reset_n;
`ifndef OVL_GATING_OFF
    assign greset = reset; // Globally disabled gating
`else
    assign greset = (gating_type == `OVL_GATE_RESET) ? reset & enable
                  : reset; // Locally disabled gating
`endif // OVL_GATING_OFF
    // reset_n (programmable polarity & optional gating)
    assign reset_n = (reset_polarity == `OVL_ACTIVE_LOW) ? greset : ~greset;
`endif // OVL_SHARED_CODE
```

## std\_ovl\_count.h

```
// Accellera Standard V2.0 Open Verification Library (OVL).
// Accellera Copyright (c) 2005-2007. All rights reserved.

// Support for printing of count of OVL assertions
`ifndef OVL_INIT_MSG
`ifndef OVL_INIT_COUNT
    integer ovl_init_count;
    initial begin
        // Reset, prior to counting
        ovl_init_count = 0;
        // Display total number of OVL instances, just after initialization
        $monitor("\nOVL_METRICS: %d OVL assertions initialized\n",
                ,ovl_init_count);
    end
`endif
`endif
```

## std\_ovl\_cover.h

```
// Accellera Standard V2.0 Open Verification Library (OVL).
// Accellera Copyright (c) 2005-2007. All rights reserved.

// Parameters that should not be edited

parameter OVL_COVER_SANITY_ON      = (coverage_level & `OVL_COVER_SANITY);
parameter OVL_COVER_BASIC_ON       = (coverage_level & `OVL_COVER_BASIC);
parameter OVL_COVER_CORNER_ON      = (coverage_level & `OVL_COVER_CORNER);
parameter OVL_COVER_STATISTIC_ON =
                                (coverage_level & `OVL_COVER_STATISTIC);
```

## std\_ovl\_task.h

```
// Accellera Standard V2.0 Open Verification Library (OVL).
// Accellera Copyright (c) 2005-2007. All rights reserved.

`ifndef OVL_SYNTHESIS
`else
    integer error_count;
    integer cover_count;
    initial error_count = 0;
    initial cover_count = 0;
`endif // OVL_SYNTHESIS
```

```
task ovl_error_t;
  input      xcheck;
  input [8*128-1:0] err_msg;
  reg  [8*16-1:0] err_typ;
begin
`ifdef OVL_SYNTHESIS
`else
  case (severity_level)
    `OVL_FATAL   : err_typ = "OVL_FATAL";
    `OVL_ERROR   : err_typ = "OVL_ERROR";
    `OVL_WARNING : err_typ = "OVL_WARNING";
    `OVL_INFO    : err_typ = "OVL_INFO";
    default      :
      begin
        err_typ = "OVL_ERROR";
        $display("OVL_ERROR: Illegal option used in parameter
severity_level, setting message type to OVL_ERROR : time %0t : %m",
$time);
      end
    endcase

    error_count = error_count + 1;
    `ifdef OVL_MAX_REPORT_ERROR
      if (error_count <= `OVL_MAX_REPORT_ERROR) begin
    `endif
      case (property_type)
        `OVL_ASSERT,
        `OVL_ASSUME      : begin
          $display("%s : %s : %s : %0s : severity %0d : time %0t : %m",
err_typ, assert_name, msg, err_msg, severity_level, $time);
        end
        `OVL_ASSERT_2STATE,
        `OVL_ASSUME_2STATE : begin
          if (xcheck == `OVL_FIRE_2STATE) begin
            $display("%s : %s : %s : %0s : severity %0d : time %0t : %m",
err_typ, assert_name, msg, err_msg, severity_level, $time);
          end
        end
        `OVL_IGNORE      : begin end
        default          : begin end
      endcase
    `ifdef OVL_MAX_REPORT_ERROR
      end
    `endif

    `ifdef OVL_FINISH_OFF
    `else
      if (severity_level == `OVL_FATAL) ovl_finish_t;
    `endif // OVL_FINISH_OFF
  `endif // OVL_SYNTHESIS
end
endtask // ovl_error_t
```



```
task ovl_finish_t;
begin
  `ifdef OVL_SYNTHESIS
  `else
    #OVL_RUNTIME_AFTER_FATAL $finish;
  `endif // OVL_SYNTHESIS
end
endtask // ovl_finish_t

task ovl_init_msg_t;
begin
  `ifdef OVL_SYNTHESIS
  `else
    case (property_type)
      `OVL_ASSERT,
      `OVL_ASSUME,
      `OVL_ASSERT_2STATE,
      `OVL_ASSUME_2STATE : begin
        `ifdef OVL_SYNTHESIS
        `else
          `ifdef OVL_INIT_COUNT
            #0.1 `OVL_INIT_COUNT = `OVL_INIT_COUNT + 1;
          `else
            $display("OVL_NOTE: %s: %s initialized @ %m Severity: %0d,
              Message: %s", `OVL_VERSION, assert_name,severity_level,
              msg);
          `endif
        `endif // OVL_SYNTHESIS
      end
      `OVL_IGNORE : begin
        // do nothing
      end
      default : $display("OVL_ERROR: Illegal option used in parameter
        property_type : %m");
    endcase
  `endif // OVL_SYNTHESIS
end
endtask // ovl_init_msg_t
```

```
task ovl_cover_t;
  input [8*64-1:0] cvr_msg;
begin
  `ifdef OVL_SYNTHESIS
  `else
    cover_count = cover_count + 1;
    `ifdef OVL_MAX_REPORT_COVER_POINT
      if (cover_count <= `OVL_MAX_REPORT_COVER_POINT) begin
    `endif
      if (coverage_level > `OVL_COVER_ALL)
        $display("OVL_ERROR: Illegal option used in parameter
                  coverage_level : time %0t : %m", $time);
      else
        $display("OVL_COVER_POINT : %s : %0s : time %0t : %m",
                  assert_name, cvr_msg, $time);
    `ifdef OVL_MAX_REPORT_COVER_POINT
      end
    `endif
  `endif // OVL_SYNTHESIS
end
endtask // ovl_cover_t

`ifdef OVL_SYNTHESIS
`else
  // FUNCTION THAT CALCULATES THE LOG BASE 2 OF A NUMBER
  // =====
  // NOTE: only used in sva3la
  function integer log2;
    input integer x;
    integer i;
    integer result;
  begin
    result = 1;
    if (x <= 0) result = -1;
    else
      for (i = 0; (1<<i) <= x; i=i+1) result = i+1;
    log2 = result;
  end
  endfunction
`endif // OVL_SYNTHESIS

function ovl_fire_2state_f;
  input  property_type;
  integer property_type;
begin
  case (property_type)
    `OVL_ASSERT,
    `OVL_ASSUME      : ovl_fire_2state_f = 1'b1;
    `OVL_ASSERT_2STATE,
    `OVL_ASSUME_2STATE : ovl_fire_2state_f = 1'b1;
    `OVL_IGNORE      : ovl_fire_2state_f = 1'b0;
    default          : ovl_fire_2state_f = 1'b0;
  endcase
end
endfunction // ovl_fire_2state_f
```

```
function ovl_fire_xcheck_f;
    input  property_type;
    integer property_type;
begin
    `ifdef OVL_SYNTHESIS
        // fire_xcheck is not synthesizable
        ovl_fire_xcheck_f = 1'b0;
    `else
        case (property_type)
            `OVL_ASSERT,
            `OVL_ASSUME      : ovl_fire_xcheck_f = 1'b1;
            `OVL_ASSERT_2STATE,
            `OVL_ASSUME_2STATE : ovl_fire_xcheck_f = 1'b0;
            `OVL_IGNORE      : ovl_fire_xcheck_f = 1'b0;
            default          : ovl_fire_xcheck_f = 1'b0;
        endcase
    `endif // OVL_SYNTHESIS
end
endfunction // ovl_fire_xcheck_f
```

# Chapter 3

## OVL Checker Data Sheets

---

Each OVL assertion checker type has a data sheet that provides the specification for checkers of that type. This chapter lists the checker data sheets in alphabetical order by checker type. Data sheets contain the following information:

- **Syntax**

Syntax statement for specifying a checker of the type, with:

- Parameters — parameters that configure the checker.
- Ports — checker ports.

- **Description**

Description of the functionality and usage of checkers of the type, with:

- Assertion Checks — violation types (or messages) with descriptions of failures.
- Cover Points — cover messages with descriptions.
- Errors\* — possible errors that are not assertion failures.

- **Notes\***

Notes describing any special features or requirements.

- **See also**

List of other similar checker types.


- **Examples**

Examples of directives and checker applications.

\* not applicable to all checker types.

## ovl\_always

Ensures that the value of an expression is TRUE.

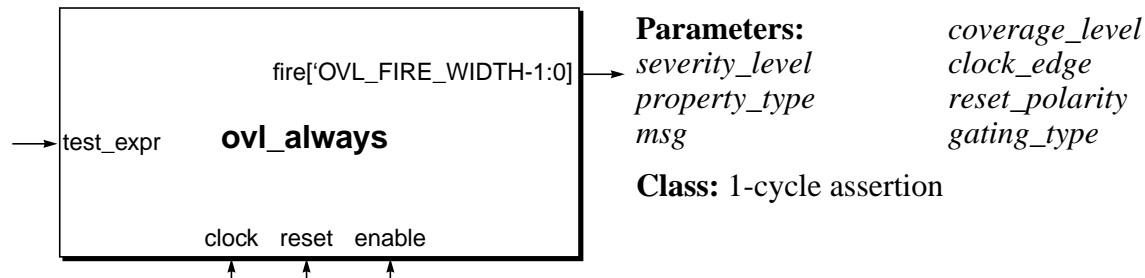

### Syntax

```

ovl_always
  [#(severity_level, property_type, msg, coverage_level, clock_edge,
    reset_polarity, gating_type)]
  instance_name (clock, reset, enable, test_expr, fire);

```

### Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>test_expr</i>	Expression that should evaluate to TRUE on the rising clock edge.
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_always assertion checker checks the single-bit expression *test\_expr* at each active edge of *clock*. If *test\_expr* is not TRUE, an always check violation occurs.

## Assertion Checks

ALWAYS	Expression did not evaluate to TRUE.
--------	--------------------------------------

## Implicit X/Z Checks

<i>test_expr</i> contains X or Z	Expression value was X or Z.
-------------------------------------	------------------------------

## Cover Points

none

## See also


<a href="#">ovl_always_on_edge</a>	<a href="#">ovl_never</a>
<a href="#">ovl_implication</a>	<a href="#">ovl_proposition</a>

## Example

```
ovl_always #(
    'OVL_ERROR,                // severity_level
    'OVL_ASSERT,               // property_type
    "Error: reg_a < reg_b is not TRUE", // msg
    'OVL_COVER_NONE,           // coverage_level
    'OVL_POSEDGE,              // clock_edge
    'OVL_ACTIVE_LOW,           // reset_polarity
    'OVL_GATE_CLOCK)           // gating_type


    reg_a_lt_reg_b (
        clock,                  // clock
        reset,                  // reset
        enable,                 // enable
        reg_a < reg_b,          // test_expr
        fire);                  // fire
```

Ensures that  $(reg\_a < reg\_b)$  is TRUE at each rising edge of *clock*.

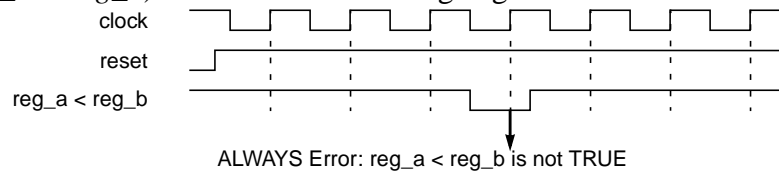

## ovl\_always\_on\_edge

Ensures that the value of an expression is TRUE when a sampling event undergoes a specified transition.

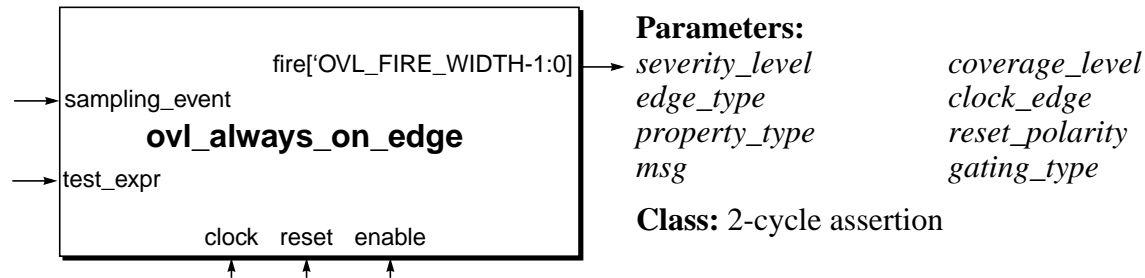

### Syntax

```
ovl_always_on_edge
    [#(severity_level, edge_type, property_type, msg, coverage_level,
      clock_edge, reset_polarity, gating_type)]
    instance_name (clock, reset, enable, test_expr, fire);
```

### Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>edge_type</i>	Transition type for sampling event: 'OVL_NOEDGE, 'OVL_POSEDGE, 'OVL_NEGEDGE or 'OVL_ANYEDGE. Default: 'OVL_NOEDGE.
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).



## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>sampling_event</i>	Expression that (along with <i>edge_type</i> ) identifies when to evaluate and test <i>test_expr</i> .
<i>test_expr</i>	Expression that should evaluate to TRUE on the rising clock edge.
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The *ovl\_always\_on\_edge* assertion checker checks the single-bit expression *sampling\_event* for a particular type of transition. If the specified transition of the sampling event occurs, the single-bit expression *test\_expr* is evaluated at the active edge of *clock* to verify the expression does not evaluate to FALSE.

The *edge\_type* parameter determines which type of transition of *sampling\_event* initiates the check:

- 'OVL\_POSEDGE performs the check if *sampling\_event* transitions from FALSE to TRUE.
- 'OVL\_NEGEDGE performs the check if *sampling\_event* transitions from TRUE to FALSE.
- 'OVL\_ANYEDGE performs the check if *sampling\_event* transitions from TRUE to FALSE or from FALSE to TRUE.
- 'OVL\_NOEDGE always initiates the check. This is the default value of *edge\_type*. In this case, *sampling\_event* is never sampled and the checker has the same functionality as *ovl\_always*.

The checker is a variant of *ovl\_always*, with the added capability of qualifying the assertion with a sampling event transition. This checker is useful when events are identified by their transition in addition to their logical state.

## Assertion Checks

ALWAYS\_ON\_EDGE

Expression evaluated to FALSE when the sampling event transitioned as specified by *edge\_type*.

### Implicit X/Z Checks

test\_expr contains X  
or Z

Expression value was X or Z.

sampling\_event  
contains X or Z

Sampling event value was X or Z.

## Cover Points

none

## See also

[ovl\\_always](#)  
[ovl\\_implication](#)

[ovl\\_never](#)  
[ovl\\_proposition](#)

## Examples


```

ovl_always_on_edge #(
    'OVL_ERROR,                // severity_level
    'OVL_POSEDGE,              // edge_type
    'OVL_ASSERT,               // property_type
    "Error: new req when FSM not ready", // msg
    'OVL_COVER_NONE,          // coverage_level
    'OVL_POSEDGE,              // clock_edge
    'OVL_ACTIVE_LOW,           // reset_polarity
    'OVL_GATE_CLOCK )         // gating_type

request_when_FSM_idle (
    clock,                      // clock
    reset,                      // reset
    enable,                     // enable
    req,                        // sampling_event
    state == 'IDLE,             // test_expr
    fire_request_when_FSM_idle); // fire

```

Ensures that (*state* == 'IDLE) is TRUE at each rising edge of *clock* when *req* transitions from FALSE to TRUE.

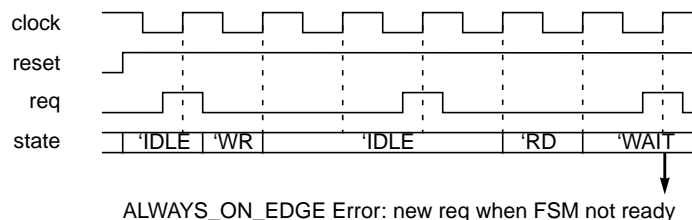


```

ovl_always_on_edge #(
    'OVL_ERROR,                // severity_level
    'OVL_ANYEDGE,              // edge_type
    'OVL_ASSERT,               // property_type
    "Error: req transition when FSM not idle", // msg
    'OVL_COVER_NONE,           // coverage_level
    'OVL_POSEDGE,              // clock_edge
    'OVL_ACTIVE_LOW,           // reset_polarity
    'OVL_GATE_CLOCK )          // gating_type

req_transition_when_FSM_idle (
    clock,                      // clock
    reset,                      // reset
    enable,                     // enable
    req,                        // sampling_event
    state == 'IDLE,             // test_expr
    fire_req_transition_when_FSM_idle); // fire

```

Ensures that  $(state == 'IDLE)$  is TRUE at each rising edge of *clock* when *req* transitions from TRUE to FALSE or from FALSE to TRUE.

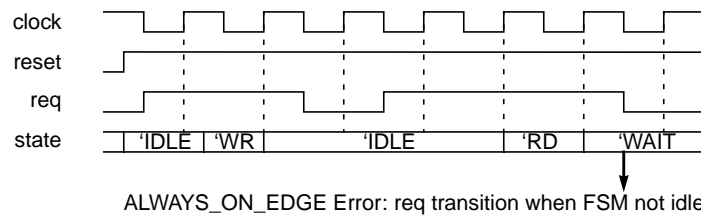


```

ovl_always_on_edge #(
    'OVL_ERROR,                // severity_level
    'OVL_NOEDGE,               // edge_type
    'OVL_ASSERT,               // property_type
    "Error: req when FSM not idle", // msg
    'OVL_COVER_NONE,           // coverage_level
    'OVL_POSEDGE,              // clock_edge
    'OVL_ACTIVE_LOW,           // reset_polarity
    'OVL_GATE_CLOCK )          // gating_type

req_when_FSM_idle (
    clock,                      // clock
    reset,                      // reset
    enable,                     // enable
    1'b0,                      // sampling_event
    !req || (state == 'IDLE),   // test_expr
    fire_req_when_FSM_idle);    // fire


```

Ensures that  $(!req || (state == 'IDLE))$  is TRUE at each rising edge of *clock*.

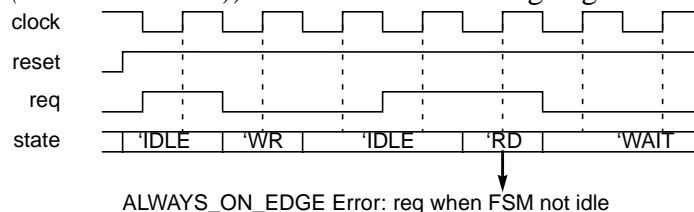

## ovl\_arbiter

Ensures that a resource arbiter provides grants to corresponding requests according to a specified arbitration scheme and within a specified time window.

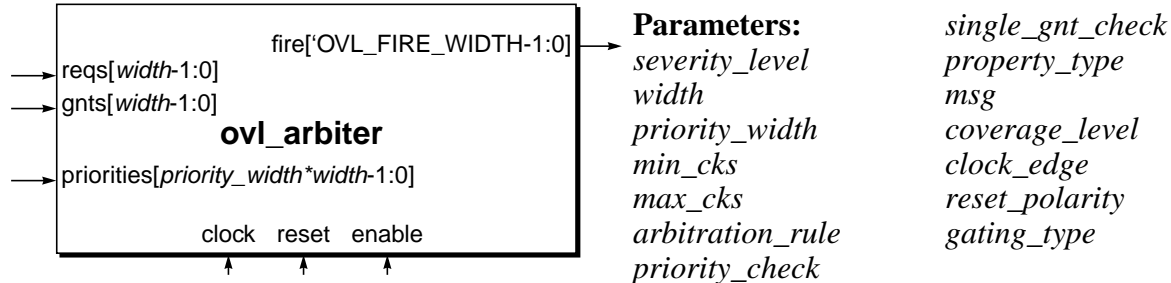

**Class:** event-bounded assertion

## Syntax

```
ovl_arbiter
[ #(severity_level, width, priority_width, min_cks, max_cks,
  arbitration_rule, priority_check, single_gnt_check,
  property_type, msg, coverage_level, clock_edge, reset_polarity,
  gating_type) ]
instance_name (clock, reset, enable, reqs, gnts, priorities, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>width</i>	Width of <i>reqs</i> and <i>gnts</i> ports (number of channels). Default: 2.
<i>priority_width</i>	Number of bits to encode a priority value in <i>priorities</i> . Default: 1.
<i>min_cks</i>	Minimum number of clock cycles after a request that its grant can be issued. If <i>min_cks</i> is 0, a grant can be issued in the same cycle the request is made. Default: 1
<i>max_cks</i>	Maximum number of clock cycles after a request that its grant can be issued. A value of 0 indicates no upper bound for grants. Default: 0.
<i>arbitration_rule</i>	Arbitration scheme used by the arbiter. This parameter turns on the corresponding check for the arbitration scheme. <i>arbitration_rule</i> = 0 (Default) no scheme <i>arbitration_rule</i> = 1 fair (round robin) <i>arbitration_rule</i> = 2 FIFO <i>arbitration_rule</i> = 3 least-recently used

<i>priority_check</i>	Whether or not to perform priority checks. <i>priority_check</i> = 0 (Default) Turns off the priority check. <i>priority_check</i> = 1 Turns on the priority check. The <i>min_cks</i> parameter must be 0 or 1.
<i>single_gnt_check</i>	Whether or not to perform grant_one checks. <i>single_gnt_check</i> = 0 Turns off the grant_one check. <i>single_gnt_check</i> = 1 (Default) Turns on the grant_one check.
<i>property_type</i>	Property type. Default: ‘OVL_PROPERTY_DEFAULT (‘OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: ‘OVL_MSG_DEFAULT (“VIOLATION”).
<i>coverage_level</i>	Coverage level. Default: ‘OVL_COVER_DEFAULT (‘OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: ‘OVL_CLOCK_EDGE_DEFAULT (‘OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: ‘OVL_RESET_POLARITY_DEFAULT (‘OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: ‘OVL_GATING_TYPE_DEFAULT (‘OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = ‘OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = ‘OVL_GATE_RESET). Ignored if <i>gating_type</i> is ‘OVL_NONE.
<i>reqs[width-1:0]</i>	Concatenation of request signals to the arbiter. Each bit in the vector is a request from the corresponding channel.
<i>gnts[width-1:0]</i>	Concatenation of grant signals from the arbiter. Each bit in the vector is a grant to the corresponding channel.

<i>priorities</i> [ <i>priority_width</i> * <i>width</i> -1:0]	Concatenation of non-negative integer values corresponding to the request priorities of the corresponding <i>req</i> channels (0 is the lowest priority). If the priority check is on, <i>priorities</i> must not change while any channel is waiting for a grant (otherwise certain checks might produce incorrect results). If the priority check is off, this port is ignored (however, the port must be configured with the specified width).
<i>fire</i> ['OVL_FIRE_WIDTH-1:0]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_arbiter checker ensures an arbiter follows a specified arbitration process. The checker checks *reqs* and *gnts* at each active edge of *clock*. These are two bit vectors representing respectively requests from the channels and grants from the arbiter. Both vectors have the same size (width), which is the same as the number of channels.

A request from a channel is signaled by asserting its corresponding *reqs* bit, which should be followed (according to the configured arbitration rules) by a responding assertion of the same bit in *gnts*. If a request deasserts before the arbiter issues the corresponding grant, all checks for that request are cancelled. If a request remains asserted in the cycle its grant is issued, a new request is assumed.

The ovl\_arbiter checker checks the following rules:

- A grant should not be issued to a channel without a request.
- A grant asserts for one cycle (unless the grant is for consecutive requests).
- A grant should be issued in the time window specified by [*min\_cks*:*max\_cks*] after its request.

The ovl\_arbiter checker can be configured to check that at most one grant is issued each cycle (i.e., a single grant at a time).

The ovl\_arbiter checker also can be configured to check a specific arbitration scheme by turning the priority check on or off and selecting a value for *arbitration\_rule*. The combination of the two selections determines the expected arbitration scheme.

- Primary rule.

If the priority check is on, priority arbitration is the primary rule. When a request is made, the values in *priorities* are the priorities of the corresponding channels in ascending priority order (a value of 0 is the lowest priority). If multiple requests are pending, the grant should be issued to the channel with the highest priority. If more than one channel has the highest priority, the grant is made according to the secondary rule (applied to the channels with that priority).

If the priority check is off, only the secondary rule is used to arbitrate the grant.

- Secondary rule.

The secondary rule is determined by the *arbitration\_rule* parameter. This rule applies to the channels with the highest priority if the priority check is on and to all channels if the priority check is off. If *arbitration\_rule* is 0, no secondary rule is assumed (if the priority check is on and multiple channels have the highest priority, any of them can receive the grant). If the priority check is off, no arbitration scheme checks are performed.

If *arbitration\_rule* is not 0, the secondary rule is one of the following:

- Fairness or round-robin rule (*arbitration\_rule* is 1).

Grant is not issued to a (high-priority) channel that has received a grant while another channel's request is pending.

- First-in first-out (FIFO) rule (*arbitration\_rule* is 2).

Grant is issued to a (high-priority) channel with the longest pending request.

- Least-recently used (LRU) rule (*arbitration\_rule* is 3).

Grant is issued to a (high-priority) channel whose previous grant was issued the longest time before the current cycle.

## Assertion Checks

GNT_ONLY_IF_REQ	Grant was issued without a request. <i>Gnt</i> bit was TRUE, but the corresponding <i>req</i> bit was not TRUE or transitioning from TRUE.
ONE_CYCLE_GNT	Grant was asserted for longer than 1 cycle. Grant was TRUE for 2 cycles in response to only one request.
GNT_IN_WINDOW	Grant was not issued within the specified time window. Grant was issued before <i>min_cks</i> cycles or no grant was issued by <i>max_cks</i> cycles.
HIGHEST_PRIORITY	Grant was issued for a request other than the highest priority request. <i>priority_check</i> = 1 Grant was issued, but another pending request had higher priority than all the requests that received grants.
FAIRNESS	Two grants were issued to the same channel while another channel's request was pending. <i>arbitration_rule</i> = 1 Two grants were issued to a channel while a request from another channel was pending (violating the fairness rule).

FIFO	Grant was issued for a request that was not the longest pending request. <code>arbitration_rule = 2</code> Grant was issued, but one or more other (high priority) requests were pending longer than the granted request (violating the FIFO rule).
LRU	Grant was issued to a channel that was more-recently used than another channel with a pending request. <code>arbitration_rule = 3</code> Grant was issued, but another channel with a pending (high priority) request received its previous grant before the granted channel received its previous grant (violating the fairness rule).
SINGLE_GRANT	Multiple grants were issued in the same clock cycle. <code>single_gnt_check = 1</code> More than one <i>gnts</i> bit was TRUE in the same clock cycle.

## Implicit X/Z Checks

<code>reqs</code> contains X or Z	Requests contained X or Z bits.
<code>grants</code> contains X or Z	Grants contained X or Z bits.
<code>priorities</code> contains X or Z	Priorities contained X or Z bits.

## Cover Points


<code>cover_req_granted</code>	BASIC — Number of granted requests for each channel.
<code>cover_req_aborted</code>	BASIC — Number of aborted requests for each channel.
<code>cover_req_granted_at_min_cks</code>	CORNER — Number of times grant was issued <i>min_cks</i> cycles after its request was asserted.
<code>cover_req_granted_at_max_cks</code>	CORNER — Number of times grant was issued <i>max_cks</i> cycles after its request was asserted.
<code>time_to_grant</code>	STATISTIC — Reports the number of requests granted at each cycle in the time window.
<code>concurrent_requests</code>	STATISTIC — Reports for each channel, the number of times each other channel had requests concurrent with that channel.

## See also



## ovl\_bits

Ensures that the number of asserted (or deasserted) bits of the value of an expression is within a specified range.

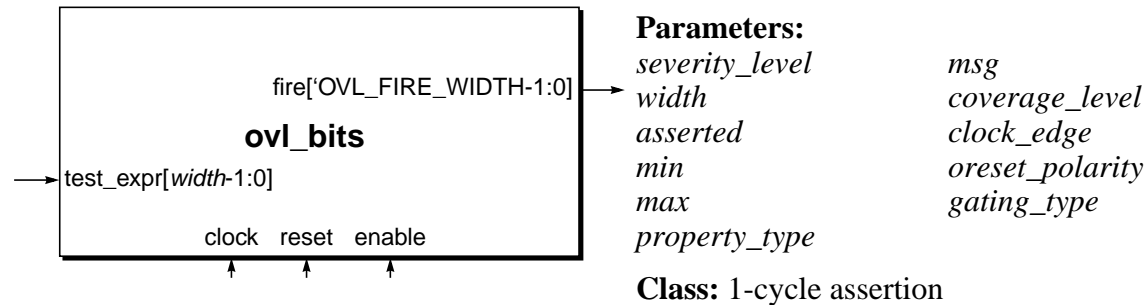

## Syntax

```
ovl_bits
[ #(severity_level, width, asserted, min, max, property_type, msg,
  coverage_level, clock_edge, reset_polarity, gating_type)]
instance_name (clock, reset, enable, test_expr, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT' ('OVL_ERROR').
<i>width</i>	Width of the <i>test_expr</i> argument. Default: 1.
<i>asserted</i>	Whether to count asserted or deasserted bits. <i>asserted</i> = 0 Counts FALSE (deasserted) bits. <i>asserted</i> = 1 (Default) Counts TRUE (asserted) bits.
<i>min</i>	Whether or not to perform min checks. Default: 1. <i>min</i> = 0 Turns off the min check. <i>min</i> ≥ 1 Minimum number of bits in <i>test_expr</i> that should be asserted (or deasserted).
<i>max</i>	Whether or not to perform max checks. Default: 1. <i>max</i> = 0 Turns off the max check. <i>max</i> ≥ 1 Maximum number of bits in <i>test_expr</i> that should be asserted (or deasserted). <i>Max</i> must be ≥ <i>min</i> .
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT' ('OVL_ASSERT').

<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>test_expr</i> [ <i>width</i> -1:0]	Variable or expression to check.
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_bits checker checks the multiple-bit expression *test\_expr* at each active edge of *clock* and counts the number of TRUE bits (if *assert* is 1) or FALSE bits (if *assert* is 0). If the count is < *min* a min violation occurs and if the count is > *max*, a max violation occurs.

## Assertion Checks

MIN	<p>Fewer than 'min' bits were asserted.  <i>min</i> &gt; 0 and <i>asserted</i> = 1  The number of TRUE bits in the value of <i>test_expr</i> was less than the minimum specified by <i>min</i>.</p> <p>Fewer than 'min' bits were deasserted.  <i>min</i> &gt; 0 and <i>asserted</i> = 0  The number of FALSE bits in the value of <i>test_expr</i> was less than the minimum specified by <i>min</i>.</p>
-----	--

MAX	<p>More than 'max' bits were asserted. <i>max</i> &gt; 0 and <i>asserted</i> = 1 The number of TRUE bits in the value of <i>test_expr</i> was more than the maximum specified by <i>max</i>.</p> <p>More than 'max' bits were deasserted. <i>max</i> &gt; 0 and <i>asserted</i> = 0 The number of FALSE bits in the value of <i>test_expr</i> was more than the maximum specified by <i>max</i>.</p>
-----	--

## Implicit X/Z Checks


<i>test_expr</i> contains X or Z	Expression contained X or Z bits.
----------------------------------	-----------------------------------

## Cover Points

<i>cover_values_checked</i>	SANITY — Number of cycles <i>test_expr</i> changed value.
<i>cover_bits_within_limit</i>	BASIC — Number of cycles the number of counted <i>test_expr</i> bits was in range.
<i>cover_bits_at_min</i>	CORNER — Number of cycles the number of counted <i>test_expr</i> bits was <i>min</i> .
<i>cover_bits_at_max</i>	CORNER — Number of cycles the number of counted <i>test_expr</i> bits was <i>max</i> .

## ovl\_change

Ensures that the value of an expression changes within a specified number of cycles after a start event initiates checking.

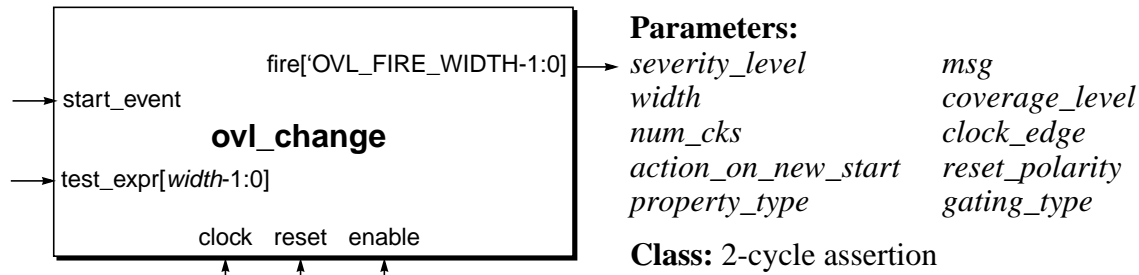

## Syntax

```
ovl_change
  [ #(severity_level, width, num_cks, action_on_new_start,
      property_type, msg, coverage_level, clock_edge, reset_polarity,
      gating_type) ]
  instance_name (clock, reset, enable, start_event, test_expr, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>width</i>	Width of the <i>test_expr</i> argument. Default: 1.
<i>num_cks</i>	Number of cycles to check for a change in the value of <i>test_expr</i> . Default: 1.
<i>action_on_new_start</i>	Method for handling a new start event that occurs before <i>test_expr</i> changes value or <i>num_cks</i> clock cycles transpire without a change. Values are: 'OVL_IGNORE_NEW_START, 'OVL_RESET_ON_NEW_START and 'OVL_ERROR_ON_NEW_START. Default: 'OVL_IGNORE_NEW_START.
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).

<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>start_event</i>	Expression that (along with <i>action_on_new_start</i> ) identifies when to start checking <i>test_expr</i> .
<i>test_expr</i> [ <i>width</i> -1:0]	Expression that should change value within <i>num_cks</i> cycles from the start event unless the check is interrupted by a valid new start event.
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The *ovl\_change* assertion checker checks the expression *start\_event* at each active edge of *clock* to determine if it should check for a change in the value of *test\_expr*. If *start\_event* is sampled TRUE, the checker evaluates *test\_expr* and re-evaluates *test\_expr* at each of the subsequent *num\_cks* active edges of *clock*. If the value of *test\_expr* has not changed from its start value by the last of the *num\_cks* cycles, the assertion fails.

The method used to determine how to handle a new start event, when the checker is in the state of checking for a change in *test\_expr*, is controlled by the *action\_on\_new\_start* parameter. The checker has the following actions:

- 'OVL\_IGNORE\_NEW\_START

The checker does not sample *start\_event* for the next *num\_cks* cycles after a start event.

- 'OVL\_RESET\_ON\_NEW\_START

The checker samples *start\_event* every cycle. If a check is pending and the value of *start\_event* is TRUE, the checker terminates the check and initiates a new check with the current value of *test\_expr* (even on the last cycle of a check).

- ‘OVL\_ERROR\_ON\_NEW\_START

The checker samples *start\_event* every cycle. If a check is pending and the value of *start\_event* is TRUE, the assertion fails with an illegal start event violation. In this case, the checker does not initiate a new check and does not terminate a pending check.

The checker is useful for ensuring proper changes in structures after various events, such as verifying synchronization circuits respond after initial stimuli. For example, it can be used to check the protocol that an “acknowledge” occurs within a certain number of cycles after a “request”. It also can be used to check that a finite-state machine changes state after an initial stimulus.

## Assertion Checks

CHANGE	The <i>test_expr</i> expression did not change value for <i>num_cks</i> cycles after <i>start_event</i> was sampled TRUE.
illegal start event	The <i>action_on_new_start</i> parameter is set to ‘OVL_ERROR_ON_NEW_START and <i>start_event</i> expression evaluated to TRUE while the checker was in the state of checking for a change in the value of <i>test_expr</i> .

## Implicit X/Z Checks

<i>test_expr</i> contains X or Z	Expression value contained X or Z bits.
<i>start_event</i> contains X or Z	Start event value was X or Z.

## Cover Points

cover_window_open	BASIC — A change check was initiated.
cover_window_close	BASIC — A change check lasted the full <i>num_cks</i> cycles. If no assertion failure occurred, the value of <i>test_expr</i> changed in the last cycle.
cover_window_resets	CORNER — The <i>action_on_new_start</i> parameter is ‘OVL_RESET_ON_NEW_START, and <i>start_event</i> was sampled TRUE while the checker was monitoring <i>test_expr</i> , but it had not changed value.

## See also

[ovl\\_time](#)  
[ovl\\_unchange](#)  
[ovl\\_win\\_change](#)

[ovl\\_win\\_unchange](#)  
[ovl\\_window](#)

## Examples


```

ovl_change #(
    'OVL_ERROR,                                // severity_level
    1,                                          // width
    3,                                          // num_cks
    'OVL_IGNORE_NEW_START,                    // action_on_new_start
    'OVL_ASSERT,                              // property_type
    "Error: invalid synchronization",          // msg
    'OVL_COVER_DEFAULT,                      // coverage_level
    'OVL_POSEDGE,                             // clock_edge
    'OVL_ACTIVE_LOW,                         // reset_polarity
    'OVL_GATE_CLOCK)                         // gating_type

    valid_sync_out (
        clock,                                // clock
        reset,                                // reset
        enable,                               // enable
        sync == 1,                            // start_event
        out,                                  // test_expr
        fire_valid_sync_out);                 // fire

```

Ensures that *out* changes within 3 cycles after *sync* asserts. New starts are ignored.

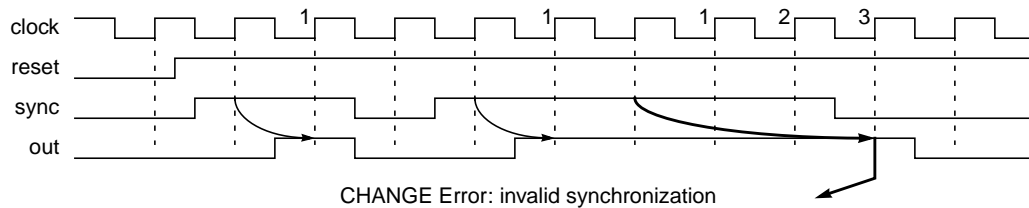


```

ovl_change #(
    'OVL_ERROR,                // severity_level
    1,                          // width
    3,                          // num_cks
    'OVL_RESET_ON_NEW_START,    // action_on_new_start
    'OVL_ASSERT,                // property_type
    "Error: invalid synchronization", // msg
    'OVL_COVER_DEFAULT,         // coverage_level
    'OVL_POSEDGE,                // clock_edge
    'OVL_ACTIVE_LOW,             // reset_polarity
    'OVL_GATE_CLOCK )           // gating_type

    valid_sync_out (
        clock,                  // clock
        reset,                  // reset
        enable,                 // enable
        sync == 1,              // start_event
        out,                    // test_expr
        fire_valid_sync_out);    // fire

```

Ensures that *out* changes within 3 cycles after *sync* asserts. A new start terminates the pending check and initiates a new check.

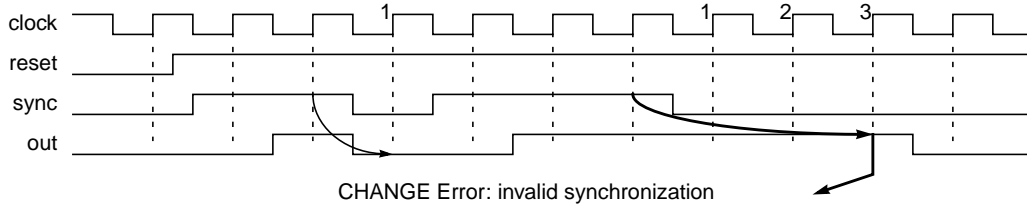




```

ovl_change #(
    'OVL_ERROR,                // severity_level
    1,                          // width
    3,                          // num_cks
    'OVL_ERROR_ON_NEW_START,    // action_on_new_start
    'OVL_ASSERT,                // property_type
    "Error: invalid synchronization", // msg
    'OVL_COVER_DEFAULT,         // coverage_level
    'OVL_POSEDGE,               // clock_edge
    'OVL_ACTIVE_LOW,            // reset_polarity
    'OVL_GATE_CLOCK )           // gating_type

    valid_sync_out (
        clock,                  // clock
        reset,                  // reset
        enable,                 // enable
        sync == 1,              // start_event
        out,                    // test_expr
        fire_valid_sync_out );   // fire


```

Ensures that *out* changes within 3 cycles after *sync* asserts. A new start reports an *illegal start event* violation (without initiating a new check) but any pending check is retained (even on the last check cycle).

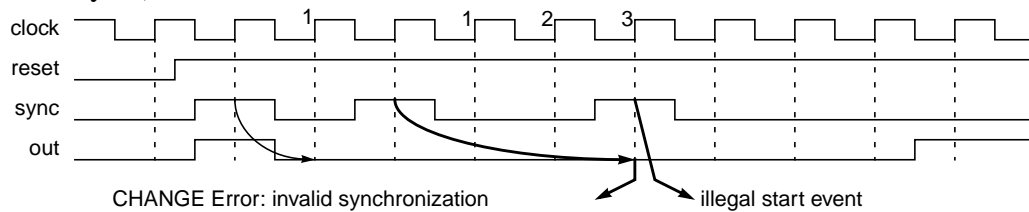

## ovl\_code\_distance

Ensures that when an expression changes value, the number of bits in the new value that are different from the bits in the value of a second expression is within a specified range.

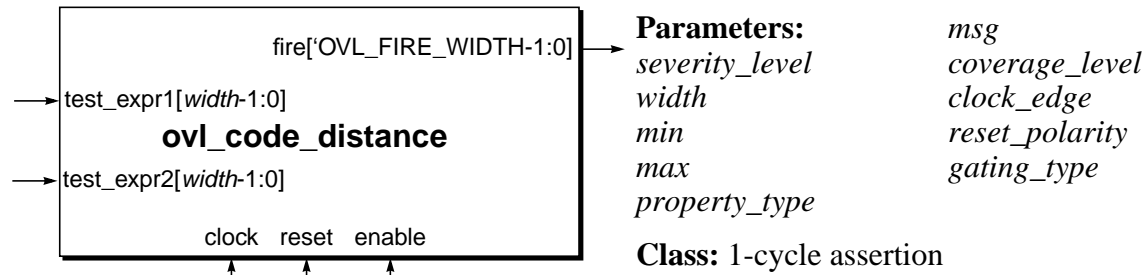

## Syntax

```
ovl_code_distance
    [#(severity_level, width, min, max, property_type, msg,
        coverage_level, clock_edge, reset_polarity,
        gating_type)]
    instance_name (clock, reset, enable, test_expr1, test_expr2, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>width</i>	Width of <i>test_expr</i> and <i>test_expr2</i> . Default: 1.
<i>min</i>	Minimum code distance. Default: 1.
<i>max</i>	Maximum code distance. Default: 1.
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>test_expr1</i> [ <i>width</i> -1:0]	Variable or expression to check when its value changes.
<i>test_expr2</i> [ <i>width</i> -1:0]	Variable or expression from which the code distance from <i>test_expr1</i> is calculated.
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_code\_distance assertion checker checks the expression *test\_expr1* at each active edge of *clock* to determine if *test\_expr* has changed value. If so, the checker evaluates a second expression *test\_expr2* and calculates the absolute value of the difference between the two values (called the *code distance*). If the code distance is < *min* or > *max*, the assertion fails and a *code\_distance* violation occurs.

## Assertion Checks

CODE_DISTANCE	Code distance was not within specified limits. Code distance from <i>test_expr1</i> to <i>test_expr2</i> is less than <i>min</i> or greater than <i>max</i> .
---------------	--

## Implicit X/Z Checks

<i>test_expr1</i> contains X or Z	Expression contained X or Z bits.
<i>test_expr2</i> contains X or Z	Second expression contained X or Z bits.

## Cover Points

<i>cover_test_expr_changes</i>	SANITY — Number of cycles <i>test_expr1</i> changed value.
<i>cover_code_distance_within_limit</i>	BASIC — Number of cycles <i>test_expr1</i> changed to a value whose code distance from <i>test_expr2</i> was in the range from <i>min</i> to <i>max</i> .
<i>observed_code_distance</i>	BASIC — Reports the code distances that occurred at least once.

cover\_code\_distance\_  
at\_min


CORNER — Number of cycles *test\_expr1* changed to a value whose code distance from *test\_expr2* was *min*.

cover\_code\_distance\_  
at\_max

CORNER — Number of cycles *test\_expr1* changed to a value whose code distance from *test\_expr2* was *max*.

## ovl\_cycle\_sequence

Ensures that if a specified necessary condition occurs, it is followed by a specified sequence of events.

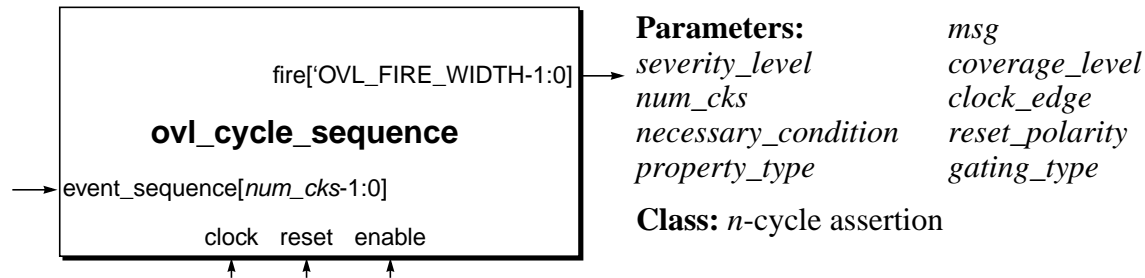

### Syntax

```
ovl_cycle_sequence
  [#(severity_level, num_cks, necessary_condition, property_type,
    msg, coverage_level, clock_edge, reset_polarity, gating_type)]
  instance_name (clock, reset, enable, event_sequence, fire);
```

### Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>num_cks</i>	Width of the <i>event_sequence</i> argument. This parameter must not be less than 2. Default: 2.
<i>necessary_condition</i>	Method for determining the necessary condition that initiates the sequence check and whether or not to pipeline checking. Values are: 'OVL_TRIGGER_ON_MOST_PIPE (default), 'OVL_TRIGGER_ON_FIRST_PIPE and 'OVL_TRIGGER_ON_FIRST_NOPIPE.
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).

*gating\_type*                      Gating behavior of the checker when *enable* is FALSE. Default: 'OVL\_GATING\_TYPE\_DEFAULT ('OVL\_GATE\_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>event_sequence</i> [ <i>num_cks</i> -1:0 ]	Expression that is a concatenation where each bit represents an event.
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_cycle\_sequence assertion checker checks the expression *event\_sequence* at the active edge of *clock* to identify whether or not the bits in *event\_sequence* assert sequentially on successive active edges of *clock*. For example, the following series of 4-bit values (where *b* is any bit value) is a valid sequence:

1bbb → b1bb → bb1b → bbb1

This series corresponds to the following series of events on successive active edges of *clock*:

cycle 1	event_sequence[3] == 1
cycle 2	event_sequence[2] == 1
cycle 3	event_sequence[1] == 1
cycle 4	event_sequence[0] == 1

The checker also has the ability to pipeline its analysis. Here, one or more new sequences can be initiated and recognized while a sequence is in progress. For example, the following series of 4-bit values (where *b* is any bit value) constitutes two overlapping valid sequences:

1bbb → b1bb → 1b1b → b1b1 → bb1b → bbb1

This series corresponds to the following sequences of events on successive active edges of *clock*:

cycle 1	event_sequence[3] == 1	
cycle 2	event_sequence[2] == 1	
cycle 3	event_sequence[1] == 1	event_sequence[3] == 1
cycle 4	event_sequence[0] == 1	event_sequence[2] == 1
cycle 5		event_sequence[1] == 1
cycle 6		event_sequence[0] == 1

When the checker determines that a specified necessary condition has occurred, it subsequently verifies that a specified event or event sequence occurs and if not, the assertion fails.

The method used to determine what constitutes the necessary condition and the resulting trigger event or event sequence is controlled by the *necessary\_condition* parameter. The checker has the following actions:

- ‘OVL\_TRIGGER\_ON\_MOST\_PIPE

The necessary condition is that the bits:

```
event_sequence [num_cks -1], . . . ,event_sequence [1]
```

are sampled equal to 1 sequentially on successive active edges of *clock*. When this condition occurs, the checker verifies that the value of *event\_sequence*[0] is 1 at the next active edge of *clock*. If not, the assertion fails.

The checking is pipelined, which means that if *event\_sequence*[*num\_cks* -1] is sampled equal to 1 while a sequence (including *event\_sequence*[0]) is in progress and subsequently the necessary condition is satisfied, the check of *event\_sequence*[0] is performed.

- ‘OVL\_TRIGGER\_ON\_FIRST\_PIPE

The necessary condition is that the *event\_sequence* [*num\_cks* -1] bit is sampled equal to 1 on an active edge of *clock*. When this condition occurs, the checker verifies that the bits:

```
event_sequence [num_cks -2], . . . ,event_sequence [0]
```

are sampled equal to 1 sequentially on successive active edges of *clock*. If not, the assertion fails and the checker cancels the current check of subsequent events in the sequence.

The checking is pipelined, which means that if *event\_sequence*[*num\_cks* -1] is sampled equal to 1 while a check is in progress, an additional check is initiated.

- ‘OVL\_TRIGGER\_ON\_FIRST\_NOPIPE

The necessary condition is that the *event\_sequence* [*num\_cks* -1] bit is sampled equal to 1 on an active edge of *clock*. When this condition occurs, the checker verifies that the bits:

*event\_sequence* [*num\_cks* -2], . . . , *event\_sequence* [0]

are sampled equal to 1 sequentially on successive active edges of *clock*. If not, the assertion fails and the checker cancels the current check of subsequent events in the sequence.

The checking is not pipelined, which means that if *event\_sequence*[*num\_cks* -1] is sampled equal to 1 while a check is in progress, it is ignored, even if the check is verifying the last bit of the sequence (*event\_sequence* [0]).

## Assertion Checks

CYCLE_SEQUENCE	The necessary condition occurred, but it was not followed by the event or event sequence.
illegal num_cks parameter	The <i>num_cks</i> parameter is less than 2.

## Implicit X/Z Checks

First event in the sequence contains X or Z	Value of the first event in the sequence was X or Z.
Subsequent events in the sequence contain X or Z	Value of a subsequent event in the sequence was X or Z.
First num_cks-1 events in the sequence contain X or Z	Values of the events in the sequence (except the last event) were X or Z.
Last event in the sequence contains X or Z	Value of the last event in the sequence was X or Z.

## Cover Points

cover_sequence_trigger	BASIC — The trigger sequence occurred.
------------------------	--

## See also

[ovl\\_change](#)

[ovl\\_unchange](#)




## Examples

```
ovl_cycle_sequence #(
    'OVL_ERROR,                // severity_level
    3,                        // num_cks
    'OVL_TRIGGER_ON_MOST_PIPE, // necessary_condition
    'OVL_ASSERT,              // property_type
    "Error: invalid WR sequence", // msg
    'OVL_COVER_DEFAULT,       // coverage_level
    'OVL_POSEDGE,             // clock_edge
    'OVL_ACTIVE_LOW,          // reset_polarity
    'OVL_GATE_CLOCK )        // gating_type

    valid_write_sequence (

        clock,                // clock
        reset,                // reset
        enable,               // enable
        { r_opcode == 'WR,    // event_sequence
          r_opcode == 'WAIT,
          (r_opcode == 'WR) ||
          (r_opcode == 'DONE)},
        fire_valid_write_sequence ); // fire
```

Ensures that a 'WR, 'WAIT sequence in consecutive cycles is followed by a 'DONE or 'WR. The sequence checking is pipelined.

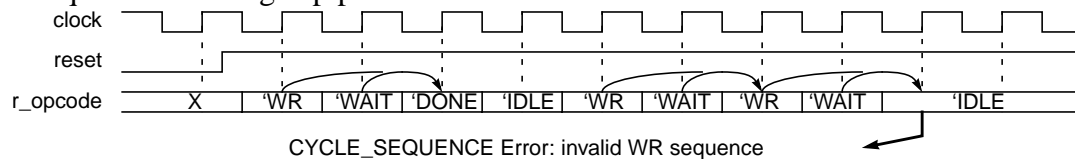


```
ovl_cycle_sequence #(
    'OVL_ERROR,                // severity_level
    3,                        // num_cks
    'OVL_TRIGGER_ON_FIRST_PIPE, // necessary_condition
    'OVL_ASSERT,              // property_type
    "Error: invalid WR sequence", // msg
    'OVL_COVER_DEFAULT,       // coverage_level
    'OVL_POSEDGE,             // clock_edge
    'OVL_ACTIVE_LOW,          // reset_polarity
    'OVL_GATE_CLOCK )        // gating_type

    valid_write_sequence (

        clock,                // clock
        reset,                // reset
        enable,               // enable
        { r_opcode == 'WR,    // event_sequence
          (r_opcode == 'WAIT) ||
          (r_opcode == 'WR),
          (r_opcode == 'WAIT) ||
          (r_opcode == 'DONE)},
        fire_valid_write_sequence ); // fire
```


Ensures that a 'WR is followed by a 'WAIT or another 'WR, which is then followed by a 'WAIT or a 'DONE (in consecutive cycles). The sequence checking is pipelined: a new 'WR during a sequence check initiates an additional check.

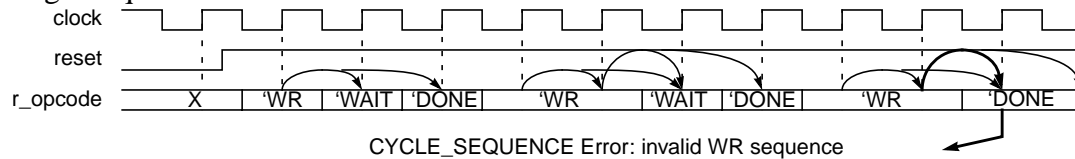

```
ovl_cycle_sequence #(
    'OVL_ERROR,                                // severity_level
    3,                                          // num_cks
    'OVL_TRIGGER_ON_FIRST_NOPIPE,             // necessary_condition
    'OVL_ASSERT,                              // property_type
    "Error: invalid WR sequence",              // msg
    'OVL_COVER_DEFAULT,                       // coverage_level
    'OVL_POSEDGE,                             // clock_edge
    'OVL_ACTIVE_LOW,                          // reset_polarity
    'OVL_GATE_CLOCK)                          // gating_type


    valid_write_sequence (
        clock,                                // clock
        reset,                                // reset
        enable,                                // enable
        { r_opcode == 'WR,                    // event_sequence
          (r_opcode == 'WAIT) ||
          (r_opcode == 'WR),
          (r_opcode == 'DONE)},
        fire_valid_write_sequence );           // fire
```

Ensures that a 'WR is followed by a 'WAIT or another 'WR, which is then followed by a 'DONE (in consecutive cycles). The sequence checking is not pipelined: a new 'WR during a sequence check does not initiate an additional check.

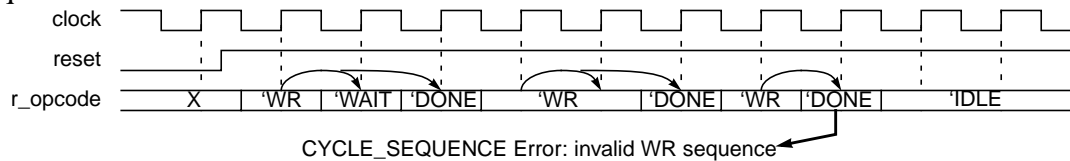

## ovl\_decrement

Ensures that the value of an expression changes only by the specified decrement value.

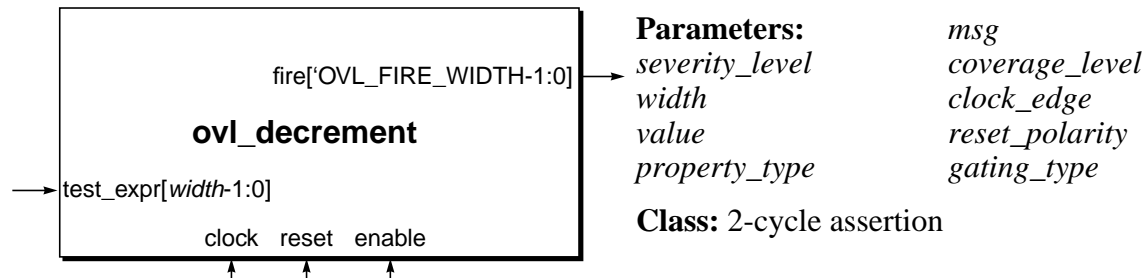

## Syntax

```
ovl_decrement
  [#(severity_level, width, value, property_type, msg, coverage_level,
    clock_edge, reset_polarity, gating_type)]
  instance_name (clock, reset, enable, test_expr, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>width</i>	Width of the <i>test_expr</i> argument. Default: 1.
<i>value</i>	Decrement value for <i>test_expr</i> . Default: 1.
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>test_expr</i> [ <i>width</i> -1:0]	Expression that should decrement by <i>value</i> whenever its value changes from the active edge of <i>clock</i> to the next active edge of clock.
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_decrement assertion checker checks the expression *test\_expr* at each active edge of *clock* to determine if its value has changed from its value at the previous active edge of *clock*. If so, the checker verifies that the new value equals the previous value decremented by *value*. The checker allows the value of *test\_expr* to wrap, if the total change equals the decrement *value*. For example, if width is 5 and value is 4, then the following change in *test\_expr* is valid:

```
5'b00010 -> 5'b11110
```

The checker is useful for ensuring proper changes in structures such as counters and finite-state machines. For example, the checker is useful for circular queue structures with address counters that can wrap. Do not use this checker for variables or expressions that can increment. Instead consider using the ovl\_delta checker.

## Assertion Checks

DECREMENT	Expression evaluated to a value that is not its previous value decremented by <i>value</i> .
-----------	--

## Implicit X/Z Checks

<i>test_expr</i> contains X or Z	Expression value contained X or Z bits.
----------------------------------	---

## Cover Points

cover_test_expr_change	BASIC — Expression changed value.
------------------------	-----------------------------------

## Notes

1. The assertion check compares the current value of *test\_expr* with its previous value. Therefore, checking does not start until the second rising clock edge of *clock* after *reset* deasserts.

## See also

[ovl\\_delta](#)  
[ovl\\_increment](#)


[ovl\\_no\\_underflow](#)

## Example

```
ovl_decrement #(
    'OVL_ERROR,                // severity_level
    4,                          // width
    1,                          // value
    'OVL_ASSERT,               // property_type
    "Error: invalid binary decrement", // msg
    'OVL_COVER_DEFAULT,        // coverage_level
    'OVL_POSEDGE,              // clock_edge
    'OVL_ACTIVE_LOW,           // reset_polarity
    'OVL_GATE_CLOCK)           // gating_type


    valid_count (
        clock,                  // clock
        reset,                  // reset
        enable,                 // enable
        count,                  // test_expr
        fire_valid_count );      // fire
```

Ensures that the programmable counter's *count* variable only decrements by 1. If *count* wraps, the assertion fails, because the change is not a binary decrement.

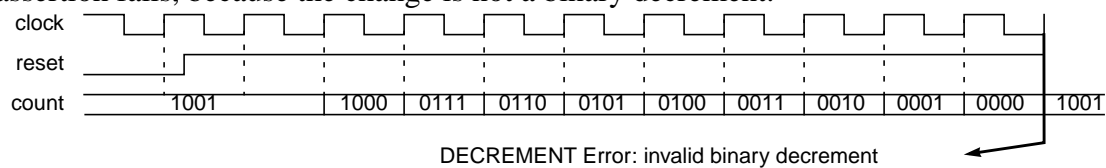

## ovl\_delta

Ensures that the value of an expression changes only by a value in the specified range.

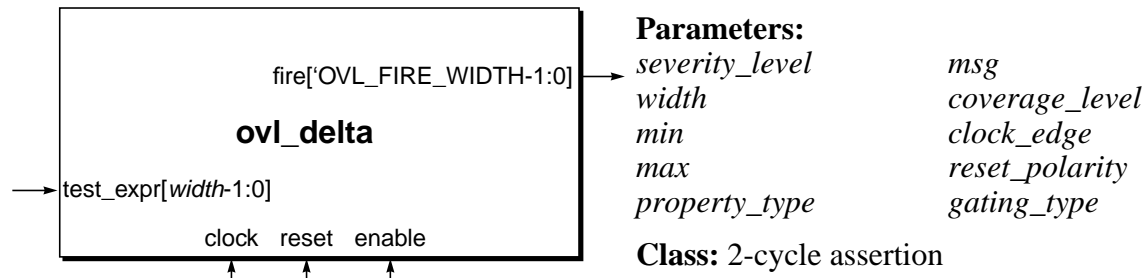

## Syntax

```
ovl_delta
  [#(severity_level, width, min, max, property_type, msg,
    coverage_level, clock_edge, reset_polarity, gating_type)]
  instance_name (clock, reset, enable, test_expr, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>width</i>	Width of the <i>test_expr</i> argument. Default: 1.
<i>min</i>	Minimum delta value allowed for <i>test_expr</i> . Default: 1.
<i>max</i>	Maximum delta value allowed for <i>test_expr</i> . Default: 1.
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>test_expr</i> [ <i>width</i> -1:0]	Expression that should only change by a delta value in the range <i>min</i> to <i>max</i> .
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_delta assertion checker checks the expression *test\_expr* at each active edge of *clock* to determine if its value has changed from its value at the previous active edge of *clock*. If so, the checker verifies that the difference between the new value and the previous value (i.e., the delta value) is in the range from *min* to *max*, inclusive. If the delta value is less than *min* or greater than *max*, the assertion fails.

The checker is useful for ensuring proper changes in control structures such as up-down counters. For these structures, ovl\_delta can check for underflow and overflow. In datapath and arithmetic circuits, ovl\_delta can check for “smooth” transitions of the values of various variables (for example, for a variable that controls a physical variable that cannot detect a severe change from its previous value).

## Assertion Checks

DELTA	Expression changed value by a delta value not in the range <i>min</i> to <i>max</i> .
-------	---

## Implicit X/Z Checks

<i>test_expr</i> contains X or Z	Expression value contained X or Z bits.
----------------------------------	---

## Cover Points

<i>cover_test_expr_change</i>	BASIC — Expression changed value.
<i>cover_test_expr_delta_at_min</i>	CORNER — Expression changed value by a delta equal to <i>min</i> .
<i>cover_test_expr_delta_at_max</i>	CORNER — Expression changed value by a delta equal to <i>max</i> .

## Errors

The parameters *min* and *max* must be specified such that *min* is less than or equal to *max*. Otherwise, the assertion fails on each tested clock cycle.

## Notes

1. The assertion check compares the current value of *test\_expr* with its previous value. Therefore, checking does not start until the second rising clock edge of *clock* after *reset* deasserts.
2. The assertion check allows the value of *test\_expr* to wrap. The overflow or underflow amount is included in the delta value calculation.

## See also

[ovl\\_decrement](#)  
[ovl\\_increment](#)  
[ovl\\_no\\_overflow](#)


[ovl\\_no\\_underflow](#)  
[ovl\\_range](#)

## Example

```
ovl_delta #(
    'OVL_ERROR,                // severity_level
    16,                        // width
    0,                         // min
    8,                         // max
    'OVL_ASSERT,               // property_type
    "Error: y values not smooth", // msg
    'OVL_COVER_DEFAULT,        // coverage_level
    'OVL_POSEDGE,               // clock_edge
    'OVL_ACTIVE_LOW,           // reset_polarity
    'OVL_GATE_CLOCK)           // gating_type

valid_smooth (
    clock,                      // clock
    reset,                      // reset
    enable,                     // enable
    y,                          // test_expr
    fire_valid_smooth );        // fire
```


Ensures that the *y* output only changes by a maximum of 8 units each cycle (*min* is 0).

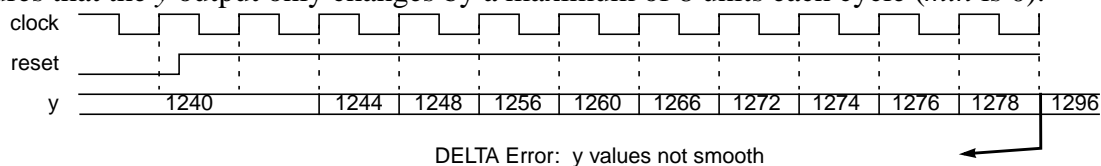



## ovl\_even\_parity

Ensures that the value of an expression has even parity.

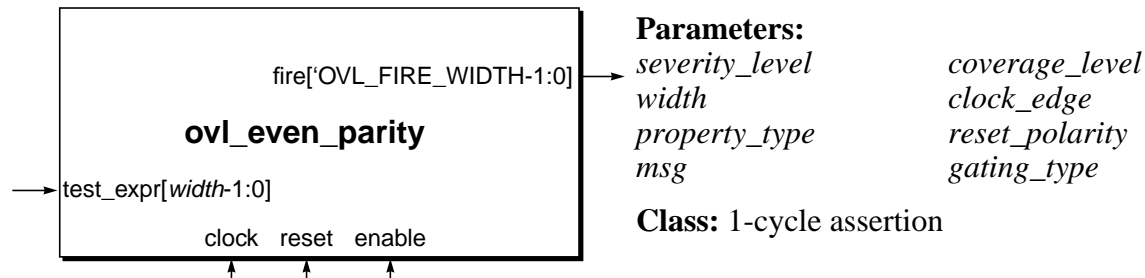

### Syntax

```

ovl_even_parity
    [#{severity_level, width, property_type, msg, coverage_level,
      clock_edge, reset_polarity, gating_type}]
    instance_name (clock, reset, enable, test_expr, fire);

```

### Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>width</i>	Width of the <i>test_expr</i> argument. Default: 1.
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>test_expr</i> [ <i>width</i> -1:0]	Expression that should evaluate to a value with even parity on the rising clock edge.
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The `ovl_even_parity` assertion checker checks the expression *test\_expr* at each active edge of *clock* to verify the expression evaluates to a value that has even parity. A value has even parity if it is 0 or if the number of bits set to 1 is even.

The checker is useful for verifying control circuits, for example, it can be used to verify a finite-state machine with error detection. In a datapath circuit the checker can perform parity error checking of address and data buses.

## Assertion Checks

EVEN_PARITY	Expression evaluated to a value whose parity is not even.
-------------	---

## Implicit X/Z Checks

<i>test_expr</i> contains X or Z	Expression value contained X or Z bits.
-------------------------------------	---

## Cover Points

<i>cover_test_expr_change</i>	SANITY — Expression has changed value.
-------------------------------	--

## See also


[ovl\\_odd\\_parity](#)

## Example

```
ovl_even_parity #(
    'OVL_ERROR,                // severity_level
    8,                        // width
    'OVL_ASSERT,              // property_type
    "Error: data has odd parity", // msg
    'OVL_COVER_DEFAULT,      // coverage_level
    'OVL_POSEDGE,            // clock_edge
    'OVL_ACTIVE_LOW,         // reset_polarity
    'OVL_GATE_CLOCK)        // gating_type


valid_data_even_parity (
    clock,                    // clock
    reset,                   // reset
    enable,                  // enable
    data,                    // test_expr
    fire_valid_data_even_parity ); // fire
```

Ensures that *data* has even parity at each rising edge of *clock*.

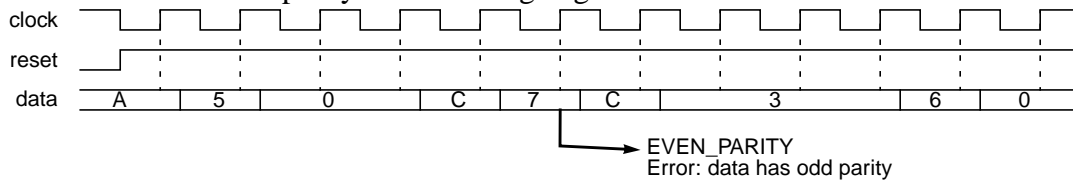

## ovl\_fifo

Ensures the data integrity of a FIFO and ensures that the FIFO does not overflow or underflow.

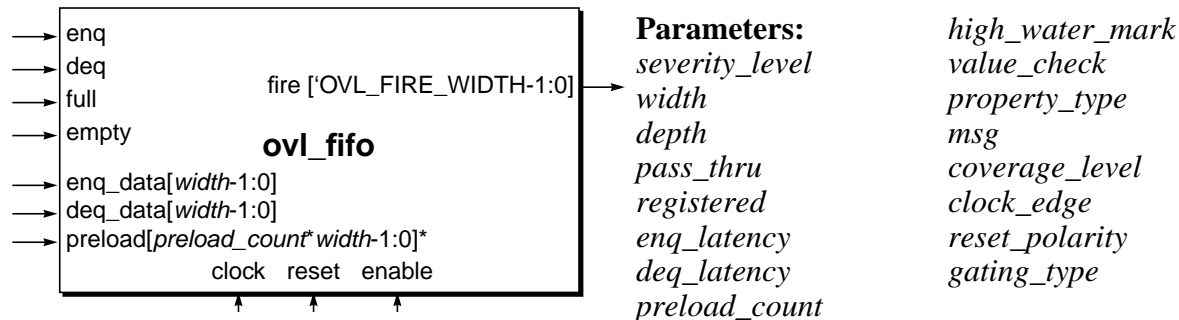

\*if *preload\_count* = 0:  
preload is *width* bits wide

**Class:** event-bounded assertion

## Syntax

```
ovl_fifo
[ #(severity_level, width, depth, pass_thru, registered, enq_latency,
  deq_latency, preload_count, high_water_mark, value_check,
  property_type, msg, coverage_level, clock_edge, reset_polarity,
  gating_type)]
instance_name (clock, reset, enable, enq, deq, full, empty, enq_data, \
  deq_data, preload, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>width</i>	Width of a data item. Default: 1.
<i>depth</i>	FIFO depth. The <i>depth</i> must be > 0. Default: 2.
<i>pass_thru</i>	How the FIFO handles a dequeue and enqueue in the same cycle if the FIFO is empty. <i>pass_thru</i> = 0 (Default) No pass-through mode. Simultaneous dequeue/enqueue of an empty FIFO is an dequeue violation. <i>pass_thru</i> = 1 Pass-through mode. Enqueue happens before the dequeue. Simultaneous enqueue/dequeue of an empty FIFO is not a dequeue violation.

<i>registered</i>	<p>How the FIFO handles an enqueue and dequeue in the same cycle if the FIFO is full.</p> <p><i>registered</i> = 0 (Default) No registered mode. Simultaneous enqueue/dequeue of a full FIFO is an enqueue violation.</p> <p><i>registered</i> = 1 Registered mode. Dequeue happens before the enqueue. Simultaneous enqueue/dequeue of a full FIFO is not an enqueue violation.</p>
<i>enq_latency</i>	<p>Latency for enqueue data.</p> <p><i>enq_latency</i> = 0 (Default) Checks and coverage assume <i>enq_data</i> is valid and the enqueue operation is performed in the same cycle <i>enq</i> asserts.</p> <p><i>enq_latency</i> &gt; 0 Checks and coverage assume <i>enq_data</i> is valid and the enqueue operation is performed <i>enq_latency</i> cycles after <i>enq</i> asserts.</p>
<i>deq_latency</i>	<p>Latency for dequeued data.</p> <p><i>deq_latency</i> = 0 (Default) Checks and coverage assume <i>deq_data</i> is valid and the dequeue operation is performed in the same cycle <i>deq</i> asserts.</p> <p><i>deq_latency</i> &gt; 0 Checks and coverage assume <i>deq_data</i> is valid and the dequeue operation is performed <i>deq_latency</i> cycles after <i>deq</i> asserts.</p>
<i>preload_count</i>	<p>Number of items to preload the FIFO on reset. The preload port is a concatenated list of items to be preloaded into the FIFO. Default: 0 (FIFO empty on reset).</p>
<i>high_water_mark</i>	<p>FIFO high-water mark. Must be &lt; <i>depth</i>. A value of 0 disables the high-water mark cover point. Default: 0.</p>
<i>value_check</i>	<p>Whether or not to perform value checks.</p> <p><i>value_check</i> = 0 (Default) Turns off the value check.</p> <p><i>value_check</i> = 1 Turns on the value check.</p>
<i>property_type</i>	<p>Property type. Default: 'OVL_PROPERTY_DEFAULT' ('OVL_ASSERT').</p>
<i>msg</i>	<p>Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").</p>
<i>coverage_level</i>	<p>Coverage level. Default: 'OVL_COVER_DEFAULT' ('OVL_BASIC').</p>
<i>clock_edge</i>	<p>Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT' ('OVL_POSEDGE').</p>

<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>enq</i>	FIFO enqueue input. When <i>enq</i> asserts, the FIFO performs an enqueue operation. A data item is enqueued onto the FIFO and the FIFO counter increments by 1. If <i>enq_latency</i> is 0, the enqueue is performed in the same cycle <i>enq</i> asserts. Otherwise, the enqueue and counter increment occur <i>enq_latency</i> cycles later.
<i>deq</i>	FIFO dequeue input. When <i>deq</i> asserts, the FIFO performs a dequeue operation. A data item is dequeued from the FIFO and the FIFO counter decrements by 1. If <i>deq_latency</i> is 0, the dequeue is performed in the same cycle <i>deq</i> asserts. Otherwise, the dequeue and counter decrement occur <i>deq_latency</i> cycles later.
<i>full</i>	Output status flag from the FIFO. <i>full</i> = 0 FIFO not full. <i>full</i> = 1 FIFO full.
<i>empty</i>	Output status flag from the FIFO. <i>empty</i> = 0 FIFO not empty. <i>empty</i> = 1 FIFO empty.
<i>enq_data</i> [width-1:0]	Enqueue data input to the FIFO. Contains the data item to enqueue in that cycle (if <i>enq_latency</i> = 0) or to enqueue in the cycle <i>enq_latency</i> cycles later (if <i>enq_latency</i> > 0).
<i>deq_data</i> [width-1:0]	Dequeue data output from the FIFO. Contains the dequeued data item in that cycle (if <i>deq_latency</i> = 0) or in the cycle <i>enq_latency</i> cycles later (if <i>enq_latency</i> > 0).

<i>preload</i> [ <i>preload_count</i> * <i>width</i> -1:0]	Concatenated preload data to enqueue on reset. <i>preload_count</i> = 0 No preload of the FIFO is assumed. The width of preload should be <i>width</i> , however no values from <i>preload</i> are used. The FIFO is assumed to be empty on reset. <i>preload_count</i> > 0 Checker assumes the value of <i>preload</i> is a concatenated list of items that were all enqueued on the FIFO on reset (or simulation start). The width of preload should be <i>preload_count</i> * <i>width</i> (preload items are the same width). Preload values are enqueued from the low order item to the high order item.
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_fifo assertion checker ensures a FIFO functions legally. A FIFO is a memory structure that stores and retrieves data items based on a first-in first-out queueing protocol. The FIFO has configured properties specified as parameters to the ovl\_fifo checker: width of the data items (*width*), capacity of the FIFO (*depth*), and the high-water mark that identifies the point at which the FIFO is almost full (*high\_water\_mark*). Control and data signals to and from the FIFO are connected to the ovl\_fifo checker.

The checker checks *enq* and *deq* at the active edge of *clock* each cycle the checker is active. If *enq* is TRUE, the FIFO is enqueueing a data item onto the FIFO. If *deq* is TRUE, the FIFO is in the process of dequeuing a data item. Both enqueue and dequeue operations can each take more than one cycle. If the *enq\_latency* parameter is defined > 0, then *enq\_data* is ready *enq\_latency* clock cycles after the *enq* signal asserts. Similarly, if the *deq\_latency* parameter is defined > 0, then *deq\_data* is ready *deq\_latency* clock cycles after the *deq* signal asserts. All assertion checks and coverage are based on enqueue/dequeue data after the latency periods.

The checker ensures the FIFO does not enqueue an item when it is supposed to be full (enqueue check) and the FIFO does not dequeue an item when it is supposed to be empty (dequeue check). The checker also ensures that the FIFO's *full* and *empty* status flags operate correctly (full and empty checks). The checker also can verify the data integrity of dequeued FIFO data (value check).

The checker also can be configured to handle other FIFO characteristics such as preloading items on reset and allowing pass-through operations and registered enqueue/dequeues.

## Assertion Checks

ENQUEUE	<p>Enqueue occurred that would overflow the FIFO.</p> <p><i>registered</i> = 0</p> <p><i>Enq</i> was TRUE, but <i>enq_latency</i> cycles later, FIFO contained <i>depth</i> items.</p> <p><i>registered</i> = 1</p> <p><i>Enq</i> was TRUE, but <i>enq_latency</i> cycles later, FIFO contained <i>depth</i> items and no item was to be dequeued that cycle.</p>
DEQUEUE	<p>Dequeue occurred that would underflow the FIFO.</p> <p><i>pass_thru</i> = 0</p> <p><i>Deq</i> was TRUE, but <i>deq_latency</i> cycles later, FIFO contained no items.</p> <p><i>pass_thru</i> = 1</p> <p><i>Deq</i> was TRUE, but <i>enq_latency</i> cycles later, FIFO contained no items and no item was to be enqueued that cycle.</p>
FULL	<p>FIFO 'full' signal asserted or deasserted in the wrong cycle.</p> <p>FIFO contained fewer than <i>depth</i> items but <i>full</i> was TRUE or FIFO contained <i>depth</i> items but <i>full</i> was FALSE.</p>
EMPTY	<p>FIFO 'empty' signal asserted or deasserted in the wrong cycle.</p> <p>FIFO contained one or more items but <i>empty</i> was TRUE or FIFO contained no items but <i>empty</i> was FALSE.</p>
VALUE	<p>Dequeued FIFO value did not equal the corresponding enqueued value.</p> <p><i>deq_latency</i> = 0</p> <p><i>Deq</i> was TRUE, but <i>deq_data</i> did not equal the corresponding enqueued item.</p> <p><i>deq_latency</i> &gt; 0</p> <p><i>Deq</i> was TRUE, but <i>deq_latency</i> cycles later <i>deq_data</i> did not equal the corresponding enqueued item.</p> <p>This check automatically turns off if an enqueue or dequeue check violation occurs since it is no longer possible to correspond enqueued with dequeued values. The check turns back on when the checker resets.</p>

## Implicit X/Z Checks

<i>enq</i> contains X or Z	Enqueue signal was X or Z.
<i>deq</i> contains X or Z	Dequeue signal was X or Z.
<i>full</i> contains X or Z	FIFO full signal was X or Z.
<i>empty</i> contains X or Z	FIFO empty signal was X or Z.
<i>enq_data</i> contains X or Z	Enqueue data expression contained X or Z bits.




deq\_data contains X or Z      Dequeue data expression contained X or Z bits.

## Cover Points

cover_enqueues	SANITY — Number of data items enqueued on the FIFO.
cover_dequeues	SANITY — Number of data items dequeued from the FIFO.
cover_simultaneous_enq_deq	BASIC — Number of cycles <i>enq</i> and <i>deq</i> asserted together.
cover_enq_followed_by_deq	BASIC — Number of times <i>enq</i> asserted, then deasserted in the next cycle and stayed deasserted until eventually <i>deq</i> asserted.
cover_high_water_mark	CORNER — Number of times the FIFO count transitioned from $< high\_water\_mark$ to $\geq high\_water\_mark$ . Not reported if <i>high_water_mark</i> is 0.
cover_simultaneous_deq_enq_when_empty	CORNER — Number of cycles the FIFO was enqueued and dequeued simultaneously when it was empty.
cover_simultaneous_deq_enq_when_full	CORNER — Number of cycles the FIFO was enqueued and dequeued simultaneously when it was full.
cover_fifo_empty	CORNER — Number of cycles FIFO was empty after processing enqueues and dequeues for the cycle.
cover_fifo_full	CORNER — Number of cycles FIFO was full after processing enqueues and dequeues for the cycle.
cover_observed_counts	STATISTIC — Reports the FIFO counts that occurred at least once.

## ovl\_fifo\_index

Ensures that a FIFO-type structure never overflows or underflows. This checker can be configured to support multiple pushes (FIFO writes) and pops (FIFO reads) during the same clock cycle.

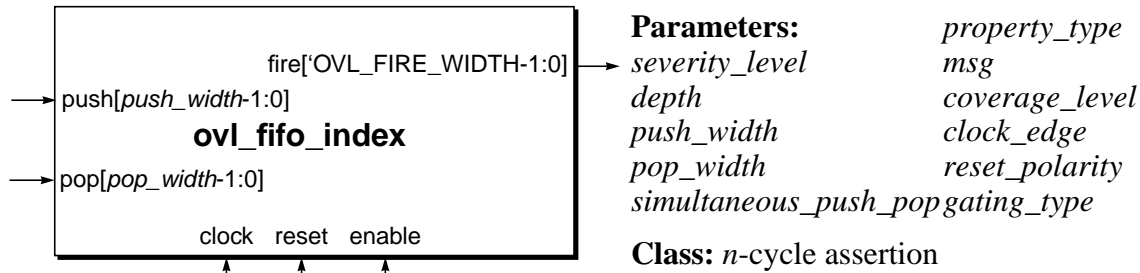

## Syntax

```
ovl_fifo_index
  [ #(severity_level, depth, push_width, pop_width,
      simultaneous_push_pop, property_type, msg, coverage_level,
      clock_edge, reset_polarity, gating_type)]
  instance_name (clock, reset, enable, push, pop, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT' ('OVL_ERROR').
<i>depth</i>	Maximum number of elements in the FIFO or queue structure. This parameter must be > 0. Default: 1.
<i>push_width</i>	Width of the <i>push</i> argument. Default: 1.
<i>pop_width</i>	Width of the <i>pop</i> argument. Default: 1.
<i>simultaneous_push_pop</i>	Whether or not to allow simultaneous push/pop operations in the same clock cycle. When set to 0, if push and pop operations occur in the same cycle, the assertion fails. Default: 1 (simultaneous push/pop operations are allowed).
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT' ('OVL_ASSERT').
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT' ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT' ('OVL_BASIC').
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT' ('OVL_POSEDGE').

<code>reset_polarity</code>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<code>gating_type</code>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<code>clock</code>	Clock event for the assertion.
<code>reset</code>	Synchronous reset signal indicating completed initialization.
<code>enable</code>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<code>push[push_width-1:0]</code>	Expression that indicates the number of push operations that will occur during the current cycle.
<code>pop[pop_width-1:0]</code>	Expression that indicates the number of pop operations that will occur during the current cycle.
<code>fire</code> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_fifo\_index assertion checker tracks the numbers of pushes (writes) and pops (reads) that occur for a FIFO or queue memory structure. This checker does permit simultaneous pushes/pops on the queue within the same clock cycle. It ensures the FIFO never overflows (i.e., too many pushes occur without enough pops) and never underflows (i.e., too many pops occur without enough pushes). This checker is more complex than the ovl\_no\_overflow and ovl\_no\_underflow checkers, which check only the boundary conditions (overflow and underflow respectively).

## Assertion Checks

OVERFLOW	Push operation overflowed the FIFO.
UNDERFLOW	Pop operation underflowed the FIFO.
ILLEGAL PUSH AND POP	Push and pop operations performed in the same clock cycle, but the simultaneous_push_pop parameter is set to 0.

## Implicit X/Z Checks

<code>push</code> contains X or Z	Push expression value contained X or Z bits.
<code>pop</code> contains X or Z	Pop expression value contained X or Z bits.

## Cover Points

<code>cover_fifo_push</code>	BASIC — Push operation occurred.
<code>cover_fifo_pop</code>	BASIC — Pop operation occurred.
<code>cover_fifo_full</code>	CORNER — FIFO was full.
<code>cover_fifo_empty</code>	CORNER — FIFO was empty.
<code>cover_fifo_simultaneous_push_pop</code>	CORNER — Push and pop operations occurred in the same clock cycle.

## Errors

Depth parameter value must be > 0	Depth parameter is set to 0.
-----------------------------------	------------------------------

## Notes

1. The checker checks the values of the *push* and *pop* expressions. By default, (i.e., `simultaneous_push_pop` is 1), “simultaneous” push/pop operations are allowed. In this case, the checker assumes the design properly handles simultaneous push/pop operations, so it only ensures that the FIFO buffer index at the *end of the cycle* has not overflowed or underflowed. The assertion cannot ensure the FIFO buffer index does not overflow between a push and pop performed in the same cycle. Similarly, the assertion cannot ensure the FIFO buffer index does not underflow between a pop and push performed in the same cycle.

## See also

[ovl\\_no\\_overflow](#)[ovl\\_no\\_underflow](#)

## Examples


```

ovl_fifo_index #(
    'OVL_ERROR,                // severity_level
    8,                          // depth
    1,                          // push_width
    1,                          // pop_width
    1,                          // simultaneous_push_pop
    'OVL_ASSERT,               // property_type
    "Error",                    // msg
    'OVL_COVER_DEFAULT,        // coverage_level
    'OVL_POSEDGE,               // clock_edge
    'OVL_ACTIVE_LOW,           // reset_polarity
    'OVL_GATE_CLOCK)           // gating_type
                                // simultaneous_push_pop

no_over_underflow (
    clock,                      // clock
    reset,                      // reset
    enable,                     // enable
    push,                       // push
    pop,                         // pop
    fire_fifo_no_over_underflow ); // fire

```


Ensures that an 8-element FIFO never overflows or underflows. Only single pushes and pops can occur in a clock cycle (*push\_width* and *pop\_width* values are 1). A push and pop operation in the same clock cycle is allowed (value of *simultaneous\_push\_pop* is 1).

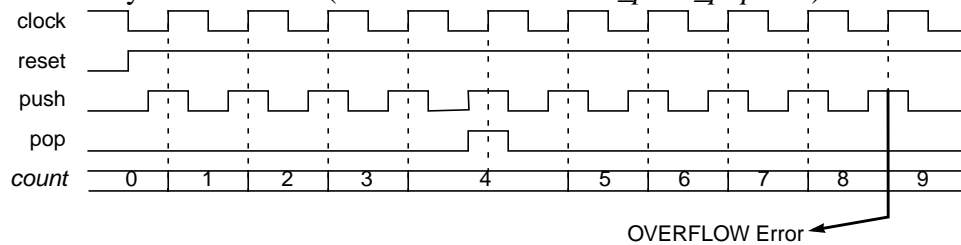

```
ovl_fifo_index #(
    `OVL_ERROR,                // severity_level
    8,                          // depth
    1,                          // push_width
    1,                          // pop_width
    0,                          // simultaneous_push_pop
    `OVL_ASSERT,               // property_type
    "violation",               // msg
    `OVL_COVER_DEFAULT,        // coverage_level
    `OVL_POSEDGE,              // clock_edge
    `OVL_ACTIVE_LOW,           // reset_polarity
    `OVL_GATE_CLOCK)           // gating_type


no_over_underflow (
    clock,                      // clock
    reset,                      // reset
    enable,                     // enable
    push,                       // push
    pop,                         // pop
    fire_fifo_no_over_underflow ); // fire
```

Ensures that an 8-element FIFO never overflows or underflows and that in no cycle do both push and pop operations occur.

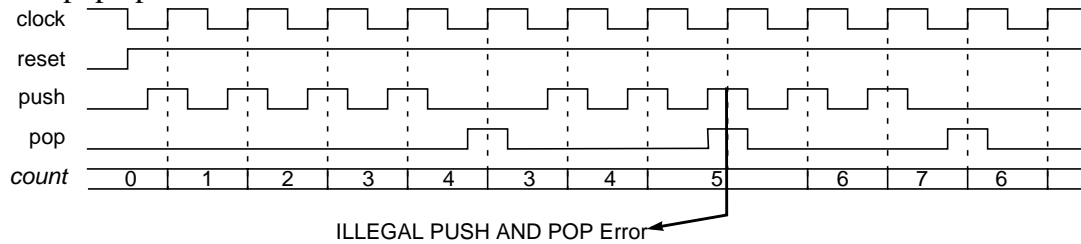

## ovl\_frame

Ensures that when a specified start event is TRUE, then an expression must not evaluate TRUE before a minimum number of clock cycles and must transition to TRUE no later than a maximum number of clock cycles.

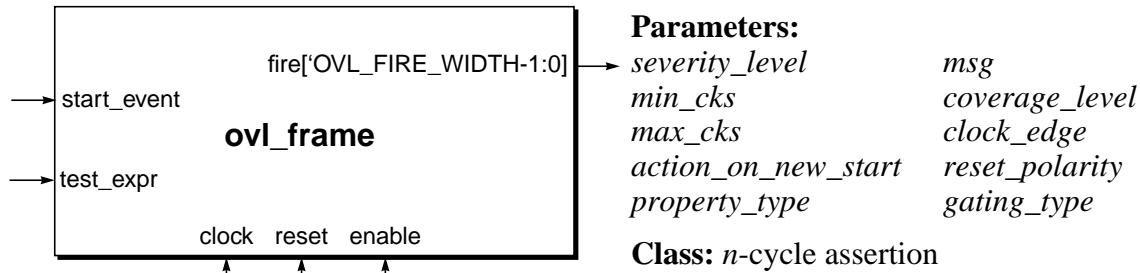

## Syntax

```
ovl_frame
[ #(severity_level, min_cks, max_cks, action_on_new_start,
    property_type, msg, coverage_level, clock_edge, reset_polarity,
    gating_type) ]
instance_name (clock, reset, enable, start_event, test_expr, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>min_cks</i>	Number of cycles after the start event that <i>test_expr</i> must not evaluate to TRUE. The special case where <i>min_cks</i> is 0 turns off minimum checking (i.e., <i>test_expr</i> can be TRUE in the same clock cycle as the start event). Default: 0.
<i>max_cks</i>	Number of cycles after the start event that during which <i>test_expr</i> must transition to TRUE. The special case where <i>max_cks</i> is 0 turns off maximum checking (i.e., <i>test_expr</i> does not need to transition to TRUE). Default: 0.
<i>action_on_new_start</i>	Method for handling a new start event that occurs while a check is pending. Values are: 'OVL_IGNORE_NEW_START, 'OVL_RESET_ON_NEW_START and 'OVL_ERROR_ON_NEW_START. Default: 'OVL_IGNORE_NEW_START.
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").

<i>coverage_level</i>	Coverage level. Default: ‘OVL_COVER_DEFAULT (‘OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: ‘OVL_CLOCK_EDGE_DEFAULT (‘OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: ‘OVL_RESET_POLARITY_DEFAULT (‘OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: ‘OVL_GATING_TYPE_DEFAULT (‘OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = ‘OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = ‘OVL_GATE_RESET). Ignored if <i>gating_type</i> is ‘OVL_NONE.
<i>start_event</i>	Expression that (along with <i>action_on_new_start</i> ) identifies when to initiate checking of <i>test_expr</i> .
<i>test_expr</i>	Expression that should not evaluate to TRUE for <i>min_cks</i> - 1 cycles after <i>start_event</i> initiates a check (unless <i>min_cks</i> is 0) and that should evaluate to TRUE before <i>max_cks</i> cycles transpire (unless <i>max_cks</i> is 0).
<i>fire</i> [ ‘OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_frame assertion checker checks for a start event at each active edge of *clock*. A start event occurs if *start\_event* has transitioned to TRUE, either at the clock edge or in the previous cycle. A start event also occurs if *start\_event* is TRUE at the rising clock edge after a checker reset.

When a start event occurs, the checker performs the following steps:

1. Unless it is disabled by setting *min\_cks* to 0, a minimum check is initiated. The check evaluates *test\_expr* at each subsequent active edge of *clock* for the next *min\_cks* cycles. However, if a sampled value of *test\_expr* is TRUE, the minimum check fails and the checker returns to the state of waiting for a start event.
2. Unless it is disabled by setting *max\_cks* to 0 (or a minimum violation has occurred), a maximum check is initiated. The check evaluates *test\_expr* at each subsequent active edge of *clock* for the next (*max\_cks* - *min\_cks*) cycles. However, if a sampled value of



*test\_expr* is TRUE, the checker returns to the state of waiting for a start event. If its value does not transition to TRUE by the time *max\_cks* cycles transpire (from the start of checking), the maximum check fails at cycle *max\_cks*.

3. The checker returns to the state of waiting for a start event.

The method used to determine how to handle *start\_event* when the checker is in the state of checking *test\_expr* is controlled by the *action\_on\_new\_start* parameter. The checker has the following actions:

- ‘OVL\_IGNORE\_NEW\_START

The checker does not sample *start\_event* until it returns to the state of waiting for a start event.

- ‘OVL\_RESET\_ON\_NEW\_START

Each time the checker samples *test\_expr*, it also samples *start\_event*. If *start\_event* is TRUE, the checker first checks whether a pending minimum check is just failing. If so, the assertion failed. Then—unless the assertion failed and it was fatal—the checker terminates the current checks and initiates a new pair of checks.

- ‘OVL\_ERROR\_ON\_NEW\_START

Each time the checker samples *test\_expr*, it also samples *start\_event*. If *start\_event* is TRUE, the assertion fails with an illegal start event error. If the error is not fatal, the checker returns to the state of waiting for a start event at the next rising clock edge.

## Assertion Checks

FRAME	Value of <i>test_expr</i> was TRUE before <i>min_cks</i> cycles after <i>start_event</i> was sampled TRUE or its value was not TRUE before <i>max_cks</i> cycles transpired after the active edge of <i>start_event</i> .
illegal start event	The <i>action_on_new_start</i> parameter is set to ‘OVL_ERROR_ON_NEW_START and <i>start_event</i> expression evaluated to TRUE while the checker was monitoring <i>test_expr</i> .
min_cks > max_cks	The <i>min_cks</i> parameter is greater than the <i>max_cks</i> parameter (and <i>max_cks</i> > 0). Unless the violation is fatal, either the minimum or maximum check will fail.

## Implicit X/Z Checks

<code>test_expr</code> contains X or Z	Expression value was X or Z.
<code>start_event</code> contains X or Z	Start event value was X or Z.

## Cover Points

<code>start_event</code>	BASIC — The value of <i>start_event</i> was TRUE on an active edge of <i>clock</i> .
--------------------------	--

## Notes

1. The special case where *min\_cks* and *max\_cks* are both 0 is the default. Here, *test\_expr* must be TRUE every cycle there is a start event.

## See also

[ovl\\_change](#)  
[ovl\\_next](#)  
[ovl\\_time](#)


[ovl\\_unchange](#)  
[ovl\\_width](#)

## Examples

```
ovl_frame #(
    'OVL_ERROR,                // severity_level
    2,                          // min_cks
    4,                          // max_cks
    'OVL_IGNORE_NEW_START,     // action_on_new_start
    'OVL_ASSERT,               // property_type
    "Error: invalid transaction", // msg
    'OVL_COVER_DEFAULT,        // coverage_level
    'OVL_POSEDGE,              // clock_edge
    'OVL_ACTIVE_LOW,           // reset_polarity
    'OVL_GATE_CLOCK)           // gating_type

    valid_transaction (
        clock,                  // clock
        reset,                  // reset
        enable,                 // enable
        req,                    // start_event
        ack,                    // test_expr
        fire_valid_transaction ); // fire
```


Ensures that after a rising edge of *req*, *ack* goes high between 2 and 4 cycles later. New start events during transactions are not considered to be new transactions and are ignored.

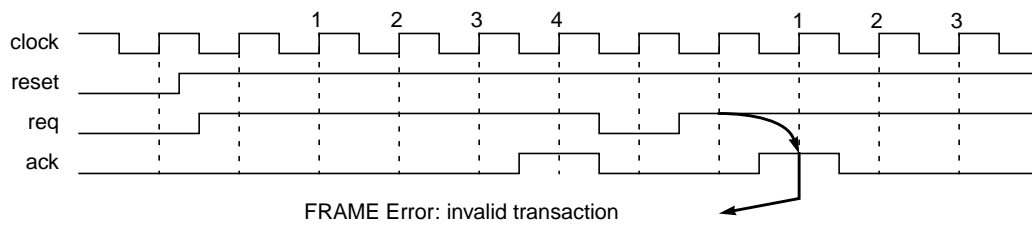

```
ovl_frame #(
    'OVL_ERROR,                // severity_level
    2,                          // min_cks
    4,                          // max_cks
    'OVL_RESET_ON_NEW_START,   // action_on_new_start
    'OVL_ASSERT,               // property_type
    "Error: invalid transaction", // msg
    'OVL_COVER_DEFAULT,        // coverage_level
    'OVL_POSEDGE,               // clock_edge
    'OVL_ACTIVE_LOW,            // reset_polarity
    'OVL_GATE_CLOCK )          // gating_type

    valid_transaction (
        clock,                  // clock
        reset,                  // reset
        enable,                 // enable
        req,                    // start_event
        ack,                    // test_expr
        fire_valid_transaction ); // fire
```


Ensures that after a rising edge of *req*, *ack* goes high between 2 and 4 cycles later. A new start event during a transaction restarts the transaction.

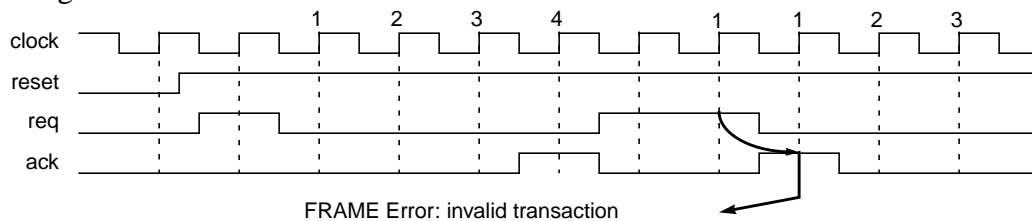

```
ovl_frame #(
    'OVL_ERROR,                // severity_level
    2,                          // min_cks
    4,                          // max_cks
    'OVL_ERROR_ON_NEW_START,    // action_on_new_start
    'OVL_ASSERT,               // property_type
    "Error: invalid transaction", // msg
    'OVL_COVER_DEFAULT,        // coverage_level
    'OVL_POSEDGE,              // clock_edge
    'OVL_ACTIVE_LOW,           // reset_polarity
    'OVL_GATE_CLOCK)           // gating_type


    valid_transaction (
        clock,                  // clock
        reset,                  // reset
        enable,                 // enable
        req,                    // start_event
        ack,                    // test_expr
        fire_valid_transaction ); // fire
```

Ensures that after a rising edge of *req*, *ack* goes high between 2 and 4 cycles later. Also ensures that a new transaction does not start before the previous transaction is acknowledged. If a start event occurs during a transaction, the checker does not initiate a new check.

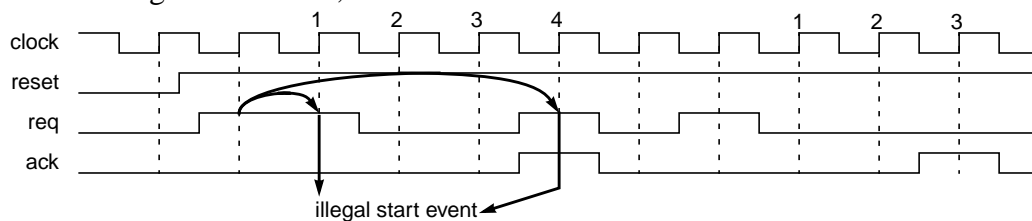

## ovl\_handshake

Ensures that specified request and acknowledge signals follow a specified handshake protocol.

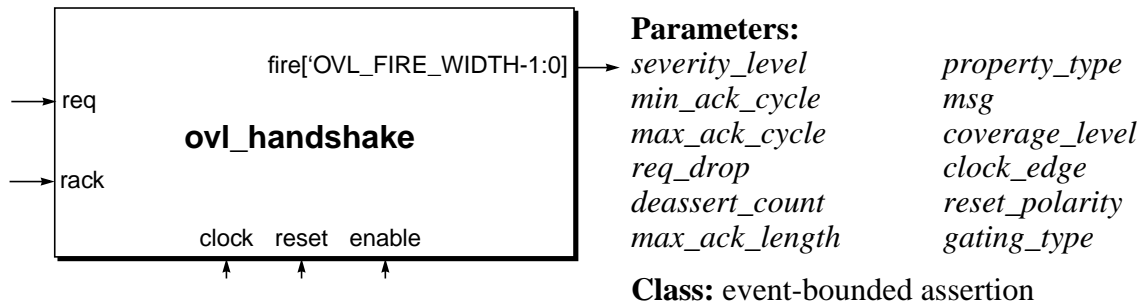

## Syntax

```
ovl_handshake
  [#{severity_level, min_ack_cycle, max_ack_cycle, req_drop,
    deassert_count, max_ack_length, property_type, msg,
    coverage_level, clock_edge, reset_polarity, gating_type}]
  instance_name (clock, reset, enable, req, ack, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>min_ack_cycle</i>	Minimum number of clock cycles before acknowledge. A value of 0 turns off the ack min cycle check. Default: 0.
<i>max_ack_cycle</i>	Maximum number of clock cycles before acknowledge. A value of 0 turns off the ack max cycle check. Default: 0.
<i>req_drop</i>	If greater than 0, value of <i>req</i> must remain TRUE until acknowledge. A value of 0 turns off the req drop check. Default: 0.
<i>deassert_count</i>	Maximum number of clock cycles after acknowledge that <i>req</i> can remain TRUE (i.e., <i>req</i> must not be stuck active). A value of 0 turns off the req deassert check. Default: 0.
<i>max_ack_length</i>	Maximum number of clock cycles that <i>ack</i> can be TRUE. A value of 0 turns off the max ack length check. Default: 0.
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).

<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: ‘OVL_CLOCK_EDGE_DEFAULT (‘OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: ‘OVL_RESET_POLARITY_DEFAULT (‘OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: ‘OVL_GATING_TYPE_DEFAULT (‘OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = ‘OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = ‘OVL_GATE_RESET). Ignored if <i>gating_type</i> is ‘OVL_NONE.
<i>req</i>	Expression that starts a transaction.
<i>ack</i>	Expression that indicates the transaction is complete.
<i>fire</i> [ ‘OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_handshake assertion checker checks the single-bit expressions *req* and *ack* at each active edge of *clock* to verify their values conform to the request-acknowledge handshake protocol specified by the checker parameters. A request event (where *req* transitions to TRUE) initiates a transaction on the active edge of *clock* and an acknowledge event (where *ack* transitions to TRUE) signals the transaction is complete on the active edge of *clock*. The transaction must not include multiple request events and every acknowledge must have a pending request. Other checks—to ensure the acknowledge is received in a specified window, the request is held active until the acknowledge, the requests and acknowledges are not stuck active and the pulse length is not too long—are enabled and controlled by the checker’s parameters.

When a violation occurs, the checker discards any pending request. Checking is restarted the next cycle that *ack* is sampled FALSE.

## Assertion Checks

MULTIPLE_REQ_VIOLATION	The value of <i>req</i> transitioned to TRUE while waiting for an acknowledge or while acknowledge was asserted. Extra requests do not initiate new transactions.
ACK_WITHOUT_REQ_VIOLATION	The value of <i>ack</i> transitioned to TRUE without a pending request.
ACK_MIN_CYCLE_VIOLATION	The value of <i>ack</i> transitioned to TRUE before <i>min_ack_cycle</i> clock cycles transpired after the request.
ACK_MAX_CYCLE_VIOLATION	The value of <i>ack</i> did not transition to TRUE before <i>max_ack_cycle</i> clock cycles transpired after the request.
REQ_DROP_VIOLATION	The value of <i>req</i> transitioned from TRUE before an acknowledge.
REQ_DEASSERT_VIOLATION	The value of <i>req</i> did not transition from TRUE before <i>deassert_count</i> clock cycles transpired after an acknowledge.
ACK_MAX_LENGTH_VIOLATION	The value of <i>ack</i> did not transition from TRUE before <i>max_ack_length</i> clock cycles transpired after an acknowledge.

## Implicit X/Z Checks

<i>req</i> contains X or Z	Req expression value was X or Z.
<i>ack</i> contains X or Z	Ack expression value was X or Z.

## Cover Points

<i>cover_req_asserted</i>	BASIC — A transaction initiated.
<i>cover_ack_asserted</i>	BASIC — A transaction completed.

## See also

[ovl\\_win\\_change](#)  
[ovl\\_win\\_unchange](#)

[ovl\\_window](#)

## Examples


```

ovl_handshake #(
    'OVL_ERROR,                // severity_level
    0,                          // min_ack_cycle
    0,                          // max_ack_cycle
    0,                          // req_drop
    0,                          // deassert_count
    0,                          // max_ack_length
    'OVL_ASSERT,               // property_type
    "hold-holda handshake error", // msg
    'OVL_COVER_DEFAULT,        // coverage_level
    'OVL_POSEDGE,               // clock_edge
    'OVL_ACTIVE_LOW,           // reset_polarity
    'OVL_GATE_CLOCK)           // gating_type


valid_hold_holda (
    clock,                      // clock
    reset,                      // reset
    enable,                     // enable
    hold,                       // req
    holda,                      // ack
    fire_valid_hold_holda );    // fire

```

Ensures that multiple *hold* requests are not made while waiting for a *holda* acknowledge and that every *holda* acknowledge is in response to a unique *hold* request.

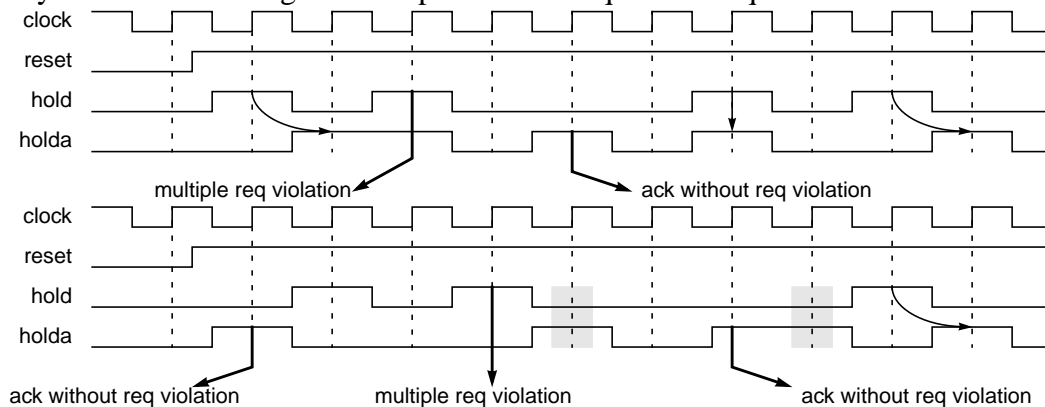

After a violation, checking is turned off until *holda* acknowledge is sampled deasserted.

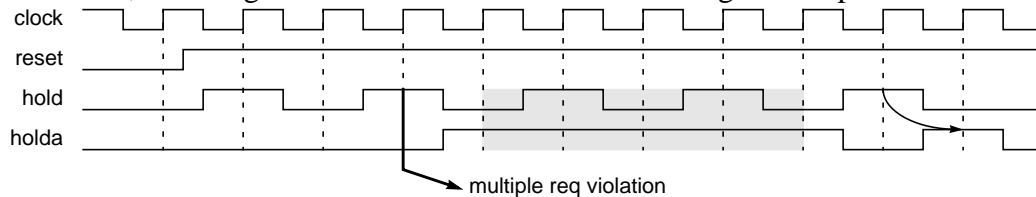




```

ovl_handshake #(
    'OVL_ERROR,                // severity_level
    2,                          // min_ack_cycle
    3,                          // max_ack_cycle
    0,                          // req_drop
    0,                          // deassert_count
    0,                          // max_ack_length
    'OVL_ASSERT,               // property_type
    "hold-holda handshake error", // msg
    'OVL_COVER_DEFAULT,        // coverage_level
    'OVL_POSEDGE,               // clock_edge
    'OVL_ACTIVE_LOW,           // reset_polarity
    'OVL_GATE_CLOCK)           // gating_type

    valid_hold_holda (
        clock,                  // clock
        reset,                  // reset
        enable,                 // enable
        hold,                   // req
        holda,                  // ack
        fire_valid_hold_holda ); // fire

```


Ensures that multiple *hold* requests are not made while waiting for a *holda* acknowledge and that every *holda* acknowledge is in response to a unique *hold* request. Ensures *holda* acknowledge asserts 2 to 3 cycles after each hold request.

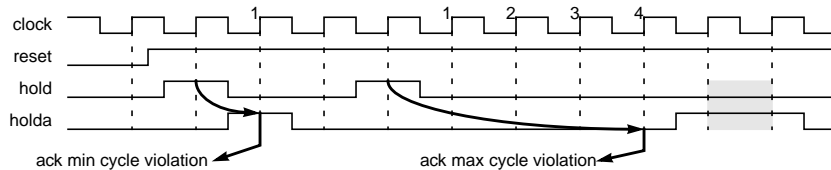

```
ovl_handshake #(
    'OVL_ERROR,                // severity_level
    0,                          // min_ack_cycle
    0,                          // max_ack_cycle
    0,                          // req_drop
    0,                          // deassert_count
    2,                          // max_ack_length
    'OVL_ASSERT,               // property_type
    "hold-holda handshake error", // msg
    'OVL_COVER_DEFAULT,        // coverage_level
    'OVL_POSEDGE,               // clock_edge
    'OVL_ACTIVE_LOW,           // reset_polarity
    'OVL_GATE_CLOCK)           // gating_type

valid_hold_holda (
    clock,                      // clock
    reset,                      // reset
    enable,                     // enable
    hold,                       // req
    holda,                      // ack
    fire_valid_hold_holda );    // fire
```

Ensures that multiple *hold* requests are not made while waiting for a *holda* acknowledge and that every *holda* acknowledge is in response to a unique *hold* request. Ensures *holda* acknowledge asserts for 2 cycles.

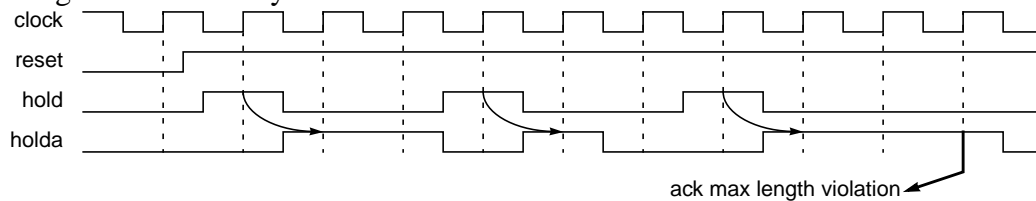


```

ovl_handshake #(
    'OVL_ERROR,                // severity_level
    0,                          // min_ack_cycle
    0,                          // max_ack_cycle
    1,                          // req_drop
    1,                          // deassert_count
    0,                          // max_ack_length
    'OVL_ASSERT,               // property_type
    "hold-holda handshake error", // msg
    'OVL_COVER_DEFAULT,        // coverage_level
    'OVL_POSEDGE,               // clock_edge
    'OVL_ACTIVE_LOW,            // reset_polarity
    'OVL_GATE_CLOCK)           // gating_type

valid_hold_holda (
    clock,                      // clock
    reset,                      // reset
    enable,                     // enable
    hold,                        // req
    holda,                      // ack
    fire_valid_hold_holda );    // fire


```

Ensures that multiple *hold* requests are not made while waiting for a *holda* acknowledge and that every *holda* acknowledge is in response to a unique *hold* request. Ensures *hold* request remains asserted until its *holda* acknowledge and then deasserts in the next cycle.

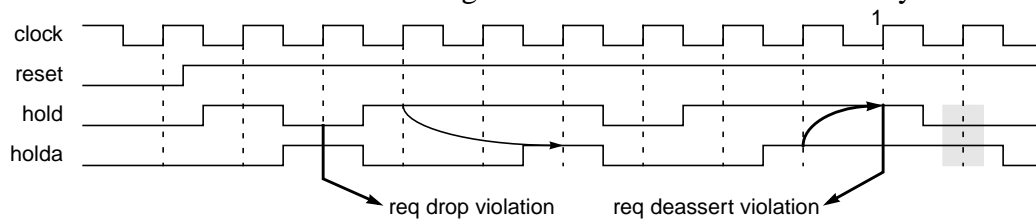

## ovl\_hold\_value

Ensures that once an expression matches the value of a second expression, the first expression does not change value until a specified event window arrives and then changes value some time in that window.

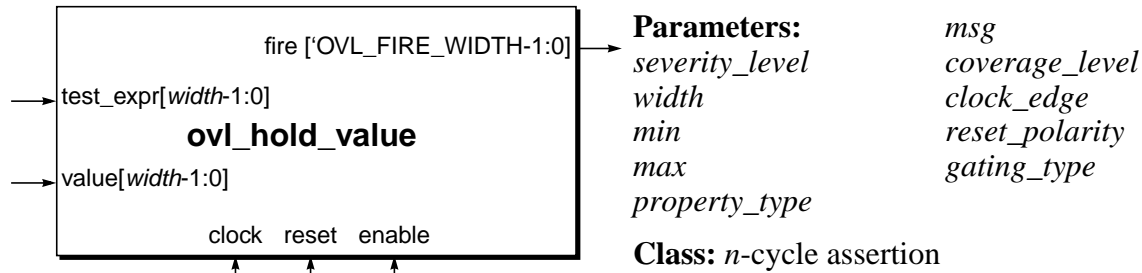

## Syntax

```
ovl_hold_value
  [#(severity_level, width, min, max, property_type, msg,
    coverage_level, clock_edge, reset_polarity, gating_type)]
  instance_name (clock, reset, enable, test_expr, value, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>width</i>	Width of <i>test_expr</i> and <i>value</i> . Default: 2.
<i>min</i>	Number of cycles after the value match that the event window opens. Default: 0 ( <i>test_expr</i> can change value in any cycle).
<i>max</i>	Number of cycles after the value match that the event window closes. But if <i>max</i> = 0, no event window opens and there are the following special cases: <i>min</i> = 0 and <i>max</i> = 0 When <i>test_expr</i> and <i>value</i> match, <i>test_expr</i> must change value in the next cycle. <i>min</i> > 0 and <i>max</i> = 0 When <i>test_expr</i> and <i>value</i> match, <i>test_expr</i> must not change value in the next <i>min</i> -1 cycles. Default: 0.
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).

<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>test_expr</i> [ <i>width</i> -1:0]	Variable or expression to check.
<i>value</i> [ <i>width</i> -1:0]	Value to match with <i>test_expr</i> .
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_hold\_value assertion checker checks *test\_expr* and *value* at the active edge of *clock*. If *test\_expr* has changed value and the values of *test\_expr* and *value* match, the checker verifies that the value of *test\_expr* holds as follows:

- $0 = \min = \max$  (default)  
If the value of *test\_expr* does not change in the next cycle, a hold\_value violation occurs.
- $0 = \min < \max$   
If the value of *test\_expr* has not changed within the next *max* cycles, a hold\_value violation occurs.
- $0 < \min \leq \max$   
If the value of *test\_expr* changes before an event window opens *min* cycles later, a hold\_value violation occurs. Then, if the value of *test\_expr* changes, the event window closes. However if *test\_expr* still has not changed value *max* cycles after the value match, the event window closes and a hold\_value violation occurs.

- $0 = \text{max} < \text{min}$

If the value of *test\_expr* changes within the next *min*-1 cycles a hold\_value violation occurs.

The checker returns to the state of checking *test\_expr* and *value* in the next cycle.

## Assertion Checks

### HOLD\_VALUE

A match occurred and the expression had the same value in the next cycle.

$$0 = \text{min} = \text{max}$$

After matching *value*, *test\_expr* held the same value in the next cycle.

A match occurred and the expression held the same value for the next 'max' cycles.

$$0 = \text{min} < \text{max}$$

After matching *value*, *test\_expr* held the same value for the next *max* cycles.

A match occurred and the expression changed value before the event window or held the same value through the event window.

$$0 < \text{min} \leq \text{max}$$

After matching *value*, *test\_expr* did not hold the same value for the next *min*-1 cycles or *test\_expr* held the same value for the next *max* cycles.

A match occurred and the expression changed value before the event window opened.

$$0 = \text{max} < \text{min}$$

After matching *value*, *test\_expr* did not hold the same value for the next *min*-1 cycles.

## Implicit X/Z Checks

*test\_expr* contains X or Z

Expression contained X or Z bits.

*value* contains X or Z

Value contained X or Z bits.

## Cover Points

cover\_test\_expr\_changes

SANITY — Number of cycles *test\_expr* changed value.

cover\_hold\_value\_for\_min\_cks

CORNER — Number of times *test\_expr* held value for exactly *min* cycles.


cover\_hold\_value\_for\_max\_cks

CORNER — Number of times *test\_expr* held value for exactly *max*+1 cycles.

cover_hold_value_for_max_cks	CORNER — indicates that the test_expr was held exactly equal to value for specified max clocks. Not reported if <i>max</i> = 0 and <i>min</i> > 0.
observed_hold_time	STATISTIC — Reports the hold times (in cycles) that occurred at least once.

## ovl\_implication

Ensures that a specified consequent expression is TRUE if the specified antecedent expression is TRUE.

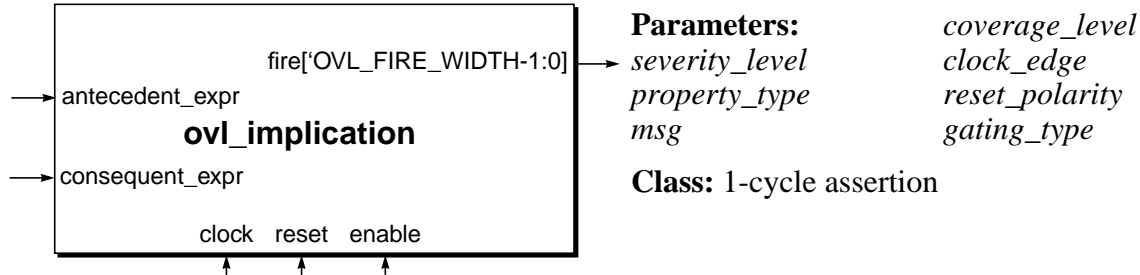

## Syntax

```
ovl_implication
    [ #(severity_level, property_type, msg, coverage_level, clock_edge,
        reset_polarity, gating_type) ]
    instance_name (clock, reset, enable, antecedent_expr, consequent_expr,
        fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.



<code>enable</code>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<code>antecedent_expr</code>	Antecedent expression that is tested at the clock event.
<code>consequent_expr</code>	Consequent expression that should evaluate to TRUE if <i>antecedent_expr</i> evaluates to TRUE when tested.
<code>fire</code> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The `ovl_implication` assertion checker checks the single-bit expression *antecedent\_expr* at each active edge of *clock*. If *antecedent\_expr* is TRUE, then the checker verifies that the value of *consequent\_expr* is also TRUE. If *antecedent\_expr* is not TRUE, then the assertion is valid regardless of the value of *consequent\_expr*.

## Assertion Checks

IMPLICATION	Expression evaluated to FALSE.
-------------	--------------------------------

## Implicit X/Z Checks

<code>antecedent_expr</code> contains X or Z	Antecedent expression value was X or Z.
<code>consequent_expr</code> contains X or Z	Consequent expression value was X or Z.

## Cover Points

<code>cover_antecedent</code>	BASIC — The <i>antecedent_expr</i> evaluated to TRUE.
-------------------------------	---

## Notes

1. This assertion checker is equivalent to:

```
ovl_always
  [ # ( severity_level, property_type, msg, coverage_level, clock_edge,
        reset_polarity, gating_type ) ]
  instance_name ( clock, reset, enable,
    ( antecedent_expr ? consequent_expr : 1'b1 ), fire );
```

## See also

[ovl\\_always](#)  
[ovl\\_always\\_on\\_edge](#)


[ovl\\_never](#)  
[ovl\\_proposition](#)

## Example

```
ovl_implication #(
    'OVL_ERROR,                      // severity_level
    'OVL_ASSERT,                     // property_type
    "Error: q valid but q full",      // msg
    'OVL_COVER_DEFAULT,              // coverage_level
    'OVL_POSEDGE,                     // clock_edge
    'OVL_ACTIVE_LOW,                 // reset_polarity
    'OVL_GATE_CLOCK)                 // gating_type


not_full (
    clock,                          // clock
    reset,                          // reset
    enable,                         // enable
    q_valid,                         // antecedent_expr
    q_not_full,                     // consequent_expr
    fire_not_full );                // fire
```

Ensures that *q\_not\_full* is TRUE at each rising edge of *clock* for which *q\_valid* is TRUE.

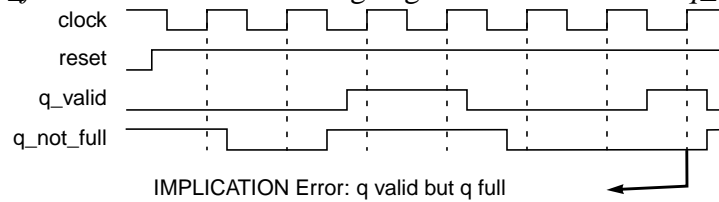

## ovl\_increment

Ensures that the value of an expression changes only by the specified increment value.

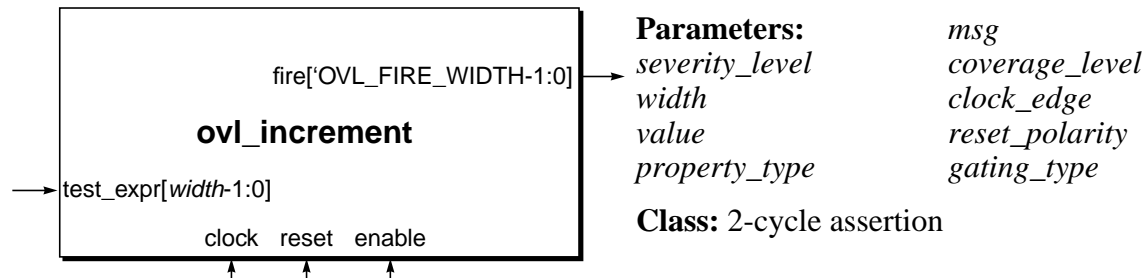

## Syntax

```
ovl_increment
    [#(severity_level, width, value, property_type, msg, coverage_level,
        clock_edge, reset_polarity, gating_type)]
    instance_name (clock, reset, enable, test_expr, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>width</i>	Width of the <i>test_expr</i> argument. Default: 1.
<i>value</i>	Increment value for <i>test_expr</i> . Default: 1.
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>test_expr</i> [ <i>width</i> -1:0]	Expression that should increment by <i>value</i> whenever its value changes from the active edge of <i>clock</i> to the next active edge of <i>clock</i> .
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_increment assertion checker checks the expression *test\_expr* at each active edge of *clock* to determine if its value has changed from its value at the previous active edge of *clock*. If so, the checker verifies that the new value equals the previous value incremented by *value*. The checker allows the value of *test\_expr* to wrap, if the total change equals the increment *value*. For example, if *width* is 5 and *value* is 4, then the following change in *test\_expr* is valid:

```
5'b11110 -> 5'b00010
```

The checker is useful for ensuring proper changes in structures such as counters and finite-state machines. For example, the checker is useful for circular queue structures with address counters that can wrap. Do not use this checker for variables or expressions that can decrement. Instead consider using the ovl\_delta checker.

## Assertion Checks

INCREMENT	Expression evaluated to a value that is not its previous value incremented by <i>value</i> .
-----------	--

## Implicit X/Z Checks

<i>test_expr</i> contains X or Z	Expression value contained X or Z bits.
----------------------------------	---

## Cover Points

cover_test_expr_change	BASIC — Expression changed value.
------------------------	-----------------------------------

## Notes

1. The assertion check compares the current value of *test\_expr* with its previous value. Therefore, checking does not start until the second rising clock edge of *clock* after *reset* deasserts.

## See also

[ovl\\_decrement](#)  
[ovl\\_delta](#)


[ovl\\_no\\_overflow](#)

## Example

```
ovl_increment #(
    'OVL_ERROR,                // severity_level
    4,                          // width
    1,                          // value
    'OVL_ASSERT,               // property_type
    "Error: invalid binary increment", // msg
    'OVL_COVER_DEFAULT,        // coverage_level
    'OVL_POSEDGE,              // clock_edge
    'OVL_ACTIVE_LOW,           // reset_polarity
    'OVL_GATE_CLOCK)           // gating_type


    valid_count (
        clock,                  // clock
        reset,                  // reset
        enable,                 // enable
        count,                  // test_expr
        fire_valid_count );      // fire
```

Ensures that the programmable counter's *count* variable only increments by 1. If *count* wraps, the assertion fails, because the change is not a binary increment.

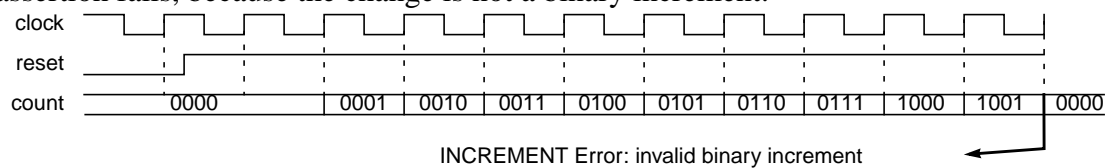

## ovl\_memory\_async

Ensures the integrity of accesses to an asynchronous memory.

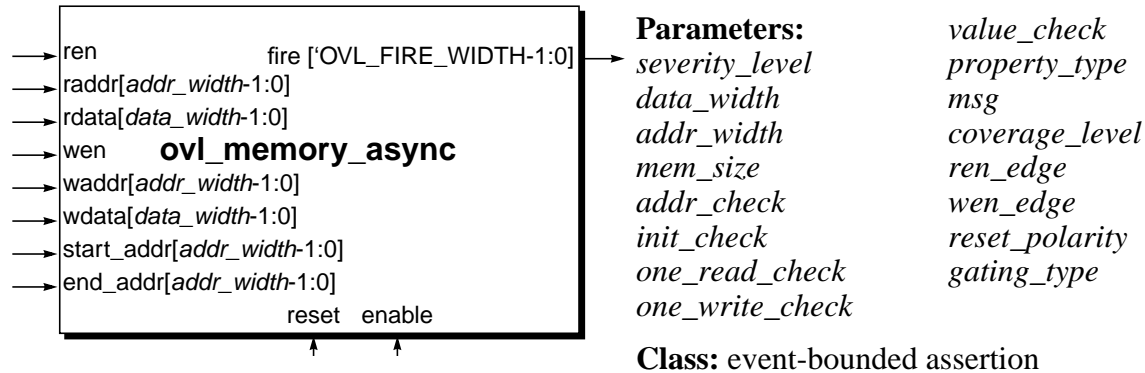

## Syntax

```
ovl_memory_async
    [ #(severity_level, data_width, addr_width, mem_size, addr_check,
        init_check, one_read_check, one_write_check, value_check,
        property_type, msg, coverage_level, ren_edge, wen_edge,
        reset_polarity, gating_type)]
    instance_name (reset, enable, start_addr, end_addr, ren, raddr, rdata,
        wen, waddr, wdata, fire);
```

## Parameters

<code>severity_level</code>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<code>data_width</code>	Number of bits in a data item. Default: 1
<code>addr_width</code>	Number of bits in an address. Default: 1
<code>mem_size</code>	Number of data items in the memory. Default: 2
<code>addr_check</code>	Whether or not to perform address checks. <code>addr_check = 0</code> Turns off the address check. <code>addr_check = 1 (Default)</code> Turns on the address check.
<code>init_check</code>	Whether or not to perform initialization checks. <code>init_check = 0</code> Turns off the initialization check. <code>init_check = 1 (Default)</code> Turns on the initialization check.

<i>one_read_check</i>	Whether or not to perform <i>one_read</i> checks. <i>one_read_check</i> = 0 (Default) Turns off the <i>one_read</i> check <i>one_read_check</i> = 1 Turns on the <i>one_read</i> check.
<i>one_write_check</i>	Whether or not to perform <i>one_write</i> checks. <i>one_write_check</i> = 0 (Default) Turns off the <i>one_write</i> check. <i>one_write_check</i> = 1 Turns on the <i>one_write</i> check.
<i>value_check</i>	Whether or not to perform value checks. <i>value_check</i> = 0 (Default) Turns off the value check. <i>value_check</i> = 1 Turns on the value check.
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>ren_edge</i>	Active edge of the <i>ren</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>wen_edge</i>	Active edge of the <i>wen</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>ren</i> and <i>wen</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>start_addr</i>	First address of the memory.
<i>end_addr</i>	Last address of the memory.

<i>ren</i>	Read enable input, whose active edge initiates a read operation from the memory location specified by <i>raddr</i> .
<i>raddr</i>	Read address input.
<i>rdata</i>	Read data input that holds the data item read from memory.
<i>wen</i>	Write enable input, whose active edge initiates a write operation of the data item in <i>wdata</i> to the memory location specified by <i>waddr</i> .
<i>waddr</i>	Write address input.
<i>wdata</i>	Write data input.
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_memory\_async checker checks the two memory access enable signals *wen* and *ren* combinationally. The active edges of these signals are specified the *wen\_edge* and *ren\_edge* parameters (and by *enable* if gating\_type is 'OVL\_GATE\_CLOCK'). At the active edge of *wen*, the values of *waddr*, *start\_addr* and *end\_addr* are checked. If *waddr* is not in the range [*start\_addr*:*end\_addr*], an address check violation occurs. Otherwise, a write operation to the location specified by *waddr* is assumed. Similarly, at the active edge of *ren*, the values of *raddr*, *start\_addr* and *end\_addr* are checked. If *raddr* is not in the range [*start\_addr*:*end\_addr*], an address check violation occurs. Otherwise, a read operation from the location specified by *raddr* is assumed. Also, if *raddr* is uninitialized (i.e., has not been written to previously or at the current time), then an initialization check violation occurs.

By default, the address and init checks are on, but can be turned off by setting the *addr\_check* and *init\_check* parameters to 0. Note that other checks are valid only if the addresses are valid, so it is recommended that *addr\_check* be left at 1. The checker can be configured to perform the following additional checks:

- *one\_write\_check* = 1

At the active edge of *wen*, if the previous access to the data at the address specified by *waddr* was a write or a simultaneous read/write to that address, a one\_write check violation occurs, unless the current operation is a simultaneous read/write to that location.

- *one\_read\_check* = 1

At the active edge of *ren*, if the previous access to the data at the address specified by *raddr* was a read (but not a simultaneous read/write to that address), a one\_read check violation occurs.

- *value\_check* = 1



At the active edge of *wen*, the current value of *wdata* is the value assumed to be written to the memory location specified by *waddr*. At the active edge of *ren*, if the value of *rdata* does not match the expected value last written to the address specified by *raddr*, a value check violation occurs.

Note that when active edges of *wen* and *ren* occur together, a simultaneous read/write operation is assumed. Here, the read is performed first (for example, if *raddr* = *waddr*).

## Assertion Checks

ADDRESS	Write address was out of range. At an active edge of <i>wen</i> , <i>waddr</i> < <i>start_addr</i> or <i>waddr</i> > <i>end_addr</i> .
	Read address was out of range. At an active edge of <i>ren</i> , <i>raddr</i> < <i>start_addr</i> or <i>raddr</i> > <i>end_addr</i> .
INITIALIZATION	Read location was not initialized. At an active edge of <i>ren</i> , the memory location pointed to by <i>raddr</i> had not had data written to it since the last reset.
ONE_READ	Memory location had two read accesses without an intervening write access. <i>one_read_check</i> = 1 At an active edge of <i>ren</i> , the previous access to the memory location pointed to by <i>raddr</i> was another read.
ONE_WRITE	Memory location had two write accesses without an intervening read access. <i>one_read_check</i> = 1 At an active edge of <i>wen</i> , the previous access to the memory location pointed to by <i>waddr</i> was another write (and the current memory access is not a simultaneous read/write to that location).
VALUE	Data item read from a location did not match the data last written to that location. <i>value_check</i> = 1 At an active edge of <i>ren</i> , the value of <i>rdata</i> did not equal the expected value, which was the value of <i>wdata</i> when a write access to the memory location pointed to by the current value of <i>raddr</i> last occurred.

## Implicit X/Z Checks


start_addr contains X or Z	Start address contained X or Z bits.
end_addr contains X or Z	End address contained X or Z bits.
raddr contains X or Z	Read address contained X or Z bits.
rdata contains X or Z	Read data contained X or Z bits.
waddr contains X or Z	Write address contained X or Z bits.
wdata contains X or Z	Write data contained X or Z bits.

## Cover Points

cover_reads	SANITY — Number of read accesses.
cover_writes	SANITY — Number of write accesses.
cover_write_then_read_from_same_addr	BASIC — Number of times a write access was followed by a read from the same address.
cover_read_addr	STATISTIC — Reports which addresses were read at least once.
cover_write_addr	STATISTIC — Reports which addresses were written at least once.
cover_two_writes_without_read	STATISTIC — Number of times a memory location had two write accesses but no read access of the data item stored by the first write.
cover_two_reads_without_write	STATISTIC — Number of times a memory location had two read accesses but no write access overwriting the data item read by the first read.
cover_read_from_start_addr	CORNER — Number of read accesses to the location specified by <i>start_addr</i> .
cover_write_to_start_addr	CORNER — Number of write accesses to the location specified by <i>start_addr</i> .
cover_read_from_end_addr	CORNER — Number of read accesses to the location specified by <i>end_addr</i> .
cover_write_to_end_addr	CORNER — Number of write accesses to the location specified by <i>end_addr</i> .
cover_write_then_read_from_start_addr	CORNER — Number of times a write access to <i>start_addr</i> was followed by a read from <i>start_addr</i> .
cover_write_then_read_from_end_addr	CORNER — Number of times a write access to <i>end_addr</i> was followed by a read from <i>end_addr</i> .

## ovl\_memory\_sync

Ensures the integrity of accesses to a synchronous memory.

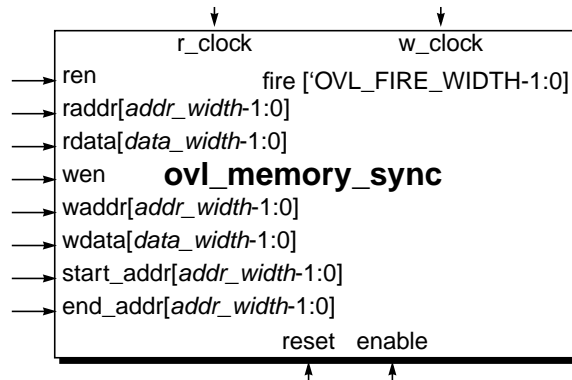

### Parameters:

*severity\_level*  
*data\_width*  
*addr\_width*  
*mem\_size*  
*pass\_thru*  
*addr\_check*  
*init\_check*  
*conflict\_check*  
*one\_read\_check*

*one\_write\_check*  
*value\_check*  
*property\_type*  
*msg*  
*coverage\_level*  
*w\_clock\_edge*  
*r\_clock\_edge*  
*reset\_polarity*  
*gating\_type*

**Class:** event-bounded assertion

## Syntax

```
ovl_memory_sync
[ #(severity_level, data_width, addr_width, mem_size, pass_thru,
  addr_check, init_check, conflict_check, one_read_check,
  one_write_check, value_check, property_type, msg,
  coverage_level, r_clock_edge, w_clock_edge, reset_polarity,
  gating_type) ]
instance_name (r_clock, w_clock, reset, enable, start_addr, end_addr,
  ren, raddr, rdata, wen, waddr, wdata, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>data_width</i>	Number of bits in a data item. Default: 1
<i>addr_width</i>	Number of bits in an address. Default: 1
<i>mem_size</i>	Number of data items in the memory. Default: 2
<i>pass_thru</i>	How the memory handles a simultaneous read and write access to the same address. This parameter applies to the initialization and value checks. <i>pass_thru</i> = 0 (Default) No pass-through mode (i.e., read before write). Simultaneous read/write access to the same location should return the current data item as the read data. <i>pass_thru</i> = 1 Pass-through mode (i.e., write before read). Simultaneous read/write access to the same location should return the new data item as the read data. Only specify pass-through mode if <i>r_clock</i> === <i>w_clock</i> and <i>conflict_check</i> = 0.

<i>addr_check</i>	Whether or not to perform address checks. <i>addr_check</i> = 0 Turns off the address check. <i>addr_check</i> = 1 (Default) Turns on the address check.
<i>init_check</i>	Whether or not to perform initialization checks. <i>init_check</i> = 0 Turns off the initialization check. <i>init_check</i> = 1 (Default) Turns on the initialization check.
<i>conflict_check</i>	Whether or not to perform conflict checks. <i>conflict_check</i> = 0 (Default) Turns off the conflict check. <i>conflict_check</i> = 1 Turns on the conflict check. Only select the conflict check if <i>r_clock</i> == <i>w_clock</i> .
<i>one_read_check</i>	Whether or not to perform one_read checks. <i>one_read_check</i> = 0 (Default) Turns off the one_read check. <i>one_read_check</i> = 1 Turns on the one_read check.
<i>one_write_check</i>	Whether or not to perform one_write checks. <i>one_write_check</i> = 0 (Default) Turns off the one_write check. <i>one_write_check</i> = 1 Turns on the one_write check.
<i>value_check</i>	Whether or not to perform value checks. <i>value_check</i> = 0 (Default) Turns off the value check. <i>value_check</i> = 1 Turns on the value check.
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ( 'OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ( 'OVL_BASIC).
<i>r_clock_edge</i>	Active edge of the <i>r_clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ( 'OVL_POSEDGE).
<i>w_clock_edge</i>	Active edge of the <i>w_clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ( 'OVL_POSEDGE).

<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).

## Ports

<i>r_clock</i>	Clock event for read operations.
<i>w_clock</i>	Clock event for write operations.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>r_clock</i> and <i>w_clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>start_addr</i>	First address of the memory.
<i>end_addr</i>	Last address of the memory.
<i>ren</i>	Read enable input that initiates a read operation from the memory location specified by <i>raddr</i> .
<i>raddr</i>	Read address input.
<i>rdata</i>	Read data input that holds the data item read from memory.
<i>wen</i>	Write enable input that initiates a write operation of the data item in <i>wdata</i> to the memory location specified by <i>waddr</i> .
<i>waddr</i>	Write address input.
<i>wdata</i>	Write data input.
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The *ovl\_memory\_async* checker checks *wen* at the active edge of *w\_clock*. If *wen* is TRUE, the checker checks the values of *waddr*, *start\_addr* and *end\_addr*. If *waddr* is not in the range [*start\_addr*:*end\_addr*], an address check violation occurs. Otherwise, a write operation to the location specified by *waddr* is assumed. Similarly, the checker checks *ren* at the active edge of *r\_clock*. If *ren* is TRUE, the checker checks the values of *raddr*, *start\_addr* and *end\_addr*. If *raddr* is not in the range [*start\_addr*:*end\_addr*], an address check violation occurs. Otherwise, a read operation from the location specified by *raddr* is assumed. Also, if *raddr* is uninitialized

(i.e., has not been written to previously or at the current time), then an initialization check violation occurs.

By default, the address and init checks are on, but can be turned off by setting the *addr\_check* and *init\_check* parameters to 0. Note that other checks are valid only if the addresses are valid, so it is recommended that *addr\_check* be left at 1.

The checker can be configured to perform the following additional checks:

- *conflict\_check* = 1

At the active edges of *w\_clock/r\_clock*, if *wen* = *ren* = TRUE and *waddr* = *raddr*, then a conflict check violation occurs (*w\_clock* and *r\_clock* must be the same signal).

- *one\_write\_check* = 1

*pass\_thru* = 0

At the active edge of *w\_clock*, if *wen* is TRUE and the previous access to the data at the address specified by *waddr* was a write or a simultaneous read/write to that address, a *one\_write* check violation occurs, unless the current operation is a simultaneous read/write to that location.

*pass\_thru* = 1

At the active edge of *w\_clock*, if *wen* is TRUE and the previous access to the data at the address specified by *waddr* was a write (but not a simultaneous read/write to that address), a *one\_write* check violation occurs.

- *one\_read\_check* = 1

*pass\_thru* = 0

At the active edge of *r\_clock*, if *ren* is TRUE and the previous access to the data at the address specified by *raddr* was a read (but not a simultaneous read/write to that address), a *one\_read* check violation occurs.

*pass\_thru* = 1

At the active edge of *r\_clock*, if *ren* is TRUE and the previous access to the data at the address specified by *raddr* was a read or a simultaneous read/write to that address, a *one\_read* check violation occurs, unless the current operation is a simultaneous read/write to that location.

- *value\_check* = 1

At the active edge of *w\_clock*, if *wen* is TRUE, the current value of *wdata* is the value assumed to be written to the memory location specified by *waddr*. At the active edge of *r\_clock*, if *ren* is TRUE and the value of *rdata* does not match the expected value last written to the address specified by *raddr*, a value check violation occurs.

## Assertion Checks

ADDRESS	<p>Write address was out of range. At an active edge of <i>w_clock</i>, <i>wen</i> was TRUE but <i>waddr</i> &lt; <i>start_addr</i> or <i>waddr</i> &gt; <i>end_addr</i>.</p> <p>Read address was out of range. At an active edge of <i>r_clock</i>, <i>ren</i> was TRUE but <i>raddr</i> &lt; <i>start_addr</i> or <i>raddr</i> &gt; <i>end_addr</i>.</p>
INITIALIZATION	<p>Read location was not initialized. At an active edge of <i>r_clock</i>, <i>ren</i> was TRUE but the memory location pointed to by <i>raddr</i> had not had data written to it since the last reset.</p>
CONFLICT	<p>Simultaneous read/write accesses to same address. <i>conflict_check</i> = 1 At an active edge of <i>r_clock</i>, <i>ren</i> was TRUE but <i>wen</i> was also TRUE and <i>raddr</i> = <i>waddr</i>. This check assumes <i>r_clock</i> and <i>w_clock</i> are the same signal.</p>
ONE_READ	<p>Memory location had two read accesses without an intervening write access. <i>one_read_check</i> = 1 At an active edge of <i>r_clock</i>, <i>ren</i> was TRUE but the previous access to the memory location pointed to by <i>raddr</i> was another read.</p>
ONE_WRITE	<p>Memory location had two write accesses without an intervening read access. <i>one_read_check</i> = 1 At an active edge of <i>w_clock</i>, <i>wen</i> was TRUE but the previous access to the memory location pointed to by <i>waddr</i> was another write.</p>
VALUE	<p>Data item read from a location did not match the data last written to that location. <i>value_check</i> = 1 At an active edge of <i>r_clock</i>, <i>ren</i> was TRUE but the value of <i>rdata</i> did not equal the expected value, which was the value of <i>wdata</i> when a write access to the memory location pointed to by the current value of <i>raddr</i> last occurred.</p>

## Implicit X/Z Checks

<code>start_addr</code> contains X or Z	Start address contained X or Z bits.
<code>end_addr</code> contains X or Z	End address contained X or Z bits.
<code>ren</code> contains X or Z	Read enable was X or Z.
<code>raddr</code> contains X or Z	Read address contained X or Z bits.
<code>rdata</code> contains X or Z	Read data contained X or Z bits.
<code>wen</code> contains X or Z	Write enable was X or Z.
<code>waddr</code> contains X or Z	Write address contained X or Z bits.
<code>wdata</code> contains X or Z	Write data contained X or Z bits.

## Cover Points


<code>cover_reads</code>	SANITY — Number of read accesses.
<code>cover_writes</code>	SANITY — Number of write accesses.
<code>cover_write_then_read_from_same_addr</code>	BASIC — Number of times a write access was followed by a read from the same address.
<code>cover_same_addr_simultaneous_read_write</code>	CORNER — Number of times a simultaneous read/write access to the same address occurred. Not meaningful unless <i>pass_thru</i> is 1.
<code>cover_different_addr_simultaneous_read_write</code>	CORNER — Number of times a simultaneous read/write access to different addresses occurred. Not meaningful unless <i>pass_thru</i> is 1.
<code>cover_read_from_start_addr</code>	CORNER — Number of read accesses to the location specified by <i>start_addr</i> .
<code>cover_write_to_start_addr</code>	CORNER — Number of write accesses to the location specified by <i>start_addr</i> .
<code>cover_read_from_end_addr</code>	CORNER — Number of read accesses to the location specified by <i>end_addr</i> .
<code>cover_write_to_end_addr</code>	CORNER — Number of write accesses to the location specified by <i>end_addr</i> .
<code>cover_write_then_read_from_start_addr</code>	CORNER — Number of times a write access to <i>start_addr</i> was followed by a read from <i>start_addr</i> .



cover_write_then_read_ from_end_addr	CORNER — Number of times a write access to <i>end_addr</i> was followed by a read from <i>end_addr</i> .
cover_read_addr	STATISTIC — Reports which addresses were read at least once.
cover_write_addr	STATISTIC — Reports which addresses were written at least once.
cover_read_to_write_ delays	STATISTIC — Reports which delays (in numbers of active <i>w_clock</i> edges) from a read to the next write (to any address) occurred at least once.
cover_write_to_read_ delays	STATISTIC — Reports which delays (in numbers of active <i>r_clock</i> edges) from a write to the next read (to any address) occurred at least once.
cover_two_writes_ without_read	STATISTIC — Number of times a memory location had two write accesses but no read access of the data item stored by the first write.
cover_two_reads_ without_write	STATISTIC — Number of times a memory location had two read accesses but no write access overwriting the data item read by the first read.

## ovl\_multiport\_fifo

Ensures the data integrity of a FIFO with multiple enqueue and dequeue ports, and ensures that the FIFO does not overflow or underflow.

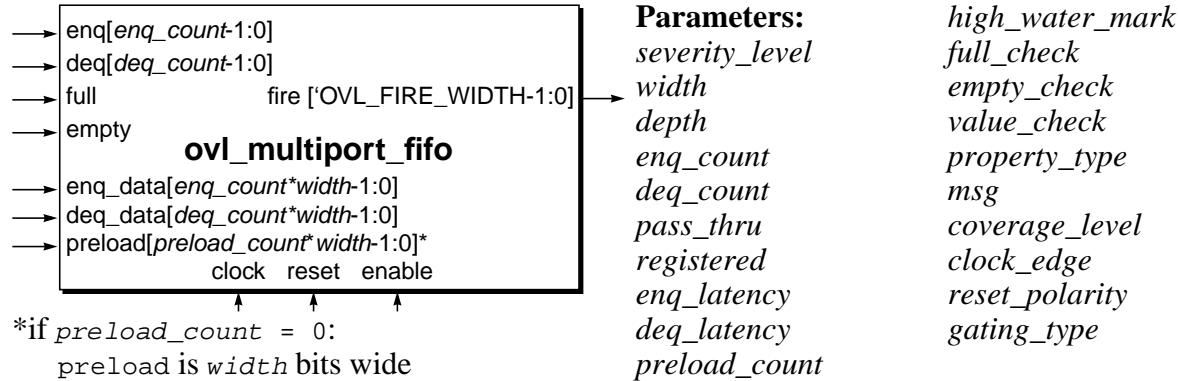

**Class:** *n*-cycle assertion

## Syntax

```
ovl_multiport_fifo
  [#{severity_level, width, depth, enq_count, deq_count, pass_thru,
    registered, enq_latency, deq_latency, preload_count,
    high_water_mark, full_check, empty_check, value_check,
    property_type, msg, coverage_level, clock_edge, reset_polarity,
    gating_type}]
  instance_name (clock, reset, enable, enq, deq, enq_data, deq_data,
    full, empty, preload, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT' ('OVL_ERROR').
<i>width</i>	Width of a data item in the FIFO. Default: 1.
<i>depth</i>	FIFO depth. The <i>depth</i> must be $> 0$ . Default: 2.
<i>enq_count</i>	Number of FIFO enqueue ports. Must be $\leq depth$ . Default: 2.
<i>deq_count</i>	Number of FIFO dequeue ports. Must be $\leq depth$ . Default: 2.

<i>pass_thru</i>	<p>How the FIFO handles dequeues and enqueues in the same cycle if the FIFO count is such that a dequeue violation might occur.</p> <p><i>pass_thru</i> = 0 (Default)          No pass-through mode means dequeue before enqueue. A dequeue violation occurs if the number of scheduled dequeues &gt; the current FIFO count.</p> <p><i>pass</i> = 1          Pass-through mode means enqueue before dequeue. A dequeue violation occurs if the number of scheduled dequeues – the number of scheduled enqueues &gt; the current FIFO count.</p>
<i>registered</i>	<p>How the FIFO handles dequeues and enqueues in the same cycle if the FIFO count is such that an enqueue violation might occur.</p> <p><i>registered</i> = 0 (Default)          No registered mode means enqueue before dequeue. An enqueue violation occurs if the current FIFO count + the number of scheduled enqueues &gt; <i>depth</i>.</p> <p><i>registered</i> = 1          Registered mode means dequeue before enqueue. An enqueue violation occurs if the current FIFO count + the number of scheduled enqueues – the number scheduled dequeues &gt; <i>depth</i>.</p>
<i>enq_latency</i>	<p>Latency for enqueue data.</p> <p><i>enq_latency</i> = 0 (Default)          Checks and coverage assume <i>enq_data</i> is valid and the enqueue operation is performed in the same cycle <i>enq</i> asserts.</p> <p><i>enq_latency</i> &gt; 0          Checks and coverage assume <i>enq_data</i> is valid and the enqueue operation is performed <i>enq_latency</i> cycles after <i>enq</i> asserts.</p>
<i>deq_latency</i>	<p>Latency for dequeued data. It is used for the value check.</p> <p><i>deq_latency</i> = 0 (Default)          Checks and coverage assume <i>deq_data</i> is valid and the dequeue operation is performed in the same cycle <i>deq</i> asserts.</p> <p><i>deq_latency</i> &gt; 0          Checks and coverage assume <i>deq_data</i> is valid and the dequeue operation is performed <i>deq_latency</i> cycles after <i>deq</i> asserts.</p>
<i>preload_count</i>	<p>Number of items to preload the FIFO on reset. The preload port is a concatenated list of items to be preloaded into the FIFO.          Default: 0 (FIFO empty on reset).</p>
<i>high_water_mark</i>	<p>FIFO high-water mark. Must be &lt; <i>depth</i>. A value of 0 disables the <i>high_water_mark</i> cover point. Default: 0.</p>

<i>full_check</i>	Whether or not to perform full checks. <i>full_check</i> = 0 (Default) Turns off the full check. <i>full_check</i> = 1 Turns on the full check.
<i>empty_check</i>	Whether or not to perform empty checks. <i>empty_check</i> = 0 (Default) Turns off the empty check. <i>empty_check</i> = 1 Turns on the empty check.
<i>value_check</i>	Whether or not to perform value checks. <i>value_check</i> = 0 (Default) Turns off the value check. <i>value_check</i> = 1 Turns on the value check.
<i>property_type</i>	Property type. Default: ‘OVL_PROPERTY_DEFAULT (‘OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: ‘OVL_MSG_DEFAULT (“VIOLATION”).
<i>coverage_level</i>	Coverage level. Default: ‘OVL_COVER_DEFAULT (‘OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: ‘OVL_CLOCK_EDGE_DEFAULT (‘OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: ‘OVL_RESET_POLARITY_DEFAULT (‘OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: ‘OVL_GATING_TYPE_DEFAULT (‘OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = ‘OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = ‘OVL_GATE_RESET). Ignored if <i>gating_type</i> is ‘OVL_NONE.
<i>enq[enq_count-1:0]</i>	Concatenation of FIFO enqueue inputs. When one or more <i>enq</i> bits are sampled TRUE, the FIFO performs an enqueue operation from the asserted bits’ corresponding enqueue data ports ( <i>enq_latency</i> cycles later). Data items are enqueued in order from the least to most-significant bits and the FIFO counter is incremented by the number of TRUE <i>enq</i> bits

<code>deq[deq_count-1:0]</code>	Concatenation of FIFO dequeue inputs. When one or more <i>deq</i> bits are sampled TRUE, the FIFO performs a dequeue operation from the asserted bits' corresponding dequeue data ports ( <i>deq_latency</i> cycles later). Data items are dequeued in order from the least to most-significant bits and the FIFO counter is decremented by the number of TRUE <i>deq</i> bits
<code>full</code>	Output status flag from the FIFO. <code>full = 0</code> FIFO not full. <code>full = 1</code> FIFO full.
<code>empty</code>	Output status flag from the FIFO. <code>empty = 0</code> FIFO not empty. <code>empty = 1</code> FIFO empty.
<code>enq_data</code> <code>[enq_count*width-1:0]</code>	Concatenation of enqueue data inputs. If the value check is on, this port contains the data items to enqueue <i>enq_latency</i> cycles after the <i>enq</i> bits assert.
<code>deq_data</code> <code>[deq_count*width-1:0]</code>	Concatenation of dequeue data inputs. If the value check is on, this port contains the dequeued data items <i>deq_latency</i> cycles after the <i>deq</i> bits assert.
<code>preload</code> <code>[preload_count*width-1:0]</code>	Concatenated preload data to enqueue on reset. <code>preload_count = 0</code> No preload of the FIFO is assumed. The width of preload should be <i>width</i> , however no values from <i>preload</i> are used. The FIFO is assumed to be empty on reset. <code>preload_count &gt; 0</code> Checker assumes the value of <i>preload</i> is a concatenated list of items that were all enqueued on the FIFO on reset (or simulation start). The width of preload should be <i>preload_count</i> * <i>width</i> (preload items are the same width). Preload values are enqueued from the low order item to the high order item.
<code>fire</code> <code>['OVL_FIRE_WIDTH-1:0]</code>	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_multiport\_fifo assertion checker ensures a multiport FIFO functions legally. A multiport FIFO is a memory structure that stores and retrieves data items based on a first-in first-out queueing protocol. The FIFO can have multiple enqueue data ports and multiple dequeue data ports (the number of each does need to match). Each enqueue data port has a corresponding enqueue signal that indicates the data port's value should be enqueued. Similarly, each dequeue data port has a corresponding dequeue signal that indicates a data item from the FIFO should be dequeued to that port.

A FIFO with multiple enqueue ports can signal an enqueue from any combination of the ports each enqueue clock cycle. Similarly, a FIFO with multiple dequeue ports can signal a dequeue to any combination of the ports each dequeue clock cycle. When multiple ports are enqueued (dequeued) in a cycle, the order their contents are enqueued (dequeued) is always the same. A FIFO can also have enqueue and dequeue latency constants. Enqueue latency is the number of clock cycles after an enqueue signal asserts that the corresponding enqueue data value is valid at the corresponding enqueue data port. Dequeue latency is the number of clock cycles it takes for a dequeue to produce a data value at its corresponding dequeue port.

To connect the ovl\_multiport\_fifo checker to the FIFO logic:

- Concatenate the enqueue signals—arranged in order from first-in (least-significant bit) to last-in (most-significant bit)—and connect to the *enq* port. Concatenate the dequeue signals—arranged in order from first-out (least-significant bit) to last-out (most-significant bit)—and connect to the *deq* port.
- If the checker will perform value checks, concatenate the enqueue data ports in the same order as the *enq* bits and connect to the *enq\_data* port. Concatenate the dequeue data ports in the same order as the *deq* bits and connect to the *deq\_data* port. Otherwise, connect *enq\_data* and *deq\_data* to 0.
- If the checker will perform full checks, connect the FIFO-full status flag to the *full* port. Otherwise, connect *full* to 1'b0. If the checker will perform empty checks, connect the FIFO-full status flag to the *empty* port. Otherwise, connect *empty* to 1'b0.

The checker checks *enq* and *deq* at the active edge of *clock*. If an *enq* bit is TRUE, an enqueue operation is scheduled for the corresponding enqueue data port *enq\_latency* cycles later (or in the current cycle if *enq\_latency* is 0). Similarly, if a *deq* bit is TRUE, a dequeue operation is scheduled to the corresponding dequeue data port *deq\_latency* cycles later (or in the current cycle if *deq\_latency* is 0).

At each active edge of *clock*, the checker does the following:

1. Updates its FIFO counter with the results of enqueues and dequeues from the previous cycle.
2. Checks the *full* flag if *full\_check* is 1. If *full* is FALSE and the FIFO count = *depth* or if *full* is TRUE and the FIFO count < *depth*, a full check violation occurs.

3. Checks the *empty* flag if *empty\_check* is 1. If *empty* is FALSE and the FIFO count = 0 or if *empty* is TRUE and the FIFO count > 0, an empty check violation occurs.
4. Checks for a potential overflow. If the number of enqueues scheduled for the current cycle exceeds the current number of unused FIFO locations, an enqueue check violation occurs. In this case, since the FIFO state is unknown, value checks are turned off until the next checker reset.
5. Checks for a potential underflow. If the number of dequeues scheduled for the current cycle exceeds the current number of FIFO entries, a dequeue check violation occurs. In this case, since the FIFO state is unknown, value checks are turned off until the next checker reset.
6. If *value\_check* is 1 (and no enqueue or dequeue violations have occurred), the checker maintains an internal copy of what it expects the FIFO entries to be. The checker issues a value check violation for each internal dequeued data item that does not match the corresponding value of *deq\_data*.

A corner-case situation occurs when both enqueues and dequeues are scheduled simultaneously in the same cycle. By default, the checker enforces the best-case (i.e., most restrictive) scenarios. For the enqueue check, enqueues are “performed” before dequeues. For the dequeue check, dequeues are “performed” before enqueues. However, the checker can be configured to allow worse-case (i.e., less restrictive) scenarios by setting the *registered* and *pass\_thru* parameters:

- In registered mode, the enqueue check calculates the FIFO count by subtracting the number of dequeues before adding the number of enqueues, resulting in a less restrictive check.
- In pass-through mode, the dequeue check calculates the FIFO count by adding the number of enqueues before subtracting the number of dequeues, resulting in a less restrictive check.

By default, the FIFO is empty at the start of the first cycle after a reset (or the start of simulation). However, the checker can be configured to match a FIFO that contains data items at these initial points. To do this, the checker “preloads” these data items. The *preload\_count* parameter specifies the number of data items to preload.

If *value\_check* is 1, at the start of any cycle in which reset has transitioned from active to inactive, the checker reads the *preload* port. This is a port containing a concatenated value equal to *preload\_count* data items. The checker enqueues these data items onto the internal FIFO in order from the low-order item to the high-order item.

Uses: FIFO, queue, buffer, ring buffer, elasticity buffer.

## Assertion Checks

ENQUEUE	<p>Enqueue occurred that would overflow the FIFO. <i>registered</i> = 0 One or more <i>enq</i> bits were TRUE, but <i>enq_latency</i> cycles later, FIFO count + number of enqueued items &gt; <i>depth</i>. <i>registered</i> = 1 One or more <i>enq</i> bits were TRUE, but <i>enq_latency</i> cycles later, FIFO count + number of enqueued items – number of dequeued items.</p>
DEQUEUE	<p>Dequeue occurred that would underflow the FIFO. <i>pass_thru</i> = 0 One or more <i>deq</i> bits were TRUE, but <i>deq_latency</i> cycles later, FIFO count &lt; number of dequeued items. <i>pass_thru</i> = 1 One or more <i>deq</i> bits were TRUE, but <i>deq_latency</i> cycles later, FIFO count &lt; number of dequeued items – number of enqueued items.</p>
FULL	<p>The FIFO was not full when the full signal was asserted.</p> <p><i>Full</i> was TRUE, but the FIFO contained fewer than <i>depth</i> items.</p> <p>The full signal was not asserted when the FIFO was full.</p> <p><i>Full</i> was FALSE, but the FIFO \contained <i>depth</i> items.</p>
FULL	<p>FIFO 'full' signal was asserted, but the FIFO was not full. FIFO contained fewer than <i>depth</i> items but <i>full</i> was TRUE.</p> <p>FIFO 'full' signal was not asserted, but the FIFO was full. FIFO contained <i>depth</i> items and <i>full</i> was FALSE.</p>
EMPTY	<p>FIFO 'empty' signal was asserted, but the FIFO was not empty. FIFO contained one or more items but <i>empty</i> was TRUE.</p> <p>FIFO 'empty' signal was not asserted, but the FIFO was empty. FIFO contained no items but <i>empty</i> was FALSE.</p>



VALUE	<p>Dequeued FIFO value did not equal the corresponding enqueued value.  <math>deq\_latency = 0</math>  A <i>deq</i> bit was TRUE, but the corresponding data item in <i>deq_data</i> did not equal the item originally enqueued.</p> <p><math>deq\_latency &gt; 0</math>  A <i>deq</i> bit was TRUE, but <i>deq_latency</i> cycles later the corresponding data item in <i>deq_data</i> did not equal the item originally enqueued.</p> <p>This check automatically turns off if an enqueue or dequeue check violation occurs since it is no longer possible to correspond enqueued with dequeued values. The check turns back on when the checker resets.</p>
-------	--

## Implicit X/Z Checks

<code>enq</code> contains X or Z	Enqueue contained X or Z bits.
<code>deq</code> contains X or Z	Dequeue contained X or Z bits.
<code>full</code> contains X or Z	FIFO full signal was X or Z. Check is off if <i>full_check</i> is 0.
<code>empty</code> contains X or Z	FIFO empty signal was X or Z. Check is off if <i>empty_check</i> is 0.
<code>enq_data</code> contains X or Z	Enqueue data item in the <i>enq_data</i> expression contained X or Z bits when it was scheduled to be enqueued onto the FIFO.
<code>deq_data</code> contains X or Z	Dequeue data item in the <i>deq_data</i> expression contained X or Z bits when it was scheduled to be dequeued from the FIFO.


## Cover Points

<code>cover_enqueues</code>	SANITY — Number of data items enqueued on the FIFO.
<code>cover_dequeues</code>	SANITY — Number of data items dequeued from the FIFO.
<code>cover_simultaneous_enq_deq</code>	BASIC — Number of cycles both an enqueue and a dequeue (to/from the same port?) were scheduled to occur.
<code>cover_high_water_mark</code>	CORNER — Number of times the FIFO count transitioned from $< high\_water\_mark$ to $\geq high\_water\_mark$ . Not reported if <i>high_water_mark</i> is 0.
<code>cover_simultaneous_deq_enq_when_empty</code>	CORNER — Number of cycles the FIFO was enqueued and dequeued simultaneously when it was empty.
<code>cover_simultaneous_deq_enq_when_full</code>	CORNER — Number of cycles the FIFO was enqueued and dequeued simultaneously when it was full.
<code>cover_fifo_empty</code>	CORNER — Number of cycles FIFO was empty after processing enqueues and dequeues for the cycle.
<code>cover_fifo_full</code>	CORNER — Number of cycles FIFO was full after processing enqueues and dequeues for the cycle.

cover\_observed\_counts     STATISTIC — Reports the FIFO counts that occurred at least once.

## ovl\_mutex

Ensures that the bits of an expression are mutually exclusive.

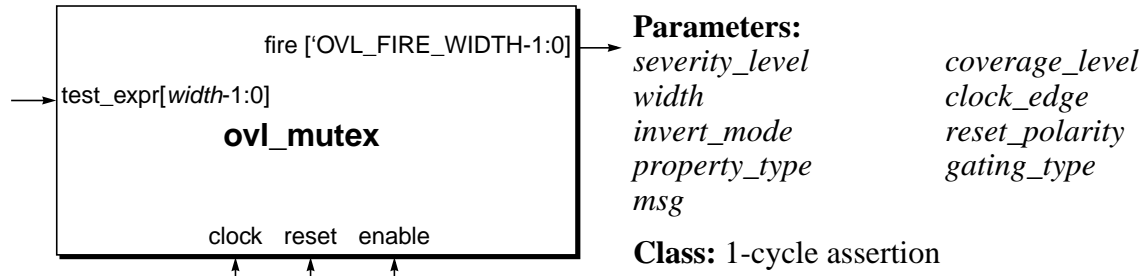

## Syntax

```
ovl_mutex
  [#(severity_level, width, invert_mode, property_type, msg,
    coverage_level, clock_edge, reset_polarity, gating_type)]
  instance_name (clock, reset, enable, test_expr, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>width</i>	Width of <i>test_expr</i> . Default: 2.
<i>invert_mode</i>	Sense of the active bits for the mutex check. <i>invert_mode</i> = 0 (Default) Expression value must not have more than one TRUE bit. <i>invert_mode</i> = 1 Expression value must not have more than one FALSE bit.
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>test_expr</i> [ <i>width</i> -1:0]	Variable or expression to check.
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_mutex assertion checker checks *test\_expr* at each active edge of *clock*. By default, if more than one bit of *test\_expr* is TRUE, a mutex violation occurs. Setting *invert\_mode* to 1 reverses the sense of the bits. A mutex violation occurs if more than one bit of *test\_expr* is FALSE.

## Assertion Checks

MUTEX	Expression's bits are not mutually exclusive. <i>invert_mode</i> = 0 Expression had more than one TRUE bit. <i>invert_mode</i> = 1 Expression had more than one FALSE bit.
-------	--

## Implicit X/Z Checks


<i>test_expr</i> contains X or Z	Expression contained X or Z bits.
----------------------------------	-----------------------------------

## Cover Points

<i>cover_values_checked</i>	SANITY — Number of cycles <i>test_expr</i> loaded a new value.
<i>cover_no_mutex_bits</i>	CORNER — Number of cycles all bits in <i>test_expr</i> were TRUE and <i>invert_mode</i> = 0 or all bits in <i>test_expr</i> were FALSE and <i>invert_mode</i> = 1.
<i>cover_mutex_bitmap</i>	STATISTIC — Reports which of <i>test_expr</i> bits were TRUE ( <i>invert_mode</i> = 0) or FALSE ( <i>invert_mode</i> = 1) at least once.

## ovl\_never

Ensures that the value of an expression is not TRUE.

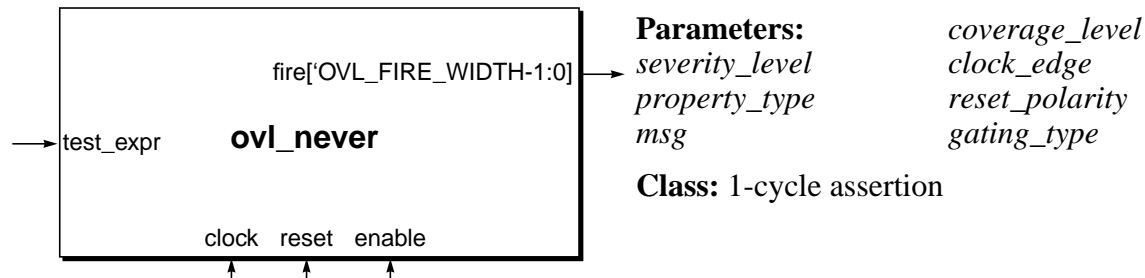

## Syntax

```

ovl_never
  [#(severity_level, property_type, msg, coverage_level, clock_edge,
    reset_polarity, gating_type )]
  instance_name (clock, reset, enable, test_expr, fire);

```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>test_expr</i>	Expression that should not evaluate to TRUE on the active clock edge.

## Description

The `ovl_never` assertion checker checks the single-bit expression *test\_expr* at each active edge of *clock* to verify the expression does not evaluate to TRUE.

## Assertion Checks

NEVER	Expression evaluated to TRUE.
-------	-------------------------------

## Implicit X/Z Checks

<i>test_expr</i> contains X or Z	Expression value contained X or Z bits.
----------------------------------	---

## Cover Points

none

## Notes

1. By default, the `ovl_never` assertion is pessimistic and the assertion fails if *test\_expr* is not 0 (i.e. equals 1, X, Z, etc.). However, if 'OVL\_XCHECK\_OFF is set, the assertion fails if and only if *test\_expr* is 1.

## See also

[ovl\\_always](#)  
[ovl\\_always\\_on\\_edge](#)


[ovl\\_implication](#)  
[ovl\\_proposition](#)

## Example

```
ovl_never #(
    'OVL_ERROR,                // severity_level
    'OVL_ASSERT,               // property_type
    "",                        // msg
    'OVL_COVER_DEFAULT,        // coverage_level
    'OVL_POSEDGE,              // clock_edge
    'OVL_ACTIVE_LOW,           // reset_polarity
    'OVL_GATE_CLOCK)           // gating_type


    valid_count (
        clock,                  // clock
        reset,                  // reset
        enable,                 // enable
        reg_a < reg_b,           // test_expr
        fire_valid_count );      // fire
```

Ensures that  $(reg\_a < reg\_b)$  is FALSE at each rising edge of *clock*.

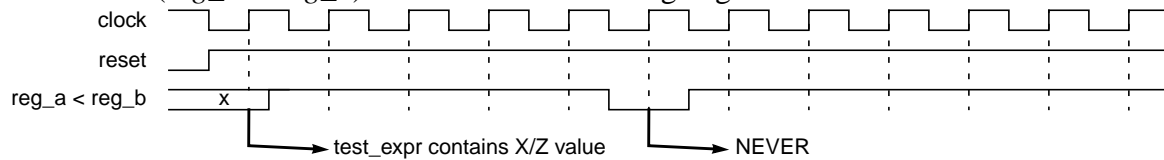

## ovl\_never\_unknown

Ensures that the value of an expression contains only 0 and 1 bits when a qualifying expression is TRUE.

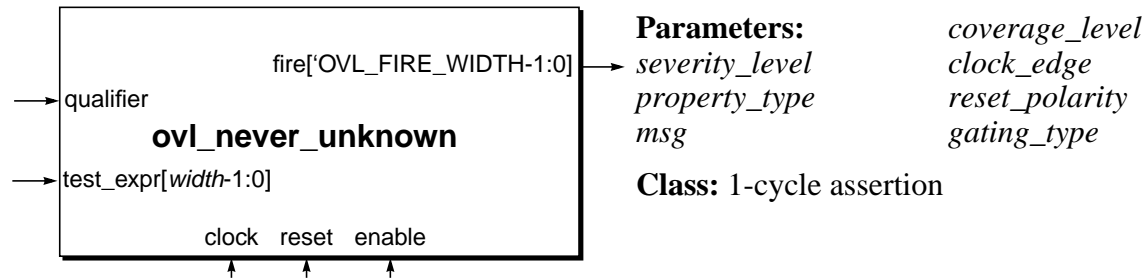

## Syntax

```
ovl_never_unknown
    [#(severity_level, width, property_type, msg, coverage_level,
        clock_edge, reset_polarity, gating_type )]
    instance_name (clock, reset, enable, qualifier, test_expr, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>width</i>	Width of the <i>test_expr</i> argument. Default: 1.
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).



## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>qualifier</i>	Expression that indicates whether or not to check <i>test_expr</i> .
<i>test_expr</i> [ <i>width</i> -1:0]	Expression that should contain only 0 or 1 bits when <i>qualifier</i> is TRUE.
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_never\_unknown assertion checker checks the expression *qualifier* at each active edge of *clock* to determine if it should check *test\_expr*. If *qualifier* is sampled TRUE, the checker evaluates *test\_expr* and if the value of *test\_expr* contains a bit that is not 0 or 1, the assertion fails.

The checker is useful for ensuring certain data have only known values following a reset sequence. It also can be used to verify tristate input ports are driven and tristate output ports drive known values when necessary.

## Assertion Checks

<i>test_expr</i> contains X/Z value	The <i>test_expr</i> expression contained at least one bit that was not 0 or 1; <i>qualifier</i> was sampled TRUE; and 'OVL_XCHECK_OFF is not set.
-------------------------------------	--

## Cover Points

<i>cover_qualifier</i>	BASIC — A never_unknown check was initiated.
<i>cover_test_expr_change</i>	SANITY — Expression changed value.

## Notes

1. If 'OVL\_XCHECK\_OFF is set, all ovl\_never\_unknown checkers are turned off.

## See also

[ovl\\_never](#)  
[ovl\\_never\\_unknown\\_async](#)  
[ovl\\_one\\_cold](#)


[ovl\\_one\\_hot](#)  
[ovl\\_zero\\_one\\_hot](#)

## Example

```
ovl_never_unknown #(
    'OVL_ERROR,                // severity_level
    8,                          // width
    'OVL_ASSERT,               // property_type
    "Error: data unknown or undriven", // msg
    'OVL_COVER_DEFAULT,        // coverage_level
    'OVL_POSEDGE,              // clock_edge
    'OVL_ACTIVE_LOW,           // reset_polarity
    'OVL_GATE_CLOCK)           // gating_type


valid_data (
    clock,                      // clock
    reset,                      // reset
    enable,                     // enable
    rd_data,                    // qualifier
    data,                       // test_expr
    fire_valid_data );          // fire
```

Ensures that values of *data* are known and driven when *rd\_data* is TRUE.

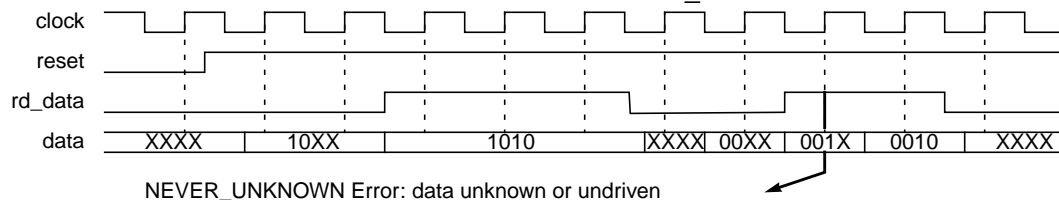

## ovl\_never\_unknown\_async

Ensures that the value of an expression combinationally contains only 0 and 1 bits.

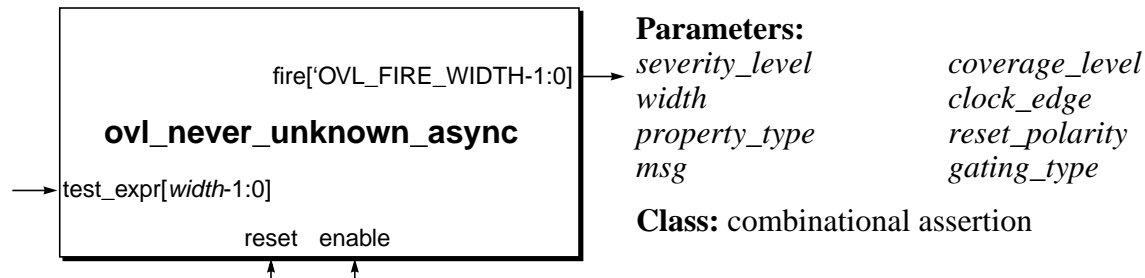

### Syntax

```
ovl_never_unknown_async
    [#{severity_level, width, property_type, msg, coverage_level,
      clock_edge, reset_polarity, gating_type}]
    instance_name (reset, enable, test_expr, fire);
```

### Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>width</i>	Width of the <i>test_expr</i> argument. Default: 1.
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Ignored parameter.
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<code>reset</code>	Synchronous reset signal indicating completed initialization.
<code>enable</code>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<code>test_expr[width-1:0]</code>	Expression that should contain only 0 or 1 bits when qualifier is TRUE.
<code>fire</code> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The `ovl_never_unknown_async` assertion checker combinationally evaluates *test\_expr* and if the value of *test\_expr* contains a bit that is not 0 or 1, the assertion fails.

The checker is useful for ensuring certain data have only known values following a reset sequence. It also can be used to verify tristate input ports are driven and tristate output ports drive known values when necessary.

## Assertion Checks

<code>test_expr</code> contains X/Z value	The <i>test_expr</i> expression contained at least one bit that was not 0 or 1 and 'OVL_XCHECK_OFF is not set.
---	--

## Cover Points

<code>cover_test_expr_change</code>	SANITY — Expression changed value.
-------------------------------------	------------------------------------

## Notes

1. If 'OVL\_XCHECK\_OFF is set, all `ovl_never_unknown_async` checkers are turned off.

## See also


[ovl\\_never](#)

## Example

```
ovl_never_unknown_async #(
    'OVL_ERROR,                // severity_level
    8,                          // width
    'OVL_ASSERT,               // property_type
    "Error: data unknown or undriven", // msg
    'OVL_COVER_DEFAULT,        // coverage_level
    'OVL_POSEDGE,              // clock_edge
    'OVL_ACTIVE_LOW,           // reset_polarity
    'OVL_GATE_CLOCK)           // gating_type


valid_data (
    bus_gnt,                    // reset
    enable,                     // enable
    data,                       // test_expr
    fire_valid_data );          // fire
```

Ensures that values of *data* are known and driven while *bus\_gnt* is TRUE.

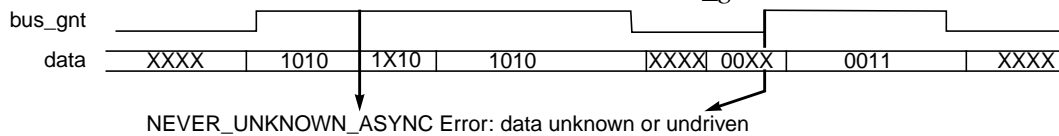

## ovl\_next

Ensures that the value of an expression is TRUE a specified number of cycles after a start event.

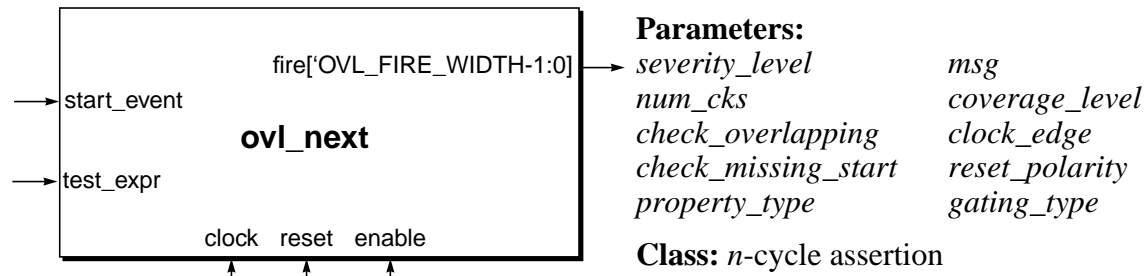

## Syntax

```

ovl_next
  [ #(severity_level, num_cks, check_overlapping, check_missing_start,
      property_type, msg, coverage_level, clock_edge, reset_polarity,
      gating_type) ]
  instance_name (clock, reset, start_event, test_expr, fire);

```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>num_cks</i>	Number of cycles after <i>start_event</i> is TRUE to wait to check that the value of <i>test_expr</i> is TRUE. Default: 1.
<i>check_overlapping</i>	Whether or not to perform overlap checking. Default: 1 (overlap checking off). <ul style="list-style-type: none"> <li>• If set to 0, overlap checking is performed. From the active edge of <i>clock</i> after <i>start_event</i> is sampled TRUE to the active edge of <i>clock</i> of the cycle before <i>test_expr</i> is sampled for the current next check, the checker performs an overlap check. During this interval, if <i>start_event</i> is TRUE at an active edge of <i>clock</i>, then the overlap check fails (illegal overlapping condition). The current next check continues but a new next check is not initiated.</li> <li>• If set to 1, overlap checking is not performed. A separate next check is initiated each time <i>start_event</i> is sampled TRUE (overlapping start events are allowed).</li> </ul>

<i>check_missing_start</i>	Whether or not to perform missing-start checking. Default: 0 (missing-start checking off). <ul style="list-style-type: none"> <li>• If set to 0, missing start checks are not performed.</li> <li>• If set to 1, missing start checks are performed. The checker samples <i>test_expr</i> every active edge of <i>clock</i>. If the value of <i>test_expr</i> is TRUE, then <i>num_cks</i> active edges of <i>clock</i> prior to the current time, <i>start_event</i> must have been TRUE (initiating a next check). If not, the missing-start check fails (<i>start_event</i> without <i>test_expr</i>).</li> </ul>
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>start_event</i>	Expression that (along with <i>num_cks</i> ) identifies when to check <i>test_expr</i> .
<i>test_expr</i>	Expression that should evaluate to TRUE <i>num_cks</i> cycles after <i>start_event</i> initiates a next check.
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_next assertion checker checks the expression *start\_event* at each active edge of *clock*. If *start\_event* is TRUE, a check is initiated. The check waits for *num\_cks* cycles (i.e., for *num\_cks* additional active edges of *clock*) and evaluates *test\_expr*. If *test\_expr* is not TRUE, the assertion fails.

If overlap checking is off (*check\_overlapping* is 1), additional checks can start while a current check is pending. If overlap checking is on, the assertion fails if *start\_event* is sampled TRUE while a check is pending (except on the last clock).

If missing-start checking is off (*check\_missing\_start* is 0), *test\_expr* can be TRUE any time. If missing-start checking is on, the assertion fails if *test\_expr* is TRUE without a corresponding start event (*num\_cks* cycles previously). However, if *test\_expr* is TRUE in the interval of *num\_cks* - 1 cycles after a reset and has no corresponding start event, the result is indeterminate (i.e., the missing-start check might or might not fail).

## Assertion Checks

start_event without test_expr	The value of <i>start_event</i> was TRUE on an active edge of <i>clock</i> , but <i>num_cks</i> cycles later the value of <i>test_expr</i> was not TRUE.
illegal overlapping condition detected	The <i>check_overlapping</i> parameter is set to 0 and <i>start_event</i> was TRUE on the active edge of <i>clock</i> , but a previous check was pending.
test_expr without start_event	The <i>check_missing_start</i> parameter is set to 1 and <i>start_event</i> was not TRUE on the active edge of <i>clock</i> , but <i>num_cks</i> cycles later <i>test_expr</i> was TRUE.
num_cks parameter <= 0	The <i>num_cks</i> parameter is less than 2.

## Implicit X/Z Checks

test_expr contains X or Z	Expression value was X or Z.
start_event contains X or Z	Start event value was X or Z.

## Cover Points

cover_start_event	BASIC — The value of <i>start_event</i> was TRUE on an active edge of <i>clock</i> .
cover_overlapping_start_events	CORNER — The <i>check_overlapping</i> parameter is TRUE and the value of <i>start_event</i> was TRUE on an active edge of <i>clock</i> while a check was pending.



## See also

[ovl\\_change](#)  
[ovl\\_frame](#)

[ovl\\_time](#)  
[ovl\\_unchange](#)

## Examples


```

ovl_next #(
    `OVL_ERROR,                // severity_level
    4,                          // num_cks
    1,                          // check_overlapping (off)
    0,                          // check_missing_start (off)
    `OVL_ASSERT,               // property_type
    "error:",                   // msg
    `OVL_COVER_DEFAULT,        // coverage_level
    `OVL_POSEDGE,               // clock_edge
    `OVL_ACTIVE_LOW,           // reset_polarity
    `OVL_GATE_CLOCK)           // gating_type

    valid_next_a_b (
        clock,                  // clock
        reset,                  // reset
        enable,                 // enable
        a,                      // start_event
        b,                      // test_expr
        fire_valid_next_a_b );  // fire

```

Ensures that *b* is TRUE 4 cycles after *a* is TRUE.

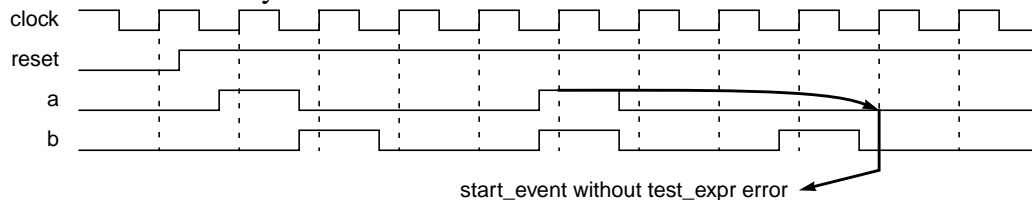

```

ovl_next #(
    `OVL_ERROR,                // severity_level
    4,                          // num_cks
    0,                          // check_overlapping (on)
    0,                          // check_missing_start (off)
    `OVL_ASSERT,               // property_type
    "error:",                   // msg
    `OVL_COVER_DEFAULT,        // coverage_level
    `OVL_POSEDGE,               // clock_edge
    `OVL_ACTIVE_LOW,           // reset_polarity
    `OVL_GATE_CLOCK)           // gating_type

    valid_next_a_b (


```

```

clock,          // clock
reset,          // reset
enable,         // enable
a,              // start_event
b,              // test_expr
fire_valid_next_a_b ); // fire

```

Ensures that *b* is TRUE 4 cycles after *a* is TRUE. Overlaps are not allowed

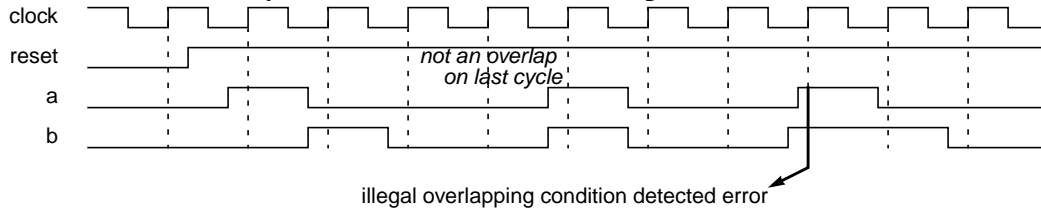


```

ovl_next #(
    'OVL_ERROR,          // severity_level
    4,                   // num_cks
    1,                   // check_overlapping (off)
    1,                   // check_missing_start (on)
    'OVL_ASSERT,         // property_type
    "error:",            // msg
    'OVL_COVER_DEFAULT,  // coverage_level
    'OVL_POSEDGE,        // clock_edge
    'OVL_ACTIVE_LOW,     // reset_polarity
    'OVL_GATE_CLOCK)    // gating_type

valid_next_a_b (
    clock,               // clock
    reset,               // reset
    enable,              // enable
    a,                   // start_event
    b,                   // test_expr
    fire_valid_next_a_b ); // fire


```

Ensures that *b* is TRUE 4 cycles after *a* is TRUE. Missing-start check is on.

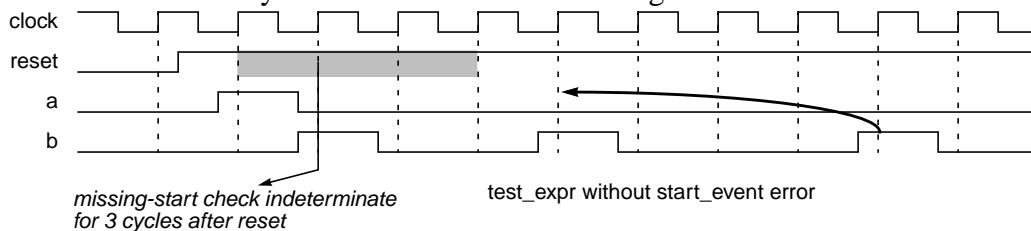

## ovl\_next\_state

Ensures that an expression transitions only to specified values.

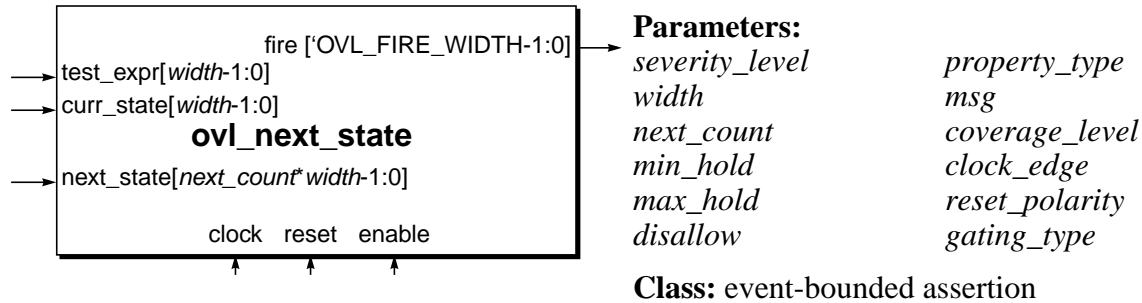

## Syntax

```
ovl_next_state
  [ #(severity_level, width, next_count, min_hold, max_hold, disallow,
      property_type, msg, coverage_level, clock_edge, reset_polarity,
      gating_type) ]
  instance_name (clock, reset, enable, test_expr, curr_state, next_state,
  fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>width</i>	Width of <i>test_expr</i> . Default: 1
<i>next_count</i>	Number of next state values. The <i>next_state</i> port is a concatenated list of next state values. Default: 1.
<i>min_hold</i>	Minimum number of cycles <i>test_expr</i> must not change value when it matches the value of <i>curr_state</i> . Must be > 0. Default: 1
<i>max_hold</i>	Maximum number of cycles <i>test_expr</i> can remain unchanged when it matches the value of <i>curr_state</i> . A value of 0 turns off checking for a maximum hold time. Must be 0 or > <i>min_hold</i> . Default: 1
<i>disallow</i>	Sense of the comparison of <i>test_expr</i> with <i>next_state</i> . <i>disallow</i> = 0 (Default) Next value of <i>test_expr</i> should match one of the values in <i>next_state</i> . <i>disallow</i> = 1 Next value of <i>test_expr</i> should not match one of the values in <i>next_state</i> .
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).

<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>test_expr</i> [ <i>width</i> -1:0]	State variable or expression to check.
<i>curr_state</i> [ <i>width</i> -1:0]	Value to compare with <i>test_expr</i> . If no event window is open and the value of <i>test_expr</i> matches the value <i>curr_state</i> , an event window opens.
<i>next_state</i> [ <i>next_count</i> * <i>width</i> -1:0]	Concatenated list of next values. <i>disallow</i> = 0 Next values are valid values for <i>test_expr</i> when an event window closes. <i>disallow</i> = 1 Next values are not valid values for <i>test_expr</i> when an event window closes.
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_next\_state assertion checker evaluates *test\_expr* and *curr\_state* at each active edge of *clock*. If the value of *test\_expr* matches the value of *curr\_state*, the checker verifies that the value of *test\_expr* behaves as follows:

- If *min\_hold* > 0 and *test\_expr* changes value before *min\_hold* cycles (including the match cycle) transpire, a next\_state violation occurs.

- Otherwise, when *test\_expr* transitions, the checker evaluates *next\_state*. If the new value of *test\_expr* is not a value in *next\_state*, a next\_state violation occurs.
- However, if *max\_hold* > 0 and *test\_expr* does not change value before *max\_hold* cycles (including the match cycle) transpire, a next\_state violation occurs.

A next\_state check is initiated each cycle *test\_expr* and *curr\_state* match.

Setting the *disallow* parameter to 1, changes the sense of the matching of *test\_expr* and *next\_state* values. A next\_state violation occurs if *test\_expr* transitions to a value in *next\_state*.

Uses: FSM, state machine, controller, coverage, line coverage, path coverage, branch coverage, state coverage, arc coverage.

## Assertion Checks

### NEXT\_STATE

Match occurred but expression value was not a next value, or expression changed too soon.

*disallow* = 0 and *max\_hold* = 0

After matching *curr\_state*, *test\_expr* changed value before *min\_hold* cycles (including the match cycle) or transitioned to a value not in *next\_state* when it transitioned.

Match occurred but expression value was not a next value, or expression did not change in event window.

*disallow* = 0 and *max\_hold* > 0

After matching *curr\_state*, *test\_expr* changed value before *min\_hold* cycles (including the match cycle), transitioned to a value not in *next\_state* when it transitioned, or did not change value for *max\_hold* cycles (including the match cycle).

Match occurred but expression value was a next value, or expression changed too soon.

*disallow* = 1 and *max\_hold* = 0

After matching *curr\_state*, *test\_expr* changed value before *min\_hold* cycles (including the match cycle) or transitioned to a value in *next\_state* when it transitioned.

Match occurred but expression value was a next value, or expression did not change in event window.

*disallow* = 1 and *max\_hold* > 0

After matching *curr\_state*, *test\_expr* changed value before *min\_hold* cycles (including the match cycle), transitioned to a value in *next\_state* when it transitioned, or did not change value for *max\_hold* cycles (including the match cycle).

## Implicit X/Z Checks


<code>test_expr</code> contains X or Z	Expression contained X or Z bits.
<code>curr_state</code> contains X or Z	Current state expression contained X or Z bits.
<code>next_state</code> contains X or Z	Next state expression contained X or Z bits.

## Cover Points

<code>cover_next_state_transitions</code>	SANITY — Number of times <i>test_expr</i> matched <i>curr_state</i> and then transitioned correctly to a value in <i>next_state</i> ( <i>disallow</i> =0) or not in <i>next_state</i> ( <i>disallow</i> =1).
<code>cover_all_transitions</code>	CORNER — Non-zero if <i>test_expr</i> transitioned to every next value found in the sampled <i>next_state</i> . Not meaningful if <i>disallow</i> is 1.
<code>cover_cycles_checked</code>	STATISTIC — Number of cycles <i>test_expr</i> matched <i>curr_state</i> .
<code>observed_transition</code>	STATISTIC — Reports which values in <i>next_state</i> that <i>test_expr</i> transitioned to at least once. Not meaningful if <i>disallow</i> is 1.

## ovl\_no\_contention

Ensures that a bus is driven according to specified contention rules.

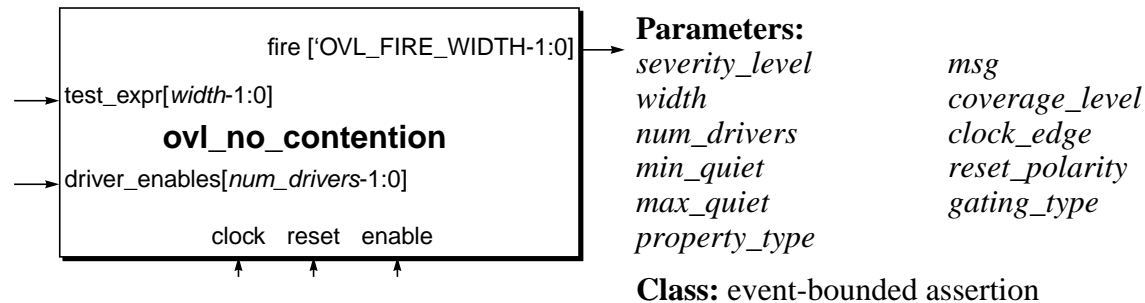

### Syntax

```
ovl_no_contention
  [ #(severity_level, width, num_drivers, min_quiet, max_quiet,
      property_type, msg, coverage_level, clock_edge, reset_polarity,
      gating_type) ]
  instance_name (clock, reset, enable, test_expr, driver_enables, fire);
```

### Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>width</i>	Width of <i>test_expr</i> . Default: 2.
<i>num_drivers</i>	Width of <i>driver_enables</i> . Default: 2.
<i>min_quiet</i>	Minimum number of cycles the bus must be quiet (i.e., when all <i>driver_enables</i> bits are 0) between transactions. Default: 0 (quiet periods between transactions are not necessary).
<i>max_quiet</i>	Maximum number of cycles the bus can be quiet (i.e., when all <i>driver_enables</i> bits are 0). The <i>min_quiet</i> parameter must be ≤ <i>max_quiet</i> . Default: 0 (quiet periods between transactions should not occur).
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).

<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>test_expr</i> [ <i>width</i> -1:0]	Bus to be checked.
<i>driver_enables</i> [ <i>num_drivers</i> -1:0]	Enable bits for the drivers of <i>test_expr</i> .
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The *ovl\_no\_contention* assertion checker checks the bus (*test\_expr*) and the driver enable signals (*driver\_enables*) at each active edge of *clock*. An implicit X/Z check violation occurs if any *driver\_enables* bit is X or Z.. Otherwise:

- Number of TRUE *driver\_enables* bits is > 1:  
A single\_driver violation occurs and if *test\_expr* contains an X or Z bit, a no\_xz violation occurs.
- Number of TRUE *driver\_enables* bits is 1:  
If *test\_expr* contains an X or Z bit, a no\_xz violation occurs.

In addition, the checker performs quiet-time checks. Quiet times consecutive cycles or bus inactivity where no bus transactions are occurring (i.e., *driver\_enables* = 0). The checker verifies the specified configuration as follows:

- $0 = \text{min\_quiet} = \text{max\_quiet}$  (default)  
A quiet violation occurs each cycle *driver\_enables* = 0.
- $0 = \text{min\_quiet} < \text{max\_quiet}$   
A quiet violation occurs if *driver\_enables* = 0 for *max\_quiet*+1 consecutive cycles.



- $0 < \text{min\_quiet} \leq \text{max\_quiet}$

A quiet violation occurs if either of the following occur:

- The *driver\_enables* expression transitions to 0 and then transitions from 0 less than *min\_quiet* cycles later.
- The *driver\_enables* expression = 0 for *max\_quiet*+1 cycles.
- $0 = \text{max\_quiet} < \text{min\_quiet}$

A quiet violation occurs if *driver\_enables* transitions to 0 and then transitions from 0 less than *min\_quiet* cycles later.

## Assertion Checks

SINGLE_DRIVER	Bus has multiple drivers. Number of TRUE bits in <i>driver_enables</i> is $> 1$ .
NO_XZ	Bus is driven, but has X or Z bits. Number of TRUE bits in <i>driver_enables</i> is $> 0$ , but <i>test_expr</i> has one or more X or Z bits.
QUIET	Bus was quiet. $0 = \text{min\_quiet} = \text{max\_quiet}$ <i>Driver_enables</i> was 0.  Bus was quiet for too many cycles. $0 = \text{min\_quiet} < \text{max\_quiet}$ <i>Driver_enables</i> was 0 for more than <i>max_quiet</i> consecutive cycles.  Bus was quiet for too few or too many cycles. $0 < \text{min\_quiet} \leq \text{max\_quiet}$ <i>Driver_enables</i> was not held 0 for at least <i>min_quiet</i> consecutive cycles or was 0 for more than <i>max_quiet</i> cycles.  Bus was quiet for too few cycles. $0 = \text{max\_quiet} < \text{min\_quiet}$ <i>Driver_enables</i> was not held 0 for at least <i>min_quiet</i> consecutive cycles.

## Implicit X/Z Checks


<i>driver_enables</i> contains X or Z	Drivers enabled expression contained X or Z bits.
--	---

## Cover Points

cover_driver_bitmap	BASIC — Bit map of the <i>driver_enables</i> signals that have been TRUE at least once.
cover_quiet_equals_min_quiet	CORNER — Number of quiet periods that were exactly <i>min_quiet</i> cycles long ( <i>min_quiet</i> > 0) or number of times bus control transferred from one driver to another ( <i>min_quiet</i> = 0).
cover_quiet_equals_max_quiet	CORNER — Number of quiet periods that were exactly <i>max_quiet</i> cycles long. Not meaningful if <i>max_quiet</i> = 0.
observed_quiet_cycles	STATISTIC — Reports the quiet periods (in cycles) that have occurred at least once.

## ovl\_no\_overflow

Ensures that the value of an expression does not overflow.

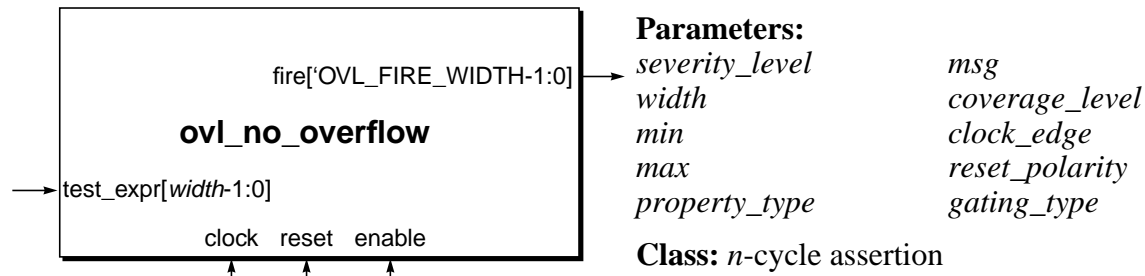

## Syntax

```
ovl_no_overflow
    [#(severity_level, width, min, max, property_type, msg,
        coverage_level, clock_edge, reset_polarity, gating_type)]
    instance_name (clock, reset, enable, test_expr, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>width</i>	Width of the <i>test_expr</i> argument. Width must be less than or equal to 32. Default: 1.
<i>min</i>	Minimum value in the test range of <i>test_expr</i> . Default: 0.
<i>max</i>	Maximum value in the test range of <i>test_expr</i> . Default: $2^{**width} - 1$ .
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>test_expr</i> [ <i>width</i> -1:0]	Expression that should not change from a value of <i>max</i> to a value out of the test range or to a value equal to <i>min</i> .
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_no\_overflow assertion checker checks the expression *test\_expr* at each active edge of *clock* to determine if its value has changed from a value (at the previous active edge of *clock*) that was equal to *max*. If so, the checker verifies that the new value has not overflowed *max*. That is, it verifies the value of *test\_expr* is not greater than *max* or less than or equal to *min* (in which case, the assertion fails).

The checker is useful for verifying counters, where it can ensure the counter does not wrap from the highest value to the lowest value in a specified range. For example, it can be used to check that memory structure pointers do not wrap around. For a more general test for overflow, use ovl\_delta or ovl\_fifo\_index.

## Assertion Checks

NO_OVERFLOW	Expression changed value from <i>max</i> to a value not in the range <i>min</i> + 1 to <i>max</i> - 1.
-------------	--

## Implicit X/Z Checks

<i>test_expr</i> contains X or Z	Expression value contained X or Z bits.
----------------------------------	---

## Cover Points

cover_test_expr_at_min	CORNER — Expression evaluated to <i>min</i> .
cover_test_expr_at_max	BASIC — Expression evaluated to <i>max</i> .

## Errors

The parameters *min* and *max* must be specified such that *min* is less than or equal to *max*. Otherwise, the assertion fails on each tested clock cycle for which *test\_expr* changed from *max*.

## Notes

1. The assertion check compares the current value of *test\_expr* with its previous value. Therefore, checking does not start until the second rising clock edge of *clock* after *reset* deasserts.

## See also

[ovl\\_delta](#)  
[ovl\\_fifo\\_index](#)


[ovl\\_increment](#)  
[ovl\\_no\\_overflow](#)

## Example

```
ovl_no_overflow #(
    'OVL_ERROR,                      // severity_level
    3,                               // width
    0,                               // min
    4,                               // max
    'OVL_ASSERT,                    // property_type
    "Error: addr overflow",          // msg
    'OVL_COVER_DEFAULT,             // coverage_level
    'OVL_POSEDGE,                   // clock_edge
    'OVL_ACTIVE_LOW,                // reset_polarity
    'OVL_GATE_CLOCK)               // gating_type


    addr_with_overflow (
        clock,                      // clock
        reset,                      // reset
        enable,                     // enable
        addr,                       // test_expr
        fire_addr_with_overflow );  // fire
```

Ensures that *addr* does not overflow (i.e., change from a value of 4 at the rising edge of *clock* to a value of 0 or a value greater than 4 at the next rising edge of *clock*).

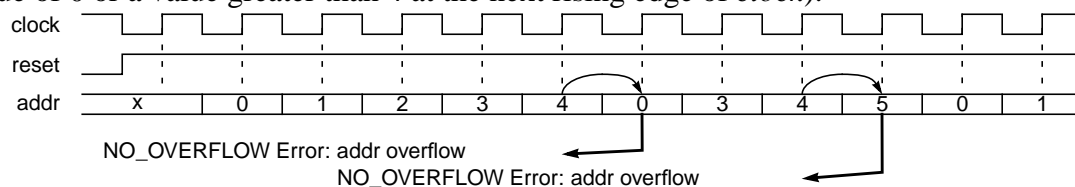

## ovl\_no\_transition

Ensures that the value of an expression does not transition from a start state to the specified next state.

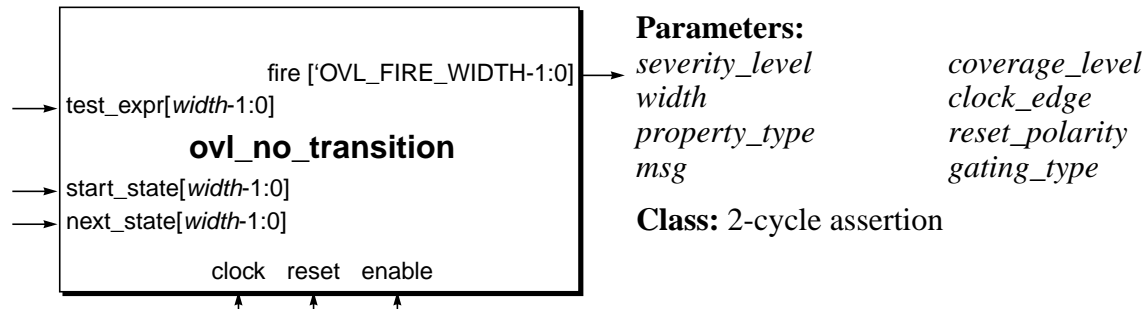

## Syntax

```
ovl_no_transition
  [ #(severity_level, width, property_type, msg, coverage_level,
      clock_edge, reset_polarity, gating_type ) ]
  instance_name (clock, reset, enable, test_expr, start_state, next_state,
                fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>width</i>	Width of the <i>test_expr</i> argument. Default: 1.
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>test_expr</i> [ <i>width</i> -1:0]	Expression that should not transition to <i>next_state</i> on the active edge of <i>clock</i> if its value at the previous active edge of <i>clock</i> is the same as the current value of <i>start_state</i> .
<i>start_state</i> [ <i>width</i> -1:0]	Expression that indicates the start state for the assertion check. If the start state matches the value of <i>test_expr</i> on the previous active edge of <i>clock</i> , the check is performed.
<i>next_state</i> [ <i>width</i> -1:0]	Expression that indicates the invalid next state for the assertion check. If the value of <i>test_expr</i> was <i>start_state</i> at the previous active edge of <i>clock</i> , then the value of <i>test_expr</i> should not equal <i>next_state</i> on the current active edge of <i>clock</i> .
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_no\_transition assertion checker checks the expression *test\_expr* and *start\_state* at each active edge of *clock* to see if they are the same. If so, the checker evaluates and stores the current value of *next\_state*. At the next active edge of *clock*, the checker re-evaluates *test\_expr* to see if its value equals the stored value of *next\_state*. If so, the assertion fails. The checker returns to checking *start\_state* in the current cycle (unless a fatal failure occurred)

The *start\_state* and *next\_state* expressions are verification events that can change. In particular, the same assertion checker can be coded to verify multiple types of transitions of *test\_expr*.

The checker is useful for ensuring certain control structure values (such as counters and finite-state machine values) do not transition to invalid values.

## Assertion Checks

NO_TRANSITION	Expression transitioned from <i>start_state</i> to a value equal to <i>next_state</i> .
---------------	---

## Implicit X/Z Checks

<code>test_expr</code> contains X or Z	Expression value contained X or Z bits.
<code>start_state</code> contains X or Z	Start state value contained X or Z bits.
<code>next_state</code> contains X or Z	Next state value contained X or Z bits.

## Cover Points

<code>cover_start_state</code>	BASIC — Expression assumed a start state value.
--------------------------------	---

## Notes

1. The assertion check compares the current value of `test_expr` with its previous value. Therefore, checking does not start until the second rising clock edge of `clock` after `reset` deasserts.

## See also

[ovl\\_transition](#)

## Example


```
ovl_no_transition #(
    'OVL_ERROR,                // severity_level
    3,                        // width
    'OVL_ASSERT,              // property_type
    "Error: bad state transition", // msg
    'OVL_COVER_DEFAULT,       // coverage_level
    'OVL_POSEDGE,             // clock_edge
    'OVL_ACTIVE_LOW,          // reset_polarity
    'OVL_GATE_CLOCK)         // gating_type

    valid_transition (
        clock,                // clock
        reset,                // reset
        enable,               // enable
        current_state,         // test_expr
        requests > 2 ? 'FULL : 'ONE_IN_Q, // start_state
        'EMPTY,               // next_state
        fire_valid_transition); // fire
```

Ensures that `current_state` does not transition to 'EMPTY improperly. If `requests` is greater than 2 and the `current_state` is 'FULL, `current_state` should not transition to 'EMPTY in the next




cycle. If *requests* is not greater than 2 and *current\_state* is 'ONE\_IN\_Q, *current\_state* should not transition to 'EMPTY in the next cycle.

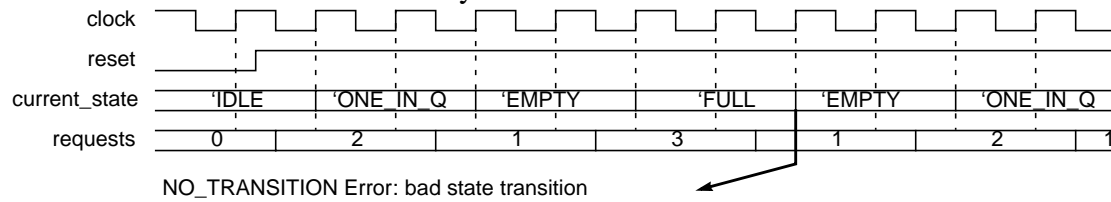

## ovl\_no\_underflow

Ensures that the value of an expression does not underflow.

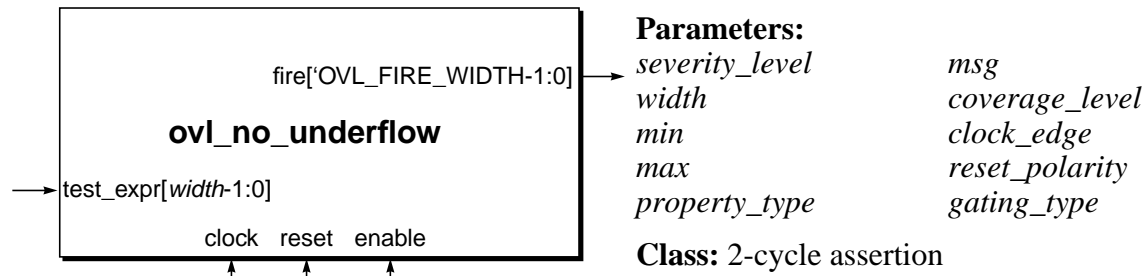

## Syntax

```
ovl_no_underflow
    [ #(severity_level, width, min, max, property_type, msg,
        coverage_level, clock_edge, reset_polarity, gating_type) ]
    instance_name (clock, reset, enable, test_expr, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>width</i>	Width of the <i>test_expr</i> argument. Width must be less than or equal to 32. Default: 1.
<i>min</i>	Minimum value in the test range of <i>test_expr</i> . Default: 0.
<i>max</i>	Maximum value in the test range of <i>test_expr</i> . Default: $2^{**width} - 1$ .
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>test_expr</i> [ <i>width</i> -1:0]	Expression that should not change from a value of <i>min</i> to a value out of range or to a value equal to <i>max</i> .
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_no\_underflow assertion checker checks the expression *test\_expr* at each active edge of *clock* to determine if its value has changed from a value (at the previous active edge of *clock*) that was equal to *min*. If so, the checker verifies that the new value has not underflowed *min*. That is, it verifies the value of *test\_expr* is not less than *min* or greater than or equal to *max* (in which case, the assertion fails).

The checker is useful for verifying counters, where it can ensure the counter does not wrap from the lowest value to the highest value in a specified range. For example, it can be used to check that memory structure pointers do not wrap around. For a more general test for underflow, use ovl\_delta or ovl\_fifo\_index.

## Assertion Checks

NO_UNDERFLOW	Expression changed value from <i>min</i> to a value not in the range <i>min</i> + 1 to <i>max</i> - 1.
--------------	--

## Implicit X/Z Checks

<i>test_expr</i> contains X or Z	Expression value contained X or Z bits.
----------------------------------	---

## Cover Points

<i>cover_test_expr_at_min</i>	BASIC — Expression evaluated to <i>min</i> .
<i>cover_test_expr_at_max</i>	CORNER — Expression evaluated to <i>max</i> .

## Errors

The parameters *min* and *max* must be specified such that *min* is less than or equal to *max*. Otherwise, the assertion fails on each tested clock cycle for which *test\_expr* changed from *max*.

## Notes

1. The assertion check compares the current value of *test\_expr* with its previous value. Therefore, checking does not start until the second rising clock edge of *clock* after *reset* deasserts.

## See also

[ovl\\_delta](#)  
[ovl\\_decrement](#)


[ovl\\_fifo\\_index](#)  
[ovl\\_no\\_overflow](#)

## Example

```
ovl_no_underflow #(
    'OVL_ERROR,                      // severity_level
    3,                               // width
    3,                               // min
    7,                               // max
    'OVL_ASSERT,                    // property_type
    "Error: addr underflow",         // msg
    'OVL_COVER_DEFAULT,             // coverage_level
    'OVL_POSEDGE,                   // clock_edge
    'OVL_ACTIVE_LOW,                // reset_polarity
    'OVL_GATE_CLOCK)                // gating_type


    addr_with_underflow (
        clock,                      // clock
        reset,                      // reset
        enable,                     // enable
        addr,                       // test_expr
        fire_addr_with_underflow ); // fire
```

Ensures that *addr* does not underflow (i.e., change from a value of 3 at the rising edge of *clock* to a value of 7 or a value less than 3 at the next rising edge of *clock*).

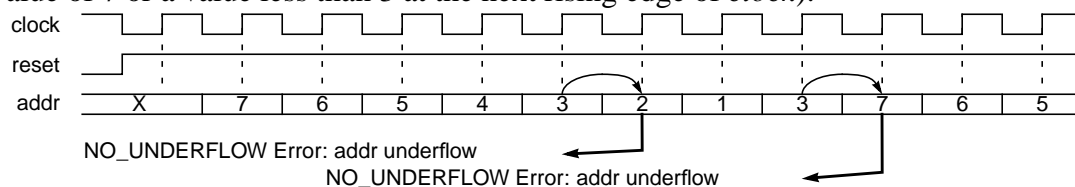

## ovl\_odd\_parity

Ensures that the value of an expression has odd parity.

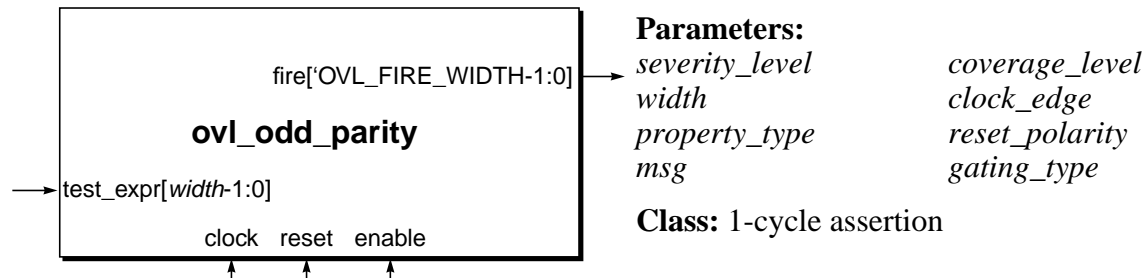

## Syntax

```
ovl_odd_parity
    [#(severity_level, width, property_type, msg, coverage_level,
        clock_edge, reset_polarity, gating_type)]
    instance_name (clock, reset, enable, test_expr, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>width</i>	Width of the <i>test_expr</i> argument. Default: 1.
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.

<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>test_expr</i> [ <i>width</i> -1:0]	Expression that should evaluate to a value with odd parity on the rising clock edge.
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_odd\_parity assertion checker checks the expression *test\_expr* at each active edge of *clock* to verify the expression evaluates to a value that has odd parity. A value has odd parity if the number of bits set to 1 is odd.

The checker is useful for verifying control circuits, for example, it can be used to verify a finite-state machine with error detection. In a datapath circuit the checker can perform parity error checking of address and data buses.

## Assertion Checks

ODD_PARITY	Expression evaluated to a value whose parity is not odd.
------------	--

## Implicit X/Z Checks

<i>test_expr</i> contains X or Z	Expression value contained X or Z bits.
----------------------------------	---

## Cover Points

<i>cover_test_expr_change</i>	SANITY — Expression has changed value.
-------------------------------	--

## See also


[ovl\\_even\\_parity](#)

## Example

```
ovl_odd_parity #(
    'OVL_ERROR,                // severity_level
    8,                          // width
    'OVL_ASSERT,               // property_type
    "Error: data has even parity", // msg
    'OVL_COVER_DEFAULT,        // coverage_level
    'OVL_POSEDGE,              // clock_edge
    'OVL_ACTIVE_LOW,           // reset_polarity
    'OVL_GATE_CLOCK)           // gating_type


    valid_data_odd_parity (
        clock,                  // clock
        reset,                  // reset
        enable,                 // enable
        data,                   // test_expr
        fire_valid_data_odd_parity ); // fire
```

Ensures that *data* has odd parity at each rising edge of *clock*.

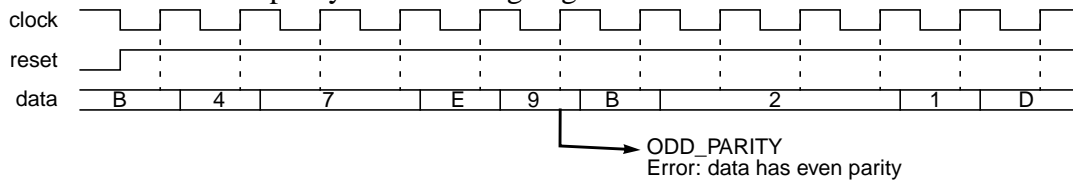

## ovl\_one\_cold

Ensures that the value of an expression is one-cold (or equals an inactive state value, if specified).

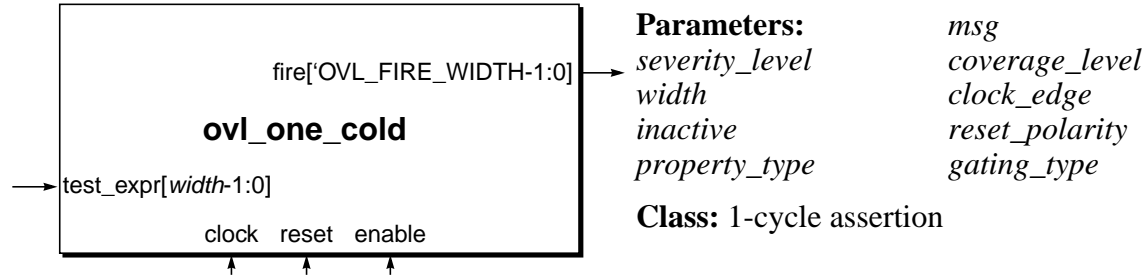

## Syntax

```

ovl_one_cold
    [#(severity_level, width, inactive, property_type, msg,
        coverage_level, clock_edge, reset_polarity, gating_type)]
    instance_name (clock, reset, enable, test_expr, fire);

```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: ‘OVL_SEVERITY_DEFAULT (‘OVL_ERROR).
<i>width</i>	Width of the <i>test_expr</i> argument. Default: 32.
<i>inactive</i>	Inactive state of <i>test_expr</i> : ‘OVL_ALL_ZEROS, ‘OVL_ALL_ONES or ‘OVL_ONE_COLD. Default: ‘OVL_ONE_COLD.
<i>property_type</i>	Property type. Default: ‘OVL_PROPERTY_DEFAULT (‘OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: ‘OVL_MSG_DEFAULT (“VIOLATION”).
<i>coverage_level</i>	Coverage level. Default: ‘OVL_COVER_DEFAULT (‘OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: ‘OVL_CLOCK_EDGE_DEFAULT (‘OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: ‘OVL_RESET_POLARITY_DEFAULT (‘OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: ‘OVL_GATING_TYPE_DEFAULT (‘OVL_GATE_CLOCK).



## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>test_expr</i> [ <i>width</i> -1:0]	Expression that should evaluate to a one-cold or inactive value on the rising clock edge.
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The `ovl_one_cold` assertion checker checks the expression *test\_expr* at each active edge of *clock* to verify the expression evaluates to a one-cold or inactive state value. A one-cold value has exactly one bit set to 0. The inactive state value for the checker is set by the *inactive* parameter. Choices are: 'OVL\_ALL\_ZEROS (e.g., 4'b0000), 'OVL\_ALL\_ONES (e.g., 4'b1111) or 'OVL\_ONE\_COLD. The default *inactive* parameter value is 'OVL\_ONE\_COLD, which indicates *test\_expr* has no inactive state (so only a one-cold value is valid for each check).

The checker is useful for verifying control circuits, for example, it can ensure that a finite-state machine with one-cold encoding operates properly and has exactly one bit asserted low. In a datapath circuit the checker can ensure that the enabling conditions for a bus do not result in bus contention.

## Assertion Checks

ONE_COLD	Expression assumed an active state with multiple bits set to 0.
----------	---

## Implicit X/Z Checks

<i>test_expr</i> contains X or Z	Expression value contained X or Z bits.
----------------------------------	---

## Cover Points

<i>cover_test_expr_change</i>	SANITY — Expression has changed value.
<i>cover_all_one_colds_checked</i>	CORNER — Expression evaluated to all possible combinations of one-cold values.
<i>cover_test_expr_all_zeros</i>	CORNER — Expression evaluated to the inactive state and the <i>inactive</i> parameter was set to 'OVL_ALL_ZEROS.
<i>cover_test_expr_all_ones</i>	CORNER — Expression evaluated to the inactive state and the <i>inactive</i> parameter was set to 'OVL_ALL_ONES.

## Notes

1. By default, the `ovl_one_cold` assertion is pessimistic and the assertion fails if `test_expr` is active and multiple bits are not 1 (i.e. equals 0, X, Z, etc.). However, if `'OVL_XCHECK_OFF` is set, the assertion fails if and only if `test_expr` is active and multiple bits are 0.

## See also


[ovl\\_one\\_hot](#)[ovl\\_zero\\_one\\_hot](#)

## Examples

```
ovl_one_cold #(
    'OVL_ERROR,                // severity_level
    4,                          // width
    'OVL_ONE_COLD,             // inactive (no inactive state)
    'OVL_ASSERT,               // property_type
    "Error: sel_n not one-cold", // msg
    'OVL_COVER_DEFAULT,        // coverage_level
    'OVL_POSEDGE,              // clock_edge
    'OVL_ACTIVE_LOW,           // reset_polarity
    'OVL_GATE_CLOCK)           // gating_type

    valid_sel_n_one_cold (
        clock,                  // clock
        reset,                  // reset
        enable,                 // enable
        sel_n,                  // test_expr
        fire_valid_sel_n_one_cold ); // fire
```

Ensures that `sel_n` is one-cold at each rising edge of `clock`.

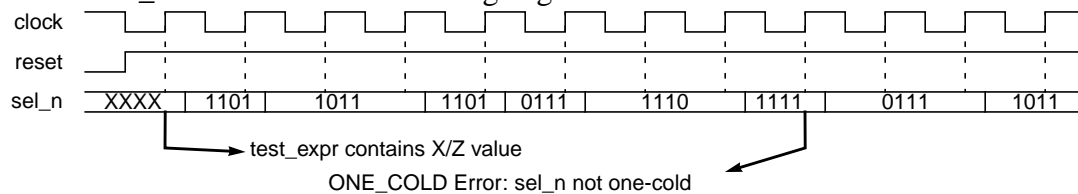


```

ovl_one_cold #(
    `OVL_ERROR,                // severity_level
    4,                          // width
    `OVL_ALL_ONES,             // inactive
    `OVL_ASSERT,               // property_type
    "Error: sel_n not one-cold or inactive", // msg
    `OVL_COVER_DEFAULT,        // coverage_level
    `OVL_POSEDGE,              // clock_edge
    `OVL_ACTIVE_LOW,           // reset_polarity
    `OVL_GATE_CLOCK)           // gating_type

    valid_sel_n_one_cold (
        clock,                  // clock
        reset,                  // reset
        enable,                 // enable
        sel_n,                  // test_expr
        fire_valid_sel_n_one_cold ); // fire

```

Ensures that *sel\_n* is one-cold or inactive (4'b1111) at each rising edge of *clock*.

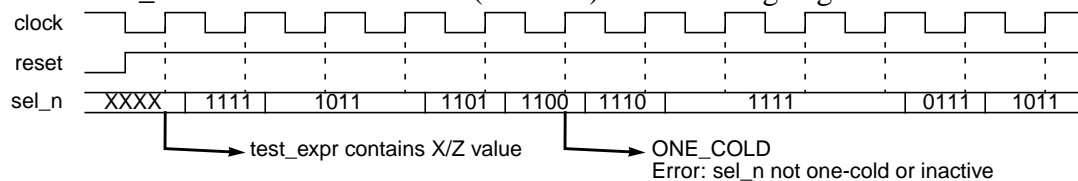


```

ovl_one_cold #(
    `OVL_ERROR,                // severity_level
    4,                          // width
    `OVL_ALL_ZEROS,            // inactive
    `OVL_ASSERT,               // property_type
    "Error: sel_n not one-cold", // msg
    `OVL_COVER_DEFAULT,        // coverage_level
    `OVL_POSEDGE,              // clock_edge
    `OVL_ACTIVE_LOW,           // reset_polarity
    `OVL_GATE_CLOCK)           // gating_type

    valid_sel_n_one_cold (
        clock,                  // clock
        reset,                  // reset
        enable,                 // enable
        sel_n,                  // test_expr
        fire_valid_sel_n_one_cold ); // fire


```

Ensures that *sel\_n* is one-cold or inactive (4'b0000) at each rising edge of *clock*.

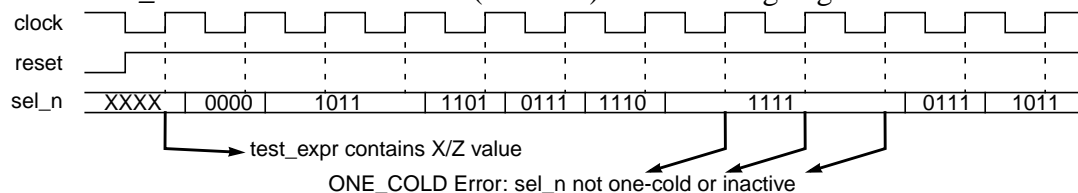

## ovl\_one\_hot

Ensures that the value of an expression is one-hot.

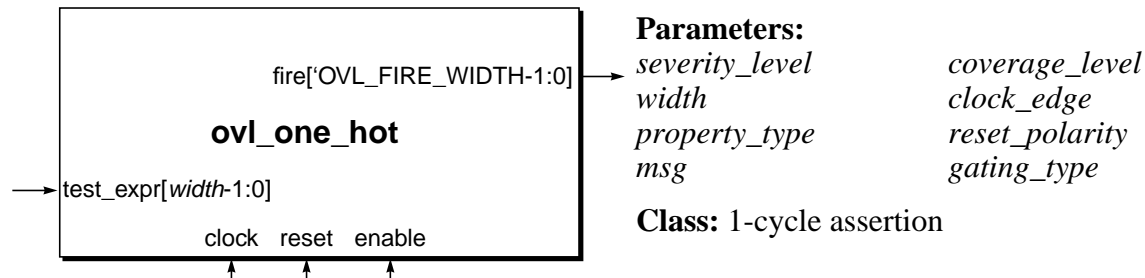

## Syntax

```
ovl_one_hot
  [#(severity_level, width, property_type, msg, coverage_level,
    clock_edge, reset_polarity, gating_type)]
  instance_name (clock, reset, enable, test_expr, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>width</i>	Width of the <i>test_expr</i> argument. Default: 32.
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.

<code>enable</code>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<code>test_expr[width-1:0]</code>	Expression that should evaluate to a one-hot value on the rising clock edge.
<code>fire</code> <code>['OVL_FIRE_WIDTH-1:0]</code>	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The `ovl_one_hot` assertion checker checks the expression *test\_expr* at each active edge of *clock* to verify the expression evaluates to a one-hot value. A one-hot value has exactly one bit set to 1.

The checker is useful for verifying control circuits, for example, it can ensure that a finite-state machine with one-hot encoding operates properly and has exactly one bit asserted high. In a datapath circuit the checker can ensure that the enabling conditions for a bus do not result in bus contention.

## Assertion Checks

<code>ONE_HOT</code>	Expression evaluated to zero or to a value with multiple bits set to 1.
----------------------	---

## Implicit X/Z Checks

<code>test_expr</code> contains X or Z	Expression value contained X or Z bits.
--	---

## Cover Points

<code>cover_test_expr_change</code>	SANITY — Expression has changed value.
<code>cover_all_one_hots_checked</code>	CORNER — Expression evaluated to all possible combinations of one-hot values.

## Notes

1. By default, the `ovl_one_hot` assertion is optimistic and the assertion fails if *test\_expr* is zero or has multiple bits not set to 0 (i.e. equals 1, X, Z, etc.). However, if 'OVL\_XCHECK\_OFF is set, the `ONE_HOT` assertion fails if and only if *test\_expr* is zero or has multiple bits that are 1.

## See also

[ovl\\_one\\_cold](#)

[ovl\\_zero\\_one\\_hot](#)

## Example


```

ovl_one_hot #(
    'OVL_ERROR,                // severity_level
    4,                          // width
    'OVL_ASSERT,               // property_type
    "Error: sel not one-hot",   // msg
    'OVL_COVER_DEFAULT,        // coverage_level
    'OVL_POSEDGE,              // clock_edge
    'OVL_ACTIVE_LOW,           // reset_polarity
    'OVL_GATE_CLOCK)           // gating_type

    valid_sel_one_hot (
        clock,                  // clock
        reset,                  // reset
        enable,                 // enable
        sel,                    // test_expr
        fire_valid_sel_one_hot ); // fire


```

Ensures that *sel* is one-hot at each rising edge of *clock*.

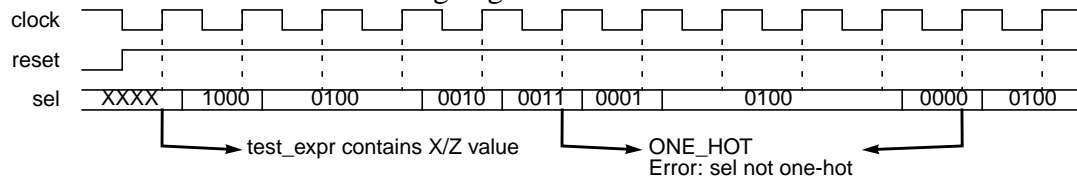

# ovl\_proposition

Ensures that the value of an expression is always combinationaly TRUE.

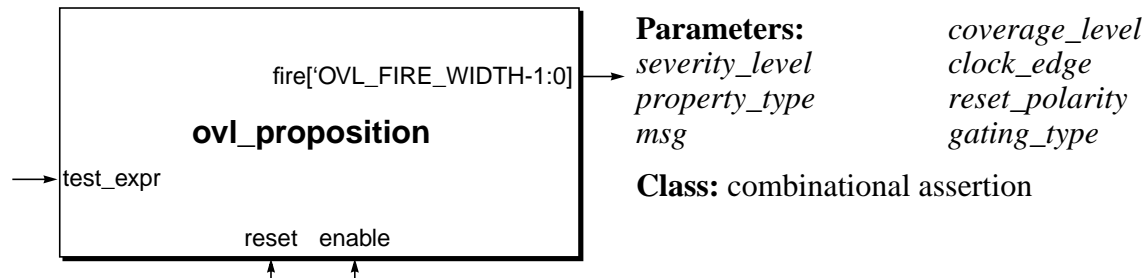

## Syntax

```
ovl_proposition
  [#(severity_level, property_type, msg, coverage_level, clock_edge,
    reset_polarity, gating_type)]
  instance_name (reset, enable, test_expr, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Ignored parameter.
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>test_expr</i>	Expression that should always evaluate to TRUE.

*fire*  
[ 'OVL\_FIRE\_WIDTH-1:0 ]      Fire output. Assertion failure when *fire*[0] is TRUE. X/Z check failure when *fire*[1] is TRUE. Cover event when *fire*[2] is TRUE.

## Description

The ovl\_proposition assertion checker checks the single-bit expression *test\_expr* when it changes value to verify the expression evaluates to TRUE.

## Assertion Checks

PROPOSITION      Expression evaluated to FALSE.

## Implicit X/Z Checks

*test\_expr* contains X or Z      Expression value was X or Z.

## Cover Points

none

## Notes

1. Formal verification tools and hardware emulation/acceleration systems might ignore this checker. To verify propositional properties with these tools, consider using ovl\_always.

## See also

[ovl\\_always](#)  
[ovl\\_always\\_on\\_edge](#)

[ovl\\_implication](#)  
[ovl\\_never](#)


## Example

```
ovl_proposition #(
    'OVL_ERROR,                // severity_level
    'OVL_ASSERT,               // property_type
    "Error: current_addr changed while bus
    granted",                  // msg
    'OVL_COVER_DEFAULT,       // coverage_level
    'OVL_POSEDGE,              // clock_edge
    'OVL_ACTIVE_LOW,          // reset_polarity
    'OVL_GATE_CLOCK)          // gating_type

    valid_current_addr (
        bus_gnt,               // reset
        enable,                // enable
        current_addr == addr,   // test_expr
        fire_valid_current_addr ); // fire
```




Ensures that *current\_addr* equals *addr* while *bus\_gnt* is TRUE.

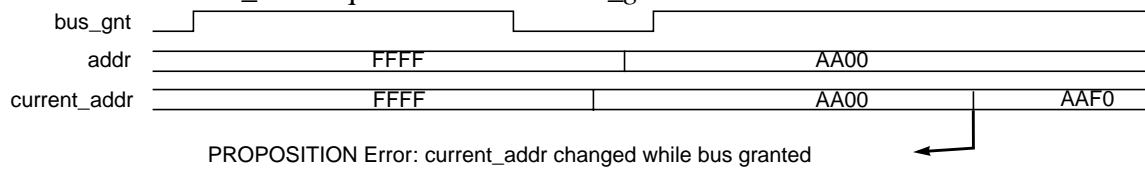

## ovl\_quiescent\_state

Ensures that the value of a specified state expression equals a corresponding check value if a specified sample event has transitioned to TRUE.

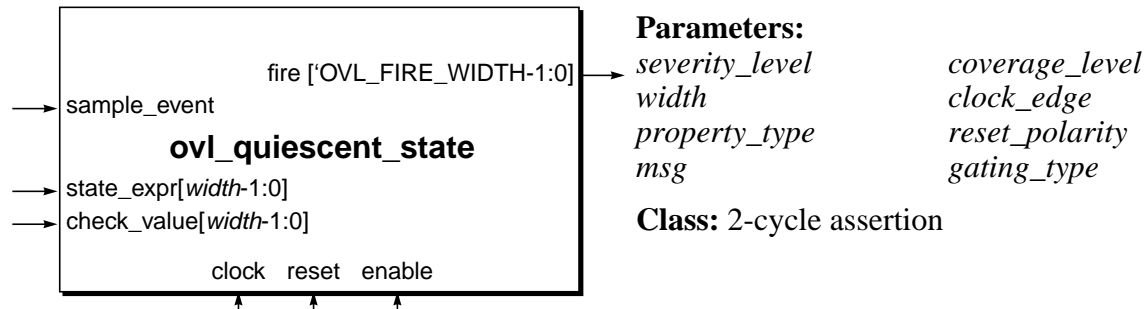

## Syntax

```
ovl_quiescent_state
    [#(severity_level, width, property_type, msg, coverage_level,
        clock_edge, reset_polarity, gating_type)]
    instance_name (clock, reset, enable, state_expr, check_value,
        sample_event, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>width</i>	Width of the <i>state_expr</i> and <i>check_value</i> arguments. Default: 1.
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>state_expr</i> [ <i>width</i> -1:0]	Expression that should have the same value as <i>check_value</i> on the rising edge of <i>clock</i> if <i>sample_event</i> has just transitioned to TRUE (rising edge).
<i>check_value</i> [ <i>width</i> -1:0]	Expression that indicates the value <i>state_expr</i> should have on the active edge of <i>clock</i> if <i>sample_event</i> has just transitioned to TRUE (rising edge).
<i>sample_event</i>	Expression that initiates the quiescent state check when its value transitions to TRUE.
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The *ovl\_quiescent\_state* assertion checker checks the expression *sample\_event* at each active edge of *clock* to see if its value has transitioned to TRUE (i.e., its current value is TRUE and its value on the previous active edge of *clock* is not TRUE). If so, the checker verifies that the current value of *state\_expr* equals the current value of *check\_value*. The assertion fails if *state\_expr* is not equal to *check\_value*.

The *state\_expr* and *check\_value* expressions are verification events that can change. In particular, the same assertion checker can be coded to compare different check values (if they are checked in different cycles).

The checker is useful for verifying the states of state machines when transactions complete.

## Assertion Checks

QUIESCENT_STATE	The <i>sample_event</i> expression transitioned to TRUE, but the values of <i>state_expr</i> and <i>check_value</i> were not the same.
-----------------	--

## Implicit X/Z Checks

<code>state_expr</code> contains X or Z	State expression value contained X or Z bits.
<code>check_value</code> contains X or Z	Check value expression value contained X or Z bits.
<code>sample_event</code> contains X or Z	Sample event value was X or Z.
<code>'OVL_END_OF_SIMULATION</code> contains X or Z	State expression value contained X or Z bits at the end of simulation ('OVL_END_OF_SIMULATION asserted).

## Cover Points

none

## Notes

1. The assertion check compares the current value of *sample\_event* with its previous value. Therefore, checking does not start until the second rising clock edge of *clock* after *reset* deasserts.
2. The checker recognizes the Verilog macro `'OVL_END_OF_SIMULATION=eos_signal`. If set, the quiescent state check is also performed at the end of simulation, when *eos\_signal* asserts (regardless of the value of *sample\_event*).
3. Formal verification tools and hardware emulation/acceleration systems might ignore this checker.

## See also

[ovl\\_no\\_transition](#)

[ovl\\_transition](#)

## Example


```

ovl_quiescent_state #(
    'OVL_ERROR,                // severity_level
    4,                          // width
    'OVL_ASSERT,               // property_type
    "Error: illegal end of transaction", // msg
    'OVL_COVER_DEFAULT,        // coverage_level
    'OVL_POSEDGE,               // clock_edge
    'OVL_ACTIVE_LOW,           // reset_polarity
    'OVL_GATE_CLOCK)           // gating_type

valid_end_of_transaction_state (
    clock,                      // clock
    reset,                      // reset
    enable,                     // enable
    transaction_state,          // state_expr
    prev_tr == 'TR_READ ? 'TR_IDLE : 'TR_WAIT // check_value
    end_of_transaction,         // sample_event
    fire_valid_end_of_transaction_state ); // fire


```

Ensures that whenever *end\_of\_transaction* asserts at the completion of each transaction, the value of *transaction\_state* is 'TR\_IDLE (if prev\_tr is 'TR\_READ) or 'TR\_WAIT (otherwise).

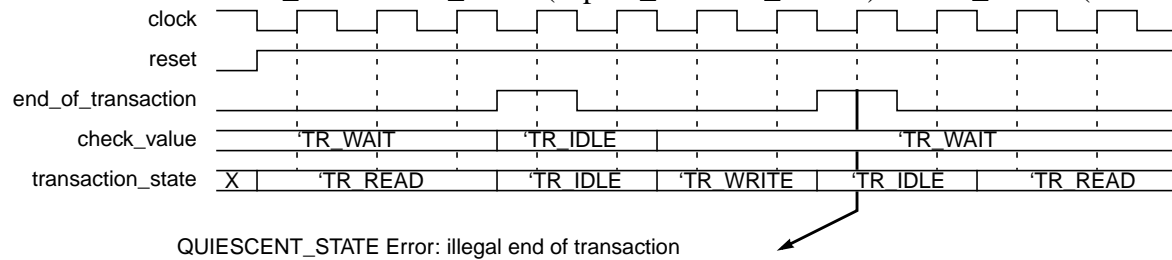

## ovl\_range

Ensures that the value of an expression is in a specified range.

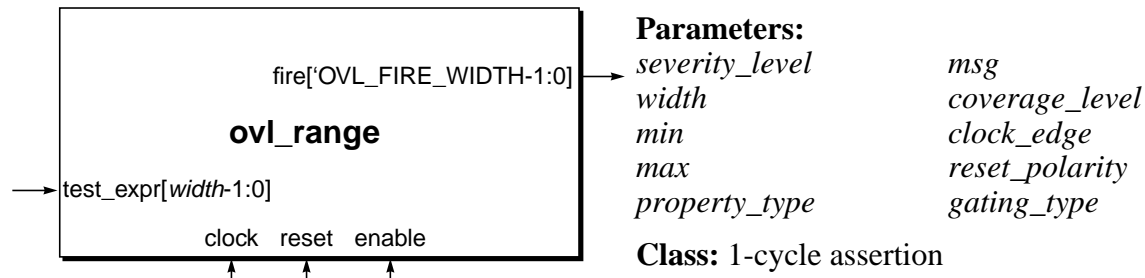

## Syntax

```
ovl_range
    [#(severity_level, width, min, max, property_type, msg,
        coverage_level, clock_edge, reset_polarity, gating_type)]
    instance_name (clock, reset, enable, test_expr, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>width</i>	Width of the <i>test_expr</i> argument. Default: 1.
<i>min</i>	Minimum value allowed for <i>test_expr</i> . Default: 0.
<i>max</i>	Maximum value allowed for <i>test_expr</i> . Default: $2^{width} - 1$ .
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>test_expr</i> [ <i>width</i> -1:0]	Expression that should evaluate to a value in the range from <i>min</i> to <i>max</i> (inclusive) on the rising clock edge.
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_range assertion checker checks the expression *test\_expr* at each active edge of *clock* to verify the expression falls in the range from *min* to *max*, inclusive. The assertion fails if *test\_expr* < *min* or *max* < *test\_expr*.

The checker is useful for ensuring certain control structure values (such as counters and finite-state machine values) are within their proper ranges. The checker is also useful for ensuring datapath variables and expressions are in legal ranges.

## Assertion Checks

RANGE	Expression evaluated outside the range <i>min</i> to <i>max</i> .
-------	---

## Implicit X/Z Checks

<i>test_expr</i> contains X or Z	Expression value contained X or Z bits.
----------------------------------	---

## Cover Points

<i>cover_cover_test_expr_change</i>	BASIC — Expression changed value.
<i>cover_test_expr_at_min</i>	CORNER — Expression evaluated to <i>min</i> .
<i>cover_test_expr_at_max</i>	CORNER — Expression evaluated to <i>max</i> .

## Errors

The parameters *min* and *max* must be specified such that *min* is less than or equal to *max*. Otherwise, the assertion fails on each tested clock cycle.

## See also

[ovl\\_always](#)  
[ovl\\_implication](#)


[ovl\\_never](#)  
[ovl\\_proposition](#)

## Example

```
ovl_range #(
    'OVL_ERROR,                // severity_level
    3,                          // width
    2,                          // min
    5,                          // max
    'OVL_ASSERT,               // property_type
    "Error: sel_high - sel_low not within 2 to 5", // msg
    'OVL_COVER_DEFAULT,        // coverage_level
    'OVL_POSEDGE,               // clock_edge
    'OVL_ACTIVE_LOW,            // reset_polarity
    'OVL_GATE_CLOCK)            // gating_type

valid_sel (
    clock,                      // clock
    reset,                      // reset
    enable,                     // enable
    sel_high - sel_low,         // test_expr
    fire_valid_sel );           // fire
```


Ensures that  $(sel\_high - sel\_low)$  is in the range 2 to 5 at each rising edge of *clock*.

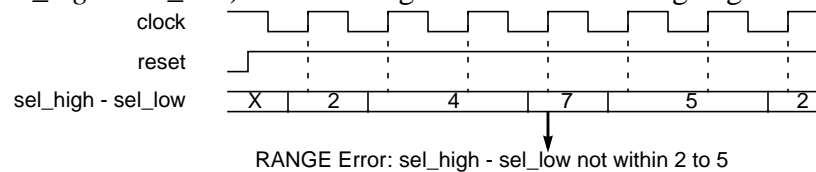



## ovl\_reg\_loaded

Ensures that a register is loaded with source data within a specified time window.

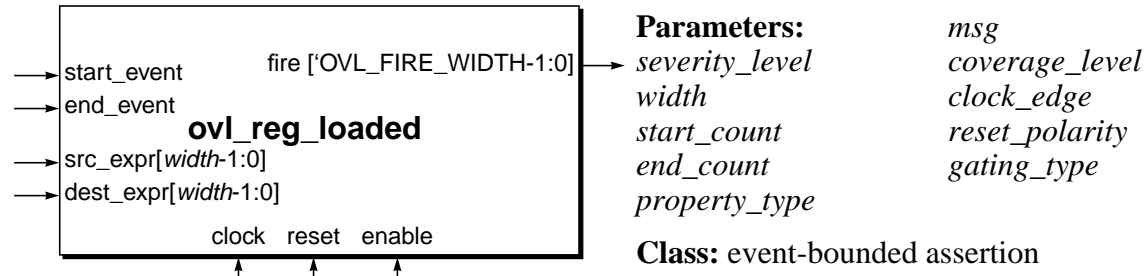

### Syntax

```
ovl_reg_loaded
  [#(severity_level, width, start_count, end_count, property_type,
    msg, coverage_level, clock_edge, reset_polarity, gating_type)]
  instance_name (clock, reset, enable, start_event, end_event, src_expr,
    dest_expr, fire);
```

### Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>width</i>	Width of the <i>src_expr</i> and <i>dest_expr</i> registers. Default: 4.
<i>start_count</i>	Number of cycles after <i>start_event</i> asserts that the time window opens. Default: 1.
<i>end_count</i>	Number of cycles after <i>start_event</i> asserts that the time window closes (if it is still open). If <i>end_count</i> is 0, only the <i>end_event</i> signal is used to define the time windows. Default: 10.
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>start_event</i>	Start event signal for the reg_loaded check. If the time window is closed (or closing), the rising edge of <i>start_event</i> initiates a new check. The time window opens <i>start_count</i> cycles later.
<i>end_event</i>	End event signal for the reg_loaded check. If the time window is open (or opening), the rising edge of <i>end_event</i> terminates the current check, closes the window and issues a reg_loaded violation (if <i>dest_expr</i> loaded the value of <i>src_expr</i> in that cycle, the time window would be closing).
<i>src_expr</i> [width-1:0]	Source register containing the values that load the <i>dest_expr</i> register. For each reg_loaded check, the source value in <i>src_expr</i> is sampled in the same cycle that <i>start_event</i> asserts.
<i>dest_expr</i> [width-1:0]	Destination register for the values in <i>src_expr</i> .
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_reg\_loaded assertion checker checks *start\_event* at each active edge of *clock*. If *start\_event* has just transitioned to TRUE, the checker evaluates the source register (*src\_expr*) and initiates a reg\_loaded check to verify that this value gets loaded into the destination register (*dest\_expr*) in the specified time window.

If *start\_count* is 0, the time window opens immediately. Otherwise, the time window opens *start\_count* cycles after the current cycle. The values of *dest\_expr* in the cycles between the start of the reg\_loaded check and the time window opening are not relevant. When the time window opens, the checker evaluates *dest\_expr* and re-evaluates *dest\_expr* each subsequent cycle. Once the value of *dest\_expr* equals the captured value of *src\_expr*, the current reg\_loaded check terminates successfully. The time window closes when one of the following occur:

- The current cycle is *end\_count* cycles after *start\_event* asserted (*end\_count* > 0).
- The *end\_event* signal is TRUE.

If *dest\_expr* has not loaded the *src\_expr* value by the cycle the time window closes, a reg\_loaded violation occurs.

## Assertion Checks

REG\_LOADED

Destination register did not equal the value of the source register in the specified time window.

*end\_count* > 0

Either *end\_event* became TRUE or *end\_count* cycles passed after the rising edge of *start\_event* and *dest\_expr* was still not equal to the captured value of *src\_expr* (ignoring values of *dest\_expr* in the *start\_count* cycles after *start\_event* asserted).

Destination expression did not equal the value of the source expression in the time window that ended when 'end\_event' asserted.

*end\_count* = 0

*End\_event* became TRUE after the rising edge of *start\_event* and *dest\_expr* was still not equal to the captured value of *src\_expr* (ignoring values of *dest\_expr* in the *start\_count* cycles after *start\_event* asserted).

## Implicit X/Z Checks

*start\_event* contains X or Z

Start event signal was X or Z.

*end\_event* contains X or Z

End event signal was X or Z.

*src\_expr* contains X or Z

Source expression contained X or Z bits.

*dest\_expr* contains X or Z

Destination expression contained X or Z bits.

## Cover Points

cover\_values\_checked

SANITY — Number of times a reg\_loaded check was initiated (i.e., number of cycles *start\_event* transitioned to TRUE).

cover\_reg\_loaded

BASIC — Number of times a reg\_loaded check was terminated successfully (i.e, *dest\_expr* was loaded with *src\_expr* in the time window).

cover\_end\_in\_window

BASIC — Number of time windows in which *end\_event* asserted (whether or not *dest\_expr* loaded *src\_expr* in the window). Not meaningful if *end\_count* = 0.

cover\_no\_end\_in\_window

BASIC — Number of time windows in which *end\_event* did not assert (whether or not *dest\_expr* loaded *src\_expr* in the window). Not meaningful if *end\_count* = 0.


cover\_load\_at\_start\_count

CORNER — Number of times *dest\_expr* loaded *src\_expr* exactly *start\_count* cycles after *start\_event* asserted.

cover_load_at_stop_count	CORNER — Number of times <i>dest_expr</i> loaded <i>src_expr</i> exactly <i>end_count</i> cycles after <i>start_event</i> asserted. Not meaningful if <i>end_count</i> = 0.
observed_load_times	STATISTIC — Reports the load times (in cycles from asserting <i>start_event</i> to loading <i>src_expr</i> into <i>dest_expr</i> ) that occurred at least once.

## ovl\_req\_ack\_unique

Ensures every request receives a corresponding acknowledge in a specified time window.

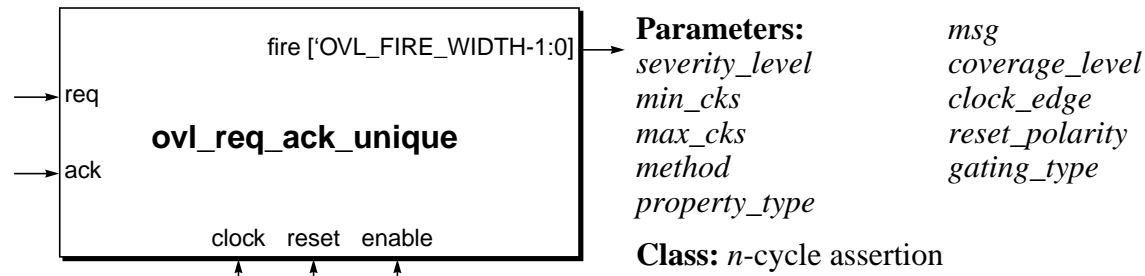

## Syntax

```
ovl_req_ack_unique
  [#(severity_level, min_cks, max_cks, method, property_type, msg,
    coverage_level, clock_edge, reset_polarity, gating_type)]
  instance_name (clock, reset, enable, req, ack, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>min_cks</i>	Minimum number of clock cycles after <i>req</i> asserts that its corresponding acknowledge can occur. Default: 1
<i>max_cks</i>	Maximum number of clock cycles after <i>req</i> asserts that its corresponding acknowledge can occur. Default: 15.
<i>method</i>	Method used to track and correlate request/acknowledge pairs. <i>method</i> = 0 (Default) Method suitable for a short time window ( <i>max_cks</i> ≤ 15). Uses internal IDs for requests. For each request, generates <i>max_cks</i> properties. <i>method</i> = 1 Method suitable for a long time window ( <i>max_cks</i> > 15). Uses time stamps (computed mod 2 <i>max_cks</i> ) to identify requests. To process an acknowledge, the time stamp for the request at the front of the queue is used to verify that the acknowledge meets timing requirements.
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).

<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>req</i>	Request signal.
<i>ack</i>	Acknowledgment signal.
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_req\_ack\_unique assertion checker checks *req* and *ack* at each active edge of *clock*. If *req* is TRUE, a request becomes outstanding immediately. The checker tracks outstanding requests on a first-in first-out basis to verify the specified request/acknowledge handshake protocol is obeyed.

The protocol ensures each request has an acknowledgement that occurs in the time window that opens *min\_cks* after the request (i.e., when the request becomes outstanding) and closes *max\_cks* after the request. When *ack* is TRUE, the oldest outstanding request is checked. If this request has not been outstanding for at least *min\_cks* cycles, the *ack* is ignored. Otherwise, the request is removed from the outstanding requests FIFO and “matched” with the current acknowledge. The checker detects the following violations:

- If *ack* is TRUE and no requests are outstanding, a no\_extraneous\_ack violation occurs.
- If a request is not acknowledged in its time window, an ack\_timeout violation occurs.
- If *max\_cks* requests are outstanding, additional requests cannot become outstanding. If a request occurs (without a simultaneous acknowledge), a max\_outstanding\_req violation occurs and the request is ignored.

To help collect coverage data, the checker tracks individual requests and their acknowledgements (up to the maximum outstanding requests limit, which is *max\_cks* requests).

But the larger *max\_cks* is, the greater the decrease in performance. To resolve this problem, the checker can be configured to a second method of tracking request/acknowledge pairs by setting the *method* parameter to 1. However with this method, the checker does not collect some coverage data.

## Assertion Checks

NO_EXTRANEIOUS_ACK	Acknowledge received when no requests were outstanding. No requests were outstanding and <i>ack</i> was TRUE (and if <i>min_cks</i> = 0, <i>req</i> was FALSE).
ACK_TIMEOUT	Acknowledge not received in time window. A request was pending for <i>max_cks</i> cycles and did not receive its acknowledge in the last cycle of its time window.
MAX_OUTSTANDING_REQ	Maximum number of requests were outstanding when an additional request was issued. <i>Req</i> was TRUE and <i>ack</i> was FALSE, but <i>max_cks</i> requests were outstanding.

## Implicit X/Z Checks


<i>req</i> contains X or Z	Request signal was X or Z.
<i>ack</i> contains X or Z	Acknowledge signal was X or Z.

## Cover Points

<i>cover_requests</i>	SANITY — Number of cycles <i>req</i> asserted.
<i>cover_acknowledgements</i>	SANITY — Number of cycles <i>ack</i> asserted.
<i>cover_ack_at_min_cks</i>	CORNER — Number of times acknowledge was received <i>min_cks</i> cycles after its request was issued. Not meaningful if <i>method</i> = 1.
<i>cover_ack_at_max_cks</i>	CORNER — Number of times acknowledge was received <i>max_cks</i> cycles after its request was issued. Not meaningful if <i>method</i> = 1.
<i>observed_ack_times</i>	STATISTIC — Reports the request-to-acknowledge times (in cycles) that occurred at least once. Not meaningful if <i>method</i> = 1.
<i>observed_outstanding_requests</i>	STATISTIC — Reports the number of cycles in which exactly <i>index</i> requests become outstanding, for each <i>index</i> in the range [0: <i>max_cks</i> ] (except for <i>index</i> = 0, which counts all cycles that no request was outstanding). Not meaningful if <i>method</i> = 1.

## ovl\_req\_requires

Ensures that every request event initiates a valid request-response event sequence that finishes within a specified time window.

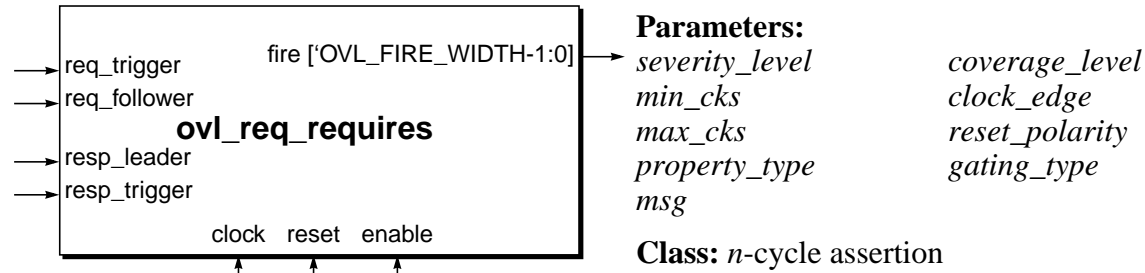

## Syntax

```
ovl_req_requires
  [#(severity_level, min_cks, max_cks, property_type, msg,
    coverage_level, clock_edge, reset_polarity, gating_type)]
  instance_name (clock, reset, enable, req_trigger, req_follower,
    resp_leader, resp_trigger, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>min_cks</i>	Minimum number of clock cycles after <i>req_trigger</i> is TRUE that the event sequence can finish. Value of <i>min_cks</i> must be > 0. Default: 1.
<i>max_cks</i>	Maximum number of clock cycles after <i>req_trigger</i> is TRUE that the event sequence should finish. The special value 0 selects no upper bound. If <i>max_cks</i> ≠ 0, then <i>max_cks</i> must be <i>min_cks</i> . Default: 0.
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).



*gating\_type* Gating behavior of the checker when *enable* is FALSE. Default: 'OVL\_GATING\_TYPE\_DEFAULT ('OVL\_GATE\_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>req_trigger</i>	Request trigger signal. If <i>req_trigger</i> is TRUE, the checker initiates a new check and its corresponding time window opens <i>min_cks</i> cycles later.
<i>req_follower</i>	Request follower signal. A request event finishes at the first rising edge of <i>req_follower</i> after <i>req_trigger</i> was TRUE.
<i>resp_leader</i>	Response leader signal. The first rising edge of <i>resp_leader</i> in a cycle after the request event initiates the response event.
<i>resp_trigger</i>	Response trigger signal. The response event finishes at the first rising edge of <i>resp_trigger</i> in the same or subsequent cycle as the rising edge of <i>resp_leader</i> . This event must be in the time window from <i>min_cks</i> to <i>max_cks</i> cycles after <i>req_trigger</i> was TRUE.
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_req\_requires assertion checker checks *req\_trigger* at each active edge of *clock*. If *req\_trigger* is TRUE, a req\_requires check is initiated. The checker verifies that a semaphore request-response event sequence transpires with the last event occurring within the time window specified by [*max\_cks*:*min\_cks*]. The event sequence must have the following characteristics:

- When *req\_trigger* is TRUE: *req\_follower*, *resp\_leader*, *resp\_trigger* are TRUE in sequence.
- Each event happens at the active clock edge at which the first occurrence of its signal is TRUE following the previous event in the sequence.
- The sequence has the following timing relations:

$$t_{req\_trigger} \leq t_{req\_follower} < t_{resp\_leader} \leq t_{resp\_trigger}$$

That is, the *req\_trigger* and *req\_follower* events can occur in the same cycle and the *resp\_leader* and *resp\_trigger* events can occur in the same cycle, but the *resp\_leader* event must be after the *req\_follower* event.

A *req\_requires* check violation occurs if one of the following cases arises:

- The semaphore event sequence finishes before the [*min\_cks*:*max\_cks*] time window opens.
- A cycle is reached at which the checker determines the semaphore event sequence cannot finish within the [*min\_cks*:*max\_cks*] time window.
- The [*min\_cks*:*max\_cks*] time window closes, but the semaphore event sequence did not finish.

The default value of *max\_cks* is 0, which sets no upper bound for the time windows. In this case, a *req\_requires* violation occurs only when a sequence finishes before *min\_cks* cycles after the *req\_trigger* event. The default value of *min\_cks* is 1, so if both *min\_cks* and *max\_cks* are left set to their defaults, the *req\_requires* check cannot be violated.

## Assertion Checks

REQ\_REQUIRES

A request-response event sequence started, but did not finish when the specified time window was open.  
*max\_cks* > 0

*Req\_trigger* was TRUE, so a request-response event sequence started. But, either the sequence finished before *min\_cks* cycles, or it could not finish by *max\_cks* cycles.

A request-response event sequence started, but it finished before the specified time window opened.  
*max\_cks* = 0

*Req\_trigger* was TRUE, so a request-response event sequence started, but the sequence finished before *min\_cks* cycles.

## Implicit X/Z Checks

*req\_trigger* contains X or Z      Request trigger was X or Z.

*req\_follower* contains X or Z      Request follower was X or Z.

*resp\_leader* contains X or Z      Response leader was X or Z.

*resp\_trigger* contains X or Z      Response trigger was X or Z.


## Cover Points

If overlapping request-response sequences are triggered, the coverage data might be inaccurate because the cover group vectors do not reflect which responses belong to which requests.

cover_requests	SANITY — Number of cycles <i>req_trigger</i> was TRUE.
cover_request_followers	BASIC — Number of times <i>req_trigger</i> was TRUE and <i>req_follower</i> was TRUE in the same or subsequent cycle.
cover_response_leaders	BASIC — Number of times <i>req_trigger</i> was TRUE; <i>req_follower</i> was TRUE in the same or subsequent cycle; and then <i>resp_leader</i> was TRUE in a subsequent cycle.
cover_req_requires	BASIC — Number of valid request-response event sequences.
cover_resp_trigger_at_min_cks	CORNER — Number of valid request-response event sequences that finished in <i>min_cks</i> cycles.
cover_resp_trigger_at_max_cks	CORNER — Number of valid request-response event sequences that finished in <i>max_cks</i> cycles.
cover_req_trigger_to_resp_trigger	STATISTIC — Reports the request-trigger to response-trigger times (in cycles) that occurred at least once.
cover_req_trigger_to_req_follower	STATISTIC — Reports the request-trigger to request-follower times (in cycles) that occurred at least once.
cover_req_follower_to_resp_leader	STATISTIC — Reports the request-follower to response-leader times (in cycles) that occurred at least once.
cover_resp_leader_to_resp_trigger	STATISTIC — Reports the response-leader to response-trigger times (in cycles) that occurred at least once.

## ovl\_stack

Ensures the data integrity of a stack and ensures that the stack does not overflow or underflow.

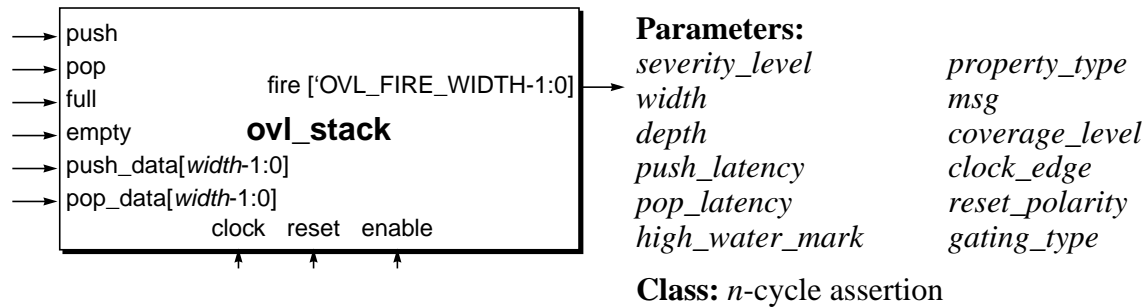

## Syntax

```
ovl_stack
  [#{severity_level, width, depth, push_latency, pop_latency,
    high_water_mark, property_type, msg, coverage_level, clock_edge,
    reset_polarity, gating_type}]
  instance_name (clock, reset, enable, push, pop, full, empty, push_data,
    pop_data, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT' ('OVL_ERROR').
<i>width</i>	Width of a data item. Default: 1.
<i>depth</i>	Stack depth. The <i>depth</i> must be > 0. Default: 2.
<i>push_latency</i>	Latency for push operation. <i>push_latency</i> = 0 (Default) Value of <i>push_data</i> is valid and the push operation is performed in the same cycle <i>push</i> asserts. <i>push_latency</i> > 0 Value of <i>push_data</i> is valid and the push operation is performed <i>push_latency</i> cycles after <i>push</i> asserts.
<i>pop_latency</i>	Latency for pop operation. <i>pop_latency</i> = 0 (Default) Value of <i>pop_data</i> is valid and the pop operation is performed in the same cycle <i>pop</i> asserts. <i>pop_latency</i> > 0 Value of <i>pop_data</i> is valid and the pop operation is performed <i>pop_latency</i> cycles after <i>pop</i> asserts.
<i>high_water_mark</i>	Stack high-water mark. Must be < <i>depth</i> . A value of 0 disables the cover_high_water_mark cover point. Default: 0.

<i>property_type</i>	Property type. Default: ‘OVL_PROPERTY_DEFAULT (‘OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: ‘OVL_MSG_DEFAULT (“VIOLATION”).
<i>coverage_level</i>	Coverage level. Default: ‘OVL_COVER_DEFAULT (‘OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: ‘OVL_CLOCK_EDGE_DEFAULT (‘OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: ‘OVL_RESET_POLARITY_DEFAULT (‘OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: ‘OVL_GATING_TYPE_DEFAULT (‘OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = ‘OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = ‘OVL_GATE_RESET). Ignored if <i>gating_type</i> is ‘OVL_NONE.
<i>push</i>	Stack push input. When <i>push</i> asserts, the stack performs a push operation. A data item is pushed onto the stack and the stack counter increments by 1. If <i>push_latency</i> is 0, the push is performed in the same cycle <i>push</i> asserts. Otherwise <i>push_latency</i> cycles later, <i>push_data</i> is latched, the push operation occurs, and the stack counter increments.
<i>pop</i>	Stack pop input. When <i>pop</i> asserts, the stack performs a pop operation. A data item is popped from the stack and the stack counter decrements by 1. If <i>deq_latency</i> is 0, the pop is performed in the same cycle <i>pop</i> asserts. Otherwise <i>enq_latency</i> cycles later, the pop operation occurs, the stack counter decrements, and <i>pop_data</i> is valid.
<i>full</i>	Output status flag from the stack. <i>full</i> = 0 Stack not full. <i>full</i> = 1 Stack full.
<i>empty</i>	Output status flag from the stack. <i>empty</i> = 0 Stack not empty. <i>empty</i> = 1 Stack empty.

<code>push_data[width-1:0]</code>	Push data input to the stack. Contains the data item to push onto the stack.
<code>pop_data[width-1:0]</code>	Pop data output from the stack. Contains the data item popped from the stack.
<code>fire</code> <code>['OVL_FIRE_WIDTH-1:0]</code>	Fire output. Assertion failure when <code>fire[0]</code> is TRUE. X/Z check failure when <code>fire[1]</code> is TRUE. Cover event when <code>fire[2]</code> is TRUE.

## Description

The `ovl_stack` checker checks `push` and `pop` at the active edge of `clock`. If `push` is TRUE, the checker assumes a push operation occurs `push_latency` cycles later (or in the same cycle if `push_latency` is 0). In that cycle, the checker does the following:

- If a pop operation is scheduled for this cycle, a `simultaneous_push_pop` check violation occurs.
- Otherwise, if the stack is already full, an overflow check violation occurs. The checker assumes the data item in `push_data` was latched in the current cycle and replaced the top entry.
- Otherwise, the checker assumes the data item in `push_data` was latched in the current cycle and pushed on the top of the stack. The checker increments the stack counter by 1 in the next cycle.

Similarly, if `pop` is TRUE, the checker assumes a pop operation occurs `pop_latency` cycles later (or in the same cycle if `pop_latency` is 0). In that cycle, unless a `simultaneous_push_pop` violation has occurred, the checker does the following:

- If the stack is already empty, an underflow check violation occurs.
- Otherwise, the checker assumes the data item on the top of the stack was popped and compares the value of `pop_data` with the expected value of the popped data item. If they do not match, a value check violation occurs. The checker decrements the stack counter by 1 in the next cycle.

The `ovl_stack` checker also checks `full` and `empty` at the active edge of `clock`. After the stack pointer is adjusted to reflect a push or pop performed in the previous cycle:

- If the stack is full and `full` is FALSE or if the stack is not full and `full` is TRUE, a full check violation occurs.
- If the stack is empty and `empty` is FALSE or if the stack is not empty and `empty` is TRUE, an empty check violation occurs.

## Assertion Checks

OVERFLOW	Data pushed onto stack when the stack was full. Stack had <i>depth</i> data items <i>push_latency</i> cycles after <i>push</i> was sampled TRUE.
UNDERFLOW	Data popped from stack when the stack was empty. Stack was empty <i>pop_latency</i> cycles after <i>pop</i> was sampled TRUE.
SIMULTANEOUS_PUSH_POP	Push and pop operations occurred together. A push operation and a pop operation were both scheduled for the same cycle.
VALUE	Data value popped from the stack did not match the corresponding data value pushed onto the stack. <i>Pop</i> was sampled TRUE, but <i>pop_latency</i> cycles later the value of <i>pop_data</i> did not equal the expected value pushed onto the stack in a previous cycle.
FULL	Stack was empty, but 'empty' was deasserted. <i>Empty</i> was sampled FALSE when the stack was empty. Stack was not empty, but 'empty' was asserted. <i>Empty</i> was sampled TRUE when the stack was not empty.
EMPTY	Stack was full, but 'full' was deasserted. <i>Full</i> was sampled FALSE when the stack was full. Stack was not full, but 'full' was asserted. <i>Full</i> was sampled TRUE when the stack was not full.

## Implicit X/Z Checks

push contains X or Z	Push signal was X or Z.
pop contains X or Z	Pop signal was X or Z.
push_data contains X or Z	Push data contained X or Z bits.
pop_data contains X or Z	Pop data contained X or Z bits.
full contains X or Z	Full signal was X or Z.
empty contains X or Z	Empty signal was X or Z.


## Cover Points

<code>cover_pushes</code>	SANITY — Number of cycles <i>push</i> was asserted.
<code>cover_pops</code>	SANITY — Number of cycles <i>pop</i> was asserted.
<code>cover_max_entries</code>	BASIC — Number of cycles for which the number of data items in the stack was the same as the maximum number of data items the stack had held up to and including that cycle.
<code>cover_push_then_pop</code>	BASIC — Number of times a <i>push</i> was followed by a <i>pop</i> without an intervening <i>push</i> (or <i>pop</i> ).
<code>cover_full</code>	CORNER — Number of times a push incremented the stack pointer to <i>depth</i> data items.
<code>cover_empty</code>	CORNER — Number of times a pop decremented the stack pointer to 0 data items.
<code>cover_high_water_mark</code>	CORNER — Number of times the stack had more data items than the specified <i>high_water_mark</i> . Not meaningful if <i>high_water_mark</i> is 0.



## ovl\_time

Ensures that the value of an expression remains TRUE for a specified number of cycles after a start event.

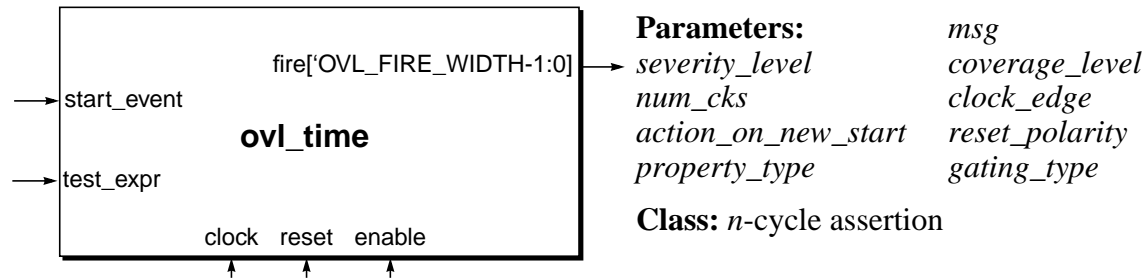

## Syntax

```
ovl_time
  [#(severity_level, num_cks, action_on_new_start, property_type,
    msg, coverage_level, clock_edge, reset_polarity, gating_type)]
  instance_name (clock, reset, enable, start_event, test_expr, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>num_cks</i>	Number of cycles after <i>start_event</i> is TRUE that <i>test_expr</i> must be held TRUE. Default: 1.
<i>action_on_new_start</i>	Method for handling a new start event that occurs while a check is pending. Values are: 'OVL_IGNORE_NEW_START, 'OVL_RESET_ON_NEW_START and 'OVL_ERROR_ON_NEW_START. Default: 'OVL_IGNORE_NEW_START.
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).

*gating\_type* Gating behavior of the checker when *enable* is FALSE. Default: 'OVL\_GATING\_TYPE\_DEFAULT ('OVL\_GATE\_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>start_event</i>	Expression that (along with <i>num_cks</i> ) identifies when to check <i>test_expr</i> .
<i>test_expr</i>	Expression that should evaluate to TRUE for <i>num_cks</i> cycles after <i>start_event</i> initiates a check.
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_time assertion checker checks the expression *start\_event* at each active edge of *clock* to determine whether or not to initiate a check. Once initiated, the check evaluates *test\_expr* each active edge of *clock* for *num\_cks* cycles to verify that its value is TRUE. During that time, the assertion fails each cycle a sampled value of *test\_expr* is not TRUE.

The method used to determine what constitutes a start event for initiating a check is controlled by the *action\_on\_new\_start* parameter. If no check is in progress when *start\_event* is sampled TRUE, a new check is initiated. But, if a check is in progress when *start\_event* is sampled TRUE, the checker has the following actions:

- 'OVL\_IGNORE\_NEW\_START

The checker does not sample *start\_event* for the next *num\_cks* cycles after a start event.

- 'OVL\_RESET\_ON\_NEW\_START

The checker samples *start\_event* every cycle. If a check is pending and the value of *start\_event* is TRUE, the checker terminates the check and initiates a new check without sampling *test\_expr*.

- 'OVL\_ERROR\_ON\_NEW\_START

The checker samples *start\_event* every cycle. If a check is pending and the value of *start\_event* is TRUE, the assertion fails with an illegal start event violation. In this case, the checker does not initiate a new check, does not terminate a pending check and reports an additional assertion violation if *test\_expr* is FALSE.

## Assertion Checks

TIME	The value of <i>test_expr</i> was not TRUE within <i>num_cks</i> cycles after <i>start_event</i> was sampled TRUE.
illegal start event	The <i>action_on_new_start</i> parameter is set to 'OVL_ERROR_ON_NEW_START and <i>start_event</i> expression evaluated to TRUE while the checker was monitoring <i>test_expr</i> .

## Implicit X/Z Checks

<i>test_expr</i> contains X or Z	Expression value was X or Z.
<i>start_event</i> contains X or Z	Start event value was X or Z.

## Cover Points

cover_window_open	BASIC — A time check was initiated.
cover_window_close	BASIC — A time check lasted the full <i>num_cks</i> cycles.
cover_window_resets	CORNER — The <i>action_on_new_start</i> parameter is 'OVL_RESET_ON_NEW_START, and <i>start_event</i> was sampled TRUE while the checker was monitoring <i>test_expr</i> .

## See also

<a href="#">ovl_change</a>	<a href="#">ovl_win_change</a>
<a href="#">ovl_next</a>	<a href="#">ovl_win_unchange</a>
<a href="#">ovl_frame</a>	<a href="#">ovl_window</a>
<a href="#">ovl_unchange</a>	

## Examples


```

ovl_time #(
    'OVL_ERROR,                                // severity_level
    3,                                          // num_cks
    'OVL_IGNORE_NEW_START,                    // action_on_new_start
    'OVL_ASSERT,                              // property_type
    "Error: invalid transaction",              // msg
    'OVL_COVER_DEFAULT,                       // coverage_level
    'OVL_POSEDGE,                             // clock_edge
    'OVL_ACTIVE_LOW,                          // reset_polarity
    'OVL_GATE_CLOCK)                         // gating_type

    valid_transaction (
        clock,                                // clock
        reset,                                // reset
        enable,                               // enable
        req == 1,                             // start_event
        ptr >= 1 && ptr <= 3,                  // test_expr
        fire_valid_transaction );              // fire

```

Ensures that *ptr* is sampled in the range 1 to 3 for three cycles after *req* is sampled equal to 1 at the rising edge of *clock*. If *req* is sampled equal to 1 when the checker samples *ptr*, a new check is not initiated (i.e., the new start is ignored).

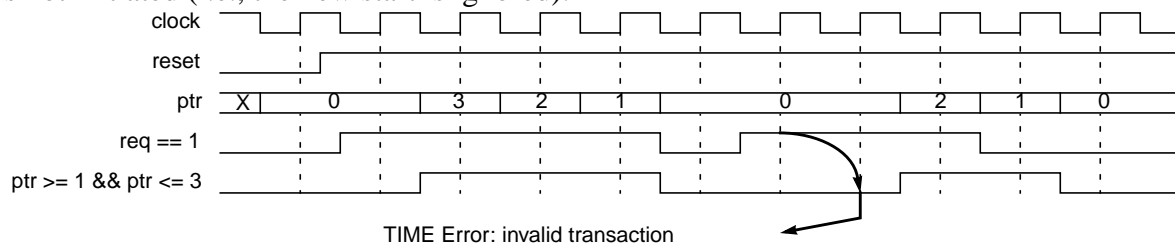


```

ovl_time #(
    'OVL_ERROR,                // severity_level
    3,                          // num_cks
    'OVL_RESET_ON_NEW_START,    // action_on_new_start
    'OVL_ASSERT,               // property_type
    "Error: invalid transaction", // msg
    'OVL_COVER_DEFAULT,        // coverage_level
    'OVL_POSEDGE,              // clock_edge
    'OVL_ACTIVE_LOW,           // reset_polarity
    'OVL_GATE_CLOCK)           // gating_type

    valid_transaction (
        clock,                  // clock
        reset,                  // reset
        enable,                 // enable
        req == 1,               // start_event
        ptr >= 1 && ptr <= 3,    // test_expr
        fire_valid_transaction ); // fire

```

Ensures that *ptr* is sampled in the range 1 to 3 for three cycles after *req* is sampled equal to 1 at the rising edge of *clock*. If *req* is sampled equal to 1 when the checker samples *ptr*, a new check is initiated (i.e., the new start restarts a check).

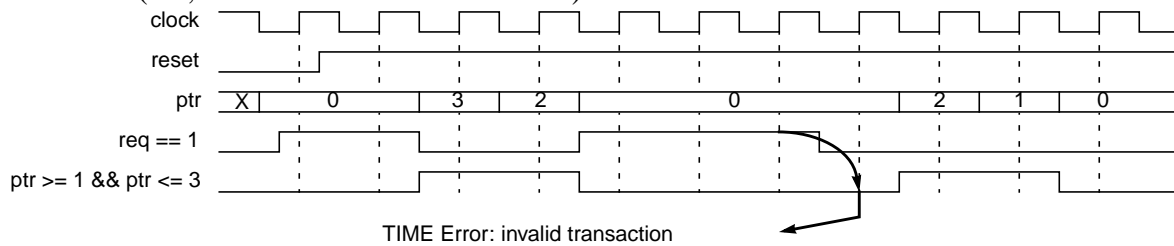


```

ovl_time #(
    'OVL_ERROR,                // severity_level
    3,                          // num_cks
    'OVL_ERROR_ON_NEW_START,    // action_on_new_start
    'OVL_ASSERT,               // property_type
    "Error: invalid transaction", // msg
    'OVL_COVER_DEFAULT,        // coverage_level
    'OVL_POSEDGE,              // clock_edge
    'OVL_ACTIVE_LOW,           // reset_polarity
    'OVL_GATE_CLOCK)           // gating_type

    valid_transaction (
        clock,                  // clock
        reset,                  // reset
        enable,                 // enable
        req == 1,               // start_event
        ptr >= 1 && ptr <= 3,    // test_expr
        fire_valid_transaction ); // fire


```

Ensures that *ptr* is sampled in the range 1 to 3 for three cycles after *req* is sampled equal to 1 at the rising edge of *clock*. If *req* is sampled equal to 1 when the checker samples *ptr*, the checker issues an *illegal start event* violation and does not start a new check.

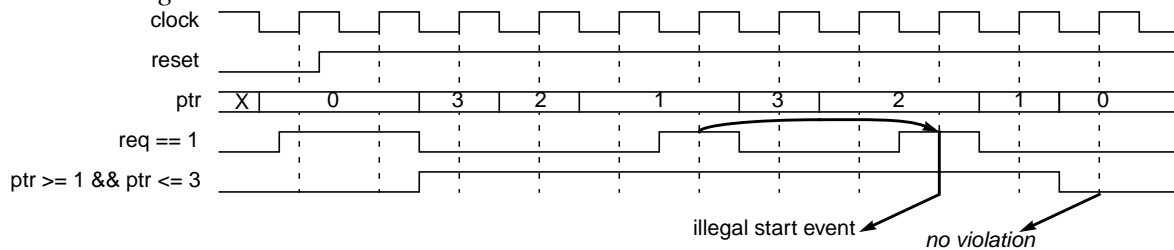

## ovl\_transition

Ensures that the value of an expression transitions properly from a start state to the specified next state.

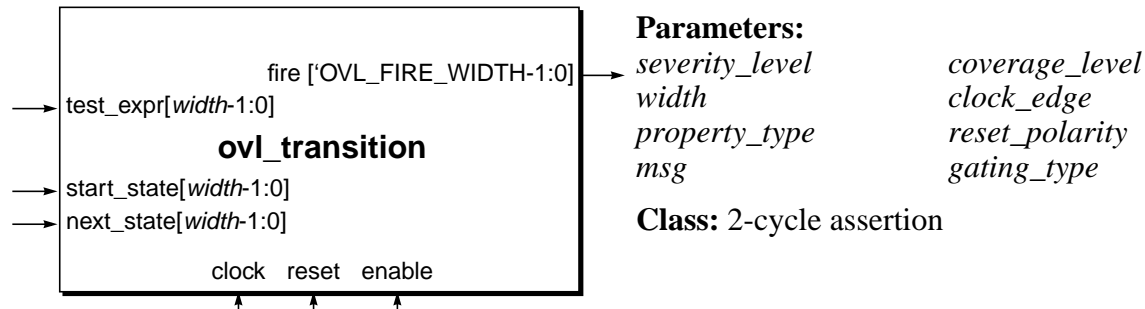

## Syntax

```
ovl_transition
  [ #(severity_level, width, property_type, msg, coverage_level,
      clock_edge, reset_polarity, gating_type)]
  instance_name (clock, reset, enable, test_expr, start_state,
    ovl_transitionnext_state, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>width</i>	Width of the <i>test_expr</i> argument. Default: 1.
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>test_expr</i> [ <i>width</i> -1:0]	Expression that should transition to <i>next_state</i> on the active edge of <i>clock</i> if its value at the previous active edge of <i>clock</i> is the same as the current value of <i>start_state</i> .
<i>start_state</i> [ <i>width</i> -1:0]	Expression that indicates the start state for the assertion check. If the start state matches the value of <i>test_expr</i> on the previous active edge of <i>clock</i> , the check is performed.
<i>next_state</i> [ <i>width</i> -1:0]	Expression that indicates the only valid next state for the assertion check. If the value of <i>test_expr</i> was <i>start_state</i> at the previous active edge of <i>clock</i> , then the value of <i>test_expr</i> should equal <i>next_state</i> on the current active edge of <i>clock</i> .
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_transition assertion checker checks the expression *test\_expr* and *start\_state* at each active edge of *clock* to see if they are the same. If so, the checker evaluates and stores the current value of *next\_state*. At the next active edge of *clock*, the checker re-evaluates *test\_expr* to see if its value equals the stored value of *next\_state*. If not, the assertion fails. The checker returns to checking *start\_state* in the current cycle (unless a fatal failure occurred)

The *start\_state* and *next\_state* expressions are verification events that can change. In particular, the same assertion checker can be coded to verify multiple types of transitions of *test\_expr*.

The checker is useful for ensuring certain control structure values (such as counters and finite-state machine values) transition properly.

## Assertion Checks

TRANSITION	Expression transitioned from <i>start_state</i> to a value different from <i>next_state</i> .
------------	---



## Implicit X/Z Checks

<code>test_expr</code> contains X or Z	Expression value contained X or Z bits.
<code>start_state</code> contains X or Z	Start state value contained X or Z bits.
<code>next_state</code> contains X or Z	Next state value contained X or Z bits.

## Cover Points

<code>cover_start_state</code>	BASIC — Expression assumed a start state value.
--------------------------------	---

## Notes

1. The assertion check compares the current value of `test_expr` with its previous value. Therefore, checking does not start until the second rising clock edge of `clock` after `reset` deasserts.

## See also


[ovl\\_no\\_transition](#)

## Example

```
ovl_transition #(
    'OVL_ERROR,                // severity_level
    3,                          // width
    'OVL_ASSERT,               // property_type
    "Error: bad count transition", // msg
    'OVL_COVER_DEFAULT,        // coverage_level
    'OVL_POSEDGE,              // clock_edge
    'OVL_ACTIVE_LOW,           // reset_polarity
    'OVL_GATE_CLOCK)           // gating_type


    valid_count (
        clock,                  // clock
        reset,                  // reset
        enable,                 // enable
        count,                  // test_expr
        3'd3,                   // start_state
        (sel_8 == 1'b0) ? 3'd0 : 3'd4, // next_state
        fire_valid_count );      // fire
```

Ensures that `count` transitions from 3'd3 properly. If `sel_8` is 0, `count` should have transitioned to 3'd0. Otherwise, `count` should have transitioned to 3'd4.

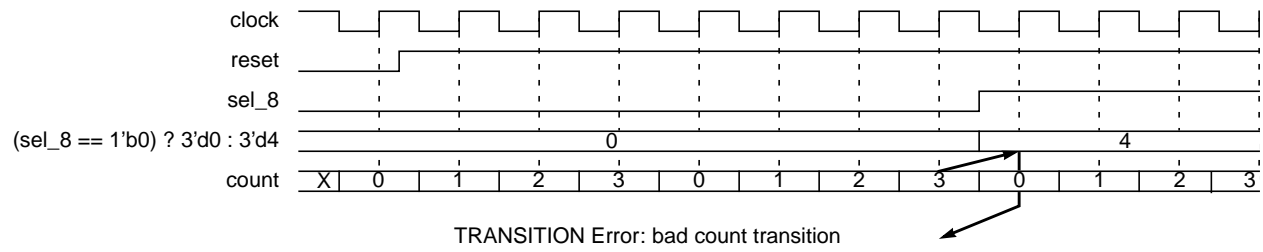

## ovl\_unchange

Ensures that the value of an expression does not change for a specified number of cycles after a start event initiates checking.

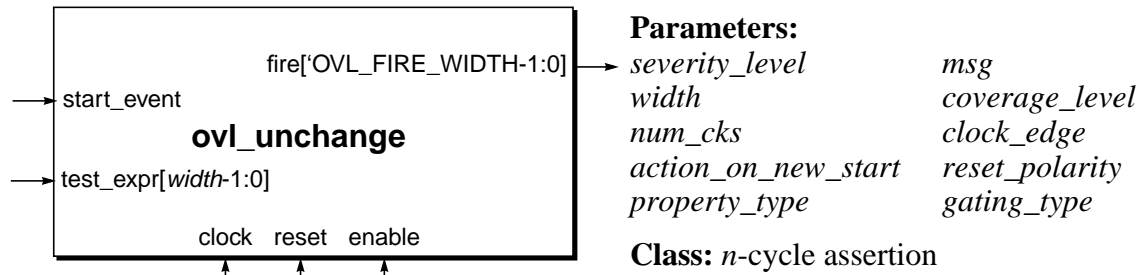

## Syntax

```
ovl_unchange
  [#(severity_level, width, num_cks, action_on_new_start,
    property_type, msg, coverage_level, clock_edge, reset_polarity,
    gating_type)]
  instance_name (clock, reset, enable, start_event, test_expr, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>width</i>	Width of the <i>test_expr</i> argument. Default: 1.
<i>num_cks</i>	Number of cycles <i>test_expr</i> should remain unchanged after a start event. Default: 1.
<i>action_on_new_start</i>	Method for handling a new start event that occurs before <i>num_cks</i> clock cycles transpire without a change in the value of <i>test_expr</i> . Values are: 'OVL_IGNORE_NEW_START, 'OVL_RESET_ON_NEW_START and 'OVL_ERROR_ON_NEW_START. Default: 'OVL_IGNORE_NEW_START.
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).

<code>reset_polarity</code>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<code>gating_type</code>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<code>clock</code>	Clock event for the assertion.
<code>reset</code>	Synchronous reset signal indicating completed initialization.
<code>enable</code>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<code>start_event</code>	Expression that (along with <i>action_on_new_start</i> ) identifies when to start checking <i>test_expr</i> .
<code>test_expr[width-1:0]</code>	Expression that should not change value for <i>num_cks</i> cycles from the start event unless the check is interrupted by a valid new start event.
<code>fire</code> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_unchange assertion checker checks the expression *start\_event* at each active edge of *clock* to determine if it should check for a change in the value of *test\_expr*. If *start\_event* is sampled TRUE, the checker evaluates *test\_expr* and re-evaluates *test\_expr* at each of the subsequent *num\_cks* active edges of *clock*. Each time the checker re-evaluates *test\_expr*, if its value has changed from its value in the previous cycle, the assertion fails.

The method used to determine how to handle a new start event, when the checker is in the state of checking for a change in *test\_expr*, is controlled by the *action\_on\_new\_start* parameter. The checker has the following actions:

- 'OVL\_IGNORE\_NEW\_START

The checker does not sample *start\_event* for the next *num\_cks* cycles after a start event.

- 'OVL\_RESET\_ON\_NEW\_START

The checker samples *start\_event* every cycle. If a check is pending and the value of *start\_event* is TRUE, the checker terminates the check and initiates a new check.

- ‘OVL\_ERROR\_ON\_NEW\_START

The checker samples *start\_event* every cycle. If a check is pending and the value of *start\_event* is TRUE, the assertion fails with an illegal start event violation. In this case, the checker does not initiate a new check and does not terminate a pending check.

The checker is useful for ensuring proper changes in structures after various events. For example, it can be used to check that multiple-cycle operations with enabling conditions function properly with the same data. It can be used to check that single-cycle operations function correctly with data loaded at different cycles. It also can be used to verify synchronizing conditions that require data to be stable after an initial triggering event.

## Assertion Checks

UNCHANGE	The <i>test_expr</i> expression changed value within <i>num_cks</i> cycles after <i>start_event</i> was sampled TRUE.
illegal start event	The <i>action_on_new_start</i> parameter is set to ‘OVL_ERROR_ON_NEW_START and <i>start_event</i> expression evaluated to TRUE while the checker was in the state of checking for a change in the value of <i>test_expr</i> .

## Implicit X/Z Checks

<i>test_expr</i> contains X or Z	Expression value contained X or Z bits.
<i>start_event</i> contains X or Z	Start event value was X or Z.

## Cover Points

cover_window_open	BASIC — A change check was initiated.
cover_window_close	BASIC — A change check lasted the full <i>num_cks</i> cycles.
cover_window_resets	CORNER — The <i>action_on_new_start</i> parameter is ‘OVL_RESET_ON_NEW_START, and <i>start_event</i> was sampled TRUE while the checker was monitoring <i>test_expr</i> without detecting a changed value.

## See also

[ovl\\_change](#)  
[ovl\\_time](#)  
[ovl\\_win\\_change](#)

[ovl\\_win\\_unchange](#)  
[ovl\\_window](#)

## Examples


```

ovl_unchange #(
    'OVL_ERROR,                // severity_level
    8,                          // width
    8,                          // num_cks
    'OVL_IGNORE_NEW_START,     // action_on_new_start
    'OVL_ASSERT,               // property_type
    "Error: a changed during divide", // msg
    'OVL_COVER_DEFAULT,       // coverage_level
    'OVL_POSEDGE,              // clock_edge
    'OVL_ACTIVE_LOW,           // reset_polarity
    'OVL_GATE_CLOCK)           // gating_type

valid_div_unchange_a (
    clock,                      // clock
    reset,                      // reset
    enable,                     // enable
    start == 1,                 // start_event
    a,                          // test_expr
    fire_ );                    // fire

```

Ensures that *a* remains unchanged while a divide operation is performed (8 cycles). Restarts during divide operations are ignored.

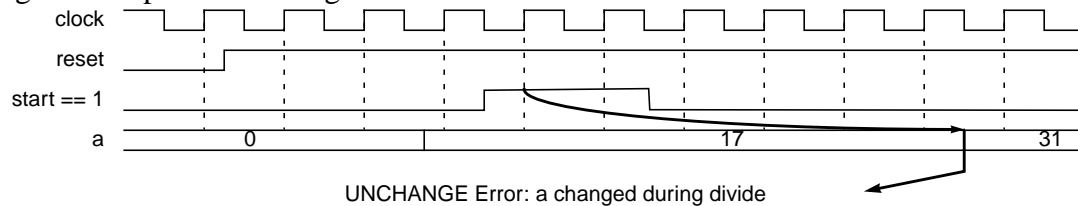


```

ovl_unchange #(
    'OVL_ERROR,                // severity_level
    8,                          // width
    8,                          // num_cks
    'OVL_RESET_ON_NEW_START,   // action_on_new_start
    'OVL_ASSERT,               // property_type
    "Error: a changed during divide", // msg
    'OVL_COVER_DEFAULT,       // coverage_level
    'OVL_POSEDGE,              // clock_edge
    'OVL_ACTIVE_LOW,           // reset_polarity
    'OVL_GATE_CLOCK)           // gating_type

valid_div_unchange_a (
    clock,                      // clock
    reset,                      // reset
    enable,                     // enable
    start == 1,                 // start_event
    a,                          // test_expr
    fire_valid_div_unchange_a ); // fire

```


Ensures that *a* remains unchanged while a divide operation is performed (8 cycles). A restart during a divide operation starts the check over.

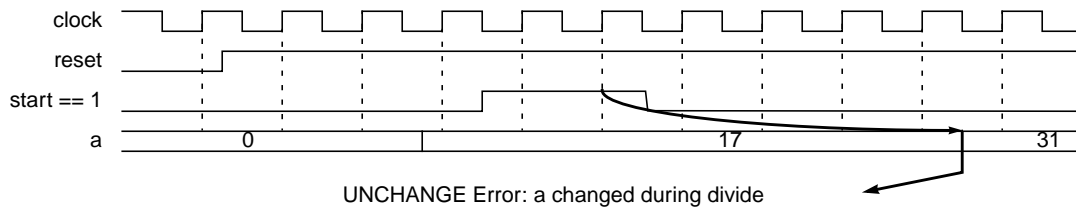

```
ovl_unchange #(
    'OVL_ERROR,                // severity_level
    8,                          // width
    8,                          // num_cks
    'OVL_ERROR_ON_NEW_START,    // action_on_new_start
    'OVL_ASSERT,               // property_type
    "Error: a changed during divide", // msg
    'OVL_COVER_DEFAULT,        // coverage_level
    'OVL_POSEDGE,              // clock_edge
    'OVL_ACTIVE_LOW,           // reset_polarity
    'OVL_GATE_CLOCK)           // gating_type


valid_div_unchange_a (
    clock,                      // clock
    reset,                      // reset
    enable,                     // enable
    start == 1,                 // start_event
    a,                          // test_expr
    fire_valid_div_unchange_a ); // fire
```

Ensures that *a* remains unchanged while a divide operation is performed (8 cycles). A restart during a divide operation is a violation.

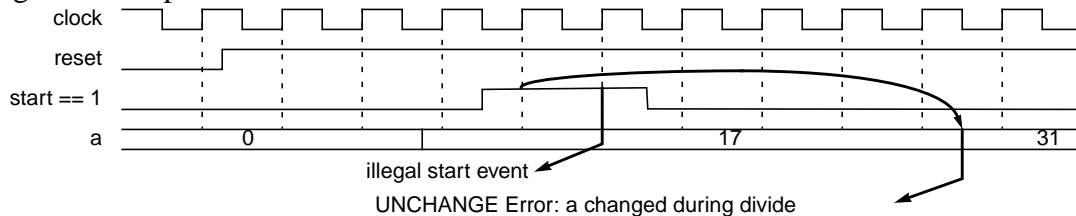

## ovl\_valid\_id

Ensures that each issued ID is returned within a specified time window; that returned IDs match issued IDs; and that the issued and outstanding IDs do not exceed specified limits.

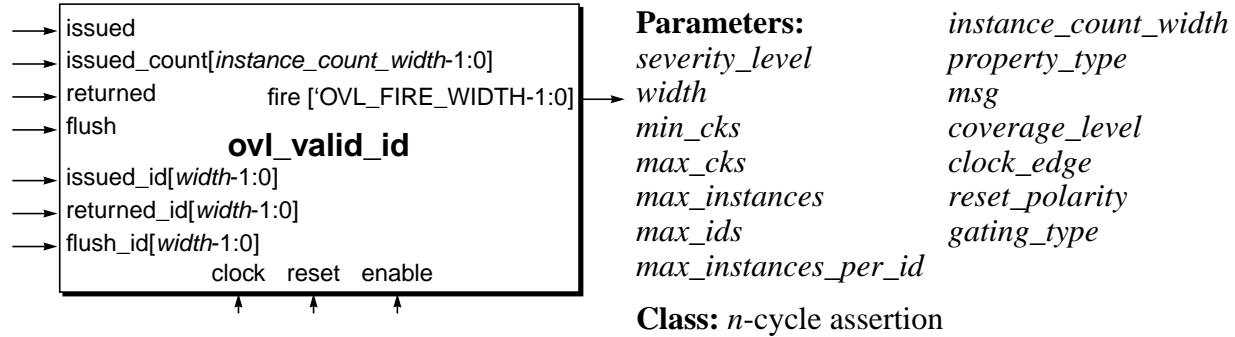

## Syntax

```
ovl_valid_id
  [ #(severity_level, width, min_cks, max_cks, max_instances, max_ids,
    max_instances_per_id, instance_count_width, property_type, msg,
    coverage_level, clock_edge, reset_polarity, gating_type) ]
  instance_name (clock, reset, enable, issued, issued_count, returned,
    flush, issued_id, returned_id, flush_id, fire);
```

## Parameters

<code>severity_level</code>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<code>width</code>	Width of the <code>issued_id</code> , <code>returned_id</code> and <code>flush_id</code> . Default: 2.
<code>min_cks</code>	Minimum number of clock cycles an ID instance must be outstanding. Must be > 0. Default: 1
<code>max_cks</code>	Maximum number of clock cycles an ID instance can be outstanding. Must be $\geq$ <code>min_cks</code> . Default: 1.
<code>max_instances</code>	Maximum number of ID instances that can be outstanding at any time. Default: 2.
<code>max_ids</code>	Maximum number of different IDs that can be outstanding at any time. Default: 1.
<code>max_instances_per_id</code>	Maximum number of instances of a single ID that can be outstanding at any time. Default: 1.
<code>instance_count_width</code>	Width of <code>issued_count</code> . Default: 2.
<code>property_type</code>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).



<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>issued</i>	Issued IDs signal indicating the ID in <i>issued_id</i> is added to the outstanding IDs list. The <i>issued_count</i> port specifies the number of instances of the ID to make outstanding.
<i>issued_count</i> [ <i>instance_count_width</i> -1:0]	Number of instances of the issued ID to make outstanding when <i>issued</i> asserts.
<i>returned</i>	Returned ID signal indicating an instance of the ID in <i>returned_id</i> is removed from the outstanding IDs list.
<i>flush</i>	Flush ID signal indicating all instances of the ID in <i>flush_id</i> are removed from the outstanding IDs list.
<i>issued_id</i> [ <i>width</i> -1:0]	Expression or variable containing the ID to add to the outstanding IDs list if <i>issued</i> is TRUE.
<i>returned_id</i> [ <i>width</i> -1:0]	Expression or variable containing the ID of an instance returned and removed from the outstanding IDs list if <i>returned</i> is TRUE.
<i>flush_id</i> [ <i>width</i> -1:0]	Expression or variable containing the ID to flush if <i>flush</i> is TRUE. All instances of the ID are removed from the outstanding IDs list.
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_valid\_id assertion checker checks *flush*, *returned* and *issued* at each active edge of *clock* and performs the following sequence of operations using an internal scratch pad of outstanding IDs:

1. If *flush* is TRUE, the ID specified in *flush\_id* is compared to the outstanding IDs. All instances (if any) of the flush ID are removed from the list of outstanding IDs. If *returned* is TRUE and *flush\_id* = *returned\_id*, the returned instance is ignored (even if it was not previously outstanding or was outstanding longer than *max\_cks*). If *issued* is TRUE and *flush\_id* = *issued\_id*, the issued ID instances are flushed as well (even if one of the outstanding IDs, instances or instances-per-ID limits for the issued ID instance were reached).
2. If *returned* is TRUE and the ID in *returned\_ID* is not being flushed:
  - a. If an instance of the returned ID is outstanding, the longest-outstanding instance of the returned ID is removed from the list of outstanding ID instances. If that ID instance was outstanding for fewer than *min\_cks* cycles, a *min\_cks* violation occurs.
  - b. If no instance of the returned ID is outstanding, a *returned\_id* violation occurs. Even if an instance of the returned ID were issued in the same cycle, all ID instances must be outstanding for *min\_cks* cycles (and *min\_cks* must be  $\geq 1$ ). In particular, the same ID instance cannot be issued and returned in the same cycle.
3. If *issued* is TRUE and *issued\_count* is 0, an *issued\_count* violation occurs.
4. If *issued* is TRUE and *issued\_count* > 0, then:
  - a. If the current number of unique outstanding IDs is *max\_ids* and *issued\_id* is not one of them, a *max\_instances* violation occurs.
  - b. If the current number of outstanding ID instances plus *issued\_count* exceeds *max\_instances*, a *max\_ids* violation occurs.
  - c. If the current number of outstanding instances of the issued ID plus *issued\_count* exceeds *max\_instances\_per\_id*, a *max\_instances\_per\_id* violation occurs.
  - d. If none of these violations occur, *issued\_count* instances of the ID in *issued\_id* are added to the list of outstanding ID instances.
5. After flushing and returning IDs, if any IDs have been outstanding for *max\_cks* cycles, a *max\_cks* violation occurs in the next cycle.

## Assertion Checks

RETURNED\_ID

Returned ID not outstanding.

*Returned* is TRUE, but the list of outstanding ID instances does not contain an instance of *returned\_ID*.

MAX_CKS	ID instance outstanding for too many cycles. An ID instance was outstanding longer than <i>max_cks</i> cycles.
MIN_CKS	ID instance returned in too few cycles. <i>Returned</i> is TRUE and an instance of the ID in <i>returned_id</i> is outstanding, but the longest-outstanding instance of the ID has been outstanding for fewer than <i>min_cks</i> cycles.
MAX_IDS	Maximum number of outstanding IDs or ID instances exceeded. <i>Issued</i> is TRUE, but the number of outstanding instances plus <i>issued_count</i> (minus 1 if an instance of <i>issued_id</i> is returned without error) exceeds <i>max_instances</i> or the number of unique outstanding IDs plus <i>issued_count</i> (minus 1 if an instance of <i>issued_id</i> is returned without error) exceeds <i>max_ids</i> .
MAX_INSTANCES_PER_ID	Maximum number of outstanding ID instances for the issued ID exceeded. <i>Issued</i> is TRUE, but the number of outstanding instances of <i>issued_id</i> plus <i>issued_count</i> (minus 1 if an instance of <i>issued_id</i> is returned without error) exceeds <i>max_instances_per_id</i> .
ISSUED_COUNT	ID issued with count 0. <i>Issued</i> is TRUE, but <i>issued_count</i> is 0.

## Implicit X/Z Checks


issued contains X or Z	Issued signal was X or Z.
returned contains X or Z	Returned signal was X or Z.
flush contains X or Z	Flush signal was X or Z.
issued_id contains X or Z when issued is asserted	Issued ID contained X or Z bits.
ret_id contains X or Z when returned is asserted	Returned ID contained X or Z bits.
flush_id contains X or Z when flush is asserted	Flush ID contained X or Z bits.

## Cover Points

cover_issued_asserted	SANITY — Number of cycles <i>issued</i> was TRUE.
cover_returned_asserted	SANITY — Number of cycles <i>returned</i> was TRUE.
cover_flush_asserted	SANITY — Number of cycles <i>flush</i> was TRUE.
turnaround_times	BASIC — Reports the turnaround times (i.e., number of cycles after an ID instance is issued that the instance is returned) that occurred at least once.
outstanding_ids	BASIC — Reports the numbers of outstanding ID instances that occurred at least once.
cover_returned_at_min_cks	CORNER — Number of times the returned ID instance was outstanding for <i>min_cks</i> cycles.
cover_returned_at_max_cks	CORNER — Number of times the returned ID instance was outstanding for <i>max_cks</i> cycles.
cover_max_ids	CORNER — Number of cycles the outstanding IDs reached the <i>max_ids</i> limit or the <i>max_instances</i> limit.
cover_max_instances_per_id	CORNER — Number of cycles the outstanding instances of an ID reached the <i>max_instances_per_id</i> limit.

## ovl\_value

Ensures that the value of an expression either matches a value in a specified list or does not match any value in the list (as determined by a mode signal).

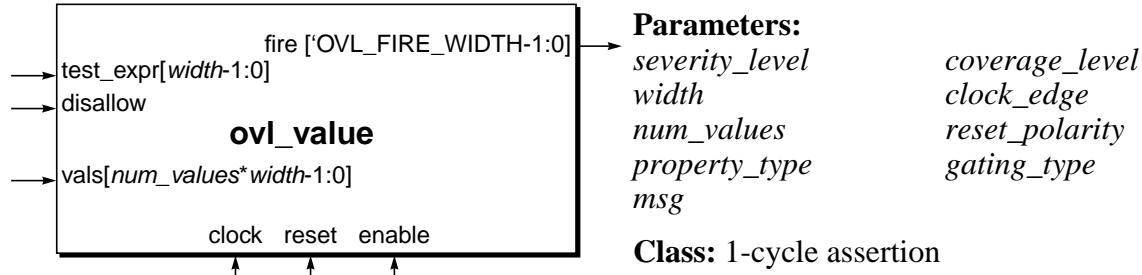

## Syntax

```
ovl_value
  [ #(severity_level, width, num_values, property_type, msg,
      coverage_level, clock_edge, reset_polarity, gating_type)]
  instance_name (clock, reset, enable, test_expr, vals, disallow, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: ‘OVL_SEVERITY_DEFAULT (‘OVL_ERROR).
<i>width</i>	Width of <i>test_expr</i> . Default: 1.
<i>num_values</i>	Number of values in <i>vals</i> . Must be $\geq 1$ . Default: 1.
<i>property_type</i>	Property type. Default: ‘OVL_PROPERTY_DEFAULT (‘OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: ‘OVL_MSG_DEFAULT (“VIOLATION”).
<i>coverage_level</i>	Coverage level. Default: ‘OVL_COVER_DEFAULT (‘OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: ‘OVL_CLOCK_EDGE_DEFAULT (‘OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: ‘OVL_RESET_POLARITY_DEFAULT (‘OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: ‘OVL_GATING_TYPE_DEFAULT (‘OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>test_expr</i> [ <i>width</i> -1:0]	Variable or expression to check.
<i>vals</i> [ <i>num_values</i> * <i>width</i> -1:0]	Concatenated list of values for <i>test_expr</i> .
<i>disallow</i>	Sense of the comparison of <i>test_expr</i> with <i>vals</i> . <i>disallow</i> = 0 Value of <i>test_expr</i> should match one of the values in <i>vals</i> . <i>disallow</i> = 1 Value of <i>test_expr</i> should not match one of the values in <i>vals</i> .
<i>fire</i> ['OVL_FIRE_WIDTH-1:0]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_value assertion checker checks *test\_expr*, *vals* and *disallow* at each active edge of *clock* (except for the first cycle after a checker reset). The value of *test\_expr* is compared with the list of values in *vals*. If *disallow* is FALSE and the value of *test\_expr* is not a value in *vals*, a value check violation occurs. Similarly, if *disallow* is TRUE and the value of *test\_expr* is one of the values in *vals*, an is\_not check violation occurs. The check occurs at the active clock edge, .

## Assertion Checks

VALUE	Expression value did not equal one of the specified values. Value of the <i>test_expr</i> did not match a value in <i>vals</i> , but <i>disallow</i> was FALSE.
IS_NOT	Expression value was equal to one of the specified values. Value of the <i>test_expr</i> matched one of the values in <i>vals</i> , but <i>disallow</i> was TRUE.

## Implicit X/Z Checks


<code>test_expr</code> contains X or Z	Expression contained X or Z bits.
<code>vals</code> contains X or Z	Values contained X or Z bits.
<code>disallow</code> contains X or Z	Disallow signal was X or Z.

## Cover Points

<code>cover_values_checked</code>	SANITY — Number of cycles <i>test_expr</i> loaded a new value.
<code>cover_in_vals</code>	BASIC — Number of cycles <i>disallow</i> was FALSE and the value of <i>test_expr</i> matched a value in <i>vals</i> .
<code>cover_not_in_vals</code>	BASIC — Number of cycles <i>disallow</i> was TRUE and the value of <i>test_expr</i> did not match a value in <i>vals</i> .
<code>cover_values_covered</code>	BASIC — Reports the values in <i>vals</i> that were covered at least once. Not applicable for cycles where <i>disallow</i> = 1.

## ovl\_width

Ensures that when value of an expression is TRUE, it remains TRUE for a minimum number of clock cycles and transitions from TRUE no later than a maximum number of clock cycles.

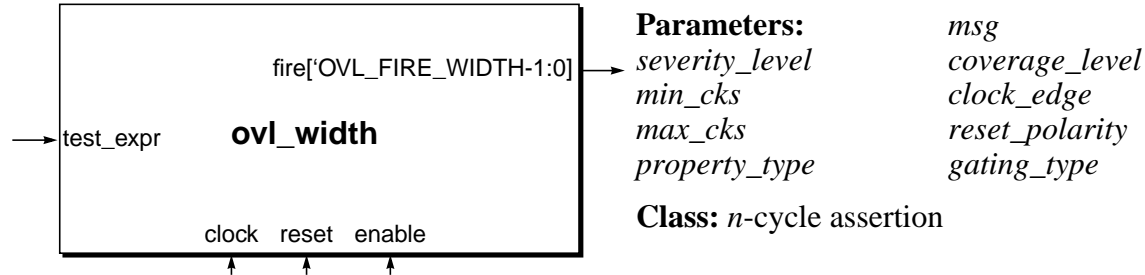

## Syntax

```
ovl_width
  [ #(severity_level, min_cks, max_cks, property_type, msg,
    coverage_level, clock_edge, reset_polarity, gating_type) ]
  instance_name (clock, reset, enable, test_expr, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>min_cks</i>	Minimum number of clock edges <i>test_expr</i> must remain TRUE once it is sampled TRUE. The special case where <i>min_cks</i> is 0 turns off minimum checking (i.e., <i>test_expr</i> can transition from TRUE in the next clock cycle). Default: 1 (i.e., same as 0).
<i>max_cks</i>	Maximum number of clock edges <i>test_expr</i> can remain TRUE once it is sampled TRUE. The special case where <i>max_cks</i> is 0 turns off maximum checking (i.e., <i>test_expr</i> can remain TRUE for any number of cycles). Default: 1 (i.e., <i>test_expr</i> must transition from TRUE in the next clock cycle).
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).



<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>test_expr</i>	Expression that should evaluate to TRUE for at least <i>min_cks</i> cycles and at most <i>max_cks</i> cycles after it is sampled TRUE.
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_width assertion checker checks the single-bit expression *test\_expr* at each active edge of *clock*. If the value of *test\_expr* is TRUE, the checker performs the following steps:

1. Unless it is disabled by setting *min\_cks* to 0, a minimum check is initiated. The check evaluates *test\_expr* at each subsequent active edge of *clock*. If its value is not TRUE, the minimum check fails. Otherwise, after *min\_cks* - 1 cycles transpire, the minimum check terminates.
2. Unless it is disabled by setting *max\_cks* to 0, a maximum check is initiated. The check evaluates *test\_expr* at each subsequent active edge of *clock*. If its value does not transition from TRUE by the time *max\_cks* cycles transpire (from the start of checking), the maximum check fails.
3. The checker returns to checking *test\_expr* in the next cycle. In particular if *test\_expr* is TRUE, a new set of checks is initiated.

## Assertion Checks

MIN_CHECK	The value of <i>test_expr</i> was held TRUE for less than <i>min_cks</i> cycles.
MAX_CHECK	The value of <i>test_expr</i> was held TRUE for more than <i>max_cks</i> cycles.

`min_cks > max_cks`      The *min\_cks* parameter is greater than the *max\_cks* parameter (and *max\_cks* > 0). Unless the violation is fatal, either the minimum or maximum check will fail.

## Implicit X/Z Checks

`test_expr contains X  
or Z`      Expression value was X or Z.

## Cover Points

`cover_test_expr_  
asserts`      BASIC — A check was initiated (i.e., *test\_expr* was sampled TRUE).

`cover_test_expr_  
asserted_for_min_cks`      CORNER — The expression *test\_expr* was held TRUE for exactly *min\_cks* cycles (*min\_cks* > 0).

`cover_test_expr_  
asserted_for_max_cks`      CORNER — The expression *test\_expr* was held TRUE for exactly *max\_cks* cycles (*max\_cks* > 0).

## See also

[ovl\\_change](#)  
[ovl\\_time](#)


[ovl\\_unchange](#)

## Example

```
ovl_width #(
    'OVL_ERROR,                // severity_level
    2,                        // min_cks
    3,                        // max_cks
    'OVL_ASSERT,              // property_type
    "Error: invalid request",  // msg
    'OVL_COVER_DEFAULT,      // coverage_level
    'OVL_POSEDGE,             // clock_edge
    'OVL_ACTIVE_LOW,          // reset_polarity
    'OVL_GATE_CLOCK)          // gating_type


    valid_request (
        clock,                // clock
        reset,                // reset
        enable,               // enable
        req == 1,              // test_expr
        fire_valid_request );  // fire
```

Ensures *req* asserts for 2 or 3 cycles.

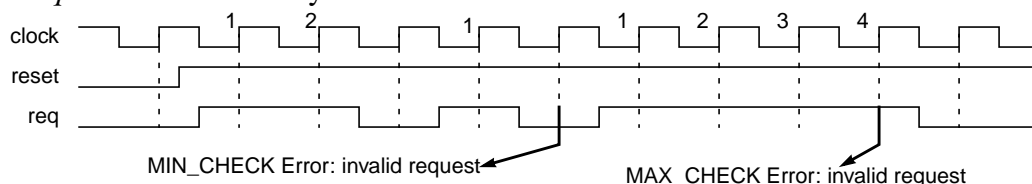

## ovl\_win\_change

Ensures that the value of an expression changes in a specified window between a start event and an end event.

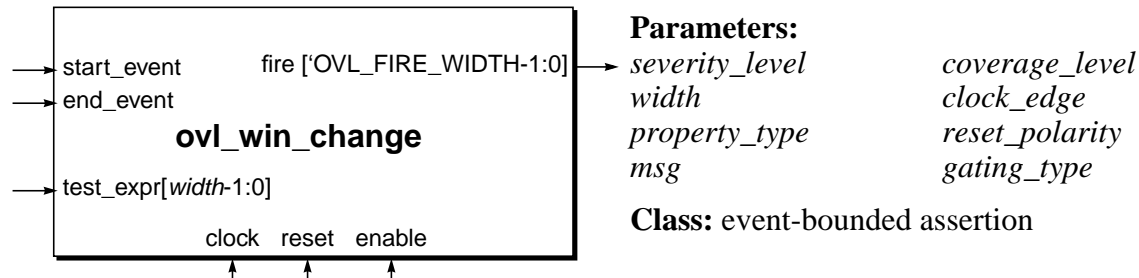

## Syntax

```
ovl_win_change
    [#(severity_level, width, property_type, msg, coverage_level,
        clock_edge, reset_polarity, gating_type)]
    instance_name (clock, reset, enable, start_event, test_expr, end_event,
        fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: ‘OVL_SEVERITY_DEFAULT (‘OVL_ERROR).
<i>width</i>	Width of the <i>test_expr</i> argument. Default: 1.
<i>property_type</i>	Property type. Default: ‘OVL_PROPERTY_DEFAULT (‘OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: ‘OVL_MSG_DEFAULT (“VIOLATION”).
<i>coverage_level</i>	Coverage level. Default: ‘OVL_COVER_DEFAULT (‘OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: ‘OVL_CLOCK_EDGE_DEFAULT (‘OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: ‘OVL_RESET_POLARITY_DEFAULT (‘OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: ‘OVL_GATING_TYPE_DEFAULT (‘OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>start_event</i>	Expression that opens an event window.
<i>test_expr</i> [ <i>width</i> -1:0]	Expression that should change value in the event window
<i>end_event</i>	Expression that closes an event window.
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_win\_change assertion checker checks the expression *start\_event* at each active edge of *clock* to determine if it should open an event window at the start of the next cycle. If *start\_event* is sampled TRUE, the checker evaluates *test\_expr*. At each subsequent active edge of *clock*, the checker evaluates *end\_event* and re-evaluates *test\_expr*. If *end\_event* is TRUE, the checker closes the event window and if all sampled values of *test\_expr* equal its value at the start of the window, then the assertion fails. The checker returns to the state of monitoring *start\_event* at the next active edge of *clock* after the event window is closed.

The checker is useful for ensuring proper changes in structures in various event windows. A typical use is to verify that synchronization logic responds after a stimulus (for example, bus transactions occurs without interrupts or write commands are not issued during read cycles). Another typical use is verifying a finite-state machine responds correctly in event windows.

## Assertion Checks

WIN_CHANGE	The <i>test_expr</i> expression did not change value during an open event window.
------------	---

## Implicit X/Z Checks

test_expr contains X or Z	Expression value contained X or Z bits.
start_event contains X or Z	Start event value was X or Z.
end_event contains X or Z	End event value was X or Z.

## Cover Points

cover_window_open	BASIC — An event window opened ( <i>start_event</i> was TRUE).
cover_window_close	BASIC — An event window closed ( <i>end_event</i> was TRUE in an open event window).

## See also

ovl\_change  
ovl\_time  
ovl\_unchange


ovl\_win\_unchange  
ovl\_window

## Example

```
ovl_win_change #(
    'OVL_ERROR,                // severity_level
    32,                        // width
    'OVL_ASSERT,               // property_type
    "Error: read not synchronized", // msg
    'OVL_COVER_DEFAULT,        // coverage_level
    'OVL_POSEDGE,              // clock_edge
    'OVL_ACTIVE_LOW,           // reset_polarity
    'OVL_GATE_CLOCK)           // gating_type


    valid_sync_data_bus_rd (
        clock,                  // clock
        reset,                  // reset
        enable,                 // enable
        rd,                     // start_event
        data,                   // test_expr
        rd_ack,                 // end_event
        fire_valid_sync_data_bus_rd );
```

Ensures that *data* changes value in every data read window.

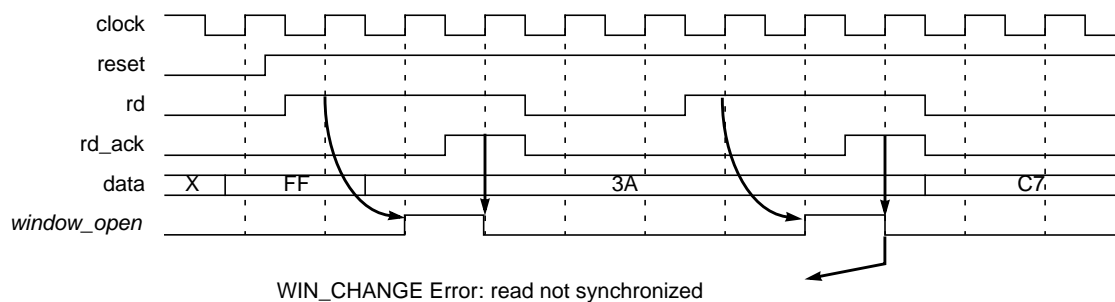

## ovl\_win\_unchange

Ensures that the value of an expression does not change in a specified window between a start event and an end event.

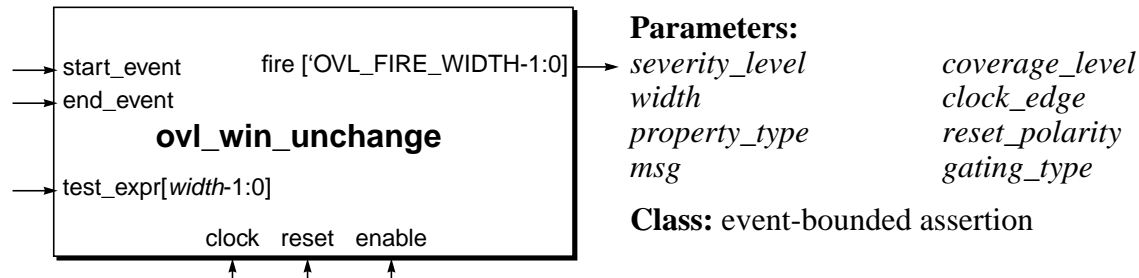

### Syntax

```
ovl_win_unchange
  [#(severity_level, width, property_type, msg, coverage_level,
    clock_edge, reset_polarity, gating_type)]
  instance_name (clock, reset, enable, start_event, test_expr, end_event,
    fire);
```

### Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>width</i>	Width of the <i>test_expr</i> argument. Default: 1.
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.
<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>start_event</i>	Expression that opens an event window.
<i>test_expr</i> [ <i>width</i> -1:0]	Expression that should not change value in the event window
<i>end_event</i>	Expression that closes an event window.
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_win\_unchange assertion checker checks the expression *start\_event* at each active edge of *clock* to determine if it should open an event window at the start of the next cycle. If *start\_event* is sampled TRUE, the checker evaluates *test\_expr*. At each subsequent active edge of *clock*, the checker evaluates *end\_event* and re-evaluates *test\_expr*. If a sampled value of *test\_expr* is changed from its value in the previous cycle, then the assertion fails. If *end\_event* is TRUE, the checker closes the event window and returns to the state of monitoring *start\_event* at the next active edge of *clock*.

The checker is useful for ensuring certain variables and expressions do not change in various event windows. A typical use is to verify that synchronization logic responds after a stimulus (for example, bus transactions occurs without interrupts or write commands are not issued during read cycles). Another typical use is to verify that non-deterministic multiple-cycle operations with enabling conditions function properly with the same data.

## Assertion Checks

WIN_UNCHANGE	The <i>test_expr</i> expression changed value during an open event window.
--------------	--



## Implicit X/Z Checks

test_expr contains X or Z	Expression value contained X or Z bits.
start_event contains X or Z	Start event value was X or Z.
end_event contains X or Z	End event value was X or Z.

## Cover Points

cover_window_open	BASIC — An event window opened ( <i>start_event</i> was TRUE).
cover_window_close	BASIC — An event window closed ( <i>end_event</i> was TRUE in an open event window).

## See also

ovl\_change  
ovl\_time  
ovl\_unchange


ovl\_win\_change  
ovl\_window

## Example

```
ovl_win_unchange #(
    'OVL_ERROR,                // severity_level
    8,                        // width
    'OVL_ASSERT,              // property_type
    "Error: a changed during divide", // msg
    'OVL_COVER_DEFAULT,      // coverage_level
    'OVL_POSEDGE,            // clock_edge
    'OVL_ACTIVE_LOW,         // reset_polarity
    'OVL_GATE_CLOCK)        // gating_type


    valid_div_win_unchange_a (
        clock,                // clock
        reset,                // reset
        enable,               // enable
        start,                // start_event
        a,                    // test_expr
        done,                 // end_event
        fire_valid_div_win_unchange_a ); // fire
```

Ensures that the *a* input to the divider remains unchanged while a divide operation is performed (i.e., in the window from *start* to *done*).

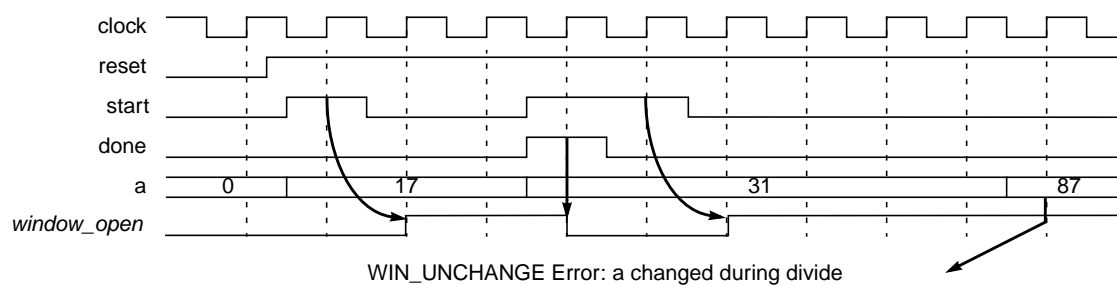

## ovl\_window

Ensures that the value of an expression is TRUE in a specified window between a start event and an end event.

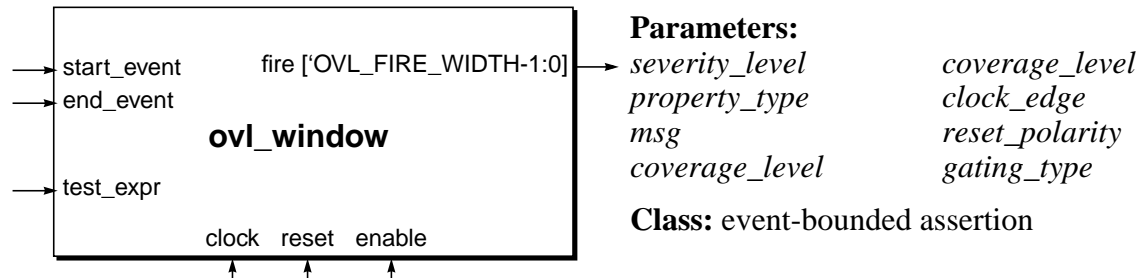

## Syntax

```
ovl_window
    [#(severity_level, property_type, msg, coverage_level, clock_edge,
        reset_polarity, gating_type)]
    instance_name (clock, reset, enable, start_event, test_expr, end_event,
        fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.

<code>enable</code>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<code>start_event</code>	Expression that opens an event window.
<code>test_expr</code>	Expression that should be TRUE in the event window
<code>end_event</code>	Expression that closes an event window.
<code>fire</code> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The `ovl_window` assertion checker checks the expression *start\_event* at each active edge of *clock* to determine if it should open an event window at the start of the next cycle. If *start\_event* is sampled TRUE, at each subsequent active edge of *clock*, the checker evaluates *end\_event* and *test\_expr*. If a sampled value of *test\_expr* is not TRUE, then the assertion fails. If *end\_event* is TRUE, the checker closes the event window and returns to the state of monitoring *start\_event* at the next active edge of *clock*.

The checker is useful for ensuring proper changes in structures after various events. For example, it can be used to check that multiple-cycle operations with enabling conditions function properly with the same data. It can be used to check that single-cycle operations function correctly with data loaded at different cycles. It also can be used to verify synchronizing conditions that require data to be stable after an initial triggering event.

## Assertion Checks

WINDOW	The <i>test_expr</i> expression changed value during an open event window.
--------	--

## Implicit X/Z Checks

<code>test_expr</code> contains X or Z	Expression value was X or Z.
<code>start_event</code> contains X or Z	Start event value was X or Z.
<code>end_event</code> contains X or Z	End event value was X or Z.

## Cover Points

<code>cover_window_open</code>	BASIC — A change check was initiated.
<code>cover_window_close</code>	BASIC — A change check lasted the full <i>num_cks</i> cycles.

## See also

[ovl\\_change](#)  
[ovl\\_time](#)  
[ovl\\_unchange](#)


[ovl\\_win\\_change](#)  
[ovl\\_win\\_unchange](#)

## Example

```
ovl_window #(
    'OVL_ERROR,                // severity_level
    'OVL_ASSERT,               // property_type
    "Error: write without grant", // msg
    'OVL_COVER_DEFAULT,       // coverage_level
    'OVL_POSEDGE,              // clock_edge
    'OVL_ACTIVE_LOW,          // reset_polarity
    'OVL_GATE_CLOCK)          // gating_type


    valid_sync_data_bus_write (
        clock,                // clock
        reset,                // reset
        enable,               // enable
        write,                 // start_event
        bus_gnt,              // test_expr
        write_ack,            // end_event
        fire_valid_sync_data_bus_write ); // fire
```

Ensures that the bus grant is not deasserted during a write cycle.

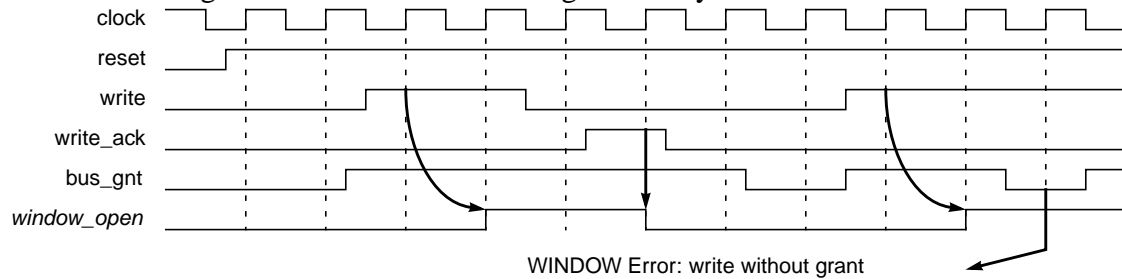

# ovl\_zero\_one\_hot

Ensures that the value of an expression is zero or one-hot.

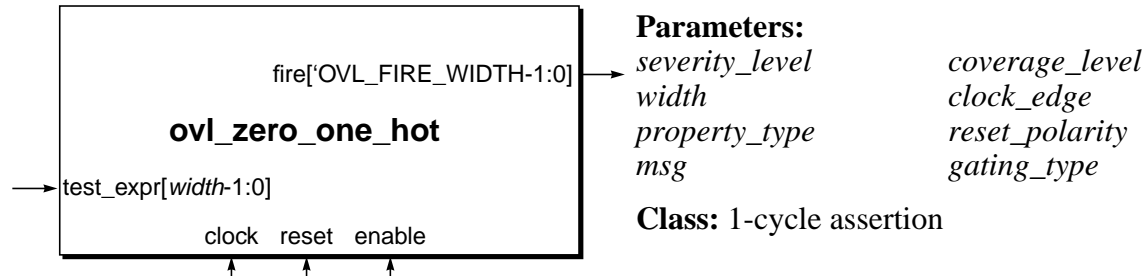

## Syntax

```
ovl_zero_one_hot
  [#(severity_level, width, property_type, msg, coverage_level,
    clock_edge, reset_polarity, gating_type, clock_edge,
    reset_polarity, gating_type)]
  instance_name (clock, reset, enable, test_expr, fire);
```

## Parameters

<i>severity_level</i>	Severity of the failure. Default: 'OVL_SEVERITY_DEFAULT ('OVL_ERROR).
<i>width</i>	Width of the <i>test_expr</i> argument. Default: 32.
<i>property_type</i>	Property type. Default: 'OVL_PROPERTY_DEFAULT ('OVL_ASSERT).
<i>msg</i>	Error message printed when assertion fails. Default: 'OVL_MSG_DEFAULT ("VIOLATION").
<i>coverage_level</i>	Coverage level. Default: 'OVL_COVER_DEFAULT ('OVL_BASIC).
<i>clock_edge</i>	Active edge of the <i>clock</i> input. Default: 'OVL_CLOCK_EDGE_DEFAULT ('OVL_POSEDGE).
<i>reset_polarity</i>	Polarity (active level) of the <i>reset</i> input. Default: 'OVL_RESET_POLARITY_DEFAULT ('OVL_ACTIVE_LOW).
<i>gating_type</i>	Gating behavior of the checker when <i>enable</i> is FALSE. Default: 'OVL_GATING_TYPE_DEFAULT ('OVL_GATE_CLOCK).

## Ports

<i>clock</i>	Clock event for the assertion.
<i>reset</i>	Synchronous reset signal indicating completed initialization.

<i>enable</i>	Enable signal for <i>clock</i> , if <i>gating_type</i> = 'OVL_GATE_CLOCK (the default gating type) or <i>reset</i> (if <i>gating_type</i> = 'OVL_GATE_RESET). Ignored if <i>gating_type</i> is 'OVL_NONE.
<i>test_expr</i> [ <i>width</i> -1:0]	Expression that should evaluate to either 0 or a one-hot value on the rising clock edge.
<i>fire</i> [ 'OVL_FIRE_WIDTH-1:0 ]	Fire output. Assertion failure when <i>fire</i> [0] is TRUE. X/Z check failure when <i>fire</i> [1] is TRUE. Cover event when <i>fire</i> [2] is TRUE.

## Description

The ovl\_zero\_one\_hot assertion checker checks the expression *test\_expr* at each active edge of *clock* to verify the expression evaluates to a one-hot value or is zero. A one-hot value has exactly one bit set to 1.

The checker is useful for verifying control circuits, circuit enabling logic and arbitration logic. For example, it can ensure that a finite-state machine with zero-one-cold encoding operates properly and has exactly one bit asserted high—or else is zero. In a datapath circuit the checker can ensure that the enabling conditions for a bus do not result in bus contention.

## Assertion Checks

ZERO_ONE_HOT	Expression evaluated to a value with multiple bits set to 1.
--------------	--

## Implicit X/Z Checks

<i>test_expr</i> contains X or Z	Expression value contained X or Z bits.
----------------------------------	---

## Cover Points

<i>cover_test_expr_change</i>	SANITY — Expression has changed value.
<i>cover_all_one_hots_checked</i>	CORNER — Expression evaluated to all possible combinations of one-hot values.
<i>cover_test_expr_all_zeros</i>	CORNER — Expression evaluated to 0.

## Notes

1. By default, the ovl\_zero\_one\_hot assertion is optimistic and the assertion fails if *test\_expr* has multiple bits not set to 0 (i.e. equals 1, X, Z, etc.). However, if 'OVL\_XCHECK\_OFF is set, the assertion fails if and only if *test\_expr* has multiple bits that are 1.

## See also


[ovl\\_one\\_cold](#)[ovl\\_one\\_hot](#)

## Example

```
ovl_zero_one_hot #(
    'OVL_ERROR,                // severity_level
    4,                        // width
    'OVL_ASSERT,              // property_type
    "Error: sel not zero or one-hot", // msg
    'OVL_COVER_DEFAULT,      // coverage_level
    'OVL_POSEDGE,            // clock_edge
    'OVL_ACTIVE_LOW,         // reset_polarity
    'OVL_GATE_CLOCK)        // gating_type

valid_sel_zero_one_hot (
    clock,                    // clock
    reset,                    // reset
    enable,                   // enable
    sel                       // test_expr
    fire_valid_sel_zero_one_hot); // fire
```

Ensures that *sel* is zero or one-hot at each rising edge of *clock*.

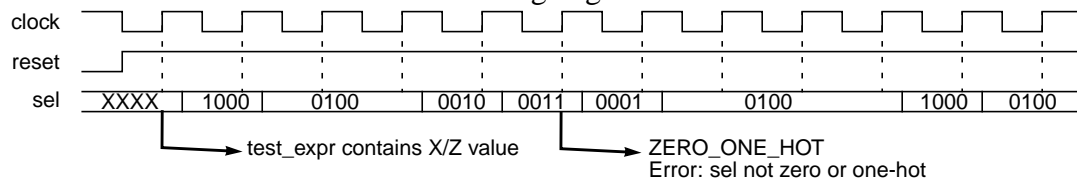



### Global Defines

Type	DEFINE	Description
Language	<code>`OVL_VERILOG</code>	(default) Creates assertion checkers defined in Verilog.
	<code>`OVL_SVA</code>	Creates assertion checkers defined in System Verilog.
	<code>`OVL_SVA_INTERFACE</code>	Ensures OVL assertion checkers can be instantiated in an SVA interface construct. Default: not defined.
	<code>`OVL_PSL</code>	Creates assertion checkers defined in PSL. Default: not defined.
Synthesizable Logic	<code>`OVL_SYNTHESIS</code>	Ensures OVL logic is synthesizable. Default: not defined.
Function	<code>`OVL_ASSERT_ON</code>	Activates assertion logic. Default: not defined.
	<code>`OVL_COVER_ON</code>	Activates coverage logic. Default: not defined.
Default Parameter Values	<code>`OVL_SEVERITY_DEFAULT</code>	Value of <i>severity_level</i> to use when the parameter is unspecified. Default: <code>`OVL_ERROR</code> .
	<code>`OVL_PROPERTY_DEFAULT</code>	Value of <i>property_type</i> to use when the parameter is unspecified. Default: <code>`OVL_ASSERT</code> .
	<code>`OVL_MSG_DEFAULT</code>	Value of <i>msg</i> to use when the parameter is unspecified. Default: "VIOLATION".
	<code>`OVL_COVER_DEFAULT</code>	Value of <i>coverage_level</i> to use when the parameter is unspecified. Default: <code>`OVL_COVER_BASIC</code> .
	<code>`OVL_CLOCK_EDGE_DEFAULT</code>	Value of <i>clock_edge</i> to use when the parameter is unspecified. Default: <code>`OVL_POSEDGE</code> .

Type	DEFINE	Description
Clock/Reset Gating	'OVL_RESET_POLARITY_DEFAULT	Value of <i>reset_polarity</i> to use when the parameter is unspecified. Default: 'OVL_ACTIVE_LOW.
	'OVL_GATING_TYPE_DEFAULT	Value of <i>gating_type</i> to use when the parameter is unspecified. Default: 'OVL_GATE_CLOCK.
	'OVL_GATING_OFF	Removes all gating logic and creates checkers with <i>gating_type</i> 'OVL_GATE_NONE. Default: each checker gated according to its <i>gating_type</i> parameter value..
Global Reset	'OVL_GLOBAL_RESET= <i>reset_signal</i>	Overrides the <i>reset</i> port assignments of all assertion checkers with the specified active low global reset signal. Default: each checker's reset is specified by the <i>reset</i> port.
Reporting	'OVL_MAX_REPORT_ERROR	Discontinues reporting a checker's assertion violations if the number of times the checker has reported one or more violations reaches this limit. Default: unlimited reporting.
	'OVL_MAX_REPORT_COVER_POINT	Discontinues reporting a checker's cover points if the number of times the checker has reported one or more cover points reaches this limit. Default: unlimited reporting.
	'OVL_INIT_MSG	Reports configuration information for each checker when it is instantiated at the start of simulation. Default: no initialization messages reported.
	'OVL_END_OF_SIMULATION= <i>eos_signal</i>	Performs quiescent state checking at end of simulation when the <i>eos_signal</i> asserts. Default: not defined.
Fatal Error Runtime	'OVL_RUNTIME_AFTER_FATAL	Number of time units from a fatal error to end of simulation. Default: 100.
X/Z Values	'OVL_IMPLICIT_XCHECK_OFF	Turns off implicit X/Z checks. Default: not defined.

Type	DEFINE	Description
	<code>'OVL_XCHECK_OFF</code>	Turns off all X/Z checks. Default: not defined.

## Internal Global Defines

The following global variables are for internal use and the user should not redefine them:

```
'endmodule
'module
'OVL_FIRE_WIDTH
'OVL_RESET_SIGNAL
'OVL_SHARED_CODE
'OVL_STD_DEFINES_H
'OVL_VERSION
```

## Defines Common to All Assertions

Parameter	DEFINE	Description
<i>severity_level</i>	<code>'OVL_FATAL</code>	Runtime fatal error.
	<code>'OVL_ERROR</code>	Runtime error.
	<code>'OVL_WARNING</code>	Runtime Warning.
	<code>'OVL_INFO</code>	Assertion failure has no specific severity.
<i>property_type</i>	<code>'OVL_ASSERT</code>	Assertion checks and X/Z checks are asserts.
	<code>'OVL_ASSUME</code>	Assertion checks and X/Z checks are assumes.
	<code>'OVL_ASSERT_2STATE</code>	Assertion checks are asserts. X/Z checks are disabled.
	<code>'OVL_ASSUME_2STATE</code>	Assertion checks are assumes. X/Z checks are disabled.
	<code>'OVL_IGNORE</code>	Assertion checks and X/Z checks are disabled.
<i>coverage_level</i>	<code>'OVL_COVER_ALL</code>	(default) Includes coverage logic for all of the checker's cover points if <code>'OVL_COVER_ON</code> is defined.
	<code>'OVL_COVER_NONE</code>	Excludes coverage logic for all of the checker's cover points.

Parameter	DEFINE	Description
	<code>'OVL_COVER_SANITY</code>	Includes coverage logic for the checker's SANITY cover points if <code>'OVL_COVER_ON</code> is defined. Can be bitwise-ORed with <code>'OVL_COVER_BASIC</code> , <code>'OVL_COVER_CORNER</code> and <code>'OVL_COVER_STATISTIC</code> .
	<code>'OVL_COVER_BASIC</code>	Includes coverage logic for the checker's BASIC cover points if <code>'OVL_COVER_ON</code> is defined. Can be bitwise-ORed with <code>'OVL_COVER_SANITY</code> , <code>'OVL_COVER_CORNER</code> and <code>'OVL_COVER_STATISTIC</code> .
	<code>'OVL_COVER_CORNER</code>	Includes coverage logic for the checker's CORNER cover points if <code>'OVL_COVER_ON</code> is defined. Can be bitwise-ORed with <code>'OVL_COVER_SANITY</code> , <code>'OVL_COVER_BASIC</code> and <code>'OVL_COVER_STATISTIC</code> .
	<code>'OVL_COVER_STATISTIC</code>	Includes coverage logic for the checker's STATISTIC cover points if <code>'OVL_COVER_ON</code> is defined. Can be bitwise-ORed with <code>'OVL_COVER_SANITY</code> , <code>'OVL_COVER_BASIC</code> and <code>'OVL_COVER_CORNER</code> .
<i>clock_edge</i>	<code>'OVL_POSEDGE</code>	Rising edges are active clock edges.
	<code>'OVL_NEGEDGE</code>	Falling edges are active clock edges.
<i>reset_polarity</i>	<code>'OVL_ACTIVE_LOW</code>	<i>Reset</i> is active when FALSE.
	<code>'OVL_ACTIVE_HIGH</code>	<i>Reset</i> is active when TRUE.
<i>gating_type</i>	<code>'OVL_GATE_NONE</code>	Checker ignores the <i>enable</i> input.
	<code>'OVL_GATE_CLOCK</code>	Checker pauses when <i>enable</i> is FALSE. The checker treats the current cycle as a NOP. Checks, counters and internal values remain unchanged.
	<code>'OVL_GATE_RESET</code>	Checker resets (as if the <i>reset</i> input became active) when <i>enable</i> is FALSE.

## Defines for Specific Assertions

Parameter	Checkers	DEFINE	Description
<i>action_on_new_start</i>	ovl_change	'OVL_IGNORE_NEW_START	Ignore new start events.
	ovl_frame		
	ovl_time	'OVL_RESET_ON_NEW_START	Restart check on new start events.
	ovl_unchange	'OVL_ERROR_ON_NEW_START	Assert fail on new start events.
		'OVL_ACTION_ON_NEW_START_DEFAULT	Value of <i>action_on_new_start</i> to use when the parameter is unspecified. Default: 'OVL_IGNORE_NEW_START.
<i>edge_type</i>	ovl_always_on_edge	'OVL_NOEDGE	Always initiate check.
		'OVL_POSEDGE	Initiate check on rising edge of sampling event.
		'OVL_NEGEDGE	Initiate check on falling edge of sampling event.
		'OVL_ANYEDGE	Initiate check on both edges of sampling event.
		'OVL_EDGE_TYPE_DEFAULT	Value of <i>edge_type</i> to use when the parameter is unspecified. Default: 'OVL_NOEDGE.
<i>necessary_condition</i>	ovl_cycle_sequence	'OVL_TRIGGER_ON_MOST_PIPE	Necessary condition is full sequence. Pipelining enabled.
		'OVL_TRIGGER_ON_FIRST_PIPE	Necessary condition is first in sequence. Pipelining enabled.
		'OVL_TRIGGER_ON_FIRST_NOPIPE	Necessary condition is first in sequence. Pipelining disabled.

Parameter	Checkers	DEFINE	Description
		'OVL_NECESSARY_CONDITION_DEFAULT	Value of <i>necessary_condition</i> to use when the parameter is unspecified. Default: 'OVL_TRIGGER_ON_MOST_PIPE.
<i>inactive</i>	ovl_one_cold	'OVL_ALL_ZEROS	Inactive state is all 0's.
		'OVL_ALL_ONES	Inactive state is all 1's.
		'OVL_ONE_COLD	(default) No inactive state.
		'OVL_INACTIVE_DEFAULT	Value of <i>inactive</i> to use when the parameter is unspecified. Default: 'OVL_ONE_COLD.