
Freescale MQX™ USB Host User's Guide

Document Number: MQXUSBHOSTUG

Rev. 4

06/2012

How to Reach Us:

Home Page:

www.freescale.com

E-mail:

support@freescale.com

USA/Europe or Locations Not Listed:

Freescale Semiconductor
Technical Information Center, CH370
1300 N. Alma School Road
Chandler, Arizona 85224
+1-800-521-6274 or +1-480-768-2130
support@freescale.com

Europe, Middle East, and Africa:

Freescale Halbleiter Deutschland GmbH
Technical Information Center
Schatzbogen 7
81829 Muenchen, Germany
+44 1296 380 456 (English)
+46 8 52200080 (English)
+49 89 92103 559 (German)
+33 1 69 35 48 48 (French)
support@freescale.com

Japan:

Freescale Semiconductor Japan Ltd.
Headquarters
ARCO Tower 15F
1-8-1, Shimo-Meguro, Meguro-ku,
Tokyo 153-0064, Japan
0120 191014 or +81 3 5437 9125
support.japan@freescale.com

Asia/Pacific:

Freescale Semiconductor Hong Kong Ltd.
Technical Information Center
2 Dai King Street
Tai Po Industrial Estate
Tai Po, N.T., Hong Kong
+800 26668334
support.asia@freescale.com

Information in this document is provided solely to enable system and software implementers to use Freescale Semiconductor products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits or integrated circuits based on the information in this document.

Freescale Semiconductor reserves the right to make changes without further notice to any products herein. Freescale Semiconductor makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in Freescale Semiconductor data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals", must be validated for each customer application by customer's technical experts. Freescale Semiconductor does not convey any license under its patent rights nor the rights of others. Freescale Semiconductor products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Freescale Semiconductor product could create a situation where personal injury or death may occur. Should Buyer purchase or use Freescale Semiconductor products for any such unintended or unauthorized application, Buyer shall indemnify and hold Freescale Semiconductor and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Freescale Semiconductor was negligent regarding the design or manufacture of the part.



Freescale™ and the Freescale logo are trademarks of Freescale Semiconductor, Inc. ARC, the ARC logo, ARCangel, ARCform, ARChitect, ARCompact, ARCTangent, BlueForm, CASSEIA, High C/C++, High C++, iCon186, MetaDeveloper, MQX, Precise Solution, Precise/BlazeNet, Precise/EDS, Precise/MFS, Precise/MQX, Precise/MQX Test Suites, Precise/RTCS, RTCS, SeeCode, TotalCore, Turbo186, Turbo86, V8 µ RISC, V8 microRISC, and VAutomation are trademarks of ARC International. High C and MetaWare are registered under ARC International. All other product or service names are the property of their respective owners.

© 1994-2008 ARC™ International. All rights reserved.

© Freescale Semiconductor, Inc. 2009-2012. All rights reserved.

Document Number: MQXUSBHOSTUG

Rev. 4

06/2012

Revision History

To provide the most up-to-date information, the revision of our documents on the World Wide Web will be the most current. Your printed copy may be an earlier revision. To verify you have the latest information available, refer to <http://www.freescale.com/mqx>.

The following revision history table summarizes changes contained in this document.

Revision Number	Revision Date	Description of Changes
Rev. 1	01/2009	Initial Release.
Rev. 2	04/2011	NOTE about USB OTG software/examples unavailability in the current MQX release added into the document.
Rev. 3	12/2011	Document re-written, 5 appendixes added.
Rev. 4	06/2012	Updated for MQX 3.8.1 - see 4.3, "USB HDK Changes in MQX 3.8.1"

Freescale™ and the Freescale logo are trademarks of Freescale Semiconductor, Inc.
© Freescale Semiconductor, Inc., 2009-2012. All rights reserved.



Chapter 1 Before You Begin

1.1	About This Book	7
1.2	Acronyms and abbreviations	7
1.3	Reference Material	7

Chapter 2 Get Familiar First

2.1	Introduction	9
2.2	Software Suite	9
2.3	Directory Structure	9

Chapter 3 Design Overview

3.1	Design Goals	12
3.1.1	Modularity	12
3.1.2	Hardware Abstraction	12
3.1.3	Performance	12
3.2	A Target Design	12
3.2.1	Complete USB Stack Diagram	14
3.3	Components Overview	14
3.3.1	Host Overview	14

Chapter 4 Developing Applications

4.1	Compiling Freescale MQX™ USB Host Stack	22
4.1.1	Why Rebuild USB Host Stack	22
4.2	Host Applications	24
4.2.1	Background	25
4.2.2	Create a Project	25
4.2.3	Define a Driver Info Table	28
4.2.4	Main application function flow	29
4.3	USB HDK Changes in MQX 3.8.1	32
4.3.1	Migration steps for USB host application	33

Appendix A Working with the Software

A.1	Introduction	34
A.1.1	Preparing the Setup	34
A.1.2	Building the Application	35
A.1.3	Running the application	36
A.2	Setup HyperTerminal to get log	40

Appendix B Human Interface Device (HID) Demo

B.1	Setting Up the Demo	46
B.2	Running the Demo	46
B.2.1	Mouse demo	47
B.2.2	Keyboard demo	50
B.2.3	Mouse and keyboard demo	54

Appendix C Virtual Communication (COM) Demo

C.1	Setting Up the Demo	55
C.2	Running the Demo	55

Appendix D Mass Storage Device (MSD) Demo

D.1	Setting Up the Demo	60
D.2	Running the Demo	60

Appendix E Audio Host Demo

E.1	Setting Up the Demo	63
E.2	Running the Demo	64

Chapter 1 Before You Begin

1.1 About This Book

This book describes the Freescale MQX™ USB Host Stack Architecture. This book does not distinguish between USB 1.1 and USB 2.0 information unless there is a difference between the two.

This book contains the following topics:

- [Chapter 1, “Before You Begin](#)
- [Chapter 2, “Get Familiar First](#)
- [Chapter 3, “Design Overview](#)
- [Chapter 4, “Developing Applications](#)
- [Appendix A, “Working with the Software](#)
- [Appendix B, “Human Interface Device \(HID\) Demo](#)
- [Appendix C, “Virtual Communication \(COM\) Demo](#)
- [Appendix D, “Mass Storage Device \(MSD\) Demo](#)
- [Appendix E, “Audio Host Demo](#)

1.2 Acronyms and abbreviations

Table 1-1. Acronyms and abbreviations

Term	Description
API	Application Programming Interface
CDC	Communication Device Class
DCI	Device Controller Interface
HCI	Host Controller Interface
HID	Human Interface Device
MSD	Mass Storage Device
MSC	Mass Storage Class
PHD	Personal Healthcare Device
PHDC	Personal Healthcare Device Class
QOS	Quality Of Service
SCSI	Small Computer System Interface
USB	Universal Serial Bus

1.3 Reference Material

As recommendation consult the following reference material:

Before You Begin

- *Universal Serial Bus Specification Revision 1.1*
- *Universal Serial Bus Specification Revision 2.0*
- *Freescale MQX USB Host API Reference Manual (MQXUSBHOSTAPIRM)*

Chapter 2 Get Familiar First

2.1 Introduction

Freescall Semiconductor provides Freescall MQX™ USB Host Stack operating at both low-speed and full speed. Freescall MQX™ USB Host Stack comes with support of a complete software stack combined with basic core drivers, class drivers, and plenty of sample programs that can be used to achieve the desired target product. This document intends to help customers develop an understanding of USB Host stack in addition to useful information on developing and debugging USB applications. No amount of documentation can replace the need to play with the source code. A good understanding of the USB Host stack can be developed when this document is read in combination with API documentation provided with the software suite. The document is targeted for firmware and software engineers that are familiar with basic terms on USB and are involved with direct development of the product on USB Host Stack.

2.2 Software Suite

The Freescall MQX™ USB Host Stack software consists of the:

- Class Layer API
- Device Framework
- Host Layer API

Class layer API (USB host class API) consists of the functions that can be used at the class level. This enables you to implement new application based on pre-defined classes. This document describes four generic class implementations: Communication Device Class (CDC), Human Interface Device (HID), Mass Storage Class (MSD), Hub Class, and Audio Class API functions that are provided as part of the software suite. The API functions defined for these classes can be used to make applications.

Device Framework consists of functions that are used to support device requests that are common for all USB devices.

Host Layer API consists of the functions that can be used at the host level and support implementation on class level.

For better understanding, see the Freescall MQX™ USB Host API Reference Manual (MQXUSBHOSTAPIRM).

2.3 Directory Structure

The following bullets display the complete tree of Freescall MQX™ USB Host Stack

- Freescall MQX \usb\host\examples — Sample codes for host firmware development
- Freescall MQX \usb\host\source — All source files that drive the device controller core
- Freescall MQX \lib — Output when all libraries and header files are copied when USB software tree is built

Table 2-1 briefly explains the purpose of each of the directories in the source tree.

Table 2-1. Directory Structure

Directory Name	Descriptor
Usb	Root directory of the software stack
\lib\usbh	Output directory of the build
usb\host\build	* .mcp - for building the complete project.
usb\host\examples	Host-side class-driver examples
usb\host\source\classes	Class drivers sources
usb\host\source	USB Host API sources
usb\host\source\host\khci	USB Host core drivers
Usb\host\source\rtos\mqx	RTOS layer source

Figure 2-1 shows the default directory structure.

NOTE

Figure 2-1 may not represent the latest tree but can give an idea of the USB Host stack structure.

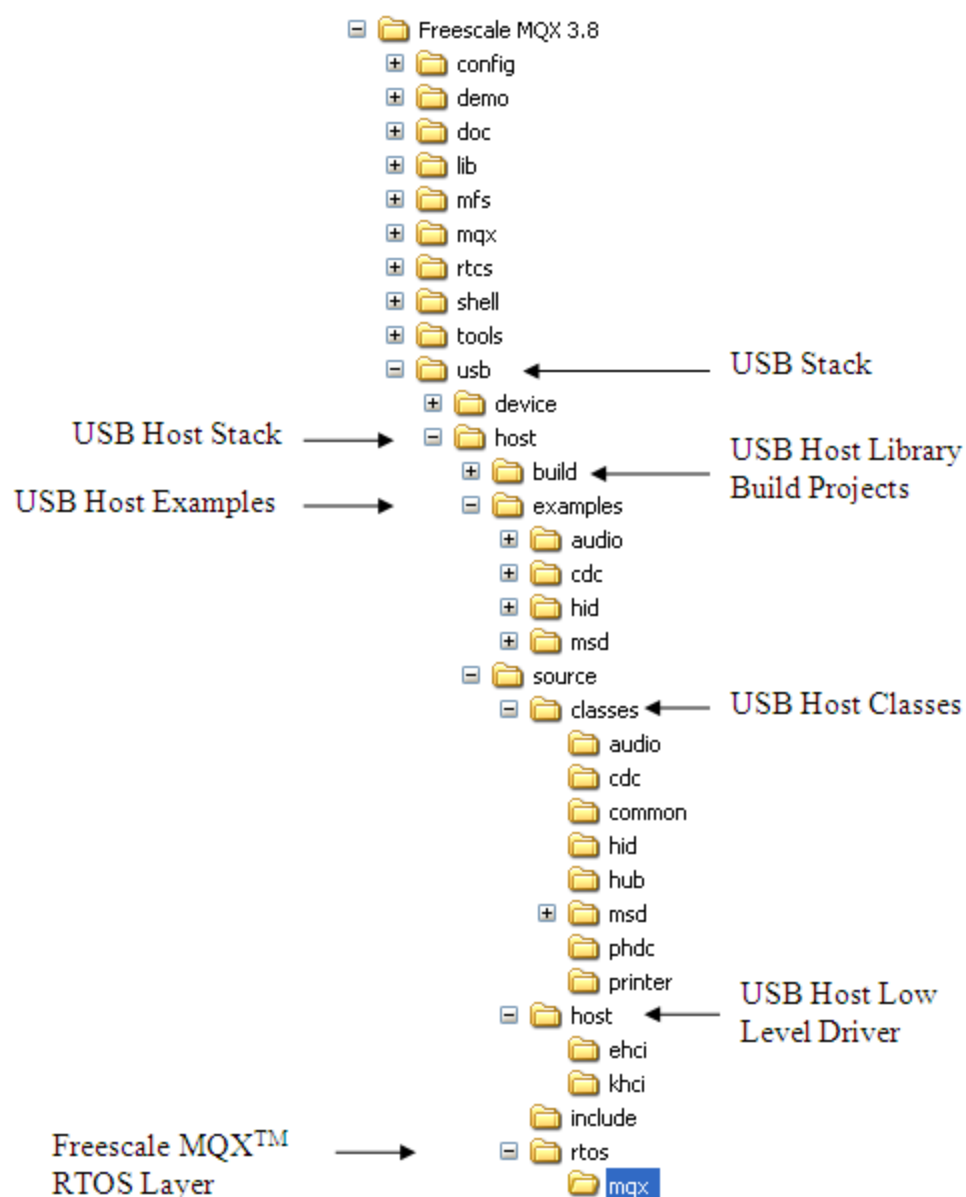


Figure 2-1. Default Directory Structure

Chapter 3 Design Overview

3.1 Design Goals

Freescale MQX™ USB Host stack has been designed with the following goals in mind.

3.1.1 Modularity

One of the goals of embedded software design is to achieve the target functionality with minimum code size and minimum components required for the product design. USB Host stack is designed to be flexible in architecture in a way that undesired components can be taken away from the software suite. It remains a constant goal from the USB Host stack team to add the extra functionality as a plug in module that can be completely eliminated at compile time.

3.1.2 Hardware Abstraction

One goal of the USB Host stack is to provide true hardware independence in the application code. The USB Host stack is provided with API routines that can detect the speed of the core and allow the application layer to make smart decisions based on the speed they are running under.

3.1.3 Performance

The USB Host stack has been designed to keep top performance, because API provides tight interaction with hardware. It is possible to eliminate the class drivers, operating system, or undesired routines from stack software to get the best performance possible on a target. The USB Host stack is designed to function under a single thread with minimum interrupt latency. If looking at the code underneath, notice the USB Host stack is actually a two-layer stack with the constant goal of keeping the minimum layers and code lines required to achieve the abstraction goal.

3.2 A Target Design

A USB system is made of a host and one or more devices that respond to the host request. The following figure shows the Target Design of USB stack

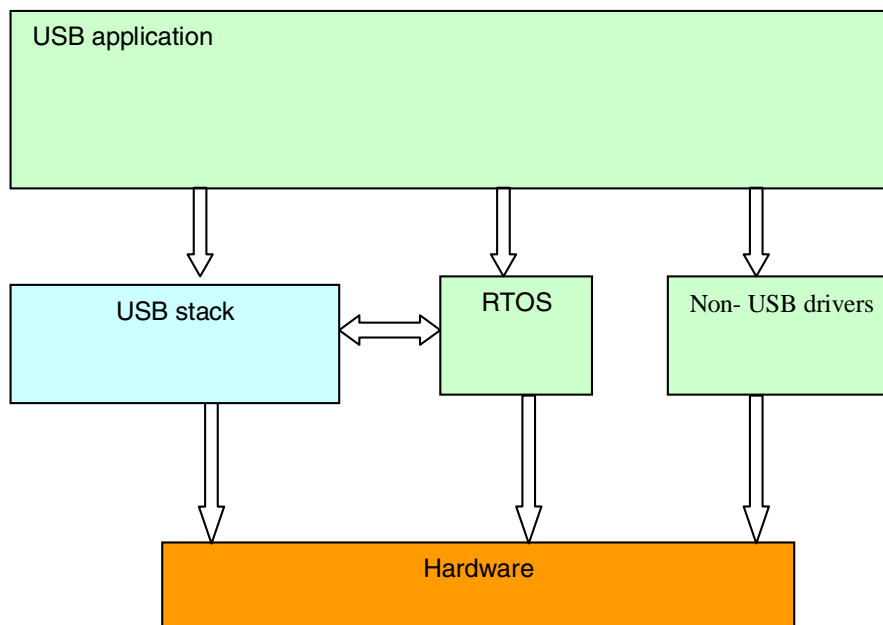


Figure 3-1. Target Design of USB Host Stack

The customer application can communicate with USB hardware using Freescale MQX™ USB stack. [Figure 3-2](#) goes deeper inside the stack design.

3.2.1 Complete USB Stack Diagram

The following figure shows the USB Stack Diagram

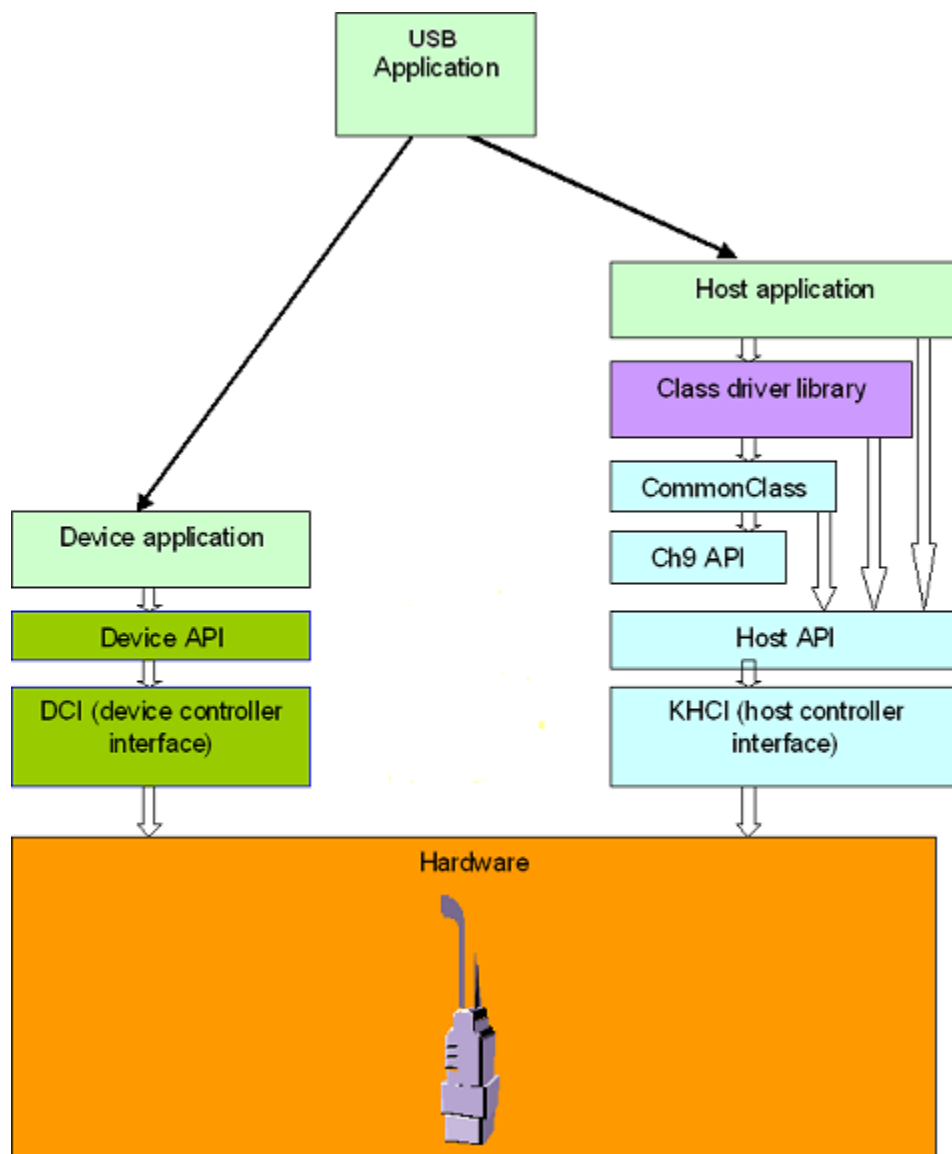


Figure 3-2. Complete USB Stack Diagram

3.3 Components Overview

3.3.1 Host Overview

The purpose of the Freescale MQX™ USB Host Stack is to provide an abstraction of the USB hardware controller core. A software application written using the host API can run on full-speed or low-speed core with no information about the hardware. In the USB, the host interacts with the device using logical pipes. After the device is enumerated, a software application needs the capability to open and close the pipes.

After a pipe is opened with the device, the software application can queue transfers in either direction and is notified with the transfer result through an error status. In short, the communication between host and device is done using logical pipes that are represented in the stack as pipe handles. Figure 3-3 shows the description of each of the blocks shown as part of the host API.

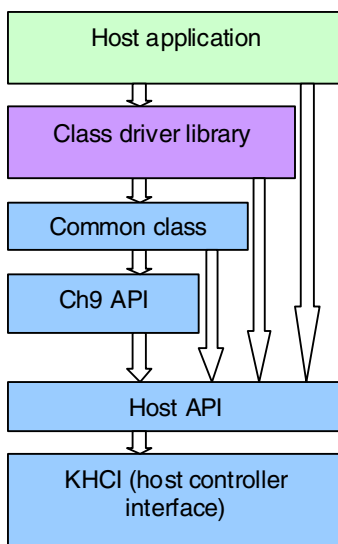


Figure 3-3. Freescale MQX™ USB Host Stack

3.3.1.1 Host Application

A host embedded application software (also called a device driver) is implemented for a target device or a class of device. Freescale MQX™ USB Host Stack comes with examples for a few classes of USB Host. Application software can use API routines to start and stop communication with a USB bus. It can suspend the bus or wait for a resume signal for the bus. Please see Chapter 4, “Developing Applications” for more details.

3.3.1.2 Class-Driver Library

The class-driver library is a set of wrapper routines that can be linked into the application. These routines implement standard functionality of the class of device, defined by USB class specifications.

It is important to note that even though a class library can help in reducing some implementation effort at the application level, some USB devices do not implement class specifications, making it extremely difficult to write a single application code that can talk to all the devices. Storage devices mainly follow universal floppy interface (UFI) specifications making it easy to write an application that can talk to most storage devices.

The USB Host stack comes with a class library for UFI commands that can be called to talk to this kind of device. It is important to understand that a class-driver library is a set of wrapper routines written on a USB Host stack and does not necessarily have to be used.

The design of the class driver libraries in the USB Host stack follows a standard template. All libraries have an initialization routine called by the USB Host stack when a device of that particular class is plugged in. This routine allocates memory required for a class driver and constructs a structure called class handle.

Application software can receive the class handle when an interface is selected in the device, see [Chapter 4, “Developing Applications](#). Once an interface is selected, applications can call class driver routines by using this handle and other necessary parameters. An implementation approach of class-specific routines is class-dependent and can vary completely from class to class. [Figure 3-4](#) demonstrates the general design of all class-driver libraries.

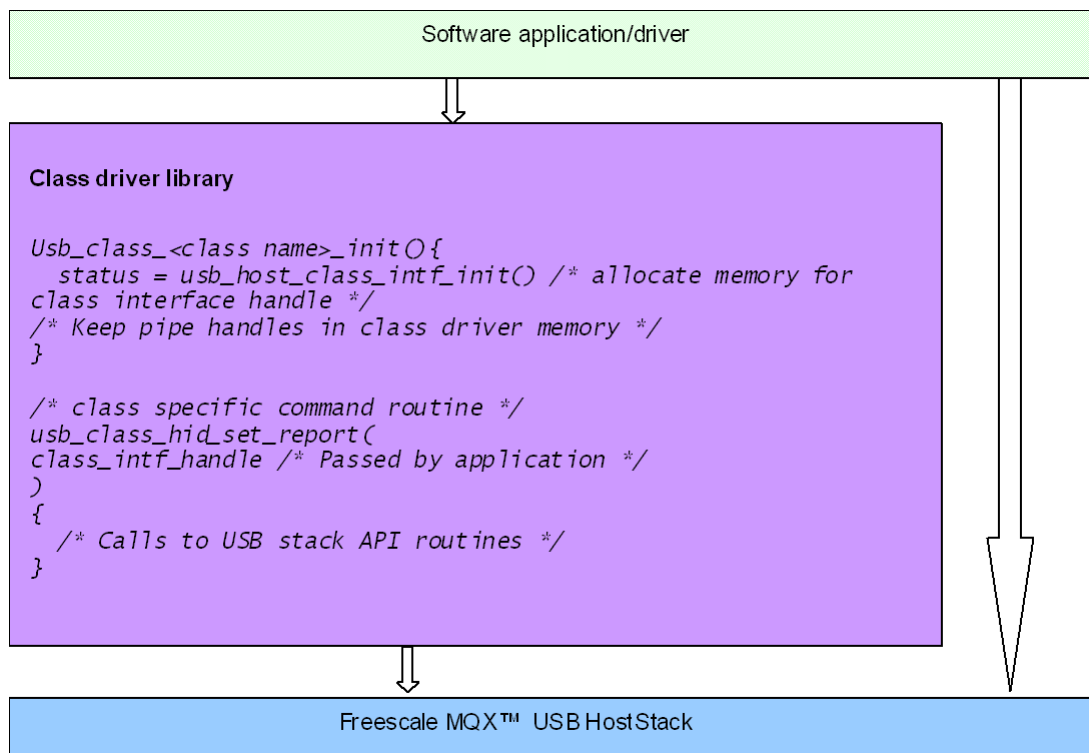


Figure 3-4. General Design of Class-Driver Libraries

3.3.1.3 Example of Mass-Storage Class-Driver Design

This section describes the driver design for the mass-storage class.

3.3.1.4 Architecture and Data Flow

All the USB mass-storage commands are comprised of three phases:

- CBW (Command Block Wrapper)
- Data
- CSW (Command Status Wrapper)

For details of these phases see reference document on the USB mass-storage specifications. The mass-storage commands supported by the class-driver library are listed in the Mass Storage Class API documentation.

The Freescale MQX™ USB Host Stack Mass Storage Device class-driver library takes a command from an application and queues it in the local queue. It then starts with the CBW phase of the transfer followed by DATA and CSW phases. After the status phase is finished, it picks up the next transfer from the queue and repeats the same steps. It can make very high level calls on a UFI command set as read capacity or format drive and wait until a completion interrupt is received.

The CBW and CSW phase data are both described in two USB standard data structures:

- *CBW_STRUCT*
- *CSW_STRUCT*

All the information concerning the mass-storage command, for example CBW and CSW structure pointer, data pointer, length, and so on are contained in the command structure *COMMAND_OBJECT_STRUCT*. Applications use this structure to queue the commands inside the class-driver library. If an application wants to send a vendor-specific call to a storage device it must fill the fields of this structure and send it down to the library using a routine that can pass the command down to the USB.

All the commands have a single-function entry point in the mass-storage API. However, all the commands are mapped into a single function, using the *#defined* key word for code efficiency:

`usb_mass_ufi_generic()` (see `usb_mass_ufi.c` and `usb_mass_ufi.h`).

All the data-buffer transmissions are executed using pointer and length parameters. There is no buffer copying across functions.

The interface between the mass-storage device class driver and the USB Host driver is the **`usb_host_send_data()`** function. The parameters of this function are:

- The handle onto the USB Host peripheral.
- The handle onto the communication pipe with the mass-storage device.
- A structure describing the transfer parameter, size, and data pointer.

The objects in [Figure 3-5](#) represent the following:

- The yellow arrows represent events originated in the USB Host driver.
- The black arrows represent movement to and from the mass-storage command queue.

- The boxes represent functions with actions taken and functions called.

Numbers one to ten represent the sequence of events or queue movements.

Functions with *_mass_* in their names are from the USB mass-storage library. Functions with *_host_* in their names are links to the USB host-driver library. Look up the functions in the class-driver library source for better understanding of the code flow.

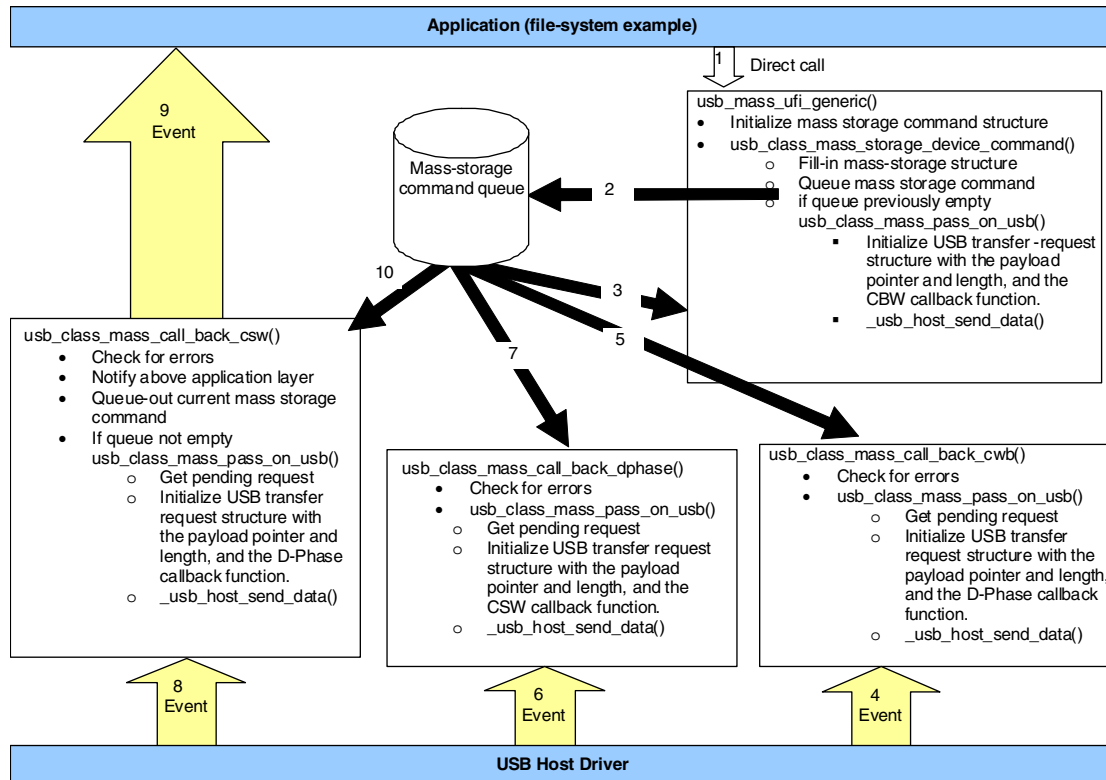


Figure 3-5. Mass-Storage-Driver Code Flow

3.3.1.5 Common-Class API

Common-class API is a layer of routines that implements the common-class specification of the USB and an operating system level abstraction of the USB system. This layer interacts with the host API layer functions and by looking at the API document it is difficult to say what routines belong to this layer. It is a deliberate design attempt to reuse routines to minimize the code size.

Routines inside the common-class layer take advantage of the fact that in USB all devices are enumerated with the same sequence of commands. When a USB device is plugged into the host hardware, it generates an interrupt, and lower-level drivers call the common-class layer to start the device. Routines inside the common-class layer allocate memory, assign the USB address, and enumerate the device. After the device descriptors are identified, the common-class layer searches for applications that are registered for the class or device plugged in. If a match is found, a callback is generated for the application to start communicating with the device. See [Chapter 4, “Developing Applications”](#) for information on how an application handles a plugged-in device. [Figure 3-6](#) illustrates how device plugin works.

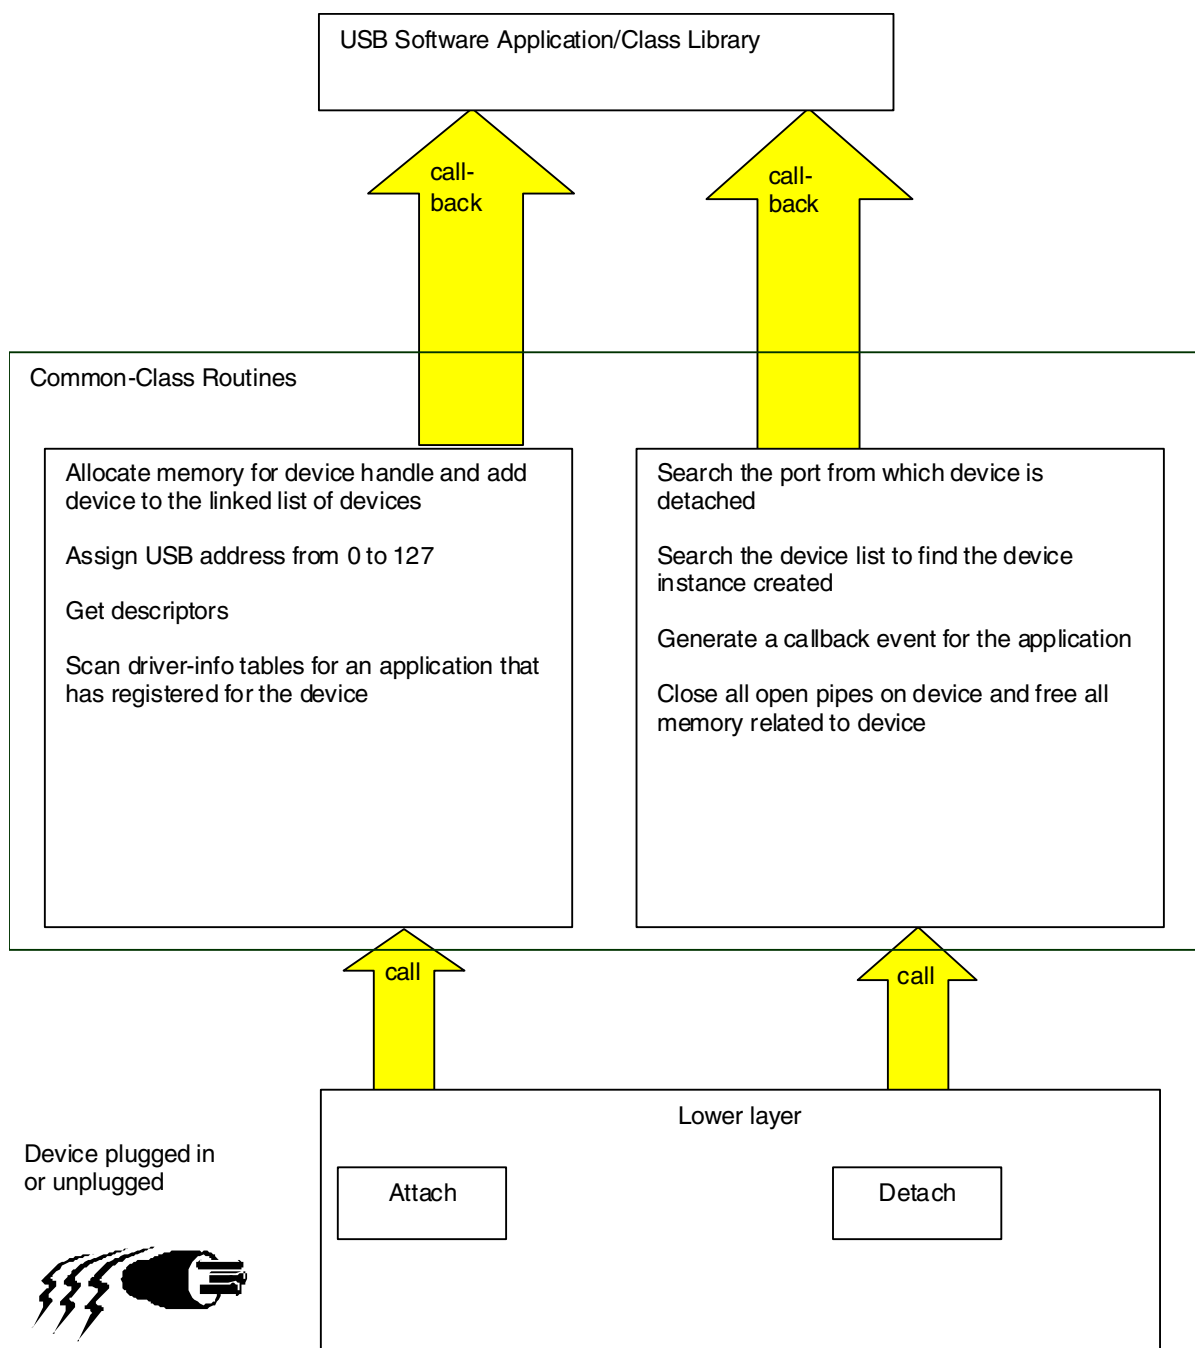


Figure 3-6. How Devices are Attached and Detached

3.3.1.6 USB Chapter 9 API

The USB specification document has Chapter 9 that is dedicated to standard command protocol implemented by all USB devices. All USB devices are required to respond to a certain set of requests from the host. This API is a low-level API that implements all USB Chapter 9 commands. All customer applications can be written to use only this API and without the common-class API or class libraries.

The USB Chapter 9 commands are outside the scope of this document and it requires a good familiarity with USB protocol and higher-level abstraction of USB devices. In conclusion, the following are some of the example routines that are implemented by this API. Please see the source code for implementation details.

- **usb_host_ch9_dev_req ()** — For sending control pipe setup packets.
- **_usb_host_ch9_clear_feature()** — For a clear feature USB command.
- **_usb_host_ch9_get_descriptor ()** — For receiving descriptors from device.

3.3.1.7 Host API

The host API is a hardware abstraction layer of the Freescale MQX™ USB Host stack. This layer implements routines independent of underlying USB controllers. For example, **usb_host_init()** initializes the host controller by calling the proper hardware-dependent routine. Similarly **usb_host_shutdown()** shuts down the proper hardware host controller. The following are the architectural functions implemented by this layer.

- This layer allocates pipes from a pool of pre-allocated pipe memory structures when **usb_host_open_pipe ()** is called.
- This layer maintains a list of all transfers pending per pipe. This is used in freeing all memory when pipe is closed.
- This layer maintains a link list of all services (callbacks) registered with the stack. When a specific hardware event such as attach or detach occurs, it generates a callback and informs the upper layers.
- This layer provides routines to cancel USB transfers by calling hardware-dependent functions.
- This layer provides other hardware-control routines such as the ability to shutdown the controller, suspend the bus, and so on.

A good understanding of the source inside the API layer can be developed by reading the API routine and tracing it down to the hardware drivers.

3.3.1.8 HCI (Host Controller Interface)

HCI is a completely hardware-dependent set of routines responsible for queuing and processing of USB transfers and searching for hardware events. Source understanding of this layer requires understanding of hardware.

The MQX implements drivers for two kinds of HCIs:

- KHCI - used in ColdFire V2 and some Kinetis devices.
- EHCI - used in high-end ColdFire V4 and some Kinetis and PowerPC devices.

Chapter 4 Developing Applications

4.1 Compiling Freescale MQX™ USB Host Stack

4.1.1 Why Rebuild USB Host Stack

It is necessary to rebuild the USB Host stack if any of the following is done:

- Change compiler options (optimization level)
- Change USB Host stack compile-time configuration options
- Incorporate changes made to the USB Host source code

CAUTION

It is not recommend to modify USB Host stack data structures. If so, some of the components in the Precise Solution™ Host Tools family of host software-development tools may not perform correctly. Modify USB Host stack data structures only if experienced with the USB Host stack.

4.1.1.1 Before Beginning

Before rebuilding the USB Host stack:

- Read the MQX User Guide document for MQX RTOS rebuild instructions. A similar concept also applies to the USB Host stack.
- Read the MQX release notes that accompany Freescale MQX to obtain information specific to target environment and hardware.
- Have the required tools for target environment:
 - compiler
 - assembler
 - linker
- Get familiarized with the USB Host stack directory structure, re-build instructions as described in the release notes document and the instructions provided in the following sections

4.1.1.2 USB Directory Structure

The following figure shows the MQX USB Host Stack directory structure

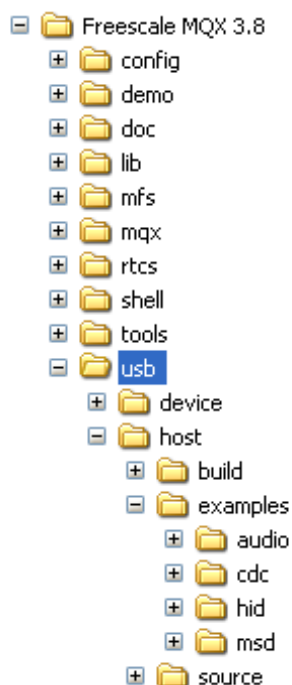


Figure 4-1. MQX USB Host Stack directory structure

The table below describes the USB Host stack directory structure.

config	The main configuration directory
<board>	Board-specific directory which contains the main configuration file (user_config.h)
usb\host	Root directory for USB Host stack within the Freescale MQX distribution
\build	
\<compiler>	Development tool-specific build files (project files)
\examples	
\example	Source files (.c) for the example and the example's build project.
\source	All USB Host stack source code files
\lib	
\<board>.\<comp>\usb	USB Host stack library files built for hardware and environment

4.1.1.3 USB Host Stack Build Projects in Freescale MQX

The USB Host stack build project is constructed like other core library projects included in Freescale MQX RTOS. The build project for a given development environment (for example CodeWarrior) is located in the `usb\host\build\<compiler>` directory. The USB Host stack code is not specific to any particular board nor to a processor derivative, a separate USB Host stack build project exists for each supported board. The resulting library file is built into a board-specific output directory in `lib\<board>.<compiler>`.

The reason this board-independent code is built into the board-specific output directory is because it can be configured for each board separately. The compile time user-configuration file is taken from a board-specific directory `config\<board>`. The user may want to build the resulting library code differently for two different boards. See the MQX User Guide for more details

4.1.1.3.1 Post-Build Processing

All USB Host stack build projects are configured to generate the resulting binary library file in the top-level `lib\<board>.<compiler>\usb` directory. For example, the CodeWarrior libraries for the M52259EVB board are built into the `lib\m52259evb.cw\usb` directory.

The USB Host stack build project is also set up to execute a post-build batch file that copies all the public header files to the destination directory. This makes the output `\lib` directory, the only place accessed by the application code. The MQX applications projects that need to use the USB Host stack services do not need to make any reference to the USB Host stack source tree.

4.1.1.3.2 Build Targets

Development tools enable multiple build configurations, so called build targets. All projects in the Freescale MQX USB Host stack contain at least two build targets:

- Debug Target — Compiler optimizations are set low to enable easy debugging. Libraries built using this target are named “_d” postfix (for example, `lib\m52259evb.cw\usb\usb_hdk_d.a`).
- Release Target — Compiler optimizations are set to maximum to achieve the smallest code size and fast execution. The resulting code is hard to debug. The Generated library name does not get any postfix (for example, `lib\m52259evb.cw\usb\usb_hdk.a`).

4.1.1.4 Rebuilding Freescale MQX USB Host Stack

Rebuilding the MQX USB Host stack library is a simple task that involves opening only the proper build project in the development environment and building it. Do not forget to select the proper build target to build or build all targets.

For specific information about rebuilding MQX USB Host stack and the example applications, see Freescale MQX release notes.

4.2 Host Applications

The following steps are described to achieve the host functionality.

4.2.1 Background

In the USB system, the host software controls the bus and talks to the target devices under the rules defined by the specification. A device is represented by a configuration which is collection of one or more interfaces. Each interface comprises of one or more endpoints. Each endpoint is represented as a logical pipe from the application software perspective.

The host application software registers for services with the USB Host stack and describes the callback routines inside the driver info table. When a USB device is connected, the USB Host stack driver enumerates the device automatically and generates interrupts for the application software. One interrupt per interface is generated on the connected device. If the application likes to talk to an interface, it can select that interface and receive the pipe handles for all the end points. See the host API document with the source code example to see what routines are called to find pipe handles. After the application software receives the pipe handles, it can start communication with the pipes. If the software likes to talk to another interface or configuration, it can call the appropriate routines again to select another interface.

The USB Host stack is a few lines of code before one starts communication with the USB device. Examples on the USB stack can be written with only a host API. However, most examples supplied with the stack are written using class drivers. Class drivers work with the host API as a supplement to the functionality. It makes it easy to achieve a target functionality (see example sources for details) without the hassle of dealing with implementation of standard routines. The following code steps are taken inside a host application driver for any specific device.

4.2.2 Create a Project

Perform these steps to develop a new application:

1. Make a new application directory under /host/examples directory. The new application directory is to make the new application.

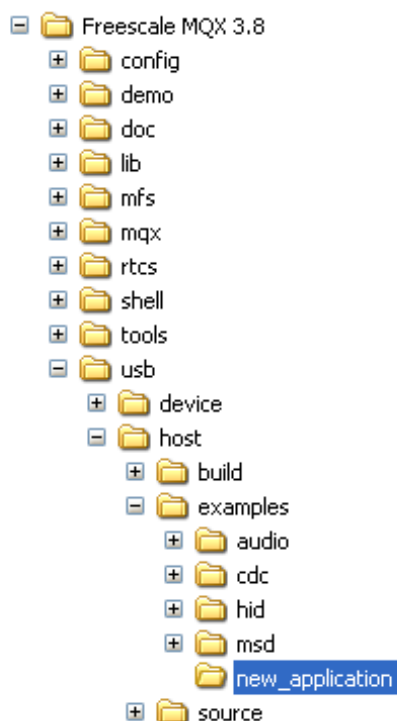


Figure 4-2. Create directory for application

2. Copy the `usb_classes.h` file from similar existing applications.
`usb_classes.h` is used to define classes that use in application.
 Example: If you want to create an application that use HID and HUB, you can define as:


```
#define USBCLASS_INC_HID
#define USBCLASS_INC_HUB
```
3. Create directory where the project files for a new application can be created.




Figure 4-3. Create CodeWarrior project and `usb_classes.h` file

4. Create new files for creating the main application function and the callback.

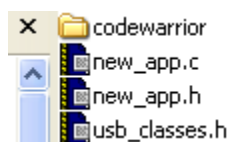


Figure 4-4. Create header and code file

- The new_app.h file contains application types and definitions:

Examples:

```

Define states of device          :
/* Used to initialize USB controller */
#define MAX_FRAME_SIZE          1024
#define HOST_CONTROLLER_NUMBER    0
#define HID_BUFFER_SIZE          4
#define USB_DEVICE_IDLE          (0)
#define USB_DEVICE_ATTACHED      (1)
#define USB_DEVICE_CONFIGURED    (2)
#define USB_DEVICE_SET_INTERFACE_STARTED (3)
#define USB_DEVICE_INTERFACED    (4)
#define USB_DEVICE_SETTING_PROTOCOL (5)
#define USB_DEVICE_INUSE         (6)
#define USB_DEVICE_DETACHED      (7)
#define USB_DEVICE_OTHER         (8)

/*
** Following structs contain all states and pointers
** used by the application to control/operate devices.
*/

typedef struct device_struct {
    uint_32                DEV_STATE; /* Attach/detach state */
    _usb_device_instance_handle DEV_HANDLE;
    _usb_interface_descriptor_handle INTF_HANDLE;
    CLASS_CALL_STRUCT       CLASS_INTF; /* Class-specific info */
} DEVICE_STRUCT, _PTR_ DEVICE_STRUCT_PTR;

/* Alphabetical list of Function Prototypes */

#ifdef __cplusplus
extern "C" {
#endif

void usb_host_hid_rcv_callback(_usb_pipe_handle, pointer, uchar_ptr, uint_32,
    uint_32);
void usb_host_hid_ctrl_callback(_usb_pipe_handle, pointer, uchar_ptr, uint_32,
    uint_32);
void usb_host_hid_mouse_event(_usb_device_instance_handle,
    _usb_interface_descriptor_handle, uint_32);

#ifdef __cplusplus
}
#endif

```

- The new_app.c file contains driver informations, callback functions and event functions and main function.

4.2.3 Define a Driver Info Table

A driver info table defines devices that are supported and handled by this target application. This table defines the PID, VID, class, and subclass of the USB device. The Host stack generates an attached callback when a device matches this table entry. The application now can communicate to the device. The following structure defines one member of the table. If the Vendor-Product pair does not match for a device, Class-Subclass, and Protocol is checked to match. Use 0xFF in SubClass and Protocol struct members to match any SubClass/Protocol.

```
/* Information for one class or device driver */
typedef struct driver_info
{
    uint_8      idVendor[2];      /* Vendor ID per USB-IF */
    uint_8      idProduct[2];     /* Product ID per manufacturer */
    uint_8      bDeviceClass;     /* Class code, 0xFF if any */
    uint_8      bDeviceSubClass;  /* Sub-Class code, 0xFF if any */
    uint_8      bDeviceProtocol;  /* Protocol, 0xFF if any */
    uint_8      reserved;        /* Alignment padding */
    event_callback attach_call;    /* event callback function*/
} USB_HOST_DRIVER_INFO, _PTR_ USB_HOST_DRIVER_INFO_PTR;
```

The following is a sample driver info table. See the example source code for samples. Notice the following table defines all HID MOUSE devices that are boot subclass. A terminating NULL entry in the table is always created for search end.

Because in HID MOUSE application, two classes is used (HID and HUB), so that the DriverInfoTable variables has 3 elements. There are 2 event callback functions for 2 classes:

usb_host_hid_keyboard_event for HID class and **usb_host_hub_device_event** for HUB class.

```
/* Table of driver capabilities this application wants to use */
static USB_HOST_DRIVER_INFO DriverInfoTable[] = {
{
    {0x00, 0x00},      /* Vendor ID per USB-IF */
    {0x00, 0x00},      /* Product ID per manufacturer */
    USB_CLASS_HID,      /* Class code */
    USB_SUBCLASS_HID_BOOT, /* Sub-Class code */
    USB_PROTOCOL_HID_KEYBOARD, /* Protocol */
    0,                  /* Reserved */
    <add the name of your event callback function here>
    usb_host_hid_keyboard_event /* Application call back function */
},
/* USB 1.1 hub */
{
    {0x00, 0x00},      /* Vendor ID per USB-IF */
    {0x00, 0x00},      /* Product ID per manufacturer */
    USB_CLASS_HUB,      /* Class code */
    USB_SUBCLASS_HUB_NONE, /* Sub-Class code */
    USB_PROTOCOL_HUB_LS, /* Protocol */
    0,                  /* Reserved */
    <add the name of your event callback function here>
}
```

```

        usb_host_hub_device_event /* Application call back function */
    },
    {
        {0x00, 0x00}, /* All-zero entry terminates */
        {0x00, 0x00}, /* driver info list. */
        0,
        0,
        0,
        0,
        NULL},
    }

```

4.2.4 Main application function flow

In main application function, it is necessary to follow these steps:

1. Initializing hardware
2. Initializing the Host Controller
3. Register service

Call tasks in a forever loop

4.2.4.1 Initializing the Host Controller

The first step required to act as a host is to initialize the stack in host mode. This allows the stack to install a host interrupt handler and initialize the necessary memory required to run the stack. The following example illustrates this:

```

error = _usb_host_init(0, 1024, &host_handle);
if (error != USB_OK)
{
    printf("\nUSB Host Initialization failed. Error: %x", error);
    fflush(stdout);
}

```

Second argument (1024 in the above example) in the above code is the size of periodic frame list. Full speed customers can ignore the argument.

4.2.4.2 Register Services

Once the host is initialized, the USB Host stack is ready to provide services. An application can register for services as documented in the host API document. The host API document allows the application to register for an attached service, but applications that are using the driver info table do not need to register for this service because the driver info table already registers a callback routine. The following example shows how to register for a service on the host stack:

```

error = _usb_host_register_service (host_handle,
USB_SERVICE_HOST_RESUME,
App_process_host_resume);

```

This code registers a routine called `app_process_host_resume()` when the USB host controller resumes operating after a suspend. See the USB specifications on how to suspend and resume work under the USB Host.

NOTE

Some examples do not register for services because the driver info table has already registered the essential routine for the attached service.

4.2.4.3 Enumeration Process of a Device

After the software has registered the driver info table and registered for other services, it is ready to handle devices. In the USB Host stack, customers do not have to write any enumeration code. As soon as the device is connected to the host controller, the USB Host stack enumerates the device and finds how many interfaces are supported. Also, for each interface it scans the registered driver info tables and finds which application has registered for the device. It provides a callback if the device criteria matches the table. The application software has to choose the interface. Here is a sample code that does this:

```
void usb_host_hid_mouse_event
(
    /* [IN] pointer to device instance */
    _usb_device_instance_handle dev_handle,

    /* [IN] pointer to interface descriptor */
    _usb_interface_descriptor_handle intf_handle,

    /* [IN] code number for event causing callback */
    uint_32 event_code
)
{ /* Body */
    INTERFACE_DESCRIPTOR_PTR intf_ptr =
        (INTERFACE_DESCRIPTOR_PTR)intf_handle;

    fflush(stdout);
    switch (event_code) {
        case USB_CONFIG_EVENT:
            /* Drop through into attach, same processing */
        case USB_ATTACH_EVENT:
            fflush(stdout);
            printf("State = %d", hid_device.DEV_STATE);
            printf(" Class = %d", intf_ptr->bInterfaceClass);
            printf(" SubClass = %d", intf_ptr->bInterfaceSubClass);
            printf(" Protocol = %d\n", intf_ptr->bInterfaceProtocol);
            fflush(stdout);

            if (hid_device.DEV_STATE == USB_DEVICE_IDLE) {
                hid_device.DEV_HANDLE = dev_handle;
                hid_device.INTF_HANDLE = intf_handle;
                hid_device.DEV_STATE = USB_DEVICE_ATTACHED;
            } else {
                printf("HID device already attached\n");
                fflush(stdout);
            }
    }
}
```

```

    } /* Endif */
    break;

```

Notice that in the above code, the application matched the first call to the `USB_ATTACH_EVENT()` and stored the interface handle under a local variable called `hid_device.INTF_HANDLE`. It also changed the state of the program to `USB_DEVICE_ATTACHED`.

4.2.4.4 Selecting an Interface on Device

If the interface handle has been obtained, application software can select the interface and retrieve pipe handles. The following code demonstrates this procedure:

```

case USB_DEVICE_ATTACHED:
    printf("Mouse device attached\n");
    hid_device.DEV_STATE = USB_DEVICE_SET_INTERFACE_STARTED;
    status = _usb_hostdev_select_interface(hid_device.DEV_HANDLE,
        hid_device.INTF_HANDLE, (pointer)&hid_device.CLASS_INTF);
    if (status != USB_OK) {
        printf("\nError in _usb_hostdev_select_interface: %x", status);
        fflush(stdout);
        exit(1);
    } /* Endif */
    break;

```

As internal information, `_usb_hostdev_select_interface` caused the stack to allocate memory and do the necessary preparation to start communicating with this device. This routine opens logical pipes and allocates bandwidths on periodic pipes. This allocation of bandwidths can be time consuming under complex algorithms.

4.2.4.5 Retrieving and Storing Pipe Handles

If the interface has been selected, pipe handles can be retrieved by calling as in this example:

```

pipe = _usb_hostdev_find_pipe_handle(hid_device.DEV_HANDLE,
    hid_device.INTF_HANDLE, USB_INTERRUPT_PIPE, USB_RECV);

```

In this code, `pipe` is a memory pointer that stores the handle (see code example for details). Notice that this routine specified the type of pipe retrieved. The code shows how to communicate to a mouse that has an interrupt pipe to obtain the pipe handle for interrupt pipe.

4.2.4.6 Sending/ Receiving Data to/ from Device

The USB packet transfers on USB software functions in terms of transfer requests (TR). A similar term in Windows and Linux is URB. In Windows, drivers keep sending URBs down the stack and waiting for events or callbacks for USB completion. There is one callback or event per URB completion. The USB stack concept is the same except that fields inside a TR can be different. A TR is a memory structure that describes a transfer in its entirety. The USB stack provides a helper routine called `_usb_hostdev_tr_init()` that can be used to initialize a TR. Every TR down the stack has a unique number assigned by the `_tr_init()` routine. The following code example shows how this routine is called:

```

_usb_hostdev_tr_init(&tr, _usb_host_hid_rcv_callback, <parameter>);

```

This routine takes the `tr` pointer to the structure that needs to be initialized and the name of the callback routine that is called when this TR is complete. An additional parameter can be supplied that is called back when TR completes. Unlike PC based systems, the embedded systems memory is limited and therefore a recommended practice is to reuse the TR that is supplied. Applications can keep a few TRs pending and reuse old ones after completed. See the code example for exact details.

After TR is initialized and pipe handle available, it is easy to send and receive data to the device. USB devices that use periodic data need a periodic call to send to receive data. It is recommended to use operating system timers to ensure that a receive or send data call is done in a timely manner so that packets to and from the device are not lost. These details are USB driver design details and are outside the scope of this document. The following code provides an example how a receive data is done.

```
status = _usb_host_recv_data(host_handle, pipe, &tr);
```

4.2.4.7 Other Host Functions

The USB Stack comes with a wide set of routines that can be used to exploit the functionality available. There are routines available to open pipes, close pipes, get frame numbers, micro frame numbers, or even shutdown the stack. These routines are obvious by their names and many are used at various places in the code. For an example, `_usb_host_bus_control()` routine can be used to suspend the USB bus any time under software control. Similarly, `usbhost_shutdown()` can be called to shut down the host stack and free all the memory. This routine ensures that all pipes are closed and memory freed by the stack. These functions can be used on need basis. As a suggestion search the examples that use some of these routines and copy the code if required.

4.3 USB HDK Changes in MQX 3.8.1

The USB Host and Device stack were significantly modified in the Freescale MQX version 3.8.1. The aim was to support device and host in one application. This changes led to the modifications of both internal and external API.

The common part of USB stacks was moved into *usb/common* folder. In the folder you can find common header files and example application demonstrating both host and device functionality in the same time. The public common headers are copied after USB-HDK or USB-DDK build directly into *lib/<board>.<comp>/usb* folder.

An application developer should be aware of following API changes if porting from previous MQX versions:

BSP:

- added new file (*init_usb.c*) containing initialization structures for USB controllers available on board

USB-HDK:

- `USB_STATUS _usb_host_driver_install(usb_host_if_struct *)` API changed
- `USB_STATUS _usb_host_init(usb_host_if_struct *)` API changed

- `void (_CODE_PTR_ tr_callback)(pointer, pointer, uchar_ptr, uint_32, USB_STATUS)` API changed
- the `TR_INIT_PARAM_STRUCT` has changed and contains generic superstructure at the top

In the file `source/bsp/<bsp_name>/<board>.h` you can find definition of USB host controller for given board, for example:

```
#define USBCFG_DEFAULT_HOST_CONTROLLER    (&_bsp_usb_host_ehci0_if)
```

You can use these macros in the `_usb_host_driver_install` and `_usb_host_init` functions.

4.3.1 Migration steps for USB host application

1. Application project - add compiler search path (`lib/<board>.<comp>/usb`) to make common header files (`usb.h`, ...) available for compiler. The path should be prioritized over other USB paths.

2. Use the following includes in your application.

```
#include <mqx.h>
#include <bsp.h>
#include <usb.h>
#include <hostapi.h> /* if you want to use USB-HDK */
/* Additionally, include USB host class driver header files... */
```

3. Change the way the low level driver is installed:

```
res = _usb_host_driver_install(USBCFG_DEFAULT_HOST_CONTROLLER);
```

... instead of legacy `_usb_host_driver_install` which used additional arguments.

4. Change the low level driver initialization to:

```
res = _usb_host_init(USBCFG_DEFAULT_HOST_CONTROLLER, &host_handle);
```

5. Since the `tr_callback` API has changed, you should change the last parameter of the callback functions from `uint_32` to `USB_STATUS`. This is not a real issue now as the `USB_STATUS` is defined as `uint_32`, however it may bring compatibility issues in the future.

6. If an USB host application explicitly prepares transfers to be sent it should use the variable of type `TR_INIT_PARAM_STRUCT` and change the way its members are accessed after calling `usb_hostdev_tr_init` function. As mentioned before, this structure has changed. Add "G" superstructure to the members of `TR_INIT_PARAM_STRUCT`. Use:

```
tr.G.RX_BUFFER, tr.G.RX_LENGTH, tr.G.TX_BUFFER, tr.G.TX_LENGTH
```

7. There is known issue in MK70F KHCI controller that you should use SRAM memory for your buffers. It is strongly recommended that you use

`_usb_hostdev_get_buffer(_usb_device_instance_handle, uint_32, pointer _PTR_)` function to get buffer allocated in the correct way and automatically deallocated when the device is unplugged. Allocate the buffer for device plugged into the host:

```
res = _usb_hostdev_get_buffer(handle, size, &buffer);
```

Appendix A Working with the Software

A.1 Introduction

This chapter gives you insight on how to use the Applications in MQX USB Host Stack software. The following sections are described in this chapter:

- Preparing the setup
- Building the application
- Running the application

Knowledge of CodeWarrior IDE will be helpful to understand this section. While reading this chapter, practice the steps mentioned.

A.1.1 Preparing the Setup

A.1.1.1 Hardware Setup

Make the connections as shown in [Figure A-1](#)

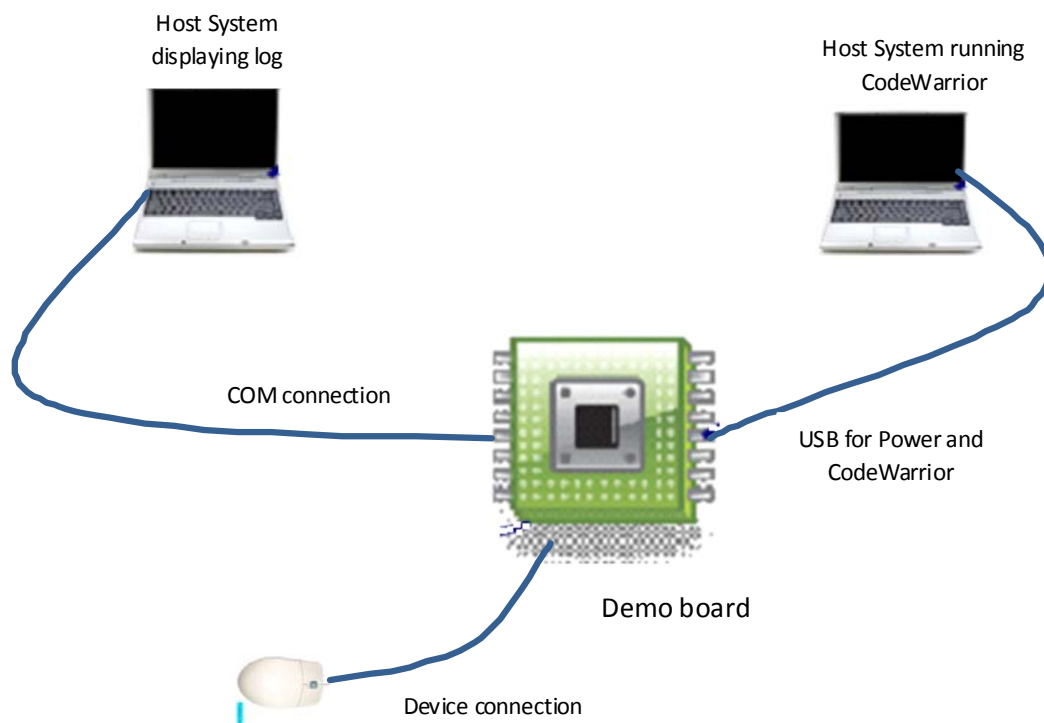


Figure A-1. ColdFire V1 USB Setup

- Make the first USB connection between the personal computer where the software is installed and the demo board where you'd like to run the application. this connection is required to provide power to the board and downloading image to the flash
- Make the second connection between the demo board and the personal computer to display the log of demo.
- Make the third connection between the device and demo board.

A.1.2 Building the Application

The software was built using CodeWarrior 6.3 and therefore contains application project files that can be used to build the project.

Before starting the process of building the project, make sure CodeWarrior 6.3 is installed on your computer.

To build ColdFire V1 project:

1. Navigate the project file and open xxx_m51jmevb.mcp project file in CodeWarrior IDE.

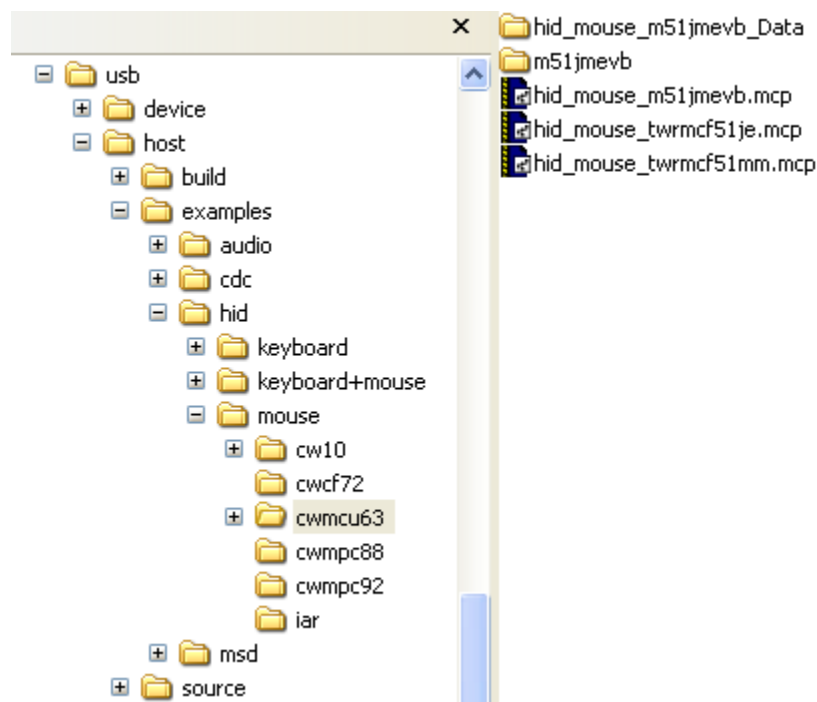


Figure A-2. Open xxx_m51jmevb.mcp Project File

2. After you have opened the project, the following windows appears. To build the project, click the button as shown in [Figure A-3](#).

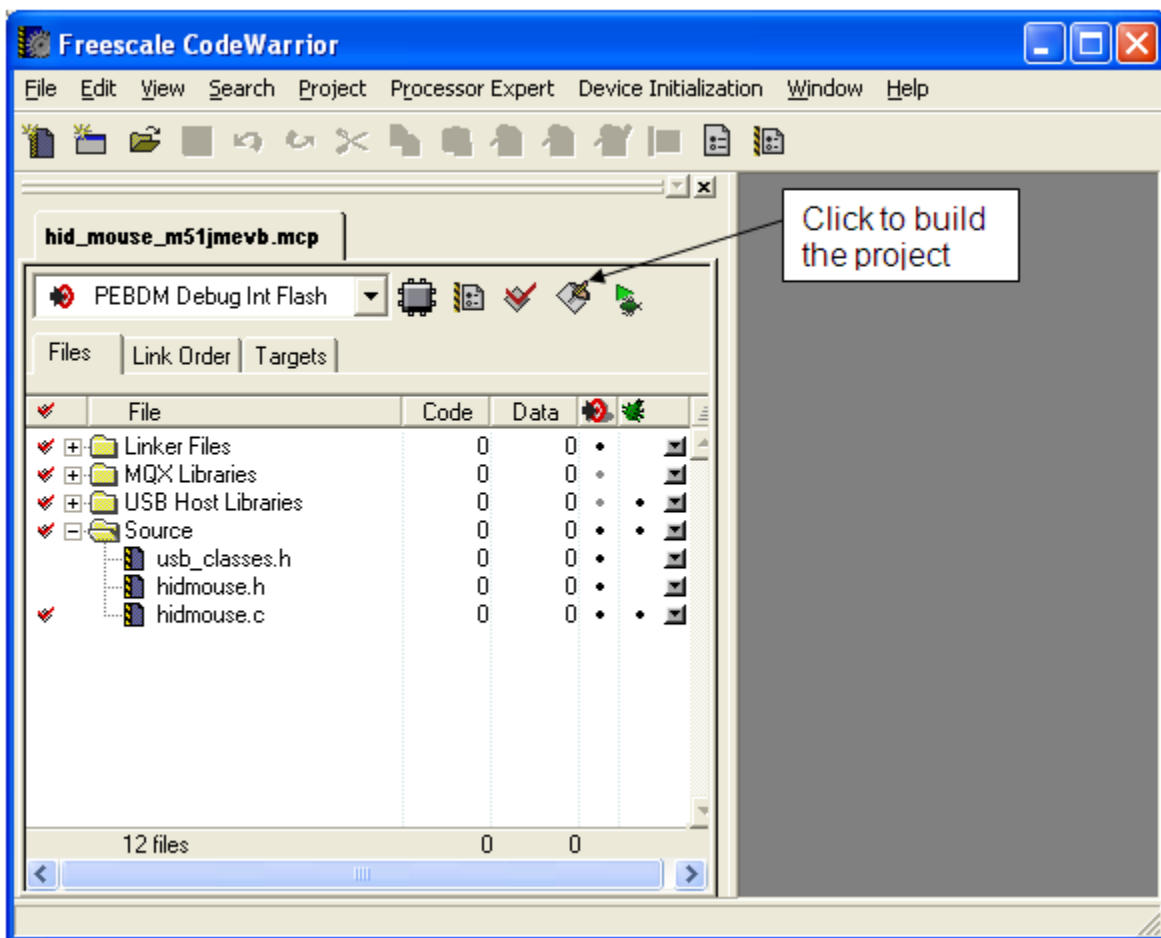


Figure A-3. Build Project

3. After the project is built, the code and data columns must appear filled across the files.

A.1.3 Running the application

1. To run the application, click the button as shown in [Figure A-4](#)

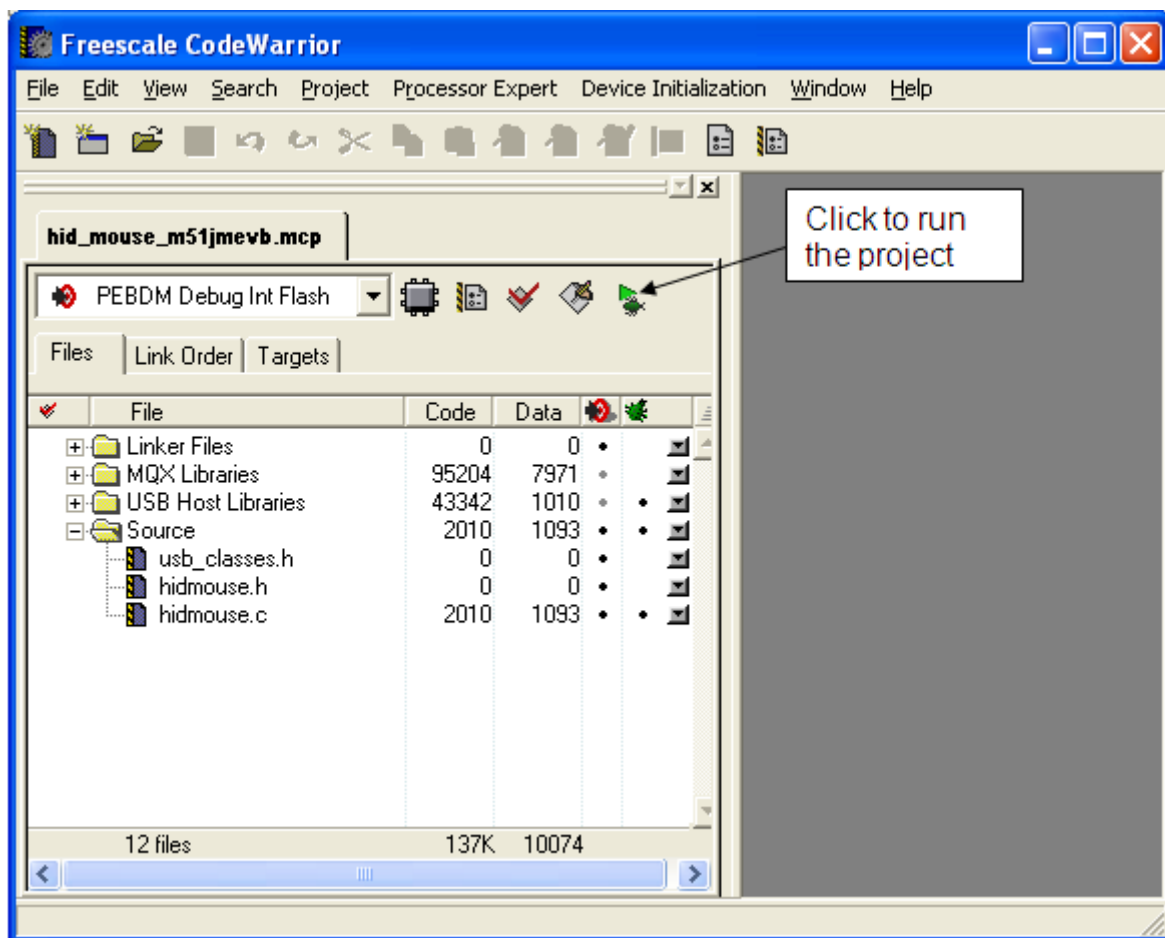


Figure A-4. Running the Application

2. Click **Connect (Reset)** button to connect to hardware as shown in [Figure A-5](#)

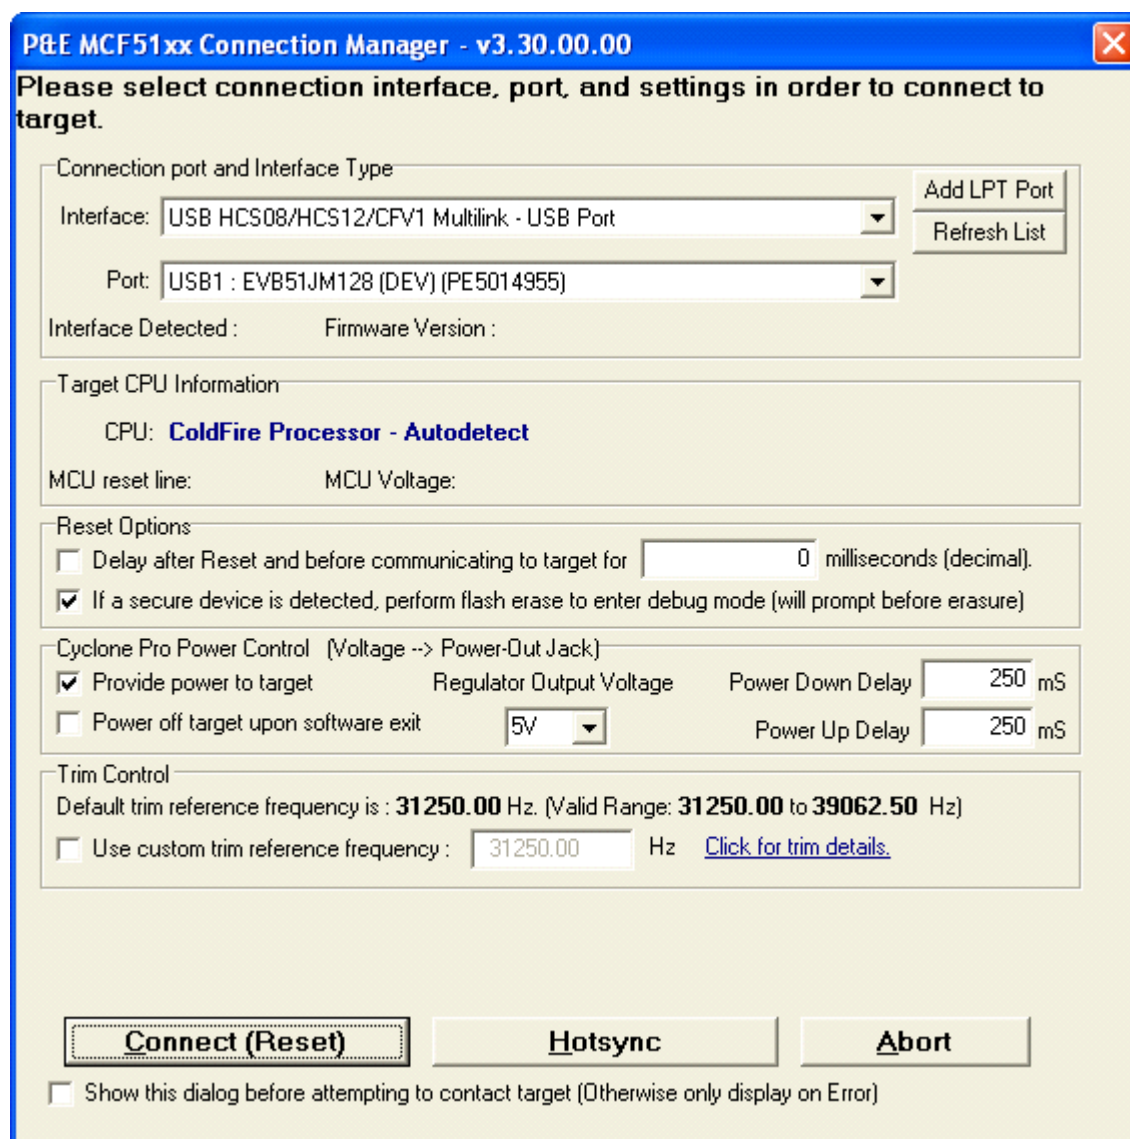


Figure A-5. Connection Manager

3. The pop-up in [Figure A-6](#) appears to erase and program the built image to JM128 Flash

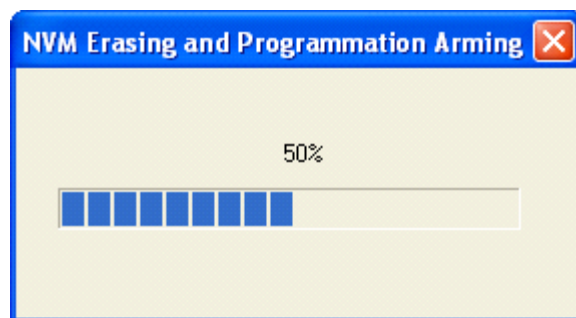


Figure A-6. Erasing and Programming window

4. The pop-up in [Figure A-7](#) appears to load the built image to JM128 Flash

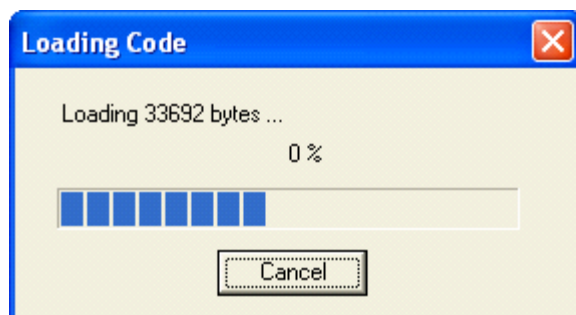


Figure A-7. Loading window

- After the built image is loaded in the flash, the debugger window as shown in Figure A-8 appears. Click on Green Arrow as shown in Figure A-8 to run the programmed image.

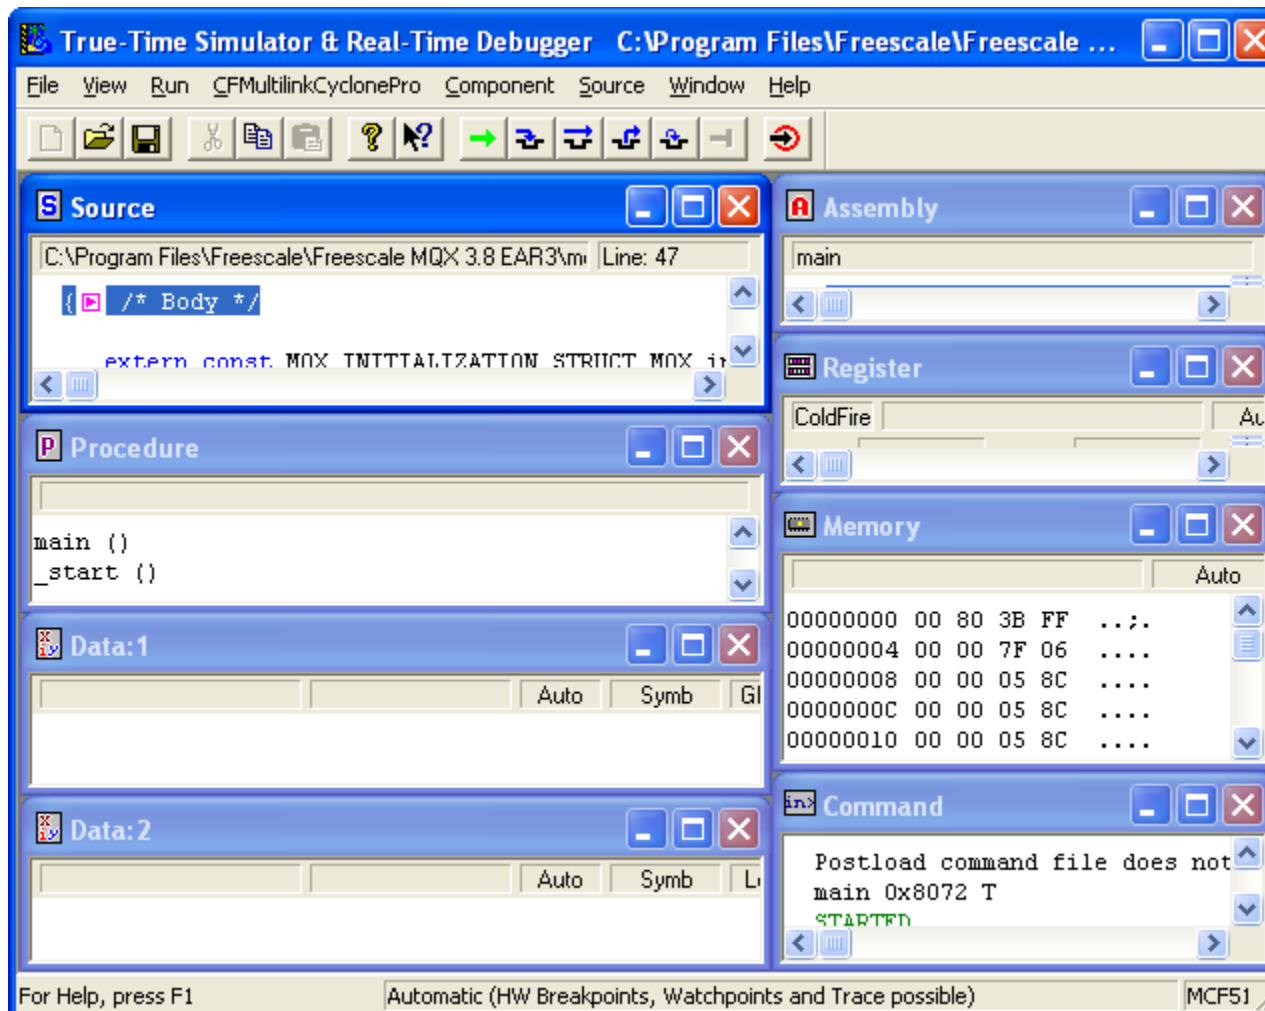


Figure A-8. Simulation and Realtime Debugger

A.2 Setup HyperTerminal to get log

To ensure that applications run correctly, the HyperTerminal is used on your computer to get events from the devices which connect to the CFV1. These steps are used to configure HyperTerminal:

- Open HyperTerminal applications as shown in Figure A-9

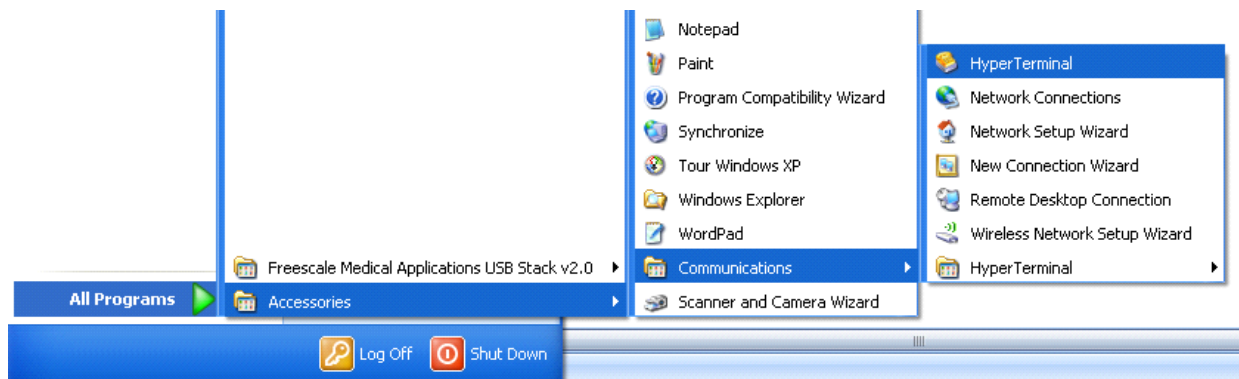


Figure A-9. Launch HyperTerminal Application

2. The HyperTerminal opens as shown in [Figure A-10](#). Enter the name of connection and click on the **OK** button.

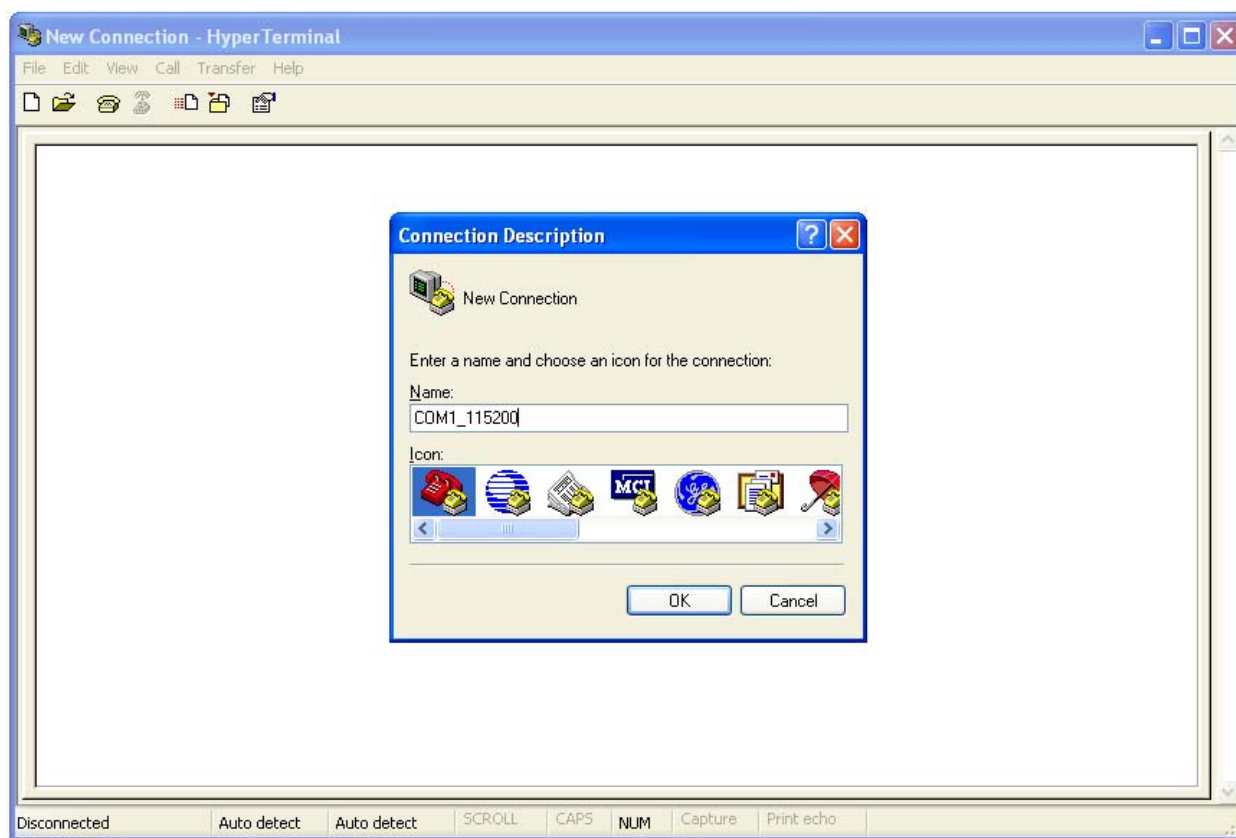


Figure A-10. HyperTerminal GUI

3. The window shown in the [Figure A-11](#) appears. Select the COM port identical to the one that shows up on the device manager.

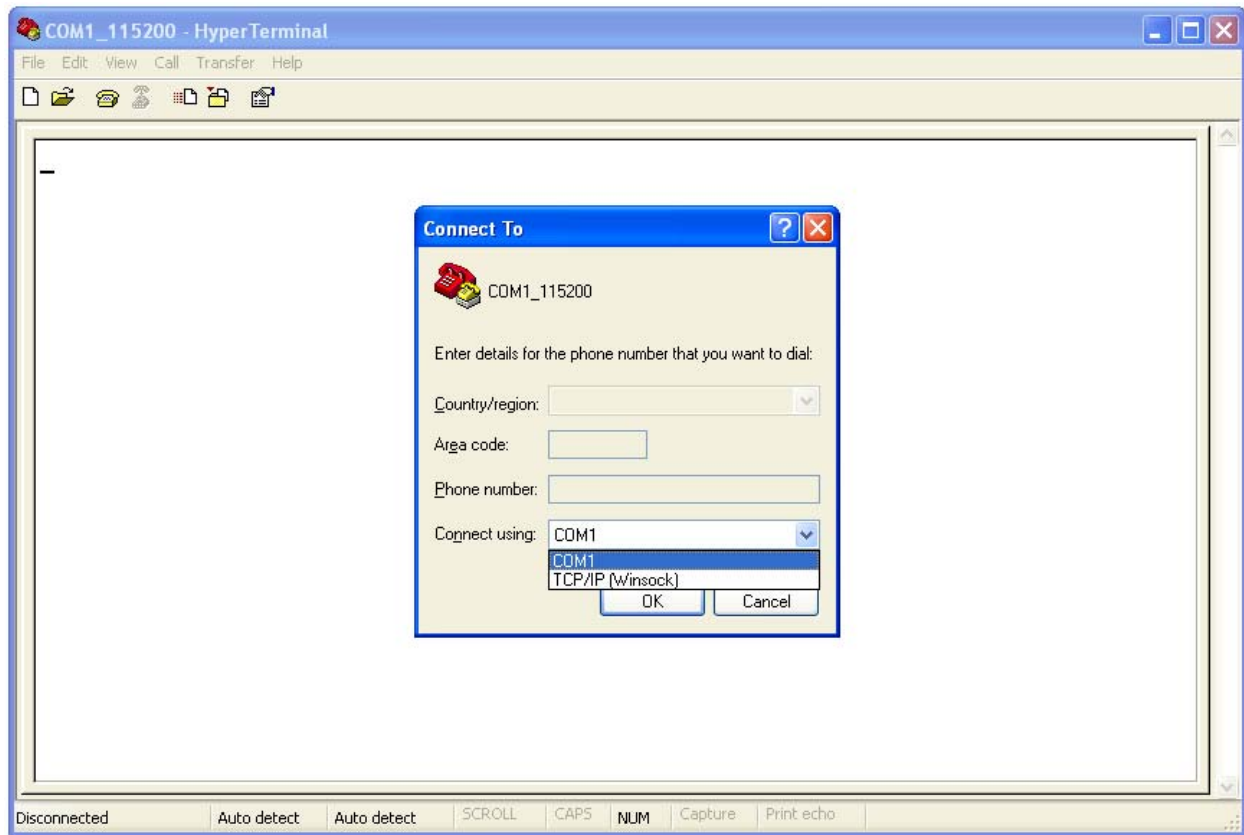


Figure A-11. Connect using COM1

4. Configure the virtual COM port baudrate and other properties as shown in [Figure A-12](#)

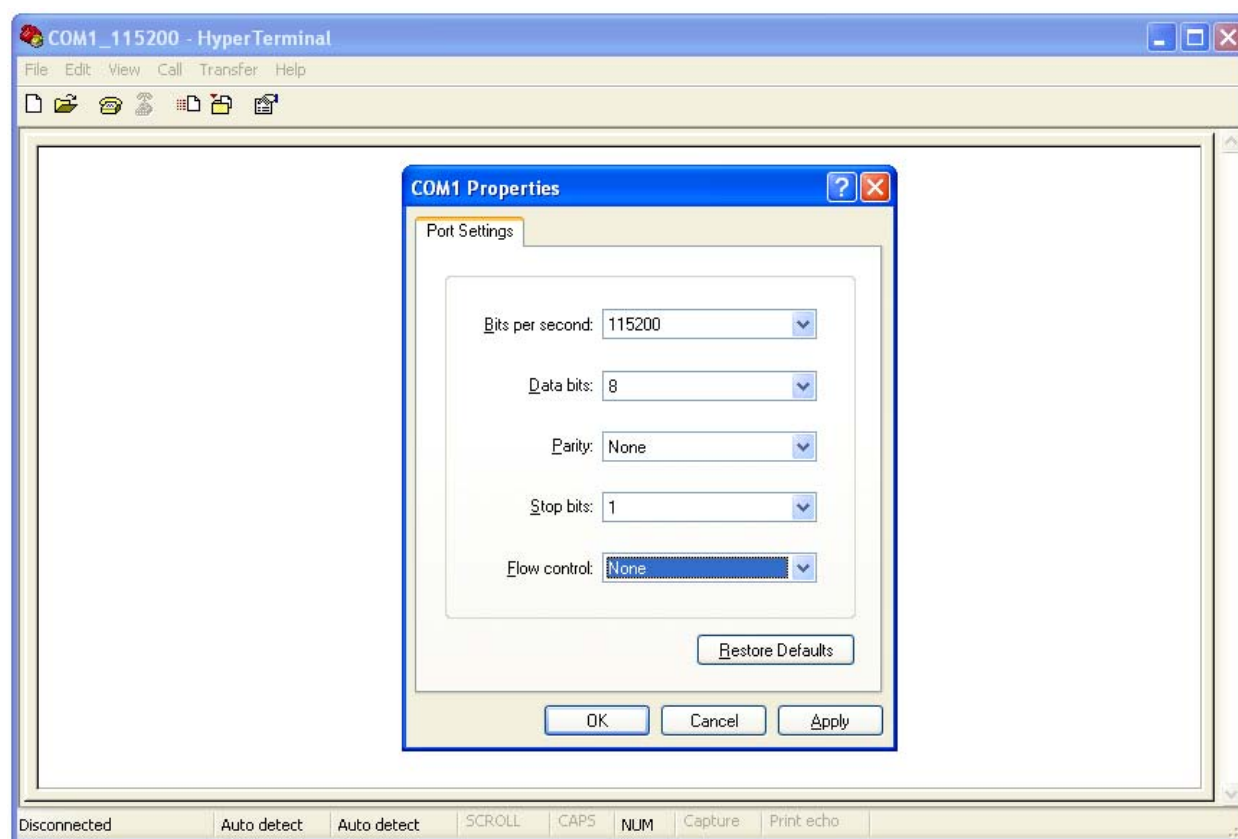


Figure A-12. COM1 Properties

5. Configure the HyperTerminal as shown in [Figure A-13](#). Click on the **OK** button to submit changes.

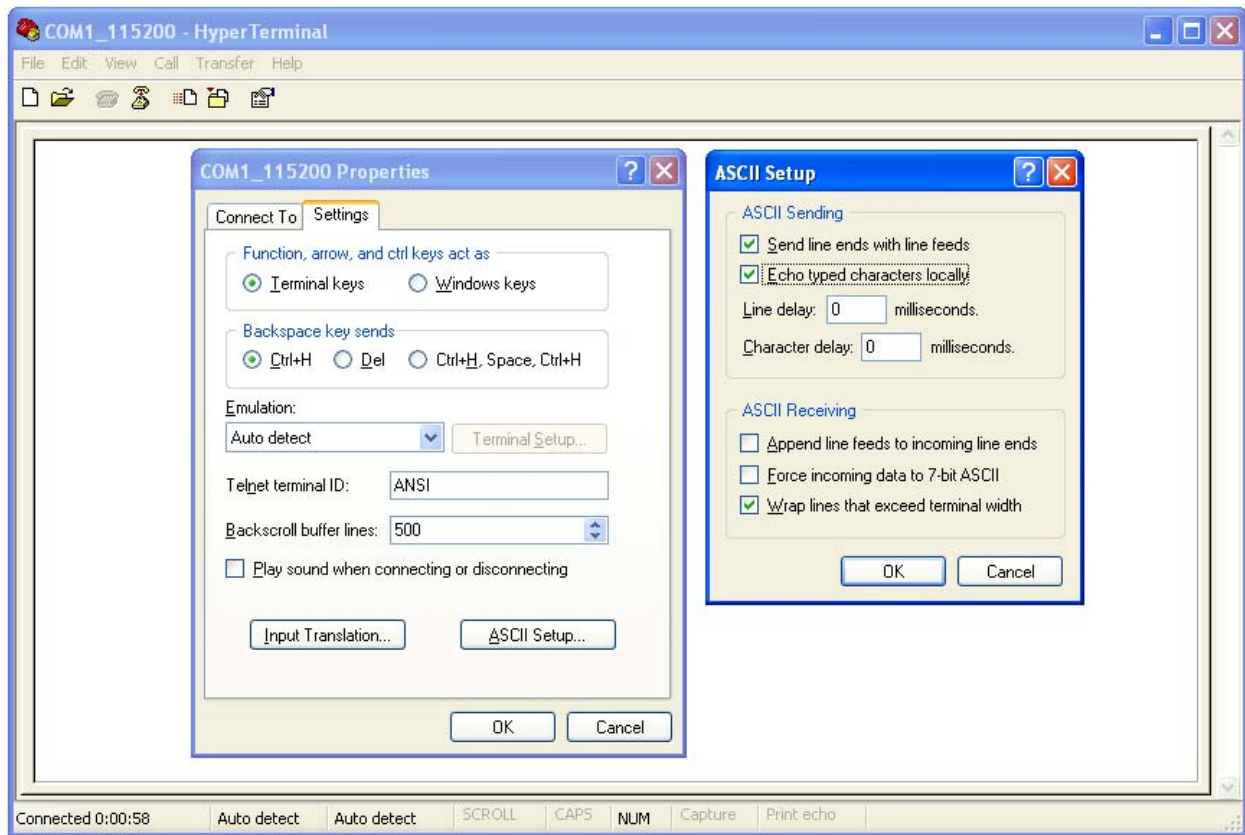


Figure A-13. Configure COM1_115200 - HyperTerminal

6. The HyperTerminal is configured now.

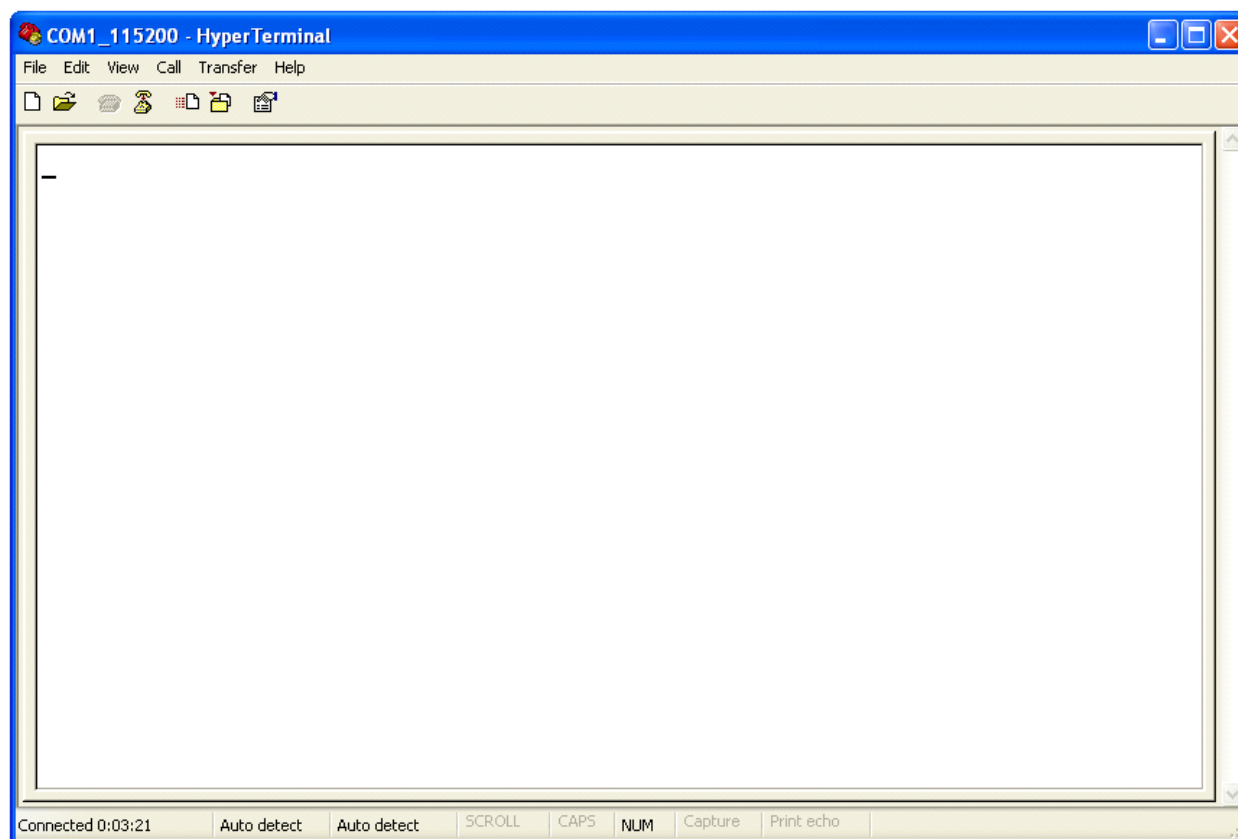


Figure A-14. COM1_115200 is configured

Appendix B Human Interface Device (HID) Demo

B.1 Setting Up the Demo

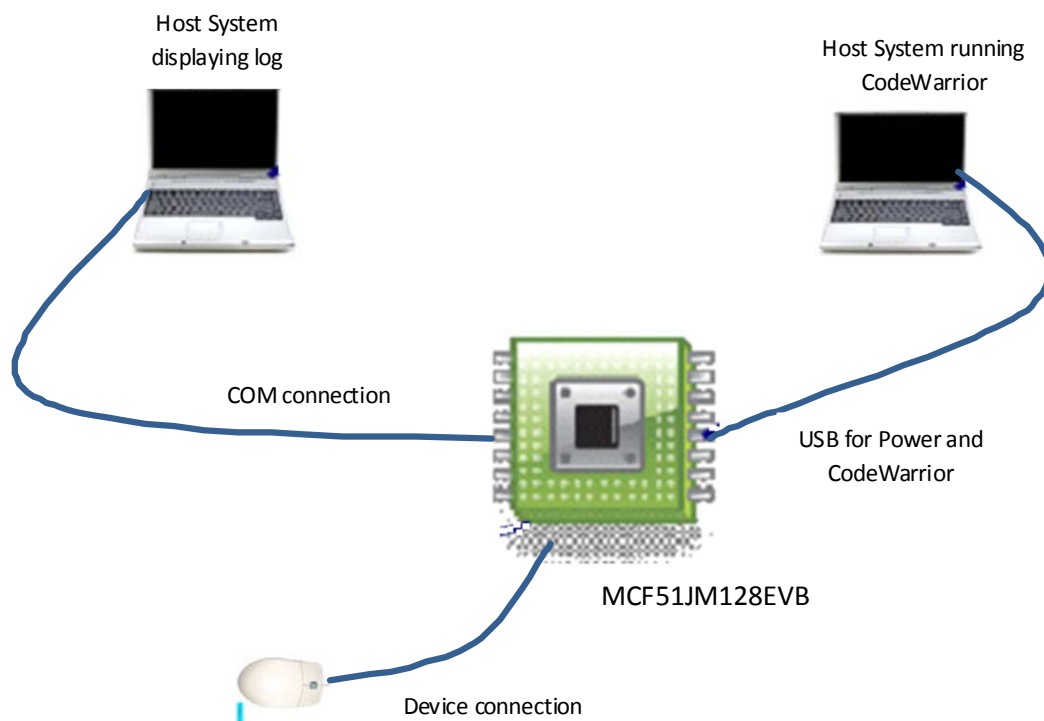


Figure B-1. HID Demo Setup

Figure B-1 describes the HID demo setup. The MCF51JM128EVB is used as the USB Host. The MCF51JM128EVB board is connected to the first personal computer using USB cables. This computer is used to supply power to the board and is used to program the image to the flash. And the MCF51JM128EVB board is connected to the second personal computer via COM port. This computer is used to log events happening in USB Host. The device (mouse or keyboard) is connected to the MCF51JM128EVB board. Although, Figure B-1 shows two computers, the connection can also be achieved using one computer.

B.2 Running the Demo

The projects of HID is located in

`<MQX installation folder>\usb\host\examples\hid\mouse\cwmcu63`

There are 3 applications of HID classes.

- Mouse

- Keyboard
- Keyboard and Mouse

B.2.1 Mouse demo

Follow the steps below to run mouse demo:

1. Open and load image of Mouse applications to board.
2. After the image has been loaded successfully, the Hyperterminal appears as [Figure B-2](#):

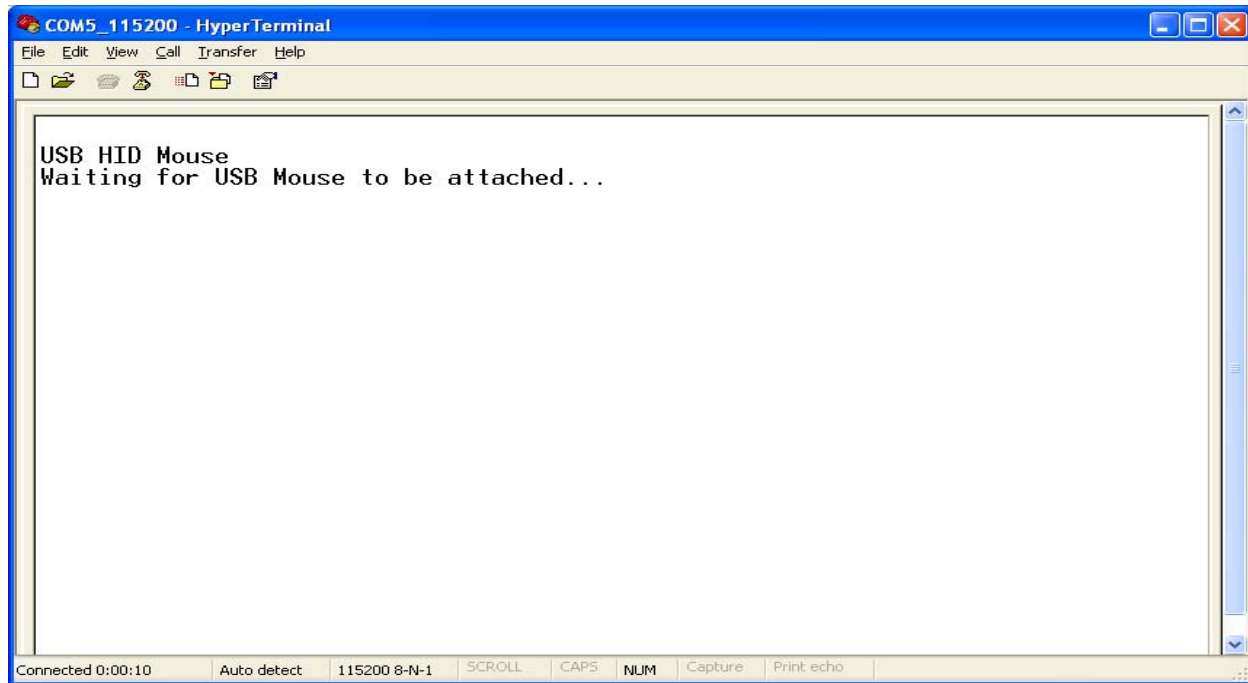


Figure B-2. The USB Host is waiting the mouse attachment event

3. Plug-in mouse to the board. The Hyperterminal appears as [Figure B-3](#):

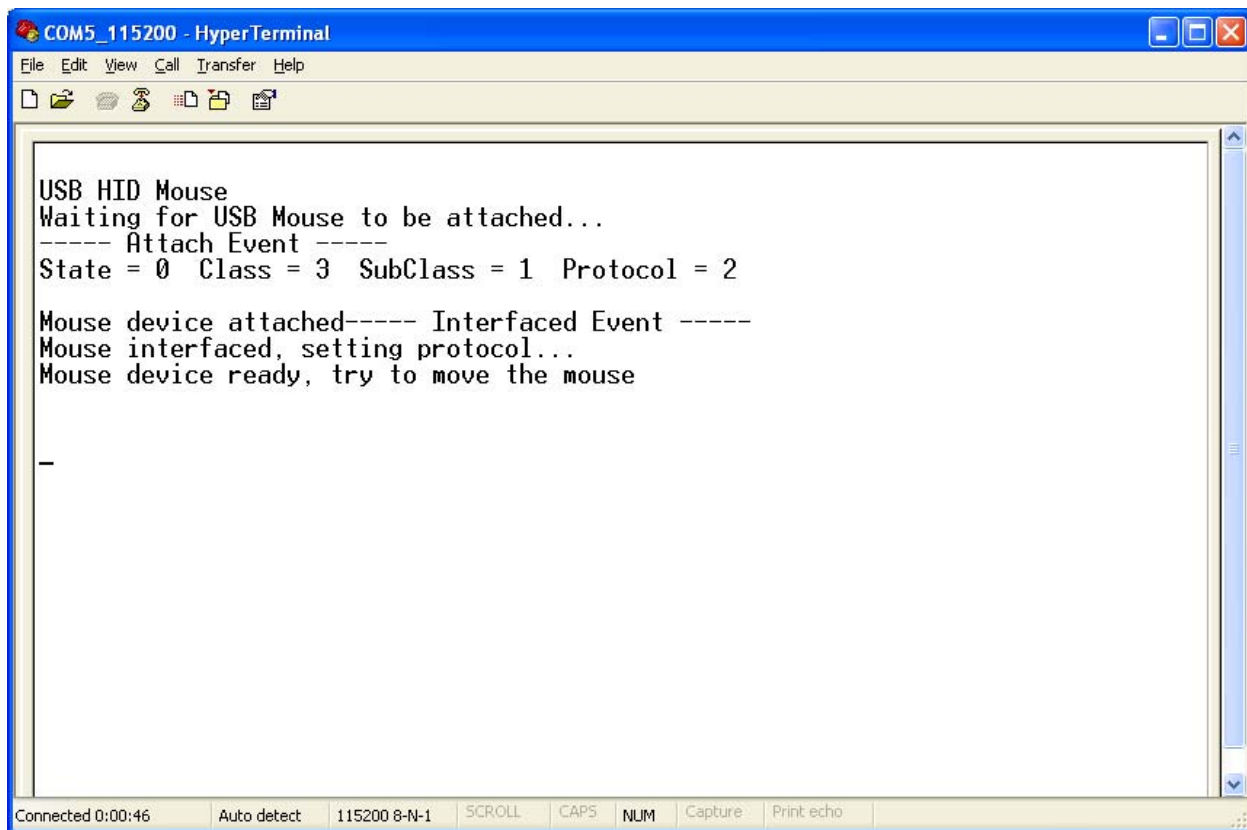
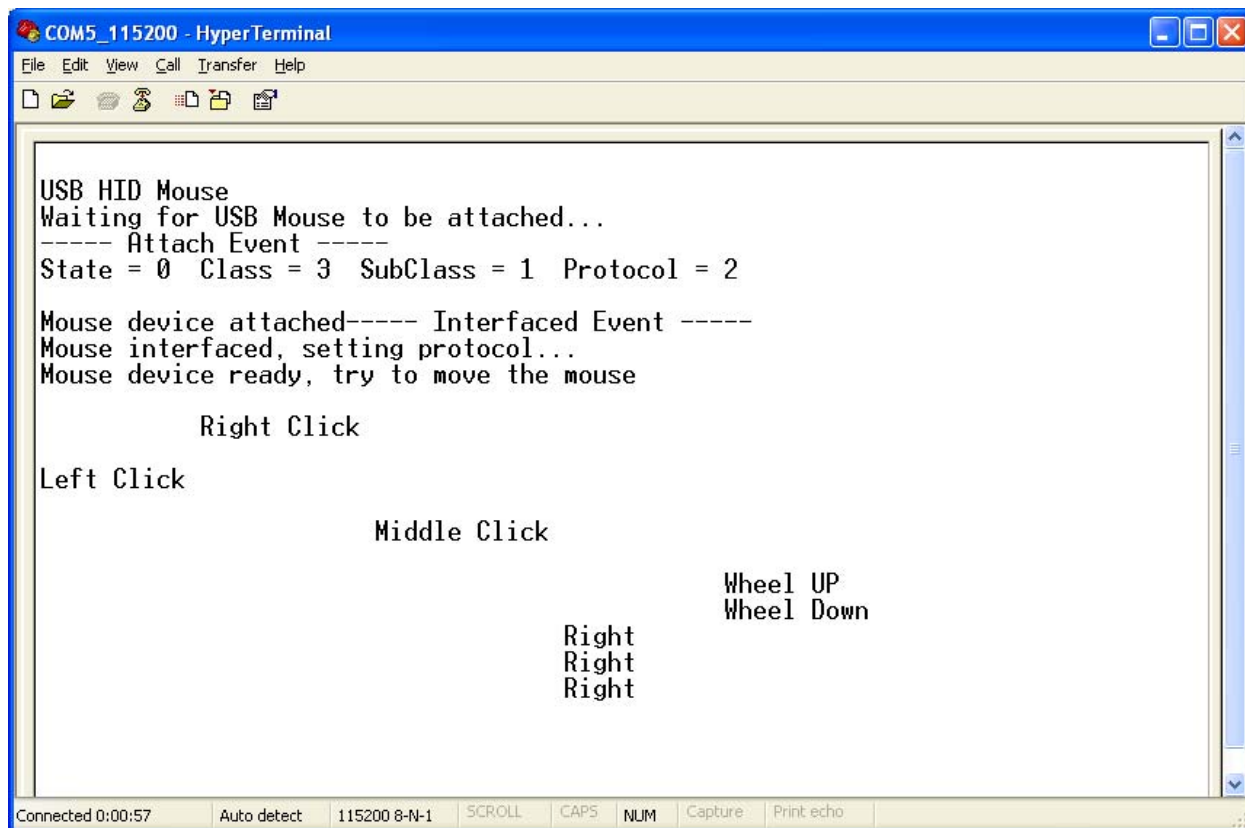


Figure B-3. Mouse attached

4. When events are implemented (click right mouse, click left mouse ...), they are registered as shown in [Figure B-4](#):

**Figure B-4. Events from mouse**

5. Unplug mouse from board. The Hyperterminal shows a message as in [Figure B-5](#):

```

COM5_115200 - HyperTerminal
File Edit View Call Transfer Help

USB HID Mouse
Waiting for USB Mouse to be attached...
----- Attach Event -----
State = 0 Class = 3 SubClass = 1 Protocol = 2

Mouse device attached----- Interfaced Event -----
Mouse interfaced, setting protocol...
Mouse device ready, try to move the mouse

        Right Click
Left Click

                                Right
                                Right
                                Right
                                Right
        Middle Click

----- Detach Event -----
State = 6 Class = 3 SubClass = 1 Protocol = 2
Going to idle state

Connected 0:00:36  Auto detect  115200 8-N-1  SCROLL  CAPS  NUM  Capture  Print echo

```

Figure B-5. Mouse detached

B.2.2 Keyboard demo

Follow these steps below to run keyboard demo:

1. Open and load image to the board.
2. Run the demo. Firstly, the USB Host waits the device attachment event. The HyperTerminal shows a message as in [Figure B-6](#):

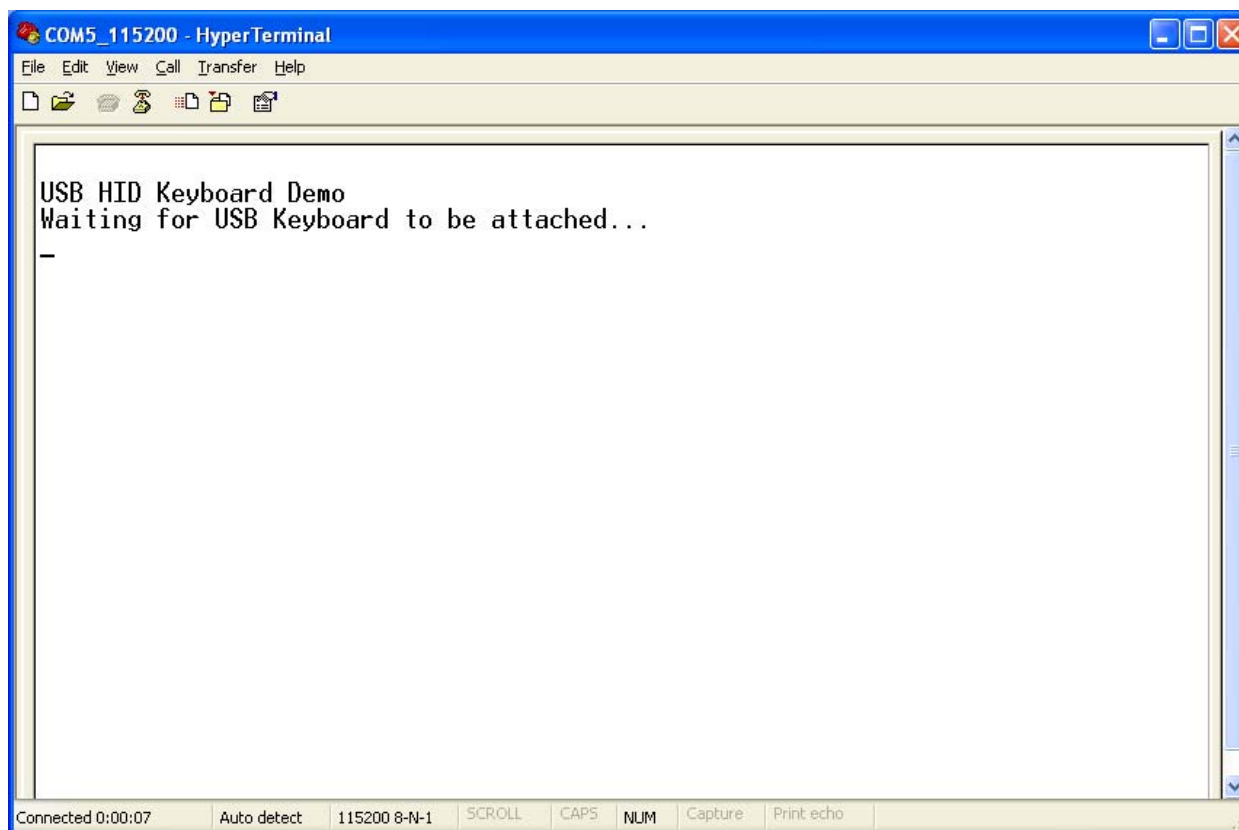


Figure B-6. The USB Host is waiting the keyboard attachment event

3. Plug-in Keyboard, the Hyperterminal shows a message as in [Figure B-7](#):

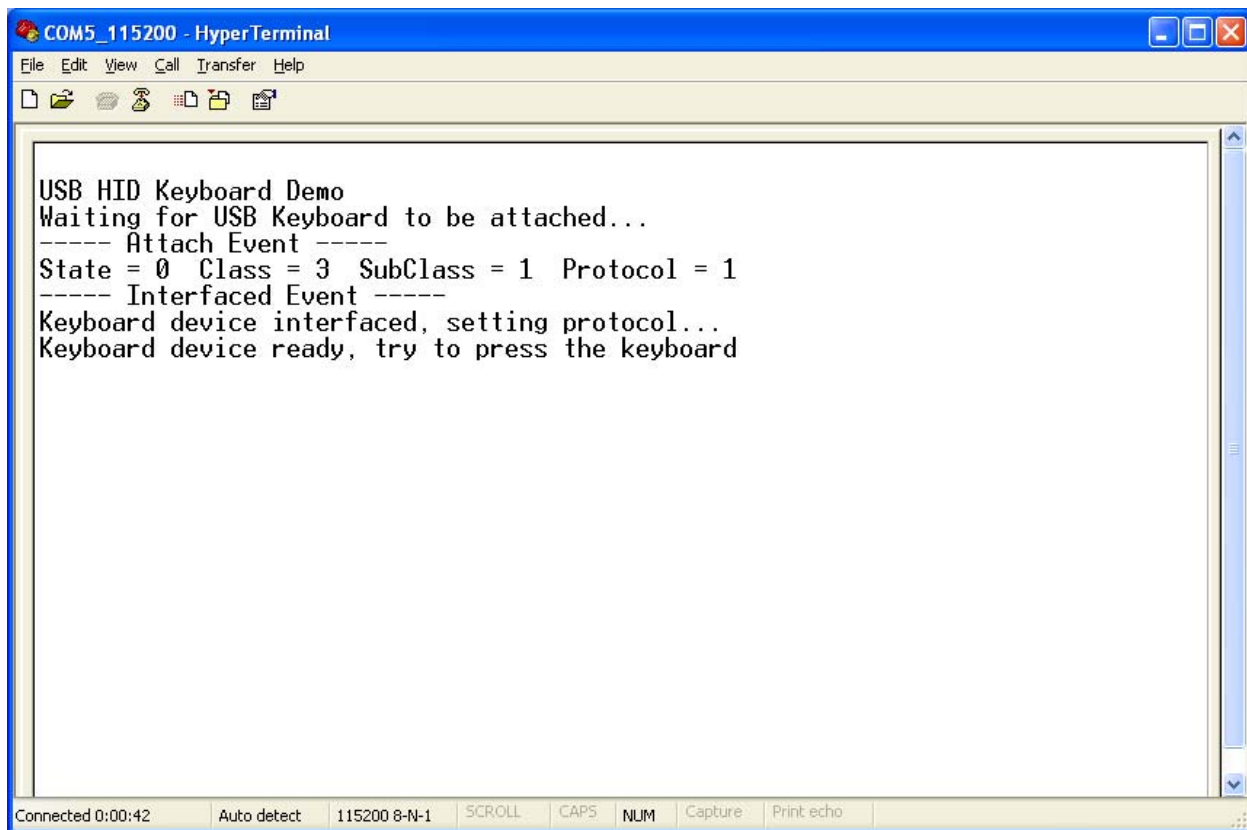


Figure B-7. Keyboard attached

4. Type some characters. The Hexa format of these characters will be displayed in HyperTerminal as shown in [Figure B-8](#):

```

COM5_115200 - HyperTerminal
File Edit View Call Transfer Help

USB HID Keyboard Demo
Waiting for USB Keyboard to be attached...
----- Attach Event -----
State = 0 Class = 3 SubClass = 1 Protocol = 1
----- Interfaced Event -----
Keyboard device interfaced, setting protocol...
Keyboard device ready, try to press the keyboard
\x5a\x5a\x5a\x59\x59\x5a\x5a\x5a\x62\x62\x62\x59\x5e\x58\x61\x5f\x5a\x5a\x62\x62
\x62\x62\x62\x62\x5f\x53\x54\x55\x5f\x60\x61\x5c\x5e\x5a\x5b\x59\x5a\x5b\x62\x62
2\x62\x62\x58\x57\x56\x55\x55\x57\x58

Connected 0:01:40 Auto detect 115200 8-N-1 SCROLL CAPS NUM Capture Print echo

```

Figure B-8. Typing character from keyboard

Note: The Hyperterminal only shows the ASCII code in Hexa of each character.

5. Unplug keyboard, the Hyperterminal shows a message as in [Figure B-9](#):

```

COM5_115200 - HyperTerminal
File Edit View Call Transfer Help

USB HID Keyboard Demo
Waiting for USB Keyboard to be attached...
----- Attach Event -----
State = 0 Class = 3 SubClass = 1 Protocol = 1
----- Interfaced Event -----
Keyboard device interfaced, setting protocol...
Keyboard device ready, try to press the keyboard
\x5a\x5a\x5a\x59\x59\x5a\x5a\x5a\x62\x62\x62\x59\x5e\x58\x61\x5f\x5a\x5a\x62\x62
\x62\x62\x62\x62\x5f\x53\x54\x55\x5f\x60\x61\x5c\x5e\x5a\x5b\x59\x5a\x5b\x62\x62
2\x62\x62\x58\x57\x56\x55\x55\x57\x58
----- Detach Event -----
State = 6 Class = 3 SubClass = 1 Protocol = 1
Going to idle state

Connected 0:02:11 Auto detect 115200 8-N-1 SCROLL CAPS NUM Capture Print echo

```

Figure B-9. Keyboard detached

B.2.3 Mouse and keyboard demo

This application is the combination of the two above. It supplies a convenient choice for users to alternate the HID device (the mouse or the keyboard) they want to work with.

Appendix C Virtual Communication (COM) Demo

The USB to Serial Demo implements the Abstract Control Model (ACM) subclass of the USB CDC class that enables the serial port applications on the host PC to transmit and receive serial data over the USB transport.

C.1 Setting Up the Demo

Set the system as described in the [Appendix B “Human Interface Device \(HID\) Demo](#).

Note: To run this demo, a CDC device is necessary.

In this demo, the data entered from the keyboard is echoed and displayed in HyperTerminal.

The Data flow in CDC Demo is shown as in [Figure C-1](#):

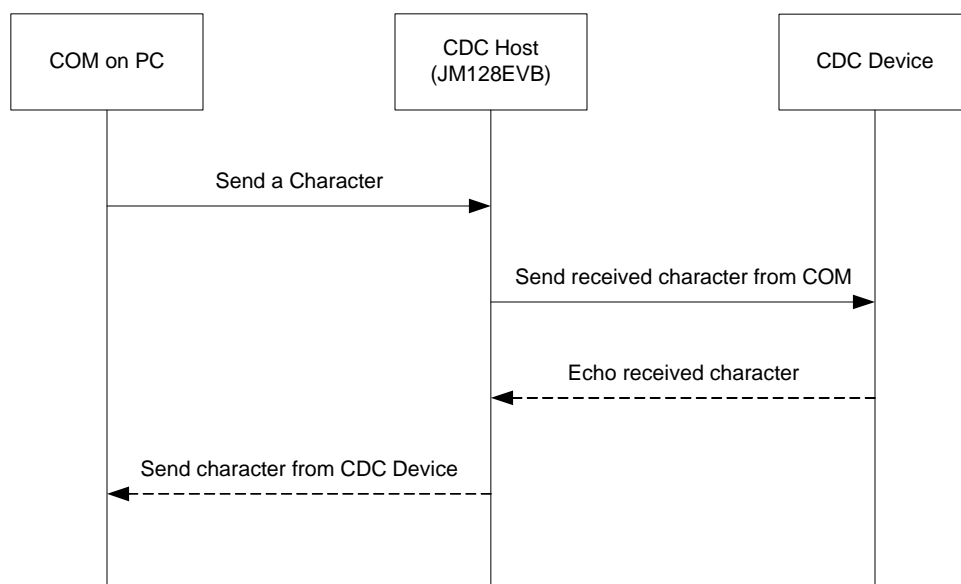


Figure C-1. Data flow

C.2 Running the Demo

To run the CDC Demo, follow these steps below:

1. Open CDC Demo project and load image to the board.

The CDC application project is located in

Freescall MQX 3.8 \usb\host\examples\cdc\cdc_serial\cwmcu63

2. Connect COM1 of the board to PC, using the steps shown in [A.2 “Setup HyperTerminal to get log”](#).
3. Run the Demo. The HyperTerminal shows a message as in [Figure C-2](#):


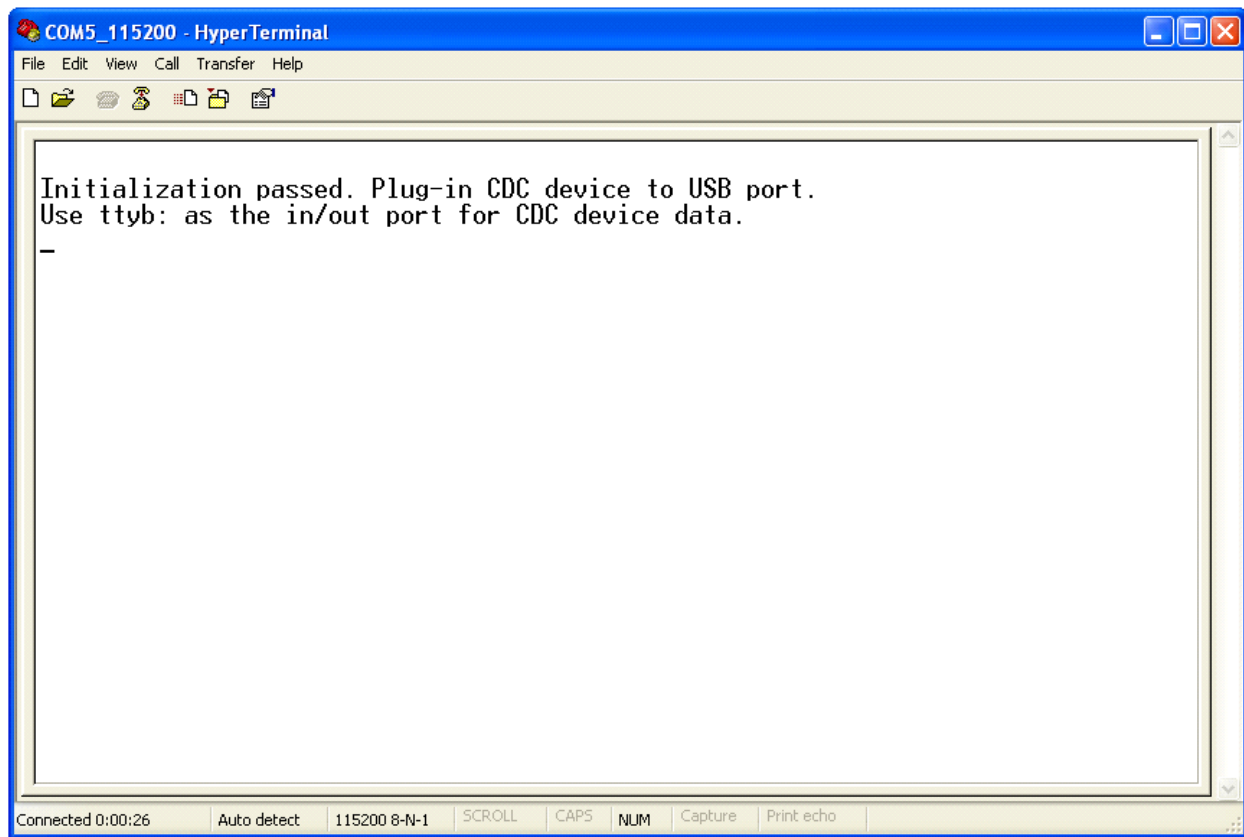


Figure C-2. USB Host waits CDC device plug-in

4. Plug-in CDC device to CDC Host (Board), the HyperTerminal shows a message as in [Figure C-3](#):

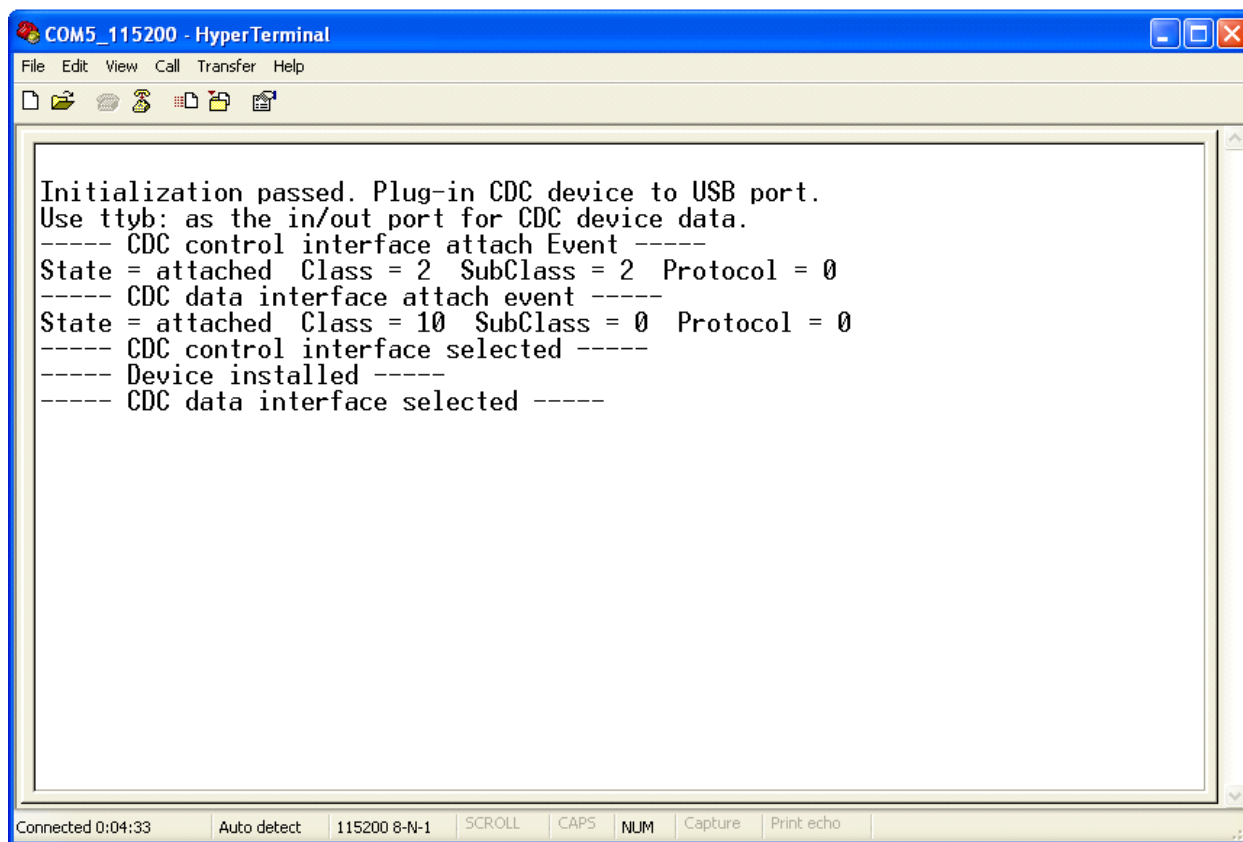

```
COM5_115200 - HyperTerminal
File Edit View Call Transfer Help

Initialization passed. Plug-in CDC device to USB port.
Use ttyb: as the in/out port for CDC device data.
----- CDC control interface attach Event -----
State = attached Class = 2 SubClass = 2 Protocol = 0
----- CDC data interface attach event -----
State = attached Class = 10 SubClass = 0 Protocol = 0
----- CDC control interface selected -----
----- Device installed -----
----- CDC data interface selected -----

Connected 0:04:33 Auto detect 115200 8-N-1 SCROLL CAPS NUM Capture Print echo
```

Figure C-3. Information of the device

5. Disconnect COM1 from PC, connect COM2 to PC and try to type something. The result is echoed and displayed in HyperTerminal.


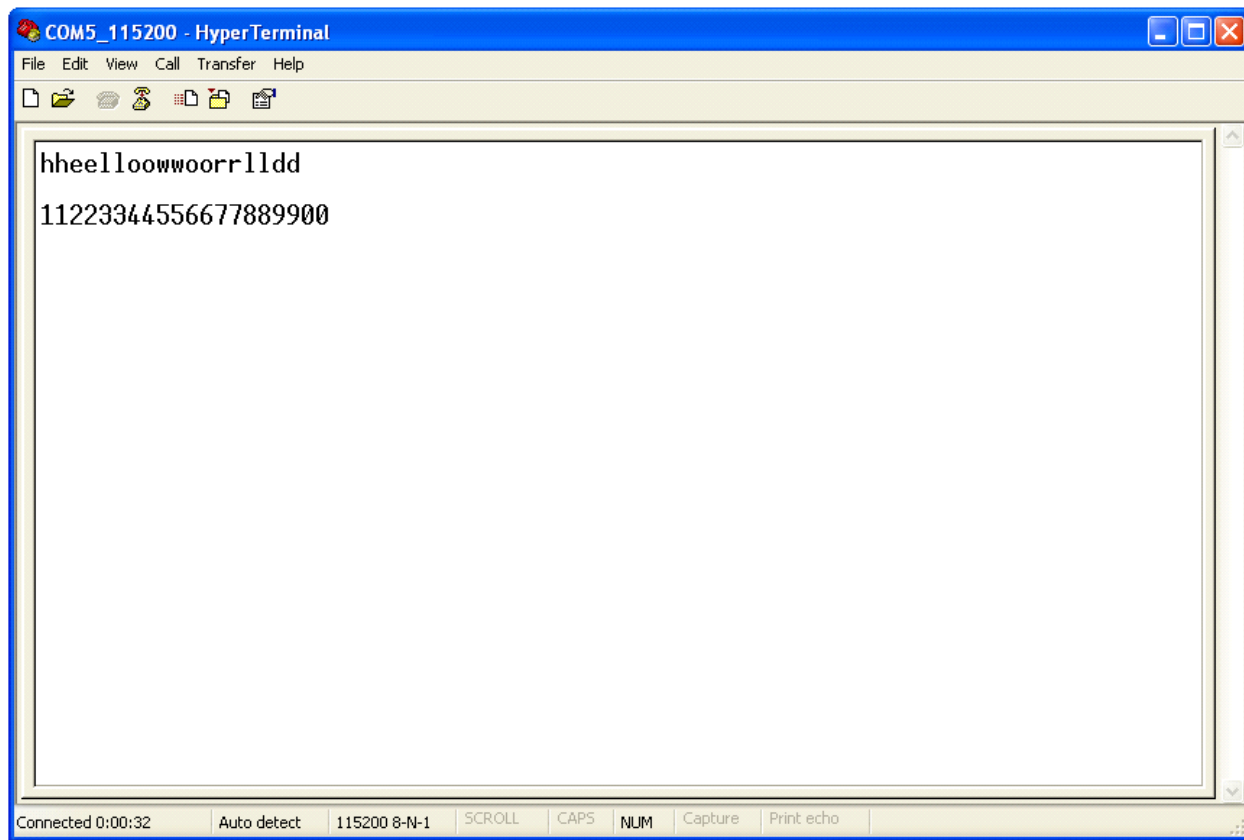


Figure C-4. Character was echoed and display in HyperTerminal

6. Unplug CDC device, the HyperTerminal show as [Figure C-5](#):

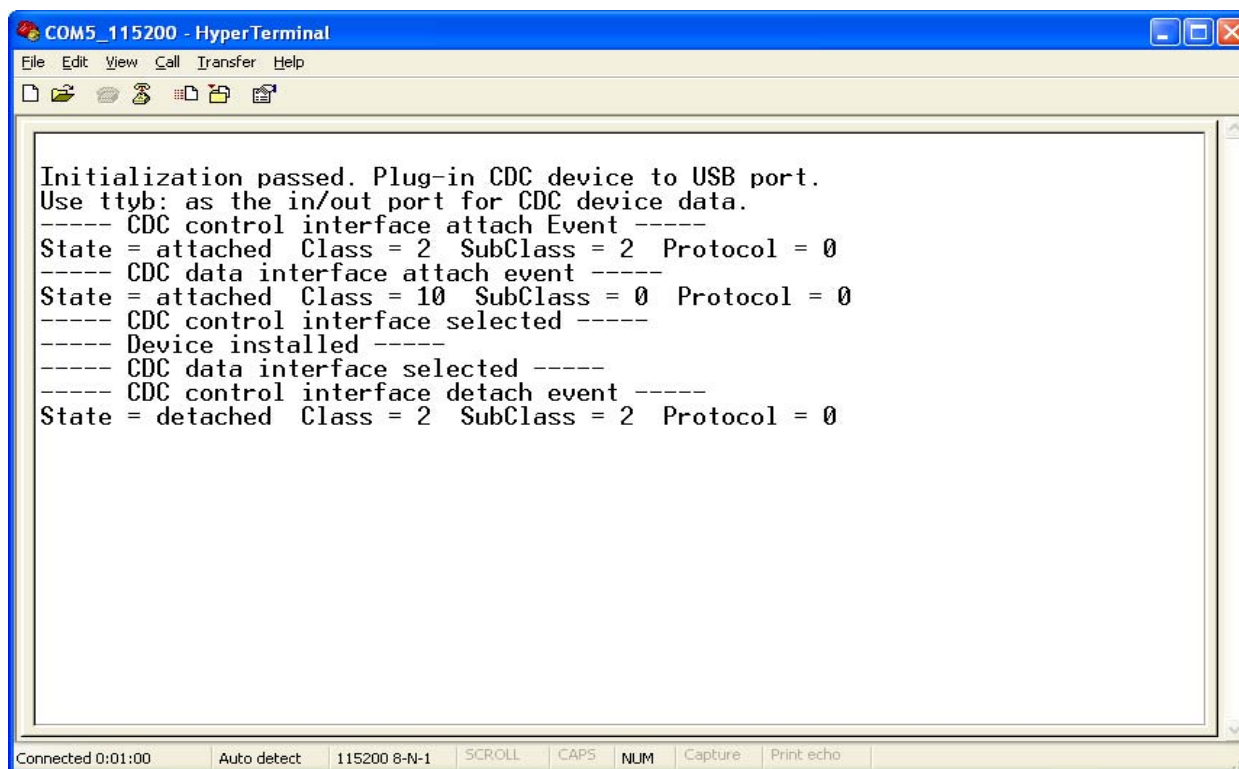

```
COM5_115200 - HyperTerminal
File Edit View Call Transfer Help

Initialization passed. Plug-in CDC device to USB port.
Use ttyb: as the in/out port for CDC device data.
----- CDC control interface attach Event -----
State = attached Class = 2 SubClass = 2 Protocol = 0
----- CDC data interface attach event -----
State = attached Class = 10 SubClass = 0 Protocol = 0
----- CDC control interface selected -----
----- Device installed -----
----- CDC data interface selected -----
----- CDC control interface detach event -----
State = detached Class = 2 SubClass = 2 Protocol = 0

Connected 0:01:00 Auto detect 115200 8-N-1 SCROLL CAPS NUM Capture Print echo
```

Figure C-5. CDC device detached

Appendix D Mass Storage Device (MSD) Demo

D.1 Setting Up the Demo

Set the system as described in the [Appendix B, “Human Interface Device \(HID\) Demo”](#)

D.2 Running the Demo

To run this Demo, follow these steps:

1. Open MSD Demo project and load image to the board

Freescal MQX 3.8 \usb\host\examples\msd\msd_commands

2. Run Demo. The HyperTerminal shows a message as in [Figure D-1](#):


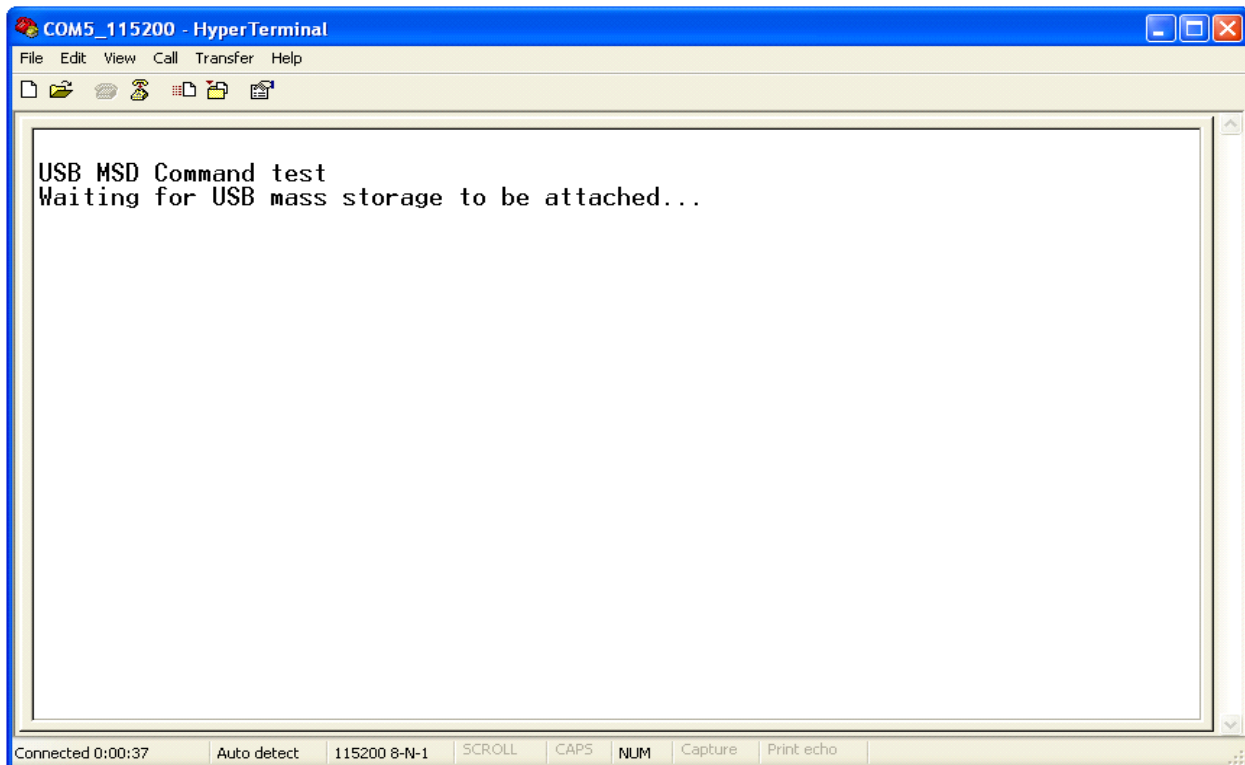


Figure D-1. USB Host waits USB mass storage to be attached

3. Attach USB Mass Storage to this board. HyperTerminal shows test result as in [Figure D-2](#):

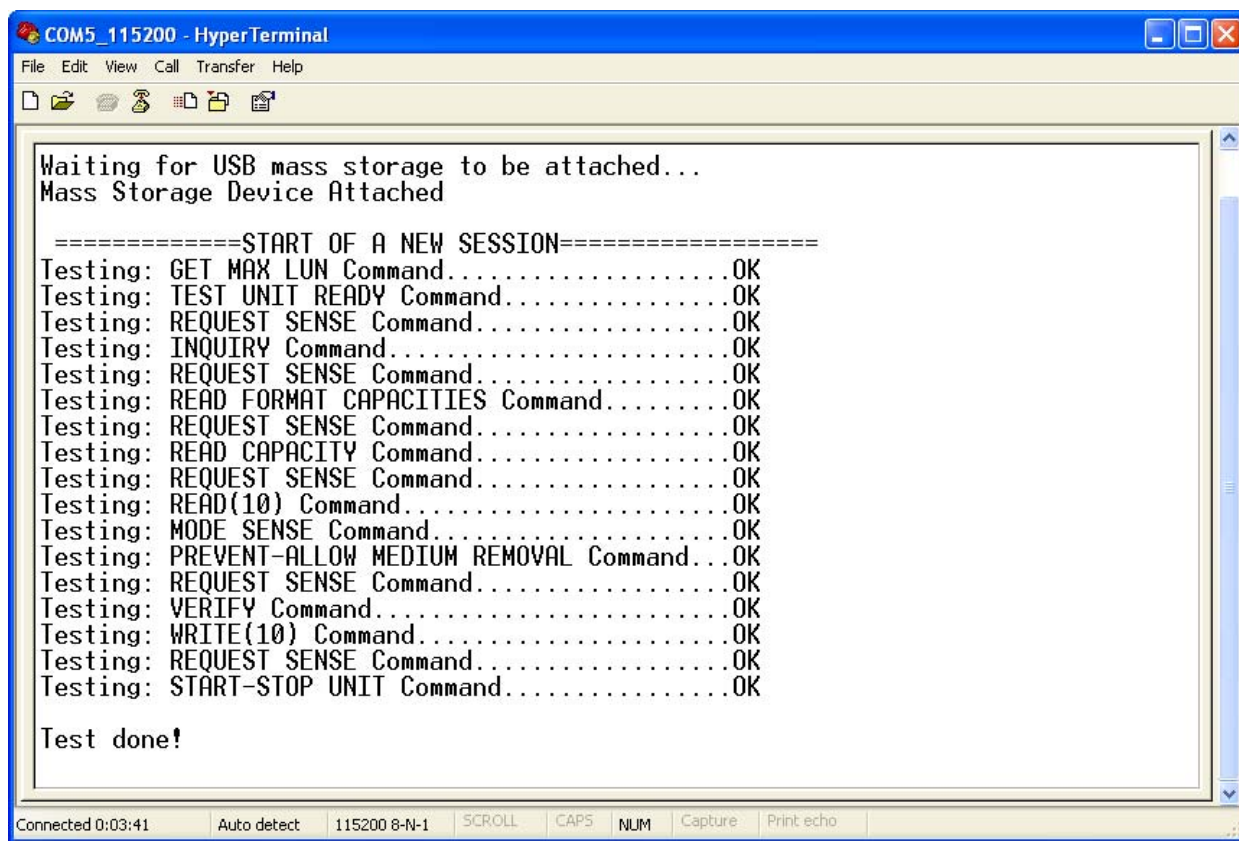

```
COM5_115200 - HyperTerminal
File Edit View Call Transfer Help

Waiting for USB mass storage to be attached...
Mass Storage Device Attached

=====START OF A NEW SESSION=====
Testing: GET MAX LUN Command.....OK
Testing: TEST UNIT READY Command.....OK
Testing: REQUEST SENSE Command.....OK
Testing: INQUIRY Command.....OK
Testing: REQUEST SENSE Command.....OK
Testing: READ FORMAT CAPACITIES Command.....OK
Testing: REQUEST SENSE Command.....OK
Testing: READ CAPACITY Command.....OK
Testing: REQUEST SENSE Command.....OK
Testing: READ(10) Command.....OK
Testing: MODE SENSE Command.....OK
Testing: PREVENT-ALLOW MEDIUM REMOVAL Command..OK
Testing: REQUEST SENSE Command.....OK
Testing: VERIFY Command.....OK
Testing: WRITE(10) Command.....OK
Testing: REQUEST SENSE Command.....OK
Testing: START-STOP UNIT Command.....OK


Test done!

Connected 0:03:41  Auto detect  115200 8-N-1  SCROLL  CAPS  NUM  Capture  Print echo
```

Figure D-2. Test result

The message shows that all test case are passed.

4. Unplug the device. HyperTerminal shows the message about the device detachment as in [Figure D-3](#):

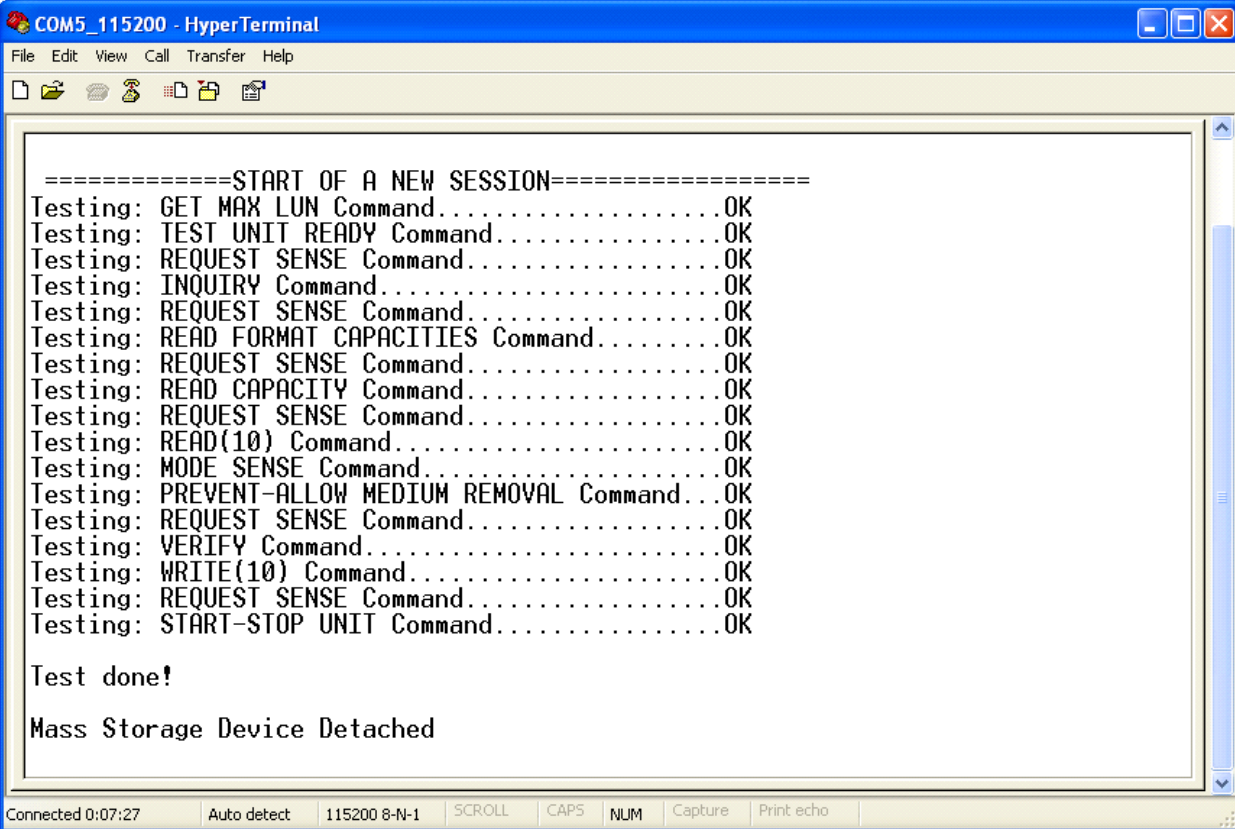

```
=====START OF A NEW SESSION=====
Testing: GET MAX LUN Command.....OK
Testing: TEST UNIT READY Command.....OK
Testing: REQUEST SENSE Command.....OK
Testing: INQUIRY Command.....OK
Testing: REQUEST SENSE Command.....OK
Testing: READ FORMAT CAPACITIES Command.....OK
Testing: REQUEST SENSE Command.....OK
Testing: READ CAPACITY Command.....OK
Testing: REQUEST SENSE Command.....OK
Testing: READ(10) Command.....OK
Testing: MODE SENSE Command.....OK
Testing: PREVENT-ALLOW MEDIUM REMOVAL Command...OK
Testing: REQUEST SENSE Command.....OK
Testing: VERIFY Command.....OK
Testing: WRITE(10) Command.....OK
Testing: REQUEST SENSE Command.....OK
Testing: START-STOP UNIT Command.....OK

Test done!

Mass Storage Device Detached
```

Connected 0:07:27 Auto detect 115200 8-N-1 SCROLL CAPS NUM Capture Print echo

Figure D-3. USB mass storage detached

Appendix E Audio Host Demo

This chapter is a quick guide on how to use the USB Audio Host Demo software package. The demo application is used to control and communicate with Audio Devices. The operation of the demo depends on Audio Device type:

- Speaker type (Audio Device with stream OUT supported): Sends audio data stream to the device.
- Microphone type (Audio Device with stream IN supported): Receives audio stream data from devices and play it.

In both cases, the application supports sending specific requests to the Audio Devices such as Mute Control. To take you through this guide, the demos are illustrated by using a MCF52259 Demo board.

NOTE

The Audio Host Demo supports either audio data transmit interface or audio data receive interface over isochronous pipe. In case, the Audio Devices support multi-data interfaces, the final audio data interface is supported only.

E.1 Setting Up the Demo

Set up the connections as shown in [Figure E-1](#).

8. Make the first USB connection between the PC where the software is installed and the Demo board where the silicon is mounted. This connection is required to provide power to the board and for downloading the image to the flash.
9. Make the second connection between the Demo board and the PC to display the log of the Demo board.
10. Make the third connection between the Audio Device and the Demo board.
11. Make the fourth connection between a speaker and the Audio Device. (In case Audio Device is
12. Microphone, the speaker is connected to Audio Host instead of Audio Device).

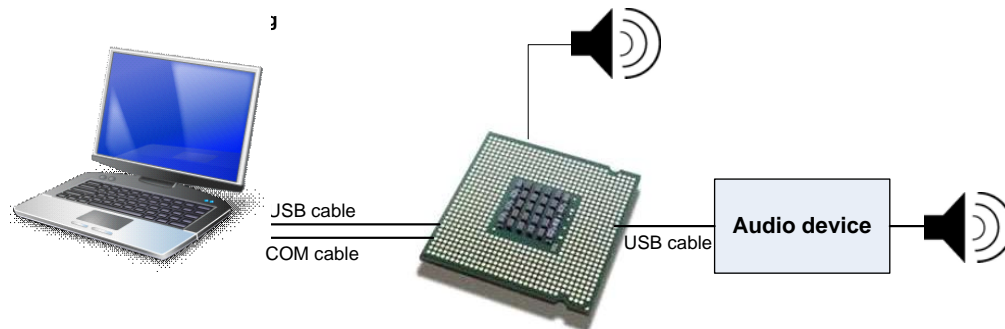


Figure E-1. Audio demo setup

E.2 Running the Demo

Perform the following steps to run the Audio Host Demo:

1. Open and load the image of Audio Demo application to the board.
2. After the image has been loaded successfully, HyperTerminal appears as shown in [Figure E-2](#).


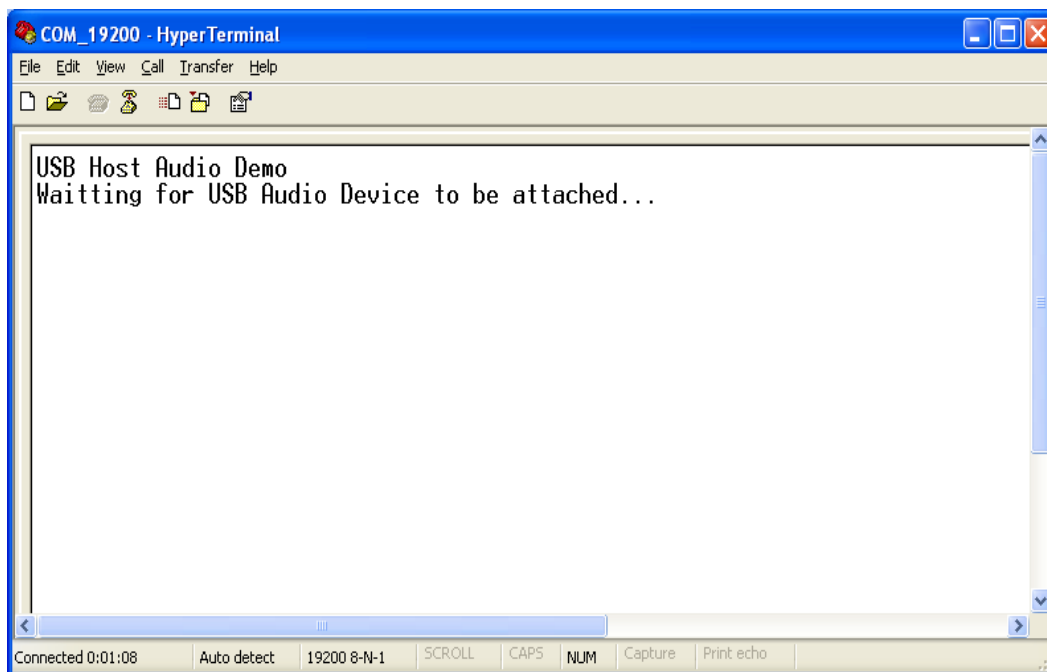


Figure E-2. USB Host waiting for audio device attachment event

3. Plug the Audio Device into the board. The Audio Device will be attached. Device information is shown as in [Figure E-3](#) if Audio Device is Speaker type, in [Figure E-4](#) if Audio Device is Microphone type.

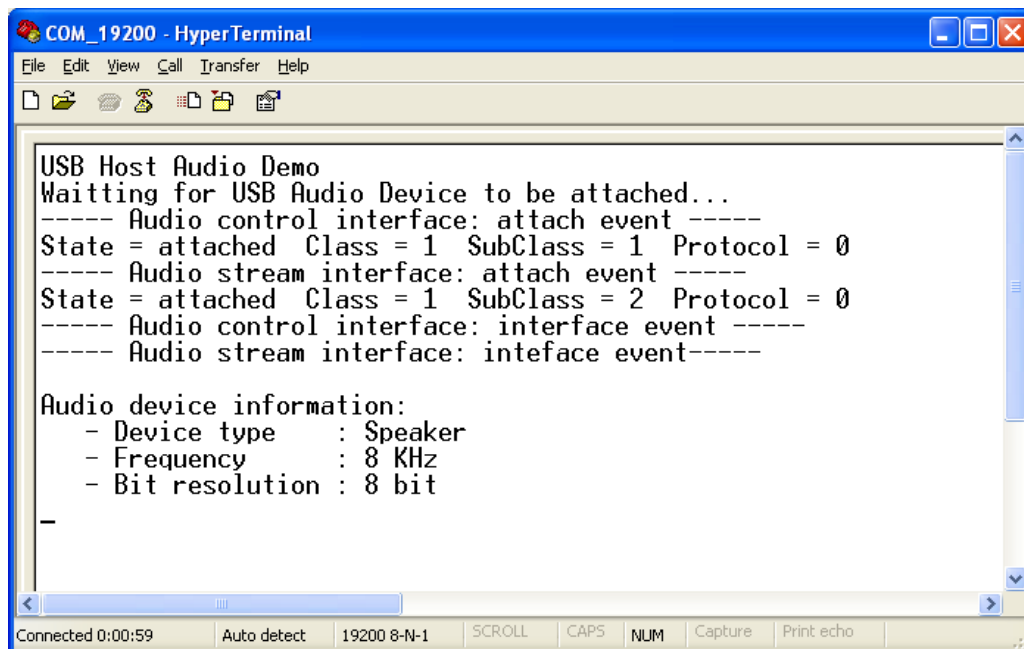

```


COM_19200 - HyperTerminal
File Edit View Call Transfer Help

USB Host Audio Demo
Waiting for USB Audio Device to be attached...
----- Audio control interface: attach event -----
State = attached Class = 1 SubClass = 1 Protocol = 0
----- Audio stream interface: attach event -----
State = attached Class = 1 SubClass = 2 Protocol = 0
----- Audio control interface: interface event -----
----- Audio stream interface: interface event-----

Audio device information:
- Device type      : Speaker
- Frequency        : 8 KHz
- Bit resolution   : 8 bit
-
Connected 0:00:59  Auto detect  19200 8-N-1  SCROLL  CAPS  NUM  Capture  Print echo

```

Figure E-3. Attached device is Speaker type

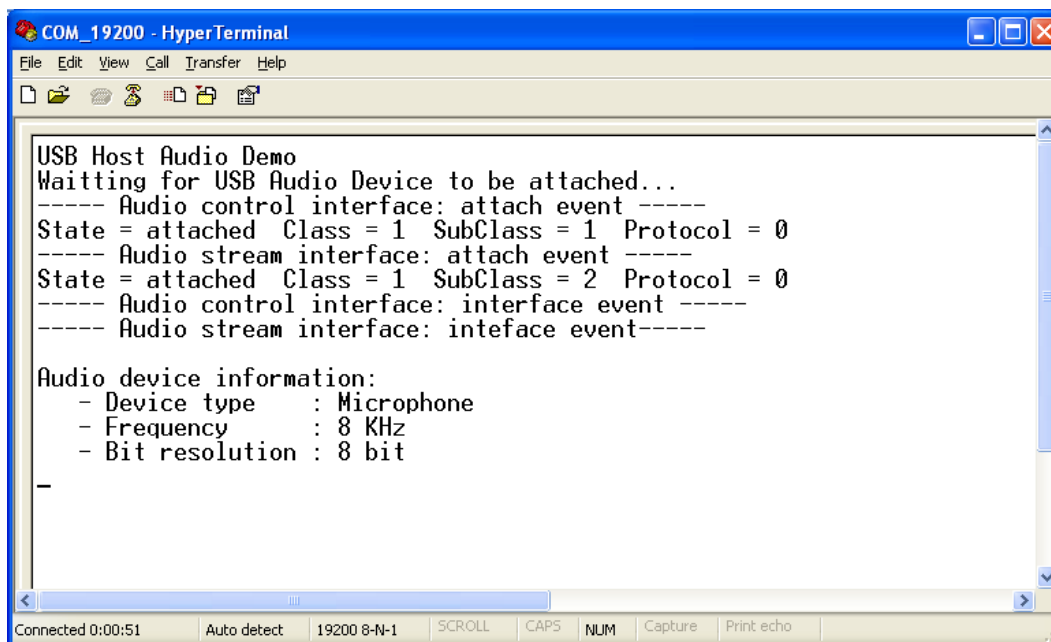

```

COM_19200 - HyperTerminal
File Edit View Call Transfer Help


USB Host Audio Demo
Waiting for USB Audio Device to be attached...
----- Audio control interface: attach event -----
State = attached Class = 1 SubClass = 1 Protocol = 0
----- Audio stream interface: attach event -----
State = attached Class = 1 SubClass = 2 Protocol = 0
----- Audio control interface: interface event -----
----- Audio stream interface: interface event-----

Audio device information:
- Device type      : Microphone
- Frequency        : 8 KHz
- Bit resolution   : 8 bit
-
Connected 0:00:51  Auto detect  19200 8-N-1  SCROLL  CAPS  NUM  Capture  Print echo

```

Figure E-4. Attached device is Microphone type

4. Press Switch 1 to set Mute ON/OFF. The HyperTerminal screen appears as shown in [Figure E-5](#).

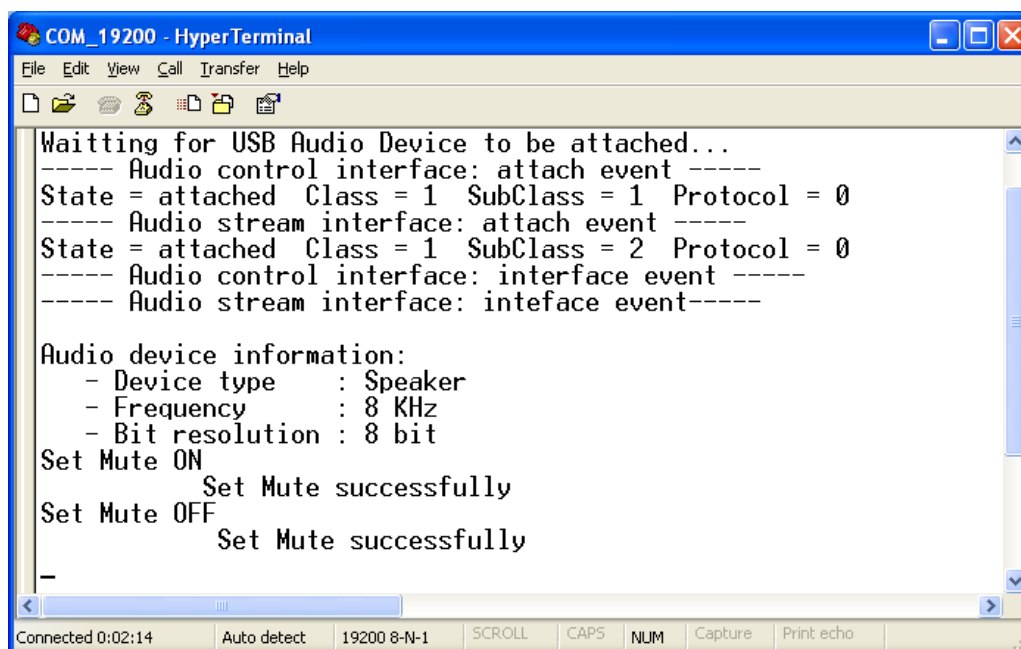

```

COM_19200 - HyperTerminal
File Edit View Call Transfer Help

Waiting for USB Audio Device to be attached...
----- Audio control interface: attach event -----
State = attached Class = 1 SubClass = 1 Protocol = 0
----- Audio stream interface: attach event -----
State = attached Class = 1 SubClass = 2 Protocol = 0
----- Audio control interface: interface event -----
----- Audio stream interface: interface event-----

Audio device information:
- Device type      : Speaker
- Frequency       : 8 KHz
- Bit resolution  : 8 bit
Set Mute ON
      Set Mute successfully
Set Mute OFF
      Set Mute successfully
-


Connected 0:02:14  Auto detect  19200 8-N-1  SCROLL  CAPS  NUM  Capture  Print echo

```

Figure E-5. Set Mute ON/OFF

5. Press Switch 2 to Start/Stop transferring audio data stream between the Audio Host and the Audio Device.
- If attached device is Speaker type, you can hear the sound from the speaker, which is connected to the Audio Device.
 - If attached device is Microphone type, you can hear the sound from the speaker, which is connected to the Audio Host.

The HyperTerminal screen appears as shown in [Figure E-6](#)

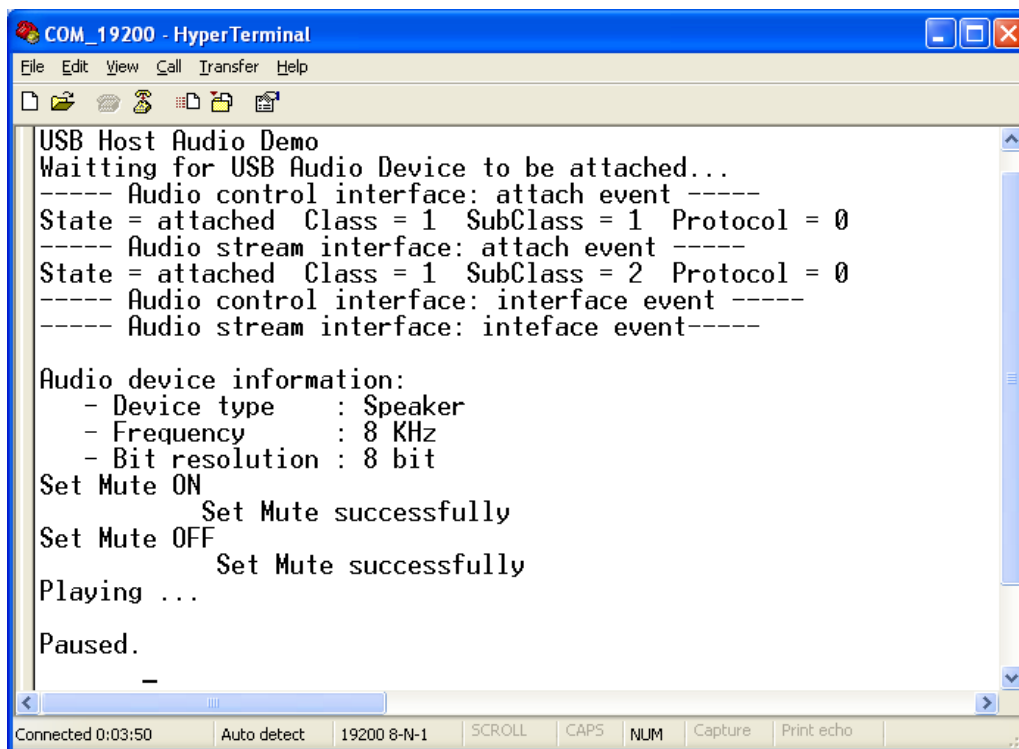


```
COM_19200 - HyperTerminal
File Edit View Call Transfer Help

USB Host Audio Demo
Waiting for USB Audio Device to be attached...
----- Audio control interface: attach event -----
State = attached Class = 1 SubClass = 1 Protocol = 0
----- Audio stream interface: attach event -----
State = attached Class = 1 SubClass = 2 Protocol = 0
----- Audio control interface: interface event -----
----- Audio stream interface: interface event-----

Audio device information:
- Device type      : Speaker
- Frequency        : 8 KHz
- Bit resolution   : 8 bit
Set Mute ON
      Set Mute successfully
Set Mute OFF
      Set Mute successfully
Playing ...
Paused.
-
```

Figure E-6. Start/Stop transferring audio data

6. Unplug the Audio Device. The HyperTerminal shows a message as shown in [Figure E-7](#)

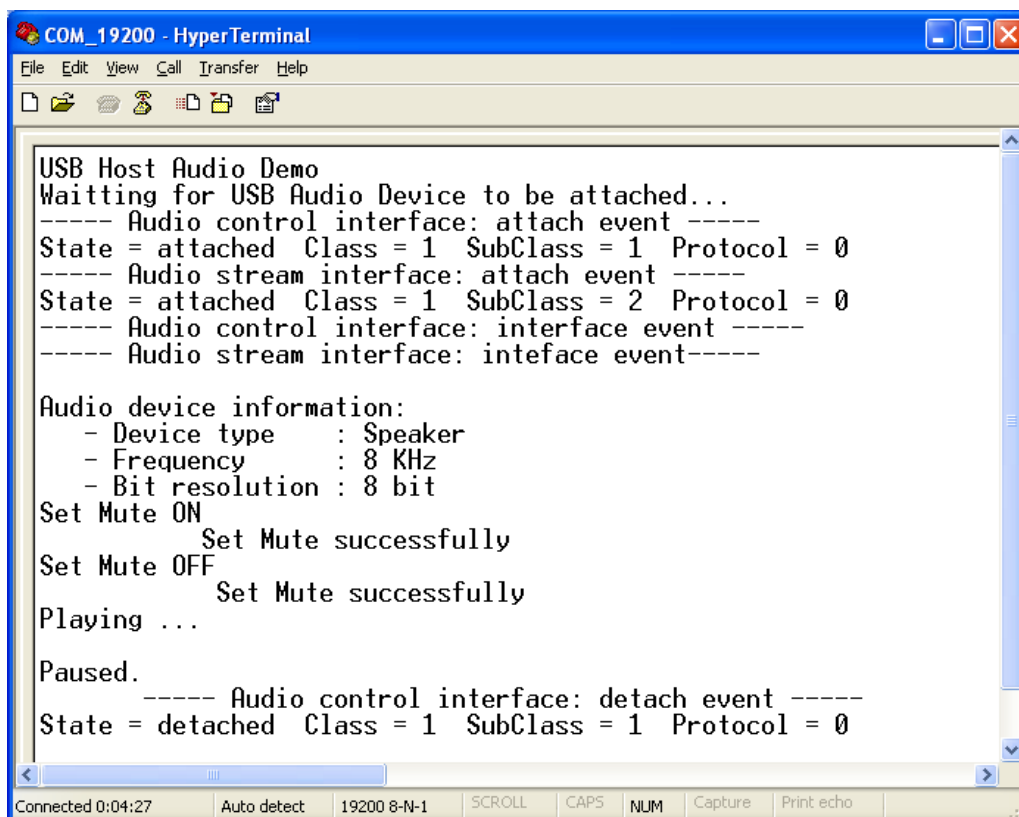

```

COM_19200 - HyperTerminal
File Edit View Call Transfer Help

USB Host Audio Demo
Waitting for USB Audio Device to be attached...
----- Audio control interface: attach event -----
State = attached Class = 1 SubClass = 1 Protocol = 0
----- Audio stream interface: attach event -----
State = attached Class = 1 SubClass = 2 Protocol = 0
----- Audio control interface: interface event -----
----- Audio stream interface: interfeace event-----

Audio device information:
- Device type      : Speaker
- Frequency        : 8 KHz
- Bit resolution   : 8 bit
Set Mute ON
Set Mute successfully
Set Mute OFF
Set Mute successfully
Playing ...

Paused.
----- Audio control interface: detach event -----
State = detached Class = 1 SubClass = 1 Protocol = 0

Connected 0:04:27  Auto detect  19200 8-N-1  SCROLL  CAPS  NUM  Capture  Print echo

```

Figure E-7. Audio Device detached