

COLUMBIA PRODUCTS

SANI-LAV[®]

Operating Manual for Hands-Free Wall Mounted Sink
Models ES2-505, ES2-505L, ESB2-505 and ESB2-505L



Columbia does not recommend use with harsh chemicals.
(L) Certified for use in potable water applications (NSF/ANSI 372)

COLUMBIA SPECIFICATIONS
MODELS ES2-505, ES2-505L, ESB2-505 AND ESB2-505L

SINKS WITH ELECTRONIC SENSORS

2

AC OR BATTERY POWERED

Parts List

- ☐ (1) Wall hung sink – Model ES2-505, ES2-505L, ESB2-505 or ESB2-505L
- ☐ (1) Wall mounting bracket – Model 1040
- ☐ (1) AC powered sensor faucet model H-6700C or battery powered model HB-6700C
- ☐ (1) Mixing check valve – Model 201
- ☐ (1) Strainer assembly with basket – Model 1010
- ☐ (1) Soap dispenser, pump type, 16 oz. with holder (top discharge) and (3) each nuts and bolts – Model 563

Tools Required

- ☐ Tape Measure
- ☐ Adjustable Wrench
- ☐ Drill Motor and Drill Bits
- ☐ Pipe Wrench
- ☐ Level
- ☐ Safety Glasses
- ☐ Screw Drivers: 1 Phillips & 1 Standard
- ☐ Pencil
- ☐ Socket Wrench

Installation Instructions

Step 1

1. Establish sink location on the wall.
2. Measure a recommended 41.5" from finished floor and draw a level line which will be the top edge of the wall mounting bracket.
3. Hold the wall mounting bracket against the wall and mark the wall where the holes are. Drill holes and secure bracket to the wall as shown in illustration A. Screws are not provided.

Step 2

1. Install H-6700C or HB-6700C faucet to the sink following the instructions provided with sensor unit.
2. Install soap dispenser holder with bolts & nuts (provided).
3. Install strainer assembly.
4. Install model 201 mixing check valve to inlet filter on faucet.

Step 3

1. Position the sink onto wall bracket.
2. Mark holes for fastening side mounting brackets as shown in illustration B.
3. Remove sink from the wall bracket.
4. Drill holes in wall for securing sink to wall.
5. Hang sink on the wall bracket and secure to the wall.

Step 4

1. Connect waste line or drain pipe to strainer assembly.
2. Connect hot and cold water from the source to model 201 mixing check valve.
3. Remove aerator from the spout assembly and flush water system.
4. Check connections for leaks.
5. Replace aerator onto the spout.

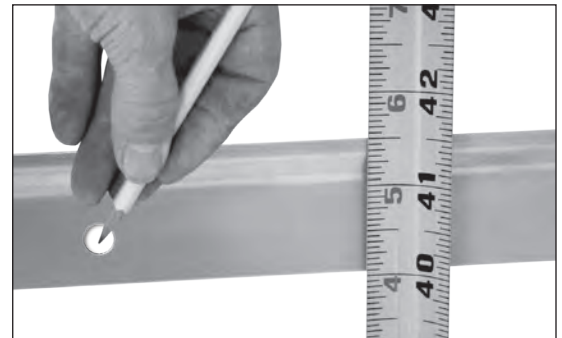


Illustration A



Illustration B


COLUMBIA SPECIFICATIONS
MODELS ES2-505, ES2-505L, ESB2-505 AND ESB2-505L

SINKS WITH ELECTRONIC SENSORS


3

AC OR BATTERY POWERED


■ **Top**

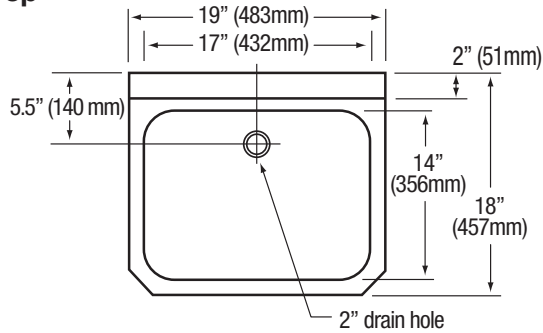


■ **Front**

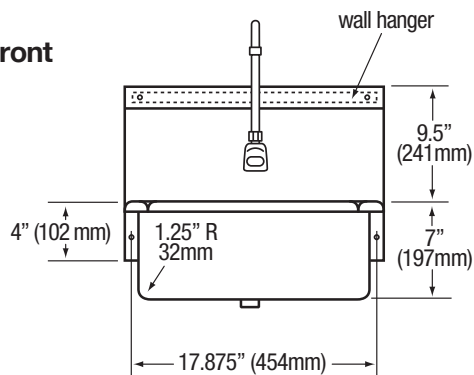

■ **Side**

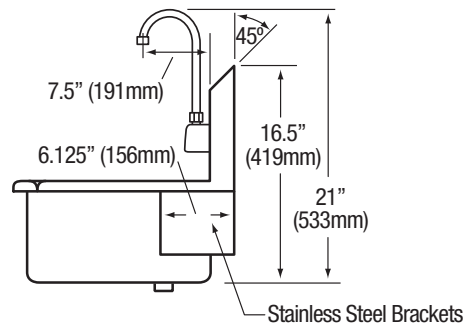

■ **Hole Configurations**

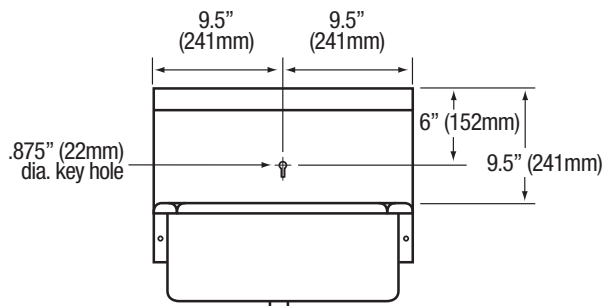



Operation & Maintenance Manual

Hydrotek Model H-6700C and HB-6700C Faucet



Hydrotek International, Inc.

5055 Forsyth Commerce Rd., Ste. 124, Orlando, FL 32807

Technical Support Team

Michael Hu & Armin Kharazi

Phone (800) 922-9883 ext. 105

Fax (866) 670-5580

Email: mike@hydrotekintl.com or armin@hydrotekintl.com

www.hydrotekintl.com

Hydrotek Automatic Gooseneck Faucet

Non-Mixing / Wall Mounted

Model H-6700C (AC) or HB-6700C (Battery)

Meets ANSI/ASME A112.18.1M-1989

Operation:

1. A continuous, invisible beam is emitted from the sensor.
2. The faucet is activated by placing hands under the spout within the effective range of the beam. Water starts to flow immediately for as long as the user's hands remain in the sensor range.
3. When hands are removed, the water flow stops. The sensor will automatically reset and be ready for the next user.
4. In battery powered mode, flashing red light will indicate low battery condition.

Specifications:

Faucet Construction:
Control Circuit

Auto. Time-out:

Sensor Range:
Shut-Off Delay:

Control Cable:
Solenoid Valve:

Flow Control:

AC Mode

Power Adapter

Standard plug-in:
(UL/CSA)

Power Cable:

Optional Multi-Unit Adapter
(UL/CSA)

Battery Mode

Battery Powered Models:

Service Life:

Standard Package Includes:

H-6700C (AC)

- X (1) Faucet with Electronic Sensor
- X (1) Control Box w/6V DC Solenoid
- X (1) 12V DC Plug-in Power Adapter
- X (1) In-Line Filter with Clean-Out Trap
- X (1) 18" Flex, S.S. Supply Tube, 3/8"
- X (1) Mounting Hardware
- X (1) 6" Gooseneck Spout
- X (1) 2.0 GPM V.R. Laminar Flow Control
- (4) AA Alkaline Batteries
- (1) Battery Holder

HB-6700C (Bat)

- X
- X
- X
- X
- X
- X
- X
- X
- X
- X


Dimensions:

Base Width (Outside Measurement)	2-1/4"
Base Depth	2-1/2"
Faucet Height (Aerator to Base)	8-3/4"
Faucet Height Overall	12-3/4"
Depth (Center of Aerator to Center of Faucet Base)	5-3/8"
Mounting Bolt Length	1-7/16"
Mounting Bolt Pattern	Single-Hole Mount


Optional Variations and Accessories:

- 1.6 GPM Soft-Flow Aerator 1.5 & 2.5 GPM Laminar Flow Control and Rose Spray Head
- HC-010 Multi-Unit Voltage Adapter (AC Powered Only)
- HC-001 Mixing/Check Valve (Mechanical)
- HBL-04 Thermostatic Mixing Valve with Checks
- 8" deep Gooseneck and 6" or 8" Swing Spout

H-6700C

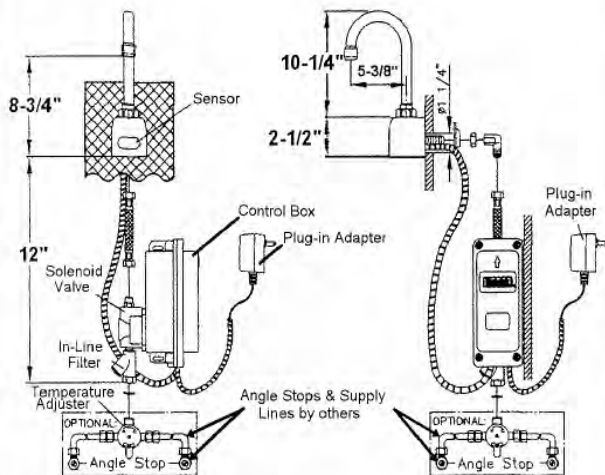

HB-6700C

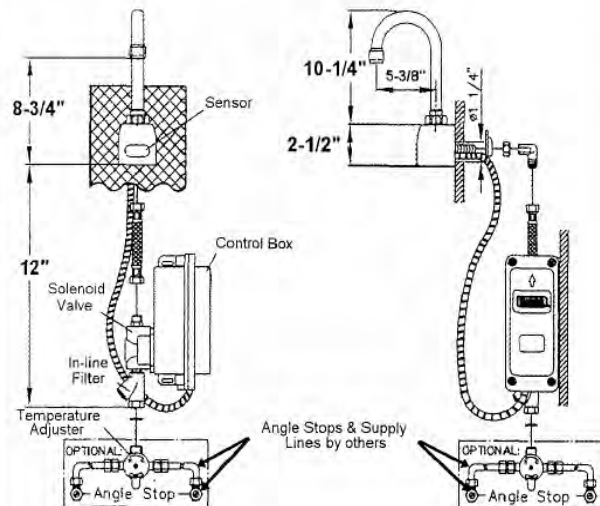

HYDROTEK INTERNATIONAL, INC.

5055 Forsyth Commerce Rd., Ste. 124

Orlando, FL 32807

1.800.922.9883 (Phone)

1.866.670.5580 (Fax)


www.hydrotekintl.com



INSTALLATION INSTRUCTIONS

Hydrotek Non-Mixing Automatic Faucet (AC Powered)

1. Prior to installing this faucet, thoroughly flush all water lines and replace stop washers, if necessary.
2. To ensure proper operation, " DRY TEST " the faucet by plugging (17) Sensor eye cable connector into the matching connector on the PC board inside the (18) Control box. Plug (19) Power adapter output connector into matching connector on PC board located inside the (18) Control box. Plug (19) Power adapter into 120 V AC outlet. Place your hand in front of faucet sensor eye. If there is a clicking sound, the faucet is activating properly. If not, call the factory.
3. After successful "DRY TEST," unplug connectors from both the Sensor eye cable and Power adapter to the PC board.
4. Loosen (1) Flow control device and assemble (2) Gooseneck spout using (4) Split washers and (3) Spout nut. Mount Gooseneck spout onto (5) Faucet body. Feed (17) Sensor eye cable through sink wall and mount faucet onto the sink using (8) O-ring, (9) Washer, and (10) Mounting nut. Attach (11) 90 Degree elbow to (7) Supply rod.
5. Connect electrical Sensor eye cable and Power adapter as described in STEP #2, making sure that the Sensor eye and Power adapter cables are seated into the Control box housing properly.
6. Attach (13) Compression fitting to (14) Solenoid valve and connect it to the (11) Elbow using (12) Supply tube. Insert (16) Nylon washer into the swivel nut located on the (15) In-line filter inlet (**for pre-tempered or cold water only**). Using a union fitting (not supplied), connect supply line (not supplied) from supply stop to (15) In-line filter inlet swivel nut (**for tempered water**).
>>Attach optional Hydrotek HC-001 Mixing/Check Valve or HC-003 Mixing "T" w/checks to In-line filter inlet. Connect supply lines (not supplied) from hot and cold supply stops to Mixing valve or Mixing "T" inlets.
Use Teflon Tape, not Pipe Dope for all connections.
7. Turn on water and check for leaks. Plug (19) Power adapter into 120V AC outlet. Reinstall Control box cover and tighten screws to insure that the box is water-resistant. Coil excess Power Adapter wire and secure in a safe, dry area. Place hand in front of Sensor eye to activate water flow. Remove hands and water should stop. If not, refer to troubleshooting guide.
8. Periodically clean the filter element located inside the In-line filter.
9. For minor adjustments, refer to the instructions located inside the Control box cover.

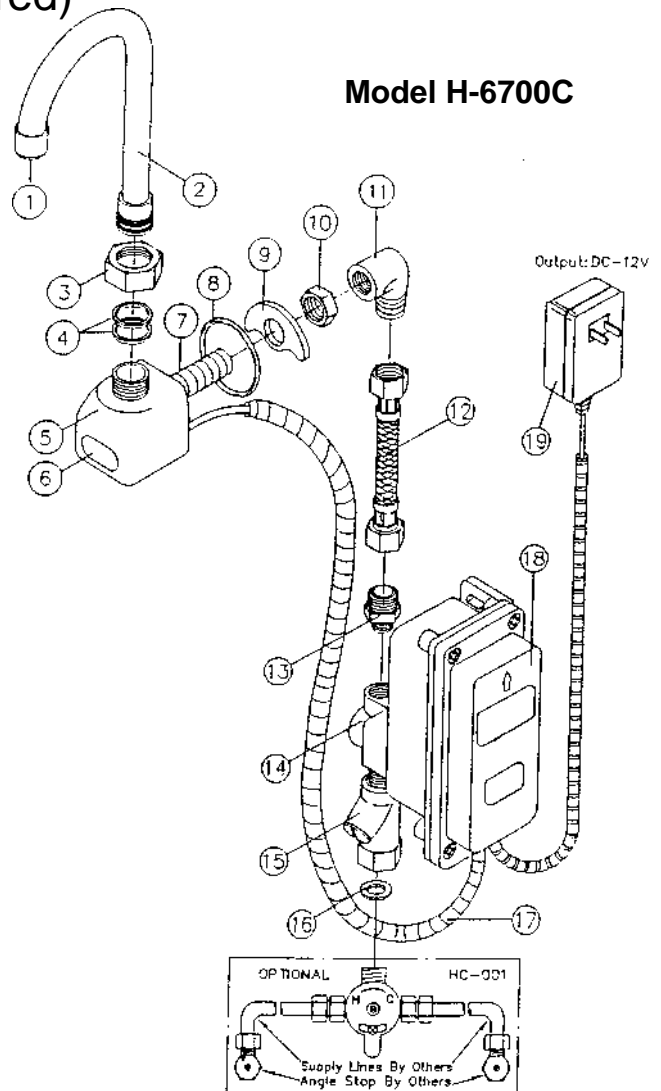


Part Number Descriptions	
1. Laminar flow control	11. 90 Degree elbow
2. Gooseneck spout	12. Supply tube
3. Spout nut	13. Compression fitting
4. Split washer	14. Solenoid valve
5. Faucet body	15. In-line filter
6. LED sensor	16. Nylon washer
7. Supply rod	17. Sensor eye cable
8. O-ring	18. Control box
9. Washer	19. Power adapter
10. Mounting nut	

HYDROTEK INTERNATIONAL, INC.
5055 Forsyth Commerce Rd. , Ste. 124
Orlando, FL 32807
1.800.922.9883 (Phone)
1.866.670.5580 (Fax)
www.hydrotekintl.com

INSTALLATION INSTRUCTIONS

Hydrotek Non-Mixing Automatic Faucet (Battery Powered)

1. Prior to installing this faucet, thoroughly flush all water lines and replace stop washers, if necessary.
2. To ensure proper operation, " DRY TEST " the faucet by plugging (17) Sensor Eye Cable connector into the matching connector on the PC board inside the (18) Control Box. Pull out PC board for easier access. Properly install batteries in Battery Holder and plug Battery Holder output connector into the corresponding connector on the PC board. Place your hand in front of faucet sensor eye. If there is a clicking sound, the faucet is activating properly. If not, call the factory.
3. After successful "DRY TEST," unplug Sensor Eye Cable and Battery Holder connectors from the PC board.
4. **Use Teflon Tape, not Pipe Dope for all connections. Loosen (1) Flow Control Device and assemble (2) Gooseneck Spout using (4) Split Washers and (3) Spout Nut. Mount gooseneck spout onto (5) Faucet Body. Feed (17) Sensor Eye Cable through the sink wall and mount the faucet onto the sink using (8) O-ring, (9) Washer and (10) Mounting Nut. Attach (11) 90-Degree Elbow to (7) Supply Rod.
5. Connect Sensor Eye Cable as described in STEP #2, making sure that the Sensor Eye cable is seated into the Control box housing properly.
6. Attach (13) Compression Fitting to (14) Solenoid Valve outlet and connect it to (12) Supply Tube using (11) Elbow and (13) Compression Fitting. Insert (16) Nylon Washer into swivel nut located on (15) In-line Filter Inlet (**for pre-tempered or cold water only**). Using a union fitting (not supplied), connect supply line (not supplied) from supply stop to (15) In-line Filter inlet swivel nut (**for tempered water**).
>>Attach optional Hydrotek HC-001 Mixing/Check Valve or HC-003 Mixing "T" w/checks to In-line filter inlet. Connect supply lines (not supplied) from hot and cold supply stops to Mixing valve or Mixing "T" inlets.
Use Teflon Tape, not Pipe Dope for all connections.
7. Turn on water and check for leaks. Connect Battery holder to the PC board and reinstall the Control box cover. Tighten screws to ensure that the box is water resistant. Place hand in front of Sensor eye to activate water flow. Remove hands and water should stop. If not, refer to troubleshooting guide.
8. Periodically clean the filter element located inside the (15) In-line filter.
9. For minor adjustments, refer to the instructions located inside the Control box cover.

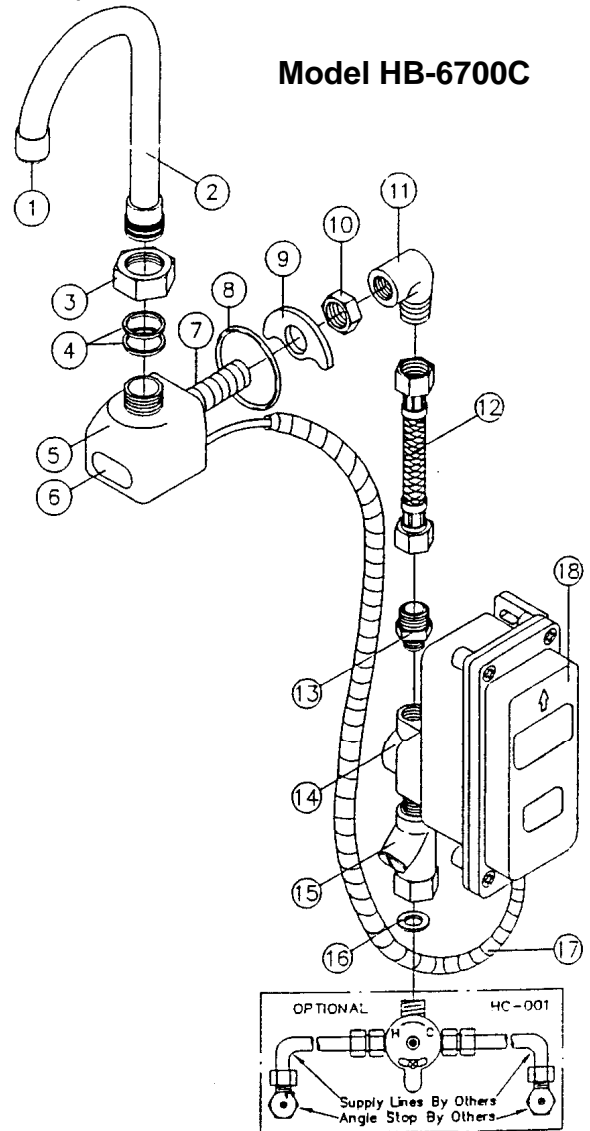


Part No.	Description	Part No.	Description
1.	Laminar Flow Control	10.	Mounting Nut
2.	Gooseneck Spout	11.	90 Degree Elbow
3.	Spout Nut	12.	Supply Tube
4.	Split Washer	13.	Compression Fitting
5.	Body	14.	Solenoid Valve
6.	LED Sensor	15.	In-Line Filter
7.	Supply Rod	16.	Nylon Washer
8.	O-Ring	17.	Sensor Eye Cable
9.	Washer	18.	Control Box

HYDROTEK INTERNATIONAL, INC.
5055 Forsyth Commerce Rd. , Ste. 124
Orlando, FL 32807
1.800.922.9883 (Phone)
1.866.670.5580 (Fax)
www.hydrotekintl.com

NO	DESCRIPTION	PART NO.
1	Flow Control Device	HC-015D-A
2	Gooseneck Spout	HC-026D-01
3	O-Ring(H018)*2	HC-014-09
4	Spout Nut	H4-01D-02A
5	Spit Washer*2	H4-01-03
6	Body	B67-01D-01B
7	O-Ring(H118)	HC-014-16
8	Sensor Cover	PC-004-31A
9	O-Ring(H021)	HC-014-33
10	Sensor Eye & Cable	PC-006-28
11	Screw*2	HC-013-27
12	Screw*4	HC-013-04
13	Bottom Cover	B67-01-02A
14	O-Ring(H012)	HC-014-18
15	Supply Rod	B67-01B-03A
16	O-Ring(H224)	HC-014-45
17	Mounting Washer	H2-03B-0101A
18	Mounting Nut	B2-01-06
19	Elbow	B67-01-04A
20	Supply Tube	HC-004-04
21	Compression Adaptor	HB-02B-02
22	Screw*4	HC-013-57
23	Filter Body	HC-023D-A
24	Nylon Washer	HC-002-04A
25	Filter Screen	HC-009-03
26	O-Ring(H016)	HC-014-36
27	Filter Cap	HC-023D-02
28	Valve Seat	HB-011-03
29	O-Ring(H031)	HC-014-61
30	Rubber Plug	HB-02-06
31	Control Disc+Rubber	HC-005-03E
32	Control Disc Spring	HC-003-03
33	O-Ring(H022)	HC-014-30
34	O-Ring(H023)	HC-014-11
35	Control Valve	HB-05-04
36	O-Ring(H013)	HC-014-03
37	Piston Tip	HB-04-09A
38	Piston	HB-04-08A
39	Piston Spring	HB-04-07A


NO	DESCRIPTION	PART NO.
40	Piston Shaft	HB-04-06A
41	Coil	HB-04-05A
42	Metal Gasket	HB-04B-E
43	Lock Washer *4	HB-01-20
44	Screw *4	HC-013-35
45	Control Box	HB-012-0101
46	Screw *2	HC-013-52
47	P.C.B	PC-009-32
48	Rubber Seal	HB-012-0102
49	O-Ring(006)*4	HC-014-62
50	Box Cover	HB-012-0201
51	Screw *4	HC-013-52
52	Ac Adaptor	HC-012-07D

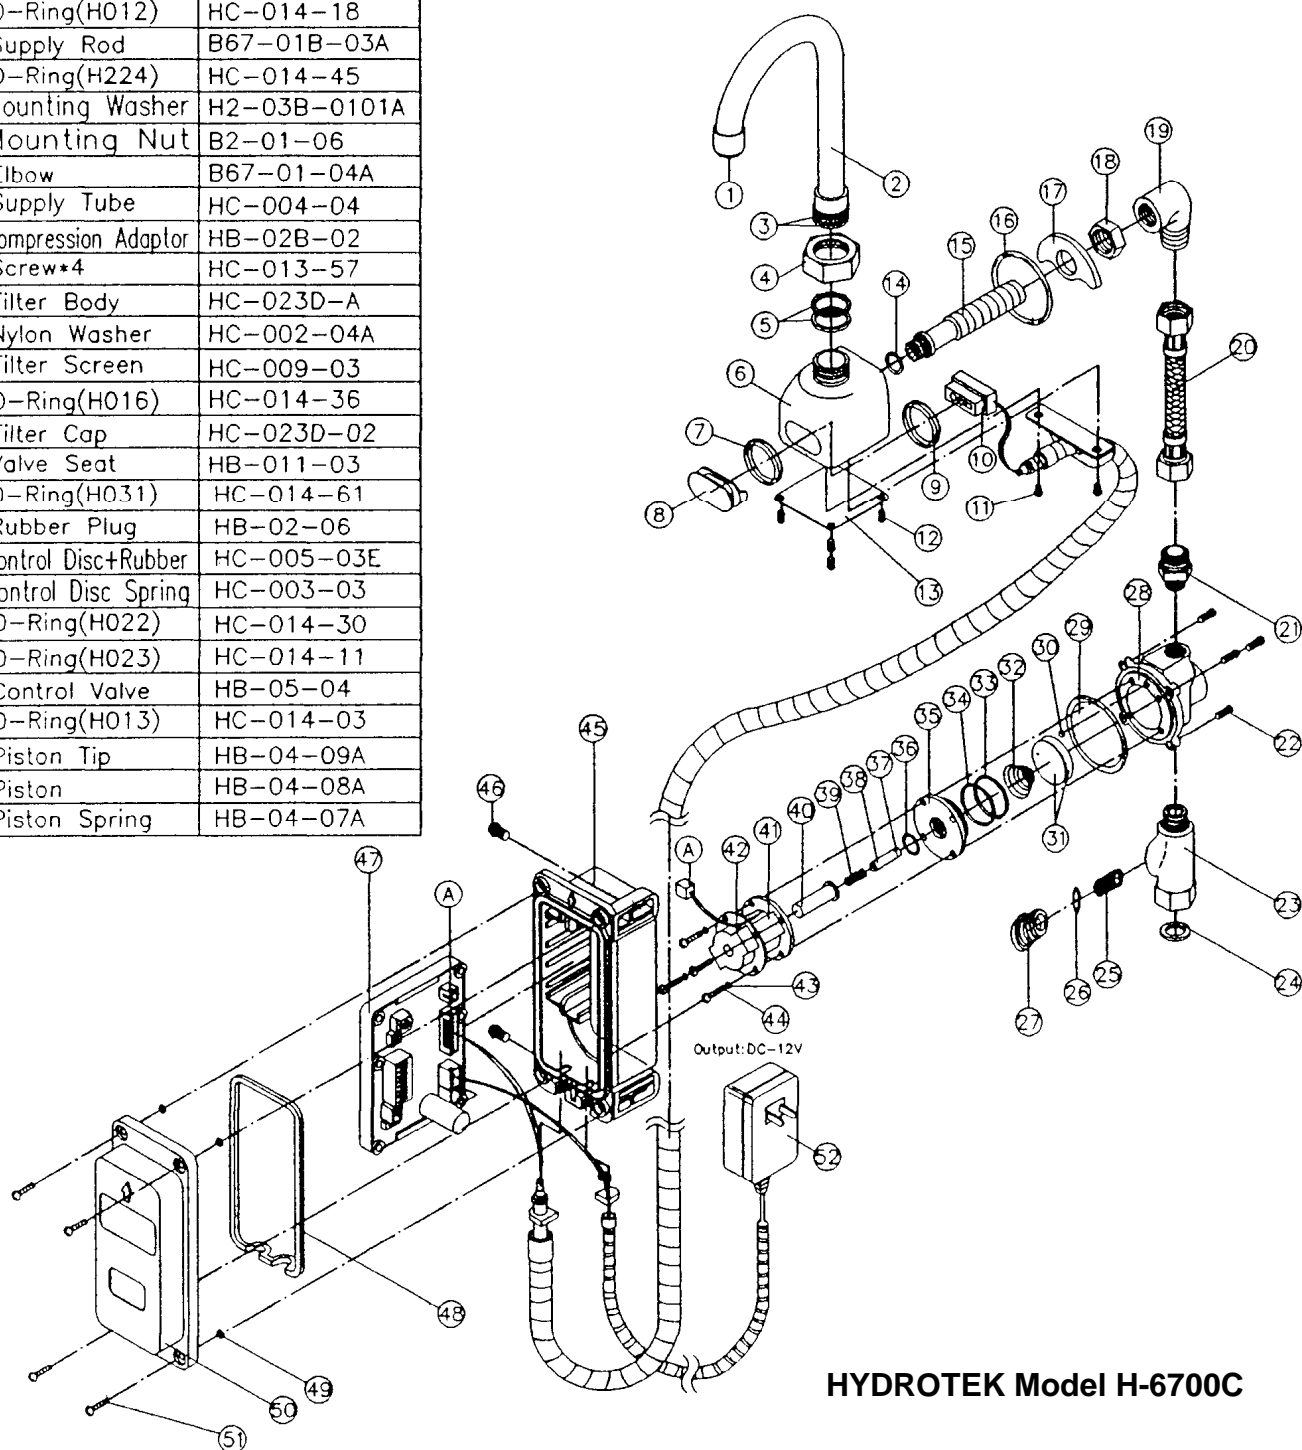

HYDROTEK Model H-6700C

NO	DESCRIPTION	PART NO.
1	Flow Control Device	HC-015D-A
2	Gooseneck Spout	HC-026D-01
3	O-Ring(H018)*2	HC-014-09
4	Spout Nut	H4-01D-02A
5	Spit Washer*2	H4-01-03
6	Body	B67-01D-01B
7	O-Ring(H118)	HC-014-16
8	Sensor Cover	PC-004-31A
9	O-Ring(H021)	HC-014-33
10	Sensor Eye & Cable	PC-006-26A
11	Screw*2	HC-013-27
12	Screw*4	HC-013-04
13	Bottom Cover	B67-01-02A
14	O-Ring(H012)	HC-014-18
15	Supply Rod	B67-01B-03A
16	O-Ring(H224)	HC-014-45
17	Mounting Washer	H2-03B-0101A
18	Mounting Nut	B2-01-06
19	Elbow	B67-01-04A
20	Supply Tube	HC-004-04
21	Compression Adaptor	HB-02B-02
22	Screw*4	HC-013-57
23	Filter Body	HC-023D-A
24	Nylon Washer	HC-002-04A
25	Filter Screen	HC-009-03
26	O-Ring(H016)	HC-014-36
27	Filter Cap	HC-023D-02
28	Valve Seat	HB-011-03
29	O-Ring(H031)	HC-014-61
30	Rubber Plug	HB-02-06
31	Control Disc+Rubber	HC-005-03E
32	Control Disc Spring	HC-003-03
33	O-Ring(H022)	HC-014-30
34	O-Ring(H023)	HC-014-11
35	Control Valve	HB-05-04
36	O-Ring(H013)	HC-014-03
37	Piston Tip	HB-04-09A
38	Piston	HB-04-08A
39	Piston Spring	HB-04-07A
40	Piston Shaft	HB-04-06A

NO	DESCRIPTION	PART NO.
41	Coil	HB-04-05A
42	Metal Gasket	HB-04B-E
43	Lock Washer *4	HB-01-20
44	Screw *4	HC-013-35
45	Control Box	HB-012-0101
46	Screw *2	HC-013-52
47	P.C.B	PC-009-32
48	Battery Holder	HB-09-03C
49	Alkaline Battery	HB-09-04
50	Rubber Seal	HB-012-0102
51	Rubber Plug	HB-011-0104
52	O-Ring(H006)*4	HC-014-62
53	Box Cover	HB-012-0201
54	Screw *4	HC-013-52

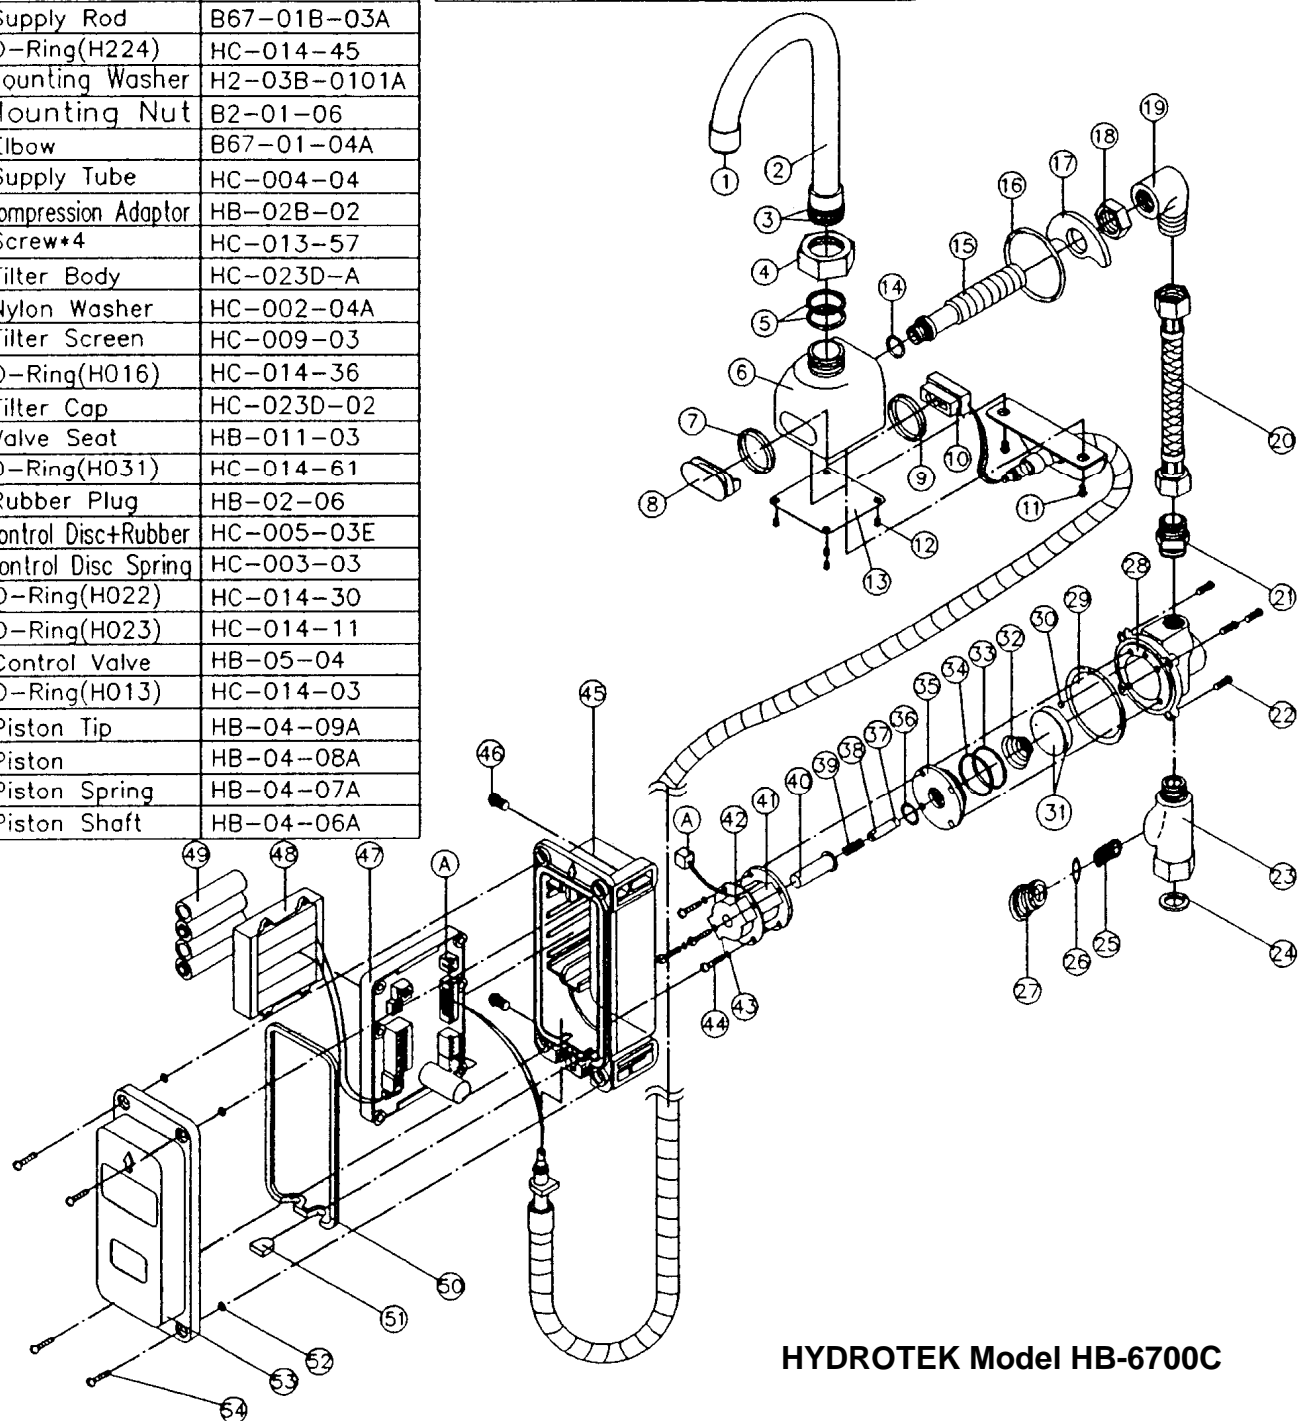

HYDROTEK Model HB-6700C

HYDROTEK AUTOMATIC FAUCET TROUBLESHOOTING GUIDE

(AC Powered)

Normal Operation: When power is connected or RESET button is pushed, the lights on the Printed Circuit Board (PCB) will blink in the following sequence: red – red (with solenoid clicking) – green – red – red. Green light will remain lit. When the user's hands are placed under the spout, the red indicator light on the faucet and PC board will illuminate and water will begin to flow. Water flow will stop when hands are removed. Always push the RESET button BEFORE attempting to diagnose any problem and AFTER taking corrective action.

<u>PROBLEM</u>	<u>POSSIBLE CAUSE</u>	<u>TO DIAGNOSE</u>	<u>REMEDY</u>
Faucet will not turn on:	Water not turned on.	Check water supply.	Turn water on.
	Power supply failure.	Check power adapter voltage, polarity, wires, and connections.	Replace power adapter and reconnect. Push RESET button.
	Sensor distance is too short.	Use hand/palm to find focal point of sensor beam.	To adjust sensor distance out, turn adjustment clockwise. Push RESET button.
	Electronic PCB is defective.	With power adapter plugged in, push RESET button. No light, no action.	Replace PCB.
	Sensor eyes are defective.	With power adapter plugged in, place hands in front of sensor eyes. Indicator light on faucet does not blink.	Replace sensor eyes and cable.
	Solenoid valve is clogged.	Solenoid is clicking but no water is coming out.	Clean solenoid and blow free all by-pass holes. Replace control disc. Push RESET button.
	In-line filter is clogged.	Open clean-out trap and check filter screen.	Clean or replace filter screen.
	Solenoid coil is defective.	With power adapter plugged in, push the RESET button. Light blinks but no solenoid clicking.	Replace solenoid coil. Push RESET button.

Faucet will not shut off: Solenoid valve is normally closed. Turn off water and activate faucet. If there is a clicking sound, the solenoid valve is dirty. If there is no clicking sound, then replace solenoid valve. Other factors could be problematic (Sensor distance adjustment could be too long or electronic PCB could be defective). If the faucet is dripping, the solenoid valve needs a rebuild kit. Follow the same procedures as above for remedies.


IMPORTANT: Periodic maintenance is required for smooth and trouble-free operation of this faucet.

For more detailed remedy procedures, please call Hydrotek Tech Support at (800)922-9883 ext. 105

SOLENOID VALVE CLEANING FOR HYDROTEK 1000C, 2603C, 6000C, 6700C FAUCETS (AC AND BATTERY POWERED)

1. Turn off water supply at stop valve.
2. Remove control box (if possible) to gain access to the solenoid valve.
3. Remove four Screws (#21) and separate the valve from the box.
4. Remove four Coil Screws (#43) and separate Coil (#41) from Valve Seat (#27).
5. When separating Plastic Control Valve (#34) be careful to retain the small Orange Rubber Plug (#29). Re-install this on Brass Valve Seat (#27).
6. Clean or replace Control Disc (#30), Disc Spring (#31), Piston & Tip (#36 and 37), Piston Spring (#38), and check Sleeve (#39) for corrosion.
7. Re-install all parts in same order as the diagram below.
8. Re-install solenoid on the control box and re-mount box in water line.
9. Check and clean Filter Screen (#24) in Filter Body (#22).
10. Reset P.C. Board and make sure solenoid clicks open and thumps closed.
11. Turn on water and check for leaks and proper operation.

(For further questions, please call Hydrotek Tech Support at 1-800-922-9883 ext. 105)

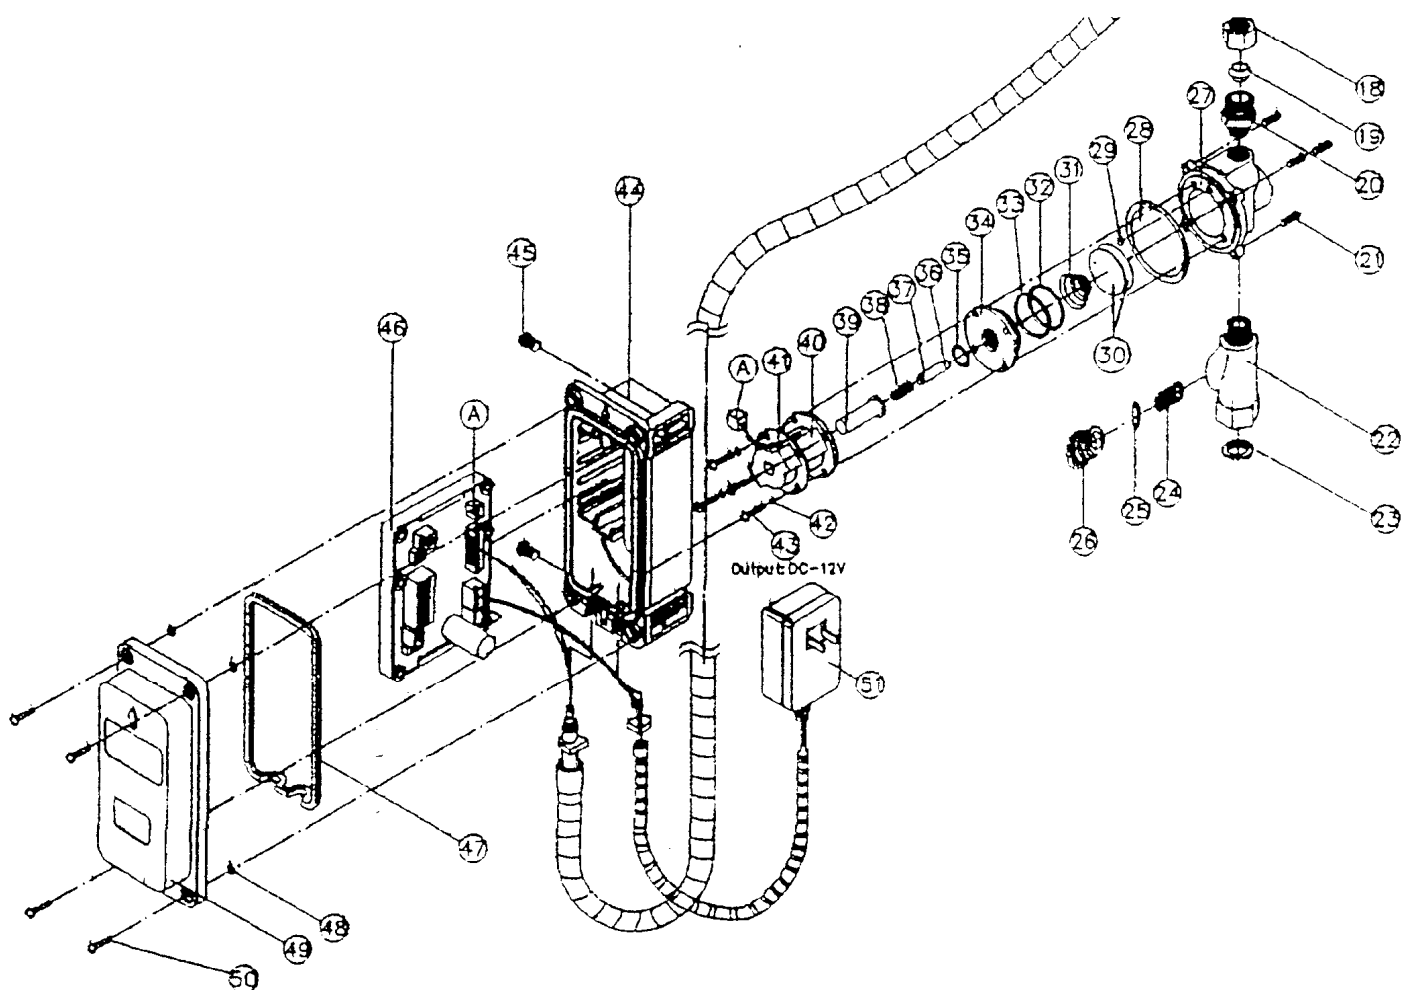

Hydrotek International, Inc.
Phone: 800-922-9883 / Fax: 866-670-5580

Suggested Backup Parts for 6700C Series Faucets
AC or Battery Powered Lavatory Faucets

Part Number From Drawing	Hydrotek Item Code	Description
49	HCC-002	AA 1.5V Battery *4 req. per faucet (for Battery Model)
52	HCC-008B	12V AC Adapter (for AC Model)
23-27	HC-009B	In-line filter
10	HCC-033	Sensor Eyes & Cable
47 47	HCC-011A HCC-011B	Module – PCB for AC Model Module – PCB for Battery Model
17-18	HC-015C	Mounting Kit
25	HC-020	Filter Screen
20	HC-025E	Flexible Supply Tube
1	HB-003CF	Laminar Flow Control
31,32,36,37,38,39	HCB-017A	Valve Repair Kit
41-42	HCC-019	Solenoid Coil Only
27-54	HCC-003B	Complete Control Box Assembly


(Please visit www.hydrotekintl.com to view our most current Products Pricing Sheet)

HYDROTEK AUTOMATIC FAUCET: DIP SWITCHES

NOTE: ALWAYS PUSH THE RESET BUTTON AFTER ANY ADJUSTMENTS

A. Shut Off Time Delay (After hands are removed):

Sw 1	Sw 2	Sw 3	Time Delay
ON	ON	ON	1-Sec
ON	ON	OFF	2-Sec
ON	OFF	ON	3-Sec
ON	OFF	OFF	4-Sec
OFF	ON	ON	5-Sec
OFF	ON	OFF	6-Sec
OFF	OFF	ON	7-Sec
OFF	OFF	OFF	8-Sec

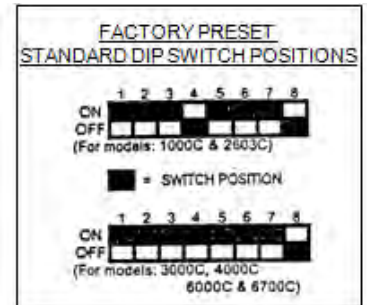

B. Automatic Time Off (Maximum run time after activation):

Sw 4	Sw 5	Time Off
ON	ON	0 Sec
ON	OFF	15 Sec
OFF	ON	30 Sec
OFF	OFF	60 Sec


C. Sensor Distance: To increase distance, turn SDA screw clockwise.
To decrease distance, turn screw counter-clockwise.

Sw 6	Mode	Distance
ON	Std	4" – 12"
OFF	Enhanced	10" – 24"

D. Faucet Switch:

Sw 7	Sw 8	Product
ON	OFF	Auto Faucet

Control Module Diagram for C-Series Faucets

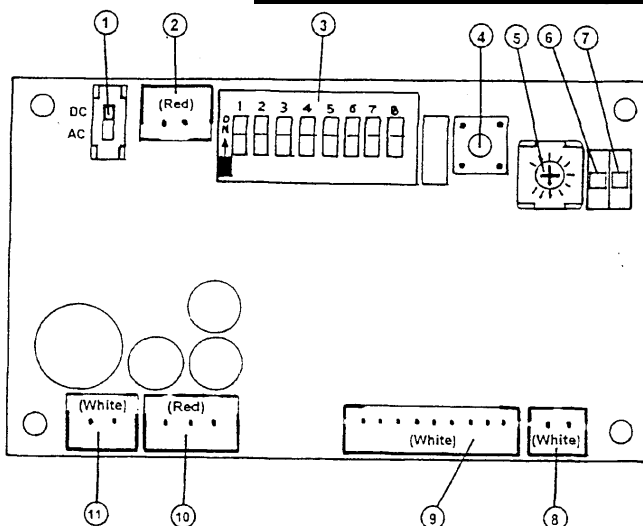

1. AC/DC Switch
2. Battery Holder Pin Connector (Red)
3. Dip Switches
4. Reset Button
5. Sensor Distance Adjustment (SDA)
6. Indicator LED (Green)
7. Indicator LED (Red)
8. Solenoid Pin Connector (White)
9. Sensor Eye Control Cable (White)
10. AC Power Adapter Pin Connector (Red)
11. Battery Holder Pin Connector (White)