



Adding a Real Time Clock to Raspberry Pi

Created by lady ada




<https://learn.adafruit.com/adding-a-real-time-clock-to-raspberry-pi>

Last updated on 2024-06-03 01:11:33 PM EDT

Table of Contents

Overview	3
Wiring the RTC	3
Set Up & Test I2C	6
<ul style="list-style-type: none">• Set up I2C on your Pi• Verify Wiring (I2C scan)	
Set RTC Time	7
<ul style="list-style-type: none">• Raspberry Pi OS's with systemd• Sync time from Pi to RTC• Raspbian Wheezy or other pre-systemd Linux	

Overview

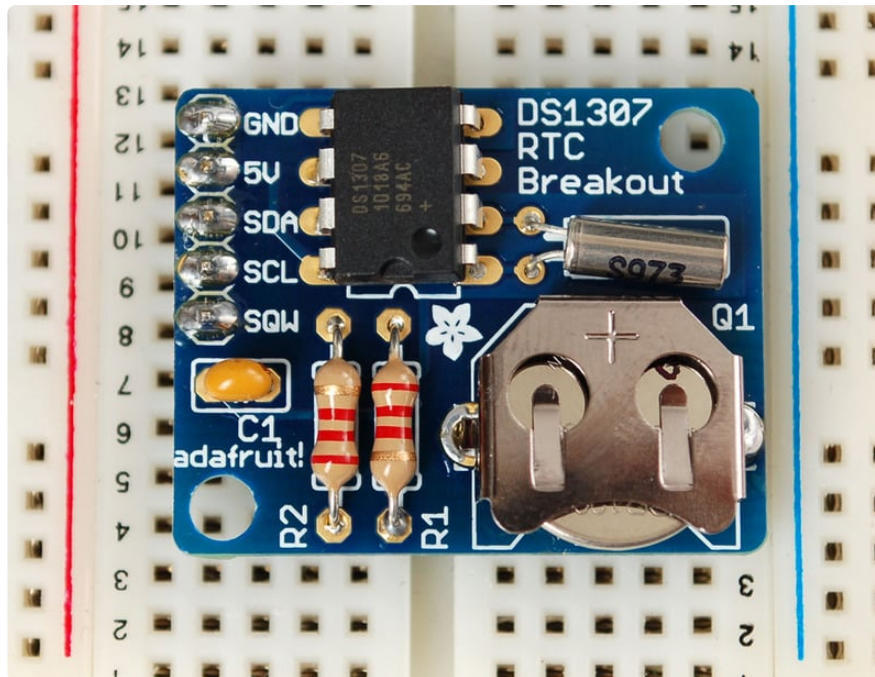

This tutorial requires a Raspberry Pi running a kernel with the RTC module and DS1307 module included. Current Raspbian distros have this, but others may not!

The Raspberry Pi is designed to be an ultra-low cost computer, so a lot of things we are used to on a computer have been left out. For example, your laptop and computer have a little coin-battery-powered 'Real Time Clock' (RTC) module, which keeps time even when the power is off, or the battery removed. To keep costs low and the size small, an RTC is not included with the Raspberry Pi. Instead, the Pi is intended to be connected to the Internet via Ethernet or WiFi, updating the time automatically from the global `ntp` (network time protocol) servers


For stand-alone projects with no network connection, you will not be able to keep the time when the power goes out. So in this project we will show you how to add a low cost battery-backed RTC to your Pi to keep time!

Wiring the RTC

To keep costs low, the Raspberry Pi does not include a Real Time Clock module. Instead, users are expected to have it always connected to WiFi or Ethernet and keep time by checking the network. Since we want to include an external module, we'll have to wire one up.

We have three different RTC we suggest, PCF8523 is inexpensive, DS1307 is most common, and DS3231 is most precise. Any of them will do!


While the DS1307 is historically the most common, its not the best RTC chipset, we've found!

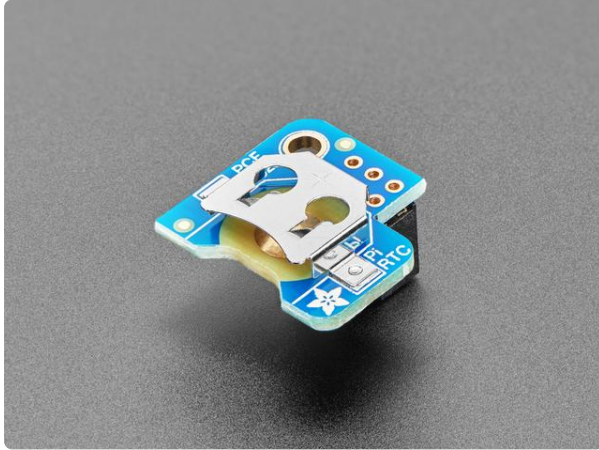

Adafruit PiRTC - PCF8523 Real Time Clock for Raspberry Pi

This is a great battery-backed real time clock (RTC) that allows your Raspberry Pi project to keep track of time if the power is lost. Perfect for data-logging, clock-building,...


<https://www.adafruit.com/product/3386>

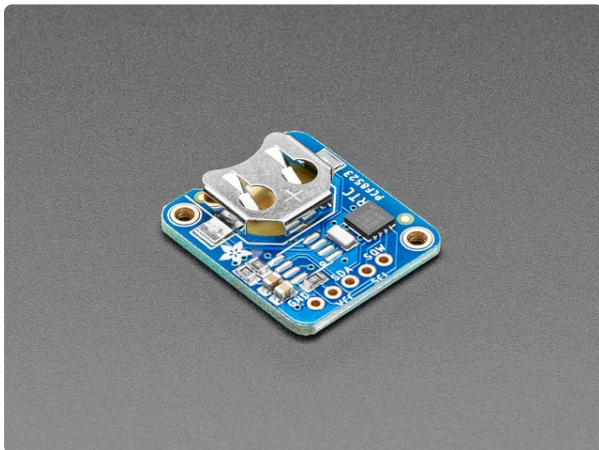

Adafruit PCF8523 Real Time Clock Assembled Breakout Board

This is a great battery-backed real time clock (RTC) that allows your microcontroller project to keep track of time even if it is reprogrammed, or if the power is lost. Perfect for...


<https://www.adafruit.com/product/3295>

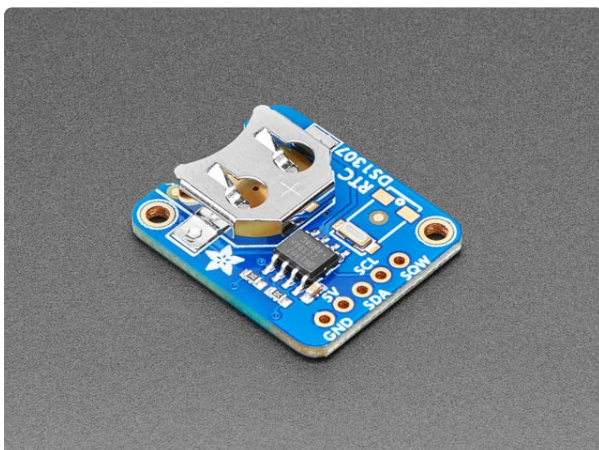

Adafruit DS1307 Real Time Clock Assembled Breakout Board

This is a great battery-backed real time clock (RTC) that allows your microcontroller project to keep track of time even if it is reprogrammed, or if the power is lost. Perfect for...

<https://www.adafruit.com/product/3296>

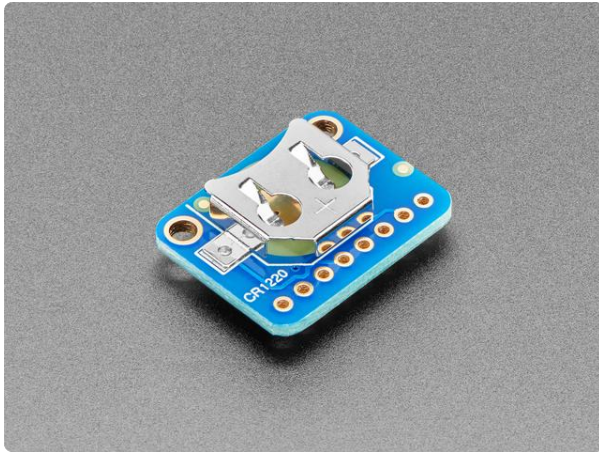

Adafruit DS3231 Precision RTC Breakout

The datasheet for the DS3231 explains that this part is an "Extremely Accurate I²C-Integrated RTC/TCXO/Crystal". And, hey, it does exactly what it says...

<https://www.adafruit.com/product/3013>

Don't forget to also install a CR1220 coin cell. In particular the DS1307 won't work at all without it and none of the RTCs will keep time when the Pi is off and no coin battery is in place.




CR1220 12mm Diameter - 3V Lithium Coin Cell Battery

These are the highest quality & capacity batteries, the same as shipped with the iCufflinks, iNecklace, Datalogging and GPS Shields, GPS HAT, etc. One battery per order...


<https://www.adafruit.com/product/380>

Wiring is simple:

1. Connect **VCC** on the breakout board to the **5.0V** pin of the Pi (if using DS1307)
Connect **VCC** on the breakout board to the **3.3V** pin of the Pi (if using PCF8523 or DS3231)
2. Connect **GND** on the breakout board to the **GND** pin of the Pi
3. Connect **SDA** on the breakout board to the **SDA** pin of the Pi
4. Connect **SCL** on the breakout board to the **SCL** pin of the Pi

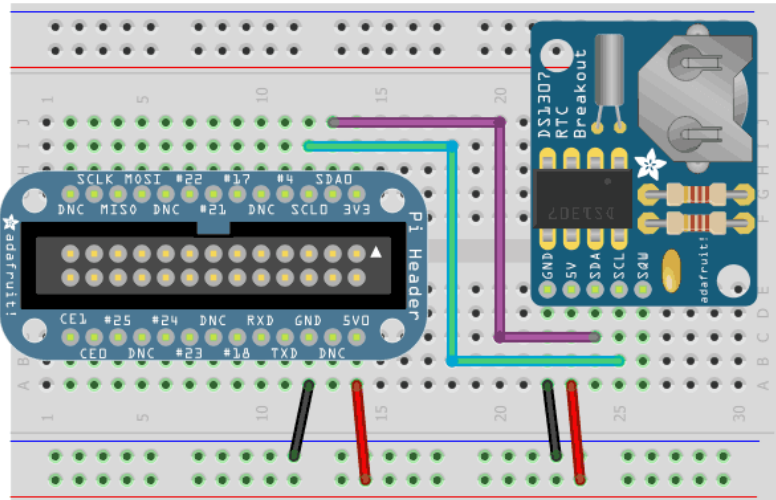

For the PiRTC, just place it on the header away from the USB ports.

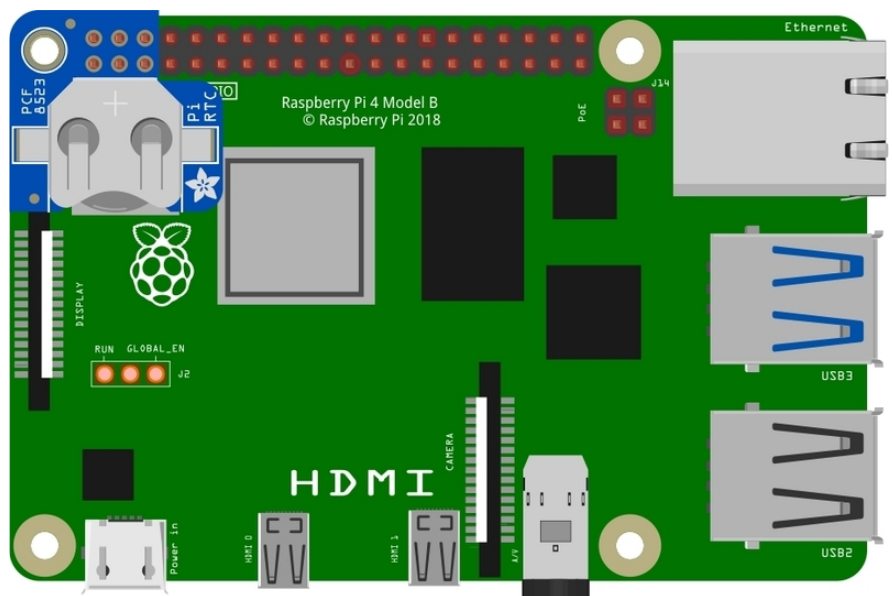

fritzing

Set Up & Test I2C

Set up I2C on your Pi

You'll also need to set up i2c on your Pi, to do so, run **sudo raspi-config** and under **Interface Options** select I2C and turn it on.

For more details, check out our tutorial on Raspberry Pi i2c setup and testing at <http://learn.adafruit.com/adafruits-raspberry-pi-lesson-4-gpio-setup/configuring-i2c> (<https://adafru.it/aTI>)

You may need to reboot once you've done that with **sudo reboot**


Verify Wiring (I2C scan)

Verify your wiring by running

```
sudo apt-get install python3-smbus i2c-tools
```

to install the helper software and then **sudo i2cdetect -y 1** at the command line, you should see ID #68 show up - that's the address of the DS1307, PCF8523 or DS3231!

If you have a much older Pi 1, you will have to run **sudo i2cdetect -y 0** as the I2C bus address changed from 0 to 1

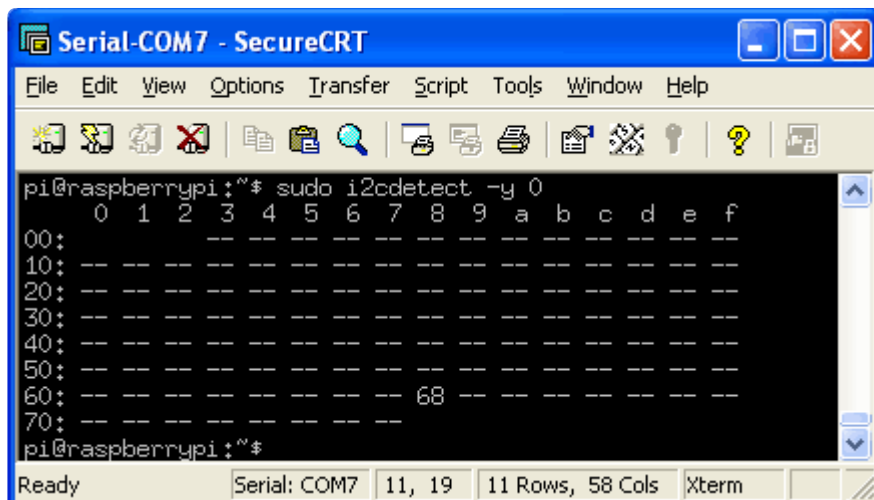

Once you have the Kernel driver running, i2cdetect will skip over 0x68 and display UU instead, this means its working!

Set RTC Time

Now that we have the module wired up and verified that you can see the module with i2cdetect, we can set up the module.

Don't forget to set up I2C in the previous step!

Raspberry Pi OS's with systemd

This should be the case for any current release. For much older releases without systemd, skip to the next section.

[Thanks to kd8twg for the hints! \(https://adafru.it/ne3\)](https://adafru.it/ne3)

You can add support for the RTC by adding a device tree overlay. Run

```
sudo nano /boot/config.txt
```

to edit the pi configuration and add whichever matches your RTC chip:

```
dtoverlay=i2c-rtc,ds1307
```


or

```
dtoverlay=i2c-rtc,pcf8523
```


or

```
dtoverlay=i2c-rtc,ds3231
```

to the end of the file

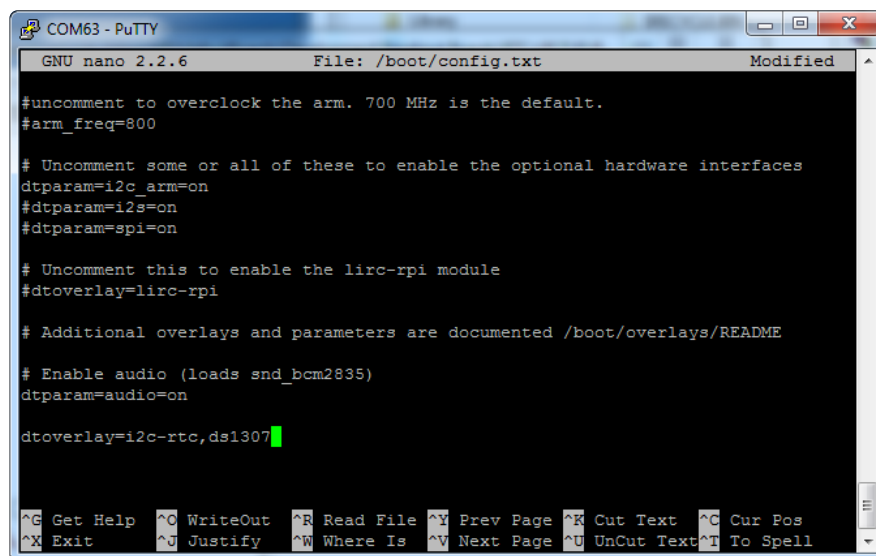


Save it and run **sudo reboot** to start again. Log in and run **sudo i2cdetect -y 1** to see the UU show up where 0x68 should be

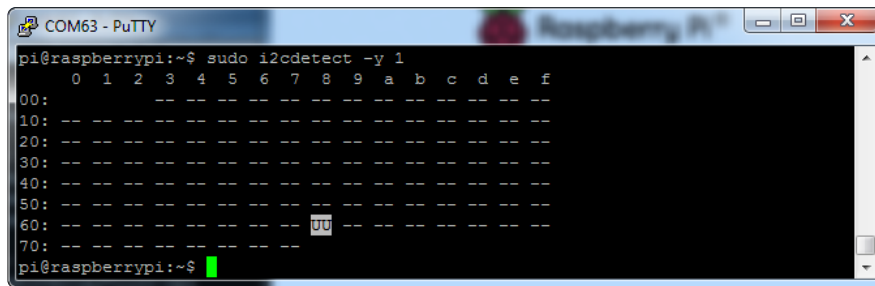

```
pi@raspberrypi:~$ sudo i2cdetect -y 1
 0  1  2  3  4  5  6  7  8  9  a  b  c  d  e  f
00: -- -- -- -- -- -- -- -- -- -- -- -- -- --
10: -- -- -- -- -- -- -- -- -- -- -- -- -- --
20: -- -- -- -- -- -- -- -- -- -- -- -- -- --
30: -- -- -- -- -- -- -- -- -- -- -- -- -- --
40: -- -- -- -- -- -- -- -- -- -- -- -- -- --
50: -- -- -- -- -- -- -- -- -- -- -- -- -- --
60: -- -- -- -- -- -- -- UU -- -- -- -- -- --
70: -- -- -- -- -- -- -- -- -- -- -- -- -- --
pi@raspberrypi:~$
```

Disable the "fake hwclock" which interferes with the 'real' hwclock

```
sudo apt-get -y remove fake-hwclock
sudo update-rc.d -f fake-hwclock remove
sudo systemctl disable fake-hwclock
```

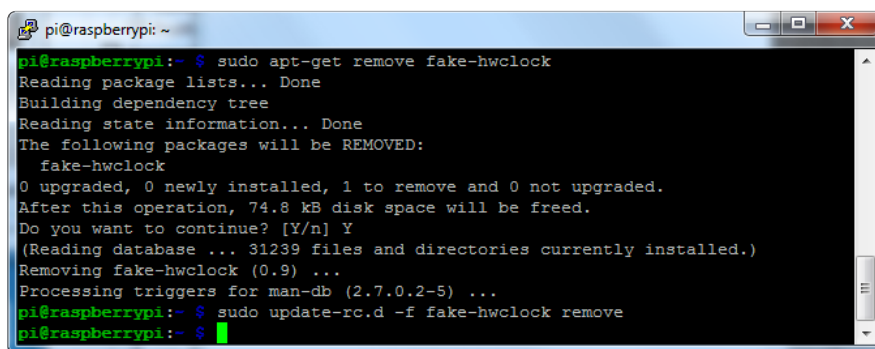


```
pi@raspberrypi:~$ sudo apt-get remove fake-hwclock
Reading package lists... Done
Building dependency tree
Reading state information... Done
The following packages will be REMOVED:
  fake-hwclock
0 upgraded, 0 newly installed, 1 to remove and 0 not upgraded.
After this operation, 74.8 kB disk space will be freed.
Do you want to continue? [Y/n] Y
(Reading database ... 31239 files and directories currently installed.)
Removing fake-hwclock (0.9) ...
Processing triggers for man-db (2.7.0.2-5) ...
pi@raspberrypi:~$ sudo update-rc.d -f fake-hwclock remove
pi@raspberrypi:~$
```

Now with the fake-hw clock off, you can start the original 'hardware clock' script.

Run **sudo nano /lib/udev/hwclock-set** and comment out these three lines:

```
#if [ -e /run/systemd/system ] ; then
# exit 0
#fi
```

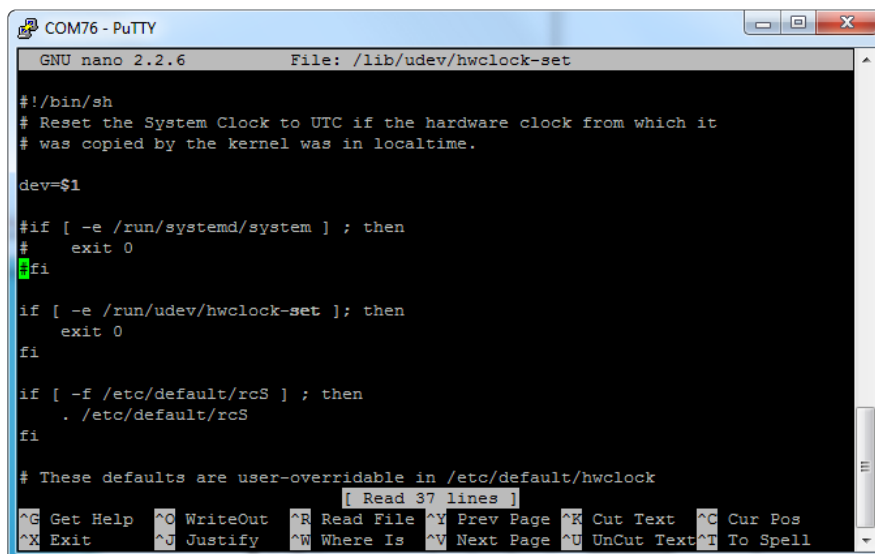

```
GNU nano 2.2.6      File: /lib/udev/hwclock-set

#!/bin/sh
# Reset the System Clock to UTC if the hardware clock from which it
# was copied by the kernel was in localtime.

dev=$1

#if [ -e /run/systemd/system ] ; then
#   exit 0
#fi

if [ -e /run/udev/hwclock-set ]; then
    exit 0
fi

if [ -f /etc/default/rcS ] ; then
    . /etc/default/rcS
fi

# These defaults are user-overrideable in /etc/default/hwclock
[ Read 37 lines ]

^G Get Help  ^O WriteOut  ^R Read File ^Y Prev Page ^K Cut Text  ^C Cur Pos
^X Exit      ^J Justify   ^W Where Is  ^V Next Page ^U UnCut Text ^T To Spell
```

Also comment out the two lines

```
/sbin/hwclock --rtc=$dev --systz --badyear
```

and

```
/sbin/hwclock --rtc=$dev --systz
```

```
if [ yes = "$BADYEAR" ] ; then
#   /sbin/hwclock --rtc=$dev --systz --badyear
  /sbin/hwclock --rtc=$dev --hctosys --badyear
else
#   /sbin/hwclock --rtc=$dev --systz
  /sbin/hwclock --rtc=$dev --hctosys
fi

# Note 'touch' may not be available in initramfs
> /run/udev/hwclock-set
```


Sync time from Pi to RTC

When you first plug in the RTC module, it's going to have the wrong time because it has to be set once. You can always read the time directly from the RTC with **sudo hwclock -r**

(ignore use of deprecated -D parameter in the screenshot)

```
COM76 - PuTTY
pi@raspberrypi:~$ sudo hwclock -D -r
hwclock from util-linux 2.25.2
Using the /dev interface to the clock.
Last drift adjustment done at 1476489224 seconds after 1969
Last calibration done at 1476489224 seconds after 1969
Hardware clock is on UTC time
Assuming hardware clock is kept in UTC time.
Waiting for clock tick...
/dev/rtc does not have interrupt functions. Waiting in loop for time from /dev/r
tc to change
...got clock tick
Time read from Hardware Clock: 2084/05/28 02:30:47
Invalid values in hardware clock: 2084/05/28 02:30:47
hwclock: The Hardware Clock registers contain values that are either invalid (e.
g. 50th day of month) or beyond the range we can handle (e.g. Year 2095).
pi@raspberrypi:~$
```

You can see, the date at first is invalid! You can set the correct time easily. First run **date** to verify the time is correct. Plug in Ethernet or WiFi to let the Pi sync the right time from the Internet. Once that's done, run **sudo hwclock -w** to write the time, and another **sudo hwclock -r** to read the time

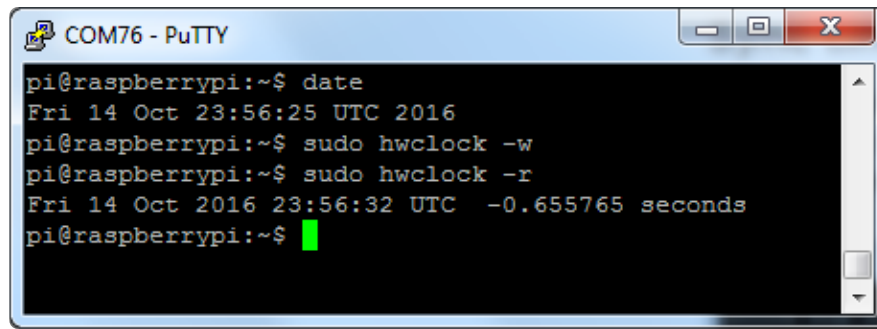

```
pi@raspberrypi:~$ date
Fri 14 Oct 23:56:25 UTC 2016
pi@raspberrypi:~$ sudo hwclock -w
pi@raspberrypi:~$ sudo hwclock -r
Fri 14 Oct 2016 23:56:32 UTC -0.655765 seconds
pi@raspberrypi:~$
```

Once the time is set, make sure the coin cell battery is inserted so that the time is saved. You only have to set the time once

That's it! Next time you boot the time will automatically be synced from the RTC module

To only read time from the RTC and not the internet, you can disable the timesync service with:

```
sudo systemctl disable systemd-timesyncd.service
```

hwclock: ioctl(RTC_RD_TIME) to /dev/rtc0 to read the time failed: Invalid argument

If you are getting an error message like this when trying to read/write to the RTC, make sure you have a good coin cell battery installed.

Raspbian Wheezy or other pre-systemd Linux

First, load up the RTC module by running

```
sudo modprobe i2c-bcm2708
sudo modprobe i2c-dev
sudo modprobe rtc-ds1307
```

Then, as root (type in `sudo bash`) run


```
echo ds1307 0x68 > /sys/class/i2c-adapter/i2c-1/new_device
```

If you happen to have an old Rev 1 Pi, type in

```
echo ds1307 0x68 > /sys/class/i2c-adapter/i2c-0/new_device
```

You can then type in **exit** to drop out of the root shell.


Then check the time with **sudo hwclock -r** which will read the time from the DS1307 module. If this is the first time the module has been used, it will report back Jan 1 2000, and you'll need to set the time

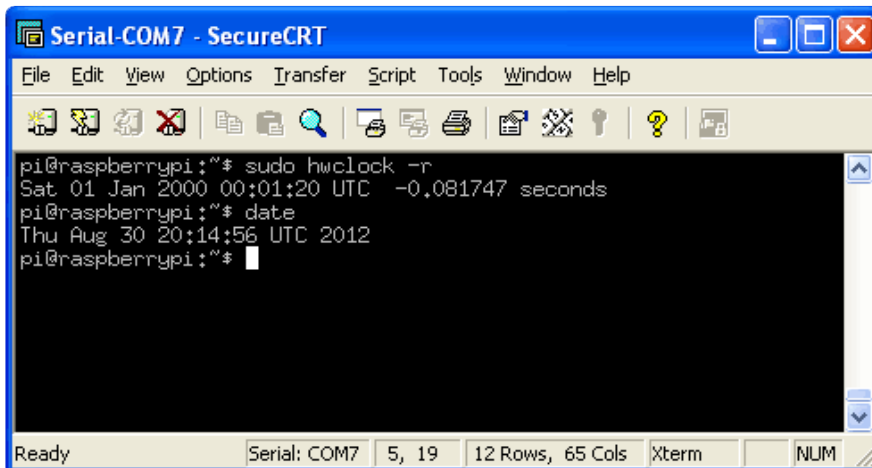

```
pi@raspberrypi:~$ sudo hwclock -r
Sat 01 Jan 2000 00:01:20 UTC -0.081747 seconds
pi@raspberrypi:~$ date
Thu Aug 30 20:14:56 UTC 2012
pi@raspberrypi:~$
```


First you'll need to get the right time set on the Pi, the easiest way is to connect it up to Ethernet or Wifi - it will automatically set the time from the network. Once the time is correct (check with the **date** command), run **sudo hwclock -w** to write the system time to the RTC

You can then verify it with **sudo hwclock -r**

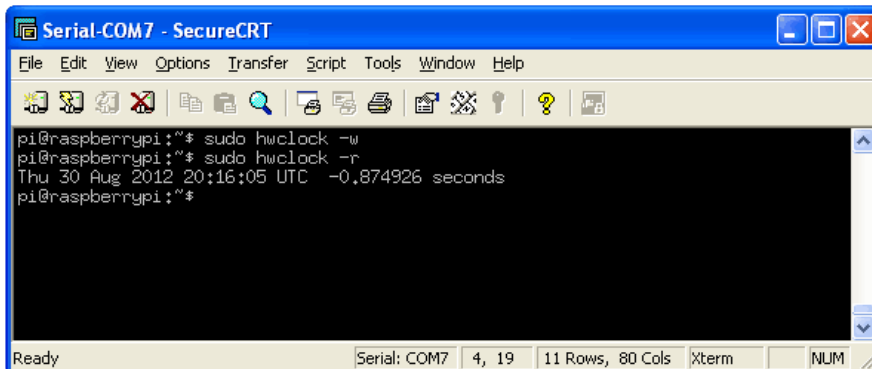

```
pi@raspberrypi:~$ sudo hwclock -w
pi@raspberrypi:~$ sudo hwclock -r
Thu 30 Aug 2012 20:16:05 UTC -0.874926 seconds
pi@raspberrypi:~$
```

Next, you'll want to add the RTC kernel module to the **/etc/modules** list, so its loaded when the machine boots. Run **sudo nano /etc/modules** and add **rtc-ds1307** at the end of the file (the image below says rtc-1307 but its a typo)

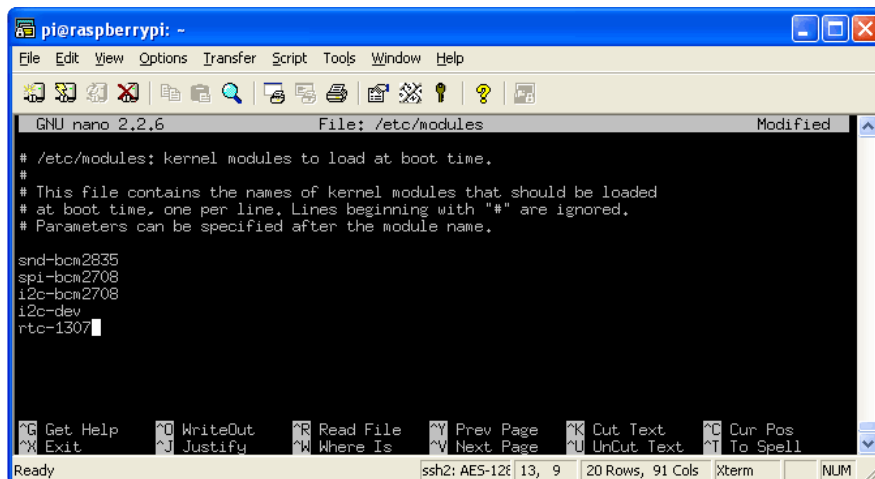A screenshot of a terminal window titled 'pi@raspberrypi: -'. The window shows the GNU nano 2.2.6 editor editing the file /etc/modules. The file contains comments about kernel modules and a list of modules to load at boot time: snd-bcm2835, spi-bcm2708, i2c-bcm2708, i2c-dev, and rtc-1307. The status bar at the bottom shows 'Ready', 'ssh2: AES-128 13, 9', '20 Rows, 91 Cols', 'xterm', and 'NUM'.

Older pre-Jessie raspbian is a little different. First up, you'll want to create the DS1307 device creation at boot, edit /etc/rc.local by running

```
sudo nano /etc/rc.local
```

and add:

```
echo ds1307 0x68 > /sys/class/i2c-adapter/i2c-0/new_device
```


(for v1 raspberry pi)

```
echo ds1307 0x68 > /sys/class/i2c-adapter/i2c-1/new_device
```

(for v2 raspberry pi)

```
sudo hwclock -s (both versions)
```

before `exit 0` (we forgot the hwclock -s part in the screenshot below)

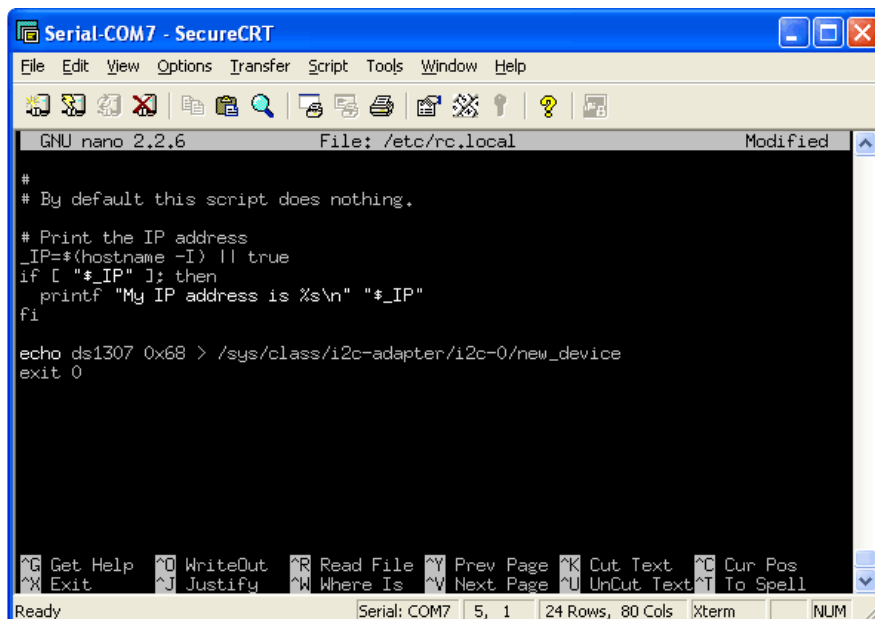A screenshot of a terminal window titled 'Serial-COM7 - SecureCRT'. The window shows the GNU nano 2.2.6 editor editing the file /etc/rc.local. The file contains a script that prints the IP address and then runs the command 'echo ds1307 0x68 > /sys/class/i2c-adapter/i2c-0/new_device' followed by 'exit 0'. The status bar at the bottom shows 'Ready', 'Serial: COM7', '5, 1', '24 Rows, 80 Cols', 'xterm', and 'NUM'.

That's it! Next time you boot the time will automatically be synced from the RTC module