

Lesson 1: Getting Started with TinyOS and nesC

Last updated 9 September 2003

This lesson introduces the basic concepts of TinyOS and the nesC language in which the system is written. It includes a quick overview of the nesC language concepts and syntax to help you get started with programming in this environment.

Introduction

The TinyOS system, libraries, and applications are written in nesC, a new language for programming structured component-based applications. The nesC language is primarily intended for embedded systems such as sensor networks. nesC has a C-like syntax, but supports the TinyOS concurrency model, as well as mechanisms for structuring, naming, and linking together software components into robust network embedded systems. The principal goal is to allow application designers to build components that can be easily composed into complete, concurrent systems, and yet perform extensive checking at compile time.

TinyOS defines a number of important concepts that are expressed in nesC. First, nesC applications are built out of **components** with well-defined, bidirectional **interfaces**. Second, nesC defines a concurrency model, based on **tasks** and **hardware event handlers**, and detects **data races** at compile time.

Components

Specification

A nesC application consists of one or more *components* linked together to form an executable. A component **provides** and **uses interfaces**. These interfaces are the only point of access to the component and are bi-directional. An interface declares a set of functions called **commands** that the interface provider must implement and another set of functions called **events** that the interface user must implement. For a component to call the commands in an interface, it must implement the events of that interface. A single component may use or provide multiple interfaces and multiple instances of the same interface.

Implementation

There are two types of components in nesC: **modules** and **configurations**. Modules provide application code, implementing one or more interface. Configurations are used to assemble other components together, connecting interfaces used by components to interfaces provided by others. This is called **wiring**. Every nesC application is described by a **top-level configuration** that *wires* together the components inside.

nesC uses the filename extension ".nc" for all source files -- interfaces, modules, and configurations. Please see [TinyOS Coding and Naming Conventions](#) for more information on naming conventions.

Concurrency Model

TinyOS executes only one program consisting of selected system components and custom components needed for a single application. There are two threads of execution: *tasks* and *hardware event handlers*. Tasks are functions whose execution is deferred. Once scheduled, they run to completion and do not preempt one another. Hardware event handlers are executed in response to a hardware interrupt and also runs to completion, but may preempt the execution of a task or other hardware event handler. Commands and events that are executed as part of a hardware event handler must be declared with the **async** keyword.

Because tasks and hardware event handlers may be preempted by other asynchronous code, nesC programs are susceptible to certain race conditions. Races are avoided either by accessing shared data exclusively within tasks, or by having all accesses within **atomic** statements. The nesC compiler reports potential *data races* to the programmer at compile-time. It is possible the compiler may report a false positive. In this case a variable can be declared with the **norace** keyword. The norace keyword should be used with extreme caution.

Please see the [nesC Language Reference Manual](#) for more information on programming in nesC.

An example application: Blink

So far this is all fairly abstract - let's look at a concrete example: the simple test program "Blink" found in [apps/Blink](#) in the TinyOS tree. This application simply causes the red LED on the mote to turn on and off at 1Hz.

Blink application is composed of two **components**: a **module**, called "BlinkM.nc", and a **configuration**, called "Blink.nc". Remember that all applications require a top-level configuration file, which is typically named after the application itself. In this case `Blink.nc` is the configuration for the Blink application and the source file that the nesC compiler uses to generate an executable file. `BlinkM.nc`, on the other hand, actually provides the *implementation* of the Blink application. As you might guess, `Blink.nc` is used to wire the `BlinkM.nc` module to other components that the Blink application requires.

The reason for the distinction between modules and configurations is to allow a system designer to quickly "snap together" applications. For example, a designer could provide a configuration that simply wires together one or more modules, none of which she actually designed. Likewise, another developer can provide a new set of "library" modules that can be used in a range of applications.

Sometimes (as is the case with `Blink` and `BlinkM`) you will have a configuration and a module that go together. When this is the case, the convention used in the TinyOS source tree is that `Foo.nc` represents a configuration and `FooM.nc` represents the corresponding module. While you could name an application's implementation module and associated top-level configuration anything, to keep things simple we suggest that you adopt this convention in your own code. There are several other naming conventions used in TinyOS code; a [summary](#) is provided

The `Blink.nc` configuration

The nesC compiler, [ncc](#), compiles a nesC application when given the file containing the top-level configuration. Typical TinyOS applications come with a standard Makefile that allows platform selection and invokes `ncc` with appropriate options on the application's top-level configuration.

Let's look at `Blink.nc`, the configuration for this application first:

`Blink.nc`

```
configuration Blink {
}
implementation {
  components Main, BlinkM, SingleTimer, LedsC;

  Main.StdControl -> BlinkM.StdControl;
  Main.StdControl -> SingleTimer.StdControl;
  BlinkM.Timer -> SingleTimer.Timer;
  BlinkM.Leds -> LedsC;
}
```

The first thing to notice is the key word `configuration`, which indicates that this is a configuration file. The first two lines,

```
configuration Blink {
}
```

simply state that this is a configuration called `Blink`. Within the empty braces here it is possible to specify `uses` and `provides` clauses, as with a module. This is important to keep in mind: a configuration can use and provide interfaces!

The actual configuration is implemented within the pair of curly bracket following key word `implementation`. The `components` line specifies the set of components that this configuration references, in this case `Main`, `BlinkM`, `SingleTimer`, and `LedsC`. The remainder of the implementation consists of connecting interfaces used by components to interfaces provided by others.

`Main` is a component that is executed first in a TinyOS application. To be precise, the `Main.StdControl.init()` command is the first command executed in TinyOS followed by `Main.StdControl.start()`. Therefore, a TinyOS application must have `Main` component in its configuration. `StdControl` is a common interface used to initialize and start TinyOS components. Let us have a look at `tos/interfaces/StdControl.nc`:

`StdControl.nc`

```
interface StdControl {
  command result_t init();
  command result_t start();
  command result_t stop();
}
```

We see that `StdControl` defines three **commands**, `init()`, `start()`, and `stop()`. `init()` is called when a component is first initialized, and `start()` when it is started, that is, actually executed for the first time. `stop()` is called when the component is stopped, for example, in order to power off the device that it is controlling. `init()` can be called multiple times, but will never be called after either `start()` or `stop` are called. Specifically, the valid call patterns of `StdControl` are `init*(start | stop)*`. All three of these commands have "deep" semantics; calling `init()` on a component must make it call `init()` on all of its subcomponents. The following 2 lines in `Blink` configuration

```
Main.StdControl -> SingleTimer.StdControl;
```

```
Main.StdControl -> BlinkM.StdControl;
```

wire the `StdControl` interface in `Main` to the `StdControl` interface in both `BlinkM` and `SingleTimer`. `SingleTimer.StdControl.init()` and `BlinkM.StdControl.init()` will be called by `Main.StdControl.init()`. The same rule applies to the `start()` and `stop()` commands.

Concerning *used* interfaces, it is important to note that subcomponent initialization functions must be explicitly called by the using component. For example, the `BlinkM` module uses the interface `Leds`, so `Leds.init()` is called explicitly in `BlinkM.init()`.

nesC uses arrows to determine relationships between interfaces. Think of the right arrow (`->`) as "binds to". The left side of the arrow binds an interface to an implementation on the right side. In other words, the component that **uses** an interface is on the left, and the component **provides** the interface is on the right.

The line

```
BlinkM.Timer -> SingleTimer.Timer;
```

is used to wire the `Timer` interface used by `BlinkM` to the `Timer` interface provided by `SingleTimer`. `BlinkM.Timer` on the left side of the arrow is referring to the *interface* called `Timer` (`tos/interfaces/Timer.nc`), while `SingleTimer.Timer` on the right side of the arrow is referring to the *implementation* of `Timer` (`tos/lib/SingleTimer.nc`). Remember that the arrow always binds interfaces (on the left) to implementations (on the right).

nesC supports multiple implementations of the same interface. The `Timer` interface is such an example. The `SingleTimer` component implements a single `Timer` interface while another component, `TimerC`, implements multiple timers using `timer id` as a parameter. Further discussions on timers can be found in Lesson 2.

Wirings can also be implicit. For example,

```
BlinkM.Leds -> LedsC;
```

is really shorthand for

```
BlinkM.Leds -> LedsC.Leds;
```

If no interface name is given on the right side of the arrow, the nesC compiler by default tries to bind to the same interface as on the left side of the arrow.

The BlinkM.nc module

Now let's look at the module `BlinkM.nc`:

BlinkM.nc

```
module BlinkM {
  provides {
    interface StdControl;
  }
  uses {
    interface Timer;
    interface Leds;
  }
}
// Continued below...
```

The first part of the code states that this is a module called `BlinkM` and declares the interfaces it provides and uses. The `BlinkM` module **provides** the interface `StdControl`. This means that `BlinkM` implements the `StdControl` interface. As explained above, this is necessary to get the `Blink` component initialized and started. The `BlinkM` module also **uses** two interfaces: `Leds` and `Timer`. This means that `BlinkM` may call any command declared in the interfaces it uses and must also implement any events declared in those interfaces.

The `Leds` interface defines several commands like `redOn()`, `redOff()`, and so forth, which turn the different LEDs (red, green, or yellow) on the mote on and off. Because `BlinkM` uses the `Leds` interface, it can invoke any of these commands. Keep in mind, however, that `Leds` is just an interface: the implementation is specified in the `Blink.nc` configuration file.

Timer.nc is a little more interesting:

Timer.nc

```
interface Timer {
  command result_t start(char type, uint32_t interval);
  command result_t stop();
  event result_t fired();
}
```

Here we see that Timer interface defines the start() and stop() commands, and the fired() event.

The start() command is used to specify the type of the timer and the interval at which the timer will expire. The unit of the interval argument is millisecond. The valid types are TIMER_REPEAT and TIMER_ONE_SHOT. A one-shot timer ends after the specified interval, while a repeat timer goes on and on until it is stopped by the stop() command.

How does an application know that its timer has expired? The answer is when it receives an event. The Timer interface provides an event:

```
event result_t fired();
```

An **event** is a function that the implementation of an interface will signal when a certain event takes place. In this case, the fired() event is signaled when the specified interval has passed. This is an example of a **bi-directional interface**: an interface not only provides **commands** that can be called *by users* of the interface, but also signals **events** that call handlers *in the user*. Think of an event as a callback function that the implementation of an interface will invoke. A module that **uses** an interface *must implement the events* that this interface uses.

Let's look at the rest of BlinkM.nc to see how this all fits together:

BlinkM.nc, continued

```
implementation {

  command result_t StdControl.init() {
    call Leds.init();
    return SUCCESS;
  }

  command result_t StdControl.start() {
    return call Timer.start(TIMER_REPEAT, 1000) ;
  }

  command result_t StdControl.stop() {
    return call Timer.stop();
  }

  event result_t Timer.fired()
  {
    call Leds.redToggle();
    return SUCCESS;
  }
}
```

This is simple enough. As we see the BlinkM module implements the StdControl.init(), StdControl.start(), and StdControl.stop() commands, since it provides the StdControl interface. It also implements the Timer.fired() event, which is necessary since BlinkM must implement any event from an interface it uses.

The init() command in the implemented StdControl interface simply initializes the Leds subcomponent with the call to Leds.init(). The start() command invokes Timer.start() to create a repeat timer that expires every 1000 ms. stop() terminates the timer. Each time Timer.fired() event is triggered, the Leds.redToggle() toggles the red LED.

You can view a graphical representation of the component relationships within an application. TinyOS source files include metadata within comment blocks that ncc, the nesC compiler, uses to automatically generate html-formatted documentation. To generate the documentation, type `make <platform> docs` from the application directory. The resulting documentation is located in `docs/nescdoc/<platform>.docs/nescdoc/<platform>/index.html` is the main index to all documented applications.

Compiling the Blink application

TinyOS supports multiple platforms. Each platform has its own directory in the [tos/platform](#) directory. In this tutorial, we will use the mica platform as an example. If you are in the TinyOS source tree, compiling the `Blink` application for the Mica mote is as simple as typing

```
make mica
```

in the [apps/Blink](#) directory. Of course this doesn't tell you anything about how the nesC compiler is invoked.

nesC itself is invoked using the `ncc` command which is based on `gcc`. For example, you can type

```
ncc -o main.exe -target=mica Blink.nc
```

to compile the `Blink` application (from the `Blink.nc` top-level configuration) to `main.exe`, an executable file for the Mica mote. Before you can upload the code to the mote, you use


```
avr-objcopy --output-target=srec main.exe main.srec
```

to produce `main.srec`, which essentially represents the binary `main.exe` file in a text format that can be used for programming the mote. You then use another tool (such as `uisp`) to actually upload the code to the mote, depending on your environment. In general you will never need to invoke `ncc` or `avr-objcopy` by hand, the Makefile does all this for you, but it's nice to see that all you need to compile a nesC application is to run `ncc` on the top-level configuration file for your application. `ncc` takes care of locating and compiling all of the different components required by your application, linking them together, and ensuring that all of the component wiring matches up.

Programming the mote and running Blink

Now that we've compiled the application it's time to program the mote and run it. This example will use the Mica mote and the parallel-port-based programming board (`mib500`). Instructions on how to use the other programming boards are [here](#). To download your program onto the mote, place the mote board (or mote and sensor stack) into the bay on the programming board, as shown below. You can either supply a 3 volt supply to the connector on the programming board or power the node directly. The red LED (labeled D2) on the programming board will be on when power is supplied. If you are using batteries to power the mote, be sure the mote is switched on (the power switch should be towards the connector).

Plug the 32-pin connector into the parallel port of a computer configured with the TinyOS tools, using a standard DB32 parallel port cable.

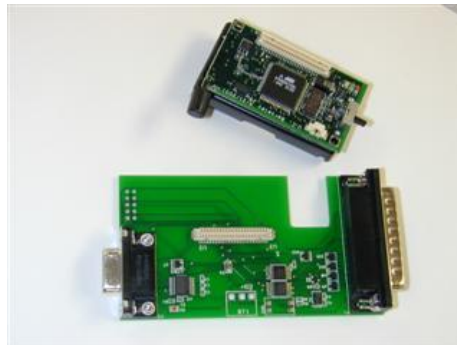

Mica mote next to the programming board



Mica mote connected to the programming board

Type: `make mica install`. If you get the error:

```
uisp -dprog=dapa --erase
pulse
An error has occurred during the AVR initialization.
* Target status:
```

```
Vendor Code = 0xff, Part Family = 0xff, Part Number = 0xff

Probably the wiring is incorrect or target might be 'damaged'.
make: *** [install] Error 2
```

check whether the power is on. You can also get this error message if the mote is low on batteries (if you are using batteries), or if the wrong version of the `uisp` programming utility is installed (be sure to use the version in the TinyOS distribution).

If you are using an IBM ThinkPad, it may be necessary to tell the tools to use a different parallel port. You can do this by adding the line

```
PROGRAMMER_EXTRA_FLAGS = -dlpt=3
```

to the `apps/Makelocal` file (create it if it doesn't exist). The [Makelocal](#) file is for user-specific Makefile configuration.

If the installation is successful you should see something like the following:

```
compiling Blink to a mica binary
ncc -board=micasb -o build/mica/main.exe -Os -target=mica -Wall -Wshadow -DDEF_TOS_AM_GROUP=0x7d -finline-limit=200 -fnesc-cfile=build/mica/app.c Blink.nc -lm
avr-objcopy --output-target=srec build/mica/main.exe
build/mica/main.srec
    compiled Blink to build/mica/main.srec
    installing mica binary
uisp -dprog=dapa --erase
pulse
Atmel AVR ATmega128 is found.
Erasing device ...
pulse
Reinitializing device
Atmel AVR ATmega128 is found.
sleep 1
uisp -dprog=dapa --upload if=build/mica/main.srec
pulse
Atmel AVR ATmega128 is found.
Uploading: flash
sleep 1
uisp -dprog=dapa --verify if=build/mica/main.srec
pulse
Atmel AVR ATmega128 is found.
Verifying: flash
```

You can now test the program by unplugging the mote from the programming board and turning on the power switch (if it's not already on). With any luck the red LED should light up every second - congratulations!

Typing `make clean` in the `Blink` directory will clean up the compiled binary files.

If you are still having errors, then you need to check your TinyOS installation and check the Mica hardware. See [System and Hardware Verification](#) for details.

Exercises

To test your new-found TinyOS programming skills, try out the following:

- Modify `Blink` to display the lower three bits of a counter in the LEDs.

Conclusion

This tutorial has just scratched the surface of nesC's syntax and features. Rather than document everything extensively, we refer the reader to the [nesC Project Pages](#) as well as the documentation included with the nesC distribution in `nesc/doc`. These sources contain more complete documentation on the language.

Hopefully this should be enough of a start to get you going on programming in this fun new language.

[Next Lesson >](#) | [Top](#)