



## **Nios II Flash Programmer User Guide**

---



101 Innovation Drive  
San Jose, CA 95134  
[www.altera.com](http://www.altera.com)

Document Version: 2.1  
Document Date: February 2010

UG-NIOSIIFLSHPRG-2.1

Copyright © 2010 Altera Corporation. All rights reserved. Altera, The Programmable Solutions Company, the stylized Altera logo, specific device designations, and all other words and logos that are identified as trademarks and/or service marks are, unless noted otherwise, the trademarks and service marks of Altera Corporation in the U.S. and other countries. All other product or service names are the property of their respective holders. Altera products are protected under numerous U.S. and foreign patents and pending applications, maskwork rights, and copyrights. Altera warrants performance of its semiconductor products to current specifications in accordance with Altera's standard warranty, but reserves the right to make changes to any products and services at any time without notice. Altera assumes no responsibility or liability arising out of the application or use of any information, product, or service described herein except as expressly agreed to in writing by Altera Corporation. Altera customers are advised to obtain the latest version of device specifications before relying on any published information and before placing orders for products or services.



## Chapter 1. Overview of the Nios II Flash Programmer

Introduction .....	1-1
Prerequisites .....	1-2
Nios II Flash Programmer GUI and Command-Line Utilities .....	1-2
How the Flash Programmer Works .....	1-2
Flash Programmer Target Design .....	1-3

## Chapter 2. Using the Flash Programmer GUI

Introduction .....	2-1
Starting the Flash Programmer GUI .....	2-1
Specifying your Flash Programmer Settings .....	2-2
Working with Flash Programmer Settings Files .....	2-3
Setting the Hardware Connection .....	2-4
Checking System ID and System Timestamp .....	2-4
Generating Flash Files and Programming Flash Memory .....	2-5

## Chapter 3. Using the Flash Programmer from the Command Line

nios2-flash-programmer .....	3-2
nios2-flash-programmer Command-Line Examples .....	3-4
sof2flash .....	3-5
sof2flash Command-Line Examples .....	3-5
elf2flash .....	3-6
Programming Both Hardware and Software into an EPCS Device .....	3-7
elf2flash Command-Line Examples .....	3-8
bin2flash .....	3-8
bin2flash Command-Line Example .....	3-8

## Appendix A. Non-Standard Flash Memories

Built-in Recognition and Override .....	A-1
Flash Override Files .....	A-1
Flash Override File Format .....	A-1
How to Use the Flash Override File .....	A-2
Width Mode Override Parameter .....	A-2

## Appendix B. Supported Flash Memory Devices

## Appendix C. Stand-Alone Mode

Installing the Nios II Stand-Alone Flash Programmer .....	C-1
Running the Nios II Stand-Alone Flash Programmer .....	C-1

## Appendix D. Troubleshooting

Overview .....	D-1
Start Button Grayed Out in the Flash Programmer GUI .....	D-1
Probable Cause .....	D-1
Suggested Actions .....	D-1
"No Nios II processors available" Error .....	D-1
Probable Cause .....	D-1
Suggested Actions .....	D-1

"No CFI table found" Error .....	D-2
Probable Cause .....	D-2
Suggested Actions .....	D-2
"No EPCS registers found" Error .....	D-2
Probable Cause .....	D-2
Suggested Actions .....	D-2
"System does not have any flash memory" Error .....	D-3
Probable Cause .....	D-3
Suggested Actions .....	D-3
"Reading System ID at address 0x<address>: FAIL" Error .....	D-3
Probable Cause .....	D-3
Suggested Actions .....	D-3
"Base address not aligned on size of device" Error .....	D-3
Probable Cause .....	D-4
Suggested Actions .....	D-4

## Additional Information

Revision History .....	Info-1
How to Contact Altera .....	Info-1
Typographic Conventions .....	Info-2

## Introduction

Many hardware designs that include the Nios® II processor also incorporate flash memory on the board to store FPGA configuration data or Nios II program data. The Nios II Flash Programmer is part of the Nios II Embedded Design Suite (EDS). Its purpose is to program data into a flash memory device connected to an Altera® FPGA. The Nios II Flash Programmer sends file contents over an Altera download cable, such as the USB Blaster®, to a Nios II system running on the FPGA, and instructs the Nios II system to write the data to flash memory.

The Nios II Flash Programmer can program three types of content to flash memory:

- Nios II software executable files—Many systems use flash memory to store nonvolatile program code, or firmware. Nios II systems can boot from flash memory.
- FPGA configuration data—At system power-up, the FPGA configuration controller on the board can read FPGA configuration data from the flash memory. Depending on the design of the configuration controller, it might be able to choose between multiple FPGA configuration files stored in flash memory.
- Other arbitrary data files—The Nios II Flash Programmer can program a binary file to an arbitrary offset in a flash memory for any purpose. For example, a Nios II program might use this data as a coefficient table or a sine lookup table.

You can use the Nios II Flash Programmer to program the following types of memory:

- Common flash interface (CFI)-compliant flash memory – CFI is an industry standard that provides a common, vendor-independent interface to flash memory devices.
- Altera erasable programmable configurable serial (EPCS) device - Altera EPCS serial configuration devices store FPGA configuration data and Nios II executable software.

For more information about the CFI specification, refer to the JEDEC Common Flash Interface standard JESD68.01 and JEDEC publications JEP137x, available on the JEDEC Solid State Technology Association standards organization website ([www.jedec.org](http://www.jedec.org)). For more information about EPCS devices, refer to the *Serial Configuration Devices (EPCS1, EPCS4, EPCS16, EPCS64, and EPCS128) Data Sheet* chapter in volume 2 of the *Altera Configuration Handbook* and the *EPCS Device Controller Core* chapter in Volume 5: Embedded Peripherals of the *Quartus II Handbook*.

In this document, the term *flash memory* refers to both CFI and EPCS memory devices, unless otherwise noted.

## Prerequisites

This user guide assumes that you are familiar with the Nios II hardware and software development flow. You need to be familiar with the contents of the following documents:

- *Nios II Hardware Development Tutorial*
- *Getting Started with the Graphical User Interface* chapter of the *Nios II Software Developer's Handbook*

If you use the Nios II Flash Programmer to program FPGA configuration data to flash memory, you also must understand the configuration method used on the board.



Refer to *AN346: Using the Nios II Configuration Controller Reference Designs*, or to the reference manual for your specific Altera development board.

## Nios II Flash Programmer GUI and Command-Line Utilities

You can run the Nios II Flash Programmer from a GUI or from the command line. The GUI displays the command-line equivalents of the actions you direct it to perform. For information about the flash programmer GUI, refer to [Chapter 2, Using the Flash Programmer GUI](#), and for information about using the flash programmer command-line utilities, refer to [Chapter 3, Using the Flash Programmer from the Command Line](#).


The following tools allow you to run the Nios II Flash Programmer:

- Nios II Software Build Tools for Eclipse™ – The Nios II Software Build Tools (SBT) for Eclipse provides easy access to the Nios II Flash Programmer GUI. The flash programmer GUI is an easy-to-use interface that allows you to control the flash programmer features using settings you can store and reuse. This access method is suitable for most flash programming needs.
- Nios II Command Shell – The Nios II Command Shell provides commands that control the flash programmer features. You might have to calculate some parameters manually. You can also start the Nios II Flash Programmer GUI from the command line.

## How the Flash Programmer Works

The Nios II Flash Programmer has two parts, the host and the target, as shown in [Figure 1-1](#). The host portion runs on your computer. It sends flash programming files and programming instructions over a download cable to the target. The target portion is a hardware design, running in the FPGA. It accepts the programming data—flash content and required information about the target flash memory device—sent by the host, and follows the instructions to write data to the flash memory device.

**Figure 1-1.** How the Nios II Flash Programmer Works

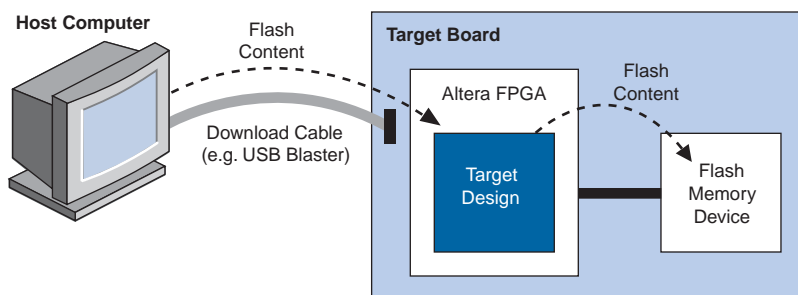

## Flash Programmer Target Design

To use the Nios II Flash Programmer, you must have a valid flash programmer target design downloaded to your board. A valid target design contains an SOPC Builder system with at least the SOPC Builder components shown in Table 1-1.



Hardcopy® II devices also support programming CFI Flash using the Nios II Flash Programmer, if the Hardcopy II design meets the requirements described in this section.

The minimum component set provides facilities for the target design to communicate with the host and to write to flash memory. The minimum component set depends on the type of flash memory you intend to program. Table 1-1 lists the minimum component set for programming each kind of flash memory.

**Table 1-1.** Minimum Component Set for the Flash Programmer Target Design


Component	Flash Memory to Program		
	CFI Only	EPCS Only	CFI and EPCS
Nios II processor, with JTAG debug module level 1 or greater	Required	Required	Required
System ID peripheral	Recommended (1)	Recommended (1)	Recommended (1)
Flash Memory (Common Flash Interface)	Required (2)		Required (2)
Avalon-MM Tristate Bridge	Required (3)		Required (3)
EPCS Serial Flash Controller		Required (3)	Required (3)

**Notes to Table 1-1:**

- (1) If present, a System ID Peripheral component allows the Nios II Flash Programmer to validate the target design before programming the flash memory.
- (2) A Nios II system can interface with more than one CFI flash memory device. The system must contain one Flash Memory (Common Flash Interface) component for each flash memory device on the board.
- (3) One Avalon-MM Tristate Bridge component connects to multiple flash memory controllers.

Figure 1-2 shows an example of an SOPC Builder system containing the minimum component set for a system with one CFI flash memory and an EPCS serial configuration device. The system also includes other components which relate to the purpose of the system, not to the flash programmer.

Figure 1-2. Example Target Design Containing the Minimum Component Set

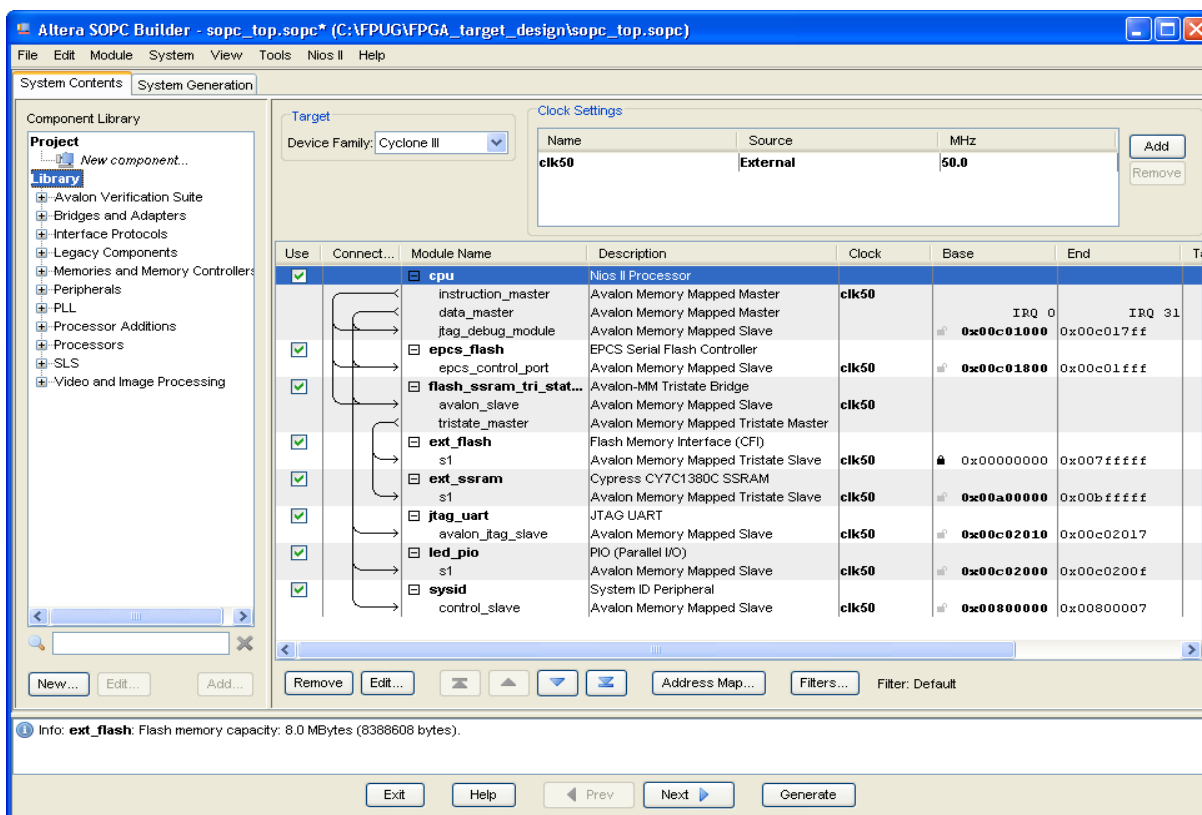

Most hardware example designs included with the Nios II EDS are ready-made target designs capable of programming the flash memory on Altera development boards. If you are developing for a custom board, consider using one of these example designs as a starting point for your flash programmer target design.



### Introduction

The Nios II Flash Programmer GUI is an easy-to-use graphical interface that automates the process of programming flash memory and enables you to control the programming parameters easily. The Nios II Flash Programmer GUI lets you program any combination of software, hardware, and binary data in flash memory in one operation. The flash programmer GUI can also generate flash files for your future use, and store them without programming the flash memory. Generating flash files or programming flash memory from the flash programmer GUI generates a script for future use from the command line.

You start the Nios II Flash Programmer GUI from the Nios II SBT for Eclipse or from the command line.

Alternatively, you can use the flash programmer from the command line. [Chapter 3, Using the Flash Programmer from the Command Line](#) describes the flash programmer command-line utilities.



Altera recommends that you use the Nios II Flash Programmer GUI to generate automated scripts, and use the scripts to automate the Nios II flash programming process.


### Starting the Flash Programmer GUI

To start the Nios II Flash Programmer GUI from the Nios II Command Shell, type the following command:

```
nios2-flash-programmer-gui ↵
```

To start the Nios II Flash Programmer GUI from the Nios II SBT for Eclipse, on the Nios II menu, click **Flash Programmer**.

The **Flash Programmer** dialog box appears, as shown in [Figure 2-1](#).

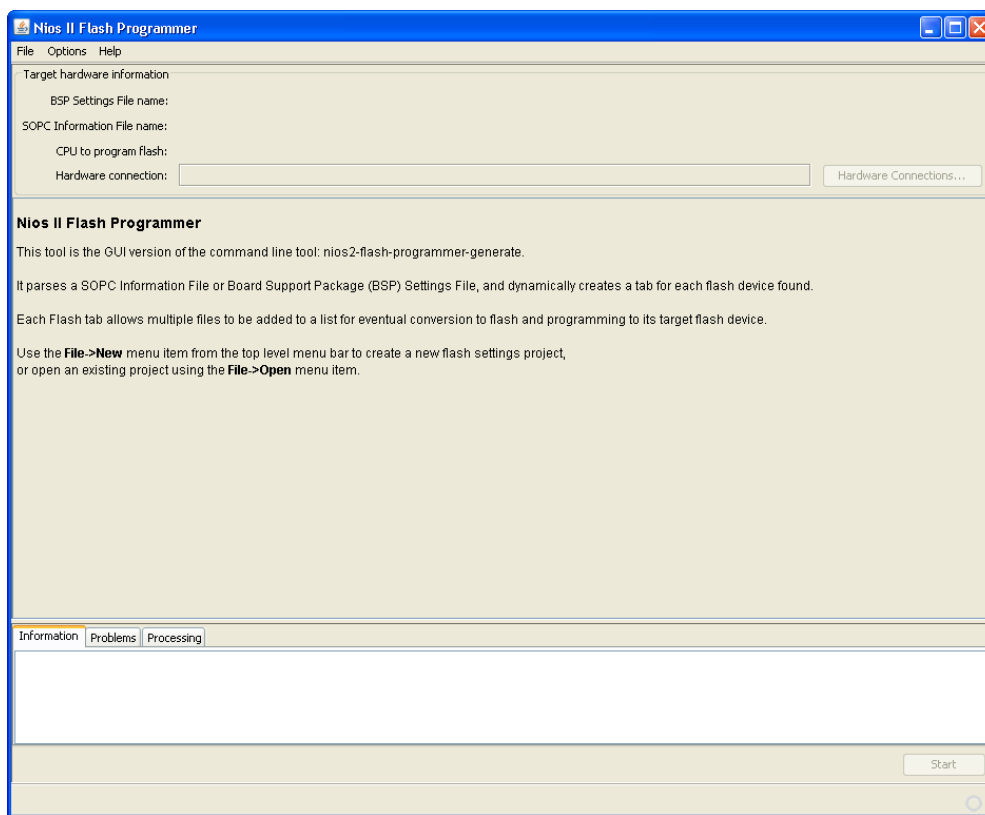**Figure 2-1.** Flash Programmer Dialog Box

## Specifying your Flash Programmer Settings

Before writing data to flash memory, you must determine the flash programmer settings.


To create a new set of flash programmer settings, complete the following steps:

1. On the File menu, click New. The New Flash Programmer Settings File dialog box appears.
2. Select Get flash programmer system details from BSP Settings File or Get flash programmer system details from SOPC Information File.
3. Browse to locate your BSP Settings File (.bsp) or SOPC Information File (.sopcinfo).
4. For a multiprocessor system, select the processor. If you specify a .bsp file, the processor is already specified.
5. Click OK. The New Flash Programmer Settings File dialog box closes and the Nios II Flash Programmer GUI populates with your processor selection, if relevant, and the information from the .bsp or .sopcinfo file.

Depending on your selection in step 2, your flash programmer settings may not include information about a BSP settings file. A new set of flash programmer settings based on a BSP settings file includes the `.sopcinfo` file name, but a new set of flash programmer settings based on a `.sopcinfo` file does not have information about a BSP settings file to which it corresponds. In that case you must identify the `.bsp` file explicitly. The `.bsp` file contains the information about your processor selection, for example, whereas the `.sopcinfo` file knows about the available processors, but not which one you selected.

Figure 2-2 shows the flash programmer with a new set of flash programmer settings based on the `.sopcinfo` file for a design with multiple processors and two flash memory components.

**Figure 2-2.** Flash Programmer Dialog Box with Flash Programmer Settings

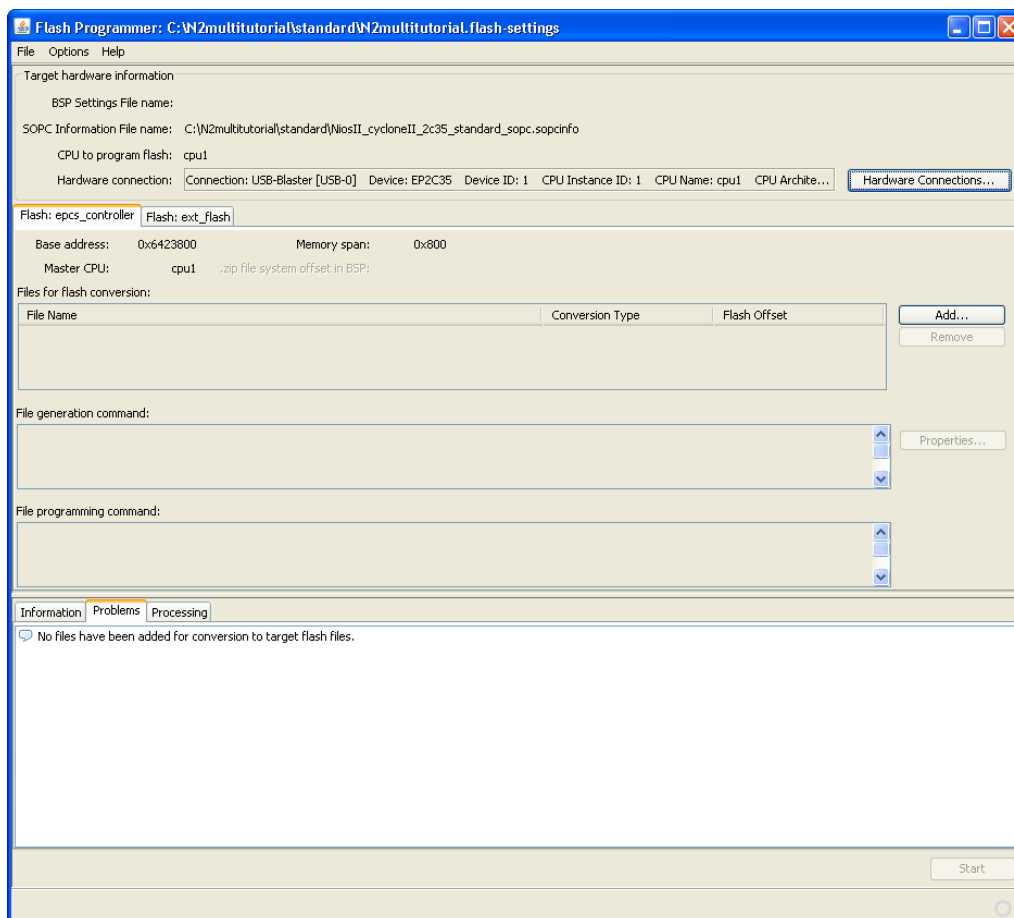

## Working with Flash Programmer Settings Files

The Nios II Flash Programmer GUI is a powerful tool with many options. Altera recommends saving your flash programmer settings in a Nios II Flash Programmer Settings File (`.flash-settings`) for future use.

The `.flash-settings` file includes the settings described in the following sections, such as the script and flash files directory paths, whether to perform system ID and system timestamp checking, and whether to generate flash files or program flash memory.

To save your current flash programmer settings, on the **File** menu, click **Save** or **Save As** to update or create a `.flash-settings` file. After you save the file, you can continue to edit it in the Nios II Flash Programmer GUI.

To open a pre-existing flash programmer settings file, on the **File** menu, click **Open**, and navigate to the location of the existing `.flash-settings` file.

## Setting the Hardware Connection

This section describes how to select the correct download cable, device, and processor to program flash memory. If your system has only a single download cable and a single processor, the process is simple. This section describes all the steps for a system with multiple download cables, processors, and devices.

Before you can program flash memory on your board, you must configure your FPGA with a flash programmer target design that contains at least the minimum component set specified in [Table 1-1 on page 1-3](#).



For instructions to configure the FPGA, refer to the *Quartus II Programmer* chapter in volume 3 of the *Quartus II Handbook*.

After you load the target design on your FPGA, you can set the hardware connection for programming flash memory.

To set the **Hardware** connection, perform the following steps:

1. Click **Hardware Connections**. The **Hardware Connections** dialog box appears.
2. In the **Hardware Connections** dialog box, click **Refresh Connections**.
3. If you are reusing an `.flash-settings` file, and the Quartus® II project has been recompiled since the `.flash-settings` file was created or the **Name** column entries in the **Processors** list are blank, perform the following steps:
  - a. Under **JTAG Debugging Information File name**, browse to locate your project JTAG Debugging Information File (`.jdi`).
  - b. Click **Resolve Names**. The flash programmer uses the `.jdi` file to ensure the available connection information is accurate.
4. If your design has multiple download cables, select the appropriate cable.
5. If your design has multiple processors, select the Nios II processor that corresponds to the **CPU to program flash** value under **Target hardware information** in the Nios II Flash Programmer dialog box.
6. Click **Close**.

## Checking System ID and System Timestamp

If your flash programmer target design includes a System ID component, the Nios II Flash Programmer can perform system ID and system timestamp checking before programming flash memory. If the flash programmer performs system ID checking, system timestamp checking, or both, and the expected system is not configured in the FPGA, the flash programmer does not program the flash memory.



Altera recommends that your FPGA target design include a System ID component, and that you enable both system ID and system timestamp checking.

By default, both system ID and system timestamp checking are enabled. To disable checking for system ID or system timestamp, perform the following steps:

1. Click **Hardware Connections**. The **Hardware Connections** dialog box appears.
2. To disable system ID checking, turn on **Ignore mismatched system ID**.
3. To disable system timestamp checking, turn on **Ignore mismatched system timestamp**.
4. Click **Close**.

After the hardware connections are set, you can confirm system ID and system timestamp matching by performing the following steps:

1. Click **Hardware Connections**.
2. In the **Hardware Connections** dialog box, click **System ID Properties**.
3. Check that the **Expected system ID** and **Actual system ID** values match, and that the **Expected system timestamp** and **Actual system timestamp** values match.
4. In the **System ID Properties** dialog box, click **Close**.
5. In the **Hardware Connections** dialog box, click **Close**.

For additional information about the system ID and system timestamp, refer to [Table 3-2 on page 3-2](#).



Regardless of the System ID component values, you cannot program flash memory if the hardware design configured in the FPGA is not a valid flash programmer target design that contains at least the minimum component set specified in [Table 1-1 on page 1-3](#).

## Generating Flash Files and Programming Flash Memory

The Nios II Flash Programmer can generate flash files, program the flash memory with a flash file, or both. The flash programmer can generate flash files from the following different file types:

- **SRAM Object File (.sof)** — Contains FPGA configuration data
- **Executable and Linking Format File (.elf)** — Contains your executable application software
- **Altera Zip Read-Only File System File (.zip)** — Contains a read-only zip file system associated with your Nios II software application project
- **An arbitrary binary file**



The Nios II EDS provides the Altera Zip Read-Only File System software component, which is an easy-to-use tool for storing and accessing data in flash memory.

Depending on your application, you might find it more convenient to use the Zip Read-Only File System, rather than storing raw binary data in flash memory. For information about the Altera Zip Read-Only File System, refer to the *Read-Only Zip File System* chapter in the *Nios II Software Developer's Handbook*.

To generate flash files or to write to flash memory using your flash programmer settings, perform the following steps:

1. On the **Options** menu, turn on the actions you wish to perform. The following actions are available:
  - **Generate Files**—Generates flash files.
  - **Program Files**—Programs flash memory with the generated flash files.
  - **Erase Flash Before Programming**—Erases the entire flash memory before writing each flash file to it.
  - **Run From Reset After Programming**—Runs the processor from its reset vector after flash memory programming is complete.

The final two actions are relevant only if you turn on **Program Files**.


2. To specify the directories where you want the flash programmer to store the generated flash files and script, on the **Options** menu, click **Staging Directories** and specify the script and flash-files directory paths.
3. On the tab for the flash memory device you wish to target, under **Files for flash conversion**, click **Add**.

The Nios II Flash Programmer adds the file to the **Files for flash conversion** list and derives the flash offset from the file. Depending on your current **Options** settings, the **File generation command** and **File programming command** boxes populate with the command-line commands that generate the .flash file and program it to your flash memory, respectively, providing a convenient way to learn about the command-line utilities.

4. If you wish to pass any additional arguments to the file generation command, under **File generation command**, click **Properties**.
5. If necessary, edit the **Conversion Type** settings for the files listed in the **Files for flash conversion** table, by clicking the relevant table cells. Allowed conversion types are **ELF**, **SOF**, and **BINARY**.
6. If necessary, edit the **Flash Offset** settings for the files listed in the **Files for flash conversion** table, by double-clicking the relevant table cells.

 Do not specify a flash offset for files of conversion type **ELF**.

7. Click **Start**. The Nios II Flash Programmer performs the actions specified by the commands, storing the generated flash files to the specified flash directory, and capturing the commands it runs to the `flash_programmer.sh` bash shell script in the specified script directory.

 You can use this script to duplicate the same actions again in the future, and to learn about the command-line utilities.

The Nios II development tools provide command-line utilities which give you complete control of the Nios II Flash Programmer features. You can create a custom script file to automate a flash programming task.

Alternatively, you can use the flash programmer GUI. [Chapter 2, Using the Flash Programmer GUI](#) describes the flash programmer GUI.



The Nios II Flash Programmer GUI programs flash memory by creating a script based on the command-line utilities. The script is well-formed, customized to your project, and human-readable. You can use it as a reference for flash programmer command-line syntax. The GUI-generated script is particularly helpful if you need to use the `--instance` parameter listed in [Table 3-2](#).

After you successfully program flash memory using the Nios II Flash Programmer GUI, you can find the flash programmer script in the directory you specified in the **Staging Directories** dialog box, available on the **Options** menu. The flash programmer script is a file named `flash_programmer.sh`.

[Table 3-1](#) lists the Nios II Flash Programmer command-line utilities.

**Table 3-1.** Flash Programmer Command-Line Utilities

<code>nios2-flash-programmer</code>	Programs an S-record file into flash memory. Can also read back data, verify data, provide debug information about the flash chip, and more.
<code>sof2flash</code>	Converts an SRAM Object File ( <b>.sof</b> ) to an S-record file.
<code>elf2flash</code>	Converts a Nios II Executable and Linking Format File ( <b>.elf</b> ) to an S-record file.
<code>bin2flash</code>	Converts an arbitrary data file to an S-record file.

The main utility for programming flash memory from the command line is `nios2-flash-programmer`. It requires industry-standard S-record input files. These utilities ensure that the input is compatible with the Nios II Flash Programmer. Input file names for all utilities must include an explicit extension, such as **.elf** or **.flash**.

On Windows computers, when you launch the Nios II Command Shell, the flash programmer utilities are available in your default search path.



For more information about the Nios II Command Shell, refer to the [Getting Started from the Command Line](#) chapter of the *Nios II Software Developer's Handbook*.

The following sections list the utilities and their functions.

## nios2-flash-programmer

The `nios2-flash-programmer` utility programs a preformatted file into a specified flash memory. The input is an industry-standard S-record file, normally created by one of the conversion utilities, `sof2flash`, `elf2flash`, or `bin2flash`.

`nios2-flash-programmer` can use any S-record file as an input, provided that the addresses specified in the S-record file represent offsets from the beginning of flash memory. The Nios II Flash Programmer GUI creates flash programmer files with a `.flash` extension.

The `nios2-flash-programmer` utility is capable of programming, erasing, or reading from any CFI-compatible flash memory or EPCS serial configuration device in the hardware target design.

The `nios2-flash-programmer` command-line syntax is as follows:

```
nios2-flash-programmer [--help] [--cable=< cable name >]\
  [--device=< device index >] [--instance=< instance >]\
  [--sidp=< address >] [--id=< id >] [--timestamp=< time >]\
  [--accept-bad-sysid] --base=< address > [--epcs]\
  { < file > } [--go]
```



Before you can program flash memory on your board, you must configure your FPGA with a flash programmer target design that contains at least the minimum component set specified in [Table 1-1 on page 1-3](#).



For instructions to configure the FPGA, refer to the *Quartus II Programmer* chapter in volume 3 of the *Quartus II Handbook*.

[Table 3-2](#) lists the parameters commonly used with `nios2-flash-programmer`.

**Table 3-2. `nios2-flash-programmer` Parameters (Part 1 of 3)**

Name	Required	Description
<b>General Parameters</b>		
<code>--cable=&lt; cable name &gt;</code>	Required if there are multiple download cables connected to the host computer.	Specifies which download cable to use. <sup>(1)</sup>
<code>--device=&lt; device index &gt;</code>	Required if there are multiple devices in the JTAG chain.	Specifies the FPGA's device number in the JTAG chain. The device index specifies the device where the flash programmer looks for the Nios II JTAG debug module. JTAG devices are numbered relative to the JTAG chain, starting at 1. <sup>(2)</sup>
<code>--instance=&lt; instance &gt;</code>	Required if there are multiple Nios II processors with JTAG debug modules in the target design on the FPGA.	Specifies which Nios II JTAG debug module to look at in the FPGA. The instance ID specifies the JTAG debug module that is used for programming flash memory. <sup>(3)</sup>
<code>--sidp=&lt; address &gt;</code>	Optional; required for system ID validation.	Contains the base address of the System ID component in your system. This value is in hexadecimal format (for example, 0x01000000) <sup>(4)</sup>



**Table 3-2. nios2-flash-programmer Parameters (Part 2 of 3)**

Name	Required	Description
--id=<id>	Optional; required for system ID validation.	Contains the ID value programmed into the System ID component in your system. This value is randomly selected each time you regenerate your SOPC Builder system. This value is in unsigned decimal format (for example, 2056847728 <sub>u</sub> ) (5)
--timestamp=<time>	Optional; required for system timestamp validation.	Contains the timestamp value programmed into the System ID component in your system. SOPC Builder sets this value based on the time of system generation. This value is in unsigned decimal format (for example, 1177105077 <sub>u</sub> ). Turning this parameter on is the same as turning off the <b>Ignore mismatched system timestamp</b> check box in the Nios II Flash Programmer GUI <b>Hardware Connections</b> dialog box. (6)
--accept-bad-sysid	Optional; defaults off.	Used to bypass the system ID validation. Forces the flash programmer to download a flash image. Turning this parameter on is the same as turning on the <b>Ignore mismatched system ID</b> check box in the Nios II Flash Programmer GUI <b>Hardware Connections</b> dialog box.
--erase=<start>,<size>	Optional; defaults off.	Erases a range of bytes in the flash memory.
--erase-all	Optional; defaults off.	Erases the entire flash memory. The erase operation occurs before programming, if an input file is provided for programming.
--program	Optional; defaults on if an input file is specified.	Programs flash memory from the input files.
--no-keep-nearby	Optional; defaults off	Throws away partial sector data. If the data to program does not completely fill the first or last sector, the flash programmer normally preserves and reprograms the original data in those sectors. The --no-keep-nearby parameter disables this feature. This option speeds up the programming process, but is only appropriate if the existing flash memory contents are unimportant.
--verify	Optional; defaults off	Verifies that contents of flash memory match input files.
{ <file> }	Optional	Specifies the name(s) of the input file(s) to program or verify. Separate multiple file names with spaces.
--read=<file>	Optional; defaults off	Reads flash memory contents into the specified file.
--read-bytes=<start>,<size>	Optional if --read is specified; defaults off	Specifies which address range to read (byte addresses).
--go	Optional; defaults off	Runs the processor from its reset vector after flash memory programming is complete.
<b>CFI Parameters</b>		
--debug	Optional; defaults off	Prints debug information, including the flash memory's query table.

**Table 3-2. nios2-flash-programmer Parameters (Part 3 of 3)**

Name	Required	Description
--base=<address>	Required	Specifies the base address of the CFI flash memory. This parameter is the absolute address in the target design's address space. <b>nios2-flash-programmer</b> treats addresses in the S-record files as offsets to the base address.
<b>EPCS Parameters</b>		
--epcs	Required when programming an EPCS serial configuration device; defaults off	Specifies that the target flash memory is an EPCS serial configuration device.
--debug	Optional; defaults off	Prints debug information about the physical memory inside the EPCS device.
--base=<address>	Required	Specifies the base address of the EPCS device.

**Notes to Table 3-2:**

- (1) The `--cable` parameter is only needed if there are multiple download cables connected to the host computer. To determine the cable names, run `jtagconfig`.
- (2) The `--device` parameter is only needed if there are two or more processors in different devices with the same instance ID. To determine the JTAG device index, run `jtagconfig`.
- (3) There are two ways to find the correct value of the instance ID for a processor. The easiest is to use the Nios II Flash Programmer GUI to create a sample flash programmer script. Refer to [Chapter 2, Using the Flash Programmer GUI](#) for details. Alternatively, open `<Quartus II project name>.jdi`, in the Quartus II project directory. Locate the Nios II processor node by finding a value of `hpath` containing `<processor module name>=`. The instance ID is specified as `instance_id`.
- (4) In `system.h` and in your board support package (BSP), the system ID base address is specified by `SYSID_BASE`.
- (5) In `system.h` and in your BSP the system ID value is specified by `SYSID_ID`.
- (6) In `system.h` and in your BSP, the system ID time stamp is specified by `SYSID_TIMESTAMP`.



For additional parameters, type `nios2-flash-programmer --help` at a command line.

## nios2-flash-programmer Command-Line Examples

```
nios2-flash-programmer --cable="Usb-blaster [USB-0]" --base=0x200000 \
--program ext_flash.flash
```

Programs CFI flash memory based at address 0x200000 with input file `ext_flash.flash` using a cable named "Usb-blaster [USB-0]"

```
nios2-flash-programmer --epcs --base=0x02100000 epcs_controller.flash
```

Programs an EPCS device based at address 0x02100000 with input file `epcs_controller.flash`.

```
nios2-flash-programmer --base=0x200000 --read=current.srec \
--read-bytes=0,0x10000
```

Reads 0x10000 bytes from CFI flash memory based at address 0x200000 and writes the contents to a file named `current.srec`

```
nios2-flash-programmer --base=0x200000 --erase=0x8000,0x10000
```

Erases address range 0x8000 to 0x10000 in CFI flash memory based at address 0x200000

```
nios2-flash-programmer --base=0x200000 --debug
```

Queries CFI flash memory based at address 0x200000 and reports the result. This command dumps the flash memory's query table.

## sof2flash

The `sof2flash` utility takes an SRAM Object File and translates it to an S-record file, suitable for programming into flash memory.

Table 3-3 lists the typical parameters used with `sof2flash`.

**Table 3-3.** sof2flash Parameters

Name	Required	Description
<b>General Parameters</b>		
<code>--compress</code>	Optional	Turns on compression. Available for Cyclone® II, Cyclone III, Stratix® II, and Stratix III devices.
<code>--input=&lt;file&gt;</code>	Required	Name of the input SRAM Object File.
<code>--output=&lt;file&gt;</code>	Required	Name of the output file.
<b>CFI Parameters</b>		
<code>--offset=&lt;addr&gt;</code>	Required	Offset within the flash memory device where the FPGA configuration is to be programmed.
<b>EPCS Parameters</b>		
<code>--epcs</code>	Required for EPCS devices; defaults off	Specifies that the output is intended for an EPCS device.
<b>Device Specific Parameters</b>		
<code>--activeparallel</code>	Optional	Creates parallel flash contents compatible with active-parallel configuration mode. Only available on FPGAs which support active-parallel configuration.
<code>--pfl (1)</code>	Required if your FPGA configuration uses the PFL	Specifies that the flash programmer use the parallel flash loader. Required if your FPGA configuration uses the parallel flash loader (PFL).
<code>--optionbit=&lt;optionbitaddr&gt; (1)</code>	Required if your FPGA configuration uses the PFL	Specifies the option bit address in your flash memory device. When you use this option, the <code>sof2flash</code> command generates both a <b>.flash</b> file and a <b>.map.flash</b> file. When you program the flash memory with the <b>.map.flash</b> file, it overwrites the default option bits. In almost all cases, the default option bits are appropriate and you should not program this file to flash.

**Note to Table 3-3:**

- (1) Using the `--pfl` and `--optionbits` command-line options slows down `sof2flash` generation noticeably. For more information about when to use the `--pfl` and `--optionbits` command-line options, refer to *AN386: Using the Parallel Flash Loader with the Quartus II Software*.



For additional parameters, type `sof2flash --help` at a command line.

## sof2flash Command-Line Examples

```
sof2flash --offset=0x0 --input=standard.sof \
--output=standard_cfi.flash
```

Converts **standard.sof** to an S-record file named **standard\_cfi.flash** intended for a CFI flash memory. The S-record offset begins at 0x0.

```
sof2flash --epcs --input=standard.sof --output=standard_epcs.flash
```

Converts **standard.sof** to an S-record file named **standard\_epcs.flash** intended for an EPCS device.

```
sof2flash --optionbit=0x18000 --pfl --input=standard.sof \
--output=standard.flash --offset=0x640000
```

Converts **standard.sof** to an S-record file named **standard.flash** for use with the parallel flash loader, and generates an option-bits overwrite file **standard.map.flash** for option bits at offset 0x18000 on the flash memory device.



Altera recommends that you not use the **standard.map.flash** file even if you generate it. The **--optionbit** command-line option is required for correct functioning of the **--pfl** option, but the resulting overwrite file should be ignored.

## elf2flash

The **elf2flash** utility takes an Executable and Linking Format File, and translates it to an S-record file suitable for programming into flash memory.

**elf2flash** also inserts a boot copier into the flash file, if needed. **elf2flash** inserts the boot copier code before the application code under the following conditions:

- The processor's reset address falls within the address range of the flash memory being programmed.
- The executable code is linked to a memory location outside of the flash memory being programmed.

If **elf2flash** inserts a boot copier, it also translates the application executable and linking format file to a boot record for use by the boot copier. This boot record contains all of the application code, but is not executable. After reset, the boot copier reads the boot record from flash memory and copies the application code to the correct linked address, and then branches to the newly-copied application code.


Table 3-4 lists the typical parameters used with **elf2flash**.

**Table 3-4.** elf2flash Parameters (Part 1 of 2)

Name	Required	Description
<b>General Parameters</b>		
<b>--input=&lt;file&gt;</b>	Required.	The name of the input Executable and Linking Format File.
<b>--output=&lt;file&gt;</b>	Required.	The name of the output file.
<b>CFI Parameters</b>		
<b>--base=&lt;addr&gt;</b>	Required.	The base address of the flash memory component. <b>elf2flash</b> uses this parameter with <b>--end</b> and <b>--reset</b> to determine whether the system requires a boot copier.
<b>--end=&lt;addr&gt;</b>	Required.	The end address of the flash memory component. <b>elf2flash</b> uses this parameter with <b>--base</b> and <b>--reset</b> to determine whether the system requires a boot copier.

**Table 3-4.** elf2flash Parameters (Part 2 of 2)


Name	Required	Description
<code>--reset=&lt;addr&gt;</code>	Required.	The processor reset address, which is specified in SOPC Builder. <b>elf2flash</b> uses this parameter with <code>--base</code> and <code>--end</code> to determine whether the system requires a boot copier.
<code>--boot=&lt;file&gt;</code>	Required under the following conditions: <ul style="list-style-type: none"> <li>■ The processor's reset address falls within the address range of the flash memory being programmed.</li> <li>■ The executable code is linked to a memory location outside of the flash memory being programmed.</li> </ul>	Specifies the boot copier object code file. Ignored if the boot copier is not required. If <b>elf2flash</b> determines that a boot copier is required, but the <code>--boot</code> parameter is absent, <b>elf2flash</b> displays an error message. The Altera-provided boot copier resides at <i>&lt;Nios II EDS install path&gt;/components/altera_nios2/boot_loader_cfi.srec</i> .
<b>EPCS Parameters</b>		
<code>--epcs</code>	Required when creating files for an EPCS device; defaults off.	Specifies that the output is intended for an EPCS device.
<code>--after=&lt;file&gt;</code>	Required when programming both hardware and software into an EPCS device	<b>elf2flash</b> uses this parameter to position a Nios II executable in an EPCS device along with an FPGA configuration. For further details, see <a href="#">“Programming Both Hardware and Software into an EPCS Device”</a> .

 For additional parameters, type `elf2flash --help` at a command line.

## Programming Both Hardware and Software into an EPCS Device

The `--base` parameter is not available for EPCS devices, because in EPCS devices, FPGA configuration data must start at address 0x0. However, if you are programming both an FPGA configuration and a Nios II software executable in the EPCS device, the `--after` parameter lets you position the software executable directly after the FPGA configuration data.

Convert the FPGA configuration file first using **sof2flash**. When converting the Nios II software executable, use the `--after` parameter, and specify the FPGA configuration S-record file. The S-record output for the software executable starts at the first address unused by the FPGA configuration. Refer to the second example under [“elf2flash Command-Line Examples”](#).

 **elf2flash** does not insert the FPGA configuration into the output file. It simply leaves space, starting at offset 0x0, that is large enough for the configuration data.

## elf2flash Command-Line Examples

```
elf2flash --base=0x0 --reset=0x0 --boot=boot_loader_cfi.srec \
--input=myapp.elf --output=myapp.flash
```

Converts **myapp.elf** to an S-record file named **myapp.flash**, intended for a CFI flash memory based at 0x0. Includes a boot copier (from **boot\_loader\_cfi.srec**), which is required in this example because **--base** and **--reset** are equal.

```
elf2flash --epcs --after=standard.flash --input=myapp.elf \
--output=myapp.flash
```

Converts **myapp.elf** to an S-record file named **myapp.flash**, intended for an EPCS device. The S-record output starts at the first address unused by **standard.flash**.

## bin2flash

The **bin2flash** utility converts an arbitrary file to an S-record file suitable for use by the flash programmer. You can use **bin2flash** to convert read-only binary data needed by a Nios II program, such as software configuration tables.

Depending on your application, you might find it more convenient to use the Altera Read-Only Zip Filing System, which serves the same purpose.



For information about the Altera Zip Read-Only File System, refer to the *Read-Only Zip File System* chapter in the *Nios II Software Developer's Handbook*.

Do not use **bin2flash** to convert executable software files or FPGA configuration files. To convert Nios II software executable files, use **elf2flash**. To convert FPGA configuration files, use **sof2flash**.

Table 3-5 lists the typical parameters used with **bin2flash**.

**Table 3-5.** bin2flash Parameters

Name	Required?	Default	Description
<b>--location=&lt;addr&gt;</b>	Required	—	Offset within the flash memory where the data is to be programmed
<b>--input=&lt;file&gt;</b>	Required	—	Name of the input binary file being converted
<b>--output=&lt;file&gt;</b>	Required	—	Name of the output file



For additional parameters, type **elf2flash --help** at a command line.

## bin2flash Command-Line Example

```
bin2flash --location=0x40000 --input=data.bin --output=data.flash
```

Converts **data.bin** to an S-record file named **data.flash**. Addresses in the S-record file place the data starting at offset 0x40000 from the beginning of flash memory.

This section covers advanced topics to support non-standard CFI flash memory. To use the procedures in this section, you need the data sheet for the flash memory device you are using. Make sure you fully understand the CFI aspects of the device.

Some CFI flash memory devices contain missing or incorrect CFI table information. In such cases, the Nios II Flash Programmer might fail based on the erroneous information in the CFI table. For these devices, the Nios II Flash Programmer provides the following methods to override the CFI table and successfully program flash memory:

- Built-in recognition and override
- Flash override files
- Width mode override

### Built-in Recognition and Override

The Nios II Flash Programmer contains code to recognize some devices with known CFI table problems. On these devices, it overrides the incorrect table entries. Always try using built-in recognition and override before trying to create an override file. To determine whether the flash programmer recognizes the device, run the flash programmer from the command line with the `--debug` option. If the flash programmer overrides the CFI table, the flash programmer displays a message "Override data for this device is built in".



For details on using the flash programmer from the command line, refer to [Chapter 3, Using the Flash Programmer from the Command Line](#).

### Flash Override Files

To support newly released flash memory devices which might have problems in the CFI table, the Nios II Flash Programmer provides the ability to override CFI table entries with flash override files. A flash override file lets you manually override erroneous information in the CFI table, which enables the Nios II Flash Programmer to function correctly.

Before creating an override file, run `nios2-flash-programmer` from the command line with the `--debug` parameter, which lists the CFI table found in the device. Compare the debug output with the device's data sheet.

### Flash Override File Format

Flash override files contain two sections for each flash memory they override. The first section declares the flash memory type. The second section is the CFI table override data. The flash override file can contain comments preceded by a '#' character.

For example, the SST 39VF800 flash memory contains three incorrect entries in its CFI table at location 0x13, 0x14, and 0x2C. The following example demonstrates how to override the values at those addresses.

```
[FLASH-00BF-2781] # Keyword FLASH, followed by the Mfgr ID and Device ID
                  # These ID values can be found in three ways:
                  # -by consulting the flash memory device's data sheet.
                  # -by using the "autoselect" command
                  # -by running nios2-flash-programmer --debug
CFI[0x13] = 0x02 # The primary command set, found at CFI table -
CFI[0x14] = 0x00 # addresses 0x13 and 0x14 are overridden to
                  #                               0x02, 0x00.
CFI[0x2C] = 0x01 # The number of CFI Erase block regions, found at
                  # CFI table -address 0x2C is overridden to 0x1.
```



This example is for illustration only. **nios2-flash-programmer** recognizes the SST 39VF800 as a nonstandard CFI device and overrides its CFI table. You do not need to create an override file for this particular part.

## How to Use the Flash Override File

There are two ways to deploy flash override files:

1. Place the override file in `<Nios II EDS install path>/bin`. The Nios II Flash Programmer searches this directory for all filenames matching the pattern `nios2-flash-override*`. The flash programmer loads all these files as override files.
2. Pass the override file to the flash programmer with the `--override` parameter. The following example illustrates this parameter:

```
nios2-flash-programmer --base 0x0 --override=my_override.txt sw.flash
```

## Width Mode Override Parameter

The override procedure described in “[Flash Override Files](#)” assumes the Nios II Flash Programmer detects the correct data-width mode from the CFI query table. In some cases, a 16-bit CFI flash memory device wired in 8-bit mode might return a query table indicating 16-bit mode. This condition prevents the flash programmer from correctly interpreting the remainder of the query table. The flash programmer cannot detect this situation, because the device type is unreadable. If your flash memory device has this problem, you must program it from the command line.

In this case, override the data width on the command line with the hidden parameter `--width=8`.

This parameter is known to be necessary for only two flash memory devices: the ST Micro ST29W800 and ST29W640. Unless you are using these devices, you are unlikely to require this parameter.



The Nios II Flash Programmer works with all CFI-compatible parallel flash memories that support programming algorithm 1, 2, or 3, and with all Altera EPCS serial configuration devices. Not all flash memory devices have been tested with the Nios II Flash Programmer.



If you find a CFI-compliant device that does not work with the Nios II Flash Programmer, please report it to Altera Technical Support.



While developing hardware or software, you use the Nios II Flash Programmer on a computer with the Quartus II software and the Nios II EDS installed. However, in a production or service environment you might want to set up a computer to program flash memory without installing the full set of Altera development tools. A stand-alone version of the Nios II Flash Programmer is available for this purpose.

In stand-alone mode, the flash programmer has limited functionality. You can program any type of CFI or EPCS flash memory. However, the `elf2flash`, `sof2flash`, and `bin2flash` utilities are not available. You must create input files for the flash programmer on a computer which has the Nios II development tools fully installed.

### Installing the Nios II Stand-Alone Flash Programmer

To install the Nios II Flash Programmer in stand-alone mode, perform the following steps:

1. Install the Quartus II Stand-Alone Programmer from the Quartus II CD. The `nios2-flash-programmer` utility requires the Quartus II Stand-Alone Programmer to access the JTAG chain on the board.
2. On a computer which has the Nios II EDS fully installed, find the executable file `<Nios II EDS install path>/bin/nios2-flash-programmer.exe`.
3. On the stand-alone computer, copy `nios2-flash-programmer.exe` to the directory `<Quartus II Stand-Alone Programmer Path>/bin`.
4. On the computer with the full Nios II EDS installation, find the Windows library file `c:/cygwin/bin/cygwin1.dll`. If you install `cygwin` separately from the Nios II EDS, your `cygwin` DLLs might reside in a different directory.
5. On the stand-alone computer, copy `cygwin1.dll` into `c:/cygwin/bin` (or the equivalent path, based on the `cygwin` installation).

### Running the Nios II Stand-Alone Flash Programmer

To run the Nios II Flash Programmer in stand-alone mode, perform the following steps:

1. Open a command prompt on the stand-alone computer. Change directories to the location of the files you wish to program into flash memory.
2. Run the `nios2-flash-programmer` utility as described in [Chapter 3, Using the Flash Programmer from the Command Line](#).



### Overview

This chapter lists troubleshooting tips for the Nios II Flash Programmer. Each section in this chapter describes a common issue you might run into when using the Nios II Flash Programmer.

### Start Button Grayed Out in the Flash Programmer GUI

In the Nios II Flash Programmer GUI, even after a flash programmer configuration is opened, the **Start** button appears grayed out.

#### Probable Cause

You have not fully specified the required parameters for programming flash memory.

#### Suggested Actions

- Check the **Problems** tab for any information about what may be missing or incorrect.
- Make sure that your JTAG cable settings are correct. Specify the connection in the Hardware Connections dialog box, by clicking **Refresh Connections** and **Resolve Names**, and selecting the Nios II processor that matches the value in **CPU to program flash**.
- Make sure that you have selected a file to program to the flash memory, and that it appears with the correct **Conversion Type** and **Flash Offset** values.

### "No Nios II processors available" Error

When you run the flash programmer, you get the error: "There are no Nios II processors available which match the values specified. Please check that your PLD is correctly configured, downloading a new .sof file if necessary."

#### Probable Cause

The flash programmer is unable to connect with a Nios II JTAG debug module inside the FPGA.

#### Suggested Actions

- Make sure that the FPGA is running a valid flash programmer target design. If not, you need to configure the FPGA using the Quartus II programmer. Refer to ["Flash Programmer Target Design"](#) on page 1–3.
- If using the flash programmer from the command line, ensure you have specified the proper `--device`, `--cable`, and `--instance` parameter values. Refer to [Chapter 3, Using the Flash Programmer from the Command Line](#) for details.

## "No CFI table found" Error

When you run the flash programmer to program CFI flash memory, you get the error:  
"No CFI table found at address <base address>"

### Probable Cause

The flash programmer can connect with a Nios II JTAG debug module in the FPGA, but it can not successfully execute a query to a flash memory at the base address specified.

### Suggested Actions

- If you are using **nios2-flash-programmer** from the command line, make sure you specified the correct base address for the CFI device. You can find the flash memory's base address in SOPC Builder.
- Run **nios2-flash-programmer** from the command line with the `--debug` parameter. This command dumps the flash memory's query table. Compare the output with the flash memory device's data sheet. For further details, see [Chapter 3, Using the Flash Programmer from the Command Line](#).
- Ensure your flash memory hardware is correctly connected to place it at the base address specified in SOPC Builder. Verify the base address by running the "Test Flash" routine in the "Memory Test" software template provided in the Nios II EDS. If the test fails, there is a problem with your memory connection. There are two places to look for the problem:
  - The physical connection on your target board
  - The pin assignments on the top-level FPGA design
- If all else fails, make sure the flash memory device you are using does not require an override file. Refer to [Appendix A, Non-Standard Flash Memories](#) for details.

## "No EPCS registers found" Error

When you run the flash programmer to program an EPCS device, you get the error:  
"No EPCS registers found: tried looking at addresses...."

### Probable Cause

The flash programmer can connect with a Nios II JTAG debug module in the FPGA, but it can not successfully find an EPCS device located at the specified base address.

### Suggested Actions

- Reconfigure the FPGA with a valid target design via JTAG using the Quartus II programmer. If the FPGA is configured by another method, such as by a configuration controller, the pins that connect to the EPCS device might be disabled.
- If you are using **nios2-flash-programmer** from the command line, make sure you specified the correct base address for your EPCS device. You can find the flash memory's base address in SOPC Builder.

- Ensure that the EPCS device is correctly connected to the FPGA on the board. Verify the EPCS connection by running the "Test EPCS" routine in the "Memory Test" software template provided by the Nios II EDS. If the test fails, there is a problem with your memory connection. There are two places to look for the problem:
  - The physical connection on your target board
  - The pin assignments on the top-level FPGA design
- Use the Quartus II Programmer to program the EPCS device directly via a JTAG download cable, and verify that the EPCS device successfully configures the FPGA.
- Run `nios2-flash-programmer` from the command line with the `--epcs` parameter. This command displays information about the flash memory in the EPCS device. For further details, see [Chapter 3, Using the Flash Programmer from the Command Line](#).

## "System does not have any flash memory" Error

When you run the flash programmer, you get the error: "The SOPC Builder system does not have any flash memory."

### Probable Cause

The FPGA is not currently configured with a valid flash programmer target design.

### Suggested Actions

If practical, upgrade your FPGA design to meet the criteria for a flash programmer target design. Refer to ["Flash Programmer Target Design"](#) on page 1-3 for details.

## "Reading System ID at address 0x<address>: FAIL" Error

When you run the Nios II Flash Programmer GUI, you get the error: "Reading System ID at address 0x<address>: FAIL"

### Probable Cause

The FPGA is not currently configured with the target design that corresponds to the BSP project for the software application in the Nios II Software Build Tools for Eclipse.

### Suggested Actions

Use the Quartus II Programmer to download the correct FPGA configuration file to the FPGA, then try using the Nios II Flash Programmer again.

## "Base address not aligned on size of device" Error

When you run the flash programmer, you get the error message **Base address not aligned on size of device**.

## Probable Cause

The flash device base address being passed to the Flash Programmer is not a multiple of the flash device's size.

## Suggested Actions

- Ensure that the flash device is mapped to a base address in SOPC Builder that is a multiple of the flash size listed in its CFI table.
- If in command line mode, ensure that the `--base` parameter you are passing to `nios2-flash-programmer` is the correct base address of the flash device in your SOPC Builder system.



## Revision History

The following table shows the revision history for this user guide.

Date	Version	Changes Made
February 2010	2.1	<ul style="list-style-type: none"> <li>Documented the two sof2flash options <code>--pfl</code> and <code>--optionbit</code>.</li> </ul>
January 2010	2.0	<ul style="list-style-type: none"> <li>Documented the new Nios II Flash Programmer GUI.</li> <li>Revised entire document to use Nios II Software Build Tools for Eclipse instead of Nios II IDE.</li> <li>Removed out-of-date list of tested flash memory devices.</li> </ul>
May 2008	1.6	In chapter 3, corrected error in Table 3–3 on page 3–5. The default mode for the compression parameter is on. Compression is available for Cyclone II, Cyclone III, Stratix II, and Stratix III devices.
November 2007	1.5	<ul style="list-style-type: none"> <li>In chapter 1, added note that Hardcopy II devices also support programming CFI Flash using Nios II Flash programmer.</li> <li>In chapter 3, documented command-line support for active parallel configuration.</li> </ul>
May 2007	1.4	<ul style="list-style-type: none"> <li>In chapter 1, removed mention of board description files (no longer implemented)</li> <li>In chapter 1, corrected and updated discussion of <code>--instance</code> and <code>--device</code> command line parameters</li> <li>In chapter 1, updated SOPC Builder screen shot</li> <li>In chapter 3, added descriptions of <b>nios2-flash-programmer</b> options <code>--sidp</code>, <code>--id</code>, <code>--timestamp</code>, <code>--accept-bad-sysid</code></li> <li>In appendix C, corrected missing installation step</li> <li>In appendix C, removed mention of board description files (no longer implemented)</li> </ul>
November 2006	1.3	Updates for the Nios II version 6.1 release. Includes improvements to the flash programmer user interface.
October 2005	1.2	Updates for the Nios II version 5.1 release. Includes major changes to the flash programmer target design.
December 2004	1.1	Updates for the Nios II version 1.1 release.
May 2004	1.0	Initial release.

## How to Contact Altera

For the most up-to-date information about Altera® products, see the following table.

Contact <i>(Note 1)</i>	Contact Method	Address
Technical support	Website	<a href="http://www.altera.com/support">www.altera.com/support</a>
Technical training	Website	<a href="http://www.altera.com/training">www.altera.com/training</a>
	Email	<a href="mailto:custrain@altera.com">custrain@altera.com</a>
Technical documentation	Website	<a href="http://www.altera.com/literature">www.altera.com/literature</a>
Continued...		





Contact <i>(Note 1)</i>	Contact Method	Address
Non-technical support (General) (Software Licensing)	Email	<a href="mailto:nacomp@altera.com">nacomp@altera.com</a>
	Email	<a href="mailto:authorization@altera.com">authorization@altera.com</a>

**Note:**

(1) You can also contact your local Altera sales office or sales representative.

## Typographic Conventions

The following table shows the typographic conventions that this document uses.

Visual Cue	Meaning
<b>Bold Type with Initial Capital Letters</b>	Command names, dialog box titles, check box options, and dialog box options are shown in bold, initial capital letters. Example: <b>Save As</b> dialog box.
<b>bold type</b>	External timing parameters, directory names, project names, disk drive names, file names, file name extensions, and software utility names are shown in bold type. Examples: <b>f<sub>MAX</sub></b> , <b>iqdesigns</b> directory, <b>d:</b> drive, <b>chiptrip.gdf</b> file.
<i>Italic Type with Initial Capital Letters</i>	Document titles are shown in italic type with initial capital letters. Example: <i>AN 75: High-Speed Board Design</i> .
<i>Italic type</i>	Internal timing parameters and variables are shown in italic type. Examples: <i>t<sub>PIA</sub></i> , <i>n + 1</i> . Variable names are enclosed in angle brackets (< >) and shown in italic type. Example: <file name>, <project name>.pdf file.
Initial Capital Letters	Keyboard keys and menu names are shown with initial capital letters. Examples: Delete key, the Options menu.
"Subheading Title"	References to sections within a document and titles of on-line help topics are shown in quotation marks. Example: "Typographic Conventions."
Courier type	Signal and port names are shown in lowercase Courier type. Examples: data1, tdi, input. Active-low signals are denoted by suffix n, e.g., resetn. Anything that must be typed exactly as it appears is shown in Courier type. For example: c:\qdesigns\tutorial\chiptrip.gdf. Also, sections of an actual file, such as a Report File, references to parts of files (e.g., the AHDL keyword SUBDESIGN), as well as logic function names (e.g., TRI) are shown in Courier.
1., 2., 3., and a., b., c., etc.	Numbered steps are used in a list of items when the sequence of the items is important, such as the steps listed in a procedure.
■ ■	Bullets are used in a list of items when the sequence of the items is not important.
✓	The checkmark indicates a procedure that consists of one step only.
	The hand points to information that requires special attention.
 CAUTION	A caution calls attention to a condition or possible situation that can damage or destroy the product or the user's work.
 WARNING	A warning calls attention to a condition or possible situation that can cause injury to the user.
↵	The angled arrow indicates you should press the Enter key.
	The feet direct you to more information about a particular topic.