



Application Note

Version 1.0

SPI Interface On GPS Receiver A2035-H

Revision History

| Rev. | Date | Description | Writer |
|------|----------|---------------|----------------|
| 1.0 | 04-28-12 | First release | Larry Patricio |
| | | | |
| | mm-dd-yy | | |

| | Name | Date | Signature |
|-------------|--------------------|----------|-----------|
| Written by | Larry Patricio | 04-28-12 | L P |
| Checked by | Happy Wen | 05-03-12 | HW |
| Approval by | Matthieu Boulanger | 05-04-12 | MB |

Disclaimer

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF MAESTRO WIRELESS SOLUTIONS LIMITED. IT MAY NOT BE COPIED OR TRANSMITTED BY ANY MEANS, PASSED TO OTHERS, OR STORED IN ANY RETRIEVAL SYSTEM OR MEDIA, WITHOUT PRIOR CONSENT OF MAESTRO OR ITS AUTHORIZED AGENTS.

THE INFORMATION IN THIS DOCUMENT IS, TO THE BEST OF OUR KNOWLEDGE, ENTIRELY CORRECT. HOWEVER, MAESTRO CAN NEITHER ACCEPT LIABILITY FOR ANY INACCURACIES, OR THE CONSEQUENCES THEREOF, NOR FOR ANY LIABILITY ARISING FROM THE USE OR APPLICATION OF ANY CIRCUIT, PRODUCT, OR EXAMPLE SHOWN IN THE DOCUMENT.

THE PRODUCT (HARD-AND SOFTWARE) DESCRIBED IN THIS DOCUMENTATION IS NOT AUTHORIZED FOR USE IN LIFE SUPPORT DEVICES OR SYSTEMS WITHOUT THE EXPRESS WRITTEN APPROVAL OF MAESTRO.

THIS DOCUMENT MAY PROVIDE LINKS TO OTHER WORLD WIDE WEB SITES OR RESOURCES. BECAUSE MAESTRO HAS NO CONTROL OVER SUCH SITES AND RESOURCES, MAESTRO SHALL NOT BE RESPONSIBLE FOR THE AVAILABILITY OF SUCH EXTERNAL SITES OR RESOURCES, AND DOES NOT ENDORSE AND IS NOT RESPONSIBLE OR LIABLE FOR ANY CONTENT, ADVERTISING, PRODUCTS, OR OTHER MATERIALS ON OR AVAILABLE FROM SUCH SITES OR RESOURCES. MAESTRO SHALL NOT BE RESPONSIBLE OR LIABLE, DIRECTLY OR INDIRECTLY, FOR ANY DAMAGE OR LOSS CAUSED OR ALLEGED TO BE CAUSED BY OR IN CONNECTION WITH USE OF OR RELIANCE ON ANY SUCH CONTENT, GOODS OR SERVICES AVAILABLE ON OR THROUGH ANY SUCH SITE OR RESOURCE.

MAESTRO RESERVES THE RIGHT TO CHANGE, MODIFY, OR IMPROVE THIS DOCUMENT OR THE PRODUCT DESCRIBED HEREIN, AS SEEN FIT BY MAESTRO WITHOUT FURTHER NOTICE.

Table of Contents

| | |
|---|----|
| 1 Introduction | 5 |
| 2 SPI interface | 5 |
| 2.1 SPI application..... | 5 |
| 2.2 SPI Software control..... | 6 |
| 2.2.1 SPI Timing diagrams..... | 6 |
| 2.2.2 software development guide..... | 6 |
| 2.2.3 Example of appearing “ 0xB4, 0xA7”..... | 7 |
| 3 Procedure to switch from OSP to NMEA Protocol (vice-versa)..... | 9 |
| 3.1 Switch To OSP Protocol by SPI Test method: | 9 |
| 3.2 Switch To NMEA Protocol by SPI Test method: | 9 |
| 4 SPI of EVA2035-H Test method:..... | 10 |
| 4.1 IMAGES..... | 11 |
| 5 Related Information..... | 12 |
| 5.1 Contact..... | 12 |
| 5.2 Related Documents..... | 12 |

1 Introduction

The purpose of this document is to help the customers take advantage of the 2035-H module's SPI interface which including the hardware connection circuit and software development guide.

2 SPI interface

2.1 SPI application

The host interface SPI is a slave mode SPI:

- Supports both SPI and Microwire formats
- An interrupt is provided when the transmit FIFO and output serial register (SR) are both empty
- The transmitter and receiver each have independent 1024B FIFO buffers
- The transmitter and receiver have individual software-defined 2-byte idle patterns of 0xB4, 0xA7
- SPI detects synchronization errors and is reset by software
- Supports a maximum clock of 6.8MHz

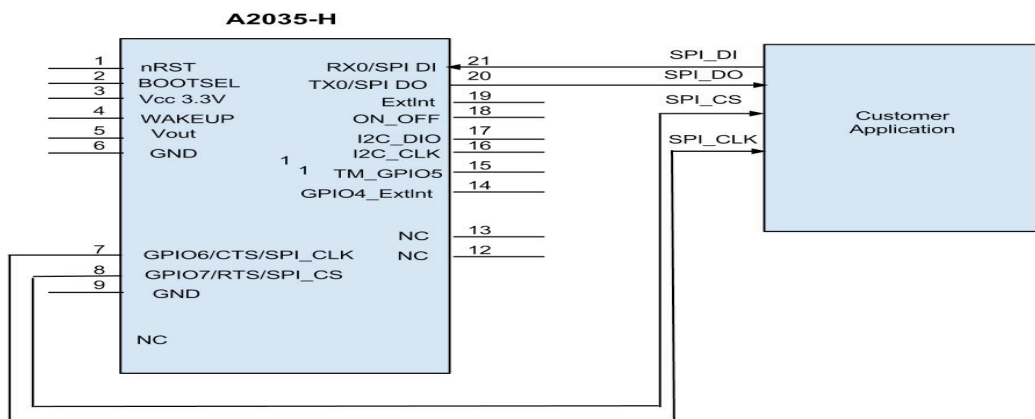


Fig. 1 Example of SPI bus application

2.2 SPI Software control

2.2.1 SPI Timing diagrams

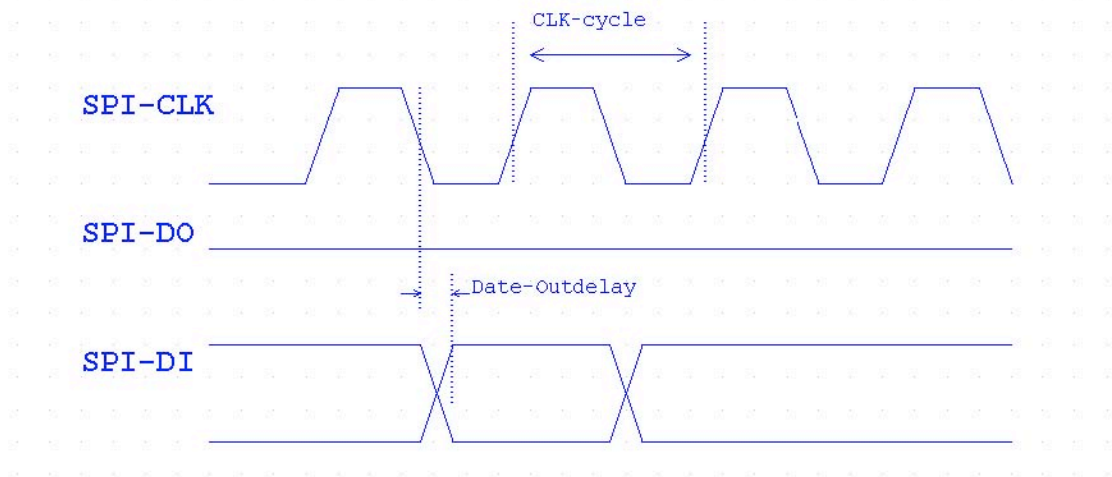


Fig. 2 SPI Timing diagrams, Mode1, Master, 4 wires

| Signal | Description | Minimum | Typ | Maximum | Unit |
|----------------|--------------------------|---------|-----|---------|------|
| CLK-cycle | SPI Clock frequency | | | 6.8 | MHz |
| Data-out delay | Data out read delay time | | 8 | | us |

2.2.2 software development guide

1. Correctly connect the circuits and configure to SPI mode 1 (CPOL:0,CPHA:1, Default) , Shift out MSb first.
2. After power on and getting the clock signal which sending from the master unit , the GPS module will send out NMEA data.
3. The NMEA data need be read one by one byte,the time interval between every two bytes must be more then 8us , otherwise it might send some error bytes.
4. When GPS module do not send any NMEA data , we will not be able to get NMEA data from the SPI interface, only receive 0xB4,0xA7. For example, the GPS module send 100 bytes per second into SPI FIFO, there will be total 100bytes "0xB4, 0xA7" with the 100bytes NMEA data when your program read 200 bytes per second.

Note:

1. Be careful to control reading speed of the each byte
2. Be careful to control the rate of updated GPS NMEA data .

[illegible]

[illegible]

3 Procedure to switch from OSP to NMEA Protocol (vice-versa)

3.1 Switch To OSP Protocol by SPI Test method:

1. Press the ON_OFF button to Power on
2. Send Command MID100 "\$PSRF100,0,115200,8,1,0*04\r\n"(Ascii)="24 50 53 52 46 31 30 30 2C 30 2C 31 31 35 32 30 30 2C 38 2C 31 2C 30 2A 30 34 0D 0A" (Hexadecimal)
3. Press the ON_OFF button to Power off

Wait for one second

4. Press the ON_OFF button to Power on

Then you can receive the OSP format information. (The receiver need wait a moment for all information of the independent 1024B FIFO buffers)

3.2 Switch To NMEA Protocol by SPI Test method:

1. Press the ON_OFF button to Power on
2. Send Command MID129 "A0 A2 00 18 81 02 01 01 00 01 01 01 05 01 01 01 00 01 00 01 00 00 00 01 00 00 12 C0 01 65 B0 B3" (Hexadecimal)

3. Press the ON_OFF button to Power off

Wait for one second

4. Press the ON_OFF button to Power on

Then you can receive the NMEA format information. (The receiver need wait a moment for all information of the independent 1024B FIFO buffers)

4 SPI of EVA2035-H Test method:

1. Aardvark connection with A2035-H:

SCLK(Pin 7)----- connection to GPIO6 of the A2035-H
(SPI CLOCK pin)

MOSI(Pin 8)----- connection to RX0 of the A2035-H (SPI data IN pin)

MISO(Pin 5)----- connection to TX0 of the A2035-H (SPI data OUT pin)

GND (Pin 10)----- connection to GPIO7 of the A2035-H (SPI Chip Select pin)

2. DIP Switch,GPIO6 and GPIO7 setting to OFF;

3. Push to ON_OFF button (Power on)

4. Aardvark Settings: Please refer to image 1

5. Command accepted by SPI refer to image 2

NOTE: As the Aardvark GUI only accepts Hexadecimal:

\$PSRF117,16*0B\r\n (Ascii) = 24 50 53 52 46 31 31 37 2C 31 36 2A 30 42 0D
0A (Hexadecimal)

[illegible]

5 Related Information

5.1 Contact

This manual is created with due diligence. We hope that it will be helpful to the user to get the most out of the GPS module.

Inputs about errors or mistakable verbalizations and comments or suggestions to Maestro Wireless for further improvement are highly appreciated.

Maestro Wireless Solutions Limited

Unit 3603-09,36/F., 118,
Connaught Road West, HK

Main Line: (852) 28690688

Fax: (852) 25254701

support-gps@maestro-wireless.com

www.maestro-wireless.com

5.2 Related Documents

- GPS Receiver A2035-H (Maestro)