

Si5351a with quadrature output
VFO controller for Arduino
by WA5BDU

Overview

V2.1 Keyer! plus HW-8 mode – February 14, 2025

V2.2 April 11, 2025 has mostly bug fixes and some fine-tuning of functions.

This document describes my Arduino Si5351a controller program for the Arduino.

Features include:

- A keyed line input, so the controller can swap between TX and RX frequency outputs as required as the user keys and un-keys the transmitter.
- A TX_Out output pin echoes the keyed line input, but doesn't change state until the TX frequency registers have been sent, and changes back to key up before the RX frequency registers are sent.
- An LCD display to show the frequency I'm on, menu options and so on.
- A user settable CW Pitch value which is the amount that the VFO shifts between TX and RX states if in CW mode.
- CW/Phone mode selection which functions to enable or disable the CW offset shift when the key line is closed.
- LSB/USB selection. This chooses the direction of CW offset in CW mode, so the user can listen to a station on either side of zero beat. In CW it's sometimes called NORMAL and REVERSE operation. Also, the phase difference between the outputs alternates between 90° and 270° when this selection is made.
- RIT control. This provides for separate TX and RX frequencies, with both displayed. The receiver can be tuned without disturbing the transmit frequency. RX and TX frequencies can be swapped and the offset can be zeroed without turning off RIT.
- Frequency step selection. There are both a menu for selecting from seven step sizes and a quick pushbutton selected step change between fine (10 Hz), medium (100 Hz) and fast (1 kHz).
- Band selection with all ham bands from 3.5 to 144 MHz selectable, but unwanted bands can be omitted from the sequence.
- A Save State menu option which writes most of the current parameters into EEPROM so the VFO will start in the same state the next time it is powered on.
- Three miniature pushbuttons allow quick selection of often used functions while a menu controlled by the rotary encoder is used to access other functions. The pushbuttons operate with the familiar TAP and HOLD logic, giving two uses for each.

- A sidetone which sounds when the key is closed. A menu option can enable or defeat this function.
- An option for superhet operation with an I.F. (intermediate frequency) offset added to the displayed frequency when in receive mode.
- A separate transmit output on clock 2 may be specified. It is keyed via key or PTT input.
- A simple VFO mode where output is ON when the key is down and OFF otherwise, for driving simple transmitters. “TX_ONLY” option.
- The ability to control a PCF8575 IC which has 16 output lines and can select relays on a per-band basis. For example, to select low-pass filters in a transmitter.
- And now a keyer is fully integrated into the VFO system, providing for a greater level of integration in stations using it.

Details of operation

The pushbuttons offer six actions, one of which opens a menu with additional actions. A brief press of a pushbutton is called a TAP and a long press (> 0.5 second) is a HOLD operation.

There is audio feedback in the form of a short beep immediately as a switch is closed, followed by two short beeps after it has been held long enough for the HOLD function.

Pushbutton actions:

PB1 Tap	RIT ON/Off (toggle)
PB1Tap*2	Clear RIT if ON [SPOT] ¹
PB1 Hold	TX/RX Swap (toggle)
PB2 Tap	Step 10/100/1k sequence
PB2 Hold	Band select
PB3 Tap	USB/LSB toggle
PB3 Hold	Main menu

- 1) PB1Tap enables/disables the spotting function when in TX_ONLY mode.
- 2) Three consecutive taps of PB3 causes the CW/Phone mode toggle

Holding PB3 closed during startup selects a Verbose option which displays the current state of most options during startup. Hold until you see the word VERBOSE displayed, then release.

Holding PB2 closed during startup causes the program to skip loading EEPROM values. This can be a troubleshooting option if bad information in EEPROM is suspected.

RIT Operation

RIT is turned On and Off with a TAP of PB1. When enabled, the bottom line of the display shows the transmit frequency (marked with T) and the upper line shows the receive frequency (marked with R). The encoder now adjusts the receive frequency only. RIT can be used to allow fine tuning of the station you are working without moving your transmit frequency.

If RIT is turned off and then back on, the previous offset is restored. RIT is cleared if the band is changed.

RIT is turned off with a TAP of PB1, but it can be cleared to zero offset while remaining enabled with a double TAP (two TAPs in quick succession).

When RIT is turned off, the operating frequency goes back to where it was before RIT adjustments were made.

Finally, when RIT is enabled, a HOLD of PB1 will **swap** the transmit and receive frequencies. This function primarily works to set up split operation, when working DX for example. It works only if the RIT is on. As an example, you hear a DX station on 7010 kHz said to be listening up 2. Turn on the RIT and tune the receiver up 2, or possibly to the offset where you hear other stations working the DX. Now your TX frequency is 7010 kHz and your RX frequency is approximately 7012 kHz. Activate the RX/TX Swap function you will be transmitting on 7012 kHz and listening on 7010 kHz.

Occasionally while trying to work the DX, you may activate the Swap function again, tune around to find where the DX seems to be listening, then activate the Swap again to return to operation with the adjusted split.

Quick tuning rate change

A TAP of PB2 causes the VFO to cycle among three rates with step sizes of 10, 100 and 1000 Hz. Other rates are available from the menu. If you select another rate and tap PB2, you will be back in the 10/100/1000 realm.

Band select

HOLD PB2 to enter the band selection screen. Rotate the encoder to cycle through eleven ham bands 80 through 2 meters. Tap PB2 when the desired band is displayed. The band starting frequencies are hard coded in the software. However, if you change bands, the stored frequency for the band you are leaving becomes the current stored frequency. That way when you return to that band, you are on the frequency you left.

Bands are a convenient way to navigate among ham bands. Use of the appropriate step size and the rotary encoder can be an alternative method to go quickly to a desired frequency area.

Beginning with V1.18, there is a band map array which the user can edit before compiling to omit unwanted bands from the selection sequence.

USB/LSB toggle

A TAP of PB3 causes the VFO to alternate between the USB and LSB modes. The change changes the direction of offset while in CW mode. In CW mode, LSB and USB are often referred to as Normal and Reverse and in the display are tagged as CWL and CWU. The benefit in CW is the ability to listen to either side of zero beat.

MENU:

A HOLD of PB3 enters the menu mode. After a brief message “STEP SIZE” is displayed. Rotate the encoder to choose **STEP SIZE**, **CW PITCH**, **CW/PHONE**, **SAVE STATE**, **SIDETONE**, **ADVANCED** or **EXIT**. In general, TAP PB3 again to select the desired item. Some of them have sub-menu choices as described below.

STEP SIZE: Rotate encoder to cycle through steps from 1 Hz through 1 MHz in decade intervals. TAP PB3 when the desired step value is shown. The step size is shown at the right of the top line on the LCD. Step sizes are displayed as: 1, 10, 100, 1k, 10k, .1M, 1M

CW PITCH: This setting determines the amount of shift from the displayed frequency being used while in CW mode. For example, if the displayed frequency is 7025.000 kHz and the shift is 500 Hz while in CWL mode, the actual output frequency will be 7025.500 kHz.

The pitch is displayed and varied with the rotary encoder. Note that the VFO output frequency also moves so the effect can be heard if the VFO is in use in a receiver. TAP PB3 again to accept the new pitch. Note that limits of 150 Hz to 1000 Hz are enforced.

CW/Phone: This function is a “toggle”. Pressing PB3 swaps to the alternate state. Indication to the user is via the LSB/USB tags in Phone mode which change to CWL and CWU in CW mode. The functional effect is that no CW pitch offset is used in the Phone mode while the CW pitch is used as an offset in CW mode. If you want the output frequency of the VFO to equal the frequency displayed on the LCD, use this function to go to the Phone (USB or LSB) mode.

This function can be accessed more quickly by pressing PB3 three times without entering the menu mode.

SAVE STATE: This menu option saves your current VFO frequency, step size, band selection, CW pitch, CW/Phone mode, sidetone On/Off to EEPROM. The choices made in the ADVANCED menu are also saved. The next time you power up, it will start with the settings that existed when you did your last SAVE. This is what modern transceivers do when you press the power off button.

After writing the current parameters to EEPROM, the program sounds two tones, low and then high, to indicate the writing has taken place.

When writing the data to EEPROM, a flag byte is written with a specific value. On startup, if the value is correct it is assumed that the EEPROM fields contain good data and they are loaded.

Also on startup, if the program finds that the flag byte doesn't find the expected value, it performs a write of the current (startup) parameters. This would normally happen only once – when the program has been installed and executed for the first time.

SIDETONE: The program provides the option of generating a sidetone any time the keyed line input is closed. The pitch is the same as that set in CW pitch for the CW offset value. The SIDETONE menu option toggles the sidetone function between the On and Off states. TAP PB3 when SIDETONE is displayed. The display will briefly show ON or OFF to indicate the new state. If the state is ON, there will also be a brief beep sound.

ADVANCED: Takes you to a sub-menu of configuration choices which are used less often but allow a great degree of customization. See below specifics.

EXIT: If it is desired to leave the menu without making any changes, TAP PB3 while the EXIT option is displayed.

ADVANCED Sub-Menu:

Quadrature? Options are *true* and *false*. The VFO is designed for use with a phasing type receiver and/or transmitter and provides outputs on clocks 0 and 1 that are in quadrature (90 degrees apart). For users not desiring this feature, the quadrature output can be turned off, although there is no harm in leaving it on and unused. When *false* is selected, clock 1 will be OFF.

TX on CLK2? Options are *true* and *false*. Originally, clocks 0 and/or 1 were to be used for both receive and transmit, with appropriate shifts in frequency for RIT and CW pitch occurring between key up and key down. With this option *true*, clock 2 can be used separately for “straight-through” (non-mixing) transmitters. The output is keyed, so it is present only when the key is closed or the PTT is active. When the option is *false*, no output is provided on clock 2.

CLK0/1 KEYED? Options are *true* and *false*. Normally, clocks 0 and 1 are active in both transmit and receive states, shifting frequency as required between the two states for RIT and CW pitch. When the transmit signal is taken from clock 2 per the option above, it may be desirable to turn off clocks 0 and 1 during transmit. One use for this might be to bring about muting of the receiver during transmit. Note that this option will only function when the TX_on_CLK2 option is *true*.

TRIM SIG DIGITS? Options are *true* and *false*. If *true* and a larger step value is chosen, smaller digits are set to zero. For example, if the frequency is 7,025,126 Hz and the step size is changed to 1,000 Hz, the frequency becomes 7,025,000 Hz, taking effect the next time the encoder is moved. If *false*, those less significant digits remain as they are.

ENC DIV FACTOR: This is a number in the range 1 to 255. There is a lot of variation in the number of events a rotary encoder produces per revolution. I've had less expensive ones with 20 to 80 events per turn and I currently use a high-resolution encoder with 512 events per turn. This

can make tuning far too sensitive, so I have created this division factor to correct the problem. It is simply the number of events from the encoder that will result in one step in frequency. Usually a value of 1 is a good starting point. I'm using a value of 7 with my current encoder.

There are a couple of things to keep in mind. First, as you are experimenting with this function, the numbers go into effect in real time, so if you dial up larger numbers, response may appear sluggish. So don't go too high.

Also, there is an additional division when the encoder is used to rotate through menu options. The tuning rate will be about four times as fast as the rate at which menu options change, per amount of rotation.

FREQ MULT x4? Options are *true* and *false*. Some receivers have a divide-by-four logic arrangement in front of a circuit that develops I & Q signals. Since this VFO provides I & Q outputs already, there's generally no need for an output of four times the indicated frequency.

However, one user wanted to use this VFO with his existing hardware which needed the x4 signal. So I have this option. If it is *true*, and your display shows 14,000,000 Hz, your output will be on 56,000,000 Hz. Of course, there are limitations on how high the Si5351a can go so it may fail on the higher bands.

TX ONLY Options are *true* and *false*. This is for the situation where you want a VFO to drive a vintage (or not) transmitter. It should provide output only when the key (or PTT) is closed so it won't interfere with a separate receiver. In this mode, PB1 functions to enable and disable a SPOT function. This function is also handy when you want a frequency source that can be easily switched ON and OFF. The output comes from CLK0, plus CLK1 if in the Quadrature mode.

Send CW Test TXT

This menu item turns on the sending of "VVV TEST " in Morse in one of the output clocks, by keying it off and on. This function was copied from the Elecraft XG3 signal generator. Sometimes when using the Si5351a as a signal source, it's desired to find the signal on a receiver. This function can make it easier to find the signal and possibly less monotonous to listen to.

The program will use CLK0/1 if in TX ONLY mode and CLK2 if in TX_CLK2 mode. If neither mode is selected, the program changes to TX ONLY mode.

The TX OUT line is NOT keyed in this mode.

Press a button or tap the paddle to exit this mode. The VFO will remain in the mode (TX ONLY or TX_CLK2) that it was in.

Exit: Drops out of both the Advanced sub-menu and the higher level Menu, back to normal operation.

Making menu choices permanent:

If you made changes that you want to remain in effect each time you power down and back up, you need to go to the main menu and choose the SAVE STATE option. This will write your changes to EEPROM and they will be recalled at each boot up time. This applies to both the Advanced sub-menu and the main menu.

The keyer function

With V2.0, my stand-alone keyer has been merged into the Si5351a-quad project. Some of its complexity had to be scaled back, but the keyer function still has advanced features. The stand-alone keyer is documented here:

https://github.com/nick6502/Keyer_WA5BDU

Summary of features retained:

Parameters such as speed, sidetone pitch, keyer mode A or B and others can be configured in real time via the paddle. See the “Commands” section for full information.

There are three hard-coded message memories which can be sent by pushbutton.

The keyer detects stuck paddle and locks out keying after 255 elements have been sent. Clears when paddle contacts open.

A hand key mode allows using a straight key or tapping the paddle to send manual Morse.

The keyer generates a sidetone which can be wired to a miniature speaker or connected into a radio’s audio chain. The pitch is adjustable and the sidetone can be muted by a command sequence.

Keying logic is iambic with mode A or B selectable.

Decoded text that you send is sent to the serial port. As a menu option, it can also be sent to the LCD.

Using the keyer

Commands

The **command mode is entered by sending the wait [AS] sign, which I translate to an asterisk**. There’s a small blip of acknowledgement on the speaker and the transmit line is disabled so the rest of the command won’t be sent on the air. Why did I use [AS] for this? Well, if you’re in QSO and are going to pause to address the keyer, it tells the other guy to stand by for a second. And if you really just meant “standby” and didn’t want to be in the command mode – I’ve kept ‘E’ as an invalid command so just sending a single dit exits back to the normal keyer mode.

After the command mode has been entered, one or more additional characters are sent to complete the command sequence. After entering the command mode, the keyer speed is reduced to 22 WPM if it is currently set faster than that.

Note that sending [AS] means sending A and S as one character, as in . - . . .

S – Speed

After the ‘S’, send two digits to indicate the desired speed. If a non-numeric character is entered (other than ‘Q’), there is an error beep and the keyer waits for an acceptable entry. After a successful speed entry, the keyer sends ‘R’.

To cancel the speed function after entering it, send ‘Q’.

After a speed has been entered from the paddle, the speed pot will likely disagree with the programmed speed, so it will be ignored. To restore the speed pot function, just turn the pot about 5% of travel and it will be re-enabled.

D – Display Decoded paddle text on LCD

When enabled, Morse text sent from the paddle is displayed in the lower line of the LCD and scrolls left. The ‘D’ command toggles the function On and Off. After turning it ON, the LCD briefly displays “Morse to LCD”. After turning it OFF, an ‘R’ is sent in Morse to acknowledge the action.

A/B – Mode

To specify keyer Mode A or B, simply enter the command mode and send ‘A’ or ‘B’ as desired. The keyer will respond by sending ‘OK’ and ‘A’ or ‘B’ as applicable.

P – Pitch

To change the sidetone pitch, enter the command ‘P’, then press the dot paddle to increase the pitch or the dash paddle to decrease it. Sample tones are sent while the paddle is held. When the desired pitch is reached, close both paddles to exit the pitch command routine. There’s also a pitch control function available in the VFO menu.

H – Hand Key

To enter the hand key mode, send the ‘H’ command. After the mode is entered, either the dot or the dash contact can be used for manual keying. To exit the hand key mode, close both paddles simultaneously. Note that characters aren’t interpreted in hand key mode, so you must exit the mode to send commands to the keyer.

T – TX Line Logic

This determines the state of the keyed line output under Key Down conditions. Send ‘T’ followed by ‘H’ for HIGH or ‘L’ for LOW. The keyer will respond by sending “TX HI” or “TX

LO” to acknowledge the change. The standard for a keyer is to go LOW on Key Down, which is what a bug or straight key would do. But often a transistor is used to interface between the keyer and transmitter and that may require inverted logic.

O – On Air / Off Air toggle

This command toggles the OnAir flag, which determines whether the TX Out line will change state in response to a key down condition from the keyer or the Key In jack. The keyer responds to the ‘O’ command in morse with ‘Y ‘or ‘N.’ Y means YES, the TX Out line will be keyed and N means NO, it will not. If the response is ‘N’, there’s also a message “ OFF AIR” on the LCD for two seconds.

This affects only the TX Out line, it doesn’t affect keying of the Si5351a outputs.

Sending CW messages

There are three hard-coded messages you can put into the source code. Search the Si5351a_quad.ino file for “msg1”, “msg2”, and “msg3”. Type your own message in between the double quotes to replace the sample messages.

While sending with the paddle, the information at the bottom line at the right changes to ‘KYR’ and stays that way until 3 seconds after you stop using the paddle. During this period, you can press PB1, PB2 or PB3 to send message 1, 2 and 3.

You can change that 3 second delay by revising this statement:

```
#define KYR_hold 3000
```

Where 3000 is the number of milliseconds before reverting back to normal button functions.

Controlling speed from the speed pot

Simply rotate the pot. Note that the speed is displayed on the bottom line of the LCD after it changes. After two seconds with no change, the normal LCD display is restored.

Hardware requirements

A potentiometer for speed control is desirable but not absolutely necessary. A jack for connecting the paddle is required.

The keyer makes use of a Key In line and TX Out line and a speaker, which were already part of the Si5351a VFO design. I used RCA jacks for Key In and TX Out.

The Key In line is for your straight key or bug. The TX Out line is intended to key your transmitter.

Configuration changes users can make by editing the source code:

A person with Arduino programming skills could customize the software to whatever extent desired. But there are also changes a non-programmer could make to customize the program.

These include the starting frequency for each band, the available step sizes and the crystal oscillator reference frequency.

There is a separate configuration file for this purpose, called “Si5351a_quad_config.h”. Some configurable items you can find and edit there are:

Select parallel or I2C type LCD display:

There are three lines in the config file that can be edited to choose which type of display you are using:

```
1) // #include <LiquidCrystal.h> // Remove comment marks '//' if not I2C
   interface
2) #include <LiquidCrystal_I2C.h> // comment out if NOT I2C
3) #define I2C_LCD true // comment out if NOT I2C
```

As-shown, the I2C interface is selected. For the parallel interface, lines 2 and 3 should be “commented out” by adding ‘//’ marks at the front of the line and line 1 should be “uncommented” by removing those marks.

Specify the crystal frequency for the Si5351a:

To do this, edit this line in the config file:

```
#define XTAL_FREQ 24999345 // my specific Si5351a board
```

There is a Calibration section in this manual that describes how you can calculate your actual crystal frequency.

Choose to use a PCF8575 IC for filter selection

If you have the PCF8575 installed in your VFO, leave the following line in your source code. If not, delete it or comment it out with // in front of the line. Note that I put this line in file Si5351a_quad_config.h to make it easier to find:

```
#define RELAY_CONTROL // When defined, do compile the PCF8575 code V1.15
```

The software energizes one output line for each of the 11 bands covered. The output lines of the PCF8575 act like open collector transistors. When ON, they sink current to ground. When OFF, they don’t conduct. They can sink 10 to 20 mA and should not have more than 5 V on them.

The IC has lines 0 through 15, and 0 through 10 are used for the 11 bands addressed by the software, as follows:

Band	Line ON
80	0
60	1

40	2
30	3
20	4
17	5
15	6
12	7
10	8
6	9
2	10

The correct line is selected when you choose a band using the menu function. If you tune to another band by turning the tuning knob, the new band will not be selected.

Some builders will use one filter to cover two bands. To do this, you have the option of editing the map of band versus output line. This is also in file Si5351a_quad_config.h:

```
// USERS: The numbers in the array below designate the lines used for each
// band, in the sequence 80 ,60, 40, 30, 20, 17, 15, 12, 10, 6, 2. If you
// want one output (filter) to cover two bands, you should edit the array.
// For example, if the third filter is to cover both 40 and 30 meters,
// you could edit the array to:
//      {0, 1, 2, 2, 4, 5, 6, 7, 8, 9, 10 }
```

```
uint8_t Relay_lines[11] = {0, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10 };
```

Note that two libraries are needed for the PCF8575 function:

I used the Adafruit library. A search from the IDE didn't work so I went to GitHub and downloaded the .zip file and told the IDE to "import library from .zip". The file has two devices so you have to specify the 8575, not 8574. I think. The main library is Adafruit_PCF8575.h.

There was also another library required to make it work:

```
Adafruit_BusIO_Register.h
```

I used the same method of going to GitHub and installing it using the install from .zip file option.

Note that in the Verbose startup mode, one item displayed is "PCF8575: YES" if it being compiled. There's no mention if it is not being compiled.

Specify the intermediate frequency for superhet operation:

When using a superhet receiver, you can specify an I.F. offset frequency which will be added to the displayed frequency when in the receive mode. To NOT use an offset, simply specify 0 Hz. Edit this line if an I.F. offset is desired:

```
#define IF_OFFSET 0 // enter in Hertz, no commas or decimal, 0 for none
```

Remove unwanted bands from the band selection function

As you rotate the encoder knob to select the desired band, all eleven covered bands appear in sequence. If you don't wish to see all of these bands, you can edit the source code as described below:

Find this statement:

```
boolean bandInclude[11] = {true, false, true, true, true, true, true, true, true, true, true, true, false};
```

It represents do (true) or don't (false) include the band in the band select sequence. The eleven bands are 80, 60, 40, 30, 20, 18, 17, 15, 10, 6, 2. The default is all true.

This option requires editing the source code, specifically by changing 'true' to 'false' for any bands to be locked out. Then compile and load it into your Arduino. Now they won't show up when you turn the knob in the band select menu option.

Summary of RF outputs available and how they may be configured:

- There are three outputs: CLK0, CLK1 and CLK2 (clocks 0, 1 and 2).
- In the most basic mode, clocks 0 & 1 are on the same frequency and at 90 degrees (quadrature) phase difference. This allows their use in a phasing type receiver that can cancel the undesired sideband (or CW image). The same outputs can be used as a transmitter VFO, so the frequency will alternate between key up and key down states in order to accommodate RIT and CW pitch.
- If the receiver of choice is not a phasing receiver, either of clocks 0 or 1 could be used. If desired, the output on clock 1 can be turned off and only clock 0 be used.
- Some people might want a separate output for their transmitter rather than share clocks 0 and/or 1. An option allows the transmit frequency to be output on clock 2. When this option is enabled, the output will be ON in transmit (key down) mode but not in receive mode.
- In conjunction with the above, there is an option to turn clocks 0 and 1 OFF during key down periods. This might serve to mute the receiver, for one thing.

- If the VFO is to be used for a superhet receiver, an intermediate frequency (I.F.) can be specified. It is added to the receive frequency before sending data to the SI5351a. If you are tuned to 7,000,000 kHz and have an I.F. of 455 kHz, your output will be on 7,455,000 Hz.
- If the synthesizer is to be used as a simple VFO for a “straight through” transmitter, the TX ONLY mode is used. Output is on CLK0 (plus CKL1 in Quad mode) when the key is closed and is OFF when it is open.

HW-8 VFO mode

The Heathkit HW-8 QRP transceiver has a VFO that tunes from 8,895.000 kHz to 8,645.000 kHz as the dial is turned from 0 to 250, meaning it tunes in reverse of the dial indication.

In this implementation, the LCD indicates 000.000 kHz to 250.000 kHz while the output varies as noted. Nearly all of the other functions still work as described with the exception of the band selection which is disabled.

CW offset is used and the ability to listen in Normal or Reverse modes is maintained. Also, RIT is functional.

The VFO will not tune below 0 dial indication but will tune above the 250 kHz limit on the high side.

To compile the source code in the HW-8 mode, remove the comment marks (//) from this line in the Si5351a_quad_config.h file:

```
///define HW8
```

Output level:

The Si5351a allows selection of four different output levels. This software selects the highest level. With my oscilloscope, I measured these levels into 50 ohms:

0.77 Vpp, 1.35 Vpp, 1.83 Vpp, 2.09 Vpp This highest reading is about +10 dBm on the fundamental.

If you would like to measure or otherwise experiment with the different levels, there's a disabled routine that can be turned on by removing the comment marks:

```
// do_levels(); // 9/13/2020 - experiment with levels settings
```

Find this line and remove the two forward slashes at the beginning to enable the routine. Then the VFO will start up at the lowest level and with each press of a button advance to the next level and display its value (2 mA, 4 mA, 6, mA, 8 mA). After the highest level is shown, the next press returns to normal operation.

Hardware details:

The Si5351a is a 3.3 V IC controlled by two data lines. Rather than use a 3.3 V Arduino, I used the 5 V version, and my first version of the hardware used a TXS0102 logic level converter.


However, since then complete little Si5351a modules have appeared which aren't much bigger than a postage stamp and include a 3.3 V regulator plus 5V to 3.3V logic level converters and the tiny chips are all soldered in. They're also quite inexpensive.

I tried one with my Arduino program and was able to demo the system with just four interconnecting wires between the Arduino and the synthesizer board:

- A4 to SDA
- A5 to SCL
- GND to GND
- 5 V to 5 V in

It worked. Of course I have no rotary encoder, pushbuttons or display but it came up on its starting frequency of 7025000 kHz and I see CLK0 and CLK1 90 degrees apart on my scope. The USB port powers it fine without the added load of the display, etc.

Below is a photo of the Arduino and Si5351a module with the minimum wires required for programming a frequency. RF output can be taken from the CLK0 & CLK1 pads or from pins in the 0.1" header. Note that I often use the much smaller Arduino Nano but here I'm using the Uno which is easier to mount and has pre-installed 0.1" female headers and a power connector.

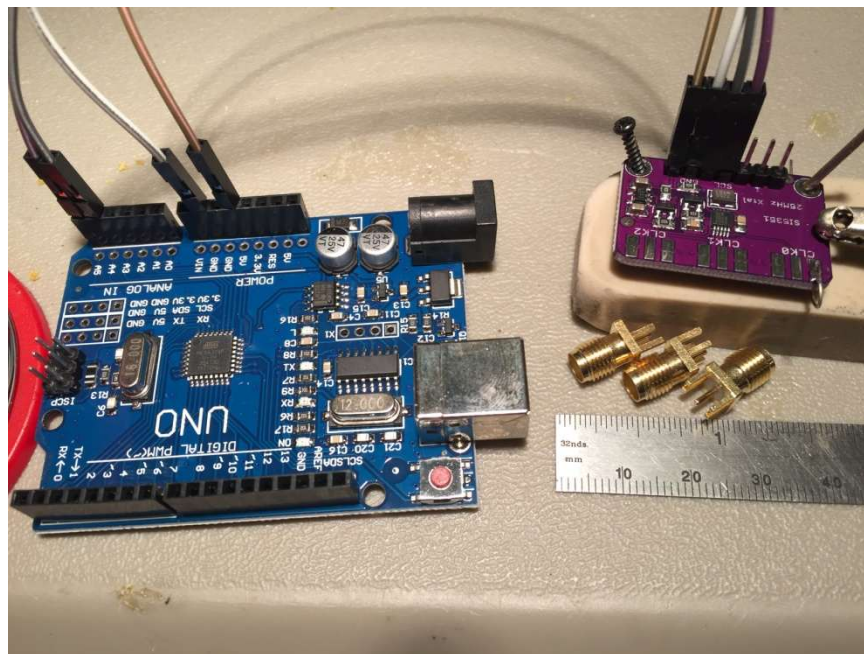

The **rotary encoder** is a Bourns PEC11L-4020F-S0020 encoder with switch from Mouser. No external pull-ups or filtering are used. Internal pull-ups are activated in software. I'm not currently using the switch. UPDATE: After having some encoder problems, I purchased an Oak Grigsby (now Switchcraft) 96Q128-40-00 on the surplus market. It is an optical encoder and requires a 5 V voltage supply. Variations in encoders have been the greatest source of problems among people trying my VFO. I notice that those with detents often behave differently. I use encoders without detents.

Pushbuttons PB1 and PB2 are wired to logic inputs and ground those inputs when the switches are depressed. PB3 has diodes connected from PB1 and PB2 to itself such that pushing PB3 grounds both the PB1 and PB2 logic lines, a condition defined as "PB3". In other words, I'm getting three pushbutton inputs from two logic lines. No physical pull-ups are used – pull-ups are activated in software on the Arduino.

A miniature **speaker or sounder** is connected to D9 for alerts and an optional sidetone. I used a CEM1201(50) sounder from Digikey. Since it only has a 50 ohm resistance and Arduino pins should be kept below 40 mA output, I connected a 200 Ω resistor in series with the speaker. A capacitor of 0.4 uF to 1.0 uF or so could also be instead of the resistor, to limit current..

Of course the user could route the audio into a receiver chain instead of using a speaker within the VFO.


A **reset pushbutton** is optional but handy. I installed one on the rear of the cabinet. You can achieve the same effect by cycling power though. Or press the button on the Arduino, if it is accessible.

Key down or PTT input is provided so the software can shift the frequency by the amount of CW pitch, in the correct direction for USB or LSB receive. It also allows RIT operation. This input uses the D8 line and is active (transmit mode) when LOW.

A **TX_Out** pin echoes the Key Down input but doesn't change state until the TX frequency registers have been sent. Registers can be updated in a couple of milliseconds, but this feature can prevent keying the transmitter while the frequency is changing. It also changes back to its key up state *before* the RX registers are sent. The idea is that your key or keyer can connect to the VFO, and this output then goes to the transmitter.

The **LCD display** I'm using is a somewhat generic 2x16 character display with Hitachi interface and a backlight LED. A photo is shown below. The pin ID's seen in the schematic diagram and wire list are visible. These displays can be purchased with an I2C interface adapter, which simplifies the connections considerably. The minor edit to the source code needed to select one or the other type is described elsewhere in this manual.

In the photo, RIT is ON, so both receive and transmit frequencies are displayed. The 100 Hz step size is in the upper right and mode CW, upper sideband is at the lower right. An asterisk replaces the 'R' on the top line when in the TX ONLY mode.

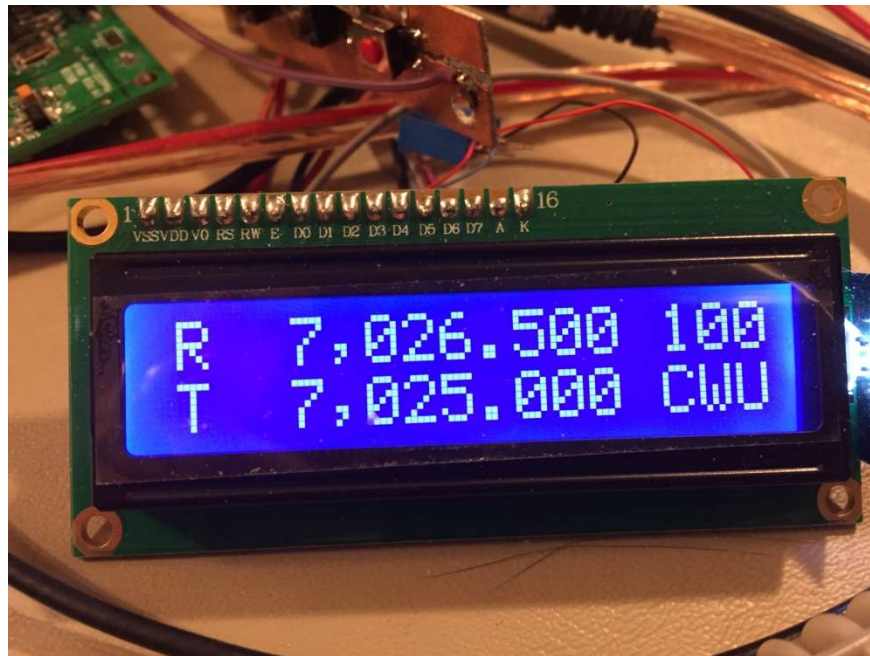

Optional antenna (or filter) selection interface

Use of the PCF8575 interface IC was described earlier. I used one which was pre-mounted on a board about one inch square and has pin headers for I2C inputs and control outputs.

Power source

While I have powered the Arduino plus Si5351a board from a USB port, adding the LCD display and possibly other loads requires that an external power supply be used. The Arduino can accept either a 5 V external power source or an unregulated 8 to 12 VDC source. It has a 5 V regulator on board and can supply the 5 V needed by the display and the Si5351a board.

Coupling RF output

The output of the Si5351a is a square wave going from about 0 V to 3.3 V. As such, it has a DC level of 1.65 VDC. If you are using the output to drive a logic chip, this may be appropriate. In other instances, you may want to add 0.1 uF ceramic capacitors in series with the outputs to block the DC level.

Calibration

The Si5351a module will typically have a 25 MHz or 27 MHz crystal timebase. The actual frequency will likely be off a bit and you can fine tune it in the source code for your specific device.

I determined my actual crystal frequency like this:

Listening on my K3 with the Si5351a set at 7025000 Hz I read 7024816 Hz. So my actual crystal frequency is $25,000,000 * 7,024,816 / 7,025,000$ which gives me 24,999,345. I changed the appropriate line in the source code to this:

```
#define XTAL_FREQ 24999345 // my specific Si5351a board
```

Please note that while in the CW receive mode, the output will be shifted by the value of CW_pitch, so you should take your reading in the “phone” mode or have the key closed while reading the frequency.

Of course I could have used a more accurate standard than the K3 if I'd needed greater accuracy.

Wiring details

Most interconnections are made using 0.1” posts/sockets and DuPont jumpers. A wire list based on the Arduino signal names is presented for this purpose. Although I’ve favored the Arduino Nano in my projects, I’ve actually used a Uno version of the Arduino for my latest version. It’s larger but easier to mount and has 0.1” headers pre-installed.

Arduino pin usage

ID	Name	Usage
D0		
D1		
D2	ENC-A	Rotary encoder (rev 1.9)
D3	ENC-B	Rotary encoder (rev 1.9)
D4	LCD	Paddle dot contact
D5	LCD	Paddle dash contact
D6	LCD	LCD 'E'
D7	LCD	LCD 'RS'
D8	KEY IN	Ground for Key Down.
D9	SPKR	TONE, BEEP_PIN, for Spkr use if desired.
D10	TX_Out	Goes LOW <i>after</i> registers loaded for TX frequency
D11	SW2	SW2 aka PB2
D12	SW1	SW1 aka PB1
D13	LCD	LCD DB7 Also connected to on-board LED
A0	LCD	LCD DB4
A1	LCD	LCD DB5
A2	LCD	LCD DB6
A3	POT_ADC	Keyer speed pot
A4	SDA (I2C)	SDA on Si5351a module, LCD (if I2C), PCF8575 (if used)
A5	SCL (I2C)	SCL on Si5351a module, LCD (if I2C), PCF8575 (if used)
GND	GROUND	GND from power in, display, encoder, SW1, SW2, SW3, Si5351a

Connections designated 'LCD' are for the parallel interface display and are not used if an I2C interface display is used.

And info on the LCD:


This is for the parallel interface version. The I2C version requires just four wires.

LCD Pins:

Pin #	Name	Notes / connections
1	Vss	GND
2	Vdd	+5V
3	Vo	Contrast, +1.15 V from voltage divider (approximate, adjustable)
4	RS	Arduino D7
5	R/W	Jumper to Vss / GND for "write only" LCD
6	E	Arduino D6
7	D0	N/C
8	DB1	N/C
9	DB2	N/C
10	DB3	N/C
11	DB4	Arduino A0 (rev 1.8)
12	DB5	Arduino A1 (rev 1.8)
13	DB6	Arduino A2
14	DB7	Arduino D13
15	A	Backlight LED, 220 Ω then to 5V
16	K	Backlight LED, to GND

Schematic diagram:

(Next page)

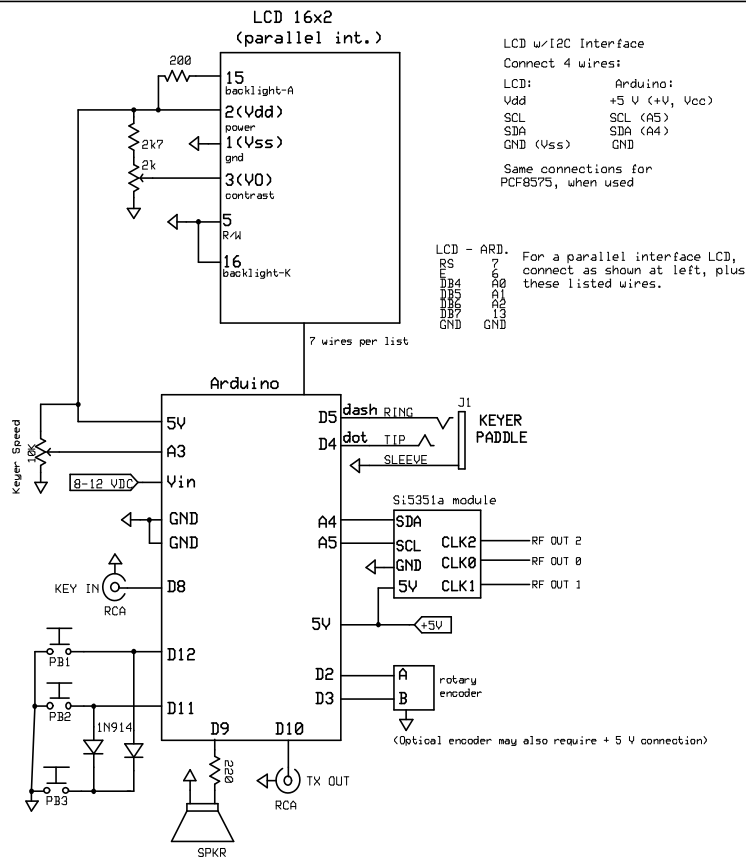

LCD w/I2C Interface
Connect 4 wires:
LCD: Arduino:
Vdd +5 V (+V, Vcc)
SCL SCL (A5)
SDA SDA (A4)
GND (Vss) GND

Same connections for
PCF8575, when used

LCD - ARD.
RS 7
E 6
DB4 A0
DB5 A1
DB6 A2
DB7 A3
GND 13
GND 14

For a parallel interface LCD,
connect as shown at left, plus
these listed wires.

The Arduino can be powered from Vin or 5V pin.
The Arduino supplies +5 V to the LCD and Si5351a.
The Si5351a module includes 3V3 regulator and 3V3 to
5V logic shifters on board.

LCD display may be connected with parallel (7 wire)
configuration, or with 4-wire I2C configuration as shown.
Reset button deleted & paddle jack added Feb 2025
Sideband select relay removed at Rev. 1.2

PCF8575 Relay Control:
When used, connect
four wires, same as
LCD at top right

Nick Kennedy WA5BDU

Si5351a-Arduino interface

Original issue:
1/15/2020

Rev 1.3
4/5/2025

Sheet 1/1

Some specifications:

Frequency range: 3.5 MHz to 150.000 MHz

Resolution / step sizes: 1, 10, 100, 1000, 10,000, 100,000, and 1,000,000 Hz

Controls:

Rotary Encoder

Three pushbuttons

Paddle

Speed pot

Display / indication:

16x2 LCD display with backlight and Hitachi interface. I2C interface can also be used.

Output level:

About 3 V_{p-p}, or 2.09 V_{pp} into 50 Ω . Use a blocking capacitor if the DC component is not desired.

Output is a square wave.

Load resistance:

Some sources suggest that cross-talk and other issues can be minimized by using a load higher than 50 Ω , perhaps 80 Ω . Also, loading problems may be solved by using a buffer, such as a 74LVT04 or another chip in the family.

Current draw:

With an 11 VDC supply, about 70 mA. From a 5 V supply, ~85 mA.

Installing the program on your Arduino board:

- If you don't already have it, download the Arduino IDE at <https://www.arduino.cc/en/main/software>. It's available for Windows, MAC OS X and Linux. There's also a web based version you can use without downloading the program. But I use the local IDE.
- It's an Arduino rule that your source code must be in a folder having the same base name as the source file. In my case, the file is Si5351a_quad.ino so it goes in a folder called Si5351a_quad under my Arduino folder. There's also a configuration file called Si5351a_quad_config.h which goes in the same folder. If you double-click the source file

to start the Arduino and don't have it in the appropriate folder, the IDE will offer to create the folder for you. Either way, go ahead and load the file.

- I suggest running the IDE (integrated development environment) first, before connecting your Arduino, by double-clicking on the source file. Go to the Tools menu and mouse down to "Port" and note the list of COM ports. Then plug in the Arduino, wait a short time and check again. (If your system has to install a new driver for the Arduino, it may take longer than the usual several seconds.) The new port number that appeared is for your Arduino and you should select it.
- Again, go to Tools and mouse down to "Board". Click the item with the name of your board. I have been using both the Nano and the Uno boards in this project.
- Go to Tools again and down to "Processor". I have "ATmega328P (Old Bootloader)" checked. Depending on the source and vintage of your Arduino, it may just be ATmega328P without the Old Bootloader part. If you get a bunch of errors, try the other selection.
- The Tools menu also has an entry for selecting a Programmer. We aren't using an external programmer here and I understand that the choice is irrelevant, but I have "Arduino as ISP" selected.
- Now you're ready to cross your fingers and see if it works. In the Arduino IDE below the menu line is a dark blue bar with some icons at the left. The left-most one is a check mark in a circle called "verify" which tells the IDE to compile the program and check for errors. Next to it is another circle with an arrow to the right called "upload" which tells the IDE to compile the program and if there are no errors, send it to the Arduino. You can try one and then the other, or just go straight to the upload button.
- Any errors will be displayed in red in the bottom window. They can be a bit cryptic.
- The one problem I can foresee as possibly occurring would be "library not found". Most commonly used libraries are installed with the IDE installation. But I don't know if the ones used in this program are all in that category. If you search the source code for "#include", you'll find the list of libraries used. Installing a missing library is fairly well automated, but there are a couple of ways to do it.

Go to Tools>Manage Libraries, and a box with a search field will enter. Type in the name of the missing library and it will be found. Then follow the prompts to install it.

Another, earlier method that still exists is under Sketch>Include Library. It includes a list of libraries and you can scan it for your missing library.

Revisions to the software and this manual

V2.2 April 11, 2025 fixed a few bugs and fine-tuned operation a bit. The worst bug was in the occasional loss of quadrature phase relationship between CLK0 and CLK1.

V2.1 February 14, 2025 Added an option to compile a version which can act as a VFO for the Heathkit HW-8 transceiver.

V2.0 February 11, 2025 Added the Keyer functions. Added a function which keys the output with a repetitive message in Morse. Deleted the sideband select relay.

V1.19 January 9, 2025 Added the TX_ONLY mode plus changed the available steps from tapping PB2 from 10 and 100 to 10, 100 and 1000 Hz.

V1.18 12/11/2024 Add a band map (boolean bandInclude[11]) for locking out certain bands from the band selection menu so user can customize what bands are shown when he turns the dial.

V1.16 & V1.17 I had freq info going to the SI5351a every time through the loop. This can show up as noise in the receiver. Should only update when the key line changes state. I fixed that. Problem noted by Mateusz SQ3MB

V1.15 11/8/2024 Adding control of external filter switching on a per-band basis, for example LPFs in a transmitter. Switching is via a PCF8575 IC which is controlled by I2C and can do I/O on 16 lines. Requested by Matt (Mateusz), SQ3MB. It will be an option, to be compiled if RELAY_CONTROL is defined.