



Configure BMC interface (SG100 and SG1000)

StorageGRID

NetApp
March 02, 2022

This PDF was generated from <https://docs.netapp.com/us-en/storagegrid-116/sg100-1000/changing-root-password-for-bmc-interface-sg1000.html> on March 02, 2022. Always check docs.netapp.com for the latest.

Table of Contents

- Configure BMC interface (SG100 and SG1000) 1
 - Change root password for BMC interface 1
 - Set IP address for BMC management port 2
 - Access BMC interface 4
 - Configure SNMP settings for services appliance 6
 - Set up email notifications for alerts 7

Configure BMC interface (SG100 and SG1000)

The user interface for the baseboard management controller (BMC) on the services appliance provides status information about the hardware and allows you to configure SNMP settings and other options for the services appliance.

Change root password for BMC interface

For security, you must change the password for the BMC's root user.

What you'll need

The management client is using a [supported web browser](#).

About this task

When you first install the appliance, the BMC uses a default password for the root user (`root/calvin`). You must change the password for the root user to secure your system.


Steps

1. From the client, enter the URL for the StorageGRID Appliance Installer:
`https://services_appliance_IP:8443`

For `services_appliance_IP`, use the IP address for the appliance on any StorageGRID network.

The StorageGRID Appliance Installer Home page appears.

2. Select **Configure Hardware > BMC Configuration**.

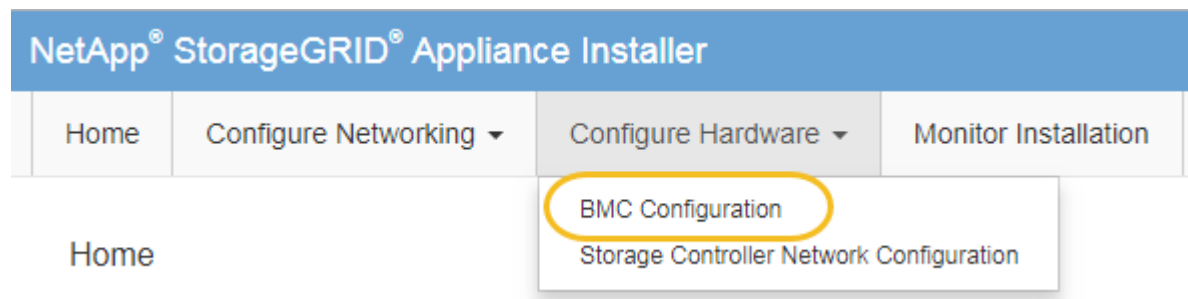

The Baseboard Management Controller Configuration page appears.

3. Enter a new password for the root account in the two fields provided.

Baseboard Management Controller Configuration

User Settings

Root Password
Confirm Root Password

4. Click **Save**.

Set IP address for BMC management port

Before you can access the BMC interface, you must configure the IP address for the BMC management port on the services appliance.

What you'll need

- The management client is using a [supported web browser](#).
- You are using any management client that can connect to a StorageGRID network.
- The BMC management port is connected to the management network you plan to use.

SG100 BMC management port



SG1000 BMC management port



About this task



For support purposes, the BMC management port allows low-level hardware access. You should only connect this port to a secure, trusted, internal management network. If no such network is available, leave the BMC port unconnected or blocked, unless a BMC connection is requested by technical support.


Steps

1. From the client, enter the URL for the StorageGRID Appliance Installer:
`https://services_appliance_IP:8443`

For *services_appliance_IP*, use the IP address for the appliance on any StorageGRID network.

The StorageGRID Appliance Installer Home page appears.

2. Select **Configure Hardware > BMC Configuration**.

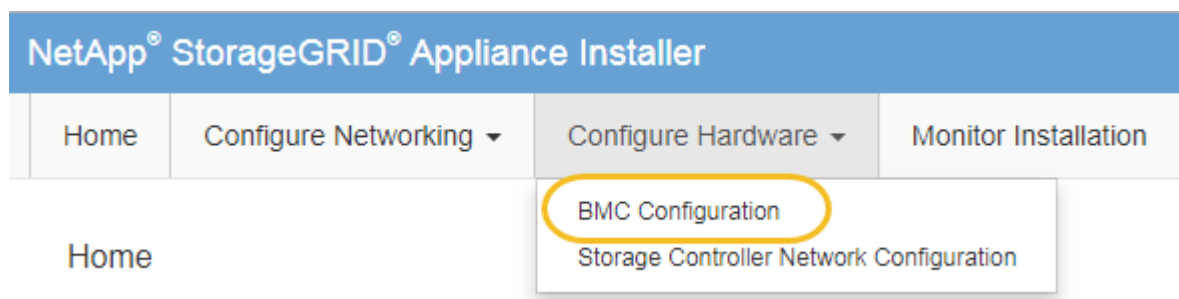

The Baseboard Management Controller Configuration page appears.

3. Make a note of the IPv4 address that is automatically displayed.

DHCP is the default method for assigning an IP address to this port.



It might take a few minutes for the DHCP values to appear.

Baseboard Management Controller Configuration

LAN IP Settings

IP Assignment	<input type="radio"/> Static <input checked="" type="radio"/> DHCP
MAC Address	d8:c4:97:28:50:62
IPv4 Address (CIDR)	10.224.3.225/21
Default gateway	10.224.0.1

Cancel	Save
--------	------

4. Optionally, set a static IP address for the BMC management port.



You should either assign a static IP for the BMC management port or assign a permanent lease for the address on the DHCP server.

- a. Select **Static**.
- b. Enter the IPv4 address, using CIDR notation.
- c. Enter the default gateway.

LAN IP Settings

IP Assignment	<input checked="" type="radio"/> Static <input type="radio"/> DHCP
MAC Address	d8:c4:97:28:50:62
IPv4 Address (CIDR)	10.224.3.225/21
Default gateway	10.224.0.1

Cancel Save

d. Click **Save**.

It might take a few minutes for your changes to be applied.

Access BMC interface

You can access the BMC interface on the services appliance using the DHCP or static IP address for the BMC management port.

What you'll need

- The management client is using a [supported web browser](#).
- The BMC management port on the services appliance is connected to the management network you plan to use.

SG100 BMC management port



SG1000 BMC management port



Steps

1. Enter the URL for the BMC interface:

`https://BMC_Port_IP`

For *BMC_Port_IP*, use the DHCP or static IP address for the BMC management port.

The BMC sign-in page appears.



If you haven't yet configured BMC_Port_IP follow the instructions in [Configure BMC interface \(SG100/SG1000\)](#). If you are unable to follow that procedure due to a hardware problem, and have not yet configured a BMC IP address, you might still be able to access the BMC. By default, the BMC obtains an IP address using DHCP. If DHCP is enabled on the BMC network, your network administrator can provide the IP address assigned to the BMC MAC, which is printed on the label on the front of the SG6000-CN controller. If DHCP is not enabled on the BMC network, the BMC will not respond after a few minutes and assign itself the default static IP 192.168.0.120. You might need to connect your laptop directly to the BMC port, and change the networking setting to assign your laptop an IP such as 192.168.0.200/24, in order to browse to 192.168.0.120.

2. Enter the root username and password, using the password you set when you changed the default root password:

root

password



NetApp®

☐ Remember Username

Sign me in

[I forgot my password](#)

3. Click **Sign me in**

The BMC dashboard appears.



- Optionally, create additional users by selecting **Settings > User Management** and clicking on any “disabled” user.



When users sign in for the first time, they might be prompted to change their password for increased security.

Related information

[Change root password for the BMC interface](#)

Configure SNMP settings for services appliance

If you are familiar with configuring SNMP for hardware, you can use the BMC interface to configure the SNMP settings for the services appliance. You can provide secure community strings, enable SNMP Trap, and specify up to five SNMP destinations.

What you'll need

- You know how to access the BMC dashboard.
- You have experience in configuring SNMP settings for SNMPv1-v2c equipment.



BMC settings made by this procedure might not be preserved if the appliance fails and has to be replaced. Make sure you have a record of all settings you have applied, so they can be easily reapplied after a hardware replacement if necessary.

Steps

- From the BMC dashboard, select **Settings > SNMP Settings**.
- On the SNMP Settings page, select **Enable SNMP V1/V2**, and then provide a Read-Only Community String and a Read-Write Community String.

The Read-Only Community String is like a user ID or password. You should change this value to prevent

intruders from getting information about your network setup. The Read-Write Community String protects the device against unauthorized changes.

3. Optionally, select **Enable Trap**, and enter the required information.



Enter the Destination IP for each SNMP trap using an IP address. Fully qualified domain names are not supported.

Enable traps if you want the services appliance to send immediate notifications to an SNMP console when it is in an unusual state. Traps might indicate link up/down conditions, temperatures exceeding certain thresholds, or high traffic.

4. Optionally, click **Send Test Trap** to test your settings.
5. If the settings are correct, click **Save**.

Set up email notifications for alerts

If you want email notifications to be sent when alerts occur, you must use the BMC interface to configure SMTP settings, users, LAN destinations, alert policies, and event filters.




BMC settings made by this procedure might not be preserved if the appliance fails and has to be replaced. Make sure you have a record of all settings you have applied, so they can be easily reapplied after a hardware replacement if necessary.

What you'll need

You know how to access the BMC dashboard.

About this task

In the BMC interface, you use the **SMTP Settings**, **User Management**, and **Platform Event Filters** options on the Settings page to configure email notifications.

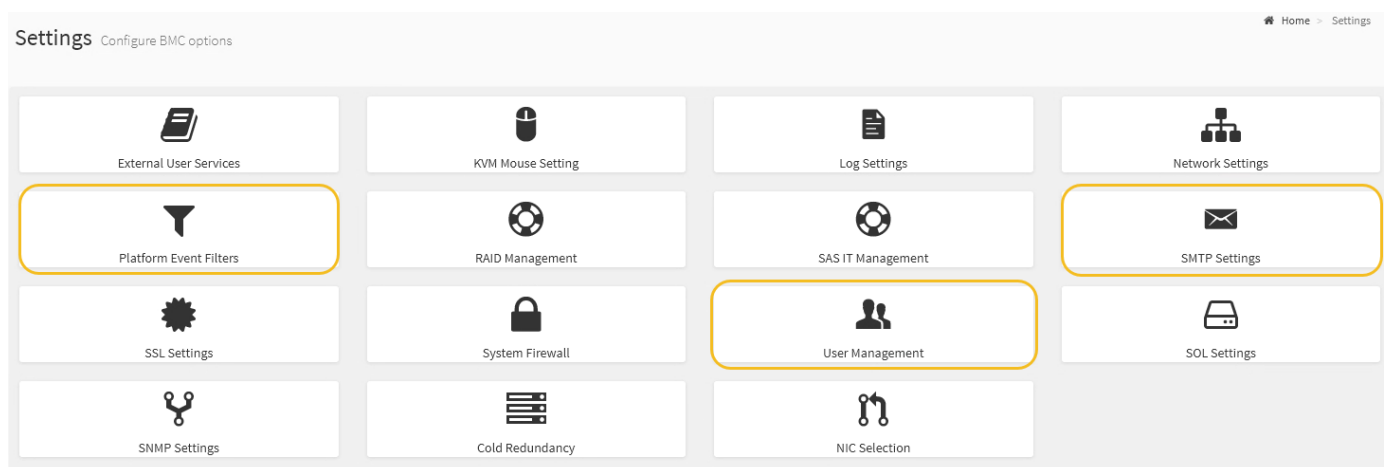

Steps

1. Configure the SMTP settings.
 - a. Select **Settings > SMTP Settings**.
 - b. For Sender Email ID, enter a valid email address.

This email address is provided as the From address when the BMC sends email.

2. Set up users to receive alerts.

- a. From the BMC dashboard, select **Settings > User Management**.
- b. Add at least one user to receive alert notifications.

The email address you configure for a user is the address the BMC sends alert notifications to. For example, you could add a generic user, such as “notification-user,” and use the email address of a technical support team email distribution list.

3. Configure the LAN destination for alerts.

- a. Select **Settings > Platform Event Filters > LAN Destinations**.
- b. Configure at least one LAN destination.
 - Select **Email** as the Destination Type.
 - For BMC Username, select a user name that you added earlier.
 - If you added multiple users and want all of them to receive notification emails, you must add a LAN Destination for each user.
- c. Send a test alert.

4. Configure alert policies so you can define when and where the BMC sends alerts.

- a. Select **Settings > Platform Event Filters > Alert Policies**.
- b. Configure at least one alert policy for each LAN destination.
 - For Policy Group Number, select **1**.
 - For Policy Action, select **Always send alert to this destination**.
 - For LAN Channel, select **1**.
 - In the Destination Selector, select the LAN destination for the policy.

5. Configure event filters to direct alerts for different event types to the appropriate users.

- a. Select **Settings > Platform Event Filters > Event Filters**.
- b. For Alert Policy Group Number, enter **1**.
- c. Create filters for every event you want the Alert Policy Group to be notified about.
 - You can create event filters for power actions, specific sensor events, or all events.
 - If you are uncertain which events to monitor, select **All Sensors** for Sensor Type and **All Events** for Event Options. If you receive unwanted notifications, you can change your selections later.

Copyright Information

Copyright © 2022 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system- without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

Trademark Information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.