

## Description of the communication protocol to the Positive Grid Spark 40 amplifier

By Paul Hamshere with a great acknowledgement to Yury Tsybizov (ytsibizov) and Justin Nelson (jrnelson). Thanks to Ian McKellar for pointing out the MIDI SysEx similarity and that the packed data format is actually based on msgpack ([www.msgpack.org](http://www.msgpack.org))

### Overview of communication

The Spark 40 amplifier communicates with the Spark app over Bluetooth. This seems to be 'serial bluetooth' for the Android app and 'BLE' for iOS.

The app sends messages to change preset, change an effect, change the parameter for an effect (eg gain). It can also request the details of each hardware preset, the name of the amp and the serial number.

In return, the amp will send messages when one of the presets is changed or when a knob is moved. This allows the app to mimic the settings on the amp at all points.

When the app starts, it asks the Spark for its name, serial number and all four hardware presets.

Then communication is event driven - either from the app or the amp.

### Overview of message format

The bluetooth messages are exchanged in a specific data format. The terminology below is one I created to help understand the underlying structure.

Messages are exchanged in blocks. Each block contains one or more chunks. Each chunk contains data - which is all, or part of, the message.

Blocks and chunks appear to have size limits which means: messages span chunks, and chunks span blocks.

The simple messages are from the app to the amp, and are usually just one block, one chunk and the data.

Sending a preset, or receiving a preset, is more complex and involves multiple blocks and chunks.

Figure 1 shows the relationship between the blocks, chunks and data that make up the message.

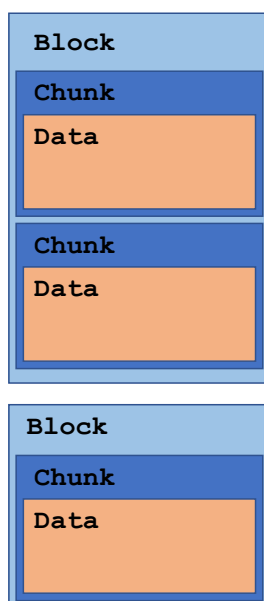


Figure 1

When the app sends a message then the Spark (usually) responds with an acknowledgement message.

Blocks sent to the amp seem to have a maximum size of 0xad.

Blocks sent from the amp seem to have a maximum size of 0x6a.

### Block format

Each block has a header and then contains the chunk / data.

Offset	Length	Description
0	4	0x01fe0000
4	2	Direction of the message: 0x41ff - from Spark 0x53fe - to Spark
6	1	Size of this block (including this header)
7	9	Zeros
10		The chunk / data

Figure 2 shows an example of a block header.

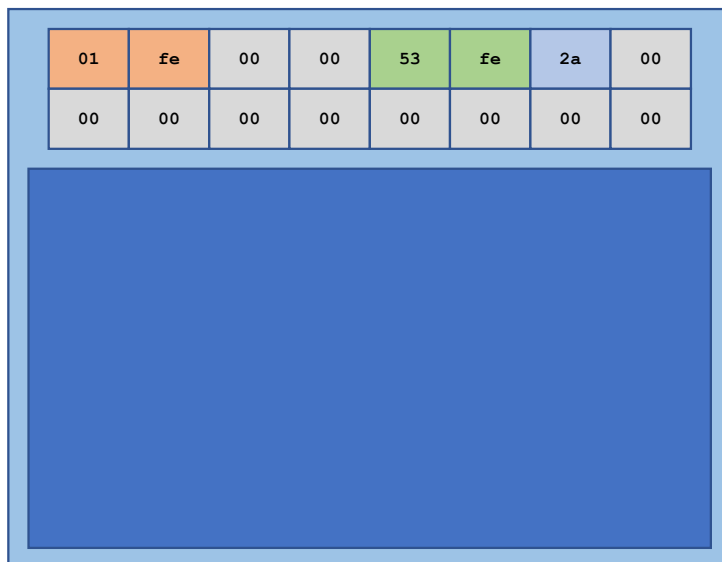


Figure 2

### Chunk format

Offset (in block)	Length	Description
10	2	0xf001
12	1	Sequence number
13	1	Checksum (8 bit Xor)
14	1	Command
15	1	Sub-command
16		Data
	1	0xf7


The chunk starts with fixed bytes of 0xf001 and ends with the byte 0xf7. This is very like the MIDI SysEx wrapper of 0xf0 and 0xf7.

The header includes a sequence number which increments with each message (so it remains consistent across chunks and blocks for the same message). When the amp acknowledges a message it contains the sequence number in the acknowledgement message.

The checksum is an 8-bit xor checksum of the data part - it excludes the chunk header and the f7 trailer.

The command and sub-command describe what the change is to the amp or from the amp (eg change gain on the amp model).

Figure 3 shows a block header, chunk header and trailer.

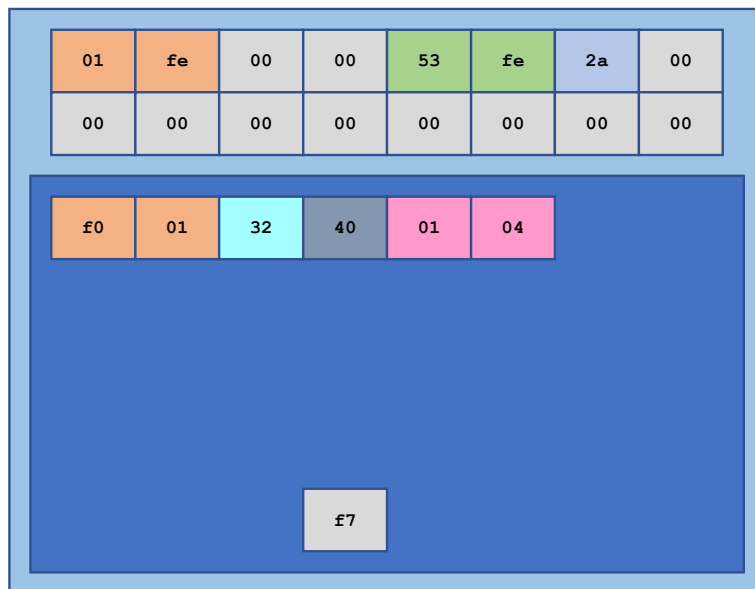

**Figure 3**


#### **Data format**

The message is a sequence of variables. Each variable has a distinct pattern which identifies it.

The variables are stored in the data section in sequences of 8 bytes. In the data section bytes have the top bit set to zero, so only carry 7 bits of data. The remaining 8<sup>th</sup> bit is packed into another byte which only contains the 8<sup>th</sup> bit of each of the bytes in the sequence.

So the format is the special byte containing the 8<sup>th</sup> bits, followed by seven data bytes.

Figure 4 shows the structure of the sequence - the '8<sup>th</sup> bits' byte followed by up to 7 data bytes.

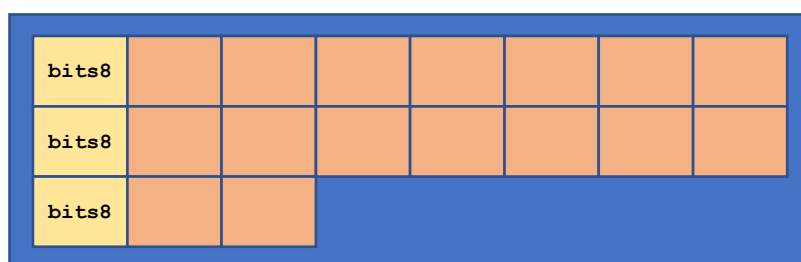

**Figure 4**

Figure 3 shows an example of the mapping for the missing 8<sup>th</sup> bit. In this example, the data in the fourth data byte in the first sequence should have its 8<sup>th</sup> bit added back (represented by bit 3 being set in the '8<sup>th</sup> bits' byte. And the same for the third and sixth bytes in the second sequence (bits 2 and 5 set in the '8<sup>th</sup> bits' byte.




**Figure 5**

To interpret the data it is therefore essential to add back these bits.

### Overall structure

Figure 6 shows a representation of the overall structure, including headers, trailers and format bytes. Figure 7 shows an example of the headers and footers.

These both show a single block / single chunk message and summarise the description so far.

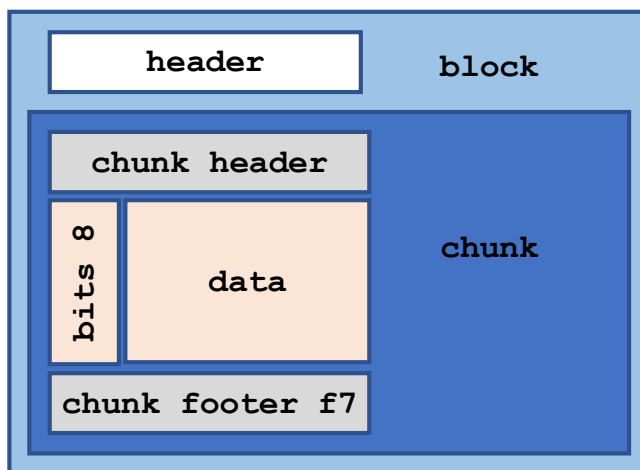

**Figure 6**

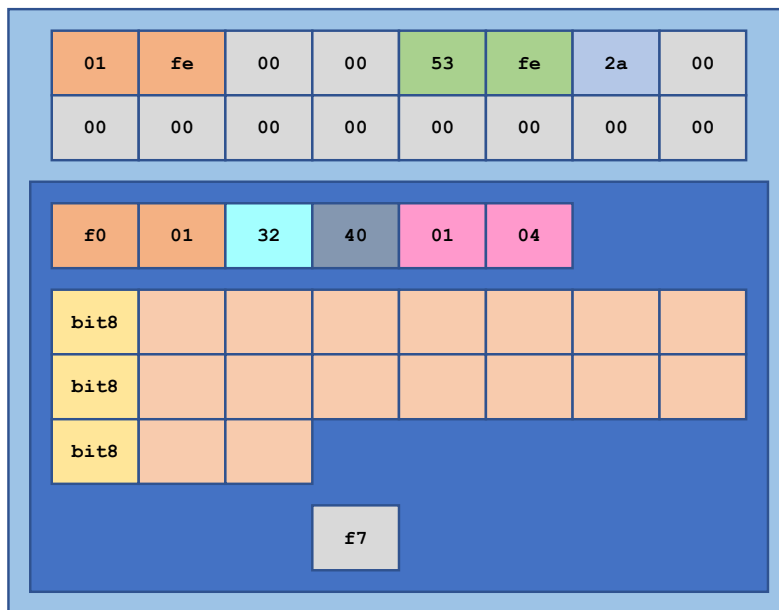


Figure 7


### Variable types

The data format is based on msgpack ([www.msgpack.org](http://www.msgpack.org)).

The data in the message is a set of variables - integers, strings, Booleans and floating-point values.

Type	Length	Description	First byte range
Integer	1	Data value from 0x00 to 0x0f? How is this distinguished from 0x00 as the start of an integer. How is this distinguished from the first byte of the alternative short string?	0x00 - 0x7f
Fixed array size	1	Data value from 0x00 to 0x0f, stored as data value + 0x90.	0x90-0x9f
Short string (1-31 characters)	n+1	First byte is the length + 0xa0, then the bytes of the string in ASCII encoding	0xa0 - 0xbf
Alternative short string (1-31 characters)	n+2	First byte is the length, next byte is the length + 0xa0, then the bytes of the string in ASCII encoding (Unsure if this is limited to 15 characters but it would be logical given the apparent use of the first byte to describe the data type.)	0x01 - 0x1f
Long string	n+2	First byte is 0x59, then the length, then the bytes of the string	0xd9
Boolean Off	1	A single byte representing effect Off	0xc2
Boolean On	1	A single byte representing effect On	0xc3
Float	5	A float value - 4 bytes big endian with a preceding byte of 0xca	0xca

Figure 8 shows these data types in a visual format

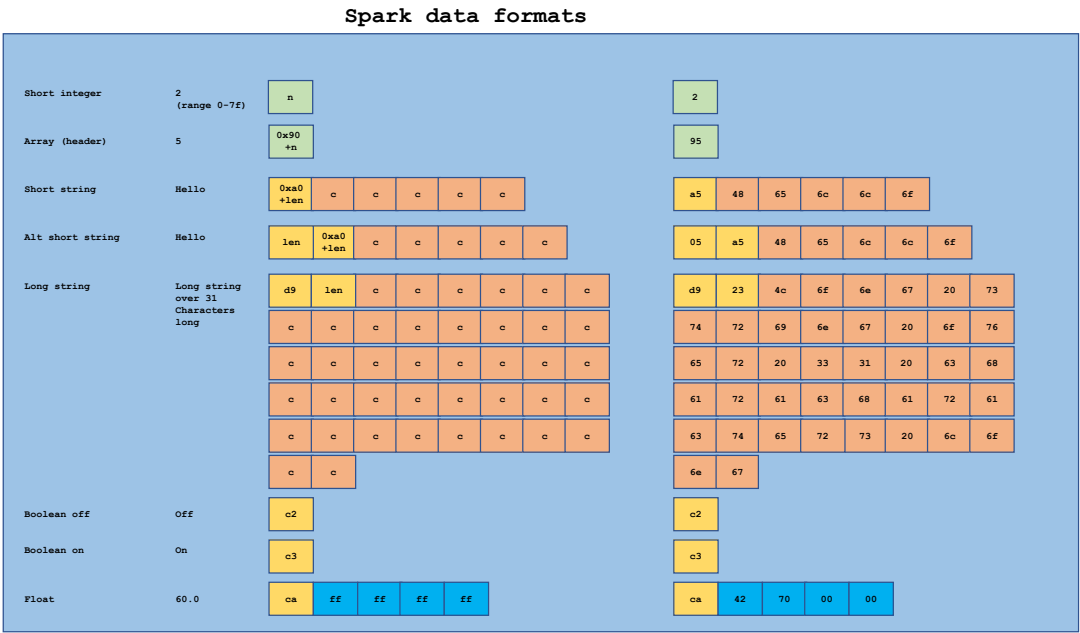

**Figure 8**

Figure 9 shows a completed message, with all headers, footers, data and format bytes.

This is data with a string "LA2AComp", a short integer of 1 and a float represented by 0x3f4d42c4 (with the 8<sup>th</sup> bit added back to the final 0x44)



**Figure 9**

Figure 10 shows this with explanatory labelling.

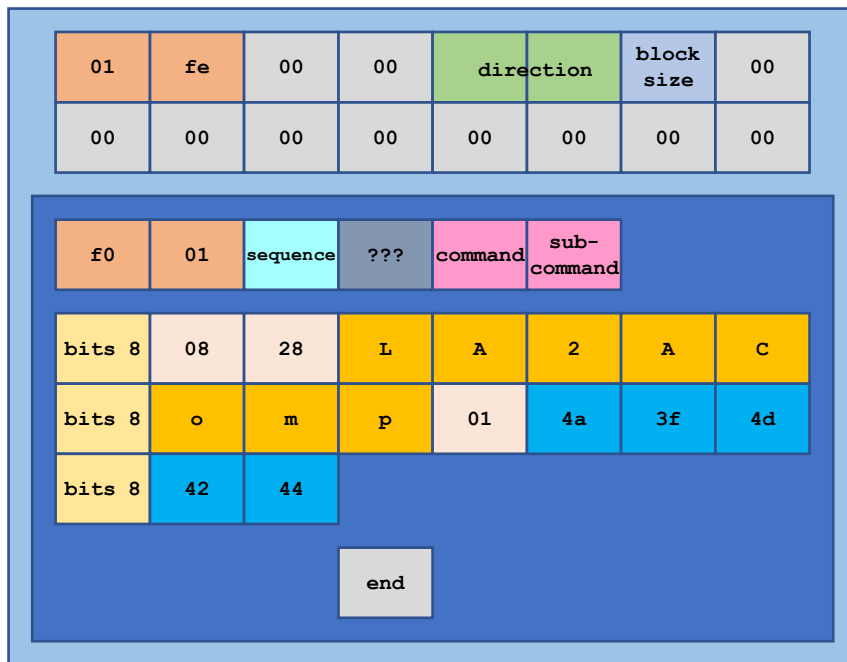


Figure 10

### Float representation

Floats are based on the 4-byte IEEE-754 encoding. As with all the other data section formats, the bytes are 7-bit only and the missing 8<sup>th</sup> bits are in the first byte of any 8 byte sequence.

Figure 11 shows how this works.

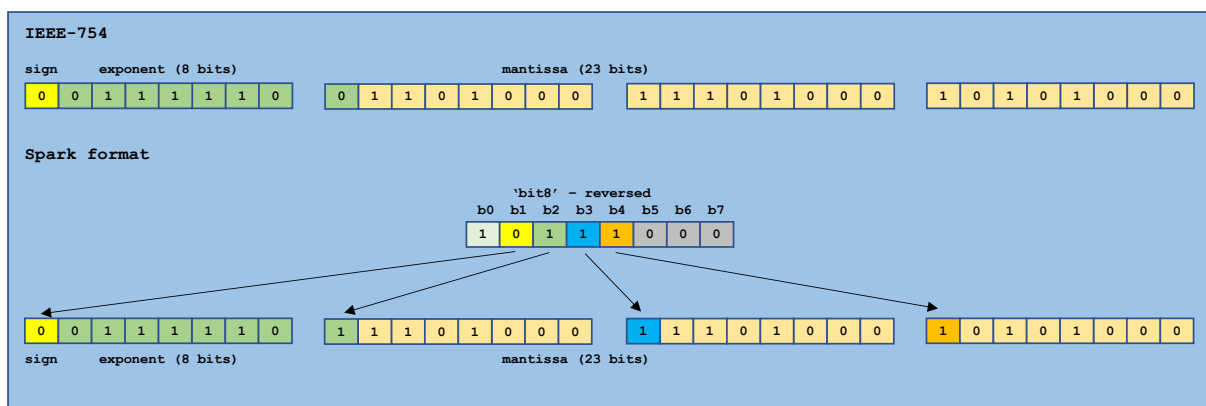


Figure 11

Special values are shown below

#### Effects with toggle switches (such as Multi Head delay)

Hex	Float	Special meaning
00 00 00 00	0.0	False (for a toggle switch)
3f 00 00 00	0.5	True (for a toggle switch)

#### Digital delay

Hex	Float	Special meaning
3f 00 33 33		1s
3f 06 19 19		500ms
3f 07 4c 4c		200ms
3f 07 19 19		50ms

#### Multi Head delay

Hex	Float	Special meaning
3e 4c 4c 01		Head 0 + 2
3e 4c 4c 01		Head 0 + 1 (but the same hex as above - missing 8 <sup>th</sup> bit in the data I extracted?)
3f 19 19 01		Head 1 + 2
3f 4c 4c 01		Head 0 + 1 + 2

#### Messages that span chunks and blocks

The only messages large enough to span multiple chunks and blocks are those sending a complete preset, either to or from the amp. They can be identified by the command and sub-command (see later).

In these cases, the first three bytes of the data (after the format byte) represent which sub-chunk this is.

The size of the chunks and the data in these bytes depends on the direction of the message.

#### Multi-chunk messages sent to the amp

In this case, whilst the message spans multiple chunks, each chunk fills a block. The maximum sending block size is 0xad bytes, so the size of the chunk is 0x9b.

This is calculated as block size - block header - chunk header - chunk trailer (0xad - 0x10 - 0x06 - 0x01 = 0x9b)

The first four bytes of the chunk data are as in the table below - representing the format byte and the multi-chunk sub-header.

Offset (in chunk)	Length	Description
6	1	First '8 <sup>th</sup> bits' byte
7	1	Total number of chunks
8	1	Reference number of this chunk (0 to total number of chunks - 1)
9	1	Size of this chunk (in data bytes which therefore excludes counting the '8 <sup>th</sup> bit' bytes, max 0x80)

The number of data bytes remaining is a count of useful data bytes - total bytes less the '8<sup>th</sup> bit' bytes.



Figure 12 shows the overall structure of a multi-chunk message sent to the amp.

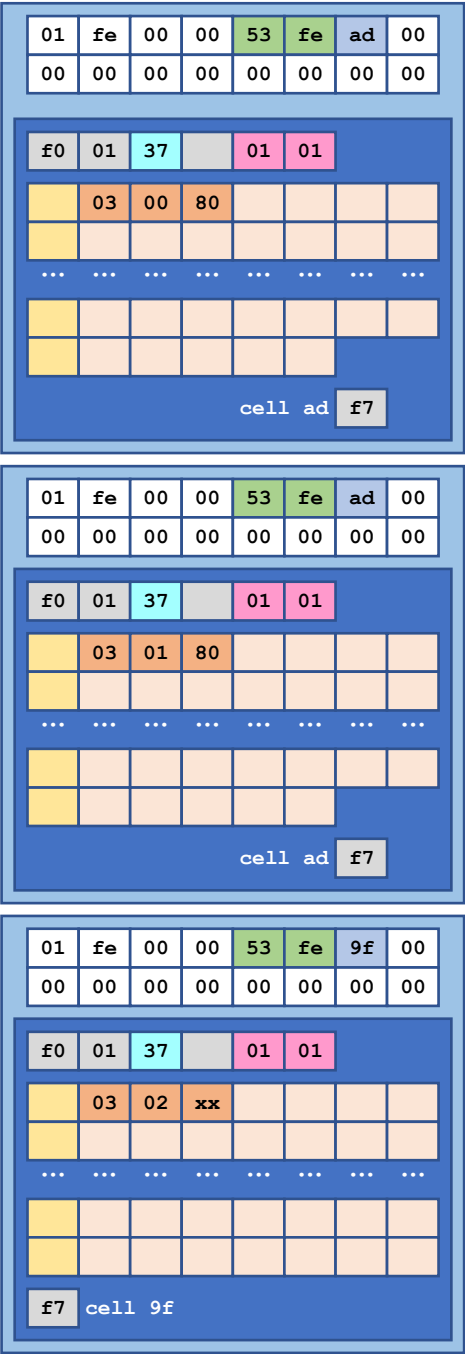


Figure 12

### Multi-chunk messages received from the amp

In this case, whilst the message spans multiple chunks, there are multiple chunks in each block. Each chunk has a maximum size of 0x27 and the block has a maximum size of 0x6a.

The first four bytes of the chunk data are as in the table below - representing the format byte and the multi-chunk sub-header.

Offset (in chunk)	Length	Description
6	1	First format byte
7	1	Total number of chunks
8	1	Reference number of this chunk (0 to total number of chunks - 1)
9	1	For all chunks: Size of this chunk (in useful data bytes, so ignoring the '8 <sup>th</sup> bit' bytes)

The number of data bytes remaining is a count of bytes excluding the '8<sup>th</sup> bit' bytes and is present in each chunk. In all full chunks this is 0x19.

Figure 13 shows the overall structure of a multi-chunk message received from the amp.

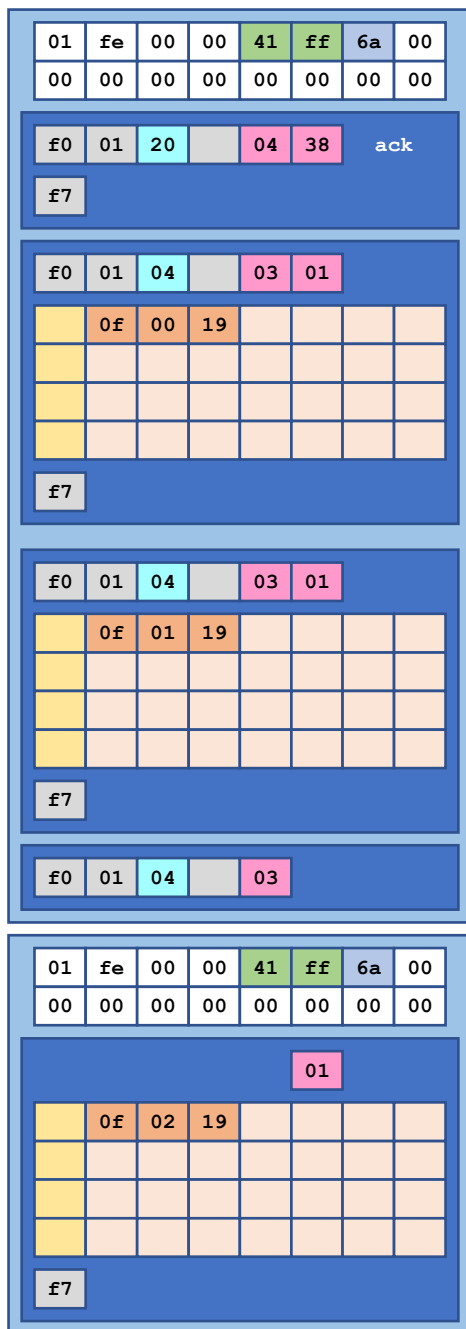


Figure 13

## Commands sent to the amp

These are the commands which can be sent to the amp and the responses expected.

Command	Sub-command	Meaning	Response
01	01	Send preset details to the amp	Acknowledge message
01	04	Send new effect parameter	None
01	06	Change effect to new effect	Acknowledge message
01	15	Enable / disable an effect	Acknowledge message
01	38	Change to a different preset	Acknowledge message
02	01	Get preset details from amp	Acknowledge message followed by preset information
02	10	Get current hardware preset number	Acknowledge message followed by preset number information
02	11	Get amp name ("Spark 40")	Acknowledge message followed by amp name
02	23	Get amp serial number	
02	24	<b>Unknown</b>	
02	2F	<b>Unknown</b>	

## Commands sent from the amp

These are the commands / responses sent from the amp. Response to the amp are unknown.

Command	Sub-command	Meaning	Response
03	06	Change of effect (amp model) on the amp	None
03	15	Enable / disable an effect	None
03	27	Store current preset in hardware preset	None
03	37	Change of effect parameter on amp	None
03	38	Change of preset selected on the amp	None
03	63	Tap tempo	None
03	01	Response to a preset information query command	None
04	As per command received by amp	Acknowledgement from the amp that it received a message.	

## Detail of commands

0x0101 - see later

0x0104 - change effect parameter

Type	Length	Content	Example
Alternative short string	n+2	Effect name	0x04 0xa4 Twin
Integer	1	Number of the parameter starting at 0	0x00 (Gain)
Float	5	Value for the parameter (0-1.0, with 1.0 representing 10 in the user interface)	0xca 0x3f 0x21 0x72 0x13



**0x0106 - swap effects**

Type	Length	Content	Example
Alternative short string	n+2	Old effect name	0x08 0xa8 LA2AComp
Alternative short string	n+2	New effect name	0x08 0xa8 BlueComp

**0x0115 - enable / disable effect**

Type	Length	Content	Example
Alternative short string	n+2	New effect name	0x08 0xa8 BlueComp
Boolean	1	New status 0xc2 off 0xc3 on	0xc3

**0x0138 - change to a new hardware preset**

Type	Length	Content	Example
Integer	1	0	0x00
Integer	1	New preset number 0-3, 0x7f	0x03

**0x0201 - get preset information**

Type	Length	Content	Example
Integer	2	factory hardware preset number 0x00-0x03  current preset 0x7f  current live preset 0x0100  current hardware stored preset 0x80- 0x83	0x00 0x03
Short integer	1 x 34	34 bytes of 0x00	0x00

**0x0211 - get amp name**

No data in message for this command

**0x0223 - get amp serial number**

No data in message for this command

**0x0224 - unknown command**

Not known what this command does

Type	Length	Content	Example
Fixed array	1	0x94	0x94 (4)
Integer	1	0x00	0x00
Integer	1	0x01	0x01
Integer	1	0x02	0x02
Integer	1	0x03	0x03

**0x0306 - change of effect (amp model) on the amp**

Type	Length	Content	Example
Alternative short string	n+2	Old amp name	0x0d 0xad GK800
Alternative short string	n+2	New amp name	0x05 0xa5 Twin

When this is sent to the app, the app responds by sending five parameter messages back to the amp (0x0104). These cover the five parameters (gain, bass, middle, treble and volume). It is not clear how these parameter values are derived.

**0x0315 - enable / disable effect**

Type	Length	Content	Example
Alternative short string	n+2	New effect name	0x08 0xa8 BlueComp
Boolean	1	New status 0xc2 off 0xc3 on	0xc3

Only seems to come from the amp when using the Mod or Delay knobs.

**0x0327 - current preset stored to hardware on the amp**

Type	Length	Content	Example
Integer	1	0	0x00
Integer	1	Number of the preset where settings are stored	x02 (2)

**0x0337 - change of parameter for effect on the amp**

Type	Length	Content	Example
Alternative short string	n+2	Effect name	0x04 0x24 Twin
Integer	1	Parameter number	0x00 (0) (Gain) <b>OR</b> 0x03 (3) (Bass) <b>OR</b> 0x04 (4) (Master)
Float	5	New value	0xca 0x3e 0x6d 0x5b 0x37

**0x0338 - change of preset selected on the amp**

Type	Length	Content	Example
Integer	1	0	0x00
Integer	2	Number of the new preset	0x02 (2)

**0x0363 - tap tempo**

Type	Length	Content	Example
Float	5	New tempo value	0xca 0x3e 0x6d 0x5b 0x37

### 0x04nn - acknowledgement

This has command 0x04 and the same sub-command as was issued to the amp. It has the same sequence number as the command issued to the app.

There is no body to this message - just the chunk header and the trailer (0xf7)

### 0x0101 - send preset

A new preset is a multi-chunk message, so the first three bytes of each new chunk are the chunk sub-header.

The preset format contains data for the preset, and then information for each effect - 7 in total.

Each effect contains data for the effect, and then a value for each parameter in the effect.

The final byte of the preset is currently unknown. It could be a checksum but doesn't impact the data sent as the preset.

Type	Length	Content	Example
Integer	1	0	0x00
Integer	1	If saving to a hardware preset location this is 0-3 otherwise 0x7f	0x7f
Long string	36	UUID of preset	
Short string	n+1	Name	0xad Spooky Melody
Short string	n+1	Version	0xa3 0.7
Short string / Long string	n+1 / n+2	Description	0xb7 Description for Alternative Preset 1
Short string	n+1	Icon name	0xa8 icon.png
Float	5	BPM	0xca 0x42 0x70 0x00 0x00 (60.0)
Fixed array	1	Number of effects - always 7.	0x97 (7)
Effect 0		See below	
Parameter 0		See below	
Parameter 1		See below	
Effect 1		See below	
Parameter 0		See below	
Effect 2		See below	
Effect 3		See below	
Effect 4		See below	
Effect 5		See below	
Effect 6		See below	
Integer	1	Unknown	

Each effect then has a section describing the effect (7 effects in total)

Type	Length	Content	Example
Short string	n+1	Effect name	0x08 0xa8 BlueComp
Boolean	1	Status 0xc2 off 0xc3 on	0xc3 (On)
Fixed array	1	Number of parameters for this effect	0x94 (4)

And then each parameter has a section describing the value for the parameter



Type	Length	Content	Example
Integer	1	Parameter reference	0x01 (1)
Fixed array	1	Number of values (always 1)	0x91
Float	5	Value for this parameter	0xca 0x3e 0x35 0x55 0x3f

It seems this is a broken implementation of msgpack, because the fixed array for each parameter looks more like it should be key:value pairs, and the fixed array wrapping the float seems redundant.

The current interpretation breaks msgpack because what should be:

```
fixmap(3) = {{1, float}, {2, float}, {3, float}}
```

is actually:

```
fixarray(3)=[0, fixarray(1)[float], 1], fixarray(1)[float], 2, fixarray(1)[float]
```

Parsing can be achieved by ignoring any integer within a fixarray and by extracting the float from within a fixarray of length 1 - but this is a workaround for a broken implementation.

It seems the amp and app do not pack or unpack msgpack properly - they must be looking for the specific data rather than unpacking and indexing the unpacked data

Figure 14 shows the overall structure.

Hardware preset number	00	7f												
UUID	0	7	0	7	9	0	6	3	-	9	4	A	9	-
	4	1	B	1	-	A	B	1	D	-	0	2	C	B
	5	D	0	0	7	9	0							
Name	D	a	r	k		S	o	u	l					
Version	0	.	7											
Description	1	-	C	l	e	a	n							
Icon	i	c	o	n	.	p	n	g						
BPM	120													
Number of effects (fixarray)	97													

Effect name	b	i	a	s	.	n	o	i	s	e	g	a	t	e
On / off	C3													
Number of parameters (fixarray)	93													
Parameter 0	00	91	0.52											
Parameter 1	01	91	0.88											
Parameter 2	02	91	0.13											

.....

Effect name	b	i	a	s	.	r	e	v	e	r	b			
On / off	C3													
Number of parameters (fixarray)	97													
Parameter 0	00	91	0.52											
...	...	...	...	...	...	...								
Parameter 6	06	91	0.13											

Unknown filler	17													
----------------	----	--	--	--	--	--	--	--	--	--	--	--	--	--

Figure 14

## **Appendix 1 - Preset locations**

The amp has 4 presets which can be selected from the top panel. These are represented by presets 0-3 in this document.

There is also preset 7f which is the current 'in memory' preset - this is the one which holds whatever the app sends over.

It is possible to save this to any of the hardware preset locations - just use the 'send new preset' command with the preset location between 0 and 3.

Normally the preset command sends preset 7f and then selects preset 7f as the active one, but it doesn't have to be that way - it can send it to any preset location.

## Appendix 2 - Effect and amp names

### Noisegate

Name	Spark name
Noisegate	bias.noisegate

### Compressors

Name	Spark name
LA Comp	LA2AComp
Sustain Comp	BlueComp
Red Comp	Compressor
Bass Comp	BassComp
Optical Comp	BBEOpticalComp

### Drive

Name	Spark name
Booster	Booster
Tube Drive	DistortionTS9
Over Drive	Overdrive
Fuzz Face	Fuzz
Black Op	ProCoRat
Bass Muff	BassBigMuff
Guitar Muff	GuitarMuff
Bassmaster	MaestroBassmaster
SAB Driver	SABdriver

### Amps

Name	Spark name
Silver 120	RolandJC120
Black Duo	Twin
AD Clean	ADClean
Match DC	94MatchDCV2
Tweed Bass	Bassman
AC Boost	AC Boost
Checkmate	Checkmate
Two Stone SP50	TwoStoneSP50
American Deluxe	Deluxe65
Plexiglass	Plexi
JM45	OverDrivenJM45
Lux Verb	OverDrivenLuxVerb
RB 101	Bogner
British 30	OrangeAD30
American High Gain	AmericanHighGain
SLO 100	SLO100
YJM100	YJM100
Treadplate	Rectifier
Insane	EVH
Switch Axe	SwitchAxeLead
Rocker V	Invader
BE 101	BE101
Pure Acoustic	Acoustic
Fishboy	AcousticAmpV2
Jumbo	FatAcousticV2
Flat Acoustic	FlatAcoustic
RB-800	GK800
Sunny 3000	Sunny3000
W600	W600
Hammer 500	Hammer500

## Modulation

Name	Spark name
Tremolo	Tremolo
Chorus	ChorusAnalog
Flanger	Flanger
Phaser	Phaser
Vibrato	Vibrato01
UniVibe	UniVibe
Cloner Chorus	Cloner
Classic Vibe	MiniVibe
Tremolator	Tremolator
Tremolo Square	TremoloSquare

## Delay

|

Name	Spark name
Digital Delay	DelayMono
Echo Filt	DelayEchoFilt
Vintage Delay	VintageDelay
Reverse Delay	DelayReverse
Multi Head	DelayMultiHead
Echo Tape	DelayRe201

## Reverb

Name	Spark name
All Reverbs	bias.reverb

### Appendix 3 - app startup messages









These are the messages sent when the app connects to the Spark amp.

Direction	Command / subcommand	Description	Example
To amp	0x0211	Get amp name	
From amp	0x0311	Amp name	0x08 Spark 40
To amp	0x0224	<b>Unknown</b>	0x14 0x00 0x01 0x02 0x03
From amp	0x0223	Get serial number	Serial number 0x77
To amp	0x0201	Get preset 0	
From amp	0x0301	Preset 0	
To amp	0x0201	Get preset 1	
From amp	0x0301	Preset 1	
To amp	0x0201	Get preset 2	
From amp	0x0301	Preset 2	
To amp	0x0201	Get preset 3	
From amp	0x0301	Preset 3	
To amp	0x0210		
From amp	0x0310		
To amp	0x022f		

#### Appendix 4 – Calculating effective data bytes from total number of bytes including format byte

This visualises how to calculate the number of data bytes to go into the multi-chunk sub-header:

$$\text{total\_bytes} - \text{int} \left( \frac{\text{total\_bytes} + 2}{8} \right)$$

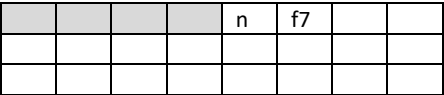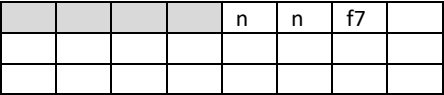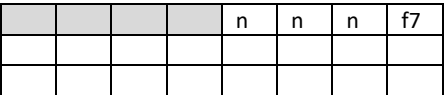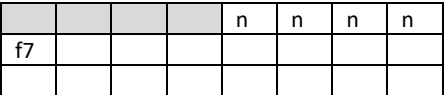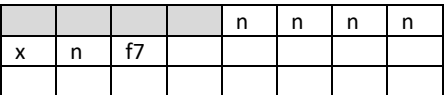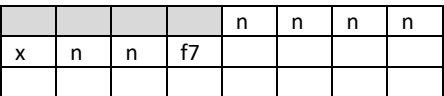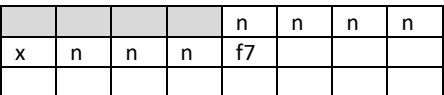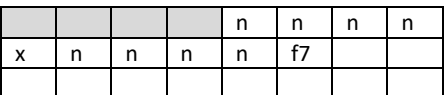	bytes	bytes+2	int( (bytes+2) / 8)	bytes – int( (bytes+2) / 8)
	1	3	0	1
	2	4	0	2
	3	5	0	3
	4	6	0	4
	6	8	1	5
	7	9	1	6
	8	10	1	7
	9	11	1	8

<table><tr><td></td><td></td><td></td><td></td><td>n</td><td>n</td><td>n</td><td>n</td></tr><tr><td>x</td><td>n</td><td>n</td><td>n</td><td>n</td><td>n</td><td>f7</td><td></td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table>					n	n	n	n	x	n	n	n	n	n	f7										10	12	1	9
				n	n	n	n																					
x	n	n	n	n	n	f7																						
<table><tr><td></td><td></td><td></td><td></td><td>n</td><td>n</td><td>n</td><td>n</td></tr><tr><td>x</td><td>n</td><td>n</td><td>n</td><td>n</td><td>n</td><td>n</td><td>f7</td></tr><tr><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table>					n	n	n	n	x	n	n	n	n	n	n	f7									11	13	1	10
				n	n	n	n																					
x	n	n	n	n	n	n	f7																					
<table><tr><td></td><td></td><td></td><td></td><td>n</td><td>n</td><td>n</td><td>n</td></tr><tr><td>x</td><td>n</td><td>n</td><td>n</td><td>n</td><td>n</td><td>n</td><td>n</td></tr><tr><td>f7</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr></table>					n	n	n	n	x	n	n	n	n	n	n	n	f7								12	14	1	11
				n	n	n	n																					
x	n	n	n	n	n	n	n																					
f7																												
<table><tr><td></td><td></td><td></td><td></td><td>n</td><td>n</td><td>n</td><td>n</td></tr><tr><td>x</td><td>n</td><td>n</td><td>n</td><td>n</td><td>n</td><td>n</td><td>n</td></tr><tr><td>x</td><td>n</td><td>f7</td><td></td><td></td><td></td><td></td><td></td></tr></table>					n	n	n	n	x	n	n	n	n	n	n	n	x	n	f7						14	16	2	12
				n	n	n	n																					
x	n	n	n	n	n	n	n																					
x	n	f7																										



## **Appendix 5 - TODO**

What I still don't understand:

- \* What the byte 0x11 is for in each pedal preset.

It is msgpack for an array of size 1! Actually 0x91.

- \* Whether the nibble or byte data type really exists

Not in msgpack - it is a range 0x00 to 0x7f.

- \* Why the chunk header sometimes contains the count of data bytes remaining (excluding format bytes) and sometimes doesn't

It always does - but sometimes that is 0x80 which is shown as 0x00 in the 7bit / 8bit encoding scheme

- \* What the format bytes are really used for, especially the one in front of the chunk header - it seems to have a special meaning

It is the 7bit/8 bit encoding!

- \* What that final byte is for in the preset - a checksum? If so it isn't checked

Sometimes MIDI SysEx has a checksum, so probably that

- \* What the byte after the sequence byte is for

Still a mystery!

## Appendix 6 - SysEx 7bit/8bit encoding functions

The best reference I could find is in the Arduino MIDI library and refers to Ruin & Wesen's SysEx encoder/decoder - <http://ruinwesen.com>

Sadly this reference is broken so there is no clarity on whether this encoding has a recognised name.

Ian McKellar

<https://git.sr.ht/~ianloic/spark-usb-midi>

```
def decode_block(block: bytes)->bytes:
    assert(len(block) > 0)
    top = block[0]
    bottom = block[1:]
    assert(len(bottom) <= 7)
    decoded = []
    for i, b in enumerate(bottom):
        if top & (2**i):
            decoded.append(b | 2**7)
        else:
            decoded.append(b)
    return bytes(decoded)
```

### My code

<https://github.com/paulhamsh/Spark-Parser/blob/main/MidiControl/SparkClass.py>

```
chunk_len = len (chunk)
num_seq = int ((chunk_len + 6) / 7)
bytes7 = b''

for this_seq in range (0, num_seq):
    seq_len = min (7, chunk_len - (this_seq * 7))
    bit8 = 0
    seq = b''
    for ind in range (0, seq_len):
        dat = chunk[this_seq * 7 + ind]
        if dat & 0x80 == 0x80:
            bit8 |= (1<<ind)
        dat &= 0x7f
        seq += bytes([dat])
    bytes7 += bytes([bit8]) + seq

chunk_len = len (data7bit)
num_seq = int ((chunk_len + 7) / 8)
data8bit = b''
for this_seq in range (0, num_seq):
    seq_len = min (8, chunk_len - (this_seq * 8))
    seq = b''
    bit8 = data7bit[this_seq * 8]
    for ind in range (0, seq_len-1):
        dat = data7bit[this_seq * 8 + ind + 1]
        if bit8 & (1<<ind) == (1<<ind):
            dat |= 0x80
        seq += bytes([dat])
    data8bit += seq
```

## Arduino MIDI

[https://github.com/FortySevenEffects/arduino\\_midi\\_library/blob/master/src/MIDI.cpp](https://github.com/FortySevenEffects/arduino_midi_library/blob/master/src/MIDI.cpp)

```
/*! \brief Encode System Exclusive messages.
SysEx messages are encoded to guarantee transmission of data bytes higher than
127 without breaking the MIDI protocol. Use this static method to convert the
data you want to send.
\param inData The data to encode.
\param outSysEx The output buffer where to store the encoded message.
\param inLength The length of the input buffer.
\param inFlipHeaderBits True for Korg and other who store MSB in reverse order
\return The length of the encoded output buffer.
@see decodeSysEx
Code inspired from Ruin & Wesen's SysEx encoder/decoder - http://ruinwesen.com
*/
unsigned encodeSysEx(const byte* inData,
                    byte* outSysEx,
                    unsigned inLength,
                    bool inFlipHeaderBits)
{
    unsigned outLength = 0;    // Num bytes in output array.
    byte count = 0;           // Num 7bytes in a block.
    outSysEx[0] = 0;

    for (unsigned i = 0; i < inLength; ++i)
    {
        const byte data = inData[i];
        const byte msb = data >> 7;
        const byte body = data & 0x7f;

        outSysEx[0] |= (msb << (inFlipHeaderBits ? count : (6 - count)));
        outSysEx[1 + count] = body;

        if (count++ == 6)
        {
            outSysEx += 8;
            outLength += 8;
            outSysEx[0] = 0;
            count = 0;
        }
    }
    return outLength + count + (count != 0 ? 1 : 0);
}

/*! \brief Decode System Exclusive messages.
SysEx messages are encoded to guarantee transmission of data bytes higher than
127 without breaking the MIDI protocol. Use this static method to reassemble
your received message.
\param inSysEx The SysEx data received from MIDI in.
\param outData The output buffer where to store the decrypted message.
\param inLength The length of the input buffer.
\param inFlipHeaderBits True for Korg and other who store MSB in reverse order
\return The length of the output buffer.
@see encodeSysEx @see getSysExArrayLength
Code inspired from Ruin & Wesen's SysEx encoder/decoder - http://ruinwesen.com
*/
unsigned decodeSysEx(const byte* inSysEx,
                    byte* outData,
                    unsigned inLength,
                    bool inFlipHeaderBits)
{
    unsigned count = 0;
    byte msbStorage = 0;
    byte byteIndex = 0;

    for (unsigned i = 0; i < inLength; ++i)
    {
```

```
    if ((i % 8) == 0)
    {
        msbStorage = inSysEx[i];
        byteIndex = 6;
    }
    else
    {
        const byte body      = inSysEx[i];
        const byte shift     = inFlipHeaderBits ? 6 - byteIndex : byteIndex;
        const byte msb       = byte(((msbStorage >> shift) & 1) << 7);
        byteIndex--;
        outData[count++] = msb | body;
    }
}
return count;
}
```

## Appendix 7 - msgpack

This format is described at:

[www.msgpack.org](http://www.msgpack.org)

<https://github.com/msgpack/msgpack/blob/master/spec.md>

There are multiple implementations and the python one is obtained by:

```
python -m pip install msgpack
```

The Spark data is not an exact msgpack implementation because it does not start as an array, and the effect and effect parameters are malformed as arrays.

The data is like this:

```
\x97
  \xaebias.noisegate
  \xc2
  \x93
    \x00
    \x91
      \xca>\r\xa1\xec
    \x01
    \x91
      \xca>f\x08\xd1
    \x02
    \x91
      \xca\x00\x00\x00\x00
```

This should be an array of 7 elements - one for each effect. Then each effect has three values - name, on/off status, an array of parameters - best as a key/value pair except that msgpack doesn't allow integers as keys.

But the array content is like this:

```
['bias.noisegate',
True,
[0, [0.1201], 1],
[0.3314],
2,
[0.0000]
```

Partly because the array is really three entries per pedal, not one, and partly because each parameter is two entries not one.