

Application Note **179**

Cortex-M3 Embedded Software Development

Document number: ARM DAI 0179B

Issued: March 2007

Copyright ARM Limited 2007

The ARM logo, consisting of the letters 'ARM' in a bold, sans-serif font.

Application Note 179

Cortex-M3 Embedded Software Development

Copyright © 2007 ARM Limited. All rights reserved.

Release information

The following changes have been made to this Application Note.

Change history

Date	Issue	Change
January 2007	A	First release (withdrawn)
March 2007	B	Second release

Proprietary notice

Words and logos marked with ® or © are registered trademarks or trademarks owned by ARM Limited, except as otherwise stated below in this proprietary notice. Other brands and names mentioned herein may be the trademarks of their respective owners.

Neither the whole nor any part of the information contained in, or the product described in, this document may be adapted or reproduced in any material form except with the prior written permission of the copyright holder.

The product described in this document is subject to continuous developments and improvements. All particulars of the product and its use contained in this document are given by ARM in good faith. However, all warranties implied or expressed, including but not limited to implied warranties of merchantability, or fitness for purpose, are excluded.

This document is intended only to assist the reader in the use of the product. ARM Limited shall not be liable for any loss or damage arising from the use of any information in this document, or any error or omission in such information, or any incorrect use of the product.

Confidentiality status

This document is Open Access. This document has no restriction on distribution.

Feedback on this Application Note

If you have any comments on this Application Note, please send email to errata@arm.com giving:

- the document title
- the document number
- the page number(s) to which your comments refer
- an explanation of your comments.

General suggestions for additions and improvements are also welcome.

ARM web address

<http://www.arm.com>

Table of Contents

1	The Cortex-M3	4
1.1	Nested Vectored Interrupt Controller (NVIC)	4
1.2	Memory Protection Unit (MPU)	4
1.3	Debug Access Port (DAP)	4
1.4	Memory Map	4
2	Developing Software for Cortex-M3	6
2.1	Exception handling	6
2.2	Memory Protection Unit (MPU)	9
2.3	Stack and Heap Configuration	10
2.4	Instruction Set Support	12
2.5	Bit-Banding	14
2.6	Execution Modes	15
2.7	Supervisor Calls (SVC)	15
2.8	System Timer (SysTick)	17
2.9	RVCT 3.0 Options	18
3	Moving Existing ARM Projects to the Cortex-M3	19
3.1	General code modifications	19
3.2	Changes to startup code	20
3.3	Changes to Exception Handling	20
3.4	Retargeting for new device	21
3.5	Exploiting new features of the Cortex-M3	21
4	Debugging with the Cortex-M3	22

1 The Cortex-M3

The ARM Cortex-M3™ is a high performance, low cost and low power 32-bit RISC processor. The Cortex-M3 processor executes purely Thumb-2 instructions and does not support the ARM instruction set. The Cortex-M3 processor is based on the ARM v7-M architecture and has an efficient Harvard 3-stage pipeline core. It also features hardware divide and low-latency ISR (Interrupt Service Routine) entry and exit.

As well as the CPU core, the Cortex-M3 processor includes a number of other components. These included a Nested Vectored Interrupt Controller (NVIC), an optional Memory Protection Unit (MPU), Timer, Debug Access Port (DAP) and optional Embedded Trace Macrocell (ETM). The Cortex-M3 also has a fixed memory map.

1.1 Nested Vectored Interrupt Controller (NVIC)

Depending on the silicon manufacturer's implementation, the NVIC can support up to 240 external interrupts with up to 256 different priority levels, which can be dynamically reprioritized. It supports both level and pulse interrupt sources. The processor state is automatically saved by hardware on interrupt entry and is restored on interrupt exit. The NVIC also supports tail-chaining of interrupts.

The use of an NVIC in the Cortex-M3 means that the vector table for a Cortex-M3 is very different to previous ARM cores. The Cortex-M3 vector table contains the address of the exception handlers and ISR, not instructions as most other ARM cores do. The initial stack pointer and the address of the reset handler must be located at 0x0 and 0x4 respectively. These values are then loaded into the appropriate CPU registers at reset.

1.2 Memory Protection Unit (MPU)

The MPU is an optional component of the Cortex-M3. If included, it provides support for protecting regions of memory through enforcing privilege and access rules. It supports up to 8 different regions which can be split into a further 8 sub-regions, each sub-region being one eighth the size of a region.

1.3 Debug Access Port (DAP)

The debug access port uses an AHB-AP interface to communicate with the processor and other peripherals. There are two different supported implementations of the Debug Port, the Serial Wire JTAG Debug Port (SWJ-DP) and the Serial Wire Debug Port (SW-DP). Your Cortex-M3 implementation might contain either of these depending on the silicon manufacturer's implementation.

1.4 Memory Map

Unlike most previous ARM cores, the overall layout of the memory map of a device based around the Cortex-M3 is fixed. This allows easy porting of software between different systems based on the Cortex-M3. The address space is split into a number of different sections; this is shown in Figure 1.1 and described in Table 1.1.

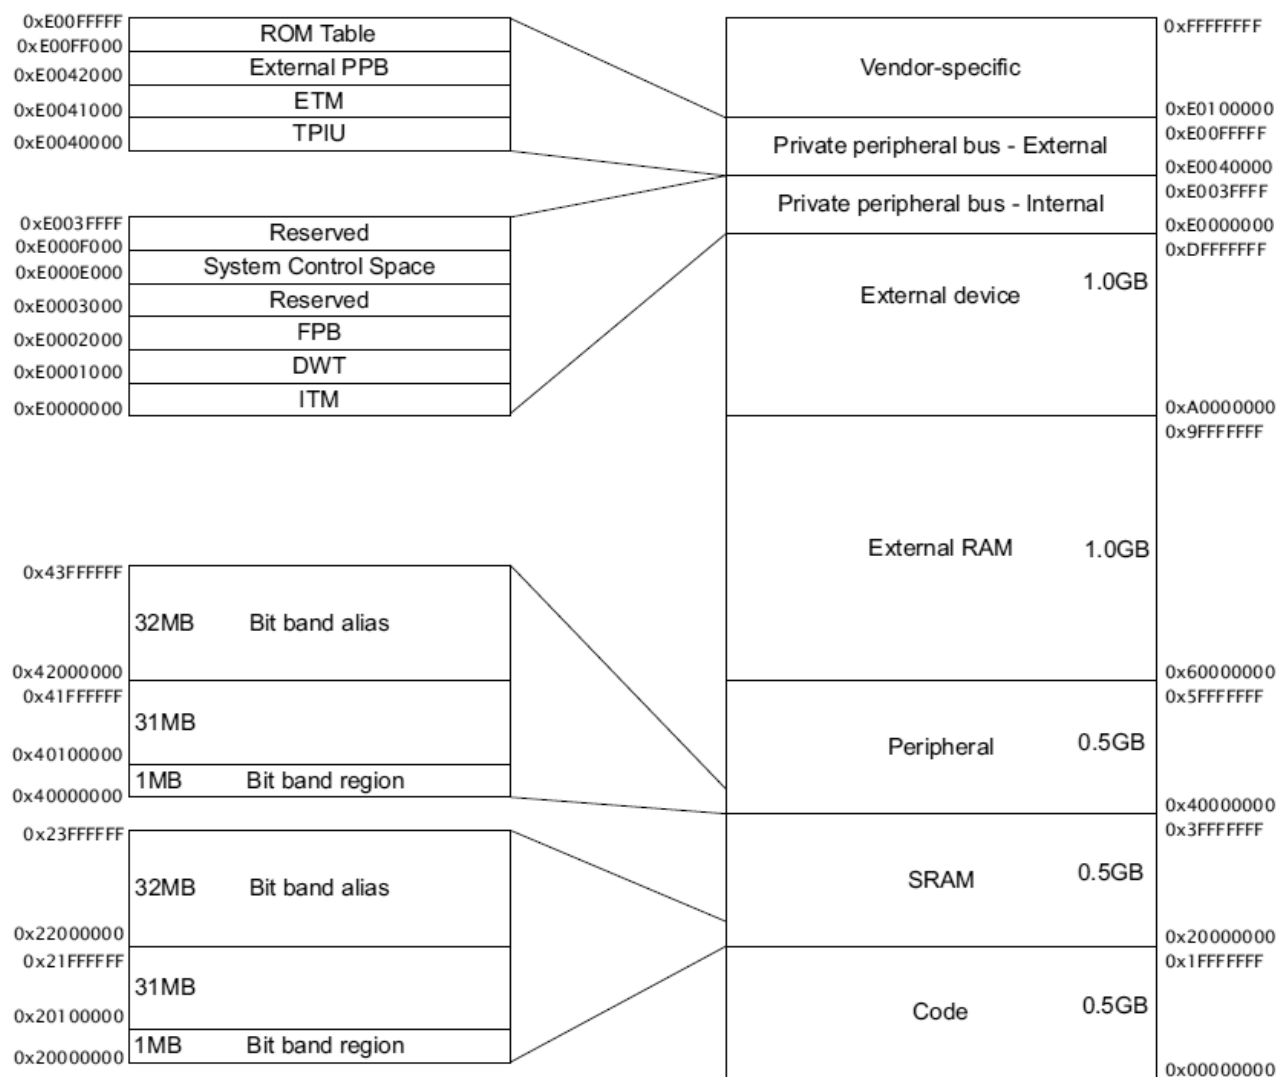


Figure 1.1 Cortex-M3 Memory Map

Table 1.1 Details of Cortex-M3 Memory Map

Memory Region	Description	Accessed via bus
Code	For code memory (flash, ROM, or remapped RAM)	ICode and DCode
SRAM	For on-chip SRAM, with bit-banding feature	System
Peripheral	For normal peripherals, with bit-banding feature	System
External RAM	For external memory	System
External device	Memory space for external peripherals or shared memory	System
Private peripheral	Address space for system devices, e.g. MPU, NVIC, DAP, and other CoreSight devices	System
Vendor specific	For additional uses specified by the vendor	

2 Developing Software for Cortex-M3

This section describes the different aspects of developing software for the Cortex-M3 and demonstrates how to write code to configure and use the main features of the core. The code examples in this section are designed for use with the RealView Compilation Tools (RVCT) 3.0 or later.

2.1 Exception handling

2.1.1 Writing the Exception Table

The easiest way to populate the vector table is to use a scatter file to place a C array of function pointers at memory address 0x0. The C array can be used to configure the initial stack pointer, image entry point and the addresses of the exception handlers.

Example 2.1 Example C structure for exception handlers

```
/* Filename: exceptions.c */
typedef void(* const ExecFuncPtr)(void) __irq;

/* Place table in separate section */
#pragma arm section rodata="exceptions_area"

ExecFuncPtr exception_table[] = {
    (ExecFuncPtr)&Image$$ARM_LIB_STACKHEAP$$ZI$$Limit,
    (ExecFuncPtr)__main, /* Initial PC, set to entry point */
    NMIEException,
    HardFaultException,
    MemManageException,
    BusFaultException,
    UsageFaultException,
    0, 0, 0, 0, /* Reserved */
    SVCHandler,
    DebugMonitor,
    0, /* Reserved */
    PendSVC,
    SysTickHandler,

    /* Configurable interrupts start here...*/
    InterruptHandler0,
    InterruptHandler1,
    InterruptHandler2

    /*
    :
    */
};

#pragma arm section
```

Notice that the first two items in this structure are the initial stack pointer and the image entry point. The initial stack pointer is generated using a linker defined symbol; see section 2.3 for details. Example 2.1 uses the C library entry point (`__main`) as the entry point for the image.

The exception table has also been placed in its own section. This has been done using `#pragma arm section rodata="exceptions_area"`. This instructs the compiler to place all the RO (read-only) data between `#pragma arm section rodata="exceptions_area"` and `#pragma arm section` into its own section called `exceptions_area`. This can then be referred to in the scatter file to place the exception table at the correct location in the memory map (address 0x0).

2.1.2 Writing the Exception Handlers

The core saves the system state when an exception occurs and restores it on return. Therefore, the exception handlers do not need to save or restore the system state and can be written as an ordinary (ABI-compliant) C function. However, we recommend that you use the `__irq` qualifier to aid clarity of code. The keyword is also used by the compiler to maintain eight-byte alignment of the stack where necessary. See Section 2.3.2 for further details.

Example 2.2 Simple C exception handler

```
__irq void SysTickHandler(void)
{
    printf("----- SysTick Interrupt -----");
}
```

Note *Clearing of an interrupt source must be handled by the ISR.*

On the Cortex-M3, exception prioritization, nesting of exceptions, and saving of corruptible registers is handled entirely by the core to permit efficient handling. This means that interrupts remain enabled by the core on entry to every exception handler.

2.1.3 Placing the Exception Table

Because the exception table has been placed in its own section in the object it can be easily placed at 0x0 using a scatter file.

Example 2.3 Placing exception table in scatterfile

```
LOAD_REGION 0x00000000 0x00200000
{
    ;; Maximum of 256 exceptions (256*4 bytes == 0x400)
    VECTORS 0x0 0x400
    {
        exceptions.o (exceptions_area, +FIRST)
    }
}
```

Note *+FIRST is used to ensure that exceptions_area is placed at the very beginning of the region and to prevent the linker's unused section elimination mechanism from removing the vector table.*

2.1.4 Configuring the System Control Space (SCS) registers

The SCS registers are located at 0xE000E000. As there are a large number of individual registers, it is best to use a structure to represent them. This can then be positioned in the correct memory location by adding this structure to the scatter file, using a similar method to the exception table. Example 2.4 below shows an example structure for the SCS registers.

Example 2.4 SCS Register Structure

```
typedef volatile struct {
    int MasterCtrl;
    int IntCtrlType;
    int zReserved008_00c[2];           /* Reserved space */
    struct {
        int Ctrl;
        int Reload;
        int Value;
    }
}
```

```

        int Calibration;
    } SysTick;
    int zReserved020_0fc[(0x100-0x20)/4];        /* Reserved space */

    /* Offset 0x0100 */
    struct {
        int Enable[32];
        int Disable[32];
        int Set[32];
        int Clear[32];
        int Active[64];
        int Priority[64];
    } NVIC;
    int zReserved0x500_0xcfc[(0xd00-0x500)/4];    /* Reserved space */
    /* Offset 0x0d00 */
    int CPUID;
    int IRQcontrolState;
    int ExceptionTableOffset;
    int AIRC;
    int SysCtrl;
    int ConfigCtrl;
    int SystemPriority[3];
    int SystemHandlerCtrlAndState;
    int ConfigurableFaultStatus;
    int HardFaultStatus;
    int DebugFaultStatus;
    int MemManageAddress;
    int BusFaultAddress;
    int AuxFaultStatus;
    int zReserved0xd40_0xd90[(0xd90-0xd40)/4];    /* Reserved space */
    /* Offset 0x0d90 */
    struct {
        int Type;
        int Ctrl;
        int RegionNumber;
        int RegionBaseAddr;
        int RegionAttrSize;
    } MPU;
} SCS_t;

```

Note *This might not contain all of the SCS registers in your device. Please refer to the reference manual provided by the silicon manufacturer of your device.*

2.1.5 Configuring Individual IRQs

Each IRQ has an individual enable bit in the Interrupt Set Enable Registers, part of the NVIC registers. To enable an interrupt you need to set the corresponding bit in the Interrupt Set Enable Register. Please refer to the reference manual for the device you are using for specific details on the Interrupt Set Enable Register.

Example 2.5 shows example interrupt enable code for the SCS structure shown in Example 2.4.

Example 2.5 IRQ Enable Function

```

void NVIC_enableISR(unsigned isr)
{
    /* The isr argument is the number of the interrupt to enable. */
    SCS.NVIC.Enable[ (isr/32) ] = 1<<(isr % 32);
}

```

Note *Some registers in the SCS region can only be accessed from Privileged mode.*

Individual IRQs can be disabled by setting the appropriate bit in the Interrupt Clear Enable Registers.

Interrupt priorities

Each individual interrupt can be assigned a priority level via the Interrupt Priority Registers. Depending on the implementation, up to 256 different priority levels can be assigned to each individual interrupt. The priority levels are represented using up to 8 bits. Groups of four interrupt priorities are stored in each word of memory.

The lower the assigned priority number, the higher the priority of the interrupt. Therefore 0 is the highest priority and 255 the lowest.

2.2 Memory Protection Unit (MPU)

The Cortex-M3 includes an optional MPU. You should see the datasheets and other information from the manufacturer of your silicon to determine if an MPU is included.

2.2.1 MPU Register locations

The MPU registers are located at 0xE000ED90. There are 5 basic MPU registers and a number of alias registers for each of the regions. Table 2-1 provides a brief overview of the MPU registers; please refer to the Cortex-M3 Technical Reference Manual for further details.

Table 2-1 MPU Registers

Name	Address	Description
MPU Type	0xE000ED90	Contains the number of regions in bits [15:8], 0 for no MPU
Control Register	0xE000ED94	Controls enabling/disabling of the MPU, the use of the default memory map for privileged accesses and whether the MPU is enabled during Hard Fault, NMI and Fault Mask handlers.
Region Number	0xE000ED98	Selects the Region you want to configure
Region Base Address	0xE000ED9C	Sets/reads the base address of region
Region Attribute and Size	0xE000EDA0	Sets/reads size and permissions of region

There are also aliases of the Region Base Address Registers and Region Attribute and Size register for each region. These follow the Region Attribute and Size Register directly. They are located at 0xE000EDA4 rising through memory sequentially. These are particularly useful for configuring the MPU quickly at power on, using STM instructions to write to the aliased addresses.

2.2.2 Configuring MPU Regions

To configure an MPU region you must first select the region you want to configure. You can use one of two methods to do this. You can select the region by writing the appropriate value to the Region Number register. Alternatively, use bits 0 to 3 of the Region Base Address register and set the VALID bit. With the latter method you can also program the region base address into the Region Base Address register at the same time.

When you have selected the region you must program the base address of the region. The base address value must be aligned to a multiple of the region's size. So a 64KB region must be aligned on a multiple of 64KB, for example 0x00010000, 0x00020000 and so on.

Finally, you need to configure the permissions, size and enable the region using the Region Attribute and Size Register. Please refer to the Cortex-M3 Technical Reference Manual for details of the register layouts.

Note *The MPU must be enabled by setting bit 0 of the MPU Control Register before any regions will be active.*

2.2.3 Memory Region Attribute and Size (Types and Access Permissions)

The MPU supports a number of different memory types, extensions and attributes. These are configured for each region in the Region Attribute and Size register. Table 2-2 provides details of the Region Attribute and Size register.

Table 2-2 Region Attribute and Size registers

Field	Name	Description
[28]	XN	Instruction access disable bit, 1= Disable instruction fetches
[26:24]	AP	Data Access permissions, allows you to configure read/write access for User and Privileged mode
[21:19]	TEX	Type extension field, allows you to configure memory access type, e.g. Strongly ordered, peripheral etc.
[18]	S	Shareable
[17]	C	Cacheable
[16]	B	Bufferable
[15:8]	SRD	Sub-Region Disable field, see Section 2.2.4
[5:1]	REGION SIZE	Region Size of the region be configured, e.g. 4K, 8K, etc
[0]	SZENABLE	Region enable bit.

For full details on these fields please refer to the Cortex-M3 Technical Reference Manual.

2.2.4 Sub-regions

Each memory region is divided into 8 sub-regions; these can be individually disabled without affecting the rest of the region. Each sub region is 1/8th of the main region and can be disabled using the SRD fields in the Region Attribute and Size register. The lowest bit of the SRD field disables the sub-region with the lowest address.

Sub-regions are useful for overlapping memory regions, for example, if you have a large region but would like different attributes for a small section of it. A sub-region in the larger region could be disabled and a second MPU region used for that sub-region to provide the required attributes.

Note *Sub-regions cannot be used on regions of size 32, 64 and 128 bytes.*

2.3 Stack and Heap Configuration

2.3.1 Configuring Stack and heap

The RealView Compilation Tools (RVCT) provide a number of methods of configuring the location for the stack and heap. The two main methods are to either re-implement the `__user_initial_stackheap()` function or to place the stack and heap in the scatter file using specific region names.

The tools also support two main types of stack and heap implementations, namely the one and two region models. In the one region model, the stack and heap share a single area of memory. The heap grows up from the bottom of the memory region while the stack grows down from the top.

In the two region model the heap and the stack each have their own memory region. The heap still grows upwards through memory and the stack still descends from the top of its region. Please refer to the RVCT Developer Guide and the RVCT Compiler and Libraries Guide for further information.

Note You might want to use the MPU to place a region to detect overflows.

One Region Model

If you are using the one region model the easiest way to place the stack and heap region in memory is in the scatter file. To do this you will need to use the special region name `ARM_LIB_STACKHEAP` in your scatter file with the address and size of the stack and heap region. See Example 2.6.

Example 2.6 Example One Region Model scatter file extract

```
;; Heap and stack share 1MB
ARM_LIB_STACKHEAP 0x20100000 EMPTY 0x100000
{
}
```

Note `EMPTY` is used to indicate that it is intended that the region is not populated at link time.

The initial stack pointer value can then be placed using the linker defined symbol `Image$$ARM_LIB_STACKHEAP$$ZI$$Limit` in the first entry (0x0) in your vector table.

As an alternative to using the special region name, you can re-implement the `__user_initial_stackheap()` function. However, you must still ensure that you correctly specify the initial SP value in your vector table. Please refer to the RVCT Developer Guide and RVCT Compiler and Libraries Guide for information on `__user_initial_stackheap()`.

Two Region Model

To use the two region model you must specify two regions in the scatter file, one for the heap and one for the stack. These also have special region names of `ARM_LIB_HEAP` and `ARM_LIB_STACK`. You also need to add either `IMPORT __use_two_region_memory` from assembly language or `#pragma import(__use_two_region_memory)` from C. This informs the tools that you want to use the two region model and not the (default) one region model.

Example 2.7 Example Two Region Model scatter file extract

```
; Heap starts at 1MB and grows upwards
ARM_LIB_HEAP 0x20100000 EMPTY 0x100000-0x8000
{
}

; Stack space starts at the end of the 2MB of RAM
; and grows downwards for 32KB (indicated by the negative length)
ARM_LIB_STACK 0x20200000 EMPTY -0x8000
{
}
```

The initial stack pointer value can then be placed using the linker-defined symbol `Image$$ARM_LIB_STACK$$ZI$$Limit` in the first entry, at 0x0, in your vector table.

Again, the stack and heap can be alternatively placed by re-implementing `__user_initial_stackheap()` instead of using the special region. However, you must add the initial stack pointer to your vector table as before.

2.3.2 8 byte Stack alignment

The Application Binary Interface (ABI) for the ARM Architecture requires that the stack must be 8-byte aligned on all external interfaces, such as calls between functions in

different source files. However, code does not need to maintain 8-byte stack alignment internally, for example in leaf functions.

This means that when an interrupt or exception occurs the stack might not be correctly 8-byte aligned. Revision 1 and later of the Cortex-M3 silicon can automatically align the stack pointer when an exception occurs. This behaviour must be enabled by setting STKALIGN (bit 9) in the Configuration Control Register at address 0xE00ED14.

If you are using revision 0 of the Cortex-M3, this adjustment cannot be performed in hardware. The compiler can generate code in your IRQ handlers that correctly aligns the stack. To do this you must prefix your IRQ handlers with `__irq` and use the `--cpu=Cortex-M3-rev0` compiler switch, not `--cpu=Cortex-M3`.

Note *The `--cpu=Cortex-M3-rev0` compiler switch is only supported in RVCT 3.0 SP1 (build 586) and later versions.*

2.4 Instruction Set Support

There are a number of instructions supported by the Cortex-M3 that the compiler cannot generate by itself, as these normally have a specific use and their function is not easily expressed in the C language. However these instructions can still be used either through the assembler, compiler intrinsics, or embedded assembly.

Note *More detail on the following instructions and the full instruction set can be found in the RVCT Assembler Guide or ARM Architecture Reference Manual.*

2.4.1 Memory Access Instructions

The main memory instructions that the compiler cannot generate directly from C code are the load and store exclusive instructions, LDREX and STREX. These are used to perform exclusive memory accesses, for example to provide mutexes between different threads.

2.4.2 Barrier Instructions

The Cortex-M3 supports a number of barrier instructions. These can be used to ensure the completion of certain events before starting the next instruction or event.

The ISB (Instruction Synchronization Barrier) flushes the pipeline in the processor, so that all instructions following the ISB are fetched from cache or memory, after the instruction has been completed. It ensures that changes to the system, for example the MPU, take immediate effect.

The DSB (Data Synchronization Barrier) acts as a special kind of memory barrier. The DSB operation will complete when all explicit memory accesses before this instruction have completed. No instructions after the DSB will be executed until the DSB instruction has completed, that is, when all of the pending accesses have completed.

The DMB (Data Memory Barrier) acts as a memory barrier. It has slightly different behaviour to DSB. The DMB instruction will ensure that any memory accesses before the DMB have completed before any memory access from instructions following the DMB instruction are performed.

Example 2.8 shows a fragment of typical MPU code to show how these barrier instructions are used. This involves creating small functions using the embedded assembler, each containing a single barrier instruction. These functions can later be inlined by the linker.

Example 2.8 Demonstration of barrier instructions using pseudo-intrinsics

```
/* pseudo_intrinsics.c */
/* Small embedded assembly functions for barrier instructions.
 * Link with armlink --inline ... */

__asm void __ISB(void)
{
    ISB
    BX lr
}

__asm void __DSB(void)
{
    DSB
    BX lr
}

/* scs.c - Initialize System Control Space registers */
void SCS_init(void)
{
    /* Code to configure the MPU regions inserted here
     *
     * .....
     */

    /* Enable the MPU */
    SCS.MPU.Ctrl |= 1;

    /* Force Memory Writes before continuing */
    __DSB();

    /* Flush and refill pipeline with updated permissions */
    __ISB();
}
```

2.4.3 Conditional Execution

Unlike ARM instructions, most Thumb instructions are unconditional. Thumb-2 adds three conditional instructions in addition to the 16-bit conditional branch provided in the Thumb-1 instruction set. These are:

- A 32-bit conditional branch. This has an improved branch range of +/- 1MB.
- 16-bit CBZ (compare and branch on zero) and CBNZ (compare and branch on non-zero) instructions, with a branch range of +4 to +130 bytes. For example, this can be generated for C code to branch out of a loop when counting down to zero.
- A 16-bit IT (if-then) instruction. The IT instruction can be used to make up to four following instructions conditional. This is the instruction used most often in place of conditional execution, for example in a short if statement.

The assembler can automatically generate appropriate IT instructions in place of a conditionally executed instruction. This is particularly useful when porting legacy ARM-based code to the Cortex-M3.

2.4.4 System “Hints”

There are a number of “hint” instructions that can be used to direct the core to perform an operation if it is supported by your implementation. The instructions only provide an indication to the core and do not force the core to do as instructed. Some or all the hint instructions will execute as a NOP if they are not supported by your device. Table 2-3 summarizes the hint instructions available in the Cortex-M3.

Table 2-3 Hint Instructions

Instruction	Operation	Description
WFE	Wait For Event	Indicates to the processor to enter low power mode and wait for an event before waking. This requires no software intervention when woken.
WFI	Wait For Interrupt	Indicates to the processor to enter low power mode and wait for an interrupt before waking. This requires no software intervention when woken.
SEV	Send Event	Sends an event to all processors in a multi-processor system.

2.5 Bit-Banding

Bit-banding maps a complete word of memory onto a single bit in the bit-band region. For example, writing to one of the alias words will set or clear the corresponding bit in the bit-band region.

This allows every individual bit in the bit-banding region to be directly accessible from a word-aligned address using a single LDR instruction. It also allows individual bits to be toggled from C without performing a read-modify-write sequence of instructions.

2.5.1 Address translation

The Cortex-M3 has two 32MB regions that map onto the two 1MB bit-band regions. The two regions are separate, one in the SRAM region and one in the peripheral region.

Each bit in the bit-band region is addressed sequentially in the 32MB alias region. For example, the eighth bit in the bit-band region can be accessed using the eighth word in the 32MB alias region.

2.5.2 Reading and writing to the bit-banding region

When writing to the alias regions bit 0 of the 32 bit word is used to set the value at the bit-banding region. Reading from the alias address will return the value from the bit-band region in bit 0 and the other bits will be cleared.

You can also access the base bit-band region itself in the same way as normal memory, using word, half word, and byte accesses.

2.5.3 Using bit-banding from C code

Bit-banding can be used from C code using pre-processor macros to perform the accesses. Example 2.9 demonstrates how you can do this.

Example 2.9 Using bit-banding from C code using pre-processor macros

```
#define BITBAND_SRAM_REF    0x20000000
#define BITBAND_SRAM_BASE  0x22000000
#define BITBAND_SRAM(a,b) ((BITBAND_SRAM_BASE + (a-BITBAND_SRAM_REF)*32 \
    + (b*4))) // Convert SRAM address
#define BITBAND_PERI_REF    0x40000000
#define BITBAND_PERI_BASE  0x42000000
#define BITBAND_PERI(a,b) ((BITBAND_PERI_BASE + (a-BITBAND_PERI_REF)*32 \
    + (b*4))) // Convert PERI address

#define MAILBOX    0x20004000
#define TIMER      0x40004000
// Mailbox bit 0
#define MBX_B0      *((volatile unsigned int *) (BITBAND_SRAM(MAILBOX,0)))
// Mailbox bit 7
#define MBX_B7      *((volatile unsigned int *) (BITBAND_SRAM(MAILBOX,7)))
// Timer bit 0
#define TIMER_B0     *((volatile unsigned char *) (BITBAND_PERI(TIMER,0)))
```

```

// Timer bit 7
#define TIMER_B7 *((volatile unsigned char *) (BITBAND_PERI(TIMER,7)))

int main(void)
{
    unsigned int temp = 0;

    MBX_B0 = 1;           // Word write
    temp = MBX_B7;        // Word read
    TIMER_B0 = temp;      // Byte write
    return TIMER_B7;      // Byte read
}

```

2.6 Execution Modes

2.6.1 Operating Modes

The Cortex-M3 supports privileged and User (non-privileged) execution. Code run as Privileged has full access rights whereas code executed as User has limited access rights. The limitations include restrictions on instruction use such as MSR fields, access to memory and peripherals based on system design, and restrictions imposed by the MPU configuration.

The processor supports two operation modes, Thread mode and Handler mode. Thread mode is entered on reset and normally on return from an exception. When in Thread mode, code can be executed as either Privileged or Unprivileged.

Handler mode will be entered as a result of an exception. Code in Handler mode is always executed as Privileged, therefore the core will automatically switch to Privileged mode when exceptions occur.

You can change between Privileged Thread mode and User Thread mode when returning from an exception by modifying the EXC_RETURN value in the link register (R14). You can also change from Privileged Thread to User Thread mode by clearing CONTROL[0] using an MSR instruction. However, you cannot directly change to privileged mode from unprivileged mode without going through an exception, for example an SVC.

2.6.2 Main and Process Stacks

The Cortex-M3 supports two different stacks, a main stack and a process stack. To do this the Cortex-M3 has two stack pointers (R13), one of which is banked out depending on the stack in use. This means that only one stack pointer is visible as R13 at a time. However, both stack pointers can be accessed using the MRS and MSR instructions.

The main stack is used at reset, and is always used in Handler mode (when entering an exception handler). The process stack pointer is only available as the current stack pointer when in Thread mode. You can select which stack pointer (main or process) is used in Thread mode in one of two ways, either by using the EXC_RETURN value when exiting from Handler Mode or while in Thread Mode by writing to CONTROL[1] using an MSR instruction.

Note *The process stack pointer will need to be initialized by your context switch code or your initialization code.*

2.7 Supervisor Calls (SVC)

As with previous ARM cores there is an instruction, SVC (formerly SWI), that generates a supervisor call. Supervisor calls are normally used to request privileged operations or access to system resources from an operating system.

The SVC instruction has a number embedded within it, often referred to as the SVC number. This is sometimes used to indicate what the caller is requesting. On previous ARM cores you had to extract the SVC number from the instruction using the return

address in the link register, and the other SVC arguments were already available in R0 through R3.

On the Cortex-M3, the core saves the argument registers to the stack on the initial exception entry. A late-arriving exception, taken before the first instruction of the SVC handler executes, might corrupt the copy of the arguments still held in R0 to R3. This means that the stack copy of the arguments must be used by the SVC handler. Any return value must also be passed back to the caller by modifying the stacked register values. In order to do this, a short piece of assembly code must be implemented as the start of the SVC handler. This identifies which stack the registers were saved to, extracts the SVC number from the instruction, and passes the number and a pointer to the arguments to the main body of the handler written in C.

Example 2-8 below shows an example SVC handler. This code tests the EXC_RETURN value set by the processor to determine which stack pointer was in use when the SVC was called. On most systems this will be unnecessary, because in a typical system design supervisor calls will only be made from user code which uses the process stack. In this case, the assembly code can consist of a single MSR instruction followed by a tailcall branch (B instruction) to the C body of the handler.

Example 2.8 Example SVC Handler

```
__asm void SVCHandler(void)
{
    IMPORT SVCHandler_main

    TST    lr, #4
    MRSEQ  r0, MSP
    MRSNE  r0, PSP
    B      SVCHandler_main
}

void SVCHandler_main(unsigned int * svc_args)
{
    unsigned int svc_number;
    /*
     * Stack contains:
     * r0, r1, r2, r3, r12, r14, the return address and xPSR
     * First argument (r0) is svc_args[0]
     */
    svc_number = ((char *)svc_args[6])[-2];
    switch(svc_number)
    {
        case SVC_00:
            /* Handle SVC 00 */
            break;

        case SVC_01:
            /* Handle SVC 01 */
            break;

        default:
            /* Unknown SVC */
            break;
    }
}
```

Example 2.9 shows how you can declare different declarations for a number of SVCs. `__svc` is a compiler keyword that replaces a function call with an SVC instruction containing the specified number.

Example 2.9 Example of calling an SVC from C code

```
#define SVC_00 0x00
#define SVC_01 0x01

void __svc(SVC_00) svc_zero(const char *string);
void __svc(SVC_01) svc_one(const char *string);

int call_system_func(void)
{
    svc_zero("String to pass to SVC handler zero");
    svc_one("String to pass to a different OS function");
}
```

2.8 System Timer (SysTick)

2.8.1 About the SysTick

The SCS also includes a system timer (SysTick) that can be used by an operating system to ease porting from another platform. The SysTick can be polled by software or can be configured to generate an interrupt. The SysTick interrupt has its own entry in the vector table and therefore can have its own handler.

The SysTick is configured through the four registers described in table 2-4.

Table 2-4 SysTick Registers

Name	Address	Description
SysTick Control and Status	0xE000E010	Basic control of SysTick e.g. enable, clock source, interrupt or poll.
SysTick Reload Value	0xE000E014	Value to load Current Value register when 0 is reached.
SysTick Current Value	0xE000E018	The current value of the count down.
SysTick Calibration Value	0xE000E01C	Might contain the number of ticks to generate a 10ms interval and other information, depending on the implementation.

2.8.2 Configuring SysTick

To configure the SysTick you need to load the SysTick Reload Value register with the interval required between SysTick events. The timer interrupt or COUNTFLAG bit (in the SysTick Control and Status register) is activated on the transition from 1 to 0, therefore it activates every $n+1$ clock ticks. If a period of 100 is required 99 should be written to the SysTick Reload Value register. The SysTick Reload Value register supports values between 1 and 0x00FFFFFF.

If you want to use the SysTick to generate an event at a timed interval, for example 1ms, you can use the SysTick Calibration Value Register to scale your value for the Reload register. The SysTick Calibration Value Register is a read-only register that contains the number of pulses for a period of 10ms, in the TENMS field (bits 0 to 23). This register also has a SKEW bit (30) that is used to indicate that the calibration for 10ms in the TENMS section is not exactly 10ms due to small variations in clock frequency. Bit 31 is used to indicate if the reference clock is provided.

The Control and Status Register allows you to select between polling the timer by reading COUNTFLAG, bit 16, or the SysTick generating an interrupt.

By default the SysTick is configured for polling mode. In this mode, user code must read COUNTFLAG to ascertain if the SysTick event had occurred. This is indicated by COUNTFLAG being set. Reading of the Control and Status register clears the COUNTFLAG bit. To configure the SysTick to generate an interrupt you should set TICKINT (bit 1 of the SysTick Control and Status register) HIGH. You will also need to

enable the appropriate interrupt in the NVIC. You must also select the clock source using `CLKSOURCE` (bit 2). Setting this to 1 selects the core clock and zero selects the external reference clock.

The Timer is enabled by setting bit 0 of the SysTick Status and Control register.

2.9 RVCT 3.0 Options

2.9.1 Compiler and Assembler Options

When building code you will need to specify the correct CPU on your compiler and assembler command lines, as by default the RVCT 3.0 tools will build code for an ARM architecture v4T core.

To do this you must add `--cpu name` to your command line, where *name* is either `Cortex-M3` or `Cortex-M3-rev0`. You do not need to add `--thumb` to your command line as the Cortex-M3 is a Thumb-2 only core. The compiler will automatically generate Thumb-2 instructions and the assembler will only accept valid Thumb-2 instructions.

2.9.2 Linker Options

You do not need to specify any specific options to the linker to generate a suitable image for a Cortex-M3. The linker can obtain the required information from the object files specified on the linker command line.

However, we recommend that you use a scatter file (`--scatter filename`) as the memory map of the Cortex-M3 cannot easily be represented using command-line options available in the linker. You must almost specify an entry point for the image using the `--entry` switch. Normally this will be the same entry point that you have specified as your reset handler in the exception table.

3 Moving Existing ARM Projects to the Cortex-M3

This section discusses the steps that you must take to migrate an existing ARM project, for example an ARM7TDMI-based application, to a new Cortex-M3 platform.

General approach to project migration

As with any migration of a project to a new target platform, the best strategy is usually to build up the functionality gradually, starting with a minimal version of the project. You can do this easily using comments or preprocessor macros to remove sections of the functionality. This also allows the functions to be easily reintroduced later in the migration process, one at a time, to allow for thorough testing of each platform-dependent function.

3.1 General code modifications

Most platform-independent sections of your code will usually work correctly on the Cortex-M3 without modification. However, there are certain features of the code that you might need to modify and update for the new target.

3.1.1 Modifications to C code

When migrating a project from an ARM7 core to the Cortex-M3, you must recompile all of your C code for Thumb-2 with an appropriate `--cpu` option as described in Section 2.9.1. This includes any third-party libraries.

Legacy Thumb-1 code is binary compatible with the Cortex-M3, and such code can be run on the new processor. However, in RVCT 3.0 the linker cannot protect you from accidentally linking object files and libraries that contain some ARM instructions. It is recommended that all code is recompiled for Thumb-2 if at all possible. If you need to use legacy objects or libraries, you must manually check that no ARM instructions are included in the linked image. If you have third-party libraries that are targeted at an ARM7, you might need to contact your supplier for a Thumb-2 version of their library.

The source code itself might also require some minor changes. In particular, state-changing pragma directives (`#pragma arm` and `#pragma thumb`) no longer apply and must be removed. Inline assembly code does not support compilation for Thumb-2, therefore such code must be rewritten using C, C++ or embedded assembly code.

3.1.2 Modifications to assembly code

Special care should be taken when porting assembly code.

If present, directives that cause assembly of ARM instructions (`ARM` or `CODE32`) must be removed or changed to `THUMB` in every case. Most existing code should then assemble without difficulty if you ensure that you provide the correct `--cpu` option on the assembler command line. However, some rare instructions that are supported by the ARM instruction set and not the Thumb-2 instruction set might need modification.

If any `CODE16` directives are present, be aware that these will assemble without warning if changed to `THUMB`, however there might be subtle differences in behavior. This is because `CODE16` assembles according to the legacy Thumb-1 syntax rules. For example, under the `CODE16` syntax rules many instructions without an S suffix will encode to flag-setting variants. Under the syntax rules of the `THUMB` directive the S suffix must be explicitly specified.

The assembler will insert IT instructions as necessary for instructions that are to be conditionally executed. For example, a single `ADDSDNE r0, r0, r1` instruction (followed by an unconditional instruction) would become: `IT NE` followed by `ADDSD r0, r0, r1`

Be careful of core-specific and architecture-specific instructions. These include:

- coprocessor instructions

- state or mode changes and other accesses to the PSR
- the SWP instruction, which has been replaced by LDREX and STREX
- some addressing modes are not supported by LDM and STM instructions
- some other instructions that have additional restrictions in Thumb-2, for example LDR and STR instructions with a register offset and an immediate shift.

You might need to rewrite these portions of your code to cater for the programmer's model of the Cortex-M3. The assembler will generate a warning or error if it finds any incompatibilities. Remember that most status and control registers are memory-mapped in the Cortex-M3 and that the supported modes are very different from an ARM7TDMI; any code which changes state or mode must be modified if appropriate or removed. Likewise, code which accesses coprocessors must be removed, unless this will be emulated by a handler for the Usage Fault exception.

Also beware of code which uses the value of the PC in address arithmetic. Because Thumb-2 uses mixed 16- and 32-bit instructions, the value of the PC is always the address of the current instruction plus 4 when used in a data processing operation.

3.2 Changes to startup code

The startup code consists of the reset handler of your application, together with any initialization functions that set up the environment and peripherals before the main body of your application can run. This is specific to a particular core and target.

If your system is simple, it might be sufficient to specify the C library entry point (the `__main()` function) as your reset handler in the vector table, and perform additional initialization from the `main()` function in your own code. However, if there are peripherals that require critical initialization, you might need to write a short assembly code function to act as your initial reset handler before branching to `__main()`. Also be aware that code accessing some devices, for example the MPU, might need one or more of the memory barrier instructions after writing to these registers to ensure that the changes take effect immediately. If your project previously targeted a platform supporting an MPU or MMU, the associated code must be revised.

For all Cortex-M3 projects, you must create the new vector table as described in section 2.1 and add the initial stack pointer and address of your reset handler at 0x0 and 0x4 respectively.

3.3 Changes to Exception Handling

Your exception handlers must be adapted for the Cortex-M3.

You will not normally need a low-level handler in assembly language, because re-entrancy is handled by the core. If your low-level handler performs additional work, you might need to split some of this into separate functions which can be called from the new handlers. Remember to mark your IRQ handlers using the `__irq` keyword for clarity and to ensure that the compiler can maintain the stack alignment for Cortex-M3 revision 0 hardware.

The Cortex-M3 has no FIQ input. Any peripheral that signals an FIQ on the ARM7TDMI project must be moved to a high-priority vectored interrupt, or the Cortex-M3's NMI signal. You might need to check that the handler for this kind of interrupt does not expect to use the banked FIQ registers, as these will now need to be stacked as for another normal IRQ handler.

Finally, you must write a new initialization function to configure the NVIC including the interrupt priorities. Interrupts can then be enabled before entering your main application code.

Critical sections and exception behavior

On the Cortex-M3, exception prioritization, nesting of exceptions, and saving of corruptible registers is handled entirely by the core to provide very efficient handling and minimize

interrupt latency. This means that interrupts remain enabled by the core on entry to every exception handler. In addition, if interrupts are disabled when returning from an exception they will not be automatically re-enabled by the processor. It is not possible to perform an atomic enabling of interrupts and return from an exception. If you have disabled interrupts temporarily in your handler, they must be re-enabled first and then a separate instruction used to return. Exceptions might therefore occur immediately before the exception return.

These features of the exception model might impact on critical sections in the code, depending on the system design. Critical sections are those that require interrupts to be disabled for the duration of their execution so that they are executed as an uninterruptible block, for example the context switching code in an operating system. Certain legacy code might make assumptions that interrupts will be disabled on entry to exception handlers and will only be enabled explicitly by the code once any critical sections have been completed. These assumptions do not hold under the new exception model of the Cortex-M3, and such code might need to be rewritten to take account of this.

3.4 Retargeting for new device

You must also perform additional steps to retarget the build on to the Cortex-M3, for example, defining the new memory map in the scatter file. This includes placement of structures over registers for the System Control Space, and the addition of library stack and heap regions as necessary. If your project uses a timer, you might want to modify the code to use the SysTick functionality provided by the SCS. See Section 2.8.2.

3.5 Exploiting new features of the Cortex-M3

Once the original project has been retargeted to the new platform, you might wish to modify the project to take advantage of the new features provided by the Cortex-M3. Most of the new instructions available in architecture v7-M will be used automatically if you recompile your code for Thumb-2. However, certain features of the Cortex-M3 require manual code changes in order to take advantage of them. In particular, you might wish to:

- Modify the initialization code to enable the MPU.
- Make use of the sleep modes provided by the core to reduce power consumption.
- Exploit bit-banding to improve the performance of bit modifications, if any of your data or peripherals are located in an appropriate bit-band region.

See Section 2.5 for a description of how to use the bit-banding functionality. Details of how to configure the MPU can be found in Section 2.2, and full details of the MPU registers are in the Cortex-M3 Technical Reference Manual. This also provides details of the sleep modes supported by the core.

4 Debugging with the Cortex-M3

The Cortex-M3 provides sophisticated debug capabilities. These include:

- A flash patch and breakpoint unit to allow a debugger to set up hardware breakpoints over a flash or ROM region.
- A data watchpoint and trace unit to provide support for watchpoints and ETM triggers.
- An optional ETM (Embedded Trace Macrocell) for instruction and data tracing.
- An ITM (Instrumentation Trace Macrocell) which allows printf-style debugging using application-driven tracing of events, for example from an operating system.

In addition, the structure of the processor means that debug accesses are performed through a DAP (Debug Access Port). This is connected to the rest of the system, including the core, through the bus matrix. This means that you can carry out certain debug operations while the core itself is still running, if this is supported by your debugger. For example, you do not need to stop the core to be able to read from or write to external memory. This functionality is supported by RVD 3.0 when connecting to a hardware target. At the time of writing, RVD does not support the trace features of the Cortex-M3.

RVDS 3.0 also includes an ISSM (Instruction Set System Model) of the Cortex-M3. This provides simulation of the core, NVIC and other key features of the processor. It also models one UART peripheral and three additional timer peripherals. However, the model only simulates the breakpoint and watchpoint debug logic. The trace components are not modeled.