



Manage storage

ONTAP System Manager

NetApp

December 11, 2020

This PDF was generated from https://docs.netapp.com/us-en/ontap/task_admin_add_disks_to_local_tier.html on December 11, 2020. Always check docs.netapp.com for the latest.

Table of Contents

- Manage storage 1
 - Expand storage 1
 - Manage storage efficiency policies. 4
 - Recover deleted volumes 4
 - Save storage space using compression, compaction, and deduplication 5
 - Balance loads by moving LUNs 6
 - Balance loads by moving volumes to another tier 6

Manage storage

Expand storage

You can increase the size of your volume or LUN so that more space is available to your host. The size of a LUN cannot exceed the size of the containing volume.

- [Increase the size of a volume](#)
- [Increase the size of a LUN](#)


Also, you can add a LUN to an existing volume. The processes are different for using System Manager with ONTAP 9.7 or 9.8

- [Add a LUN to an existing volume \(ONTAP 9.7\)](#)
- [Add a LUN to an existing volume \(ONTAP 9.8\)](#)

Also, starting with ONTAP 9.8, you can use System Manager to add a LUN to an existing volume.


Increase the size of a volume

Steps

1. Click **Storage > Volumes**.
2. Hover over the name of the volume you want to increase in size.
3. Click .
4. Select **Edit**.
5. Increase the capacity value.

Increase the size of a LUN

Steps

1. Click **Storage > LUNs**.
2. Hover over the name of the LUN you want to increase in size.
3. Click .
4. Select **Edit**.
5. Increase the capacity value.

Add a LUN to an existing volume (ONTAP 9.7)

To use System Manager with ONTAP 9.7 to add a LUN to an existing volume, you should switch to the Classical View first.

Steps

1. Log in to System Manager in ONTAP 9.7.
2. Click **Classical View**.
3. Select **Storage > LUNs > Create**
4. Specify the details to create the LUN.
5. Specify to which existing volume or qtree the LUN should be added.

Add a LUN to an existing volume (ONTAP 9.8)

Starting with ONTAP 9.8, you can use System Manager to add a LUN to an existing volume that already has a least one LUN.

Steps

1. Click **Storage > LUNs**.
2. Click **Add+**.
3. Complete the fields in the **Add LUNs** window.
4. Select **More Options**.
5. Select the checkbox labeled **Group with related LUNs**.
6. In the drop-down field, select a LUN that exists on the volume to which you want to add another LUN.
7. Complete the rest of the fields. For **Host Mapping**, click one of the radio buttons:
 - **Existing initiator group** lets you select an existing group from a list.
 - **New initiator group** lets you enter a new group in the field.

Add disks to a local tier (Add capacity to aggregate)

You can increase the size of an existing aggregate (local tier) by adding capacity disks.

Steps

1. Click **(Return to classic version)**.
2. Click **Hardware and Diagnostics > Aggregates**.
3. Select the aggregate to which you want to add capacity disks, and then click **Actions > Add Capacity**.

You should add disks that are of the same size as the other disks in the aggregate.

4. Click **Switch to the new experience**.
5. Click **Storage > Tiers** to verify the size of the new aggregate.

Add cache to a local tier

Provision cache by converting an existing local tier (aggregate) to a Flash Pool aggregate by adding SSDs. Flash Pool aggregates enable you to deploy flash as high performance cache for your working data set while using lower-cost HDDs for less frequently accessed data.

Steps

1. Click **(Return to classic version)**.
2. Click Hardware and **Diagnostics > Aggregates**.
3. Select the aggregate, and then click **Actions > Add Cache**.

Select the cache source as storage pools or dedicated SSDs.

4. Click **Switch to the new experience**.
5. Click **Storage > Tiers** to verify the size of the new aggregate.

Add nodes to cluster

You can increase the size and capabilities of your cluster by adding new nodes.

Before you Start

You should have already cabled the new nodes to the cluster.

There are separate processes for working with System Manager in ONTAP 9.7 or ONTAP 9.8.

- [Adding nodes to a cluster with System Manager 9.7](#)
- [Adding nodes to a cluster with System Manager 9.8](#)

Adding nodes to a cluster with System Manager 9.7

Steps

1. Click **(Return to classic version)**.
2. Click **Configurations > Cluster Expansion**.

System Manager automatically discovers the new nodes.

3. Click **Switch to the new experience**.
4. Click **Cluster > Overview** to view the new nodes.

Adding nodes to a cluster with System Manager 9.8

Steps

1. Select **Cluster > Overview**.

The new controllers are shown as nodes connected to the cluster network but are not in the cluster.

2. Click **Add**.

- The nodes are added into the cluster.
- Storage is allocated implicitly.


Manage storage efficiency policies

Starting with ONTAP 9.8, you can use System Manager to enable, disable, add, edit, or delete efficiency policies for storage VMs on FAS systems.





This function is not available on AFF systems.

Steps

1. Select **Storage > Storage VMs**
2. Select the storage VM for which you want to manage efficiency policies.
3. On the **Settings** tab, select  in the **Efficiency Policy** section. The efficiency policies for that storage VM are displayed.

You can perform the following tasks:

- **Enable or disable** an efficiency policy by clicking the toggle button in the Status column.
- **Add** an efficiency policy by clicking on **Add+**.
- **Edit** an efficiency policy by clicking on  to the right of the policy name and selecting **Edit**.
- **Delete** an efficiency policy by clicking on  to the right of the policy name and selecting **Delete**.

Recover deleted volumes

If you have accidentally deleted one or more FlexVol volumes, you can recover these volumes. Starting in System Manager 9.8, you can also recover FlexGroup volumes. You can also delete the volumes permanently by purging the volumes.

The volume retention time can be set on a storage VM level. By default, the volume retention time is set to 12 hours.

Selecting deleted volumes

Steps

1. Click **Storage > Volumes**.

2. Click **More > Show Deleted Volumes**.
3. Select the volumes and click the desired action to recover or permanently delete the volumes.

Resetting the volume configurations

Deleting a volume deletes the associated configurations of the volume. Recovering a volume does not reset all the configurations. Perform the following tasks manually after recovering a volume to bring the volume back to its original state:

Steps

1. Rename the volume.
2. Set up a junction path (NAS).
3. Create mappings for LUNs in the volume (SAN).
4. Associate a Snapshot policy and export policy with the volume.
5. Add new quota policy rules for the volume.
6. Add a QOS policy for the volume.

Save storage space using compression, compaction, and deduplication


For volumes on non-AFF clusters, you can run deduplication, data compression, and data compaction together or independently to achieve optimal space savings.

- Deduplication eliminates duplicate data blocks.
- Data compression compresses the data blocks to reduce the amount of physical storage that is required.
- Data compaction stores more data in less space to increase storage efficiency.



These tasks are supported for volumes on non-AFF clusters. Beginning with ONTAP 9.2, all inline storage efficiency features, such as inline deduplication and inline compression, are enabled by default on AFF volumes.

Steps

1. Click **Storage > Volumes**.
2. Next to the name of the volume for which you want to save storage, click .
3. Click **Edit** and scroll to **Storage Efficiency**.
4. *Optional:* If you want to enable background deduplication, ensure the checkbox is checked.
5. *Optional:* If you want to enable background compression, specify the storage efficiency policy and ensure the checkbox is checked.


6. *Optional*: If you want to enable inline compression, ensure the checkbox is checked.

Balance loads by moving LUNs

You can move a LUN to another volume within the storage VM to balance the load, or you can move it to a volume with a higher performance service level to improve performance.

Move restrictions

- A LUN cannot be moved to a qtree within the same volume.
- A LUN created from a file using the CLI cannot be moved with System Manager.
- LUNs that are online and serving data cannot be moved.
- LUNs cannot be moved if the allocated space in the destination volume cannot contain the LUN (even if autogrow is enabled on the volume).
- LUNs on SnapLock volumes cannot be moved with System Manager.

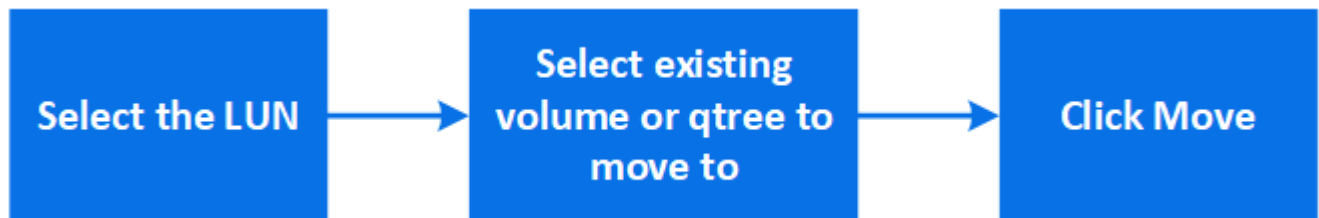

Steps

1. Click **Storage > LUNs**.
2. Select the LUN that you want to move and click **Move**.
3. Select an existing volume to which you want to move the LUN. If the volume contains qtrees, select the qtree.



While the Move operation is in progress, the LUN is displayed on both the origin and destination volume.

Balance loads by moving volumes to another tier

Starting with ONTAP 9.8, you can use System Manager to move a volume to another tier to balance the load.

Steps

1. Click **Storage > Volumes**.
2. Select the volume or volumes that you want to move, and then click **Move**.

3. Select an existing tier (aggregate) to which you want to move the volume or volumes.

Copyright Information

Copyright © 2020 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system-without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP “AS IS” AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

Trademark Information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.