



Learn about E-Series systems

E-Series Systems

NetApp

November 03, 2022

This PDF was generated from <https://docs.netapp.com/us-en/e-series/getting-started/learn-terms-concept.html> on November 03, 2022. Always check docs.netapp.com for the latest.

Table of Contents

- Learn about E-Series systems 1
 - E-Series terminology 1
 - E-Series hardware overview 2
 - E-Series shelf types 6
 - SANtricity software overview 7
 - E-Series videos 10

Learn about E-Series systems

E-Series terminology

Learn more about the terms used in E-Series.

Term	Description
controller	A controller consists of a board, firmware, and software. It controls the drives and implements the functions.
duplex/simplex configurations	Duplex is a two-controller module configuration within the storage array. Simplex is a single-controller module configuration.
HDD	Hard disk drives (HDDs) are data storage devices that use rotating metal platters with a magnetic coating.
HIC	A host interface card (HIC) connects the array to the host. It can optionally be installed within a controller canister.
IB	InfiniBand (IB) is a communications standard for data transmission between high-performance servers and storage systems.
IOPS	IOPS is input/output operations per second.
mirroring	Mirroring is the replication of data volumes onto separate storage arrays to ensure continuous availability.
pool	A pool is a set of drives that is logically grouped. You can use a pool to create one or more volumes accessible to a host.
power/fan canister	A power/fan canister is an assembly that slides into a shelf. It includes a power supply and an integrated fan.
rack unit (U)	A rack unit (abbreviated U) is a unit of measure defined as 44.50 millimetres (1.75 in).
SAS	Serial Attached SCSI (SAS) is a point-to-point serial protocol that links controllers directly to disk drives.

Term	Description
RoCE	RDMA over Converged Ethernet (RoCE) is a network protocol that allows remote direct memory access (RDMA) over an Ethernet network.
shelf	A shelf is an enclosure installed in a cabinet or rack. It contains the hardware components for the storage array. There are two types of shelves: a controller shelf and a drive shelf. A controller shelf includes controllers and drives. A drive shelf includes input/output modules (IOMs) and drives.
snapshot	A snapshot image is a logical copy of volume data, captured at a particular point-in-time. Like a restore point, snapshot images allow you to roll back to a known good data set.
SSD	Solid-state disks (SSDs) are data storage devices that use solid state memory (flash) to store data persistently. SSDs emulate conventional hard drives, and are available with the same interfaces that hard drives use.
storage array	A storage array includes shelves, controllers, drives, software, and firmware.
volume	A volume is a container in which applications, databases, and file systems store data. It is the logical component created for the host to access storage on the storage array.
workload	A workload is a storage object that supports an application. For some applications, System Manager configures the workload to contain volumes with similar underlying volume characteristics. These volume characteristics are optimized based on the type of application the workload supports.

E-Series hardware overview

E-Series storage arrays are available in several configurations and models.


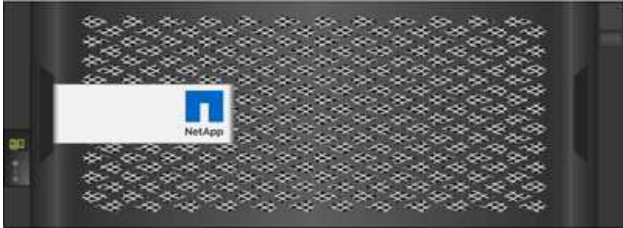
A storage array includes shelves, controllers, drives, software, and firmware. The array can be installed in a rack or cabinet, with customizable hardware for one or two controllers, in a 12-, 24-, or 60-drive shelf. You can connect the storage array to a SAN from multiple interface types and to a variety of host operating systems.

E-Series arrays are available in the following models:

- E2800 series — entry-level hybrid

- EF280 series — entry-level all flash
- EF300 series — entry-level all flash, all NVMe
- E5700 series — midrange hybrid
- EF570 series — midrange all flash
- EF600 series — midrange all flash, all NVMe

E2800 models

Component	Specification
Rack sizes:	<ul style="list-style-type: none"> • 2U12 (2 rack units; 12 drives) • 2U24 (2 rack units; 24 drives)  <ul style="list-style-type: none"> • 4U60 (4 rack units; 60 drives) 
Drives:	<p>Supports the following drive types:</p> <ul style="list-style-type: none"> • 3.5" NL-SAS (up to 180) • 2.5" SAS SSD (up to 120) • 2.5" SAS HDD (up to 180)
Interfaces:	<p>Available with the following interfaces:</p> <ul style="list-style-type: none"> • 12Gb SAS • 10Gb or 25Gb iSCSI • 16Gb or 32Gb Fibre Channel

EF280 models

Component	Specification
Rack sizes:	2U24 (2 rack units; 24 drives) 
Drives:	Supports up to 96 SSD 2.5" drives
Interfaces:	Available with the following interfaces: <ul style="list-style-type: none"> • 12Gb SAS • 10Gb or 25Gb iSCSI • 16Gb or 32Gb Fibre Channel

EF300 models

Component	Specification
Rack sizes:	2U24 (2 rack units; 24 drives) 
Drives and HICs:	Supports up to 24 NVMe SSDs, with a single host interface card (HIC) per controller.
Interfaces:	Available with the following interfaces: <ul style="list-style-type: none"> • 25Gb iSCSI • 32Gb NVMe / Fibre Channel • 32Gb SCSI / Fibre Channel • 100Gb iSER / IB • 100Gb SRP / IB • 100Gb NVMe / IB • 100Gb NVMe / RoCE

E5700 models

Component	Specification
Rack sizes:	<ul style="list-style-type: none"> • 2U24 (2 rack units; 24 drives)  <ul style="list-style-type: none"> • 4U60 (4 rack units; 60 drives) 
Drives:	Supports up to 480 of the following drive types: <ul style="list-style-type: none"> • 3.5" NL-SAS drives • 2.5" SAS SSD drives • 2.5" SAS HDD drives
Interfaces:	Available with the following interfaces: <ul style="list-style-type: none"> • 12Gb SAS • 10Gb or 25Gb iSCSI • 16Gb or 32Gb Fibre Channel • 32Gb NVMe / Fibre Channel • 100Gb iSER / IB • 100Gb SRP / IB • 100Gb NVMe / IB • 100Gb NVMe / RoCE

EF570 models

Component	Specification
Rack sizes:	2U24 (2 rack units; 24 drives) 
Drives:	Supports up to 120 SSD 2.5" drives

Component	Specification
Interfaces:	<p>Available with the following interfaces:</p> <ul style="list-style-type: none"> • 12Gb SAS • 10Gb or 25Gb iSCSI • 16Gb or 32Gb Fibre Channel • 32Gb NVMe / Fibre Channel • 100Gb iSER / IB • 100Gb SRP / IB • 100Gb NVMe / IB • 100Gb NVMe / RoCE

EF600 models

Component	Specification
Rack sizes:	<p>2U24 (2 rack units; 24 drives)</p> 
Drives and HICs:	<p>Supports up to 24 NVMe SSDs, with two host interface cards (HICs) per controller.</p>
Interfaces:	<p>Available with the following interfaces:</p> <ul style="list-style-type: none"> • 25Gb iSCSI • 32Gb NVMe / Fibre Channel • 32Gb SCSI / Fibre Channel • 100Gb iSER / IB • 100Gb SRP / IB • 100Gb NVMe / IB • 100Gb NVMe / RoCE • 200Gb iSER / IB • 200Gb NVMe / IB • 200Gb NVMe / RoCE

E-Series shelf types

E-Series systems are available in a variety of shelf sizes.

Shelf type	Illustration
DE212C: <ul style="list-style-type: none"> • 2u12 (2 rack units; 12 drives) • 3.5" HDDs and/or 2.5" SSDs (with adapter) • E2800 controllers only 	
DE224C: <ul style="list-style-type: none"> • 2u24 (2 rack units; 24 drives) • 2.5" HDD and/or 2.5" SSD drives • E2800, EF280, E5700, and EF570 controllers 	
DE460C: <ul style="list-style-type: none"> • 4u60 (4 rack units; 60 drives) • 3.5" and 2.5" drives (NL-SAS, SAS, and SSD) • E2800 and E5700 controllers 	
NE224: <ul style="list-style-type: none"> • 2u24 (2 rack units; 24 drives) • 2.5" NVMe SSD drives • EF300 and EF600 controllers 	

SANtricity software overview

E-Series systems include SANtricity software for storage provisioning and other tasks.

SANtricity software consists of these management interfaces:

- System Manager — a web-based interface used for managing one controller in a storage array.
- Unified Manager — a web-based interface used for viewing and managing all storage arrays in your network.
- Web Services Proxy — a REST API used for viewing and managing all storage arrays in your network.
- Command line interface (CLI) — a software application for configuring and monitoring storage arrays.



EF600 and EF300 storage arrays do not support mirroring, thin volumes, or SSD Cache features.

SANtricity System Manager

System Manager is web-based management software embedded on each controller. To access the user

interface, point a browser to the controller's IP address. A setup wizard helps you get started with system configuration.

System Manager offers a variety of management features, including:

 Performance	View up to 30 days of performance data, including I/O latency, IOPS, CPU utilization, and throughput.
 Storage	Provision storage using pools or volume groups, and create application workloads.
 Data protection	Perform backup and disaster recovery using snapshots, volume copy, and remote mirroring.
 Hardware	Check component status and perform some functions related to those components, such as assigning hot spare drives.
 Alerts	Notify administrators about important events occurring on the storage array. Alerts can be sent through email, SNMP traps, and syslog.
 Access Management	Configure user authentication that requires users to log in to the system with assigned credentials.
 System Settings	Configure other system performance features, such as SSD cache and autoload balancing.
 Support	View diagnostic data, manage upgrades, and configure AutoSupport, which monitors the health of a storage array and sends automatic dispatches to technical support.

SANtricity Unified Manager

Unified Manager is web-based software used for managing your entire domain. From a central view, you can see status for all newer E-Series and EF-Series arrays, such as the E2800, EF280, EF300, E5700, EF570, and EF600. You can also perform batch operations on selected storage arrays.

Unified Manager is installed on a management server along with the Web Services Proxy. To access Unified Manager, you open a browser and enter the URL pointing to the server where the Web Services Proxy is installed.

Unified Manager offers a variety of management features, including:

 Discover storage arrays	Find and add the storage arrays you want to manage in your organization's network. You can then view the status of all storage arrays from a single page.
 Launch	Open an instance of System Manager to perform individual management operations on a particular storage array.
 Import Settings	Perform a batch import from one storage array to multiple arrays, including settings for alerts, AutoSupport, and directory services.
 Mirroring	Configure asynchronous or synchronous mirrored pairs between two storage arrays.
 Manage Groups	Organize storage arrays into groups for easier management.
 Upgrade Center	Upgrade the SANtricity OS software on multiple storage arrays.
 Certificates	Create certificate signing requests (CSRs), import certificates, and manage existing certificates for multiple storage arrays.



Access Management

Configure user authentication that requires users to log in to Unified Manager with assigned credentials.

SANtricity Web Services Proxy

The Web Services Proxy is a RESTful API server that can manage hundreds of new and legacy E-Series arrays. The proxy is installed separately on a Windows or Linux server.

Web Services includes API documentation that allows you to directly interact with the REST API. To access the Web Services API documentation, you open a browser and enter the URL pointing to the server where the Web Services Proxy is installed.

Command line interface (CLI)

The command line interface (CLI) is a software application that provides a way to configure and monitor storage arrays. Using the CLI, you can run commands from an operating system prompt, such as the DOS C: prompt, a Linux operating system path, or a Solaris operating system path.

E-Series videos

Access video demos to learn more about E-Series systems.

E-Series: Fast, Simple, Reliable Storage

This video highlights the key benefits of using NetApp E-Series systems versus using commodity servers for storage.

[NetApp video: Key benefits of using NetApp E-Series systems versus using commodity servers for storage](#)

System Manager: Easy Setup and Configuration

This Technical Demo shows how the web-based SANtricity System Manager interface enables easy set-up and configuration of the NetApp E2800.

[NetApp video: SANtricity System Manager: Easy Setup and Configuration](#)

Copyright information

Copyright © 2022 NetApp, Inc. All Rights Reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means—graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system—without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP “AS IS” AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

LIMITED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (b)(3) of the Rights in Technical Data -Noncommercial Items at DFARS 252.227-7013 (FEB 2014) and FAR 52.227-19 (DEC 2007).

Data contained herein pertains to a commercial product and/or commercial service (as defined in FAR 2.101) and is proprietary to NetApp, Inc. All NetApp technical data and computer software provided under this Agreement is commercial in nature and developed solely at private expense. The U.S. Government has a non-exclusive, non-transferrable, nonsublicensable, worldwide, limited irrevocable license to use the Data only in connection with and in support of the U.S. Government contract under which the Data was delivered. Except as provided herein, the Data may not be used, disclosed, reproduced, modified, performed, or displayed without the prior written approval of NetApp, Inc. United States Government license rights for the Department of Defense are limited to those rights identified in DFARS clause 252.227-7015(b) (FEB 2014).

Trademark information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.