

# **IC Compiler™ II**

## **Library Preparation**

### **User Guide**

---

Version O-2018.06, June 2018

**SYNOPSYS®**

# Copyright Notice and Proprietary Information

©2018 Synopsys, Inc. All rights reserved. This Synopsys software and all associated documentation are proprietary to Synopsys, Inc. and may only be used pursuant to the terms and conditions of a written license agreement with Synopsys, Inc. All other use, reproduction, modification, or distribution of the Synopsys software or the associated documentation is strictly prohibited.

## Destination Control Statement

All technical data contained in this publication is subject to the export control laws of the United States of America. Disclosure to nationals of other countries contrary to United States law is prohibited. It is the reader's responsibility to determine the applicable regulations and to comply with them.

## Disclaimer

SYNOPSYS, INC., AND ITS LICENSORS MAKE NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

## Trademarks

Synopsys and certain Synopsys product names are trademarks of Synopsys, as set forth at <http://www.synopsys.com/Company/Pages/Trademarks.aspx>. All other product or company names may be trademarks of their respective owners.

## Free and Open-Source Software Licensing Notices

If applicable, Free and Open-Source Software (FOSS) licensing notices are available in the product installation.

## Third-Party Links

Any links to third-party websites included in this document are for your convenience only. Synopsys does not endorse and is not responsible for such websites and their practices, including privacy practices, availability, and content.

Synopsys, Inc.  
690 E. Middlefield Road  
Mountain View, CA 94043  
[www.synopsys.com](http://www.synopsys.com)

# Synopsys® Free and Open-Source Licensing Notices for IC Compiler™ II Products

## Contents

Document Overview .....	iii
FOSS Package Notices .....	iii
GNU Bison 3.0.4 .....	iii
Flex 2.5.37 .....	xi
LEF/DEF Reader 5.8-p008 .....	xi
mcpp 2.7.2 .....	xi
Oasis Wrapper 1.0.0 .....	xiv
Threading Building Blocks 4.4.0 .....	xv
TCL/TK 8.5.12 .....	xix
zlib 12.5.3 .....	xix
libedit .....	xix

## Document Overview

This document includes licensing information relating to free and open-source software (“FOSS”) included with Synopsys’s® IC Compiler II™ products (the “SOFTWARE”). The terms of the applicable FOSS license(s) govern Synopsys’s® distribution and your use of the SOFTWARE. Synopsys® and the third-party authors, licensors, and distributors of the SOFTWARE disclaim all warranties and all liability arising from any and all use and distribution of the SOFTWARE. To the extent the FOSS is provided under an agreement with Synopsys® that differs from the applicable FOSS license(s), those terms are offered by Synopsys® alone.

Synopsys® has reproduced below copyright and other licensing notices appearing within the FOSS packages. While Synopsys® seeks to provide complete and accurate copyright and licensing information for each FOSS package, Synopsys® does not represent or warrant that the following information is complete, correct, or error-free. SOFTWARE recipients are encouraged to (a) investigate the identified FOSS packages to confirm the accuracy of the licensing information provided herein and (b) notify Synopsys® of any inaccuracies or errors found in this document so that Synopsys® may update this document accordingly.

Certain FOSS licenses (such as the GNU General Public License, GNU Lesser General Public License, and Eclipse Public License) require that Synopsys® make the source code corresponding to the distributed FOSS binaries available under the terms of the same FOSS license. Recipients who would like to receive a copy of such corresponding source code should submit a request to Synopsys® by post at:

Synopsys  
Attn: Open Source Requests  
690 East Middlefield Road  
Mountain View, CA 94043

Please provide the following information in all submitted FOSS requests:

- the FOSS packages for which you are requesting source code;
- the Synopsys® product (and any available version information) with which the requested FOSS packages are distributed;
- an email address at which Synopsys® may contact you regarding the request (if available); and
- the postal address for delivery of the requested source code.

## FOSS Package Notices

### GNU Bison 3.0.4

Project homepage: <https://www.gnu.org/software/bison/>

Project license:

Copyright © 1998-2013 Free Software Foundation, Inc. This file is part of Bison, the GNU Compiler Compiler.

This program is free software: you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation, either version 3 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program. If not, see <<http://www.gnu.org/licenses/>>.

## GNU GENERAL PUBLIC LICENSE

Version 3, 29 June 2007

Copyright © 2007 Free Software Foundation, Inc. <<http://fsf.org/>>

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

### Preamble

The GNU General Public License is a free, copyleft license for software and other kinds of works.

The licenses for most software and other practical works are designed to take away your freedom to share and change the works. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change all versions of a program--to make sure it remains free software for all its users. We, the Free Software Foundation, use the GNU General Public License for most of our software; it applies also to any other work released this way by its authors. You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for them if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs, and that you know you can do these things.

To protect your rights, we need to prevent others from denying you these rights or asking you to surrender the rights. Therefore, you have certain responsibilities if you distribute copies of the software, or if you modify it: responsibilities to respect the freedom of others.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must pass on to the recipients the same freedoms that you received. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

Developers that use the GNU GPL protect your rights with two steps:(1) assert copyright on the software, and (2) offer you this License giving you legal permission to copy, distribute and/or modify it.

For the developers' and authors' protection, the GPL clearly explains that there is no warranty for this free software. For both users' and authors' sake, the GPL requires that modified versions be marked as changed, so that their problems will not be attributed erroneously to authors of previous versions.

Some devices are designed to deny users access to install or run modified versions of the software inside them, although the manufacturer can do so. This is fundamentally incompatible with the aim of protecting users' freedom to change the software. The systematic pattern of such abuse occurs in the area of products for individuals to use, which is precisely where it is most unacceptable. Therefore, we have designed this version of the GPL to prohibit the practice for those products. If such problems arise substantially in other domains, we stand ready to extend this provision to those domains in future versions of the GPL, as needed to protect the freedom of users.

Finally, every program is threatened constantly by software patents. States should not allow patents to restrict development and use of software on general-purpose computers, but in those that do, we wish to avoid the special danger that patents applied to a free program could make it effectively proprietary. To prevent this, the GPL assures that patents cannot be used to render the program non-free.

The precise terms and conditions for copying, distribution and modification follow.

## TERMS AND CONDITIONS

### 0. Definitions.

"This License" refers to version 3 of the GNU General Public License.

"Copyright" also means copyright-like laws that apply to other kinds of works, such as semiconductor masks.

"The Program" refers to any copyrightable work licensed under this License. Each licensee is addressed as "you".

"Licensees" and "recipients" may be individuals or organizations.

To "modify" a work means to copy from or adapt all or part of the work in a fashion requiring copyright permission, other than the making of an exact copy. The resulting work is called a "modified version" of the earlier work or a work "based on" the earlier work.

A "covered work" means either the unmodified Program or a work based on the Program.

To "propagate" a work means to do anything with it that, without permission, would make you directly or secondarily liable for infringement under applicable copyright law, except executing it on a computer or modifying a private copy. Propagation includes copying, distribution (with or without modification), making available to the public, and in some countries other activities as well.

To "convey" a work means any kind of propagation that enables other parties to make or receive copies. Mere interaction with a user through a computer network, with no transfer of a copy, is not conveying.

An interactive user interface displays "Appropriate Legal Notices" to the extent that it includes a convenient and prominently visible feature that (1) displays an appropriate copyright notice, and (2) tells the user that there is no warranty for the work (except to the extent that warranties are provided), that licensees may convey the work under this License, and how to view a copy of this License. If the interface presents a list of user commands or options, such as a menu, a prominent item in the list meets this criterion.

### **1. Source Code.**

The "source code" for a work means the preferred form of the work for making modifications to it. "Object code" means any non-source form of a work.

A "Standard Interface" means an interface that either is an official standard defined by a recognized standards body, or, in the case of interfaces specified for a particular programming language, one that is widely used among developers working in that language.

The "System Libraries" of an executable work include anything, other than the work as a whole, that (a) is included in the normal form of packaging a Major Component, but which is not part of that Major Component, and (b) serves only to enable use of the work with that Major Component, or to implement a Standard Interface for which an implementation is available to the public in source code form. A "Major Component", in this context, means a major essential component (kernel, window system, and so on) of the specific operating system (if any) on which the executable work runs, or a compiler used to produce the work, or an object code interpreter used to run it.

The "Corresponding Source" for a work in object code form means all the source code needed to generate, install, and (for an executable work) run the object code and to modify the work, including scripts to control those activities. However, it does not include the work's System Libraries, or general-purpose tools or generally available free programs which are used unmodified in performing those activities but which are not part of the work. For example, Corresponding Source includes interface definition files associated with source files for the work, and the source code for shared libraries and dynamically linked subprograms that the work is specifically designed to require, such as by intimate data communication or control flow between those subprograms and other parts of the work.

The Corresponding Source need not include anything that users can regenerate automatically from other parts of the Corresponding Source. The Corresponding Source for a work in source code form is that same work.

### **2. Basic Permissions.**

All rights granted under this License are granted for the term of copyright on the Program, and are irrevocable provided the stated conditions are met. This License explicitly affirms your unlimited permission to run the unmodified Program. The output from running a covered work is covered by this License only if the output, given its content, constitutes a covered work. This License acknowledges your rights of fair use or other equivalent, as provided by copyright law.

You may make, run and propagate covered works that you do not convey, without conditions so long as your license otherwise remains in force. You may convey covered works to others for the sole purpose of having them make modifications exclusively for you, or provide you with facilities for running those works, provided that you comply with the terms of this License in conveying all material for which you do not control copyright. Those thus making or running the covered works for you must do so exclusively on your behalf, under your direction and control, on terms that prohibit them from making any copies of your copyrighted material outside their relationship with you.

Conveying under any other circumstances is permitted solely under the conditions stated below. Sublicensing is not allowed; section 10 makes it unnecessary.

### **3. Protecting Users' Legal Rights From Anti-Circumvention Law.**

No covered work shall be deemed part of an effective technological measure under any applicable law fulfilling obligations under article 11 of the WIPO copyright treaty adopted on 20 December 1996, or similar laws prohibiting or restricting circumvention of such measures.

When you convey a covered work, you waive any legal power to forbid circumvention of technological measures to the extent such circumvention is effected by exercising rights under this License with respect to the covered work, and you disclaim any intention to limit operation or modification of the work as a means of enforcing, against the work's users, your or third parties' legal rights to forbid circumvention of technological measures.

#### **4. Conveying Verbatim Copies.**

You may convey verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice; keep intact all notices stating that this License and any non-permissive terms added in accord with section 7 apply to the code; keep intact all notices of the absence of any warranty; and give all recipients a copy of this License along with the Program.

You may charge any price or no price for each copy that you convey, and you may offer support or warranty protection for a fee.

#### **5. Conveying Modified Source Versions.**

You may convey a work based on the Program, or the modifications to produce it from the Program, in the form of source code under the terms of section 4, provided that you also meet all of these conditions:

- a) The work must carry prominent notices stating that you modified it, and giving a relevant date.
- b) The work must carry prominent notices stating that it is released under this License and any conditions added under section 7. This requirement modifies the requirement in section 4 to "keep intact all notices".
- c) You must license the entire work, as a whole, under this License to anyone who comes into possession of a copy. This License will therefore apply, along with any applicable section 7 additional terms, to the whole of the work, and all its parts, regardless of how they are packaged. This License gives no permission to license the work in any other way, but it does not invalidate such permission if you have separately received it.
- d) If the work has interactive user interfaces, each must display Appropriate Legal Notices; however, if the Program has interactive interfaces that do not display Appropriate Legal Notices, your work need not make them do so.

A compilation of a covered work with other separate and independent works, which are not by their nature extensions of the covered work, and which are not combined with it such as to form a larger program, in or on a volume of a storage or distribution medium, is called an "aggregate" if the compilation and its resulting copyright are not used to limit the access or legal rights of the compilation's users beyond what the individual works permit. Inclusion of a covered work in an aggregate does not cause this License to apply to the other parts of the aggregate.

#### **6. Conveying Non-Source Forms.**

You may convey a covered work in object code form under the terms of sections 4 and 5, provided that you also convey the machine-readable Corresponding Source under the terms of this License, in one of these ways:

- a) Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by the Corresponding Source fixed on a durable physical medium customarily used for software interchange.
- b) Convey the object code in, or embodied in, a physical product (including a physical distribution medium), accompanied by a written offer, valid for at least three years and valid for as long as you offer spare parts or customer support for that product model, to give anyone who possesses the object code either (1) a copy of the Corresponding Source for all the software in the product that is covered by this License, on a durable physical medium customarily used for software interchange, for a price no more than your reasonable cost of physically performing this conveying of source, or (2) access to copy the Corresponding Source from a network server at no charge.
- c) Convey individual copies of the object code with a copy of the written offer to provide the Corresponding Source. This alternative is allowed only occasionally and noncommercially, and only if you received the object code with such an offer, in accord with subsection 6b.
- d) Convey the object code by offering access from a designated place (gratis or for a charge), and offer equivalent access to the Corresponding Source in the same way through the same place at no further charge. You need not require recipients to copy the Corresponding Source along with the object code. If the place to copy the object code is a network server, the Corresponding Source may be on a different server (operated by you or a third party) that supports equivalent copying facilities, provided you maintain clear directions next to the object code saying where to find the Corresponding Source. Regardless of what server hosts the Corresponding Source, you remain obligated to ensure that it is available for as long as needed to satisfy these requirements.
- e) Convey the object code using peer-to-peer transmission, provided you inform other peers where the object code and Corresponding Source of the work are being offered to the general public at no charge under subsection 6d.

A separable portion of the object code, whose source code is excluded from the Corresponding Source as a System Library, need not be included in conveying the object code work.

A "User Product" is either (1) a "consumer product", which means any tangible personal property which is normally used for personal, family, or household purposes, or (2) anything designed or sold for incorporation into a dwelling. In determining whether a product is a consumer product, doubtful cases shall be resolved in favor of coverage. For a

particular product received by a particular user, "normally used" refers to a typical or common use of that class of product, regardless of the status of the particular user or of the way in which the particular user actually uses, or expects or is expected to use, the product. A product is a consumer product regardless of whether the product has substantial commercial, industrial or non-consumer uses, unless such uses represent the only significant mode of use of the product.

"Installation Information" for a User Product means any methods, procedures, authorization keys, or other information required to install and execute modified versions of a covered work in that User Product from a modified version of its Corresponding Source. The information must suffice to ensure that the continued functioning of the modified object code is in no case prevented or interfered with solely because modification has been made.

If you convey an object code work under this section in, or with, or specifically for use in, a User Product, and the conveying occurs as part of a transaction in which the right of possession and use of the User Product is transferred to the recipient in perpetuity or for a fixed term (regardless of how the transaction is characterized), the Corresponding Source conveyed under this section must be accompanied by the Installation Information. But this requirement does not apply if neither you nor any third party retains the ability to install modified object code on the User Product (for example, the work has been installed in ROM).

The requirement to provide Installation Information does not include a requirement to continue to provide support service, warranty, or updates for a work that has been modified or installed by the recipient, or for the User Product in which it has been modified or installed. Access to a network may be denied when the modification itself materially and adversely affects the operation of the network or violates the rules and protocols for communication across the network.

Corresponding Source conveyed, and Installation Information provided, in accord with this section must be in a format that is publicly documented (and with an implementation available to the public in source code form), and must require no special password or key for unpacking, reading or copying.

## **7. Additional Terms.**

"Additional permissions" are terms that supplement the terms of this License by making exceptions from one or more of its conditions. Additional permissions that are applicable to the entire Program shall be treated as though they were included in this License, to the extent that they are valid under applicable law. If additional permissions apply only to part of the Program, that part may be used separately under those permissions, but the entire Program remains governed by this License without regard to the additional permissions.

When you convey a copy of a covered work, you may at your option remove any additional permissions from that copy, or from any part of it. (Additional permissions may be written to require their own removal in certain cases when you modify the work.) You may place additional permissions on material, added by you to a covered work, for which you have or can give appropriate copyright permission.

Notwithstanding any other provision of this License, for material you add to a covered work, you may (if authorized by the copyright holders of that material) supplement the terms of this License with terms:

- a) Disclaiming warranty or limiting liability differently from the terms of sections 15 and 16 of this License; or
- b) Requiring preservation of specified reasonable legal notices or author attributions in that material or in the Appropriate Legal Notices displayed by works containing it; or
- c) Prohibiting misrepresentation of the origin of that material, or requiring that modified versions of such material be marked in reasonable ways as different from the original version; or
- d) Limiting the use for publicity purposes of names of licensors or authors of the material; or
- e) Declining to grant rights under trademark law for use of some trade names, trademarks, or service marks; or
- f) Requiring indemnification of licensors and authors of that material by anyone who conveys the material (or modified versions of it) with contractual assumptions of liability to the recipient, for any liability that these contractual assumptions directly impose on those licensors and authors.

All other non-permissive additional terms are considered "further restrictions" within the meaning of section 10. If the Program as you received it, or any part of it, contains a notice stating that it is governed by this License along with a term that is a further restriction, you may remove that term. If a license document contains a further restriction but permits relicensing or conveying under this License, you may add to a covered work material governed by the terms of that license document, provided that the further restriction does not survive such relicensing or conveying.

If you add terms to a covered work in accord with this section, you must place, in the relevant source files, a statement of the additional terms that apply to those files, or a notice indicating where to find the applicable terms.

Additional terms, permissive or non-permissive, may be stated in the form of a separately written license, or stated as exceptions; the above requirements apply either way.

## **8. Termination.**

You may not propagate or modify a covered work except as expressly provided under this License. Any attempt otherwise to propagate or modify it is void, and will automatically terminate your rights under this License (including any patent licenses granted under the third paragraph of section 11).

However, if you cease all violation of this License, then your license from a particular copyright holder is reinstated (a) provisionally, unless and until the copyright holder explicitly and finally terminates your license, and (b) permanently, if the copyright holder fails to notify you of the violation by some reasonable means prior to 60 days after the cessation.

Moreover, your license from a particular copyright holder is reinstated permanently if the copyright holder notifies you of the violation by some reasonable means, this is the first time you have received notice of violation of this License (for any work) from that copyright holder, and you cure the violation prior to 30 days after your receipt of the notice.

Termination of your rights under this section does not terminate the licenses of parties who have received copies or rights from you under this License. If your rights have been terminated and not permanently reinstated, you do not qualify to receive new licenses for the same material under section 10.

## **9. Acceptance Not Required for Having Copies.**

You are not required to accept this License in order to receive or run a copy of the Program. Ancillary propagation of a covered work occurring solely as a consequence of using peer-to-peer transmission to receive a copy likewise does not require acceptance. However, nothing other than this License grants you permission to propagate or modify any covered work. These actions infringe copyright if you do not accept this License. Therefore, by modifying or propagating a covered work, you indicate your acceptance of this License to do so.

## **10. Automatic Licensing of Downstream Recipients.**

Each time you convey a covered work, the recipient automatically receives a license from the original licensors, to run, modify and propagate that work, subject to this License. You are not responsible for enforcing compliance by third parties with this License.

An "entity transaction" is a transaction transferring control of an organization, or substantially all assets of one, or subdividing an organization, or merging organizations. If propagation of a covered work results from an entity transaction, each party to that transaction who receives a copy of the work also receives whatever licenses to the work the party's predecessor in interest had or could give under the previous paragraph, plus a right to possession of the Corresponding Source of the work from the predecessor in interest, if the predecessor has it or can get it with reasonable efforts.

You may not impose any further restrictions on the exercise of the rights granted or affirmed under this License. For example, you may not impose a license fee, royalty, or other charge for exercise of rights granted under this License, and you may not initiate litigation (including a cross-claim or counterclaim in a lawsuit) alleging that any patent claim is infringed by making, using, selling, offering for sale, or importing the Program or any portion of it.

## **11. Patents.**

A "contributor" is a copyright holder who authorizes use under this License of the Program or a work on which the Program is based. The work thus licensed is called the contributor's "contributor version".

A contributor's "essential patent claims" are all patent claims owned or controlled by the contributor, whether already acquired or hereafter acquired, that would be infringed by some manner, permitted by this License, of making, using, or selling its contributor version, but do not include claims that would be infringed only as a consequence of further modification of the contributor version. For purposes of this definition, "control" includes the right to grant patent sublicenses in a manner consistent with the requirements of this License.

Each contributor grants you a non-exclusive, worldwide, royalty-free patent license under the contributor's essential patent claims, to make, use, sell, offer for sale, import and otherwise run, modify and propagate the contents of its contributor version.

In the following three paragraphs, a "patent license" is any express agreement or commitment, however denominated, not to enforce a patent (such as an express permission to practice a patent or covenant not to sue for patent infringement). To "grant" such a patent license to a party means to make such an agreement or commitment not to enforce a patent against the party.

If you convey a covered work, knowingly relying on a patent license, and the Corresponding Source of the work is not available for anyone to copy, free of charge and under the terms of this License, through a publicly available network server or other readily accessible means, then you must either (1) cause the Corresponding Source to be so available,



or (2) arrange to deprive yourself of the benefit of the patent license for this particular work, or (3) arrange, in a manner consistent with the requirements of this License, to extend the patent license to downstream recipients. "Knowingly relying" means you have actual knowledge that, but for the patent license, your conveying the covered work in a country, or your recipient's use of the covered work in a country, would infringe one or more identifiable patents in that country that you have reason to believe are valid.

If, pursuant to or in connection with a single transaction or arrangement, you convey, or propagate by procuring conveyance of, a covered work, and grant a patent license to some of the parties receiving the covered work authorizing them to use, propagate, modify or convey a specific copy of the covered work, then the patent license you grant is automatically extended to all recipients of the covered work and works based on it.

A patent license is "discriminatory" if it does not include within the scope of its coverage, prohibits the exercise of, or is conditioned on the non-exercise of one or more of the rights that are specifically granted under this License. You may not convey a covered work if you are a party to an arrangement with a third party that is in the business of distributing software, under which you make payment to the third party based on the extent of your activity of conveying the work, and under which the third party grants, to any of the parties who would receive the covered work from you, a discriminatory patent license (a) in connection with copies of the covered work conveyed by you (or copies made from those copies), or (b) primarily for and in connection with specific products or compilations that contain the covered work, unless you entered into that arrangement, or that patent license was granted, prior to 28 March 2007.

Nothing in this License shall be construed as excluding or limiting any implied license or other defenses to infringement that may otherwise be available to you under applicable patent law.

#### **12. No Surrender of Others' Freedom.**

If conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot convey a covered work so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not convey it at all. For example, if you agree to terms that obligate you to collect a royalty for further conveying from those to whom you convey the Program, the only way you could satisfy both those terms and this License would be to refrain entirely from conveying the Program.

#### **13. Use with the GNU Affero General Public License.**

Notwithstanding any other provision of this License, you have permission to link or combine any covered work with a work licensed under version 3 of the GNU Affero General Public License into a single combined work, and to convey the resulting work. The terms of this License will continue to apply to the part which is the covered work, but the special requirements of the GNU Affero General Public License, section 13, concerning interaction through a network will apply to the combination as such.

#### **14. Revised Versions of this License.**

The Free Software Foundation may publish revised and/or new versions of the GNU General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies that a certain numbered version of the GNU General Public License "or any later version" applies to it, you have the option of following the terms and conditions either of that numbered version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of the GNU General Public License, you may choose any version ever published by the Free Software Foundation.

If the Program specifies that a proxy can decide which future versions of the GNU General Public License can be used, that proxy's public statement of acceptance of a version permanently authorizes you to choose that version for the Program.

Later license versions may give you additional or different permissions. However, no additional obligations are imposed on any author or copyright holder as a result of your choosing to follow a later version.

#### **15. Disclaimer of Warranty.**

THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

## 16. Limitation of Liability.

IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MODIFIES AND/OR CONVEYS THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

## 17. Interpretation of Sections 15 and 16.

If the disclaimer of warranty and limitation of liability provided above cannot be given local legal effect according to their terms, reviewing courts shall apply local law that most closely approximates an absolute waiver of all civil liability in connection with the Program, unless a warranty or assumption of liability accompanies a copy of the Program in return for a fee.

## END OF TERMS AND CONDITIONS

### How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively state the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

```
<one line to give the program's name and a brief idea of what it does.>
Copyright (C) <year> <name of author>
```

```
This program is free software: you can redistribute it and/or modify it under the terms of the
GNU General Public License as published by the Free Software Foundation, either version 3 of
the License, or (at your option) any later version.
```

```
This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without
even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU
General Public License for more details.
You should have received a copy of the GNU General Public License along with this program. If
not, see <http://www.gnu.org/licenses/>.
```

Also add information on how to contact you by electronic and paper mail.

If the program does terminal interaction, make it output a short notice like this when it starts in an interactive mode:

```
<program> Copyright (C) <year> <name of author>
This program comes with ABSOLUTELY NO WARRANTY; for details type `show w'. This is free software,
and you are welcome to redistribute it under certain conditions; type `show c' for details.
```

The hypothetical commands `show w' and `show c' should show the appropriate parts of the General Public License. Of course, your program's commands might be different; for a GUI interface, you would use an "about box".

You should also get your employer (if you work as a programmer) or school, if any, to sign a "copyright disclaimer" for the program, if necessary. For more information on this, and how to apply and follow the GNU GPL, see <<http://www.gnu.org/licenses/>>.

The GNU General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Lesser General Public License instead of this License. But first, please read <<http://www.gnu.org/philosophy/why-not-lgpl.html>>.

Synopsys® license note: certain source files included with GNU Bison include the exception to the GPL-3.0 license copied below.

As a special exception, you may create a larger work that contains part or all of the Bison parser skeleton and distribute that work under terms of your choice, so long as that work isn't itself a parser generator using the skeleton or a modified version thereof as a parser skeleton. Alternatively, if you modify or redistribute the parser skeleton itself, you may (at your option) remove this special exception, which will cause the skeleton and the resulting Bison output files to be licensed under the GNU General Public License without this special exception.

This special exception was added by the Free Software Foundation in version 2.2 of Bison.

### **Flex 2.5.37**

Project homepage: <http://flex.sourceforge.net/>

Project license:

Flex carries the copyright used for BSD software, slightly modified because it originated at the Lawrence Berkeley (not Livermore!) Laboratory, which operates under a contract with the Department of Energy:

Copyright © 2001, 2002, 2003, 2004, 2005, 2006, 2007 The Flex Project.

Copyright © 1990, 1997 The Regents of the University of California.

All rights reserved. This code is derived from software contributed to Berkeley by Vern Paxson.

The United States Government has rights in this work pursuant to contract no. DE-AC03-76SF00098 between the United States Department of Energy and the University of California.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1.Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2.Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3.Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED ``AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

This basically says "do whatever you please with this software except remove this notice or take advantage of the University's (or the flex authors') name".

Note that the "flex.skl" scanner skeleton carries no copyright notice.

You are free to do whatever you please with scanners generated using flex; for them, you are not even bound by the above copyright.

### **LEF/DEF Reader 5.8-p008**

Project homepage: <http://projects.si2.org/openeda.si2.org/projects/lefdef>

Project license:

Cadence LEF/DEF Agreement Version 2.1 January 17,2003

THE ACCOMPANYING SOFTWARE PROGRAM IS PROVIDED UNDER THE TERMS AND CONDITIONS OF THIS LICENSE AGREEMENT ("AGREEMENT"). PLEASE REVIEW THIS AGREEMENT CAREFULLY. ANY USE, REPRODUCTION, MODIFICATION OR DISTRIBUTION OF THE PROGRAM CONSTITUTES ACCEPTANCE OF THIS AGREEMENT. IF YOU ARE AGREEING TO THIS LICENSE ON BEHALF OF A COMPANY, YOU REPRESENT THAT YOU ARE AUTHORIZED TO BIND THE COMPANY TO THIS AGREEMENT.

Cadence Design Systems, Inc. ("Cadence") is licensing the software program ("Program") provided hereunder under an open source arrangement. The licensee hereunder may use, copy and modify the Program only pursuant to this Agreement. While Cadence encourages any and all improvements or other modifications made to the Program to be contributed to the community source and thereby made available to others under the same terms and conditions as included in this Agreement, this is not required. However, any error corrections made to the Program must be contributed to the community source.

## 1. DEFINITIONS

- 1.1 "Contribution" means the submission of the Original Program by Cadence and the submission of any modifications, improvements, additions, corrections or other changes to the Program, including source code, object code, application program interface definitions and formats, and documentation, made by any Contributor where such changes and/or additions to the Program originate from and are distributed by that particular Contributor. Each Contributor acknowledges and agrees that no guarantee is provided that a Contribution shall be included within the Program as distributed by any Recipient. A Contribution must be made by a Contributor if: (1) such Contribution is an error correction to the Program, or (2) the Contributor commercially distributes the Program with such Contribution, in which case the Contribution must be made within thirty (30) days of the commercial distribution of the Program. "Commercially distributes" as used herein shall mean distribution of the Program by a Contributor in consideration for revenue received. A Contribution 'originates' from a Contributor if it was added to the Program by such Contributor itself or anyone acting on such Contributor's behalf. Contributions do not include additions to the Program which: (i) are separate modules of software or data distributed in conjunction with the Program under their own license agreement, and (ii) are not derivative works of the Program.
- 1.2 "Contributor" means Cadence and any other entity that distributes the Program.
- 1.3 "Licensed Patents" mean patent claims licensable by any Contributor which are necessarily infringed by the use or sale of its Contribution alone or when combined with the Program.
- 1.4 "Original Program" means the original version of the software accompanying this Agreement as released by Cadence, including source code, object code, application program interface definitions and formats, and documentation, if any.
- 1.5 "Program" means the Original Program and Contributions.
- 1.6 "Recipient" means anyone who receives the Program under this Agreement, including all Contributors.

## 2. GRANT OF RIGHTS

- 2.1 Subject to the terms and conditions of this Agreement, each Contributor hereby grants each Recipient a non-exclusive, worldwide, royalty-free copyright license to reproduce, prepare derivative works of, publicly display, publicly perform, distribute and sublicense the Contribution of such Contributor, in source code and object code format.
- 2.2 Subject to the terms and conditions of this Agreement, each Contributor hereby grants each Recipient a non-exclusive, worldwide, royalty-free patent license under Licensed Patents to make, use, sell, offer to sell, import and otherwise transfer the Contribution of such Contributor, if any, in source code and object code format along with any documentation. This patent license shall apply to the combination of the Contribution and the Program if, at the time the Contribution is added by the Contributor, such addition of the Contribution causes such combination to be covered by the Licensed Patents. The patent license shall not apply to any other combinations which include the Contribution.
- 2.3 Subject to the terms and conditions of this Agreement, Cadence hereby grants each Recipient a non-exclusive, worldwide, royalty-free trademark license, to use the Cadence trademarks "LEF", or "DEF", in accordance with Cadence's marking policies, in connection with the license grants hereunder provided, however, that use of the Cadence trademarks in connection with Recipient's distribution of the Program is only permitted for the unmodified Program.
- 2.4 Recipient understands that although each Contributor grants the licenses to its Contributions set forth herein, no assurances are provided by any Contributor that the Program does not infringe the patent or other intellectual property rights of any other entity. Each Contributor disclaims any liability to Recipient for claims brought by any other entity based on infringement of intellectual property rights or otherwise. As a condition to exercising the rights and licenses granted hereunder, each Recipient hereby assumes sole responsibility to secure any other intellectual property rights needed, if any. For example, if a third party patent license is required to allow Recipient to distribute the Program, it is Recipient's responsibility to acquire that license before distributing the Program.
- 2.5 Each Contributor represents that to its knowledge it has sufficient copyright rights in its Contribution, if any, to grant the copyright license set forth in this Agreement. Except as expressly stated in Sections 2.1, 2.2 and 2.3 above, Recipient receives no rights or licenses to the intellectual property of any Contributor under this Agreement, whether expressly, by implication, estoppel or otherwise. All rights in the Program not expressly granted under this Agreement are reserved.

### 3. DISTRIBUTION REQUIREMENTS

- 3.1 A Contributor may choose to distribute the Program in object code form under its own license agreement, provided that: (a) it complies with the terms and conditions of this Agreement; and (b) the terms and conditions of its license agreement: (i) effectively disclaims on behalf of all Contributors all warranties and conditions, express and implied, including warranties or conditions of title and non-infringement, and implied warranties or conditions of merchantability and fitness for a particular purpose; (ii) effectively excludes on behalf of all Contributors all liability for damages, including, but not limited to, direct, indirect, special, incidental and consequential damages; (iii) states that any provisions which differ from this Agreement are offered by that Contributor alone and not by any other party; and (iv) states that source code for the Program is available from such Contributor, and informs licensees how to obtain it in a reasonable manner on or through a medium customarily used for software exchange.
- 3.2 When the Program is made available in source code form it must be made available under the terms and conditions of this Agreement. A copy of this Agreement must be included with each copy of such Program. A Contributor may not charge a fee for the distribution of the source code of the Program.
- 3.3 Each Contributor must preserve all copyright and other notices that appear in the Program. In addition, each Contributor must identify itself as the originator of its Contribution, if any, in a manner that reasonably allows subsequent Recipients to identify the originator of the Contribution.
- 3.4 While this license is intended to facilitate the commercial use of the Program, the Contributor who includes the Program in a commercial product offering should do so in a manner which does not create potential liability for other Contributors. Therefore, if a Contributor includes the Program in a commercial product offering, such Contributor ("Commercial Contributor") hereby agrees to defend and indemnify every other Contributor ("Indemnified Contributor") against any losses, damages and costs (collectively "Losses") arising from claims, lawsuits and other legal actions brought by a third party against the Indemnified Contributor to the extent caused by the acts or omissions of such Commercial Contributor in connection with its distribution of the Program in a commercial product offering. The obligations in this section do not apply to any claims or Losses relating to any actual or alleged intellectual property infringement. In order to qualify, an Indemnified Contributor must: a) promptly notify the Commercial Contributor in writing of such claim, and b) allow the Commercial Contributor to control, and cooperate with the Commercial Contributor in, the defense and any related settlement negotiations. The Indemnified Contributor may participate in any such claim at its own expense.

### 4. NO WARRANTY

EXCEPT AS EXPRESSLY SET FORTH IN THIS AGREEMENT, THE PROGRAM IS PROVIDED ON AN "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, EITHER EXPRESS OR IMPLIED INCLUDING, WITHOUT LIMITATION, ANY WARRANTIES OR CONDITIONS OF TITLE, NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Each Recipient is solely responsible for determining the appropriateness of using and distributing the Program and assumes all risks associated with its exercise of rights under this Agreement, including but not limited to the risks and costs of program errors, compliance with applicable laws, damage to or loss of data, programs or equipment, and unavailability or interruption of operations.

### 5. DISCLAIMER OF LIABILITY

EXCEPT AS EXPRESSLY SET FORTH IN THIS AGREEMENT, NEITHER RECIPIENT NOR ANY CONTRIBUTORS SHALL HAVE ANY LIABILITY FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING WITHOUT LIMITATION LOST PROFITS), HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OR DISTRIBUTION OF THE PROGRAM OR THE EXERCISE OF ANY RIGHTS GRANTED HEREUNDER, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

### 6. GENERAL

- 6.1 If any provision of this Agreement is invalid or unenforceable under applicable law, it shall not affect the validity or enforceability of the remainder of the terms of this Agreement, and without further action by the parties hereto, such provision shall be reformed to the minimum extent necessary to make such provision valid and enforceable.
- 6.2 If Recipient institutes patent litigation against a Contributor with respect to a patent applicable to software (including a cross-claim or counterclaim in a lawsuit), then any patent licenses granted by that Contributor to such Recipient under this Agreement shall terminate as of the date such litigation is filed. If Recipient institutes patent litigation against any entity (including a cross-claim or counterclaim in a lawsuit) alleging that the Program (excluding combinations of the Program with other software or hardware) infringes such Recipient's patent(s), then such Recipient's rights granted under Section 2.2 shall terminate as of the date such litigation is filed.

- 6.3 If a Commercial Contributor distributes any Program, which includes such Contributors modifications, improvements, additions, corrections or other changes, and has not made a Contribution of such Program, any licenses granted to such Commercial Contributor under this Agreement shall terminate as of the date of such Program is distributed.
- 6.4 All Recipient's rights under this Agreement shall terminate if it fails to comply with any of the material terms or conditions of this Agreement and does not cure such failure in a reasonable period of time after becoming aware of such noncompliance. If all Recipient's rights under this Agreement terminate, Recipient agrees to cease use and distribution of the Program as soon as reasonably practicable. However, Recipient's obligations under this Agreement and any licenses granted by Recipient relating to the Program shall continue and survive.
- 6.5 Cadence may publish new versions (including revisions) of this Agreement from time to time. Each new version of the Agreement will be given a distinguishing version number. The Program (including Contributions) may always be distributed subject to the version of the Agreement under which it was received. In addition, after a new version of the Agreement is published, Contributor may elect to distribute the Program (including its Contributions) under the new version. No one other than Cadence has the right to modify this Agreement.
- 6.6 This Agreement is governed by the laws of the State of California and the intellectual property laws of the United States of America. No party to this Agreement will bring a legal action under this Agreement more than one year after the cause of action arose. Each party waives its rights to a jury trial in any resulting litigation.

#### END OF TERMS AND CONDITIONS

IN WITNESS WHEREOF, THE PARTIES HERETO HAVE ENTERED INTO THIS AGREEMENT AS OF THE EFFECTIVE DATE.

RECIPIENT NAME:

\_\_\_\_\_  
Company Name if Corporate License  
Signed by: \_\_\_\_\_  
Name: \_\_\_\_\_  
Title: \_\_\_\_\_  
Mailing Address: \_\_\_\_\_  
\_\_\_\_\_  
Phone Number: \_\_\_\_\_  
e-mail address: \_\_\_\_\_

#### **mcpp 2.7.2**

Project homepage: <http://sourceforge.net/projects/mcpp/>

Project license:

Copyright © 1998, 2002-2008 Kiyoshi Matsui <kmatsui@t3.rim.or.jp> All rights reserved.

This software including the files in this directory is provided under the following license.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1.Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2.Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

## Oasis Wrapper 1.0.0

Project homepage:

Project license:

The MIT License (MIT)

Copyright © 2015 Minhao Zhang

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

## Threading Building Blocks 4.4.0

Project homepage: <https://www.threadingbuildingblocks.org/>

Project license: <https://www.threadingbuildingblocks.org/licensing>

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright © 1989, 1991 Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

### Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

## TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:
  - a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
  - b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
  - c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program. In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:
  - a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
  - b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
  - c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface



definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.
5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.
6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.
7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances. It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.
9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

## NO WARRANTY

11.BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12.IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

## END OF TERMS AND CONDITIONS

### How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

```
<one line to give the program's name and a brief idea of what it does.>
Copyright (C) <year> <name of author>
```

```
This program is free software; you can redistribute it and/or modify it under the terms of the
GNU General Public License as published by the Free Software Foundation; either version 2 of
the License, or (at your option) any later version.
```

```
This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without
even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU
General Public License for more details.
```

```
You should have received a copy of the GNU General Public License along with this program; if
not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA
02110-1301 USA.
```

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

```
Gnomovision version 69, Copyright (C) year name of author
Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type `show w'.
This is free software, and you are welcome to redistribute it under certain conditions; type
`show c' for details.
```

The hypothetical commands `show w' and `show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than `show w' and `show c'; they could even be mouse-clicks or menu items--whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the program, if necessary. Here is a sample; alter the names:

```
Yoyodyne, Inc., hereby disclaims all copyright interest in the program Gnomovision' (which makes
passes at compilers) written by James Hacker.
<signature of Ty Coon>, 1 April 1989
Ty Coon, President of Vice
```

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Lesser General Public License instead of this License.

#### **Runtime Exception:**

As a special exception, you may use this file as part of a free software library without restriction. Specifically, if other files instantiate templates or use macros or inline functions from this file, or you compile this file and link it with other files to produce an executable, this file does not by itself cause the resulting executable to be covered by the GNU General Public License. This exception does not however invalidate any other reasons why the executable file might be covered by the GNU General Public License.

#### **TCL/Tk 8.5.12**

Project homepage: <https://www.tcl.tk/>

Project license: <https://www.tcl.tk/software/tcltk/license.html>

This software is copyrighted by the Regents of the University of California, Sun Microsystems, Inc., Scriptics Corporation, ActiveState Corporation and other parties.

The following terms apply to all files associated with the software unless explicitly disclaimed in individual files.

The authors hereby grant permission to use, copy, modify, distribute, and license this software and its documentation for any purpose, provided that existing copyright notices are retained in all copies and that this notice is included verbatim in any distributions. No written agreement, license, or royalty fee is required for any of the authorized uses. Modifications to this software may be copyrighted by their authors and need not follow the licensing terms described here, provided that the new terms are clearly indicated on the first page of each file where they apply.

IN NO EVENT SHALL THE AUTHORS OR DISTRIBUTORS BE LIABLE TO ANY PARTY FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OF THIS SOFTWARE, ITS DOCUMENTATION, OR ANY DERIVATIVES THEREOF, EVEN IF THE AUTHORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

THE AUTHORS AND DISTRIBUTORS SPECIFICALLY DISCLAIM ANY WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT. THIS SOFTWARE IS PROVIDED ON AN "AS IS" BASIS, AND THE AUTHORS AND DISTRIBUTORS HAVE NO OBLIGATION TO PROVIDE MAINTENANCE, SUPPORT, UPDATES, ENHANCEMENTS, OR MODIFICATIONS.

GOVERNMENT USE: If you are acquiring this software on behalf of the U.S. government, the Government shall have only "Restricted Rights" in the software and related documentation as defined in the Federal Acquisition Regulations (FARs) in Clause 52.227.19 (c) (2). If you are acquiring the software on behalf of the Department of Defense, the software shall be classified as "Commercial Computer Software" and the Government shall have only "Restricted Rights" as defined in Clause 252.227-7013 (b) (3) of DFARs. Notwithstanding the foregoing, the authors grant the U.S. Government and others acting in its behalf permission to use and distribute the software in accordance with the terms specified in this license.

#### **zlib 12.5.3**

Project homepage: <http://www.zlib.net/>

Project license: [http://www.zlib.net/zlib\\_license.html](http://www.zlib.net/zlib_license.html)

Copyright © 1995-2013 Jean-loup Gailly and Mark Adler

This software is provided 'as-is', without any express or implied warranty. In no event will the authors be held liable for any damages arising from the use of this software.

Permission is granted to anyone to use this software for any purpose, including commercial applications, and to alter it and redistribute it freely, subject to the following restrictions:

1. The origin of this software must not be misrepresented; you must not claim that you wrote the original software. If you use this software in a product, an acknowledgment in the product documentation would be appreciated but is not required.
2. Altered source versions must be plainly marked as such, and must not be misrepresented as being the original software.
3. This notice may not be removed or altered from any source distribution.

Jean-loup Gailly  
jloup@gzip.org

Mark Adler  
madler@alumni.caltech.edu

**libedit**

Project homepage: <http://netbsd.org/>

Project license:

Copyright © 1992, 1993 The Regents of the University of California. All rights reserved. This code is derived from software contributed to Berkeley by Christos Zoulas of Cornell University.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1.Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2.Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3.All advertising materials mentioning features or use of this software must display the following acknowledgment:

This product includes software developed by the University of California, Berkeley and its contributors.

- 4.Neither the name of the University nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

# Contents

---

About This Guide .....	xxviii
Customer Support .....	xxxi
<b>1. Working With the IC Compiler II Library Manager Tool</b>	
Library Preparation Terminology .....	1-2
Physical Library .....	1-2
Logic Library .....	1-3
Cell Library .....	1-3
Technology Library .....	1-6
Aggregate Library .....	1-6
Library Workspace .....	1-6
Pane .....	1-7
Breakpoints .....	1-7
Scaling Group .....	1-7
Antenna Properties .....	1-8
Library Preparation Flow .....	1-9
User Interfaces .....	1-10
Starting the Command-Line Interface .....	1-11
Exiting the IC Compiler II Library Manager Tool .....	1-12
Entering icc2_lm_shell Commands .....	1-12
Interrupting or Terminating Command Processing .....	1-13
Getting Information About Commands .....	1-13
Displaying Command Help .....	1-13

Using Application Options . . . . .	1-14
Using Variables . . . . .	1-14
Viewing Man Pages . . . . .	1-15
Using Tcl Scripts . . . . .	1-16
Setup Files . . . . .	1-17
Using the Command Log File . . . . .	1-17
 <b>2. Preparing Cell Libraries</b>	
Library Preparation Flows . . . . .	2-2
Analyzing the Library Source Files . . . . .	2-4
Building Cell Libraries . . . . .	2-6
Defining the Search Path . . . . .	2-7
Creating a Library Workspace . . . . .	2-7
Specifying the Library Preparation Flow . . . . .	2-9
Specifying the Scale Factor . . . . .	2-10
Loading the Technology Data . . . . .	2-11
Completing the Technology Data . . . . .	2-13
Preparing Site Definitions . . . . .	2-13
Preparing Routing Layers . . . . .	2-14
Loading the Logic Data . . . . .	2-14
Identifying the Process Associated With a Logic Library . . . . .	2-16
Filtering Logic Libraries Based on Operating Corners . . . . .	2-17
Loading Extracted Timing Models . . . . .	2-17
Loading the Physical Data . . . . .	2-18
Reading LEF Files . . . . .	2-19
Reading GDSII or OASIS Files . . . . .	2-22
Loading Physical Data from an Existing Library . . . . .	2-31
Loading Physical Data from a Design Library . . . . .	2-32
Importing Milkyway FRAM Views From the IC Compiler Tool . . . . .	2-33
Specifying Which Blocks to Process . . . . .	2-34
Handling Duplicate Physical Blocks . . . . .	2-34
Block Mapping File Syntax . . . . .	2-35
Loading Parasitic Parameters . . . . .	2-37
Loading Signal Electromigration Constraints . . . . .	2-38
Completing the Physical Cell Information . . . . .	2-38

Preparing I/O Cells . . . . .	2-39
Preparing Standard Cells . . . . .	2-39
Preparing Macros . . . . .	2-40
Querying the Workspace . . . . .	2-41
Validating the Workspace . . . . .	2-42
Library Checks . . . . .	2-43
PG Rail Checks . . . . .	2-44
Cell Checks . . . . .	2-45
Pin Checks . . . . .	2-47
Timing Arc Checks . . . . .	2-51
Leakage-Power Checks . . . . .	2-53
Identifying Secondary PG Pins . . . . .	2-54
Committing the Workspace . . . . .	2-55
Generating Frame Views . . . . .	2-56
Generating Blockages During Frame View Generation . . . . .	2-57
Converting Regular Blockages to Zero-Spacing Blockages . . . . .	2-59
Trimming Blockages Around Pins . . . . .	2-60
Reducing the Physical Data by Generating a Core Blockage . . . . .	2-61
Creating Zero-Spacing Blockages Around Non-Pin Shapes . . . . .	2-65
Creating Via Regions . . . . .	2-66
Creating Pin Must-Connect Areas . . . . .	2-67
Deriving Must-Join Pins . . . . .	2-69
Creating Frame Views for Hierarchical Cells . . . . .	2-70
Creating Colored Frame Views . . . . .	2-70
Mode-Based Configuration of Frame View Generation Options . . . . .	2-72
Using the Exploration Flow . . . . .	2-73
Performing Automated Library Analysis . . . . .	2-74
Using a Library Preparation Script . . . . .	2-76
Using the Fast Exploration Flow . . . . .	2-77
Allowing Incomplete or Inconsistent Library Data . . . . .	2-78
Creating a Mismatch Configuration . . . . .	2-80
Setting a Mismatch Configuration . . . . .	2-81
Reporting Mismatch Configurations . . . . .	2-82
Verifying Libraries . . . . .	2-84
Verifying Logical Information in a Cell Library . . . . .	2-84
Verifying the Frame Views Between Libraries . . . . .	2-85
Modifying a Cell Library . . . . .	2-86

Updating Via Regions . . . . .	2-87
Defining Antenna Properties on Standard Cells . . . . .	2-88
Antenna Properties for Standard Cells . . . . .	2-89
Defining Antenna Properties on Hard Macro Cells . . . . .	2-90
Antenna Properties for Hard Macro Cells . . . . .	2-90
Creating an Aggregate Library . . . . .	2-92
Setting the Search Order . . . . .	2-93
Modifying an Aggregate Library . . . . .	2-93
Opening a Cell Library . . . . .	2-94
Getting Information About Cell Libraries . . . . .	2-94
Querying Libraries . . . . .	2-95
Reporting Libraries . . . . .	2-95
Reporting the Frame Properties . . . . .	2-98
Querying Library Objects . . . . .	2-99
Reporting Library Objects . . . . .	2-100
Exporting Cell Library Content . . . . .	2-102
Closing a Cell Library . . . . .	2-103

## **Appendix A. Library Manager Application Options**

Library Manager Application Options . . . . .	A-2
LEF Input Application Options . . . . .	A-6
GDSII and OASIS Input Application Options . . . . .	A-7
Timing View Generation Application Options . . . . .	A-9
Frame View Generation Application Options . . . . .	A-11
Antenna Extraction Application Options . . . . .	A-17
Command-Line Interface Application Options . . . . .	A-20
Graphical User Interface Application Options . . . . .	A-21

## **Appendix B. Working With the Library Manager GUI**

Starting the Tool in the GUI . . . . .	B-2
Opening the GUI . . . . .	B-3
Closing the GUI . . . . .	B-4



Exiting the Tool From the GUI . . . . .	B-4
Using the Library Preparation Wizard . . . . .	B-5
Creating a Cell Library . . . . .	B-6
Modifying a Cell Library . . . . .	B-9
Viewing a Cell Library . . . . .	B-11
Working in the Main Window . . . . .	B-12
Using the Library Browser . . . . .	B-13
Using the Message Browser Window . . . . .	B-14

## **Appendix C. Using Non-PG Logic Libraries**

PG Rail Checks . . . . .	C-2
PG Pin Connections . . . . .	C-3



# Preface

---

This preface includes the following topics:

- [About This Guide](#)
- [Customer Support](#)

---

## About This Guide

The IC Compiler II Library Manager tool merges input from a variety of sources, including Liberty logic libraries and physical data in LEF, GDSII, or OASIS® format, to create a single, unified cell library that contains all of the physical and logical information for a technology and its library cells. Cell libraries created by the IC Compiler II Library Manager tool are used by the IC Compiler II tool to implement designs.

---

## Audience

This user guide is for engineers who use the IC Compiler II Library Manager tool to prepare libraries for use with the IC Compiler II tool.

To use the IC Compiler II Library Manager tool, you need to be familiar with the following:

- Logical and physical design principles
- The Linux operating system
- The tool command language (Tcl)

---

## Related Publications

For additional information about the IC Compiler II Library Manager tool, see the documentation on the Synopsys SolvNet® online support site at the following address:

<https://solvnet.synopsys.com/DocsOnWeb>

You might also want to see the documentation for the following related Synopsys products:

- Library Compiler™
- IC Compiler™ II

---

## Release Notes

Information about new features, enhancements, changes, known limitations, and resolved Synopsys Technical Action Requests (STARs) is available in the *IC Compiler II Release Notes* on the SolvNet site.

To see the *IC Compiler II Release Notes*,

1. Go to the SolvNet Download Center located at the following address:

<https://solvnet.synopsys.com/DownloadCenter>

2. Select IC Compiler II, and then select a release in the list that appears.

---

## Conventions

The following conventions are used in Synopsys documentation.

Convention	Description
Courier	Indicates syntax, such as <code>write_file</code> .
<i>Courier italic</i>	Indicates a user-defined value in syntax, such as <code>write_file design_list</code> .
<b>Courier bold</b>	Indicates user input—text you type verbatim—in examples, such as <code>prompt&gt; write_file top</code>
[ ]	Denotes optional arguments in syntax, such as <code>write_file [-format fmt]</code>
...	Indicates that arguments can be repeated as many times as needed, such as <code>pin1 pin2 ... pinN</code>
	Indicates a choice among alternatives, such as <code>low   medium   high</code>
Control-c	Indicates a keyboard combination, such as holding down the Control key and pressing c.
\	Indicates a continuation of a command line.
/	Indicates levels of directory structure.
Edit > Copy	Indicates a path to a menu command, such as opening the Edit menu and choosing Copy.

---

---

## Customer Support

Customer support is available through SolvNet online customer support and through contacting the Synopsys Technical Support Center.

---

### Accessing SolvNet

The SolvNet site includes a knowledge base of technical articles and answers to frequently asked questions about Synopsys tools. The SolvNet site also gives you access to a wide range of Synopsys online services including software downloads, documentation, and technical support.

To access the SolvNet site, go to the following address:

<https://solvnet.synopsys.com>

If prompted, enter your user name and password. If you do not have a Synopsys user name and password, follow the instructions to sign up for an account.

If you need help using the SolvNet site, click HELP in the top-right menu bar.

---

### Contacting the Synopsys Technical Support Center

If you have problems, questions, or suggestions, you can contact the Synopsys Technical Support Center in the following ways:

- Open a support case to your local support center online by signing in to the SolvNet site at <https://solvnet.synopsys.com>, clicking Support, and then clicking “Open A Support Case.”
- Send an e-mail message to your local support center.
  - E-mail [support\\_center@synopsys.com](mailto:support_center@synopsys.com) from within North America.
  - Find other local support center e-mail addresses at <https://www.synopsys.com/support/global-support-centers.html>
- Telephone your local support center.
  - Call (800) 245-8005 from within North America.
  - Find other local support center telephone numbers at <https://www.synopsys.com/support/global-support-centers.html>





# 1

## Working With the IC Compiler II Library Manager Tool

---

You use the IC Compiler II Library Manager tool to build a cell library for use with the IC Compiler II implementation tool. To learn how to use the library manager, see the following topics:

- [Library Preparation Terminology](#)
- [Library Preparation Flow](#)
- [User Interfaces](#)
- [Entering icc2\\_lm\\_shell Commands](#)
- [Using Application Options](#)
- [Using Variables](#)
- [Viewing Man Pages](#)
- [Using Tcl Scripts](#)
- [Setup Files](#)
- [Using the Command Log File](#)

---

## Library Preparation Terminology

The following terms are used to describe the library preparation process for the IC Compiler II tool:

- [Physical Library](#)
- [Logic Library](#)
- [Cell Library](#)
- [Technology Library](#)
- [Aggregate Library](#)
- [Library Workspace](#)
- [Pane](#)
- [Breakpoints](#)
- [Scaling Group](#)
- [Antenna Properties](#)

---

### Physical Library

A *physical library* is a library that contains only physical information (frame views, and optionally design or layout views) for the library cells. Many vendors provide the physical information about the library cells for a technology in a physical library. In other cases, they provide GDSII, OASIS, or LEF files that contain the physical information for the library cells, and you must use these files to generate the physical library. This type of library is used as an input to generate a cell library.

#### See Also

- [Cell Library](#)

---

## Logic Library

A *logic library* is a library that contains only logical information, such as timing, power, noise, and functionality, for the library cells. This type of library is used as an input to generate a cell library.

### See Also

- [Cell Library](#)

---

## Cell Library

A *cell library* is a unified library that contains the logical and physical information for a specific technology and one or more of its library cells. Each library cell is represented as a single object with multiple views that contain various types of information about the cell.

[Figure 1-1](#) shows a conceptual view of a cell library. The views shown in green are the views used by the IC Compiler II tool. [Table 1-1](#) describes each of the view types.

Figure 1-1 Conceptual View of a Cell Library


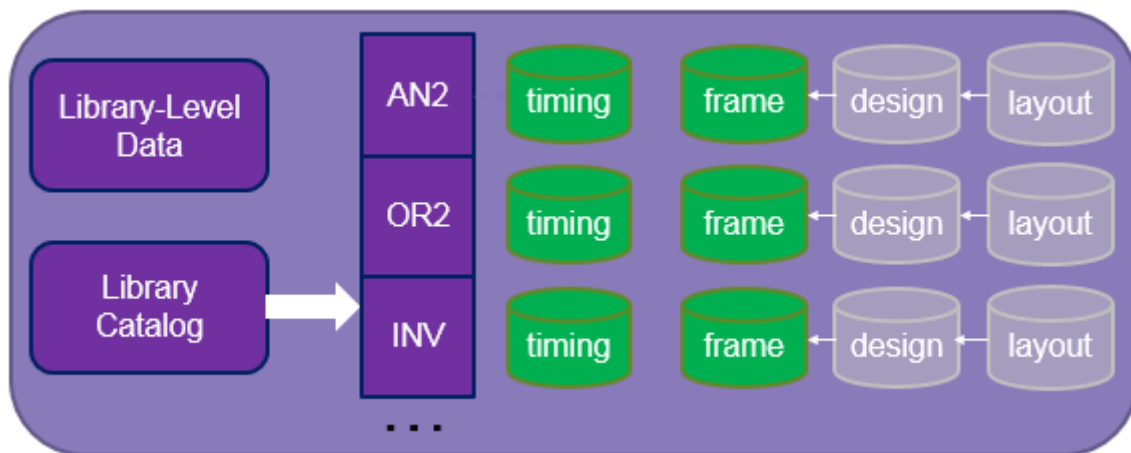


Table 1-1 Description of Library Cell Views

View name	Description	Usage
Timing view	Contains the timing, power, and functional information for a cell. It should contain timing and power information for all necessary characterization points (voltage and temperature) for a given process setting. The data for each characterization point is stored in a <i>pane</i> .	The IC Compiler II tool uses the timing view to perform static timing analysis, power analysis, and optimization.
Layout view	Contains the physical shape information for a cell, not including connectivity and pins. This view is created only when you read GDSII or Open Artwork System Interchange Standard (OASIS) source libraries.	The library manager uses the layout view to create the design view. The IC Compiler II tool uses the layout view for mask generation.
Design view	Contains all of the physical shape information for a cell, including connectivity and pins.	The library manager uses the design view to create the frame view.
Frame view	An abstraction of the physical layout of a cell that contains only the information needed for placement and routing, such as the block boundary, pins, via regions, and routing blockages.	The IC Compiler II tool uses the frame view to perform placement and routing.

Figure 1-2 shows the difference between a design view and a frame view of a standard cell.

Figure 1-2 Design and Frame Views of a Standard Cell

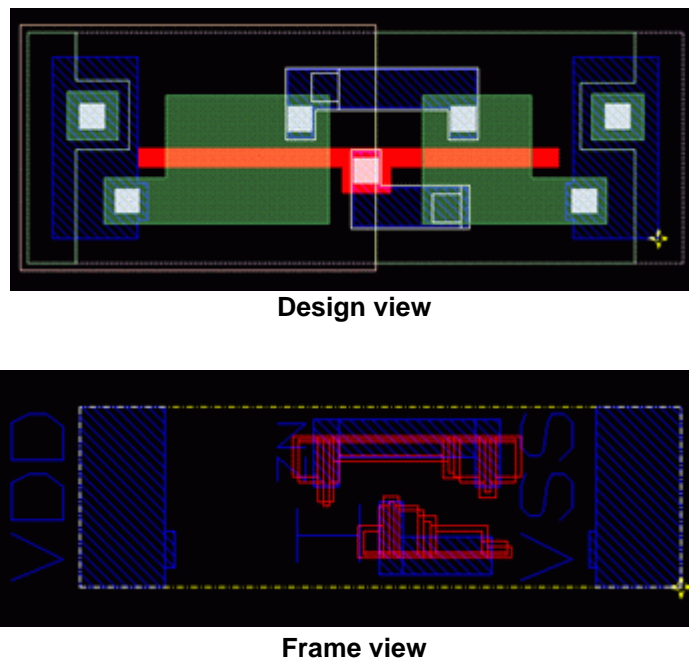

You create a cell library by loading information from the following sources:

- The technology file

The technology file contains information about the routing layers and routing rules for a specific technology.

The IC Compiler II tool uses the same technology file as the IC Compiler tool. For information about the technology file syntax, see the *Synopsys Technology File and Routing Rules Reference Manual*.

- The logic libraries

The source files for the logic libraries are Liberty libraries in compiled (.db) format. These files contain the timing, power, and functionality information for the library cells (standard cells or macro cells). Each file represents a characterization point for a specific process, voltage, and temperature.

Note:

This book assumes that the logic libraries use the power and ground (PG) pin syntax. For information about using older logic libraries that use the `rail_connection` attribute to define the PG pin connections or do not define the PG pins, see [Appendix C, “Using Non-PG Logic Libraries.”](#)

- The physical libraries

The source files for the physical libraries are Library Exchange Format (LEF) files, GDSII files, OASIS files, existing physical libraries, or the FRAM views exported from the IC Compiler tool. These files contain the physical shape data for the library cells.

- TLUPlus files (optional)

The TLUPlus files contain the RC coefficients for a specific technology. The TLUPlus models enable accurate RC extraction results by including the effects of width, space, density, and temperature on the resistance and capacitance.

You can store the TLUPlus information either in the cell library or in the design library. For information about storing TLUPlus information in a design library, see the *IC Compiler II Implementation User Guide*.

A cell library contains all of the required information, both logical and physical, for a set of cells for a technology. The IC Compiler II tool does not directly use the source files used to generate a cell library.

### See Also

- [Preparing Cell Libraries](#)

---

## Technology Library

A *technology library* is a library that contains only the information from the technology file and TLUPlus files. It does not contain any library cells.

### See Also

- [Cell Library](#)

---

## Aggregate Library

An aggregate library combines multiple cell libraries into a single cell library with a defined search order for the included cell libraries. When you refer to a cell in an aggregate library, the tool uses the defined search order to find the first occurrence of the cell. You can use an aggregate library to group related cell libraries for easier maintenance and distribution.

### See Also

- [Creating an Aggregate Library](#)

---

## Library Workspace

A library workspace is the in-memory representation of a cell library while it is being built. You use a library workspace to create a new cell library, modify an existing cell library, or create an aggregate cell library. You load the source files into the library workspace, validate the contents, and then commit the workspace to save it as a cell library.

There are two types of library workspaces:

- Root workspace

This is the main library workspace. Only a single root workspace can be open at one time. If you are creating a single cell library, you work only with a root workspace.

- Subworkspaces

Subworkspaces are used in the exploration flow to partition source data into multiple cell libraries. Each subworkspace generates a single cell library.

### See Also

- [Creating a Library Workspace](#)

---

## Pane

A pane is the representation of the timing and power data for a cell. In general, a pane represents the data at a single characterization point (temperature and voltage) for a given process setting. In some cases, the data for multiple characterization points at the same process setting can be merged into a single pane, which is called a *scaling group*.

If you are not using scaling groups, the timing view of a cell contains a pane for each logic library that contains that cell. Each pane is indexed by its voltage and temperature values.

### See Also

- [Scaling Group](#)

---

## Breakpoints

In a logic library, a timing arc is represented as a lookup table. The index values specified in the lookup table are referred to as the breakpoints for the timing arc. During timing analysis, the tool uses interpolation to determine the timing values for points between the specified breakpoints.

### See Also

- [Timing Arc Checks](#)

---

## Scaling Group

For a given process, you might have multiple logic libraries that represent different characterization points (voltage and temperature). By default, timing analysis is performed only at these characterization points. If the characterization points for a set of logic libraries form a complete grid, you can create a scaling group, which merges the characterization points into a single pane. A pane that represents a single logic library uses the indexes specified in the logic library for the timing arc, typically input slew and output capacitance. A pane that represents a scaling group has indexes for voltage, temperature, or both, in addition to the indexes specified in the logic library. These higher-dimension delay tables enable very efficient delay calculations in the IC Compiler II tool. In addition, they enable interpolation between the voltage and temperature values of the characterization points, which enables efficient multivoltage analysis and optimization.

### See Also

- “Creating Scaling Groups” in the *IC Compiler II Timing Analysis User Guide*

---

## Antenna Properties

MOS transistor gate oxides are easily damaged by electrostatic discharge, especially during the manufacturing process. The static charge collected on lower-level wires during multilevel metalization processing can destroy gate oxides and ruin the chip. This issue is called the “antenna problem.”

To protect the MOS device from being damaged, the area of the metal connected to a gate oxide during a given metal mask stage must be limited to a certain value. When the metal area exceeds this value, a reverse-biased diode can be used to provide a discharge path to protect the gate oxide at a cell input.

The diffusion areas of output pins provide protection for gate oxides at input pins. However, at intermediate stages of the manufacturing process, unconnected metal wires extending from the input pins can cause antenna problems to occur. For many process technologies, antenna properties specify the maximum ratio of antenna area (the metal area of dangling connections) to gate area (the gate area of input pins). This ratio can be a constant value or a value derived by an antenna equation.

### See Also

- [Automatic Antenna Property Extraction Using the IC Validator Tool](#)
- [Defining Antenna Properties on Standard Cells](#)
- [Defining Antenna Properties on Hard Macro Cells](#)




---

## Library Preparation Flow

[Figure 1-3](#) shows the library preparation flow used to build a cell library.

*Figure 1-3 Library Preparation Flow*

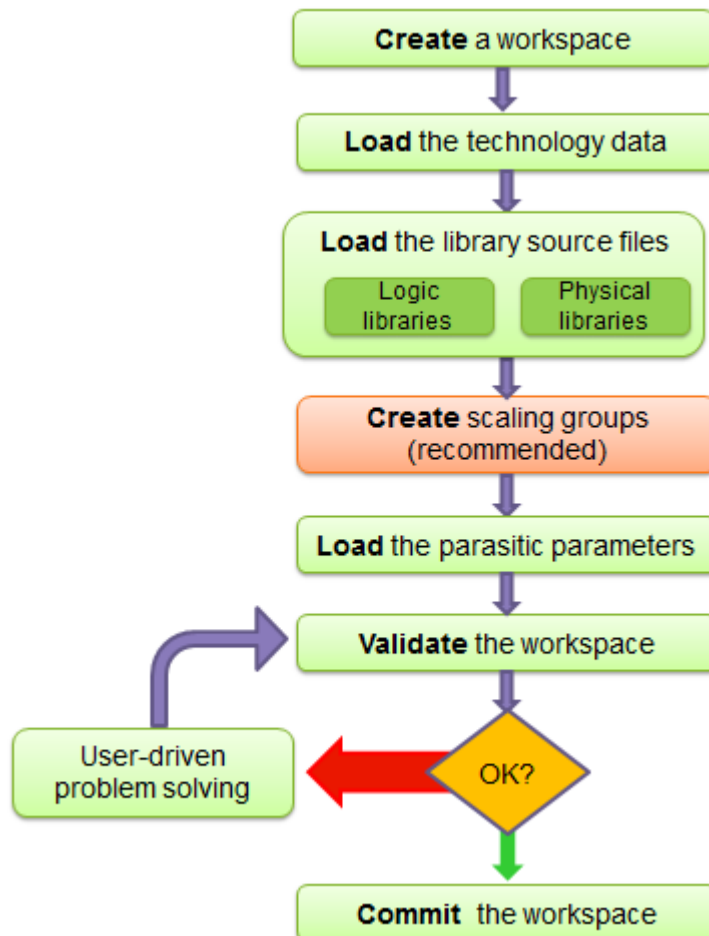

For detailed information about the library preparation flow, see "[Preparing Cell Libraries](#)."

---

## User Interfaces

The IC Compiler II Library Manager tool operates in the X windows environment on Linux. It provides a flexible working environment with both a shell command-line interface and a graphical user interface (GUI).

- The shell command-line interface, `icc2_lm_shell`, is a text-only environment in which you enter commands at the command-line prompt. It is typically used for scripts, batch mode, and push-button operations and is always available during a library manager session.
- The GUI provides a wizard to perform library preparation, as well as tools for viewing and editing the cells in your library. The look and feel of the library manager GUI is consistent with the look and feel of other Synopsys GUIs.

The library manager uses the tool command language (Tcl). Using Tcl, you can extend the `icc2_lm_shell` command language by writing reusable procedures and scripts (see the *Using Tcl With Synopsys Tools* manual).

You can start or exit a session in either `icc2_lm_shell` or the GUI, and you can open or close the GUI at any time during a session. The following topics describe how to start and exit the tool using the command-line interface:

- [Starting the Command-Line Interface](#)
- [Exiting the IC Compiler II Library Manager Tool](#)

### See Also

- [Working With the Library Manager GUI](#)

---

## Starting the Command-Line Interface

To start the `icc2_lm_shell` command-line interface,

1. Include the path to the bin directory in your `$PATH` variable.
2. Enter the `icc2_lm_shell` command in a Linux shell.

```
% icc2_lm_shell
```

You can include other options when you start `icc2_lm_shell`. For example,

- `-file script_file_name` to execute a script
- `-x command` to execute an `icc2_lm_shell` command
- `-output_log_file file_name` to create a log file of your session
- `-h` to display a list of the available options (without starting `icc2_lm_shell`)

At startup, `icc2_lm_shell` performs the following tasks:

1. Creates a command log file.
2. Reads and executes the setup files.
3. Executes any script files or commands specified by the `-f` and `-x` options, respectively, on the command line.
4. Displays the program header and `icc2_lm_shell>` prompt in the shell.

### See Also

- [Starting the Tool in the GUI](#)
- [Using the Command Log File](#)
- [Setup Files](#)
- [Using Tcl Scripts](#)

---

## Exiting the IC Compiler II Library Manager Tool

To exit the IC Compiler II Library Manager tool, use the `exit` or `quit` command.

Note:

When you exit the tool from the command line, the tool exits without saving the open library workspace.

### See Also

- [Exiting the Tool From the GUI](#)

---

## Entering `icc2_lm_shell` Commands

You interact with the library manager by using `icc2_lm_shell` commands, which are based on the tool command language (Tcl) and include certain command extensions needed to implement specific IC Compiler II Library Manager functionality. The library manager command language provides capabilities similar to Linux command shells, including variables, conditional execution of commands, and control flow commands. You can

- Enter individual commands interactively at the `icc2_lm_shell>` prompt
- Enter individual commands interactively on the console command line in the GUI
- Run one or more Tcl scripts, which are text files that contain `icc2_lm_shell` commands

When entering a command, an option, or a file name, you can minimize your typing by pressing the Tab key. If you have typed enough characters to specify a unique name, the IC Compiler II library manager completes the remaining characters. If the characters you typed can be used for more than one name, the library manager lists the qualifying names, from which you can select by using the arrow keys and the Enter key.

If you need to reuse a command from the output for a command-line interface, you can copy and paste the portion by selecting it, moving the pointer to the `icc2_lm_shell` command line, and clicking with the middle mouse button.

When you run a command, the library manager echoes the command output (including processing messages and any warnings or error messages) in `icc2_lm_shell` and, if the GUI is open, in the console log view. By default, the output scrolls. To prevent scrolling, enable page mode by setting the `sh_enable_page_mode` variable to `true`.

### See Also

- [Using Tcl Scripts](#)

---

## Interrupting or Terminating Command Processing

To interrupt command processing and remain in `icc2_lm_shell`, press Ctrl+C.

When you use Ctrl+C, keep the following points in mind:

- If a script file is being processed and you interrupt one of its commands, the script processing is interrupted and no further script commands are processed.
- If you press Ctrl+C three times before a command responds to your interrupt, `icc2_lm_shell` is interrupted and exits with this message:

```
Information: Process terminated by interrupt.
```

Some commands and processes cannot be interrupted. To stop these commands or processes, you must terminate `icc2_lm_shell` at the system level. When you terminate a process or the shell, data is not saved.

---

## Getting Information About Commands

The following online information resources are available while you are using the IC Compiler II library manager:

- Command help
- Command man pages

## Displaying Command Help

Command help consists of either a brief description of an `icc2_lm_shell` command or a list of the options and arguments supported by an `icc2_lm_shell` command.

- To display a brief description of a command, enter the `help` command followed by the command name. For example, to display a brief description of the `read_db` command, use the following command:

```
icc2_lm_shell> help read_db
```

- To display the options supported by an `icc2_lm_shell` command, enter the command name with the `-help` option. For example, to see the options supported by the `create_workspace` command, use the following command:

```
icc2_lm_shell> read_db -help
```

---

## Using Application Options

The IC Compiler II Library Manager tool uses application options to control the tool behavior. Application options use the following naming convention:

*category[.subcategory].option\_name*

where *category* is the name of the tool feature affected by the application option. Some application option categories have subcategories to further refine the area affected by the application option.

You use the following commands to work with application options:

- `set_app_options`: Sets one or more application options.
- `reset_app_options`: Resets one or more application options so that they have no value
- `get_app_options`: Lists the available application options.
- `get_app_option_value`: Reports the setting for a specific application option.
- `report_app_options`: Reports application options and their settings.

For more information about working with application options, see the *IC Compiler II Data Model User Guide*.

---

## Using Variables

In general, the library manager modifies default behavior by using application options rather than application variables; however it does support user-defined Tcl variables, as well as a minimal number of application variables, such as the `search_path` variable.

### See Also

- [Defining the Search Path](#)
- [Using Application Options](#)

---

## Viewing Man Pages

To display the man page for an `icc2_lm_shell` command or application variable, enter the `man` command followed by the command or variable name. For example, to see the man page for the `read_db` command, use the following command:

```
icc2_lm_shell> man read_db
```

To display the man page for an `icc2_lm_shell` application option, enter the `man` command followed by the option name. You can also view the following types of summary pages for application options:

- Category summaries

To view a man page that summarizes all of the application options for a specific category, enter the `man` command followed by `category_options`. For example, to see the man page that summarizes all library manager application options, use the following command:

```
icc2_lm_shell> man lm_options
```

- Subcategory summaries

To view a man page that summarizes all of the application options for a specific subcategory, enter the `man` command followed by `category.subcategory_options`. For example, to see the man page that summarizes all signoff antenna extraction application options, use the following command:

```
icc2_lm_shell> man signoff.antenna_options
```

- Command summaries

To view a man page that summarizes all of the application options for a specific command, enter the `man` command followed by `command_options`. For example, to see the man page that summarizes all application options that affect the `read_db` command, use the following command:

```
icc2_lm_shell> man read_db_options
```

If you enter the `man` command on the `icc2_lm_shell` command line, the man page is displayed in the shell and in the console log view if the GUI is open. If you enter this command on the console command line in the GUI, the man page is displayed in the GUI man page viewer.

### See Also

- *IC Compiler II Graphical User Interface User Guide*

---

## Using Tcl Scripts

You can use Tcl scripts to accomplish routine, repetitive, or complex tasks.

A Tcl script is a text file that contains a sequence of any `icc2_lm_shell` commands. It can also include comments, which are indicated by a pound sign (#) at the beginning of a line.

```
# This is a comment
```

You can use the following methods to run a Tcl script:

- To run a script from the command line, use the `source` command.
- To run a script in the GUI, choose File > Execute Script.
- To run a script when you start the tool, use the `-f` option with the `icc2_lm_shell` command.

If an error occurs when running a command in the script, the library manager raises the `TCL_ERROR` condition, which immediately stops the script execution. To tolerate errors and allow the script to continue executing, either

- Check for `TCL_ERROR` error conditions with the Tcl `catch` command on the commands that might generate errors.
- Set the `sh_continue_on_error` variable to `true` in the script file.

### See Also

- [Starting the Command-Line Interface](#)
- *Using Tcl With Synopsys Tools*



---

## Setup Files

A setup file is a special Tcl script that the tool automatically executes at startup. It can contain commands that perform basic tasks, such as initializing application options.

The setup file for the library manager is named `.synopsys_icc2_lm.setup`. The tool looks for this file both in your home directory and in the project directory (the current working directory in which you start the tool). The file is read in the following order:

1. The `.synopsys_icc2_lm.setup` file in your home directory  
Typically the settings in this file define your working environment.
2. The `.synopsys_icc2_lm.setup` file in the project directory  
Typically the settings in this file affect the processing of a specific library.

### See Also

- [User Interfaces](#)
- [Using Application Options](#)
- [Using Variables](#)
- [Using Tcl Scripts](#)

---

## Using the Command Log File

The command log file records the `icc2_lm_shell` commands processed by the library manager, including setup file commands and application option settings. By default, the tool writes the command log to a file named `icc2_lm_command.log` in the working directory.

To change the name of the command log file, set the `sh_command_log_file` variable in your `.synopsys_icc2_lm.setup` file. If your user-defined or project-specific setup file does not contain this variable, the tool automatically creates the `icc2_lm_command.log` file.

Each session overwrites the existing command log file. To save a command log file, move it or rename it. You can use the command log file to

- Record the library preparation process
- Document any problems in the current session

### See Also

- [Setup Files](#)



# 2

## Preparing Cell Libraries

---

To learn how to prepare cell libraries for the IC Compiler II tool, see the following topics:

- [Library Preparation Flows](#)
- [Analyzing the Library Source Files](#)
- [Building Cell Libraries](#)
- [Generating Frame Views](#)
- [Using the Exploration Flow](#)
- [Allowing Incomplete or Inconsistent Library Data](#)
- [Verifying Libraries](#)
- [Modifying a Cell Library](#)
- [Creating an Aggregate Library](#)
- [Modifying an Aggregate Library](#)
- [Opening a Cell Library](#)
- [Getting Information About Cell Libraries](#)
- [Exporting Cell Library Content](#)
- [Closing a Cell Library](#)

---

## Library Preparation Flows

The library manager supports the following library preparation flows:

- Normal flow

Use this flow to create a cell library if you have a single logic library file or a group of logic library files, each of which contains the same set of cells but has timing data for a different characterization point, and physical library source files that contain a superset of the cells in the logic library files. Library vendors typically use this library organization for standard cells and pad cells.

By default, the generated cell library contains the cells that exist in both the logic and physical library source files. It contains both logical information (timing views) and physical information (frame, design, and layout views) for these cells.

- Technology-only flow

Use this flow to create a library that contains only the information from the technology file and TLUPlus files. This type of library is referred to as a *technology library*.

- Frame-only flow

Use this flow to create a library that contains only the physical information for the cells. This type of library is referred to as a *physical library*. It is used as an input to the library preparation process.

For this flow, you either read only the physical library source files or both the physical and logic library source files. If you read both the physical and logic library source files, the tool uses the logic libraries only to determine the port direction when conflicts occur.

The generated physical library contains the cells that exist in the physical library source files. It contains only the physical information (frame views and optionally design and layout views) of these cells.

- Extracted timing model (ETM) flow

Use this flow to create a cell library if you have several extracted timing models, each of which represents a single mode and characterization point for the same design, and a physical library source file that contains the design.

The generated cell library contains the design represented by the extracted timing model, assuming that physical information is provided for that design. If the physical library source files contain additional designs, they are not included in the generated cell library.

- Physical-only flow

Use this flow to create a separate physical-only cell library for the cells that exist only in a physical library source file and do not exist in any of the logic library files. A

physical-only library typically contains cells such as filler cells, tap cells, flip-chip pad cells, endcap cells, and decoupling capacitor cells.

The group of files used for this flow includes all of the logic and physical library source files; however, the generated cell library includes only those cells that exist only in the physical library source files.

**Note:**

You must read at least one logic library when using the physical-only flow; otherwise, workspace validation fails and you cannot save the cell library. To build a library of cells using only physical library source files, use the frame flow.

- **Exploration flow**

Use this flow to automatically analyze the library source files and generate a script that you can use to create a cell library.

- **Edit flow**


Use this flow to modify the physical data for cells in an existing cell library.

- **Aggregate flow**

Use this flow to combine multiple separate cell libraries into a single cell library.

[Figure 2-1](#) shows the results of using the normal and physical-only flows on a library workspace that contains two .db files, each of which contains a different characterization point for the same set of cells, and one LEF file.

Figure 2-1 Normal and Physical-Only Example

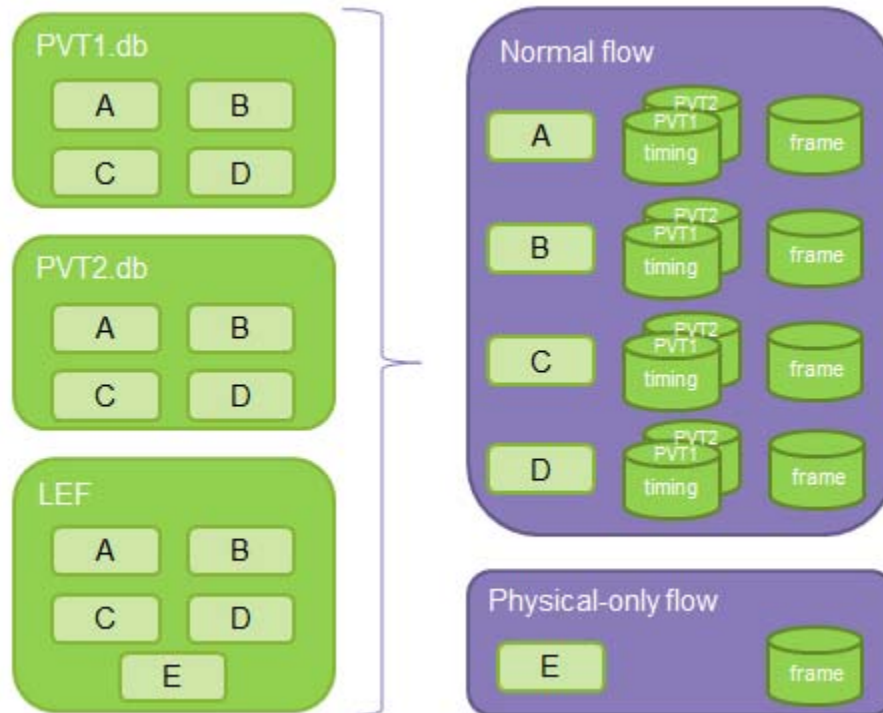**See Also**

- [Cell Library](#)
- [Technology Library](#)

---

## Analyzing the Library Source Files

**Note:**

This topic describes the manual process for analyzing the library source files. You can use the exploration flow to perform this task automatically; however, you should read this topic to understand the analysis process. For information about using the exploration flow to perform this task, see [Using the Exploration Flow](#).

Before you build the cell libraries, you must analyze your library source files to determine which library preparation flow to use. Depending on your library source files, you might create several cell libraries using various library preparation flows. When you build multiple cell libraries, you need to determine which source files to use for each cell library.

When grouping the library source files, consider the following:

- In general, each cell should be included in both a logic library file and a physical library file.

The logic library file provides the information for the timing view, while the physical library file provides the information for the layout, design, and frame views.

- If you load multiple logic library files into a library workspace, they must all represent the same process. In addition, the logic library files must meet one of the following conditions:
  - All the logic library files contain the same set of cells but each one provides data for a different temperature and voltage point.
  - Each logic library file contains only a single cell; if the files contain different cells, the group must include a logic library file for each cell at each temperature and voltage point.
- Each cell should exist in only one group, and that group should contain cell data for all necessary temperature and voltage corners.

**Warning:**

If multiple cell libraries contain a library cell with the same name, the tool uses the data from the first cell library in which it finds the cell, and it ignores that cell's data in all other cell libraries. This phenomenon is referred to as *cell shadowing*.

- A physical library file might belong to several groups, because it might contain more cells than any single logic library file.

You should ensure that all cells in the physical library files are included in a cell library. Ideally, each cell is included in exactly one cell library; otherwise, users must be very careful when specifying the cell library order for a design library. If a physical library file contains cells that do not exist in any of the logic library files, these cells are considered physical-only cells. You should create a separate cell library for these physical-only cells.

**See Also**


- [Cell Library](#)

---

## Building Cell Libraries

The basic process for building a cell library is the same regardless of the library preparation flow you choose. The only differences are the options that you use when creating the library workspace and the library source files that you load into the workspace. The following figure shows an overview of the library preparation process.

Figure 2-2 Overview of the Library Preparation Process

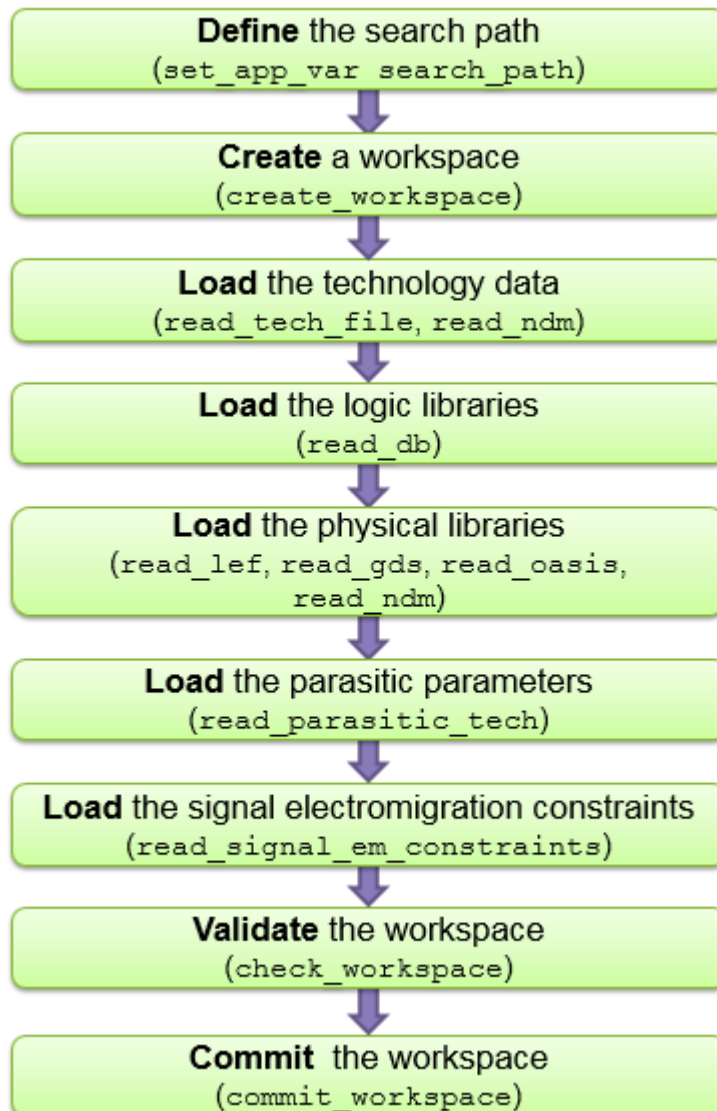



To build a technology library, you follow the same flow, but omit steps four through eight, which involve the source files for the library cells.

After a cell library is built, it does not need to be rebuilt unless one of the library source files changes or a new version of the IC Compiler II tool requires an updated library.

### See Also

- [Using the Exploration Flow](#)
- [Modifying a Cell Library](#)
- [Creating an Aggregate Library](#)

---

## Defining the Search Path

The library manager uses a search path to look for files that are specified with a relative path or no path.

To specify the search path, set the `search_path` application variable to the list of directories, in order, in which to look for files. When the library manager looks for a file, it starts searching in the leftmost directory specified in the `search_path` variable and uses the first matching file it finds.

---

## Creating a Library Workspace

To create a library workspace, use the `create_workspace` command. When you run this command to create a new cell library, you must specify the following items:

- The name of the workspace  
For all flows except the edit flow, specify the workspace name without a file extension. For the edit flow, specify the path to an existing cell library.
- The library preparation flow you are using  
By default, the tool creates a workspace for the normal library preparation flow. To specify a different flow, use the `-flow` option, as described in [Specifying the Library Preparation Flow](#).

### Note:

The `create_workspace` command fails if there are any cell libraries in memory. Before running the `create_workspace` command, use the `close_lib` command to close any open libraries.

For example, to use the normal flow to create a cell library named mylib, use the following command to create the library workspace:

```
icc2_lm_shell> create_workspace mylib
```

You can optionally specify the following items:

- The technology data for the library

To provide the technology data when you create the library workspace, use one of the following methods:

- Load a technology file by using the `-technology` option. This is the preferred method for providing the technology data.
- Reference a technology library by using the `-use_technology_lib` option.

For more information, see [Loading the Technology Data](#).

- The scale factor for the library

The scale factor specifies the number of database units per micron. The default scale factor is 10000, which means that each database unit represents 1 Angstrom. However, the recommended scale factor is the technology length precision as specified by the `lengthPrecision` attribute in the technology file. To use the technology length precision as the scale factor, set the `lib.setting.use_tech_scale_factor` application option to `true` before running the `create_workspace` command.

For more information about setting the scale factor, see [Specifying the Scale Factor](#).

### See Also

- [Library Workspace](#)
- [Analyzing the Library Source Files](#)
- [Using the Exploration Flow](#)
- [Modifying a Cell Library](#)
- [Creating an Aggregate Library](#)

## Specifying the Library Preparation Flow

By default, the `create_workspace` command creates a library workspace for the normal flow. To create a library workspace for a different library preparation flow, use the `-flow` option to specify the flow. [Table 2-1](#) shows the options to use for the supported library preparation flows.

*Table 2-1 create\_workspace Options To Specify the Library Preparation Flow*

Library preparation flow	create_workspace -flow keyword
<b>Cell library creation flows</b>	
Normal	<code>normal</code>
Technology-only	<code>normal</code>
Frame-only	<code>frame</code>
Extracted timing model	<code>etm_moded</code>
Physical-only	<code>physical_only</code>
Exploration	<code>exploration</code>
<b>Cell library verification flow</b>	
Verification	<code>verification</code>
<b>Cell library modification flow</b>	
Edit	<code>edit</code>
<b>Aggregate library creation flow</b>	
Aggregate	<code>aggregate</code>

For example, to use the normal flow to create a cell library named `mylib`, use the following command:

```
icc2_lm_shell> create_workspace mylib
```

To use the physical-only flow to create a cell library named `mylib_po`, use the following command:

```
icc2_lm_shell> create_workspace -flow physical_only mylib_po
```

To create a workspace for the exploration flow, use the following command:

```
icc2_lm_shell> create_workspace -flow exploration mylib_explore
```

Note:

Unless you are using the exploration flow, you can have only one library workspace open at a time. To remove the current library workspace from memory without committing it to a saved cell library, use the `remove_workspace` command.

### See Also

- [Library Workspace](#)
- [Analyzing the Library Source Files](#)
- [Using the Exploration Flow](#)
- [Verifying Libraries](#)
- [Modifying a Cell Library](#)
- [Creating an Aggregate Library](#)

---

## Specifying the Scale Factor

The scale factor specifies the number of database units per micron. The IC Compiler II tool uses the scale factor to convert floating point numbers into integers when storing data in the cell libraries and design libraries. When the tool saves a floating point number, it multiplies the number by the scale factor and then rounds the number to an integer. When the tool retrieves the number, it divides the number by the scale factor. For example, if the scale factor is 1000, the tool stores a value of 0.0032 as 3 ( $0.0032 * 1000 = 3.2$ , which rounds to 3). The tool retrieves this value as 0.003 ( $3 / 1000$ ).

If the scale factor is not large enough, the precision of specified coordinates might be affected. For example, assume that you create a net shape with the following command:

```
icc2_shell> create_shape -shape_type rect -layer M1 \  
-boundary {{0.500 0.500} {0.5053 0.5053}}
```

With a scale factor of 1000, the bounding box is stored as {500 500} {505 505}, instead of {5000 5000} {5053 5053}. With a scale factor of 10000, the bounding box is stored as {5000 5000} {5053 5053}.

The scale factor for a library workspace must be a multiple of both the length precision of the technology file associated with the workspace and the scale factor of the physical library source files loaded into the workspace.

The default scale factor is 10000, which means that each database unit represents 1 Angstrom. However, the recommended scale factor is the technology length precision as specified by the `lengthPrecision` attribute in the technology file. To use the technology length precision as the scale factor, set the `lib.setting.use_tech_scale_factor` application option to `true` before running the `create_workspace` command.

```
icc2_lm_shell> set_app_options \  
-name lib.setting.use_tech_scale_factor -value true
```

If neither the default scale factor nor the technology length precision is appropriate for your library, you can explicitly specify the scale factor by using the `-scale_factor` option with the `create_workspace` command.

To determine the scale factor for an existing cell library, query its `scale_factor` attribute.

---

## Loading the Technology Data

You can load the technology data for a cell library either by reading a technology file into the library workspace, which is the preferred method, or by associating a technology library with the library workspace.

- To load a technology file into a library workspace when you create the workspace, use the `-technology` option with the `create_workspace` command.

For example, to use the normal flow to create a cell library named `mylib` that gets its technology data from the `my.tf` technology file, use the following command:

```
icc2_lm_shell> create_workspace -technology my.tf mylib
```

- To load a technology file into an existing library workspace, use the `read_tech_file` command.

For example, to load the `my.tf` technology file into the current library workspace, use the following command:

```
icc2_lm_shell> read_tech_file my.tf
```

- To associate a technology library with a library workspace when you create the workspace, use the `-use_technology_lib` option with the `create_workspace` command.

For example, to use the normal flow to create a cell library named `mylib` that gets its technology data from the `mytech.ndm` technology library, use the following command:

```
icc2_lm_shell> create_workspace -use_technology_lib mytech.ndm mylib
```

- To associate a technology library with an existing library workspace, use the `read_ndm` command to read the technology library into the library workspace.

For example, to associate the `mytech.ndm` technology library with the current library workspace, use the following command:

```
icc2_lm_shell> read_ndm mytech.ndm
```

When you read a technology file into a library workspace, the tool performs syntax and semantic checks on the contents of the technology file. The technology file checker has two modes:

- User mode (the default)

In this mode, the tool downgrades the message severity for suspected errors for the general user.

- Developer mode

In this mode, the tool increases the message severity for suspected errors for the technology file developer to correct or waive. To enable this mode, set the `file.tech.library_developer_mode` application option to `true`.

When you load technology data into an existing library workspace,

- The new technology data overwrites any existing technology data, whether from a previous technology file or specified with Tcl commands
- The library manager verifies that the frame views in the library workspace are consistent with the new technology data

Important:

The technology file does not contain all of the technology data required to perform placement and routing in the IC Compiler II tool. For information about completing the technology data, see [Completing the Technology Data](#).

## See Also

- [Creating a Library Workspace](#)
- “Technology Data Access” in the *IC Compiler II Data Model User Guide*

---

## Completing the Technology Data

The technology file does not contain all of the data required by the IC Compiler II tool for placement and routing. The following topics describe how to add the missing technology data to a cell library:

- [Preparing Site Definitions](#)
- [Preparing Routing Layers](#)

Note:

In many cases, the LEF file defines the required attributes. You must manually set these attributes only if you load the physical data by reading a GDSII or OASIS file or if the LEF file does not define these attributes.

## Preparing Site Definitions

The following site attributes are required for placement, but are not defined in the technology file:

- `isDefault` site attribute

This attribute identifies the default site for floorplanning. It must be set only on the default site.

For example, to set the site definition named `unit` as the default site for floorplanning, use the following command:

```
icc2_lm_shell> set_attribute [get_site_defs unit] is_default true
```

- `symmetry` site attribute

This attribute defines the site symmetry requirement for cell placement. It must be set on all sites defined in the technology file. The attribute value is a list that contains one or more of the following values:

- `X` - the site can be flipped about the x-axis
- `Y` - the site can be flipped about the y-axis
- `R90` - the site can be rotated 90 degrees

For example, to specify that the site definition named `unit` can be flipped about the x-axis, set its `symmetry` attribute as follows:

```
icc2_lm_shell> set_attribute [get_site_defs unit] symmetry {X}
```

To specify that it can be flipped about both the x- and y-axis and can be rotated 90 degrees, use the following command:

```
icc2_lm_shell> set_attribute [get_site_defs unit] symmetry {X Y R90}
```

In general, the LEF file defines these site attributes, and the library manager automatically sets them when you read the LEF file. If you load the physical data by reading a GDSII or OASIS file or if the LEF file does not define these attributes, use the `set_attribute` command to set them manually.

To report the site definitions, use the `report_site_defs` command.

**Note:**

The cell library contains only single-height site definitions. The IC Compiler II tool uses the single-height site definition for both single-height cells and multiple-height cells.

## Preparing Routing Layers

The following layer attributes are required for routing, but are not defined in the technology file:

- `routing_direction` layer attribute

This attribute identifies the preferred routing direction for the layer. Valid values for this attribute are `horizontal` and `vertical`. For example, to set the preferred routing direction for the M2 layer as horizontal, use the following command:

```
icc2_lm_shell> set_attribute [get_layers M2] \  
    routing_direction horizontal
```

- `track_offset` layer attribute

This attribute defines the offset in microns used to create the routing grid for the layer. The first routing track is located at the specified distance from the placement grid origin. For example, to set the track offset for the M2 layer as 0.1 micron, use the following command:

```
icc2_lm_shell> set_attribute [get_layers M2] track_offset 0.1
```

In general, the LEF file defines these layer attributes, and the library manager automatically sets them when you read the LEF file. If you load the physical data by reading a GDSII or OASIS file or if the LEF file does not define these attributes, use the `set_attribute` command to set them manually.

---

## Loading the Logic Data

The logic data is stored in logic libraries, which contain the timing, power, and functionality information for the standard cells and macro cells in the cell library. The supported timing model formats are generic CMOS, nonlinear delay model (NLDM), and Composite Current Source (CCS).

A cell library should contain this information for all necessary characterization points (voltages and temperatures for a given process setting). If these characterization points are



represented in multiple logic libraries, you must load all of these logic libraries into a single library workspace.

**Warning:**

If multiple cell libraries contain a library cell with the same name, the tool uses the data from the first cell library in which it finds the cell, and it ignores that cell's data in all other cell libraries. This phenomenon is referred to as *cell shadowing*.

Before loading logic libraries into the library workspace, ensure that they have been validated with the Library Compiler `check_library` command. Note that you must have a Library Compiler license to run this command.

To load logic libraries into the library workspace, use the `read_db` command.

For example, to load the `db1_pvt1.db` file, use the following command:

```
icc2_lm_shell> read_db db1_pvt1.db
```

To load all the `.db` files in the current directory, use the following command:

```
icc2_lm_shell> read_db [glob *.db]
```

If you specify the files with a relative path or with no path, the tool uses the search path defined with the `search_path` variable to locate the files.

When you load a logic library into a library workspace, the library manager performs the following tasks:

- Creates timing views in the library workspace for each of the blocks in the library source file
- Saves the logic library attribute settings for the library, library cells, and library cell pins in the library workspace

If you load more than one logic library into a workspace, the first logic library that you read is considered the *base library*. The tool uses the base library for many consistency checks among the logic libraries loaded for a workspace. If an attribute is defined in more than one logic library, the tool uses the value from the first logic library in which the attribute is defined.

By default, the tool processes all of the cells defined in the library source file. To process a subset of the cells, filter the cells as described in [Specifying Which Blocks to Process](#).

By default, the generated cell library contains the timing views generated from all of the logic libraries loaded into the library workspace. To filter the logic libraries based on your design operating corners, use the `set_pvt_configuration` command, as described in [Filtering Logic Libraries Based on Operating Corners](#).

## See Also

- [Pane](#)
- [Defining the Search Path](#)
- [Identifying the Process Associated With a Logic Library](#)

## Identifying the Process Associated With a Logic Library

When you load a logic library, the library manager uses the following information to identify the process associated with the pane:

- The process label

The library manager uses the following order of precedence to determine the process label:

- The `-process_label` option specified with the `read_db` command
- The `process_label` attribute defined in the `operating_conditions` group for the default operating conditions in the logic library

- The process number

The library manager determines the process number from the `nom_process` attribute for the library. If this attribute is not specified in the library, the library manager sets the process number to 1.0.

If two or more libraries have the same process label, process number, voltage values, and temperature values, the tool uses only the pane generated for the first library, and ignores the rest. To prevent panes from being ignored, assign a unique process identifier to each pane. To set the process number or process label after loading a logic library, use the `set_process` command.

For example, to read the `db1.db` logic library and set a process label of `PVT1` on the generated pane, use the following command:

```
icc2_lm_shell> read_db -process_label PVT1 db1.db
```

To set a process label of `PVT2` on the generated pane after reading the logic library, use the following command:

```
icc2_lm_shell> set_process -libraries {db1} -label PVT2
```

## Filtering Logic Libraries Based on Operating Corners

By default, the generated cell library contains the timing information from all logic libraries loaded into the library workspace. To include only the timing information that matches the valid operating corners (process, voltage, and temperature values) for your design, define a PVT configuration for the cell library.

A PVT configuration is a sequence of rules, each of which specifies the process labels, process numbers, voltages, and temperatures to match. If you want all the data that matches a specific set of operating corners, a single rule is sufficient. If you want to match a specific subset of many operating corners, you must specify multiple rules.

To define a PVT configuration rule, use the `set_pvt_configuration` command.

- To create a new rule, use the `-add` option.

By default, the command uses the `rule_n` naming convention. To specify the rule name, use the `-name` option.

- To modify an existing rule, use the `-rule` option to specify the rule name.
- To add filters to a rule, use one or more of the following options: `-process_labels`, `-process_numbers`, `-voltages`, and `-temperatures`.
- To remove filters from a rule, use the `-clear_filter` option.

For example, to create a PVT configuration rule that allows any process setting, voltages of 0.65 or 1.32 volts, and a temperature of 25 degrees, use the following command:

```
icc2_lm_shell> set_pvt_configuration -add \  
-voltages {0.65 1.32} -temperatures {25}
```

Note that this command does not affect loading of the logic libraries. It affects only which logic libraries are actually used by the cell library. If you change the PVT configuration, the library manager adjusts the logic library usage appropriately.

To see the logic libraries loaded into the library workspace, use the `get_libs` command. To see which logic libraries are actually used by the library workspace based on the PVT configuration, use the `report_workspace` command.

---

## Loading Extracted Timing Models

An extracted timing model (ETM) contains the timing information for a design for a single mode and characterization point. The extracted timing model must be in `.db` format and must meet the following additional requirements:

- It must be generated by the PrimeTime tool.
- It must contain a single design.

- It must not contain a mode definition.
- The `dont_touch` and `dont_use` attributes for the design must be set to `true`.
- The design must have at least one of the following attribute settings:
  - The `timing_model_type` attribute has a value of `extracted`
  - The `interface_timing` attribute has a value of `true`

To load extracted timing models into the library workspace to create timing views, use the `read_db` command to load the models in `.db` format.

You must use the `-mode_label` option with these commands to specify the mode associated with the timing arcs and generated clocks defined in the model.

For example, to read the `.db` file for the `model1` extracted timing model, use the following command:

```
icc2_lm_shell> read_db -mode_label functional model1.db
```

If you specify the model files with a relative path or with no path, the tool uses the search path defined with the `search_path` variable to locate the files.

---

## Loading the Physical Data

The physical data includes the geometric shapes for the library cells (standard cells or macro cells). The library manager uses this information to generate the place-and-route information (frame views) for the cells.

The physical data can be in LEF, GDSII, or OASIS format. In addition, you can load the physical data from an existing physical library or cell library, or from the FRAM views exported from the IC Compiler tool. To learn about loading physical libraries, see the following topics:

- [Reading LEF Files](#)
- [Reading GDSII or OASIS Files](#)
- [Loading Physical Data from an Existing Library](#)
- [Importing Milkyway FRAM Views From the IC Compiler Tool](#)

In some cases, the technology file and physical library source files do not provide all of the information required by the IC Compiler II implementation tool. For information about the required information and how to specify it, if it is not loaded automatically, see the following topics:

- [Completing the Technology Data](#)

- [Completing the Physical Cell Information](#)

## Reading LEF Files

LEF files contain the shape information for blocks, including the block type, associated site definition, pins, and connectivity. To read a LEF file into the library workspace, use the `read_lef` command. This command supports all versions of LEF through version 5.8. When the command reads a LEF file, it creates design views for all of the blocks in the file.

For example, to read the `myphys.lef` file, use the following command:

```
icc2_lm_shell> read_lef myphys.lef
```

If you specify the LEF file with a relative path or with no path, the library manager uses the search path defined with the `search_path` variable to locate the file.

By default, the `read_lef` command

- Processes all of the cells defined in the library source file  
To process a subset of the cells, filter the cells, as described in [Specifying Which Blocks to Process](#).
- Creates a design view for each processed block

By default, if a block already has a physical representation in the library workspace, the tool creates a design view with a new name. To change this default behavior, either use the `-merge_action` option to change the behavior for all blocks or use a block mapping file to specify the behavior for specific blocks. For details, see [Handling Duplicate Physical Blocks](#).

By default, the `read_lef` command derives the block boundary from the OVERLAP layer in the LEF file, if it exists. If it does not exist, the command derives the rectangular block boundary from the SIZE statement in the LEF file. To derive the rectangular cell boundary from the SIZE statement even if the OVERLAP layer exists, use the `-cell_boundary by_cell_size` option.

If a block has PROPERTY definitions in the LEF file, the `read_lef` command saves the properties as user-defined attributes of the block. By default, the command saves all the block properties; to save only specific block properties, specify the property names with the `-properties` option.

When the library manager reads a LEF file, it stores certain settings as attributes on the blocks or block objects. To use the LEF file only to update the attribute settings on the existing blocks in the library workspace, and not to create design views, use the `-merge_action attributes_only` option.

- Assigns a site definition to each processed block  
By default, the `read_lef` command assigns the site definitions for a block by matching the block's size to the site definition sizes. To match, the height and width of a block must

be an integer multiple of the height and width of the site definition. The command uses the following priority to select the site definition for a block:

1. The default site definition
2. The block's site definition in the LEF file
3. The smallest site definition

To force the command to use the block's site definition in the LEF file, use the `-preserve_lef_cell_site` option.

If the height and width of a block does not match the size of any site definition, the tool issues an error message.

- Fails if the LEF file contains layer information that conflicts with the technology file

### See Also

- [Defining the Search Path](#)
- [Validating the LEF File](#)
- [Determining the Block Types When Reading LEF Files](#)
- [Determining the Electrical Equivalence for PG Terminals When Reading LEF Files](#)
- [Preparing Standard Cells](#)

### Validating the LEF File

To analyze an input LEF file before loading it into the workspace, enable check-only mode by using the `-syntax_only` option. The check-only mode provides diagnostic information about the correctness and integrity of the LEF file. The check-only mode does not load any information into the workspace.

```
icc2_lm_shell> read_lef -syntax_only myphys.lef
```

## Determining the Block Types When Reading LEF Files

The `read_lef` command uses the mapping shown in [Table 2-2](#) to convert the LEF CLASS properties to `design_type` attributes for the processed blocks.

*Table 2-2 LEF CLASS Property to IC Compiler II design\_type Attribute Mapping*

LEF syntax		IC Compiler II design_type attribute
CLASS property	Subtype	
BLOCK	N/A	macro
	BLACKBOX	black_box
	SOFT	module
CORE	N/A	lib_cell
	ANTENNACELL	diode
	FEEDTHRU	feedthrough
	SPACER	filler
	TIEHIGH	lib_cell
	TIELOW	lib_cell
	WELLTAP	well_tap
COVER	N/A	cover
	BUMP	flip_chip_pad
ENDCAP	BOTTOMLEFT	corner
	BOTTOMRIGHT	corner
	POST	end_cap
	PRE	end_cap
	TOPLEFT	corner
	TOPRIGHT	corner
PAD	N/A	pad
	AREAIO	flip_chip_driver
	INOUT	pad
	INPUT	pad
	OUTPUT	pad
	POWER	pad
	SPACER	pad_spacer
RING	N/A	macro

## Determining the Electrical Equivalence for PG Terminals When Reading LEF Files

By default, the `read_lef` command does not calculate the electrical equivalence (EEQ) setting for the PG terminals. To calculate the EEQ setting for the PG terminals, use the `-create_eeq_setting_for_block_and_pad` option. By default, when the library manager calculates the EEQ setting, it considers the direction of the PG port. To ignore the port direction, use the `-ignore_pg_direction_for_eeq` option.

## Resolving Site Definition Conflicts When Reading LEF Files

If the LEF file contains site information that differs from the site information in the technology file loaded into the library workspace, the `read_lef` command fails to load the LEF file. Use one of the following methods to resolve the conflicts so you can load the LEF file:

- If the files contain sites with the same definitions, but different names, you can specify the site name mapping by using the `-convert_sites` option with the `read_lef` command. For example, to change the site name in the `myphys.lef` file from `unit` to `new_unit`, use the following command:  

```
icc2_lm_shell> read_lef -convert_sites {unit new_unit} myphys.lef
```
- If the files contain sites with the same names, but different definitions, you can enable the tool to automatically rename conflicting site names by setting the `file.lef.auto_rename_conflict_sites` application option to `true` before running the `read_lef` command.

When you enable this option, the tool uses the following naming convention to rename the conflicting site names:

```
lef_file_name.site_name[_n]
```

The numeric suffix is added only if required to make the site name unique.

## Reading GDSII or OASIS Files

GDSII and OASIS files are similar in that they contain physical shape information for the blocks, but do not contain information about the block type, associated site definition, pins, or connectivity.

- To read one or more GDSII files into the library workspace and perform connectivity analysis, use the `read_gds` command.
- To read one or more OASIS files into the library workspace and perform connectivity analysis, use the `read_oasis` command.

If you specify a library source file with a relative path or with no path, the library manager uses the search path defined with the `search_path` variable to locate the file.



For example, to read the `myphys.gds` file, use the following command:

```
icc2_lm_shell> read_gds myphys.gds
```

When the tool reads a library source file in GDSII or OASIS format, it assumes that all of the blocks are standard cells and all of the pins are signal pins. It generates a layout view for each block in the file. If it finds a duplicate block, it creates a layout view with a new name. The tool then performs connectivity analysis to determine the pins and connectivity information and generates a design view for each block.

The following topics describe how to modify the behavior of the `read_gds` and `read_oasis` commands:

- [Resolving Layer Differences](#)
- [Specifying Which Blocks to Process](#)
- [Handling Duplicate Physical Blocks](#)
- [Specifying the Site Definitions When Reading GDSII or OASIS Files](#)
- [Adjusting Standard Cell Boundaries](#)
- [Identifying Power and Ground Pins](#)
- [Editing Layout Views Before Performing Connectivity Analysis](#)
- [Controlling the Connectivity Analysis of Layout Views](#)

### Resolving Layer Differences

When you read a GDSII or OASIS file, the tool assumes that the layer names are the same in the library source file and the technology file loaded into the library workspace.

- If the layers are the same, but have different names, you must provide a layer mapping file, as described in [Mapping Source File Layers to Technology File Layers](#).
- If the library source file contains layers that are not defined in the technology file, the tool creates new layers. For information about other ways to handle this situation, see [Handling Extra Layers in the Library Source File](#).

## Mapping Source File Layers to Technology File Layers

If the layer names differ between the library source file and the technology file, you must provide a layer mapping file. For information about the syntax of the layer mapping file, see [Layer Mapping File Syntax](#).

Use one of the following methods to specify the layer mapping file:

- Use the `set_layer_map_file -format gds` command to load the layer mapping file into the library workspace

```
icc2_lm_shell> set_layer_map_file -format gds -map_file file_name
```

When you load a layer mapping file into the library workspace, it is used by both the `read_gds` and `read_oasis` commands.

- Use the `-layer_map` option with the `read_gds` or `read_oasis` command

```
icc2_lm_shell> read_gds -layer_map file_name myphys.gds
```

## Handling Extra Layers in the Library Source File

To prevent the tool from creating new layers, use the `-read_always false` option with the `read_gds` or `read_oasis` command. When you use this option, the command fails if the library source file contains layers that are not defined in the technology file. To modify this behavior, use one of the following options with the `-read_always false` option:

- `-mapped_layers_only`

In this case, the command loads only those layers specified in the layer mapping file and ignores all other layers defined in the library source file.

- `-ignore_missing_layers`

In this case, the command loads only those layers defined in the technology file and ignores all other layers defined in the library source file.

You can also set these options in the layer mapping file, as described in [Layer Mapping File Syntax](#). If you specify these options both on the command line and in the layer mapping file, the settings in the layer mapping file override the command-line settings.

## Specifying the Block Types When Reading GDSII or OASIS Files

GDSII and OASIS files do not specify the block type for the blocks defined in the file. When you read a GDSII or OASIS file, the tool assumes all blocks are standard cells and sets their `design_type` attribute to `lib_cell`. To specify the block type for the blocks in a GDSII or

OASIS file, create a block mapping file. For information about the syntax of the block mapping file, see [Block Mapping File Syntax](#). When you run the `read_gds` or `read_oasis` command, use the `-block_map` option to specify the block mapping file.

### Specifying the Site Definitions When Reading GDSII or OASIS Files

GDSII and OASIS files do not specify the site definition associated with the blocks defined in the file. To enable successful placement and legalization, you must associate each standard cell with a site definition.

To specify the site definitions for the blocks in a GDSII or OASIS file, create a block mapping file. For information about the syntax of the block mapping file, see [Block Mapping File Syntax](#). When you run the `read_gds` or `read_oasis` command, use the `-block_map` option to specify the block mapping file.

You can also associate site definitions with the standard cells by using the `set_attribute` command after loading the library source file, as described in [Preparing Standard Cells](#).


### Adjusting Standard Cell Boundaries

When you read a GDSII or OASIS file, the tool determines the boundary for each standard cell. If a boundary layer is defined, the tool uses it to determine the standard cell boundary. Otherwise, the tool generates a default boundary.

In some cases, the cell boundary determined by the tool is not correct and you must adjust it.

- If the boundary for a cell is not specified in the library source file and the cell layout assumes shared power and ground pins, the default boundary generated by the tool is incorrect. You must adjust the cell boundary by reducing it to the center line of the pin geometries. [Figure 2-3](#) shows the default and adjusted boundaries for a standard cell with shared power and ground pins.

*Figure 2-3 Boundary for Standard Cell With Shared Power and Ground Pins*

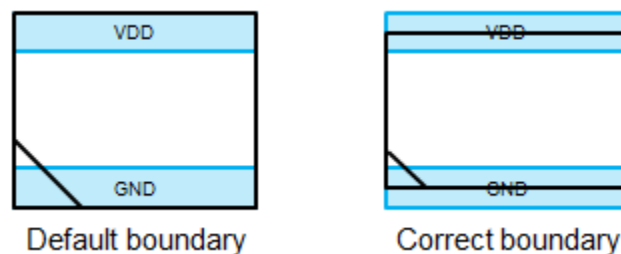

Use one of the following methods to shrink the default boundary:

- To automatically shrink the default boundary to the center line of the pin geometries for all blocks, use the `-centerline_boundary` option with the `read_gds` or `read_oasis` command.
- To shrink the default boundary for specific blocks, specify the `-centerline_boundary` option in the block mapping file. For information about the syntax of the block mapping file, see [Block Mapping File Syntax](#). To specify the block mapping file, use the `-block_map` option with the `read_gds` or `read_oasis` command.
- If the boundary for a cell is defined incorrectly in the library source file, manually specify the boundary by using the `set_attribute` command to modify the `bbox` attribute of the library cell. For example, the script shown in [Example 2-1](#) reduces the boundary for a set of library cells by 0.115 units on the left side, 0.051 units on the bottom, 0.115 units on the right side, and 0.109 units on the top.

#### *Example 2-1 Script to Resize Cell Boundaries*

```
set cells_to_resize \
  [get_lib_cells -include_subcells {libraryname/*/design } ]
set resize_parameters {-0.115 -0.051 -0.115 -0.051}
foreach_in_collection c $cells_to_resize {
  set cname [get_attribute -objects [get_lib_cells $c] -name name]
  puts "INFO: Resize boundary for $cname by \{$resize_parameters\}"
  set existing_boundary \
    [get_attribute -objects [get_lib_cells $c] -name boundary_bbox]
  set new_boundary \
    [get_attribute -objects \
      [get_attribute [resize_polygons \
        -objects [create_poly_rect -boundary $existing_boundary] \
        -size "$resize_parameters"] \
        -name poly_rects] \
      -name point_list]
  set_attribute [get_lib_cells $c] boundary $new_boundary
}
```

## Identifying Power and Ground Pins

GDSII and OASIS files do not specify the pin types. When you read a GDSII or OASIS file, the tool assumes all pins in the library source file are signal pins.

To identify power and ground pins, use the `file.format.port_type_map` application option to map the pin name to its type, where *format* is either `gds` or `oasis`. The mapping applies to all cells in the GDSII or OASIS files.

For example, to set all pins named VDD as power pins and all pins named VSS as ground pins when reading GDSII files, use the following command:

```
icc2_lm_shell> set_app_options -name file.gds.port_type_map \  
-value {{power VDD} {ground VSS}}
```

## Editing Layout Views Before Performing Connectivity Analysis

In some cases, you might need to edit the layout views before performing connectivity analysis. To do this,

1. Read the library source files without performing connectivity analysis by using the `-trace_option none` option when you run the `read_gds` or `read_oasis` command.
2. Edit the layout views as described in the *IC Compiler II Graphical User Interface User Guide*.
3. Perform connectivity analysis by running the `trace_connectivity` command.

## Controlling the Connectivity Analysis of Layout Views

The tool uses the text labels in the library source file to associate metal shapes with a net or pin. If the text is not on the same layer as the metal shape, you must map the text layers to the metal layers, as described in [Mapping Text Layers](#).

The tool traces the connectivity of the labeled metal shapes to identify additional metal shapes associated with that net or pin. It can trace connectivity for shapes that overlap pin text, for shapes on the same layer as the pin text, or for shapes on all layers. By default, the tool determines the pin tracing method based on the block type. To explicitly specify the pin tracing method, use the `-trace_option` option with the `read_gds` or `read_oasis` command or the `-layer` option with the `trace_connectivity` command. [Table 2-3](#)

describes the supported methods, the keywords used to enable them, and the default method for each block type.

*Table 2-3 Pin Tracing Methods*

Tracing method	Cell types for which this is the default tracing method	-trace_option Keyword	-layer Keyword
Create terminal shapes only for shapes that overlap pin text.	Modules, macro cells <sup>1</sup> , analog cells, and black box cells	pins_only	pins_only
Trace the connectivity only on the same layer as the pin text. <sup>2</sup>	Library cells, pad cells, corner cells, pad spacer cells, cover cells, flip-chip pads, flip-chip drivers, physical-only cells, well tap cells, end cap cells, diode cells, filler cells, and metal fill	same_layer	same
Trace the connectivity across all layers. <sup>2</sup>	N/A	all_layers	all

1. If a macro cell has rectilinear pins, you must explicitly set the `-trace_option` option to `same_layer`; the `pins_only` method always extracts rectangular pins.

2. To reduce runtime, limit the number of geometries traced by setting the `-trace_connectivity_limit` option or enable all-layer tracing only for specific pins by using the `-trace_all_layers_for` option.

## Mapping Text Layers

If the text is not on the same layer as the metal shape, you must use the `file.format.text_layer_map` application option to map the text layers to the metal layers, where *format* is either `gds` or `oasis`. Use the following format to specify the mapping:

```
{metal_layer {text_layer1[:data_type1] [text_layer2[:data_type2] ...]}}
```

where

- *metal\_layer* and *text\_layer* are the layer names in the technology file
- *data\_type*, which is optional, is the data type number in the technology file

To use only the mapped text layers specified by the `file.format.text_layer_map` application option when tracing the connectivity, set the `file.format.use_only_mapped_text` application option to `true`.

## Layer Mapping File Syntax

The syntax used to specify the layer mapping in the layer mapping file is

```
[object_type] tf_layer[:tf_purpose][:use_type][:mask_type]
stream_layer[:stream_data_type]
```

where

- *object\_type* specifies the types of objects to which the mapping applies  
Valid values are `data` (all non-text objects), `text`, and `all`. The default is `all`.
- *tf\_layer* is the layer number in the technology file, which is a required argument
- *tf\_purpose* is the purpose number in the technology file  
Valid values are either an integer value or the `drawing` keyword.
- *use\_type* is the usage of the geometries in the design  
Valid values are `power`, `ground`, `signal`, `clock`, `boundary`, `hard_placement_blockage`, `soft_placement_blockage`, `routing_blockage`, and `area_fill`.
- *mask\_type* is the mask constraint of the geometries  
Valid values for metal layers are `mask_one`, `mask_two`, `mask_three`, and `mask_same`. Via layers have the following additional valid values: `MASK_FOUR`, `MASK_FIVE`, `MASK_SIX`, `MASK_SEVEN`, `MASK_EIGHT`, `MASK_NINE`, `MASK_TEN`, `MASK_ELEVEN`, `MASK_TWELVE`, `MASK_THIRTEEN`, `MASK_FOURTEEN`, and `MASK_FIFTEEN`.
- *stream\_layer* is the layer number in the GDSII or OASIS file, which is a required argument
- *stream\_data\_type* is the data type in the GDSII or OASIS file

To include comment lines in the layer mapping file, start the line with a semicolon (;).

The layer mapping file also supports the following optional statements to further control how the `read_gds` or `read_oasis` command loads the library source files:

```
read_always true|false [-mapped_only] [-ignore_missing_layers]
blockage_as_zero_spacing true|false
cell_prop_attribute attribute_value
net_prop_attribute attribute_value
pin_prop_attribute attribute_value
```

Table 2-4 describes how these statements affect the behavior of the `read_gds` and `read_oasis` commands. You can also specify most of these settings on the command line. If you set an option both on the command line and in the layer mapping file, the setting in the layer mapping file takes precedence.

*Table 2-4 Additional Layer Mapping File Statements*

Mapping file statement	Command-line option	Description
<code>read_always true</code>	<code>-read_always true</code>	The command loads all layers defined in the library source file. If the library source file contains layers that are not defined in the technology file, the command creates new layers. This is the default behavior.
<code>read_always false</code>	<code>-read_always false</code>	The command issues an error message and fails if the library source file contains layers that are not defined in the technology file.
<code>read_always false -mapped_only</code>	<code>-read_always false -mapped_layers_only</code>	The command loads only those layers specified in the layer mapping file and ignores all other layers defined in the library source file.
<code>read_always false -ignore_missing_layers</code>	<code>-read_always false -ignore_missing_layers</code>	The command loads only those layers defined in the technology file and ignores all other layers defined in the library source file.
<code>blockage_as_zero_spacing false</code>	N/A	The command does not mark blockages read from the library source file as zero-spacing blockages. This is the default behavior.
<code>blockage_as_zero_spacing true</code>	N/A	The command marks blockages read from the library source file as zero-spacing blockages.
<code>cell_prop_attribute attribute_value</code>	<code>-cell_property attribute_value</code>	The command sets the cell instance names by using the name associated with the specified attribute value.
<code>net_prop_attribute attribute_value</code>	<code>-net_property attribute_value</code>	The command associates geometries with nets by using the specified attribute value.
<code>pin_prop_attribute attribute_value</code>	<code>-pin_property attribute_value</code>	The command associates geometries with pins by using the specified attribute value.



The following example shows a layer mapping file. The comments describe how the statements affect the behavior of the `read_gds` and `read_oasis` commands.

### *Example 2-2 Layer Mapping File*

```
; Disable new layer creation
read_always false

; Map GDSII or OASIS layer 10 with data type 2 to power net shapes
; on technology file layer 56 with a purpose of 4
data 56:4:power 10:2

; Map GDSII or OASIS layers 31 and 32 with data type 0 to
; technology file layer 31 with a purpose of 0
data 31:0 31:0
data 31:0 32:0
```

## Loading Physical Data from an Existing Library

To load the physical data from an existing physical library or cell library into the current library workspace, use the `read_ndm` command. If the library contains technology data, the command also loads this information. By default, the library manager loads all existing physical views (design, frame, and layout) of the cells into the library workspace. To load only specific views, use the `-views` option.

### Note:

For the aggregate flow, the library manager ignores the `-views` option and always loads all available views, including the timing views.

For example, to load the physical data from the `myphys.frame` physical library into the current library workspace, use the following command:

```
icc2_lm_shell> read_ndm myphys.frame
```

When you load frame views into the library workspace, the library manager verifies that they are consistent with any existing frame views in the library workspace and issues a warning message if it finds inconsistencies.

Each time you run the command, you can specify only a single library; to load multiple libraries, you must run the command multiple times. You cannot use this command to load aggregate libraries.

You can specify the library path with an absolute path, a relative path, or no path. If you use a relative path or no path, the library manager uses the search path to find the library.

## Loading Physical Data from a Design Library

If you are using the ETM flow, you load the physical data for the extracted timing models from the design library. To load the design library into the current library workspace, use the `read_ndm` command.

**Note:**

You can load design libraries only when using the ETM flow; if you are using another flow, the tool issues an error.

By default, the library manager loads all existing physical views (design, frame, and layout) of the blocks with an empty label into the library workspace.

- To load only specific views, use the `-views` option.
- To load the blocks with a specific label, use the `-label` option.

For example, to load the physical data for blocks with the empty label from the myblock design library into the current library workspace, use the following command:

```
icc2_lm_shell> read_ndm myblock
```

To load the physical data for blocks with a label of *mylabel* from the myblock design library into the current library workspace, use the following command:

```
icc2_lm_shell> read_ndm -label mylabel myblock
```

**Note:**

The generated library does not contain labels, regardless of the options used with the `read_ndm` command.

When you load frame views from a design library, the library manager verifies that the frame views in the design library are consistent with any existing frame views in the library workspace and issues a warning message if it finds inconsistencies.

Each time you run the command, you can specify only a single library; to load multiple libraries, you must run the command multiple times.

You can specify the library with an absolute path, a relative path, or no path. If you use a relative path or no path, the library manager uses the search path to find the library.

## Importing Milkyway FRAM Views From the IC Compiler Tool

If you do not have physical library source files, but do have Milkyway FRAM views in an IC Compiler reference library, you can use these to create an IC Compiler II physical library. You can then use this physical library to create an IC Compiler II cell library.

To create a physical library by importing Milkyway FRAM views from the IC Compiler tool,

1. In the IC Compiler tool, export the Milkyway FRAM views of a reference library by using the `export_icc2_frame` command.

For example, to export all FRAM views of all reference libraries of the `my_lib` design library, use the following commands:

```
icc_shell> open_mw_lib my_lib
icc_shell> export_icc2_frame
```

The IC Compiler tool writes out a set of files into a new directory named `icc2_frame`. The generated files include the technology files and a tar file that contains the FRAM views converted to LEF format.

2. In the IC Compiler II Library Manager tool, create a library workspace by using the `create_workspace -flow frame` command.

For example, to create a library workspace using the technology data exported from the IC Compiler tool for the `my_reflib` reference library, use the following command:

```
icc2_lm_shell> create_workspace -flow frame \
               -technology /path/icc2_frame/data/TF/my_reflib.tf my_workspace
```

3. Import the converted FRAM views generated by the IC Compiler tool into the library workspace by using the `import_icc_frame` command.

For example, to import the converted FRAM views exported from the IC Compiler tool for the `my_reflib` reference library, use the following command:

```
icc2_lm_shell> import_icc_frame \
               /path/icc2_frame/data/LEF/my_reflib.tar.gz
```

### Note:

You cannot mix imported Milkyway FRAM data with other physical data, such as LEF, GDSII, or OASIS data. If you use imported Milkyway FRAM data, all physical data in the library workspace must come from imported Milkyway FRAM data.

4. Validate the workspace, as described in [Validating the Workspace](#).
5. Commit the workspace, as described in [Committing the Workspace](#).

## See Also

- [Building Cell Libraries](#)

- [Loading Physical Data from an Existing Library](#)

---

## Specifying Which Blocks to Process

By default, when you load a library source file, the tool processes all of the cells defined in the file. If you need to process only a subset of the cells, you can

- Exclude cells from processing
  - Use the `lib.workspace.exclude_design_filters` application option to specify the excluded blocks.

or

- Load all of the blocks into the library workspace and then remove the unwanted blocks by using the `remove_lib_cell` command.
- Read only specific blocks when loading the source files

Use the `lib.workspace.include_design_filters` application option to specify the blocks to read when loading the source files.

---

## Handling Duplicate Physical Blocks

To avoid adding duplicate blocks when reading LEF, GDSII, and OASIS files, use the following options to specify how to handle these blocks. You can

- Ignore the duplicate block by using the `-merge_action ignore` option
- Replace the existing block with the new block by using the `-merge_action overwrite` option
- Merge the geometries of the new block with the existing block by using the `-merge_action update` option
- Add the block with a new name by using the `-merge_action add` option, which is the default
- Specify the handling for specific blocks in a block mapping file by using the `-block_map file_name` option

The settings in the block mapping file override the `-merge_action` setting. For information about the block mapping file syntax, see [Block Mapping File Syntax](#).

---

## Block Mapping File Syntax

The syntax used to specify the block mapping in the block mapping file is

```
block_name[:rw_type[, flatten][:levels]] [block_type][-fixed_mask]
[-site_name site_name] [-centerline_boundary]
```

### Note:

The `read_lef` command supports only the *block\_name* and *rw\_type* arguments; it ignores all other arguments.

The arguments are defined as follows:

- *block\_name* is the name of the block, which is required

You can use regular expressions to specify the block names; the `read_lef`, `read_gds`, and `read_oasis` commands use `glob`-style pattern matching to identify the blocks.

When you use a block mapping file with the `read_gds` or `read_oasis` command, any blocks that do not match a pattern in the block mapping file are loaded into the library workspace as standard cells.

- *rw\_type* specifies how to load the block into the library workspace

This argument overrides the default behavior specified by the `-trace_option` option of the `read_gds` or `read_oasis` command for the specified blocks. Valid values for this argument are

- `add`

Creates a physical representation for the block; if a physical representation already exists for the block, it creates a physical representation with a new name.

- `ignore`

Does not create a physical representation for the block. The `read_gds` and `read_oasis` commands ignore this setting if the block is a subblock of a hierarchical block.

- `overwrite`

Creates a new physical representation that replaces the existing physical representation for the block.

- `update`

Updates the existing physical representation for the block by merging the new data with the existing data.

- `retain`

Keeps the instance but does not create the reference library cell.

- `flatten` (supported only by the `read_gds` and `read_oasis` commands)

Flattens all the instances of the block.

You can specify `flatten` either as the `rw_type` argument or as a modifier for the `rw_type` argument. If you specify `flatten` as the `rw_type` argument, the tool treats this the same as if you specified `add, flatten`.

When you specify this keyword, by default, the `read_gds` and `read_oasis` commands perform one level of flattening. To flatten more than one level of hierarchy, specify the `levels` argument.

- `levels` specifies the number of levels to flatten

This argument is valid only when flattening is enabled.

- `block_type` is the block type; valid values are `lib_cell`, `macro`, `pad`, `corner`, `pad_spacer`, `cover`, `flip_chip_pad`, `flip_chip_driver`, `analog`, `black_box`, `feedthrough`, `well_tap`, `abstract`, `end_cap`, `diode`, `filler`, and `fill`

If you do not specify this argument, the `read_gds` and `read_oasis` commands use a type of `lib_cell`.

- `-fixed_mask` sets the `is_mask_shiftable` attribute for the block to `false`

This argument overrides the `-mask_fixed` option of the `read_gds` or `read_oasis` command for the specified blocks.

- `-site_name` sets the `site_name` attribute for the block to the specified value

Each standard cell in a library source file must be associated with a site definition. Use this option to override the default site definition for a specific cell. You can also specify the site definition for a library cell by using the `set_attribute` command to set its `site_name` attribute.

For more information about setting the site definitions, see [Preparing Standard Cells](#).

- `-centerline_boundary` shrinks the default boundary to the center line of the pin geometries for the block

This argument overrides the `-centerline_boundary` option of the `read_gds` or `read_oasis` command for the specified blocks.

For more information about adjusting the block boundary, see [Adjusting Standard Cell Boundaries](#).

To include comment lines in the block mapping file, start the line with a semicolon (;).

The following example shows a block mapping file. The comments describe how the statements affect the behavior of the `read_gds` and `read_oasis` commands.

*Example 2-3 Block Mapping File*

```
; Load all blocks with CORE in their name as macro cells
*CORE*:add macro

; Flatten all blocks with filler in their name
*filler*:flatten

; Flatten all blocks with MEM in their name two levels deep
*MEM*:flatten:2

; Ignore the rest of the blocks, they will be loaded only when they
; happen to be in a *CORE* block's hierarchy
*:ignore
```

---

## Loading Parasitic Parameters

The RC coefficients for a specific technology are represented by TLUPlus models, which are stored in a TLUPlus file or a common technology file. The TLUPlus models enable accurate RC extraction results by including the effects of width, space, density, and temperature on the resistance and capacitance coefficients.

To read the TLUPlus models into the library workspace, use the `read_parasitic_tech` command. You must specify the files that contain the TLUPlus models by using the `-tlup` option. If you specify the files with a relative path or with no path, the library manager uses the search path defined with the `search_path` variable to locate the files.

If the layer names in the TLUPlus or common technology file do not match the layer names in the technology file, you must use the `-layermap` option to specify the layer mapping file. The layer mapping file uses the following format:

```
conducting_layers
tf_metal_layer_name1      ITF_metal_layer_name1
...
tf_metal_layer_namen      ITF_metal_layer_namen

via_layers
tf_via_layer_name1       ITF_via_layer_name1
...
tf_via_layer_namen       ITF_via_layer_namen
```

To include comments in the layer mapping file, start the line with an asterisk (\*) or pound sign (#).

After you read in a TLUPlus or common technology file, it is identified by its parasitic technology model name. By default, the parasitic technology model name is the base name of the specified file; however, you can specify a different name by using the `-name` option.

For example, to read in a TLUPlus file named `my.tlup` using a layer mapping file named `my.layermap` and store it in the workspace with a parasitic technology model name of `para1`, use the following command:

```
icc2_lm_shell> read_parasitic_tech -tlup my.tlup \
               -layermap my.layermap -name para1
```

---

## Loading Signal Electromigration Constraints

The signal electromigration constraints are defined in either an Interconnect Technology Format (ITF) file or an Advanced Library Format (ALF) file. To load these constraints into the library workspace, use the `read_signal_em_constraints` command.

- By default, the command assumes that the file is in ITF format.

For example, to load the electromigration constraints from an ITF file named `em.itf`, use the following command:

```
icc2_lm_shell> read_signal_em_constraints em.itf
```

- To read an ALF file, use the `-format ALF` option.

To load the electromigration constraints from an ALF file named `em.alf`, use the following command:

```
icc2_lm_shell> read_signal_em_constraints -format ALF em.alf
```

If the library workspace already contains signal electromigration constraints, they are replaced by the constraints in the new file.

---

## Completing the Physical Cell Information

The physical library source files might not contain all of the information required by the IC Compiler II tool for placement and routing. The following topics describe how to annotate missing physical information for a cell library:

- [Preparing I/O Cells](#)
- [Preparing Standard Cells](#)
- [Preparing Macros](#)



## Preparing I/O Cells

I/O cells must have the following attributes to identify their physical characteristics:

- `design_type` library cell attribute

This attribute specifies the I/O cell type. I/O cells must have one of the following settings for the `design_type` attribute: `corner`, `pad`, `pad_spacer`, `flip_chip_driver`, or `flip_chip_pad`.

- `reference_orientation` library cell attribute

This attribute specifies the orientation for proper placement of the I/O cell in the bottom I/O guide. Modify this attribute to correct any I/O orientation issues.

- `class` terminal attribute

This attribute specifies the I/O pin type and is required for the flip-chip flow. Valid values for the `class` attribute are `bump`, `core`, and `none`.

In general, the LEF file defines these attributes, and the library manager automatically sets them when you read the LEF file. If you load the I/O cells by reading a GDSII or OASIS file or if the LEF file does not define these attributes, use the `set_attribute` command to set them manually.

## Preparing Standard Cells

Standard cells must have the following attributes to enable placement and legalization in the IC Compiler II tool:

- `site_name` library cell attribute

This attribute identifies the site definition associated with the standard cell. If a standard cell does not have a site definition or its site definition does not match a site definition in the technology file, the IC Compiler II tool cannot place the cell.

Note:

Use the single-height site definition, which is often named *unit*, for both single-height and multiple-height cells. The IC Compiler II tool automatically identifies the polarity of the power and ground pins and places the single-height and the multiple-height cells accordingly.

For example, to associate the site definition named `unit` with all cells in the workspace, use the following commands:

```
icc2_lm_shell> set_attribute -objects [get_lib_cells */*/design] \
    -name site_name -value unit
```

To report the site definitions in the technology file, use the `report_site_defs` command.

- `boundary` library cell attribute

This attribute defines the boundary of the standard cell. The height of a standard cell must be the same as the height of its site definition and the width must be an integer multiple of the width of its site definition.

For information about changing the boundary attribute, see [Adjusting Standard Cell Boundaries](#).

In general, the LEF file defines these attributes, and the library manager automatically sets them when you read the LEF file. If you load the standard cells by reading a GDSII or OASIS file or if the LEF file does not define these attributes, use the `set_attribute` command to set them manually.

### See Also

- [Resolving Site Definition Conflicts When Reading LEF Files](#)
- [Specifying the Site Definitions When Reading GDSII or OASIS Files](#)
- [Defining Antenna Properties on Standard Cells](#)

## Preparing Macros

To enable antenna checking on hard macro cells, use one of the following methods to annotate hierarchical antenna properties on their ports:

- Automatically extract the antenna properties by enabling IC Validator antenna extraction during the `check_workspace` command, as described in [Automatic Antenna Property Extraction Using the IC Validator Tool](#).
- Manually annotate the antenna properties on the hard macro ports by using the `set_port_antenna_property` command, as described in [Defining Antenna Properties on Hard Macro Cells](#).

### Automatic Antenna Property Extraction Using the IC Validator Tool

To enable IC Validator antenna extraction during the `check_workspace` command, perform the following tasks before running the `check_workspace` command:

- Specify the location of the IC Validator executable by setting the `ICV_HOME_DIR` environment variable.

You can set this variable in your `.cshrc` file. To specify the location of the IC Validator executable, use commands similar to those shown in the following example:

```
% setenv ICV_HOME_DIR /root_dir/icv
% set path = ($path $ICV_HOME_DIR/bin/AMD.64)
```

Make sure that the version of the IC Validator executable that you specify is compatible with the IC Compiler II version that you are using.

For more information about the IC Validator tool, see the IC Validator documentation, which is available on SolvNet.

- Set the `signoff.antenna.enabled` application option to `true`.
- Set `signoff.antenna` application options to control the extraction behavior.

For a summary of these options, see [Antenna Extraction Application Options](#).

---

## Querying the Workspace

To see the contents of a library workspace, use the `report_workspace` command. By default, the command reports the following information:

- The workspace name
- The technology file loaded into the workspace
- The logic libraries loaded into the workspace

You can optionally report the PVT and power rail information for each logic library by using the `-panes` option.

- The physical library source files loaded into the workspace
- The TLUPlus files loaded into the workspace
- The validation status of the workspace

For example,

```
icc2_lm_shell> report_workspace

Workspace name: mylib

...Checked? No

...Technology file: /usr/LIBRARIES/TECH/my.tf

...DB/Liberty files:
  1. /usr/LIBRARIES/DB/my_ff0p95v125c.db
  2. /usr/LIBRARIES/DB/my_ff0p95vn40c.db
  3. /usr/LIBRARIES/DB/my_ff1p16v125c.db
  4. /usr/LIBRARIES/DB/my_ff1p16vn40c.db

...Physical Source files:
  1. /usr/LIBRARIES/LEF/my.lef

...TLUP files: /usr/LIBRARIES/TLU/my.tlup
```

---

## Validating the Workspace

To validate the contents of the library workspace, use the `check_workspace` command.

```
icc2_lm_shell> check_workspace
```

### Note:

This step is not required when creating a technology-only library. No checks are performed when you run this command for a library workspace that contains only technology data.

In addition to validating the workspace, the `check_workspace` command performs the following tasks:

- Generates frame views for the physical cells in the workspace  
For information about generating frame views, see [Generating Frame Views](#).
- Sets the `is_secondary_pg` attribute for PG pins  
For information about the secondary PG settings, see [Identifying Secondary PG Pins](#).
- (Optional) Extracts the antenna properties  
For information about extracting antenna properties, see [Automatic Antenna Property Extraction Using the IC Validator Tool](#).

When you run the `check_workspace` command, the tool performs the checks described in the following topics:

- [Library Checks](#) (includes checks for unique characterization points)
- [Cell Checks](#) (includes checks for missing cells, differences in logic function, and differences in the cell attributes)
- [Pin Checks](#) (includes checks for missing pins, and differences in the pin direction, type, and order)
- [PG Rail Checks](#) (includes checks for differences in the number, names, and order)
- [Timing Arc Checks](#) (includes checks for missing arcs, incorrect arcs, and differences in breakpoints)
- [Leakage-Power Checks](#) (includes checks for missing leakage-power information and differences in power conditions)

In many cases, the library manager can automatically fix the issues detected by these checks.

**Note:**

The checks performed by the `check_workspace` command validate the consistency of the library source files loaded into the workspace; however, the workspace might not contain all of the information required by the IC Compiler II tool for placement and routing. For information about completing the information, see the following topics:

- [Completing the Technology Data](#)
- [Completing the Physical Cell Information](#)

To generate a cell library from a library workspace, the workspace must pass these checks. However, in some cases you can generate a cell library using incomplete or inconsistent source libraries by defining a mismatch configuration, as described in [Allowing Incomplete or Inconsistent Library Data](#). Cell libraries created with a nondefault mismatch configuration are not valid for implementation and can be used only for preroute feasibility analysis; these types of libraries are referred to as *prototype libraries*.

You can view the messages issued by the `check_workspace` command in the message browser, as described in [Using the Message Browser Window](#).

To generate more detailed messages during the validation, use the `-details` option with the `check_workspace` command to specify one or more of the following categories:

`arcs_progress`, `breakpoint_comparisons`, `combine_physical`, `leakage_progress`, `physical_only_cells`, or `all`.

**Note:**

Using the `-details` option can result in a very large log file. In general, you should run the `check_workspace` command with the `-details` option only to debug a specific issue.

## Library Checks

The `check_workspace` command performs the following library checks:

- At least one physical library source file is loaded into the library workspace
- Each library logic loaded into the workspace has a unique characterization point (process, voltage, and temperature).

The workspace must pass these checks before it can be committed.

## PG Rail Checks

This topic describes the PG rail checks for logic libraries that use the PG-pin syntax. For information about PG rail checks for older logic libraries that do not use the PG-pin syntax, see [Using Non-PG Logic Libraries](#).

### Note:

You cannot mix logic libraries with and without PG-pin syntax in a library workspace.

Logic libraries that use the PG-pin syntax define the PG pin connections by using library-level `voltage_map` attributes and cell-level `pg_pin` groups. The `voltage_map` attributes define the power rail names. The `pg_pin` groups define the PG pin connections for a cell; they use the `voltage_name` attribute to assign one of the defined power rails to each PG pin. The signal pins of a cell are associated with the PG rails by using the pin-level `related_power_pin` and `related_ground_pin` attributes. [Example 2-4](#) shows the use of these attributes to define the power connections in a .lib logic library file.

### Example 2-4 Logic Library Example With `voltage_map` Attributes

```
library (my_lib) {
...
voltage_map(VDD085, 0.85);
voltage_map(VDD105, 1.05);
voltage_map(VDD120, 1.20);
...
cell(LS_085_105) {
  pg_pin (VDDH) {
    voltage_name : VDD105;
    pg_type : primary_power;
  }
  pg_pin (VDDL) {
    voltage_name : VDD085;
    pg_type : primary_power;
  }
  ...
  pin (in) {
    direction : input;
    related_power_pin : VDDL;
    related_ground_pin : VSS;
    ...
  }
  pin (out) {
    direction : output;
    related_power_pin : VDDH;
    related_ground_pin : VSS;
    ...
  }
  ...
} /* end cell group*/
...
} /* end library group*/
```

The `check_workspace` command verifies that each logic library has the same number of rails and that the rails have the same names and types. However, the tool ignores rails that are defined in a `voltage_map` attribute but not used.

If the rail order differs, the tool automatically updates the order using the information from the base library.

By default, if a rail name differs between the logic libraries, the tool issues an LM-043 error. If the mismatch is caused only by rail names and positions, and not rail type differences, you can use the `rename_rail` command to make the rail names match. For example, assume logic library A has a `voltage_map` setting of (VDD1.0, 1.0) and logic library B has a `voltage_map` setting of (VDD1.1, 1.1). You could use the `rename_rail` command to align these rails, as shown in the following example:

```
icc2_lm_shell> rename_rail -library A -from VDD1.0 -to VDD
icc2_lm_shell> rename_rail -library B -from VDD1.1 -to VDD
```

In some cases, it might be difficult to find a combination of `rename_rail` commands that result in a consistent set of rail names. In these situations, you can have the tool assign the rail names instead of using the rail names from the logic libraries.

To enable the tool to assign the rail names, set the `lib.logic_model.use_db_rail_names` application option to `false`. In that case, the tool analyzes the voltage values for all of the power and ground pins on the library cells in all logic libraries and assigns a rail name to each unique combination. The generated rail names use the format `type_n`, where `type` is the rail type, such as power or ground, and `n` is an integer that is incremented to make each name unique. You can use the `rename_rail` command to change the generated rail names to names that are more meaningful to you.

**Note:**

If the logic libraries contain duplicate rails, the number of rails generated by the tool will be less than the number of rails in the logic libraries. Because of this difference, the `check_workspace` command issues errors; you can ignore these errors, as they are followed by a message stating that rail mismatches have been fixed.

## Cell Checks

To learn about the cell checks performed by the `check_workspace` commands, see the following topics:

- [Missing Cell Checks](#)
- [Logic Function Check](#)
- [Cell Attribute Checks](#)

## Missing Cell Checks

The `check_workspace` command checks for the following types of missing cells:

- A cell that exists in some, but not all logic libraries, and you are using the normal flow

The tool issues an error message if it finds missing or extra cells in a logic library, as compared to the set of cells in the base library.

Note:

The cell name checks are case-sensitive. You can create a prototype library using case-insensitive checks by defining a mismatch configuration, as described in [Allowing Incomplete or Inconsistent Library Data](#).

To create a cell library, you must do one of the following:

- Manually fix the source libraries and then rerun the `check_workspace` command
- Rerun the `check_workspace` command with the `-allow_missing` option to enable the tool to add the missing cells to the generated cell library

The generated cell library will contain all cells that exist in at least one logic library; if a cell does not exist in a logic library, it will have missing data in the pane associated with that logic library.

- A cell that exists in the logic libraries, but does not have physical data

If a cell exists in the logic libraries, but does not have any physical data, the tool issues an error message and you cannot commit the workspace.

To create a cell library, you must either

- Set the `lib.logic_model.auto_remove_timing_only_designs` application option to `true` to automatically remove the cells from the workspace
- Manually remove the cells from the workspace by using the `remove_lib_cell` command
- Update the library source files

To create a prototype library that includes placeholder cells for the missing physical cells, define a mismatch configuration, as described in [Allowing Incomplete or Inconsistent Library Data](#).

- A physical cell that is not in the logic libraries

If a physical cell is not in any logic library, the tool behavior depends on the flow you selected.

- For the normal flow, the cell is not included in the generated cell library.
- For the physical-only flow, the cell is included in the generated cell library.



For detailed information about physical-only cells detected during workspace validation, specify the `physical_only_cells` keyword with the `-details` option.

## Logic Function Check

The `check_workspace` command verifies that the logic function for a cell is equivalent in all of the logic libraries.

Cells with the same name in different logic libraries must have an equivalent logic function and the `pin_equal` and `pin_opposite` relationships must match; otherwise, the tool issues an error message. You must manually correct this error before you can continue with library preparation. You can correct this error either by updating the library source file and reloading it, or by using the `remove_lib_cell` command to remove the cell.

## Cell Attribute Checks

The `check_workspace` command checks the `dont_touch`, `dont_use`, and `use_for_size_only` attributes for each cell in the logic libraries.

By default, if a cell with the same name in different logic libraries has different values for any of these attributes, the tool issues a warning message and stores the attribute value from the base library in the cell library. You can resolve conflicts by using the `set_attribute` command to change the attribute values.

To require a cell to have the same value for these attributes in all logic libraries, set the `lib.logic_model.require_same_opt_attrs` application option to `true`.

## Pin Checks

To learn about the pin checks performed by the `check_workspace` commands, see the following topics:

- [Missing Pin Checks](#)
- [Pin Definition Checks](#)

## Missing Pin Checks

The `check_workspace` command compares the pins defined for a cell in each logic and physical library source file against the pins defined for the cell in the base library. If a cell in the workspace is missing one or more pins as compared to the base library, the tool issues an error message.

Note:

The pin name checks are case-sensitive. You can create a prototype library using case-insensitive checks by defining a mismatch configuration, as described in [Allowing Incomplete or Inconsistent Library Data](#).

The tool automatically fixes the following issues:

- If a cell in the physical library source file has power or ground pins that are not defined in the logic libraries, the tool automatically adds these pins to the logic cell.
- If a pin is defined as a signal pin in the logic library, but is defined as a PG pin in the physical library source file, the tool issues a warning, redefines the pin as a PG pin, and removes all timing information from the pin.

To create a cell library, you must manually fix any other types of errors in the source libraries. If the pins are not actually missing, but the pin names differ between libraries, you can fix this issue by using the `set_attribute` command to update the `name` attribute for the pins.

To create a prototype library that includes placeholder pins for the missing pins, define a mismatch configuration, as described in [Allowing Incomplete or Inconsistent Library Data](#).

### Pin Definition Checks

The `check_workspace` command checks the following aspects of the pin definition:

- Pin direction

If a pin on any cell in the workspace has a different direction as compared to the base library, the tool issues an error message, with the following exceptions:

- The pin is defined as a bidirectional power or ground (PG) pin in the physical library source file and is defined as an input or output PG pin in the base library. In this case, the tool uses the direction defined in the base library.
- The pin does not have a direction in the physical library source file, as is the case when you read GDSII or OASIS files. In this case, the tool uses the pin direction from the logic libraries.

To create a cell library, you must manually fix the source libraries.

To create a prototype library that uses the pin direction from the base library in the case of mismatches, define a mismatch configuration, as described in [Allowing Incomplete or Inconsistent Library Data](#).

- Pin type

The tool automatically fixes the following issues:

- If a pin does not have a pin type in the physical library source file, as is the case when you read GDSII or OASIS files, the tool uses the pin type from the logic libraries.
- If a pin is defined as a signal pin in the logic library, but is defined as a PG pin in the physical library source file, the tool issues a warning, redefines the pin as a PG pin, and removes all timing information from the pin.

To generate a cell library, you must manually fix the following issues:

- A pin is defined as a signal pin in all logic libraries, but the `bit_width`, `is_pad`, `is_diode`, or `is_scan` attribute setting differs

To fix this issue, you can use the `set_attribute` command to change the attribute values.

- A pin is defined as a signal pin in one logic library, but is defined as a PG pin in another logic library

If a pin is incorrectly defined as a signal pin and is not used in the logic function definition, you can fix this issue by using the `set_attribute` command to change the `port_type` attribute of the pin.

Note:

Changing a pin from a signal pin to a PG pin might cause the tool to remove timing arcs for that pin.

You can use the `set_attribute` command only to change a signal pin to a PG pin; you cannot change a PG pin to a signal pin.

- A pin is defined as a PG pin in all logic libraries, but the `pg_type` attribute differs

To fix this issue, you can use the `set_attribute` command to change the `pg_type` attribute of the pin.

To create a prototype library that uses the pin type from the base library in the case of mismatches, define a mismatch configuration, as described in [Allowing Incomplete or Inconsistent Library Data](#).

Note:

The mismatch configuration can only change a signal pin to a PG pin; it cannot change a PG pin to a signal pin.

- PG pin connection

If the rail name specified for the `voltage_name` attribute in a `pg_pin` group is not defined in a library-level `voltage_map` attribute or the `voltage_name` attribute for a PG pin differs between libraries, the tool issues an error message. To fix this error, you can use the `set_attribute` command to change the `rail_name` attribute. To see the rail names defined for a library workspace, use the `report_workspace -panes` command.

- Related PG pin

Signal pins have a related power pin and a related ground pin; power pins can have a related bias pin. Typically, these relationships are defined in the logic libraries.

If the logic libraries do not define these relationships, either because they do not define the PG pins (and the PG pins are inherited from the physical library source file) or they define the PG pins, but not the relationships, the `check_workspace` command tries to derive these relationships as follows:

- If a cell has a single power pin and a single ground pin, the tool automatically derives the related PG pin information.
- If a cell has multiple power pins, you must guide the tool to derive the related PG pin information.

To guide the tool, use the `set_attribute` command to set the `related_power_pin_hint` and `related_ground_pin_hint` attributes on the pins with the missing information.

```
icc2_lm_shell> set_attribute [get_lib_pins lib/cell/pin] \
    related_power_pin_hint PGpin_name
```

If the related PG pin information for a pin exists but is incorrect, you can correct it by using the `set_attribute` command to set the `related_power_pin_name`, `related_ground_pin_name`, or `related_bias_pin_name` attribute. For example,

```
icc2_lm_shell> set_attribute [get_lib_pins lib/cell/pin] \
    related_power_pin_name PGpin_name
```

**Note:**

By default, the `check_workspace` command ignores missing power and ground relationships during the workspace validation, which might affect analysis performed by the IC Compiler II tool. To require signal pins to have at least one related power or ground pin, set the `lib.workspace.allow_missing_related_pg_pins` application option to `false` before running the `check_workspace` command.

- Pin order

For each cell, the tool determines the pin order in each logic and physical library source file that contains the cell, and verifies that it is the same in each library.

In a logic library, the tool determines the pin order from the logic function, followed by other non-signal pins, such as internal pins, power pins, ground pins, p-well pins, and n-well pins. In a physical library source file, the pin order is determined by the order in which they are specified.

**Note:**

Although the tool can resolve many pin ordering issues, these issues might be caused by out-of-date libraries. If the tool reports pin ordering issues, you should verify that you are using the correct set of libraries before continuing.

If the pin order differs between a logic library and the base library, the result depends on whether the mismatched pins contribute to the logic function.

- If so, the tool issues an error message and does not load the affected cell. You must manually correct this problem to continue with library preparation.
- If not, the tool reorders the pins to match the order in the base library.

If the pin order differs between a physical library source file and the base library, the tool automatically updates the pin order using the information from the base library.

## Timing Arc Checks

For each cell with the same name in different logic libraries, the `check_workspace` command verifies that the cell has the same timing arcs as those defined in the base library, including the timing arcs that specify timing constraints, such as setup and hold.

In the following cases, the tool can often resolve the mismatches:

- The libraries use different representations for the same multimode timing arcs.  
A multimode timing arc can be represented as a single arc with multiple modes or as multiple arcs with a single mode. The tool tries to resolve mismatches of multimode arcs by considering both of these representations.
- The timing arcs use different breakpoints (indexes into the delay lookup table) in the various logic libraries.
- The breakpoints for complementary attributes (`cell_rise` and `cell_fall`, `rise_transition` and `fall_transition`, `rise_setup` and `fall_setup`, or `rise_hold` and `fall_hold`) vary within a library or among libraries.

The breakpoints for complimentary attributes must be functions of the same variables, such as `input_net_transition` ( $T_{inp}$ ) and `total_output_net_capacitance` ( $C_{out}$ ). However, if one of the attributes is defined as a function of both variables, but the other is defined as a function of only one variable, the tool can resolve this difference.

The tool can also resolve differences in the complementary attributes for setup or hold when one attribute is defined as a function of `constrained_pin_transition` ( $T_{dat}$ ) and the other is defined as a function of `related_pin_transition` ( $T_{clk}$ ).

- A timing arc is represented as a table in one library and as a scalar in another.
- A library is missing `rise_transition` or `fall_transition` attributes.  
The tool resolves this by setting the unspecified transition time equal to the specified one for the arcs that are missing these attributes.

If the tool cannot resolve the mismatches, it issues the following message in addition to messages providing information about the timing arc mismatch.

```
Error: Could not fix all missing arcs (LM-025)
```

In the messages, the tool represents a timing arc using the following format:

```
cell from_pin to_pin [related_pin] sense [object_name] [{w:when_cond}]
[MIN] [{m:modes}] [DUPn]
```

The cell, from pin, to pin, and arc sense are always specified. The other fields are reported only when relevant. The related pin is reported only when the delay table is dependent on a related capacitance. If the library specifies a name for the timing group, that name is reported in the *object\_name* field. The *when\_cond* field is reported for state-dependent timing arcs and conditional timing checks. The `MIN` keyword indicates a minimum delay arc and the `DUP` keyword indicates a duplicate arc.

For example, a negative-unate timing arc from pin A to pin Z on the NAND3 cell is represented as “NAND3 A Z negative\_unate”.

To pass workspace validation, you must either fix the errors, provide guidance to the tool about how to handle them, or remove the cell with mismatched timing arcs from all logic libraries.

If the tool finds missing or extra timing arcs for a cell in a logic library, as compared to those in the base library, it issues a warning.

To add arcs that are not defined in the base library, but are defined in another logic library, rerun the `check_workspace` command with the `-allow_missing` option. The arcs are added only if the nodes in the timing graph are the same as in the base library.

Note:

If you choose to override these errors with the `-allow_missing` option, the cell library will have missing data for the cell in some panes.

To remove cells with mismatched timing arcs from the logic libraries, use the `remove_lib_cell` command. You must remove the cell from all logic libraries; otherwise, this results in a missing cell error, which is described in [Missing Cell Checks](#).

For detailed messages during the timing arc checks, specify the `arcs_progress` keyword with the `-details` option. For detailed messages during the breakpoint comparisons, specify the `breakpoint_comparisons` keyword with the `-details` option.

Note:

Using the `-details` option can result in a very large log file. In general, you should run the `check_workspace` command with the `-details` option only to debug a specific issue.

## Leakage-Power Checks

For each cell with the same name in different logic libraries, the `check_workspace` command verifies that it has the same leakage-power information, as defined in the `cell_leakage_power` attribute and the `leakage_power` group.

If the tool finds missing or extra leakage-power information for a cell in a logic library, as compared to those in the base library, it issues a warning. To get detailed information about the missing leakage-power information, use the `-details leakage_progress` option when you run the `check_workspace` command. In the messages, the tool represents leakage-power information using the following format:

```
cell [related_power_pin] [{w:when_condition}]
```

To add leakage-power information that is not defined in the base library, but is defined in another logic library, rerun the `check_workspace` command with the `-allow_missing` option.

**Note:**

If you choose to override this error with the `-allow_missing` option, the cell library will have missing data for the cell in some panes.

If the `when` statement in the `leakage_power` group is not identical between logic libraries, the tool checks the logic equivalence of the conditions.

If the conditions are logically equivalent, the tool uses the condition from the base library. If the conditions are not logically equivalent, the tool issues an error message and you cannot commit the workspace.

## Identifying Secondary PG Pins

The router uses the `is_secondary_pg` attribute to identify the PG and bias pins on which to perform secondary PG pin routing. The `check_workspace` command sets this attribute on the pins based on certain pin and block attribute settings.

- For PG pins, the setting is based on the `pg_type` and `std_cell_main_rail` attributes of the PG pin, which are defined in the logic library source files, and the `design_type` attribute of the block, which is derived from the physical library source files. [Table 2-5](#) shows the `is_secondary_pg` settings for the various combinations of these attributes.
- For bias pins, the setting is based on the `pg_type` and `physical_connection` attributes of the bias pin, which are defined in the logic library source files. [Table 2-6](#) shows the `is_secondary_pg` settings for the various combinations of these attributes.

*Table 2-5 Determining the `is_secondary_pg` Setting for PG Pins*

Logic library PG pin attribute		Cell library cell attribute	Cell library pin attribute
<code>pg_type</code>	<code>std_cell_main_rail</code>	<code>design_type</code>	<code>is_secondary_pg</code>
primary_power or primary_ground	true	all	false
primary_power or primary_ground	false or unset	all	true
backup_power or backup_ground	any value	all	true

*Table 2-6 Determining the `is_secondary_pg` Setting for Bias Pins*

Logic library PG pin attribute		Cell library pin attribute
<code>pg_type</code>	<code>physical_connection</code>	<code>is_secondary_pg</code>
pwell, nwell, deepnpwell, or deepnwell	routing_pin	true
pwell, nwell, deepnpwell, or deepnwell	device_layer	false



---

## Committing the Workspace

After the workspace passes validation with the `check_workspace` command, you can commit the workspace, which saves the workspace on-disk as a cell library. To commit the workspace, use the `commit_workspace` command. By default, the tool saves the cell library in a directory named `workspace_name.ndm` in the current directory using the current schema revision.

```
icc2_lm_shell> commit_workspace
```

To override the default behavior, use the following options:

- `-output dir_name`

This option saves the cell library in the specified directory. For example, to save the cell library in a directory named `mylib.ndm`, use the following command:

```
icc2_lm_shell> commit_workspace -output mylib.ndm
```

The `-output` option specifies the name of both the library and its root directory. If you use this option, both the library and its root directory are named `dir_name`, including any specified extension. If you do not use this option, the library name is `workspace_name`, while its root directory is named `workspace_name.ndm`. The following table shows the library and root directory names for the cell library generated from the `mylib` workspace with and without the `-output` option:

	Library name	Root directory name
Without <code>-output</code> option	<code>mylib</code>	<code>mylib.ndm</code>
With <code>-output mylib.ndm</code> option	<code>mylib.ndm</code>	<code>mylib.ndm</code>

- `-version version_string`

This option saves the cell library using the schema revision for an older tool version. To see the available version strings, use the `report_versions` command.

By default, the command fails if the specified cell library already exists. To overwrite an existing cell library, use the `-force` option. For example,

```
icc2_lm_shell> commit_workspace -output mylib.ndm
Error: File 'mylib.ndm' already exists (FILE-009)
icc2_lm_shell> commit_workspace -force -output mylib.ndm
```

To enable all `commit_workspace` commands to overwrite an existing cell library without using the `-force` option, set the `lib.workspace.allow_commit_workspace_overwrite` application option to `true`.

```
icc2_lm_shell> set_app_options \  
-name lib.workspace.allow_commit_workspace_overwrite -value true
```

The views saved in the generated cell library depend on the library preparation flow you enabled and the settings of the related application options.

- For the normal and ETM library preparation flows, the timing and frame views are saved
- For the frame-only and physical-only library preparation flows, only the frame views are saved
- To save the design views, set the `lib.workspace.save_design_views` application option to `true`.
- To save the layout views, set the `lib.workspace.save_layout_views` application option to `true`.

You can have only a single workspace in memory at one time. After you commit a workspace, it is removed from memory so that you can prepare another cell library.

#### See Also

- [Library Preparation Flows](#)

---

## Generating Frame Views

If a library workspace passes validation, the `check_workspace` command creates frame views for the blocks in the workspace. You do not need to run a separate command to create the frame views.

The IC Compiler II Library Manager tool uses the `lib.physical_model` application options to control the frame view generation, as described in the following topics:

- [Generating Blockages During Frame View Generation](#)
- [Creating Via Regions](#)
- [Deriving Must-Join Pins](#)
- [Creating Frame Views for Hierarchical Cells](#)
- [Creating Colored Frame Views](#)
- [Mode-Based Configuration of Frame View Generation Options](#)

#### Note:

When you create frame views in `icc2_shell` with the `create_frame` command, you control the frame view generation with command options, which have the same names as the `icc2_lm_shell` application options. For example, the

`lib.physical_model.block_all` application option in `icc2_lm_shell` and the `create_frame -block_all` command option in `icc2_shell` have the same behavior.

You must set these application options before running the `check_workspace` command. When you commit the workspace, the library manager saves these application option settings with the cell library.

To update frame views for an existing cell library, such as when the technology file or tool version is updated, use the process described in [Modifying a Cell Library](#).

### See Also

- [Building Cell Libraries](#)
- [Frame View Generation Application Options](#)

---

## Generating Blockages During Frame View Generation

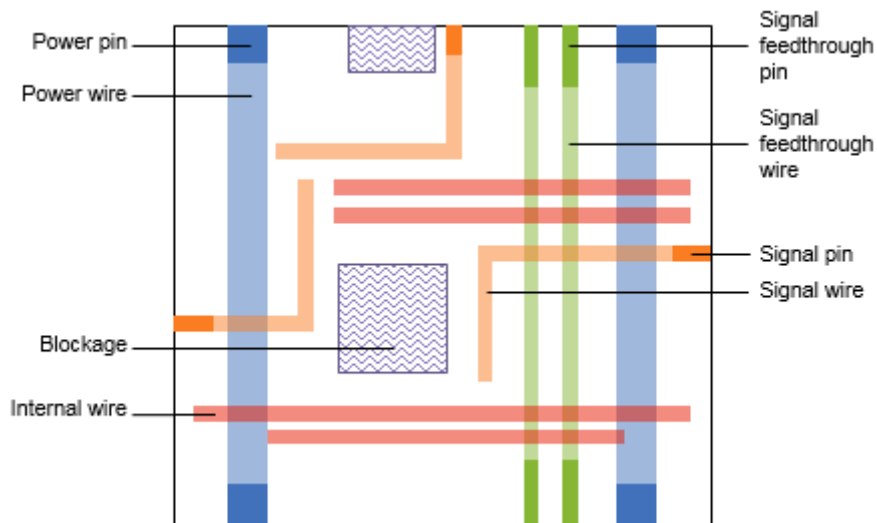
A blockage prevents routing or vias within the blockage region. The IC Compiler II tool supports the blockage types shown in the following table:

*Table 2-7 Blockage Types*

Blockage type	Attribute setting	Description
Regular blockage	<code>is_zero_spacing=false</code>	The router treats a regular blockage as real metal and applies all design rules to the blockage.
Zero-spacing blockage	<code>is_zero_spacing=true</code>	The router checks zero-spacing blockages only for overlaps, and does not apply design rules to them.
Design rule via blockage	<code>is_design_rule_blockage=true</code>	Design rule via blockages are similar to zero-spacing via blockages, but they honor the rules defined for the via blockage layer in the <code>DesignRule</code> sections of the technology file.

---

[Figure 2-4](#) shows an example design view for a standard cell. This example is used to illustrate the various controls over blockage generation.


*Figure 2-4 Example Design View for a Standard Cell*

By default, when the library manager generates a frame view for a standard cell, it preserves the blockages that exist within the cell and does not generate additional blockages.

[Figure 2-5](#) shows the resulting frame view for the design view shown in [Figure 2-4](#), which includes all metal shapes from the design view.

**Note:**

By default, when you create a frame view for a macro with the `create_frame` command in `icc2_shell`, the tool trims the metal shapes and regular blockages that touch a pin, as shown in [Figure 2-7](#).

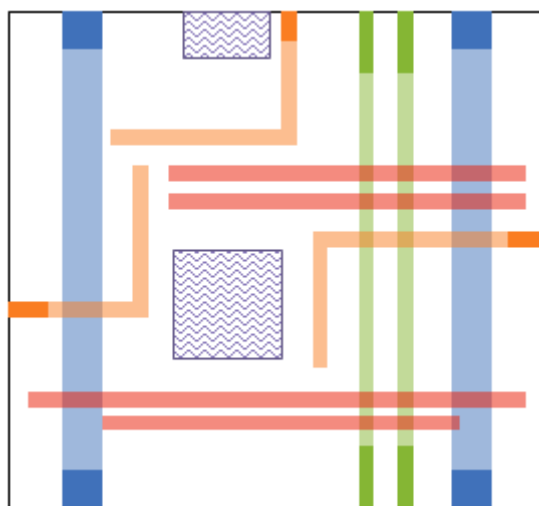*Figure 2-5 Default Frame View for a Standard Cell*


## Converting Regular Blockages to Zero-Spacing Blockages

In some cases, particularly when a blockage touches a pin, regular blockages can cause pin access issues. To improve pin access, you can convert regular blockages to zero-spacing blockages during frame view generation. To enable the conversion, set the `lib.physical_model.convert_metal_blockage_to_zero_spacing` application option. When the tool converts the regular blockage to a zero-spacing blockage, it enlarges the blockage boundary by a specified amount. You can specify different conversion parameters for each layer depending on whether the blockage touches a pin. The syntax to set this application option is

```
set_app_options
-name lib.physical_model.convert_metal_blockage_to_zero_spacing
-value { {layer1 spacing1 [all|touch_pin|no_touch_pin]}
        {layer2 spacing2 [all|touch_pin|no_touch_pin]} ...
        {layern spacingn [all|touch_pin|no_touch_pin]} }
```

Figure 2-6 shows the frame view, where the purple region represents the zero-spacing blockage that replaced the regular blockage. The arrows represent the increased size of the blockage.

Figure 2-6 Converting Regular Blockages to Zero-Spacing Blockages

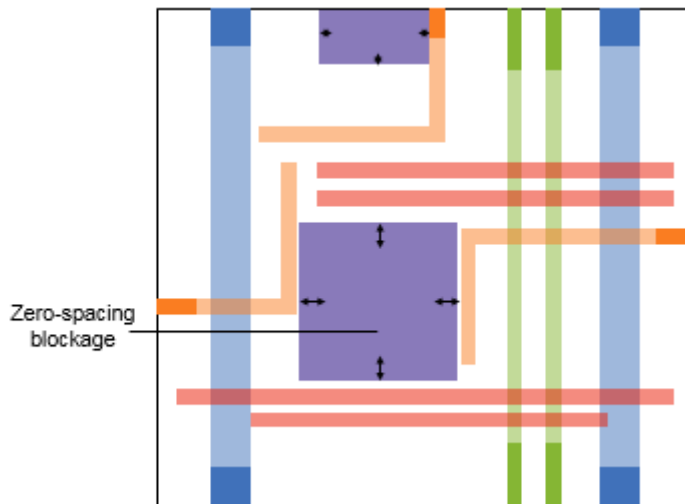

For via blockages, you can convert zero-spacing blockages to design rule blockages on specific layers by setting the `lib.physical_model.design_rule_via_blockage_layers` application option.

## Trimming Blockages Around Pins


You can improve pin access by converting portions of metal shapes and regular blockages near the pins to zero-spacing blockages. This process is called *trimming*. The trimming distance is the largest fat table spacing defined for the layer in the technology file.

To trim the metal shapes and regular blockages that touch a pin for all layers, set the `lib.physical_model.preserve_metal_blockage` application to `false`. [Figure 2-7](#) shows the resulting zero-spacing blockage.

### Note:

When you create a frame view for a macro by using the `create_frame` command in `icc2_shell`, this is the default behavior.

*Figure 2-7 Trimming Touching Blockages Around Pins*

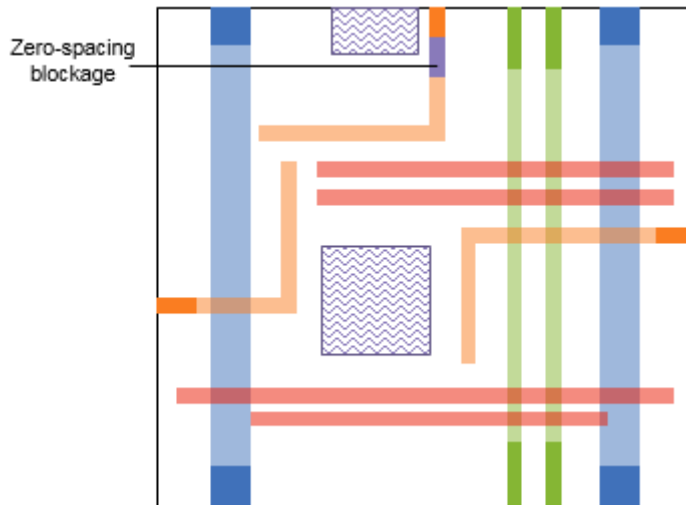


To trim the metal shapes and regular blockages for specific layers, set the `lib.physical_model.trim_metal_blockage_around_pin` application option. When you set this option, you can choose to trim only those metal shapes and regular blockages that touch the pin (`touch`) or all metal shapes and regular blockages within the minimum spacing of a pin (`all`). The syntax to set this application option is

```
set_app_options
-name lib.physical_model.trim_metal_blockage_around_pin
-value { {layer1 all|touch|none}
         {layer2 all|touch|none} ...
         {layern all|touch|none} }
```

[Figure 2-8](#) shows the resulting zero-spacing blockages when all metal shapes and regular blockages in the vicinity of the pin are trimmed.


Figure 2-8 Trimming All Blockages Around Pins

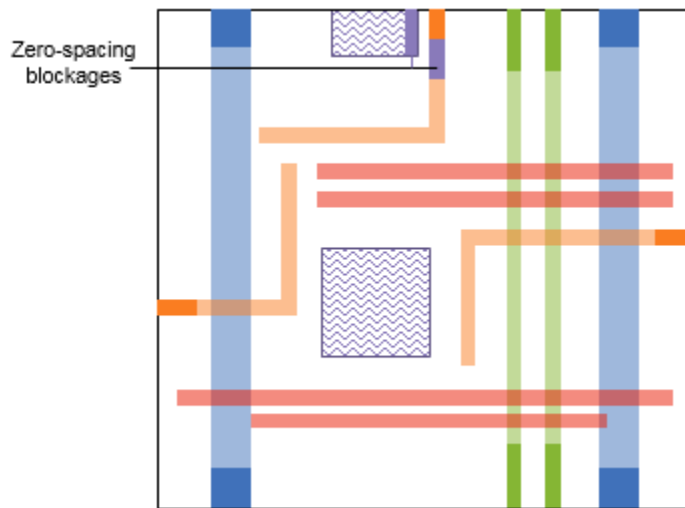

## Reducing the Physical Data by Generating a Core Blockage

For place and route accuracy, only the shapes around the pins and block boundary are required. To reduce the size of the frame views, the tool can generate a zero-spacing routing blockage over the core area (a core blockage). [Figure 2-9](#) shows the parameters used to create the core blockage.

Figure 2-9 Core Blockage

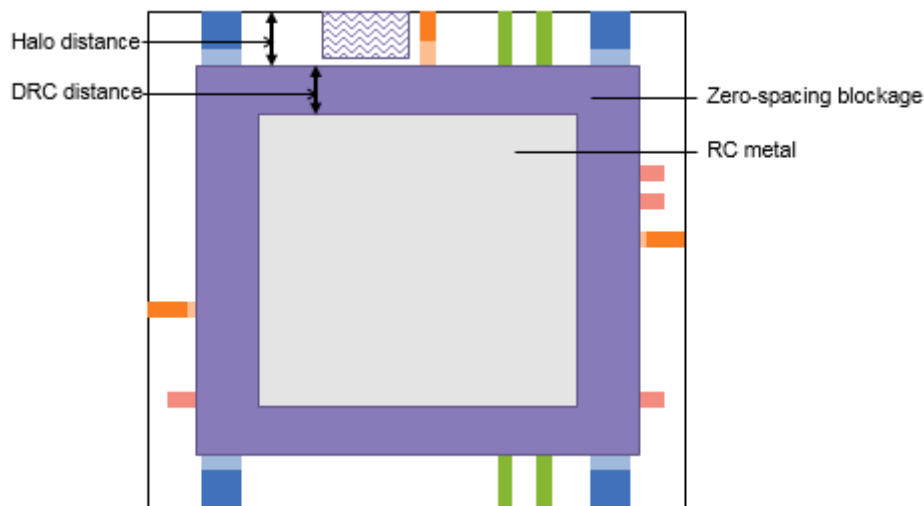

The tool keeps all of the shapes within the [halo distance](#) of the cell boundary and does not create a blockage for this region. The tool creates a zero-spacing routing blockage for the region deeper than the [DRC distance](#) from the cell boundary. The tool keeps all of the

shapes between the halo distance and the DRC distance. It discards the shapes that are deeper than the DRC distance and replaces them with a large RC metal shape.

If a pin is closer to the cell boundary than the [channel distance](#), it is considered a *shallow pin*; otherwise, it is considered a *deep pin*. If a shallow pin is within the zero-spacing blockage, the tool cuts a channel to the pin to enable same-layer routing to the pin.

To enable creation of a core blockage, set the `lib.physical_model.block_all` application option to one of the following values:

- `true`  
The tool creates a core blockage on all metal layers, including routing layers and base layers.
- `used_layers`  
The tool creates a core blockage only on metal layers used by the cell.
- `top_layer_name`  
The tool creates a core blockage on the specified metal layer and all metal layers below it.
- `auto`  
The tool behavior depends on the design type of the cell.
  - For analog, black-box, and module design types, the tool creates a core blockage on all metal layers.
  - For macro cells, the tool creates a core blockage on the metal layers used by the cell.
  - For all other cells, the tool does not create a core blockage.

By default, the halo distance is 0 and the zero-spacing blockages extend to the cell boundary. To specify the halo distance, set the `lib.physical_model.block_core_margin` application option. The syntax to set this application option is

```
set_app_options
-name lib.physical_model.block_core_margin
-value { {layer1 halo_distance1}
         {layer2 halo_distance2} ...
         {layern halo_distancen} }
```

**Note:**

If you set the halo distance for a layer, the tool creates a core blockage for that layer, regardless of the setting of the `lib.physical_model.block_all` application option.

By default, the DRC distance is derived from the largest fat table spacing value defined for the layer in the technology file. To specify the DRC distance, set the



`lib.physical_model.drc_distances` application option. The syntax to set this application option is

```
set_app_options
  -name lib.physical_model.drc_distances
  -value { {layer1 drc_distance1}
           {layer2 drc_distance2} ...
           {layern drc_distancen} }
```

By default, the channel distance is the `minSpacing` value plus the `minWidth` value specified for the layer in the technology file. To specify the channel distance, set the `lib.physical_model.pin_channel_distances` application option. The syntax to set this application option is

```
set_app_options
  -name lib.physical_model.pin_channel_distances
  -value { {layer1 channel_distance1}
           {layer2 channel_distance2} ...
           {layern channel_distancen} }
```


To further reduce the number of shapes kept in the frame view, the tool can

- Merge neighboring shapes if the space between them is less than twice the `minSpacing` value plus the `minWidth` value in the technology file (the merging threshold)

When you set the `lib.physical_model.merge_metal_blockage` application option to `true`, the tool fills the space between neighboring shapes to create a single larger shape if the space between them is less than the merging threshold.

For example, if the technology file specifies a `minSpacing` of 2 and a `minWidth` of 4 for a layer, the merging threshold is  $2 \times 2 + 4 = 8$ . Therefore, in [Figure 2-10](#), the tool merges the geometries on the left to create the blockage area on the right.

*Figure 2-10 Merging Same-Layer Geometries*

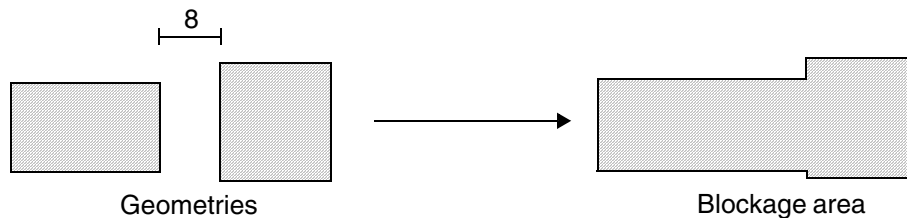

- Remove non-pin shapes

By default, the tool keeps the non-pin shapes in the frame view. When you set the `lib.physical_model.remove_non_pin_shapes` to `all`, the tool removes all non-pin shapes from the frame view. When you set it to `core`, the tool removes the non-pin shapes that are completely within the core area.

## Creating Zero-Spacing Blockages Around Pins


When you specify a positive halo distance for the core blockage, it can be difficult for the router to access the pins between the cell boundary and the core blockage because they can be accessed only from inside the cell. If these pins are not colored or placed off-track from the top-level design, routing DRC violations can occur.

To improve the accessibility by enabling access from outside the cell, the tool can create zero-spacing blockages around the pins. To create zero-spacing blockages around the pins, set the `lib.physical_model.create_zero_spacing_blockages_around_pins` application option. The syntax to set this application option is

```
set_app_options
-name lib.physical_model.create_zero_spacing_blockages_around_pins
-value { {layer1 blockage_width1}
         {layer2 blockage_width2} ...
         {layern blockage_widthn} }
```

If a pin is on the cell boundary or within the DRC distance of the cell boundary it is considered a shallow pin, and the tool does not create a blockage on the boundary side. Otherwise, the pin is considered a deep pin, and the tool creates a blockage of the specified width on all sides of the pin, as shown in [Figure 2-11](#).

Figure 2-11 Zero-Spacing Blockages Around Pins

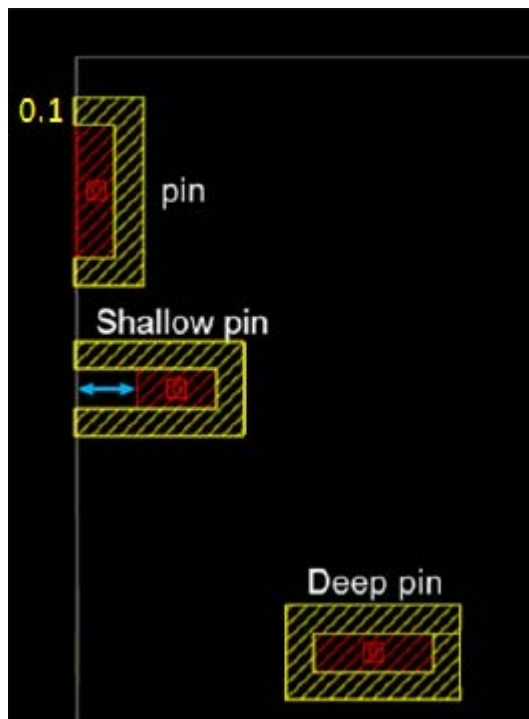

## Creating Zero-Spacing Blockages Around Non-Pin Shapes

If your technology has voltage spacing requirements, you can enforce these requirements by creating zero-spacing blockages around fixed non-pin shapes in the frame view. The non-pin shapes include metal shapes, via shapes, and regular blockage shapes.

To create zero-spacing blockages around non-pin shapes, set the `lib.physical_model.keepout_spacing_for_non_pin_shapes` application option. The syntax to set this application option is

```
set_app_options
  -name lib.physical_model.keepout_spacing_for_non_pin_shapes
  -value {{layer1 {edge_threshold1 ext_spacing1 corner_keepout_spacing1}}
          {layer2 {edge_threshold2 ext_spacing2 corner_keepout_spacing2}}
          ...
          {layern {edge_thresholdn ext_spacingn corner_keepout_spacingn}}
  }
```


The *edge\_threshold* argument defines the threshold for the length of an edge. An *edge* is a segment along the contour of a connected non-pin shape whose length is less than or equal to the specified value, and is not part of a concave corner. All other segments of the connected non-pin shape are *sides*. When generating the frame view, the tool trims sides by pins, but does not trim edges.

The *ext\_spacing* argument defines the width of the zero-spacing blockage on the top, bottom, right, and left sides of the non-pin shapes. The *corner\_keepout\_spacing* argument defines the width of the blockages at the corners of the non-pin shapes.

For example, the following command creates the zero-spacing blockage shown in [Figure 2-12](#).

```
icc2_lm_shell> set_app_options \
  -name lib.physical_model.keepout_spacing_for_non_pin_shapes \
  -value {M1 {0.55 0.7 0}}
```

Figure 2-12 Zero-Spacing Blockage Around Non-Pin Shape

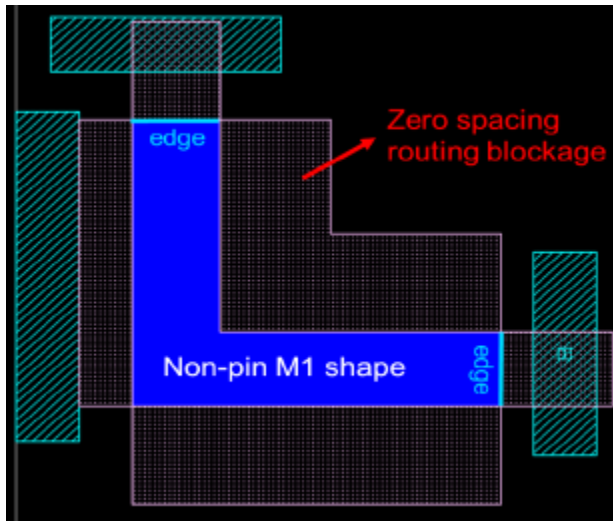

Note:

To use this feature, you must ensure that core blockage creation is disabled for the affected layers.

---

## Creating Via Regions

In a frame view, a via region is an area that consists of one or more rectangles, which might be overlapping, over a pin where the router can make a connection to a port. The via region provides guidance to the router about where to drop a via to make a connection to prevent DRC violations.

By default, the tool

- Generates via regions for cells with the following design types: library cells, diodes, end caps, fill cells, filler cells, physical-only cells, and well taps

For all other design types, the tool generates pin access edges and directions, which guide the router to connect to the pins properly on the same layer.

To generate via regions for all design types, set the

`lib.physical_model.enable_via_regions_for_all_design_types` application option to `true`.

- Requires the router to place the via enclosure inside the pin shape when inserting vias in the via region

This “within-pin” connection ensures that the router will not introduce any DRC violations in the lower metal layer of the cell being connected.

In certain situations, such as when a pin is small and the minimum enclosure around the via is large, the “within-pin” connection is too restrictive. To allow the router to place the via enclosure outside the pin shape, set the

`lib.physical_model.connect_within_pin` application option to `false`. When this option is `false` and the router cannot fit the lower-metal enclosure within the pin, it makes the connection anyway, which causes the lower-metal enclosure to extend beyond the pin shape. This type of connection is said to “change the pin shape.” In that case, the router must spend time checking for and fixing lower-metal design rule violations in the cell, which increases routing runtime.

For large pins, you might want to restrict the connection region to a portion of the pin, which is referred to as the *must-connect area*. For information about creating must-connect areas, see [Creating Pin Must-Connect Areas](#).

- Considers only the default vias and their rotations for all ports

To consider nondefault vias when generating the via regions, specify the contact codes by setting the `lib.physical_model.include_nondefault_via` application option.

To specify the contact codes to use for specific ports, set the `lib.physical_model.port_contact_selections` application option.

- Does not generate via regions for power and ground ports

To generate via regions for specific power and ground ports, specify the ports by setting the `lib.physical_model.include_routing_pg_ports` application option.

#### See Also

- [Updating Via Regions](#)

## Creating Pin Must-Connect Areas

To define a pin must-connect area, use one of the following methods:

- [Explicitly Defining a Must-Connect Area](#)
- [Specifying Must-Connect Width Thresholds](#)

### Explicitly Defining a Must-Connect Area

This method uses shapes drawn on a spare layer to define the must-connect area. During frame view generation, if a pin shape overlaps the must-connect area, the tool creates zero-spacing blockages on the pin shapes, except in the must-connect area.

To use this method, define the must-connect area on a spare layer, and then associate the spare layers with the pin layers. To associate the layers, set the `lib.physical_model.pin_must_connect_area_layers` application option.

For example, to associate the spare CB layer with the M2 layer, use the following command:

```
icc2_lm_shell> set_app_options \
  -name lib.physical_model.pin_must_connect_area_layers \
  -value { {M2 CB} }
```

Figure 2-13 shows the pin shapes on the M2 layer, as well as the must-connect area defined on a spare layer (the CB layer). Figure 2-14 shows the resulting frame view, with the zero-spacing blockages shown in purple.

Figure 2-13 Pin Shapes and Must-Connect Area


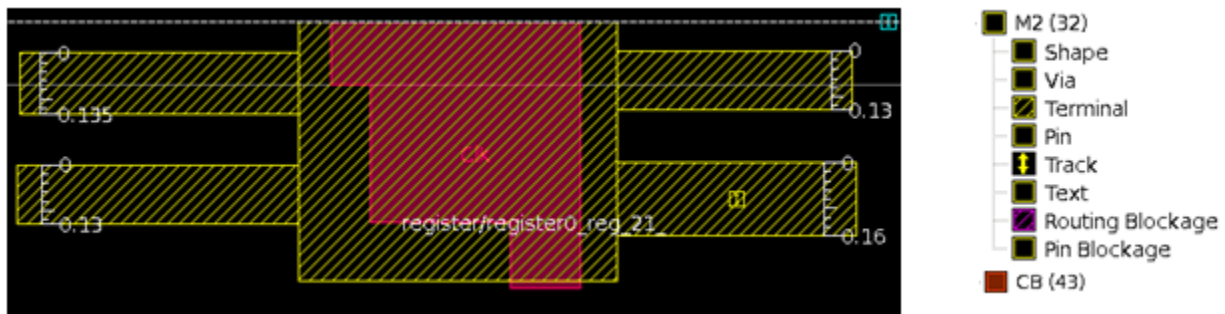


Figure 2-14 Frame View With Must-Connect Area

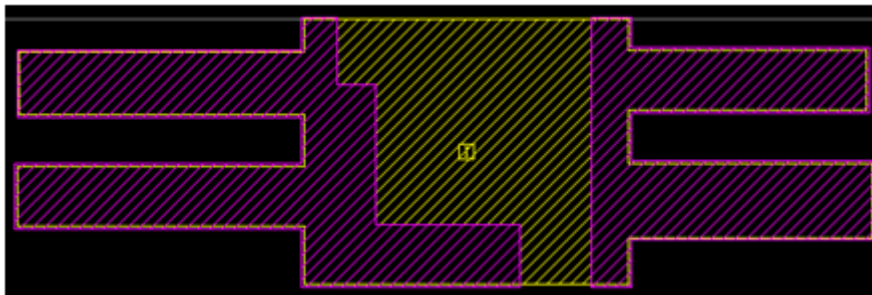

### Specifying Must-Connect Width Thresholds

This method uses a width threshold to prevent pin connections on narrow shapes. During frame view generation, if the width of a pin shape is less than the specified threshold for that layer, the tool creates zero-spacing blockages on the pin shapes.

To define the width thresholds, set the


`lib.physical_model.pin_must_connect_area_thresholds` application option.

For example, to specify a width threshold of 0.135 microns for the M2 layer, use the following command:

```
icc2_lm_shell> set_app_options \
  -name lib.physical_model.pin_must_connect_area_thresholds \
  -value { {M2 0.135} }
```

Figure 2-15 shows the resulting frame view, with the zero-spacing blockages shown in purple.

Figure 2-15 Frame View With Must-Connect Threshold

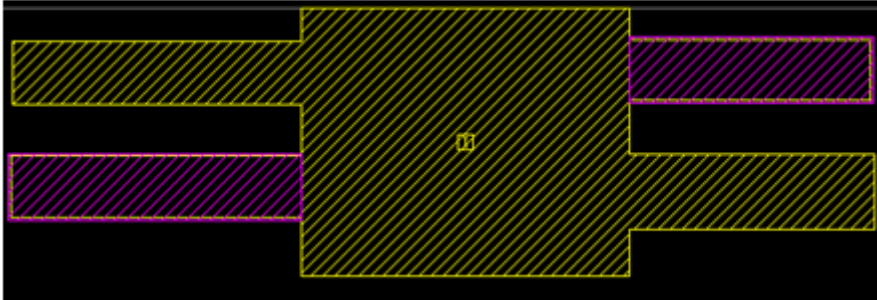

## Deriving Must-Join Pins

When all terminals of a pin must be connected as a single net by the router, the pin is referred to as a *must-join pin* and is identified by a `pattern_must_join` attribute setting of `true`.

By default, frame view generation does not consider must-join pins. If you require that pins with multiple terminals on a layer be routed as must-join pins, set the `lib.physical_model.derive_pattern_must_join` application option to one of the following values:

- `true`  
Sets the `pattern_must_join` attribute to `true` on all pins with multiple terminals on the layer that meet one of the following criteria:
  - The `port_type` attribute of the pin is not set to one of the following power-related values: `power`, `ground`, `nwell`, `pwell`, `deep_nwell`, or `deep_pwell`.
  - The `port_type` attribute is set to one of the power-related values and the `is_secondary_pg` attribute is set to `true`.
  - The `port_type` attribute is set to one of the power-related values and the pin is specified in the `lib.physical_model.include_routing_pg_ports` application option.
- `exclude_pg`  
Sets the `pattern_must_join` attribute to `true` on all pins with multiple terminals on the layer whose `port_type` attribute is not set to one of the following power-related values: `power`, `ground`, `nwell`, `pwell`, `deep_nwell`, or `deep_pwell`.

---

## Creating Frame Views for Hierarchical Cells

By default, when you create a frame view for a hierarchical cell, the tool

- Creates a frame view only for the top-level block

To create frame views for the subblocks, set the

`lib.physical_model.create_frame_for_subblocks` application option to `true`.

- Extracts the geometries in the subblocks

To ignore the geometries in the subblocks, set the

`lib.physical_model.hierarchical` application option to `false`.

---

## Creating Colored Frame Views

To enable color-based frame view generation, set the

`lib.physical_model.color_based_dpt_flow` application option to one of the following values:

- `true`

Always use color-based frame view generation.

- `auto`

Use color-based frame view generation only when the technology file contains double-patterning rules.

When color-based frame view generation is enabled, the tool represents the RC metal of each metal layer as color one shapes that are trimmed by both the colored and uncolored shapes with the maximum spacing specified in the technology file.

For example, [Figure 2-16](#) shows the design view for a colored cell. [Figure 2-17](#) shows the frame view generated for the block without the color-based flow. [Figure 2-18](#) shows the frame view generated for the block with the color-based flow.



Figure 2-16 Design View for Colored Cell

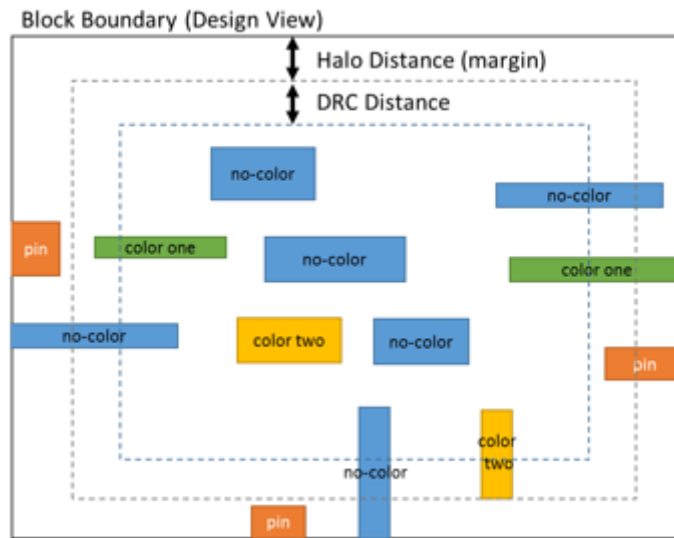


Figure 2-17 Frame View Without Color-Based Flow


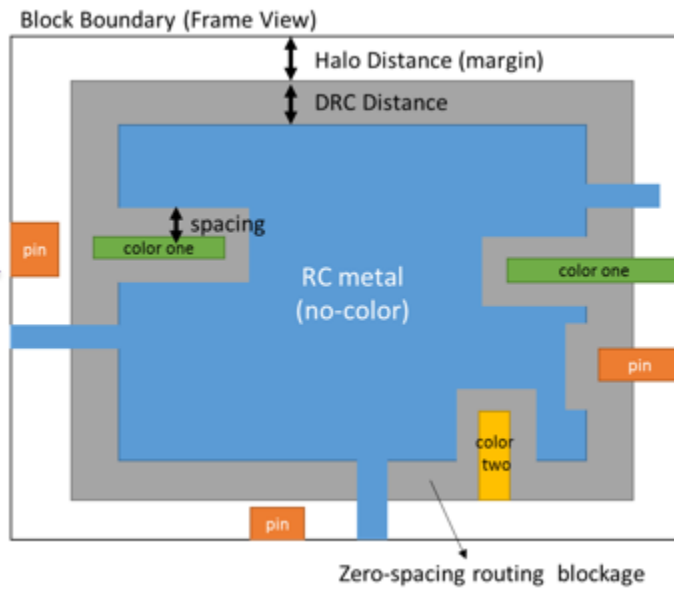


Figure 2-18 Frame View With Color-Based Flow

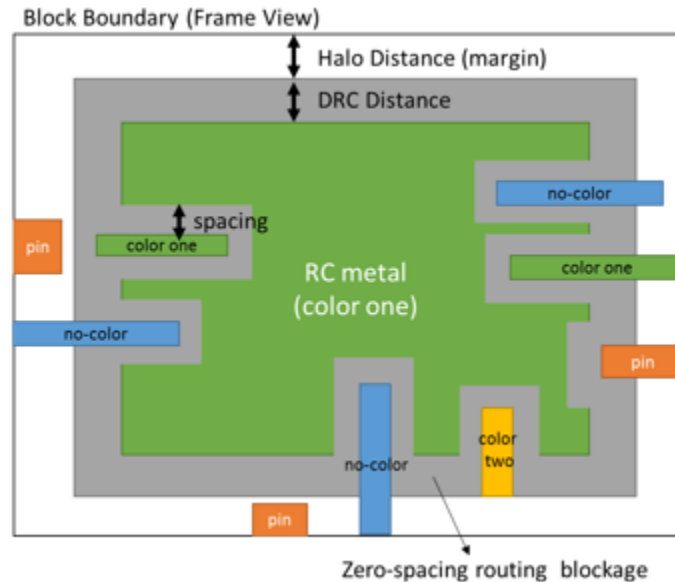

## Mode-Based Configuration of Frame View Generation Options

You can configure the frame generation options for the following situations by using the `configure_frame_options` command:

- A standard cell contains a non-zero-spacing obstruction that overlaps a pin  
In this case, use the `preserve_and_convert` configuration mode.
- A macro contains a non-zero-spacing obstruction that overlaps a pin or is the minimum spacing or less from a pin  
In this case, use the `block_and_trim` configuration mode.
- A macro contains an obstruction that you want to keep as-is in the frame view  
In this case, use the `preserve_all` configuration mode.

In all other cases, use the default frame view generation option settings or individually set the frame view generation options, as needed.

Before using the `configure_frame_options` command, reset the frame view generation options to their default settings by using the following command:

```
icc2_lm_shell> reset_app_options -user_default {lib.physical_model.*}
```

Note that the `lib.physical_model.create_frame_for_subblocks` application option, which has a global scope, is not reset by this command.

[Table 2-8](#) shows the option settings for the supported configuration modes.

*Table 2-8 Frame View Generation Options for Configuration Modes*

lib.physical_model application option	Configuration mode		
	block_and_trim	preserve_and_convert	preserve_all
block_all	auto	false	false
block_core_margin	{used_layers auto_bloat}	{}	{}
preserve_metal_blockage	false	true	true
trim_metal_blockage_ around_pin	{layer all}	{}	{}
convert_metal_blockage_ to_zero_spacing	{}	{layer min_grid touch_pin}	{}
include_nondefault_via	auto	auto	auto
enable_via_regions_for_ all_design_types	true	true	true

## Using the Exploration Flow

The exploration flow automatically analyzes your library source files and generates a script that you can use to create a cell library.

To use the exploration flow to build a cell library,

1. Define the search path, as described in [Defining the Search Path](#).
2. Create the root library workspace for the exploration flow, as described in [Creating a Library Workspace](#).
3. Load the logic library source files into the root workspace, as described in [Loading the Logic Data](#).
4. Load the physical library source files into the root workspace, as described in [Loading the Physical Data](#).
5. Analyze the library source files to automatically create the subworkspaces, as described in [Performing Automated Library Analysis](#).
6. (Optional) Edit the subworkspaces.

## 7. (Optional) Enable aggregate library creation.

To create an aggregate library from the subworkspaces, set the `lib.workspace.explore_create_aggregate` application option to `true`. For information about aggregate libraries, see [Creating an Aggregate Library](#).

## 8. Validate the library workspace and commit it to disk.

You can use either of the following methods to validate and commit the library workspace when you use the exploration flow:

- Validate and commit the exploration flow library workspace by running the `process_workspaces` command on it.

When you run this command, the tool validates each subworkspace in the root workspace and, if the workspace passes validation, commits it to a cell library. This command performs the same functions on each subworkspace as the `check_workspace` and `commit_workspace` commands, but uses less peak memory when processing multiple subworkspaces.

For more information about workspace validation, see [Validating the Workspace](#). To specify validation options for the `process_workspaces` command, use the `-check_options` option.

For more information about committing a workspace, see [Committing the Workspace](#). The `process_workspaces` command accepts the same options as the `commit_workspace` command to control the commit process.

- Generate a library preparation script and source it to create the cell library, as described in [Using a Library Preparation Script](#).

To reduce the runtime of the exploration flow, use the fast exploration flow, as described in [Using the Fast Exploration Flow](#).

---

## Performing Automated Library Analysis

To analyze the library source files in the root workspace and partition them into a set of subworkspaces, use the `group_libs` command.

```
icc2_lm_shell> group_libs
```

This command partitions the library source files into subworkspaces based on the names of the library cells. It analyzes the logic libraries to identify both single-cell and multiple-cell logic libraries. The `group_libs` command checks only the library cell names; it does not check the pins, function, or timing arcs of the library cells.

For each subworkspace, the `group_libs` command adds the physical library source files that include at least the same set of cells. If the physical library source files contain cells that

are not in any of the logic libraries, the `group_libs` command also creates a physical-only subworkspace.

By default, the `group_libs` command

- Checks for cell shadowing across subworkspaces, and fixes any detected issues

Cell shadowing occurs when a library cell with the same name exists in multiple cell libraries. In this case, the tool uses the data from the first cell library in which it finds the cell, and it ignores that cell's data in all other cell libraries.

By default, the `group_libs` command adjusts the grouping such that each cell exists in only one generated cell library, which includes all the PVT panes for the cell. To disable these fixes, set the `lib.workspace.group_libs_fix_cell_shadowing` application option to `false`.

- Tries to put as many macro cells as possible into a single subworkspace

When using this strategy, the command groups all macro cells with the same set of characterization points into a single subworkspace. This strategy creates the smallest number of subworkspaces.

To create subworkspaces that each contain a single macro cell with all of its characterization points, set the

`lib.workspace.group_libs_macro_grouping_strategy` application option to `single_cell_per_lib` before running the `group_libs` command. Using this strategy can generate a large number of subworkspaces.

- Assigns a name of `<root_workspace>_physical_only` to the physical-only subworkspace, if there is one

To specify a name for the physical-only subworkspace, set the

`lib.workspace.group_libs_physical_only_name` application option.

- Assigns names to the other subworkspaces by using a unique combination of logic library prefix and suffix characters

To enable other naming strategies, set the

`lib.workspace.group_libs_naming_strategies` application option.

To report the names of the subworkspaces, use the `get_workspaces` command. To change a workspace name, use the `rename_workspace` command.

Note:

If you change the set of source libraries in the root workspace or change the contents of any library in the root workspace, you must rerun the `group_libs` command to re-create the subworkspaces; otherwise, the subworkspaces might contain obsolete data.

---

## Using a Library Preparation Script

When you use the exploration flow, the tool can generate a library preparation script to create the cell libraries. The generated script file performs the following tasks for each workspace:

1. Creates the library workspace.
2. Loads the logic and physical library source files into the library workspace.
3. Validates the contents of the library workspace.
4. Commits the library workspace to disk using the name of the first logic library as the cell library name.

In addition, if you enable aggregate library creation by setting the `lib.workspace.explore_create_aggregate` application option to `true`, the script creates an aggregate library that contains the cell libraries generated for the workspaces.

### Note:

The generated script file also includes any `set_app_options` and `reset_app_options` commands issued in the `icc2_lm_shell` session before running the `write_workspace` command.

To use this method to create the cell libraries,

1. Generate the library preparation script by using the `write_workspace` command.

When you run this command, you must specify how to output the script:

- Generate one script file per workspace

To write one script file per workspace, use the `-directory` option to specify the directory in which to save the script files. The tool names each script file `workspace_name.tcl`. For example, to save the script files in a directory named `libgen_scripts`, use the following command:

```
icc2_lm_shell> write_workspace -directory libgen_scripts
```

- Generate one script file for all workspaces

To generate a single script file, use the `-file` option to specify the file name. For example, to save the script in a file named `libgen.tcl`, use the following command:

```
icc2_lm_shell> write_workspace -file libgen.tcl
```

The default behavior of this command depends on the current workspace. If the current workspace is the root workspace, it generates a script for each subworkspace. If the current workspace is a subworkspace, it generates a script only for that workspace. To generate a script for specific workspaces, specify the workspaces as an argument to the

command. For example, to generate a Tcl script only for the `my_lib` workspace, use the following command:

```
icc2_lm_shell> write_workspace -file libgen.tcl my_lib
```

You should review the generated script files, and modify as necessary to ensure that it meets your needs before using it to perform your library preparation.

2. Remove the existing root workspace, which also removes all of its subworkspaces, by using the `remove_workspace` command.

```
icc2_lm_shell> remove_workspace
```

3. Create the cell libraries by sourcing the generated script.

```
icc2_lm_shell> source file_name
```

If the `check_workspace` command reports any issues, you must resolve the issues and rerun the script. For information about resolving the issues, see [Validating the Workspace](#). In addition, you might need to modify the generated script to resolve some issues.

---

## Using the Fast Exploration Flow

The fast exploration flow reduces the runtime required for the exploration flow by up to 50X by loading only the information required for library analysis by the `group_libs` command.

To enable this flow, set the `lib.workspace.fast_exploration` application option to `true` before loading the logic libraries.

When you use the fast exploration flow, you cannot use the `process_workspaces` command to check and commit the workspaces. Instead, you must use the `write_workspace` command to create a library preparation script and source this script to create the cell libraries.

The following script shows the commands used in the fast exploration flow:

```
set_app_options -name lib.workspace.fast_exploration -value true
read_db {my_db_files}
group_libs
write_workspace -file libprep.tcl
remove_workspace
source libprep.tcl
```

### See Also

- [Performing Automated Library Analysis](#)
- [Using a Library Preparation Script](#)

## Allowing Incomplete or Inconsistent Library Data

By default, the `check_workspace` command performs the checks described in [Validating the Workspace](#). If a library workspace passes these checks, you can commit the workspace to create a cell library; otherwise, you must fix the reported errors before you can commit the workspace.

You can relax the workspace verification to enable the tool to generate a cell library even if the workspace has certain types of incomplete or inconsistent library data by defining a mismatch configuration. A *mismatch configuration* specifies the types of workspace verification errors that can be ignored or fixed by the tool. Cell libraries generated with this relaxed verification are called *prototype libraries*; they can be used only for preroute feasibility analysis.

The library manager provides two predefined mismatch configurations:

- `default` (the default)  
This is the default behavior of the workspace validation and must be used to generate cell libraries that can be used throughout the implementation flow.
- `auto_fix`  
This mismatch configuration enables the `check_workspace` command to repair the mismatches for all of the supported error types, which are shown in [Table 2-9](#).

**Table 2-9** Mismatch Configuration Error Types

Error type	Description
<code>lib_cell_name_case</code> Supported repairs: <ul style="list-style-type: none"> <li>• <code>record_lib_cell_name_case_insensitivity</code></li> </ul>	Cell name mismatch due to case-sensitivity.  Enables case-insensitivity when comparing cell names. Uses the cell name from the base library.
<code>lib_missing_logical_port</code> Supported repairs: <ul style="list-style-type: none"> <li>• <code>create_placeholder_logic_lib_port</code></li> </ul>	Logic library cell is missing a signal port that exists in the base logic library or physical library cell.  Creates a placeholder port on the logic library cell.



Table 2-9 Mismatch Configuration Error Types (Continued)

Error type	Description
<p><code>lib_missing_physical_port</code></p> <p>Physical library cell is missing a port that exists in the base logic library.</p> <p>Supported repairs:</p> <ul style="list-style-type: none"> <li><code>create_placeholder_physical_lib_port</code></li> </ul>	<p>Creates a placeholder port on the physical library cell. The placeholder port is added on the M1 layer with a location of (0, 0). The terminal width and height are both equal to the minimum width defined for the M1 layer.</p>
<p><code>lib_missing_physical_reference</code></p> <p>Supported repairs:</p> <ul style="list-style-type: none"> <li><code>create_placeholder_physical_lib_cell</code></li> </ul>	<p>A cell exists in the logic libraries, but not in any physical library source file.</p> <p>Creates a placeholder physical cell that has the same dimensions as the LEF unit site and the same number of ports as the cell in the logic libraries, but no real physical information.</p>
<p><code>lib_missing_rail_pg</code></p> <p>Supported repairs:</p> <ul style="list-style-type: none"> <li><code>create_pg_for_rail</code></li> </ul>	<p>Logic library cell is missing a signal port that exists in the base logic library or physical library cell.</p> <p>Creates a placeholder port on the logic library cell.</p>
<p><code>lib_port_name_case</code></p> <p>Supported repairs:</p> <ul style="list-style-type: none"> <li><code>record_lib_port_name_case_insensitivity</code></li> </ul>	<p>Pin name mismatch due to case-sensitivity.</p> <p>Enables case-insensitivity when comparing pin names. Uses the pin name from the base library.</p>
<p><code>lib_port_direction</code></p> <p>Supported repairs:</p> <ul style="list-style-type: none"> <li><code>change_lib_port_direction</code></li> </ul>	<p>A library cell pin has a different direction than in the base library.</p> <p>Uses the pin direction from the base library in the case of signal pin mismatches. Uses the pin direction from the physical library cell in the case of PG pin mismatches.</p> <p>Note:</p> <p>The library manager fixes many types of pin direction mismatches by default. For details, see <a href="#">Pin Definition Checks</a>.</p>

Table 2-9 Mismatch Configuration Error Types (Continued)

Error type	Description
<code>lib_port_type</code>	A library cell pin has a different type than in the base library.
Supported repairs:	Uses the pin type from the base library in the case of signal pin mismatches. Uses the pin type from the physical library cell in the case of PG pin mismatches.
• <code>change_lib_port_type</code>	Note: The library manager fixes many types of pin type mismatches by default. For details, see <a href="#">Pin Definition Checks</a> .

If these predefined configurations do not meet your needs, you can define your own configuration, as described in [Creating a Mismatch Configuration](#).

To set a mismatch configuration, use the `set_current_mismatch_config` command, as described in [Setting a Mismatch Configuration](#). To see the mismatches that were identified and fixed during the `check_workspace` command, use the `report_design_mismatch` command after validating the workspace.

## Creating a Mismatch Configuration

To create a mismatch configuration,

1. Create the configuration by using the `create_mismatch_config` command.  
By default, when you create a user-defined mismatch configuration, it is based on the default mismatch configuration, and all of the error types are treated as error conditions. To specify a different mismatch configuration as the basis for the user-defined configuration, use the `-ref_config` option.
2. Specify how to handle a specific error type by setting its `action` attribute for the configuration.  
Specify one of the following values for the `action` attribute: `accept`, `error`, `ignore`, or `repair`. The initial setting of this attribute comes from the reference configuration used to create the user-defined configuration.  
To determine the available error types, use the `get_mismatch_types` command.
3. If you set the `action` attribute to `repair`, specify the repair process to use by setting the error type's `current_repair` attribute for the configuration.

To determine the available repairs for an error type, query the `available_repairs` attribute of the error type. [Table 2-9](#) describes many of the error types and their available repairs.

For example, the following commands create a user-defined mismatch configuration named `user_def` that repairs missing physical library cells.

```
icc2_lm_shell> create_mismatch_config user_def
icc2_lm_shell> set_attribute \
    [get_mismatch_types lib_missing_physical_reference] \
    action(user_def) repair
icc2_lm_shell> set_attribute \
    [get_mismatch_types lib_missing_physical_reference] \
    current_repair(user_def) create_placeholder_physical_lib_cell
```

### See Also

- [Setting a Mismatch Configuration](#)
- [Reporting Mismatch Configurations](#)

---

## Setting a Mismatch Configuration

By default, the library manager uses the default mismatch configuration. To set a different mismatch configuration, use the `set_current_mismatch_config` command. You can specify one of the predefined mismatch configurations (`default` or `auto_fix`) or a user-defined mismatch configuration.

For example, to set the mismatch configuration to the predefined auto-fix configuration, use the following command:

```
icc2_lm_shell> set_current_mismatch_config auto_fix
```

To see all available mismatch configurations, use the `report_mismatch_configs -all` command.

### See Also

- [Creating a Mismatch Configuration](#)
- [Reporting Mismatch Configurations](#)

---

## Reporting Mismatch Configurations

You can report mismatch configurations by using the commands described in the following table:

Command	Report
<code>get_current_mismatch_config</code>	Reports the name of the current mismatch configuration, such as <code>default</code> or <code>auto_fix</code> .
<code>report_mismatch_configs</code>	Reports the details of the current mismatch configuration.
<code>report_mismatch_configs -all</code>	Reports all available mismatch configurations
<code>report_mismatch_configs -config_list list</code>	Restricts the report to specific mismatch configurations.

In the following example, the tool reports the details of the current mismatch configuration, including the mismatch error types and repair strategies. The report includes mismatch error

types that apply to both the library manager and the implementation tool; only the error types with a category of *library* apply to the library preparation process.

```
icc2_lm_shell> report_mismatch_configs
*****
Report : Reporting Mismatch Configs
*****

Config : default
-----
Mismatch-Type    Category    Action      Allowed Actions
                  Strategy    Available Strategies
-----
lib_missing_physical_reference
                  library    error        {repair error accept }
                  null
                  {create_placeholder_physical_lib_cell }
lib_missing_logical_port
                  library    error        {repair error accept }
                  null        {create_placeholder_logic_lib_port
}
lib_missing_physical_port
                  library    error        {repair error accept }
                  null        {create_placeholder_physical_lib_po
rt }
lib_port_type    library    accept       {accept }
                  change_lib_port_type
                  {change_lib_port_type }
lib_port_direction
                  library    accept       {accept }
                  change_lib_port_direction
                  {change_lib_port_direction }
lib_port_name_synonym
                  library    ignore       {repair accept ignore }
                  null        {record_lib_port_name_synonym }
...
lib_cell_name_case
                  library    ignore       {repair accept ignore }
                  null
                  {record_lib_cell_name_case_insensitivity }
lib_port_name_case
                  library    ignore       {repair accept ignore }
                  null        {record_lib_port_name_case_insensit
ivity }
lib_missing_rail_pg
                  library    ignore       {repair accept ignore }
                  null        {create_pg_for_rail }
...
1
```

### See Also

- [Creating a Mismatch Configuration](#)
- [Setting a Mismatch Configuration](#)

---

## Verifying Libraries

The IC Compiler II library manager provide a verification flow to validate the logical information or frame views of a library. You can use this flow to

- Compare the logical information in a logic library source file and an existing cell library, as described in [Verifying Logical Information in a Cell Library](#).
- Compare the frame views in two libraries. The libraries can be cell libraries or physical libraries, as described in [Verifying the Frame Views Between Libraries](#).

---

### Verifying Logical Information in a Cell Library

The library manager can verify that the following objects are the same in a cell library and a logic library source file:

- The library-level attributes
- The cells
- The pin information, timing arcs, and power data for each cell

To verify the logical information in a cell library,

1. Open the cell library in a verification workspace by using the `create_workspace -flow verification` command.

```
icc2_lm_shell> create_workspace -flow verification mylib.ndm
```

The cell library opened in the verification workspace is referred to as the *base library*.

2. Compare the logical information in a logic library source file to the cell library in the library workspace by using the `compare_db` command.

```
icc2_lm_shell> compare_db -process_label myprocess mylib.db
```

The logic library source file is referred to as the *comparison library*.

The `compare_db` command uses the following tests to identify the pane (logic library) in the base library to compare to the comparison library:

- An exact match between the name of the comparison library and the source file used to generate a pane in the base library

- A matching pane based on process label, process number, temperature, and voltage

To see the panes in the base library, use the `report_workspace -panes` command.

If the `compare_db` command cannot find a matching pane, the comparison fails. If it finds a matching pane, it performs the comparison and reports any differences.

3. When you have finished verifying the cell library, remove the library workspace by using the `remove_workspace` command.

---

## Verifying the Frame Views Between Libraries

The library manager can verify that the frame views are the same in two libraries by comparing the following information:

- The schema version
- The default site
- The number of frame views
- For each frame view, the design type, boundary, port information, number of terminals, terminal colors, existence of access edges, and via region contact codes

To verify the frame views,

1. Open a physical library or cell library in a verification workspace by using the `create_workspace -flow verification` command.

```
icc2_lm_shell> create_workspace -flow verification mylib1.ndm
```

The library opened in the verification workspace is referred to as the *base library*.

2. Compare the frame views in another library to the base library by using the `compare_ndm` command.

```
icc2_lm_shell> compare_ndm mylib2.ndm
```

The library opened by the `compare_ndm` command is referred to as the *comparison library*. It can be either a physical library or a cell library.

3. When you have finished verifying the cell library, remove the library workspace by using the `remove_workspace` command.

---

## Modifying a Cell Library

You can modify the technology data and physical cell data, but not functional cell data, for an existing cell library.

To modify a cell library,

1. Define the search path by setting the `search_path` variable, as described in [Defining the Search Path](#).
2. Create a library workspace for the edit flow by using the `create_workspace` command, as described in [Creating a Library Workspace](#).

For example, to modify the cell library stored in the `my_ref.ndm` directory, use the following command:

```
icc2_lm_shell> create_workspace -flow edit my_ref.ndm
```

3. Modify the cell library by performing one or more of the following tasks:
  - Load new technology data, as described in [Loading the Technology Data](#).  
To determine the consequences of loading new technology data into an existing cell library, use the `report_tech_diff` command.
  - Modify the technology data, as described in [Completing the Technology Data](#).
  - Load physical library source files into the library workspace, as described in [Loading the Physical Data](#).
  - Load a physical library or cell library into the library workspace by using the `read_ndm` command, as described in [Loading Physical Data from an Existing Library](#).

Note:

When you load a cell library into an edit workspace, only the physical information is loaded; the timing information is not used.

- Modify physical cell attributes.  
In general, you can modify physical cell attributes by using the `set_attribute` command. For examples of this technique, see [Completing the Physical Cell Information](#).
- Update the via regions, as described in [Updating Via Regions](#).
- Define antenna properties, as described in [Defining Antenna Properties on Standard Cells](#) and [Defining Antenna Properties on Hard Macro Cells](#).
- Edit the layout for one or more cells, as described in the *IC Compiler II Graphical User Interface User Guide*.



4. Validate the contents of the library workspace by using the `check_workspace` command, as described in [Validating the Workspace](#).

When you validate the library workspace, the tool checks only the modified physical data. By default, the tool generates updated frame views only for cells with modified design views. To generate a frame view for a cell whose design view is unchanged, set the `frame_update` attribute on the cell to `true` before running the `check_workspace` command.

If you want to use the same frame generation options that were used when the cell library was created, use the `write_frame_options` command to generate a Tcl script with the application option settings, and source this script before running the `check_workspace` command.

5. Commit the library workspace to disk by using the `commit_workspace` command, as described in [Committing the Workspace](#).

For example, the following script updates the technology file for an existing cell library named `existing.ndm` and regenerates the frame views for all of the design views using the same application option settings that were used to generate the cell library:

```
write_frame_options -library existing.ndm -output frame_options.tcl
create_workspace -flow edit existing.ndm
read_tech_file new_tech.tf
set_attribute [get_lib_cells */*/design] frame_update true
source frame_options.tcl
check_workspace
commit_workspace -force -output existing.ndm
```

---

## Updating Via Regions

A via region provides guidance to the router about where to drop a via to make a connection to prevent DRC violations. If your technology data changes or you need finer control of the via regions, use the following methods to update the via regions in the existing frame views:

- Remove all existing via regions and create new via regions by using the `derive_via_regions` command

For details about via region creation and the application options used to modify the default behavior, see [Creating Via Regions](#).

- Create new via regions by using the `create_via_region` command
- Remove existing via regions by using the `remove_via_regions` command

To update the via regions in the existing frame views, you must use the edit flow, as shown in the following example:

```
icc2_lm_shell> create_workspace -flow edit mylib.ndm
icc2_lm_shell> read_tech_file new.tf
icc2_lm_shell> derive_via_regions
icc2_lm_shell> check_workspace
icc2_lm_shell> commit_workspace
```

---

## Defining Antenna Properties on Standard Cells

The IC Compiler II tool uses antenna properties annotated on the frame view of the standard cells to perform antenna checking and fixing.

If the LEF file defines these antenna properties for the standard cells, they are automatically annotated on the frame view of the cells when you generate the cell library. Otherwise, you must use the edit flow to annotate these properties on the standard cells after generating the cell library.

To annotate antenna properties on a standard cell,

1. Open the cell library in edit mode as described in [Modifying a Cell Library](#).
2. Use one of the following methods to set the antenna property attributes:
  - Use the `set_attribute` command to set the attributes directly.
  - Use the `read_clf_antenna_properties` command to set the attributes by reading a Cell Library Format (CLF) file.

For information about the antenna property attributes for standard cells, see [Antenna Properties for Standard Cells](#).

3. Validate the contents of the library workspace by using the `check_workspace` command, as described in [Validating the Workspace](#).
4. Commit the library workspace to disk by using the `commit_workspace` command, as described in [Committing the Workspace](#).

## Antenna Properties for Standard Cells

A standard cell has antenna properties that define the gate and antenna areas of its input pins, diode protection value of its output pins, and whether a pin can be used as a diode. These settings are represented by attributes on the cell pins. You can set these attributes directly with the `set_attribute` command or set them by reading a CLF file with the `read_clf_antenna_properties` command.

*Table 2-10 Standard Cell Antenna Property Attributes*

Attribute	Description
<code>gate_area</code>	<p>This attribute defines the gate area of an input pin.</p> <ul style="list-style-type: none"> <li>If the library supports a single gate oxide mode, the attribute value uses the following syntax:  <code>{ {layer_name area_value} ... }</code></li> <li>If the library supports multiple gate oxide modes, the attribute value uses the following syntax:  <code>{ {oxide_mode layer_name area_value} ... }</code></li> </ul> <p><b>Note:</b>  If this attribute is not specified for a pin, the IC Compiler II tool uses the setting of the <code>route.detail.default_gate_size</code> application option.</p>
<code>antenna_area</code> <code>antenna_side_area</code>	<p>These attributes define the antenna area of an input pin. The <code>antenna_area</code> attribute defines the antenna polygon area. The <code>antenna_side_area</code> attribute defines the antenna sidewall area.</p> <p>The attribute values use the following syntax:  <code>{layer_name area_value}</code></p> <p><b>Note:</b>  If these attributes are not specified for a pin, the IC Compiler II tool uses the pin shapes to compute the antenna area.</p>
<code>diff_area</code>	<p>This attribute defines the diode protection value of an output pin.</p> <p>The attribute value uses the following syntax:  <code>{layer_name area_value}</code></p> <p><b>Note:</b>  If this attribute is not specified for a pin, the IC Compiler II tool uses the setting of the <code>route.detail.default_diode_protection</code> application option.</p>
<code>is_diode</code>	<p>This attribute specifies whether a pin is a diode that can be used by the IC Compiler II tool to fix antenna violations.</p>

---

## Defining Antenna Properties on Hard Macro Cells

The IC Compiler II tool uses antenna properties annotated on the frame view of the hard macro cells to perform antenna checking.

If you enable IC Validator antenna extraction during library validation, as described in [Automatic Antenna Property Extraction Using the IC Validator Tool](#), these properties are automatically annotated on the frame view of the cells when you generate the cell library. Otherwise, you must use the edit flow to annotate these properties on the hard macro cells after generating the cell library.

To annotate antenna properties on a hard macro,

1. Open the cell library in edit mode as described in [Modifying a Cell Library](#).
2. Use one of the following methods to set the antenna property attributes:
  - Use the `set_attribute` and `set_port_antenna_property` commands to set the attributes directly.
  - Use the `read_clf_antenna_properties` command to set the attributes by reading a Cell Library Format (CLF) file.

For information about the antenna property attributes for standard cells, see [Antenna Properties for Hard Macro Cells](#).

3. Validate the contents of the library workspace by using the `check_workspace` command, as described in [Validating the Workspace](#).
4. Commit the library workspace to disk by using the `commit_workspace` command, as described in [Committing the Workspace](#).

## Antenna Properties for Hard Macro Cells

A hard macro cell has antenna properties that define the gate area, antenna area, and antenna ratio of its input ports and the diode protection value of its output ports. You can set these attributes directly with the `set_attribute` and `set_port_antenna_property` commands or set them by reading a CLF file with the `read_clf_antenna_properties` command.

### Setting Hard Macro Antenna Properties Directly

To set the hard macro antenna properties directly,

1. Use the `set_attribute` command to set the diode protection value (`diff_area` attribute) on the hard macro output ports.

Use the following syntax to specify this attribute:

```
{ {layer_name area_value} ... }
```

For example,

```
icc2_lm_shell> set_attribute mylib/hm1/z diff_area \
  {M1 0 M2 0 M3 0 M4 0.0595}
```

2. Use the `set_port_antenna_property` command to set the gate area, antenna area, and antenna ratio properties on the hard macro input ports. This command has the following syntax:

```
set_port_antenna_property -port port -data property_settings_list
```

In the *property\_settings\_list* argument, specify the properties for one or more layers using the following syntax:

```
{ {metalLayer layer_name gate_size area_value model_area model_data
  mode2_ratio mode2_data mode3_area mode3_data mode4_area mode4_data
  mode5_ratio mode5_data mode6_area mode6_data} ... }
```

where

- *layer\_name* is the name of the metal layer in the technology file
- *area\_value* is the gate area of the port on the specified layer
- *model\_data* is the area of the specified metal layer when the connectivity is traced up to that metal layer
- *mode2\_data* is the maximum internal ratio of the area of the metal layer below the specified metal layer when the connectivity is traced up to the specified metal layer
- *mode3\_data* is the total metal area
- *mode4\_data* is the sidewall area of the specified metal layer when the connectivity is traced up to the specified metal layer
- *mode5\_data* is the maximum internal ratio of the sidewall area of the metal layer below the specified metal layer when the connectivity is traced up to the specified metal layer
- *mode6\_data* is the total metal sidewall area

The library manager also supports a simplified syntax that excludes the property names:

```
{ {layer_name area_value model_data mode2_data mode3_data
  mode4_data mode5_data mode6_data} ... }
```

For example, you can use either of the following commands to set the antenna properties on the a pin of the hm1 hard macro cell:

```
icc2_lm_shell> set_port_antenna_property -port mylib/hm1/a -data \
  { {metalLayer M1 gate_size 0.3436 model_area 6.664
    mode2_ratio 2.05346 mode3_area 12.708 mode4_area 17.5392
    mode5_ratio 7.04044 mode6_area 12.682}
    {metalLayer V1 gate_size 0.3436 model_area 6.664
    mode2_ratio 2.05346 mode3_area 12.708 mode4_area 17.5392
    mode5_ratio 7.04044 mode6_area 12.682} }
```

or

```
icc2_lm_shell> set_port_antenna_property -port mylib/hm1/a -data \
  { {M1 0.3436 6.664 2.05346 12.708 17.5392 7.04044 12.682}
    {V1 0.3436 6.664 2.05346 12.708 17.5392 7.04044 12.682} }
```

Note:

For the layer below the pin layer, set the hierarchical antenna properties to 0. Also, if the `gate_size` value for a metal layer is zero, such as for an output pin, the `mode2_ratio` and `mode5_ratio` values for that layer must be 0.

---

## Creating an Aggregate Library

An aggregate library is grouping of multiple cell libraries into a single cell library for easier maintenance and distribution.

To create an aggregate library,

1. Define the search path, as described in [Defining the Search Path](#).
2. Create a library workspace for the aggregate flow, as described in [Creating a Library Workspace](#).

When you create the library workspace, specify the aggregate library name as the workspace name. For example, to create an aggregate library named `my_agg`, use the following command:

```
icc2_lm_shell> create_workspace my_agg -flow aggregate
```

3. Load the cell libraries into the library workspace, as described in [Opening a Cell Library](#).  
All of the cell libraries in the library workspace become part of the aggregate library. To remove libraries from the workspace, use the `remove_lib` command.
4. Validate the contents of the library workspace, as described in [Validating the Workspace](#).
5. Set the search order, as described in [Setting the Search Order](#).
6. Commit the library workspace to disk, as described in [Committing the Workspace](#).

### See Also

- [Aggregate Library](#)
- [Modifying an Aggregate Library](#)

---

## Setting the Search Order

The search order specifies the order in which to search the cell libraries comprising the aggregate library when resolving a cell reference.

To specify the search order, use the `set_lib_order` command. When the IC Compiler II tool resolves a cell reference, it starts searching in the leftmost cell library in the list and uses the first matching cell it finds.

---

## Modifying an Aggregate Library

To modify an aggregate library,

1. Define the search path, as described in [Defining the Search Path](#).
2. Create a library workspace for the edit flow, as described in [Creating a Library Workspace](#).

When you create the library workspace, specify the library's root directory as the workspace name. For example, to modify the aggregate library stored in the `my_agg.ndm` directory, use the following command:

```
icc2_lm_shell> create_workspace -flow edit my_agg.ndm
```

3. Adjust the cell libraries in the library workspace.

When you create a library workspace for an existing aggregate library, its cell libraries are automatically opened in the library workspace. To see the cell libraries in the workspace, use the `get_libs` or `report_workspace` command.

To change the search order of the cell libraries, set the search order, as described in [Setting the Search Order](#).

To add cell libraries to the library workspace, open the libraries, as described in [Opening a Cell Library](#).

To remove cell libraries from the library workspace, close the libraries, as described in [Closing a Cell Library](#).

4. Validate the contents of the library workspace, as described in [Validating the Workspace](#).
5. Set the search order, as described in [Setting the Search Order](#).

6. Commit the library workspace to disk, as described in [Committing the Workspace](#).

**See Also**

- [Creating an Aggregate Library](#)

---

## Opening a Cell Library

To query or view the contents of the cell library, you must open it outside of a library workspace by using the `open_lib` command.

**Note:**

To load a cell library into a library workspace, use the `read_ndm` command, as described in [Loading Physical Data from an Existing Library](#).

For example, to open the mylib cell library, use the following command:

```
icc2_lm_shell> open_lib mylib.ndm
```

**Note:**

The `open_lib` command takes the path to the cell library rather than the library name. For libraries created with version N-2017.09 and later versions, this is the path to the library's root directory. For libraries created with earlier versions, this is the path to the library file.

Each time you run the command, you can specify only a single cell library to open; to open multiple cell libraries, you must run the command multiple times.

You can specify the cell library with an absolute path, a relative path, or no path. If you use a relative path or no path, the tool uses the search path to find the library.

**See Also**

- [Defining the Search Path](#)

---

## Getting Information About Cell Libraries

You can report information about the cell libraries and their contents. To learn about these reporting capabilities, see

- [Querying Libraries](#)
- [Reporting Libraries](#)
- [Reporting the Frame Properties](#)



- [Querying Library Objects](#)
- [Reporting Library Objects](#)

---

## Querying Libraries

To list the libraries loaded into memory, use the `get_libs` command.

```
icc2_lm_shell> get_libs
{mylib mylib_lvt mylib_hvt}
```

If you have opened an aggregate library, the `get_libs` command returns the cell libraries within the aggregate library. The cell library names are prefixed with the aggregate library name.

```
icc2_lm_shell> get_libs
{AGG1|reflib1 AGG1|reflib2}
```

You can specify a pattern to restrict the set of libraries. For example, to include only the low threshold voltage libraries, enter the following command:

```
icc2_lm_shell> get_libs *lvt
{mylib_lvt}
```

---

## Reporting Libraries

To report information about a cell library, use the `report_lib` command. You must specify the name of an open cell library as an argument. You can run this command both before and after committing the library workspace.

By default, this command provides information about the library, such as the number of cells, the power rails, the characterization points (panes), and the operating condition definitions. Use the following options to report additional information about the cell library:

- `-antenna`  
Reports the library cells that are missing antenna properties and the affected pins.
- `-parasitic_tech`  
Reports the TLUPlus files loaded into the library, if any.
- `-physical`  
Reports the physical characteristics of the cell library.  
  
The reported information includes the site definitions, the layer definitions, the source file names, the number of each type of cell view (timing, layout, design, and frame) in the library, the number of each design type in the library, details about each library cell, the

number of each type of library cell pin (ground, power, and signal) in the library, and details about the pins for each library cell.

- `-placement_constraints`

Reports missing or improper placement constraints.

Reported issues include improper site definitions and library cells that do not have any shapes on the placement layers defined in the technology file, such as implant and diffusion layers. By default, the report includes a maximum of 10 cells with violations. To report all cells with violations, use the `-verbose` option.

- `-routability`

Reports library issues that could impact the routability.

Reported issues include library cell pins that do not have either a via region or access edges, irregular cut shapes or routing blockages, frame views that are converted from IC Compiler FRAM views, improper frame generation settings, frame views with many obstructions, shorted pins, routing ports without geometry information, ports whose `is_secondary_pg` or `is_diode` attribute differs between the timing view and the frame view, and fully blocked terminals.

To report details about the cell objects, such as the number of terminals, shapes, and routing blockages, and to report both fully and partially blocked terminals, use the `-verbose` option.

- `-timing_arcs`

Reports the timing arcs for the library cells.

- `-wire_tracks`

Reports library issues related to the wire tracks.

Reported issues include cells with off-track or missing via regions and layers without a preferred direction. By default, the report includes the name and layer for each violating library cell pin, as well as the issue causing the violation. To report additional details for the violating library cell pins such as the contact code and bounding box, use the `-verbose` option.

By default, the library manager determines the wire tracks from the library being reported. If the wire track information is stored in a technology library, use the `-technology_lib` option to specify the library.

- `-wire_track_colors`

Reports library issues related to wire track coloring.

Reported issues include tracks without color information, terminals without color information, and terminals on a track with the incorrect color.

- `-min_pin_layer layer`

Reports terminals on layers lower than the specified pin layer.

[Example 2-5](#) shows an example of the default cell library report.

#### *Example 2-5 Cell Library Report*

```

icc2_lm_shell> report_lib mylib
*****
Report : library
Library: mylib
*****

Full name: /usr/libs/mylib.ndm:mylib
File name: /usr/libs/mylib.ndm
Lib type: cell
Design count: 434
Timing data:

Power rails:

Index  Name      Type
  0    <default> power
  1     V        power
  2    VL        power
  3    VSS       ground

Pane count: 2

Pane 0:
  Process label: (none)
  Process number: 1
  Voltage rail count: 3
  Voltage for rail 0 (<default>): 1.08
  Voltage for rail 1 (V): 1.08
  Voltage for rail 2 (VL): 1.08
  Temperature: 125

  Thresholds:
    r/f InputDelay: 0.5/0.5  r/f OutputDelay: 0.5/0.5
    l/h RiseTrans:  0.1/0.9  h/l FallTrans:   0.9/0.1
    TransDerate:    1

  Source .db file:
    /usr/libs//DB/mylib_125c.db
Pane 1:
...

Source .db libraries:
  mylib_125c.db:mylib_125c
  mylib_40c.db:mylib_40c

```

Operating Conditions:

Name	Process	Temp	Voltage	Original DB Name
WORST	1.00	125.00	1.08	mylib_max_hth
BEST	1.00	-40.00	1.32	mylib_min

1

---

## Reporting the Frame Properties

The library manager extracts frame views of the library cells when you run the `check_workspace` command.

To report the frame view properties for one or more library cells, use the `report_frame_properties` command. You can run this command only after committing the library workspace. You must use the `-library` option to specify the name of an open cell library and the `-output` option to specify the name of the output file.

```
icc2_lm_shell> open_lib mylib
icc2_lm_shell> report_frame_properties -library [current_lib] \
    -output frame.txt
```

By default, the command reports the frame view properties for all cells in the cell library. To report the frame view properties for a specific cell, use the `-block` option to specify the cell name. Note that when you use this option, you must explicitly specify the frame view of the cell.

[Example 2-6](#) shows an example frame properties report, which was generated by the following command:

```
icc2_lm_shell> report_frame_properties -library [current_lib] \
    -output frame.txt -block mylib/AND2/frame
```

**Example 2-6 Frame Properties Report**

```

*****
Report : frame properties
Library: mylib

*****
*****
Design : AND2
*****
Total number of row: 1.

**** implant_width property ****
      No implant width property on this block.

**** diffusion_width_height property ****
      No diffusion width height property on this block.

**** source_drain annotation ****
      No source/drain annotation on this block.

```

**See Also**

- [Frame View Generation Application Options](#)

---

## Querying Library Objects

You can query the library cells and library cell pins both before and after committing the library workspace.

- To determine the library cells available in a library, use the `get_lib_cells` command.

If you run the command without any arguments, it returns all the timing views in the current library. If the library does not contain any cells with timing views, the command returns the frame views, if they exist; otherwise, it returns the design views.

If you specify the library cells, use the following format:

*library\_name/cell\_name[/view]*

You must specify both the library name and the cell name. You can specify a pattern, including wildcards for the library name and cell name. If you specify the view, it must be one of the following keywords: `design`, `frame`, `layout`, or `timing`.

For example, to return all the frame views in the mylib cell library, use the following command:

```

icc2_lm_shell> get_lib_cells mylib/*/frame
{mylib/AND2/frame mylib/AND4/frame mylib/AO21/frame ...}

```

- To determine the pins on a library cell, use the `get_lib_pins` command.

If you run the command without any arguments, it returns all the library cell pins in the current library. If you specify the library cells, use the following format:

*library\_name/cell\_name/pin\_name*

You must specify the library name, the cell name, and the pin name. You can specify a pattern, including wildcards for the library name, cell name, and pin name.

For example, to return all the pins of the AND2 cell in the mylib cell library, use the following command:

```
icc2_lm_shell> get_lib_pins mylib/AND2/*  
{mylib/AND2/IN1 mylib/AND2/IN2 mylib/AND2/OUT}
```

**Note:**

To reduce runtime when you load physical library source files in the physical-only flow, the tool loads only the cell names, and not detailed information for the cells. The tool loads the detailed information during workspace validation. This means that after loading the physical library source files, you can query the library cell names, but you cannot query other information such as pins, attributes, and shapes until after workspace validation.

If you need to examine the cells in detail before workspace validation, load the physical library source files in the normal flow.

**See Also**

- [Validating the Workspace](#)

---

## Reporting Library Objects

You can report information about the library cells, library cell pins, and library timing arcs. You can generate the library cell and library cell pin reports both before and after committing the library workspace. You can generate the library timing arc report only after committing the library workspace.

- To report information about one or more library cells, use the `report_lib_cells` command. You must use the `-objects` option to specify the library cells.

Use the following format to specify the library cells: *library\_name/cell\_name*. You must specify both the library name and the cell name. You can specify a pattern, including wildcards for the library name and cell name.

By default, the report includes the full name, area, pin count, and design type for the specified cells, as well as whether the cell is sequential.

For example, to report on the AND2 cell in the mylib cell library, use the following command:

```
icc2_lm_shell> report_lib_cells -objects mylib/AND2
*****
Report : lib_cell
*****
```

full_name	area	pin_count	is_sequential	design_type
mylib/AND2	11.0005	3	false	lib_cell

1

You can customize the report by using the `-columns` option to specify the information to report. The following column names are valid for this report: `area`, `design_type`, `dont_touch`, `full_name`, `is_combinational`, `is_isolation`, `is_level_shifter`, `is_memory_cell`, `is_sequential`, `is_three_state`, `name`, `pad_cell`, `pin_count`, `valid_purposes`, and `view_name`. To display all of the available information, specify `-columns all`.

- To report information about one or more library cell pins, use the `report_lib_pins` command. You must use the `-objects` option to specify the library cell pins.

Use the following format to specify the library cell pins: *library\_name/cell\_name/pin\_name*. You must specify the library name, the cell name, and the pin name. You can specify a pattern, including wildcards for the library name, cell name, and pin name.

By default, the report includes the full name and direction for the specified pins.

For example, to report on all the pins of the AND2 cell in the mylib cell library, use the following command:

```
icc2_lm_shell> report_lib_pins -objects mylib/AND2/*
*****
Report : lib_pin
*****
```

full_name	direction
mylib/AND2/IN1	in
mylib/AND2/IN2	in
mylib/AND2/OUT	out

1

You can customize the report by using the `-columns` option to specify the information to report. The following column names are valid for this report: `direction`, `disable_timing`, `full_name`, `function`, `is_async_pin`, `is_clock_pin`, `is_data_pin`, `is_pad`, `is_preset_pin`, `is_three_state`, `is_three_state_enable_pin`, `is_three_state_output_pin`, `name`, `pin_number`, `port_type`, `rail_name`, `signal_type`, and `three_state_function`. To display all of the available information, specify `-columns all`.

- To report information about one or more timing arcs, use the `report_lib_timing_arcs` command. You must use the `-objects` option to specify the library timing arcs.

The easiest way to specify the timing arcs is to use the `get_lib_timing_arcs` command and use the `-of_objects` option to specify the library cell for which you want to report the timing arcs.

By default, the report includes the from pin, to pin, sense, when condition, and SDF condition for the specified timing arcs.

For example, to report on all the timing arcs of the AND4 cell in the mylib cell library, use the following command:

```
icc2_lm_shell> report_lib_timing_arcs \
  -objects [get_lib_timing_arcs -of_objects mylib/AND2]
*****
Report : lib_timing_arc
*****
```

from	to	sense	when	sdf_cond	is_disabled
A1	Y	positive_unate			false
A2	Y	positive_unate			false
A1	Y	positive_unate			false
A2	Y	positive_unate			false
1					

You can customize the report by using the `-columns` option to specify the information to report. The following column names are valid for this report: `from`, `from_lib_pin`, `is_disabled`, `is_user_disabled`, `sdf_cond`, `sense`, `to`, `to_lib_pin`, and `when`. To display all of the available information, specify `-columns all`.

---

## Exporting Cell Library Content

You can export cell library content to several formats for use with other tools. [Table 2-11](#) lists the supported formats and the command used to generate the output files.

*Table 2-11 Cell Library Export Formats*

Format	Command
Technology file	<code>write_tech_file</code>
Antenna properties in Cell Library Format (CLF)	<code>write_clf_antenna_properties</code>
LEF	<code>write_lef</code>



Table 2-11 Cell Library Export Formats (Continued)

Format	Command
GDSII	<code>write_gds</code>
OASIS	<code>write_oasis</code>
Design Compiler Graphical reference library	<code>export_dc_fram</code>

---

## Closing a Cell Library

To close a cell library that was opened outside of a library workspace, use the `close_lib` command. This command decrements the open count of the library and removes it from memory when no copies of the library remain open.

Note:

To remove a cell library from a library workspace, use the `remove_lib` command.

By default, the `close_lib` command closes the current library. To close a specific library, specify the library name. To close all libraries, use the `-all` option.

For example, to close the current library, use the following command:

```
icc2_lm_shell> close_lib
```

To close the mylib cell library, use the following command:

```
icc2_lm_shell> close_lib mylib
```

To close all cell libraries, use the following command:

```
icc2_lm_shell> close_lib -all
```



# A

## Library Manager Application Options

---

To learn about the application options you can use to control the behavior of the IC Compiler II library manager, see the following topics:

- [Library Manager Application Options](#)
- [LEF Input Application Options](#)
- [GDSII and OASIS Input Application Options](#)
- [Timing View Generation Application Options](#)
- [Frame View Generation Application Options](#)
- [Antenna Extraction Application Options](#)
- [Command-Line Interface Application Options](#)
- [Graphical User Interface Application Options](#)

## Library Manager Application Options

The library manager (`lib.workspace`) application options control various aspects of the cell library creation process. [Table A-1](#) describes the `lib.workspace` application options. If the application option has a data type of Boolean or enumerated string, the valid values are listed, with the default listed first and shown in purple; otherwise, the data type is specified along with the default.

*Table A-1 lib.workspace Application Options*

Application option	Valid values or data type	Description
<code>lib.workspace.allow_commit_workspace_overwrite</code>	<code>false</code>   <code>true</code>	Controls whether the <code>commit_workspace</code> command overwrites an existing cell library ( <code>true</code> ) or issues an error message if the library already exists ( <code>false</code> ).
<code>lib.workspace.allow_missing_related_pg_pins</code>	<code>true</code>   <code>false</code>	Controls whether the <code>check_workspace</code> command requires signal pins to have at least one related power or ground pin.
<code>lib.workspace.create_workspace_tf_verbose</code>	<code>true</code>   <code>false</code>	When <code>true</code> , the <code>create_workspace -technology</code> command outputs detailed information when reading the technology file.
<code>lib.workspace.enable_secondary_pg_marking</code>	<code>true</code>   <code>false</code>	Controls whether secondary power and ground pins are annotated on the frame view.
<code>lib.workspace.exclude_design_filters</code>	list (default = "")	Specifies one or more patterns to match designs to exclude when loading logic or physical libraries.  This option works with the <code>lib.workspace.include_design_filters</code> application option to determine the set of designs to read.  For more information, see <a href="#">Specifying Which Blocks to Process</a> .

Table A-1 *lib.workspace Application Options (Continued)*

Application option	Valid values or data type	Description
<code>lib.workspace.explore_create_aggregate</code>	<code>false</code>   <code>true</code>	<p>Controls the behavior of the <code>write_workspace</code> and <code>commit_workspace</code> commands when the exploration flow creates multiple workspaces.</p> <p>To create an aggregate library, set this application option to <code>true</code>.</p>
<code>lib.workspace.fast_exploration</code>	<code>false</code>   <code>true</code>	<p>Controls whether the fast exploration flow is enabled.</p> <p>For more information, see <a href="#">Using the Exploration Flow</a>.</p>
<code>lib.workspace.group_libs_fix_cell_shadowing</code>	<code>true</code>   <code>false</code>	<p>Controls whether the <code>group_libs</code> command modifies the grouping strategy to prevent cell shadowing issues across subworkspaces.</p> <p>Cell shadowing occurs when a library cell with the same name exists in multiple cell libraries. In this case, the tool uses the data from the first cell library in which it finds the cell, and it ignores that cell's data in all other cell libraries, which can result in missing data for the cell.</p>
<code>lib.workspace.group_libs_macro_grouping_strategy</code>	<code>aggregate_single_cell</code>   <code>single_cell_per_lib</code>	<p>Controls the macro grouping strategy used for the subworkspaces created by the <code>group_libs</code> command.</p> <p>For more information, see <a href="#">Performing Automated Library Analysis</a>.</p>

Table A-1 *lib.workspace Application Options (Continued)*

Application option	Valid values or data type	Description
<code>lib.workspace.group_libs_naming_strategies</code>	list (default = "")	<p>Controls the naming strategy used for the subworkspaces created by the <code>group_libs</code> command.</p> <p>By default, the tool creates the subworkspace names by using a unique combination of logic library prefix and suffix characters.</p> <p>For more information, see <a href="#">Performing Automated Library Analysis</a>.</p>
<code>lib.workspace.group_libs_physical_only_name</code>	string (default = "")	<p>Specifies the name of the physical-only library group created by the <code>group_libs</code> command.</p> <p>If this application option has a value of "", the command names the physical-only subworkspace <code>&lt;root_workspace&gt;_physical_only</code>.</p> <p>For more information, see <a href="#">Performing Automated Library Analysis</a>.</p>
<code>lib.workspace.include_design_filters</code>	list (default = "")	<p>Specifies one or more patterns to match designs to include when loading logic or physical libraries.</p> <p>When you set this option, only the specified designs are read.</p> <p>This option works with the <code>lib.workspace.exclude_design_filters</code> application option to determine the set of designs to read.</p> <p>For more information, see <a href="#">Specifying Which Blocks to Process</a>.</p>
<code>lib.workspace.library_developer_mode</code>	<code>false</code>   <code>true</code>	<p>Controls whether the technology file checker works in user mode (the default) or developer mode.</p>

Table A-1 *lib.workspace* Application Options (Continued)

Application option	Valid values or data type	Description
<code>lib.workspace.remove_frame_bus_properties</code>	<code>false</code>   <code>true</code>	Controls whether the <code>check_workspace</code> command removes bus properties that exist in the frame view but not in the timing view.
<code>lib.workspace.save_design_views</code>	<code>false</code>   <code>true</code>	Controls whether the <code>commit_workspace</code> command saves the design views in the cell library.
<code>lib.workspace.save_layout_views</code>	<code>false</code>   <code>true</code>	Controls whether the <code>commit_workspace</code> command saves the layout views in the cell library.

---

## LEF Input Application Options

The LEF input (`file.lef`) application options control the behavior of the `read_lef` command. [Table A-2](#) describes the `file.lef` application options. If the application option has a data type of Boolean or enumerated string, the valid values are listed, with the default shown in purple; otherwise, the data type is specified along with the default.

*Table A-2 file.lef Application Options*

Application option	Valid values or data type	Description
<code>file.lef.allow_empty_pin</code>	<code>false</code>   <code>true</code>	Controls whether the <code>read_lef</code> command allows a PIN statement that does not have an associated PORT.
<code>file.lef.auto_rename_conflict_sites</code>	<code>false</code>   <code>true</code>	Controls whether the <code>read_lef</code> command automatically renames conflicting site names.  For more information about this application option, see <a href="#">Reading LEF Files</a> .
<code>file.lef.non_real_cut_obs_mode</code>	<code>true</code>   <code>false</code>	Controls whether to use zero minimum spacing for non-real cut obstructions.

---



## GDSII and OASIS Input Application Options

The `read_gds` and `read_oasis` commands support similar application options to control their behavior. [Table A-3](#) describes these application options; replace *format* in the application option names with `gds` for the `read_gds` command and `oasis` for the `read_oasis` command. These application options also affect the `trace_connectivity` commands.

In the following table, if the application option has a data type of Boolean or enumerated string, the valid values are listed, with the default shown in purple; otherwise, the data type is specified along with the default.

**Table A-3** *file.gds* Application Options

Application option	Valid values or data type	Description
<code>file.format.create_custom_via</code>	<code>false</code>   <code>true</code>	Controls whether the commands create custom vias from the cut shapes in the library source file.
<code>file.format.exclude_layers</code>	list (default = <code>""</code> )	Specifies the rules for mapping between the input layers and the layers that are used to exclude geometries from the specified input layers.
<code>file.format.port_type_map</code>	list (default = <code>""</code> )	Identifies the power and ground pins by mapping the pin name to its type. The mapping applies to all cells in the library source file.  For more information about this application option, see <a href="#">Reading GDSII or OASIS Files</a> .

Table A-3 *file.gds Application Options (Continued)*

Application option	Valid values or data type	Description
<code>file.format.text_layer_map</code>	list (default = "")	Maps the text layers to the metal layers so that the tool can associate metal shapes with a net or pin when the text is not on the same layer as the metal shapes.  For more information about this application option, see <a href="#">Mapping Text Layers</a> .
<code>file.format.trace_copy_overlap_shape_from_sub_cell</code>	false   true	Controls whether the commands duplicate a shape in a subblock to the top-level block when the shape is overlapped by terminals.
<code>file.format.trace_terminal_length</code>	integer (default = 0)	Controls whether the commands split long pins on the block boundary into a terminal and a net shape.  By default (0), the commands do not split long pins.  When set to a positive integer, the commands split pins that are longer than the specified value. After splitting, the new terminal is the specified length; the rest of the pin is converted to a net shape.
<code>file.format.trace_terminal_type</code>	default   pg   signal	Specifies the types of long pins that are considered for splitting.  By default, both PG and signal pins are considered.
<code>file.format.trace_unmapped_text</code>	false   true	Controls whether the commands trace all routing layers for text that is not mapped to any routing layer.
<code>file.format.use_only_mapped_text</code>	false   true	Controls whether the commands use only the text specified by the <code>file.format.text_layer_map</code> when tracing ports.

## Timing View Generation Application Options

The timing view generation (`lib.logic_model`) application options control the timing view generation, which is performed by the `check_workspace` command. [Table A-4](#) describes the `lib.logic_model` application options. If the application option has a data type of Boolean or enumerated string, the valid values are listed, with the default shown in purple; otherwise, the data type is specified along with the default.

*Table A-4 lib.logic\_model Application Options*

Application option	Valid values or data type	Description
<code>lib.logic_model.auto_remove_incompatible_timing_designs</code>	<code>false</code>   <code>true</code>	Controls whether the <code>check_workspace</code> command automatically removes cells from the cell library that have a mismatch between the base library and additional logic libraries.
<code>lib.logic_model.auto_remove_timing_only_designs</code>	<code>false</code>   <code>true</code>	Controls whether the <code>check_workspace</code> command automatically removes cells from the cell library that do not exist in the physical library.
<code>lib.logic_model.preserve_nldm_pin_caps</code>	<code>false</code>   <code>true</code>	Controls whether the composite current source (CCS) <code>reciever_capacitance</code> data overwrites the native nonlinear delay model (NLDM) pin capacitance when reading the logic libraries.
<code>lib.logic_model.relax_pin_equal_opposite_attr_check</code>	<code>false</code>   <code>true</code>	Controls whether the <code>check_workspace</code> command requires that the <code>pin_equal</code> and <code>pin_opposite</code> attributes on a cell must match between the base library and additional logic libraries.
<code>lib.logic_model.require_same_opt_attrs</code>	<code>false</code>   <code>true</code>	Controls whether the <code>check_workspace</code> command requires that the optimization attributes on a cell must match between the base library and additional logic libraries.

Table A-4 *lib.logic\_model Application Options (Continued)*

Application option	Valid values or data type	Description
<code>lib.logic_model.resolve_voltage_range_differences</code>	<code>use_base_library</code>   <code>require_same</code>	Specifies how to handle voltage range differences across the logic libraries.
<code>lib.logic_model.use_db_rail_names</code>	<code>true</code>   <code>false</code>	When <code>true</code> , the <code>commit_workspace</code> command uses the voltage rail names from the logic libraries; otherwise, it generates the names.

## Frame View Generation Application Options

The frame view generation (`lib.physical_model`) application options control the frame view generation, which is performed by the `check_workspace` command. [Table A-5](#) describes the `lib.physical_model` application options. If the application option has a data type of Boolean or enumerated string, the valid values are listed, with the default shown in purple; otherwise, the data type is specified along with the default.

*Table A-5 lib.physical\_model Application Options*

Application option	Valid values or data type	Description
<code>lib.physical_model.block_all</code>	<code>auto</code>   <code>false</code>   <code>true</code>   <code>used_layers</code>   <code>top_layer</code>	Controls whether the entire cell, except for the area around the pins, is treated as a blockage in the frame view.  If you specify the <code>top_layer</code> argument, the tool creates a zero-spacing blockage on the specified layer and all layers below it; otherwise, the setting applies to all layers.
<code>lib.physical_model.block_core_margin</code>	list of layer-float pairs (default = "")	Specifies the margin between the core blockage and the macro cell boundary for each layer in the frame view.  If you specify this option for a layer, the tool creates a core blockage with the specified margin regardless of the setting of the <code>lib.physical_model.block_all</code> application option.
<code>lib.physical_model.color_based_dpt_flow</code>	<code>auto</code>   <code>true</code>   <code>false</code>	Controls whether frame generation uses the color-based flow.  By default ( <code>auto</code> ), frame generation uses the color-based flow when the technology file contains double-patterning rules.
<code>lib.physical_model.connect_within_pin</code>	<code>true</code>   <code>false</code>	Controls whether the via enclosure must be within the pin shape. when dropping a via on the via region.

Table A-5 *lib.physical\_model* Application Options (Continued)

Application option	Valid values or data type	Description
<code>lib.physical_model.convert_metal_blockage_to_zero_spacing</code>	list of layer-distance-mode triplets (default = "")	<p>Converts metal blockages in the design views to zero-spacing routing blockages in the for the specified layers. When creating the zero-spacing routing blockage, the tool increases the size of the metal blockage by the distance specified for that layer.</p> <p>By default, the specified distance applies to all metal blockages. To specify different distances based on whether the blockage touches a pin, specify the optional <i>mode</i> argument as either <code>touch_pin</code> or <code>no_touch_pin</code>.</p>
<code>lib.physical_model.create_frame_for_subblocks</code>	<code>false</code>   <code>true</code>	Controls whether frame view generation creates a frame view only for the top-level block (the default) or for the top-level block and the subblocks.
<code>lib.physical_model.create_zero_spacing_blockages_around_pins</code>	list of layer-width pairs (default = "")	<p>Specifies the width of the zero-spacing routing blockages created around the pins for each layer in the frame view.</p> <p>By default, frame view generation does not create zero-spacing routing blockages around the pins.</p>
<code>lib.physical_model.derive_pattern_must_join</code>	<code>false</code>   <code>true</code>   <code>exclude_pg</code>	Controls whether frame view generation sets the <code>pattern_must_join</code> attribute on ports that have more than one terminal on a metal layer.
<code>lib.physical_model.design_rule_via_blockage_layers</code>	list of via layers (default = "")	Converts zero-spacing routing blockages on the via layers of the frame view to design rule routing blockages.

Table A-5 *lib.physical\_model Application Options (Continued)*

Application option	Valid values or data type	Description
<code>lib.physical_model.drc_distances</code>	list of layer-distance pairs (default = "")	Specifies the distance from the boundary of blockages within with to preserve detailed shapes.  By default, the tool uses information in the Layer section of the technology file to determine this value for each layer. The value is computed by adding the maximum spacing value to the maximum width threshold from the fat spacing table.
<code>lib.physical_model.enable_via_regions_for_all_design_types</code>	<code>false</code>   <code>true</code>	Controls whether frame view generation creates via regions for all design types.  By default, frame view generation creates via regions only for standard cells.
<code>lib.physical_model.hierarchical</code>	<code>true</code>   <code>false</code>	Controls whether the tool extracts pins, vias, and blockages hierarchically when creating the frame view.
<code>lib.physical_model.include_nondefault_via</code>	list (default = "")	Specifies the nondefault vias to include for via region extraction.
<code>lib.physical_model.include_routing_pg_ports</code>	list (default = "")	Specifies the PG ports that require via regions and access edges in the frame view.
<code>lib.physical_model.keepout_spacing_for_non_pin_shapes</code>	list of layer-spacings pairs (default = "")	Defines how to create the zero-spacing routing blockages for the non-pin shapes on each affected layer.
<code>lib.physical_model.merge_metal_blockage</code>	<code>false</code>   <code>true</code>	Controls whether metal blockages are merged if they are too close, based on the minimum width and minimum spacing for the layer.

Table A-5 *lib.physical\_model* Application Options (Continued)

Application option	Valid values or data type	Description
<code>lib.physical_model.pin_channel_distances</code>	list of layer-distance pairs (default = "")	Controls the channel distance for each pin layer. If a pin is within the channel distance of the block boundary, the tool cuts a channel for the pin when generating the frame view.
<code>lib.physical_model.pin_must_connect_area_layers</code>	list of layer-spare layer pairs (default = "")	Specifies the spare layer associated with each pin layer. The spare layer defines the must-area within the pin geometry.  Use this option to restrict the via landing area on complex-shaped pins.
<code>lib.physical_model.pin_must_connect_area_thresholds</code>	list of layer-threshold pairs (default = "")	Specifies the width threshold used to determine the must-connect area within the pin geometry for each connection layer.  Use this option to restrict the via landing area on finger-shaped pins.
<code>lib.physical_model.port_contact_selections</code>	string (default = "")	Specifies custom contact codes for specific ports for via region generation.
<code>lib.physical_model.preserve_metal_blockage</code>	<code>auto</code>   <code>true</code>   <code>false</code>	Controls whether metal blockages are trimmed when creating the frame view.  By default, metal blockages are preserved (not trimmed) for the following types of cells: library cells, diode cells, end cap cells, fill cells, filler cells, physical-only cells, and well-tap cells.  For all other types of cells, the tool trims metal blockages that touch a pin.



Table A-5 *lib.physical\_model* Application Options (Continued)

Application option	Valid values or data type	Description
<code>lib.physical_model.remove_non_pin_shapes</code>	list of layer-mode pairs (default = "")	<p>Specifies whether to remove non-pin shapes when generating the frame view. Valid values for the mode are</p> <ul style="list-style-type: none"> <li><code>none</code> (the default) Frame generation does not remove non-pin shapes.</li> <li><code>all</code> Frame generation removes all non-pin shapes on the specified layer.</li> <li><code>core</code> Frame generation removes all non-pin shapes that are completely within the core on the specified layer. The core is determined by shrinking the block boundary by the DRC distance.</li> </ul> <p>Removing non-pin shapes reduces the number of blockages in the frame view. However, to ensure that the removal of the non-pin shapes from the frame view does not cause routing DRC violations, you should create a core blockage by using the <code>lib.physical_model.block_all</code> or <code>lib.physical_model.block_core_margin</code> application option.</p>
<code>lib.physical_model.source_drain_annotation</code>	string (default = "")	Specifies the name of the input file containing the source-drain annotation information for the cells in the library workspace.

Table A-5 *lib.physical\_model* Application Options (Continued)

Application option	Valid values or data type	Description
<code>lib.physical_model.trim_metal_blockage_around_pin</code>	list of layer-method pairs (default = "")	<p>Specifies how to trim metal blockages around pins for each layer. Valid values for the method are touch, all, and none.</p> <p>If you specify this option for a layer, the tool uses the specified method to trim the metal blockages for that layer regardless of the setting of the <code>lib.physical_model.preserve_metal_blockage</code> application option.</p>

## Antenna Extraction Application Options

The antenna extraction (`signoff.antenna`) application options control the IC Validator antenna extraction that occurs during frame view generation by the `check_workspace` command. Table A-6 describes the `signoff.antenna` application options. If the application option has a data type of Boolean or enumerated string, the valid values are listed, with the default shown in purple; otherwise, the data type is specified along with the default.

Table A-6 *signoff.antenna* Application Options

Application option	Valid values or data type	Description
<code>signoff.antenna.contact_layer</code>	list (default = "")	Specifies the contact layers (contact layers are the layers that connect polysilicon to metal1). Specify the layers by using the layer names from the technology file.
<code>signoff.antenna.contact_layers_between_m0_diffusion</code>	list (default = "")	Specifies the contact layers (contact layers are the layers that connect metal0 to diffusion). Specify the layers by using the layer names from the technology file.
<code>signoff.antenna.custom_runset_file</code>	string (default = "")	Specifies the custom runset file for advanced gate layers.
<code>signoff.antenna.diffusion_layer</code>	list (default = "")	Specifies the diffusion layers. Specify the layers by using the layer names from the technology file.
<code>signoff.antenna.enabled</code>	false   true	Controls whether the <code>check_workspace</code> command performs antenna extraction during frame view generation.
<code>signoff.antenna.exclude_non_mask_layers</code>	false   true	Controls whether nonmask layers are excluded from the antenna extraction flow.
<code>signoff.antenna.extract_via_antenna_property</code>	false   true	Controls whether antenna properties are extracted for via layers.

Table A-6 *signoff.antenna Application Options (Continued)*

Application option	Valid values or data type	Description
<code>signoff.antenna.gate_class1_layers</code>	list (default = "")	Specifies the marking layers for gate thickness class 1. Specify the layers by using the layer names from the technology file.
<code>signoff.antenna.gate_class2_layers</code>	list (default = "")	Specifies the marking layers for gate thickness class 2. Specify the layers by using the layer names from the technology file.
<code>signoff.antenna.gate_class3_layers</code>	list (default = "")	Specifies the marking layers for gate thickness class 3. Specify the layers by using the layer names from the technology file.
<code>signoff.antenna.hierarchical_gate_class_include_file</code>	string (default = "")	Specifies the gate class include file for advanced gate class marker layers.
<code>signoff.antenna.m0_layers_for_diffusion_connection</code>	string (default = "")	Specifies the m0 layers for diffusion connection. Specify the layers by using the layer names from the technology file.
<code>signoff.antenna.m0_layers_for_poly_connection</code>	string (default = "")	Specifies the m0 layers for poly connection. Specify the layers by using the layer names from the technology file.
<code>signoff.antenna.max_gate_class_name</code>	string (default = "")	Specifies the maximum gate class name when the gate class layers are passed through a custom runset.
<code>signoff.antenna.poly_layer</code>	list (default = "")	Specifies the polysilicon layers. Specify the layers by using the layer names from the technology file.
<code>signoff.antenna.report_diodes</code>	false   true	Controls whether the tool reports the location of generated protection diodes.

Table A-6 *signoff.antenna Application Options (Continued)*

Application option	Valid values or data type	Description
<code>signoff.antenna.top_cell_pin_only</code>	<code>false</code>   <code>true</code>	Controls whether the tool extracts hierarchical antenna properties only for nets that connect to pins in the top-level of the hard macro.
<code>signoff.antenna.treat_source_drain_as_diodes</code>	<code>false</code>   <code>true</code>	Controls whether the tool treats the MOS source and drain as protection diodes and considers any MOS source and drain regions that are connected to a net to be a part of the diode protection area available to that net.
<code>signoff.antenna.user_defined_options</code>	list (default = "")	Specifies additional options for the IC Validator command line.  The string that you specify in this option is added to the command line used to invoke antenna extraction in the IC Validator tool. The library manager does not perform any checking on the specified string.
<code>signoff.antenna.v0_layers_between_m1_m0</code>	list (default = "")	Specifies the v0 layers (v0 layers are the layers that connect metal1 to metal0). Specify the layers by using the layer names from the technology file.

## Command-Line Interface Application Options

The `shell` application options control various aspects of the library manager command-line interface. [Table A-7](#) describes the `shell` application options. If the application option has a data type of Boolean or enumerated string, the valid values are listed, with the default shown in purple; otherwise, the data type is specified along with the default.

*Table A-7 shell Application Options*

Application option	Valid values or data type	Description
<code>shell.common.collection_result_display_limit</code>	integer (default = 100)	Specifies the maximum number of results displayed when the return value is a collection.
<code>shell.common.enable_line_editing</code>	<code>true</code>   <code>false</code>	Controls whether line editing mode is enabled.
<code>shell.common.line_editing_mode</code>	<code>emacs</code>   <code>vi</code>	Specifies the line editing mode.
<code>shell.common.man_path</code>	string	Specifies the search path for the man pages.
<code>shell.common.report_default_significant_digits</code>	integer default = 2)	Specifies the default number of significant digits used to display values in reports.
<code>shell.common.single_line_messages</code>	<code>false</code>   <code>true</code>	When set to <code>true</code> , error, warning, and information messages that contain newlines are output without newlines.
<code>shell.common.tmp_dir_path</code>	string (default = /tmp)	Specifies the directory that the tool uses for temporary storage.

## Graphical User Interface Application Options

The `gui` application options control various aspects of the library manager GUI. [Table A-8](#) describes the `gui` application options. If the application option has a data type of Boolean or enumerated string, the valid values are listed, with the default shown in purple; otherwise, the data type is specified along with the default.

*Table A-8* `gui` Application Options

Application option	Valid values or data type	Description
<code>gui.auto_open_layout_windows</code>	<code>true</code>   <code>false</code>	Controls whether the GUI automatically creates a block window when the current design changes.
<code>gui.command_form_close_dialog_after_run_or_script</code>	<code>false</code>   <code>true</code>	Controls whether a shell command form invoked from a command search closes itself after the command is successfully executed or scripted.
<code>gui.command_form_log_options_with_default_values</code>	<code>false</code>   <code>true</code>	Controls whether a shell command form invoked from command search appends optional command options with default values to the command string for execution and logging.
<code>gui.command_form_show_result_dialog_after_run</code>	<code>false</code>   <code>true</code>	Controls whether a shell command form invoked from a command search displays the results from the command execution in a dialog box.
<code>gui.command_form_use_object_names_for_proc_options</code>	<code>false</code>   <code>true</code>	Controls the value format for Tcl procedure options declared as design objects.
<code>gui.custom_setup_files</code>	string (default = "")	Specifies the files to source when invoking the GUI. These files are sourced in addition to the standard setup files.
<code>gui.enable_custom_setup_files</code>	<code>false</code>   <code>true</code>	Controls whether the tool sources the custom setup files specified in the <code>gui.custom_setup_files</code> application option.
<code>gui.file_editor_command</code>	string (default = "")	Controls the command used to edit a file.

Table A-8 *gui Application Options (Continued)*

Application option	Valid values or data type	Description
<code>gui.graphics_system</code>	string (default = <code>auto</code> )	Controls the graphics system used by the GUI.
<code>gui.layer_solid_fill_pattern</code>	string (default = <code>Dense4Pattern</code> )	Controls default display of solid filled layers. To see the valid values for this application option, use the <code>get_app_option_value -details -name gui.layer_solid_fill_pattern</code> command.
<code>gui.max_cores</code>	integer (default = 0)	Specifies the maximum number of CPU cores used by the GUI.
<code>gui.name_based_hier_delimiter</code>	string (default = <code>/</code> )	Specifies the hierarchy delimiter used by the name-based hierarchy browser.
<code>gui.url_browser_command</code>	string (default = <code>""</code> )	Specifies the command used to display a URL in a web browser.



# B

## Working With the Library Manager GUI

---

The library manager GUI provides a variety of tools for viewing and editing the cells in your library. The following topics provide an overview of these tools:

- [Starting the Tool in the GUI](#)
- [Opening the GUI](#)
- [Closing the GUI](#)
- [Exiting the Tool From the GUI](#)
- [Using the Library Preparation Wizard](#)
- [Working in the Main Window](#)
- [Using the Message Browser Window](#)

---

## Starting the Tool in the GUI

To start the IC Compiler II Library Manager tool in the GUI,

1. Set the `DISPLAY` environment variable to the name of your Linux system display.
2. Include the path to the bin directory in your `$PATH` variable.
3. Enter the `icc2_lm_shell` command with the `-gui` option in a Linux shell.

```
% icc2_lm_shell -gui
```

You can include other options when you start the GUI. For example,

- `-f script_file_name` to execute a script
- `-x command` to execute an `icc2_lm_shell` command

When you start the library manager in the GUI, it

1. Runs the commands in the `.synopsys_icc2_lm.setup` and `.synopsys_icc2_lm_gui/setup.tcl` setup files

The tool first runs the setup files in your home directory followed by the files in the project directory (the current working directory in which you start the tool).

2. Runs the command specified by the `-x` option or the script specified by the `-f` option.
3. Opens a main window that displays the library preparation wizard

By default, the console appears attached (docked) to the main window above the status bar.

### See Also

- [Starting the Command-Line Interface](#)

---

## Opening the GUI

If you start `icc2_lm_shell` without the GUI, you can open the GUI at any time by entering the `gui_start` command at the `icc2_lm_shell>` prompt.

```
icc2_lm_shell> gui_start
```

If you want to execute a script before opening the GUI, use the `-file` option. For example,

```
icc2_lm_shell> gui_start -file my_gui_setup.tcl
```

### Note:

The GUI uses the `DISPLAY` environment variable to determine the display location.

Before opening the GUI, ensure that this variable is set to the name of your Linux system display.

When you open the library manager GUI, it

1. Runs the commands in the `.synopsys_icc2_lm_gui/setup.tcl` setup files

The tool first runs the setup files in your home directory followed by the files in the project directory (the current working directory in which you start the tool).

2. Runs the script specified by the `-file` option.

3. Opens a main window

- If a library workspace or cell library is open, it opens the library browser in the main window.

The library browser is a hierarchical representation of the library workspace or cell library.

- If a library workspace or cell library is not open, it opens the library preparation wizard in the main window.

---

## Closing the GUI

You can open or close the GUI at any time during the session. For example, if you need to conserve system resources, you can close the GUI and continue the session in `icc2_lm_shell`.

To close the GUI, do one of the following:

- Choose File > Close GUI in the block window.
- Choose Window > Close All Windows (Close GUI) in any GUI window.
- Enter the `gui_stop` command.

```
icc2_lm_shell> gui_stop
```

---

## Exiting the Tool From the GUI

To exit the library manager from the GUI, enter the `exit` or `quit` command or choose File > Exit.

Note:

The library manager does not save the view settings when you exit. For information about saving changed view settings, see the *IC Compiler II Graphical User Interface User Guide*.

### See Also


- [Exiting the IC Compiler II Library Manager Tool](#)

---

## Using the Library Preparation Wizard

The library preparation wizard is an easy-to-use tool for navigating the library preparation flow and executing the individual tasks to create and modify your cell libraries. [Figure B-1](#) shows the start page of the library preparation wizard.

*Figure B-1 Library Preparation Wizard*

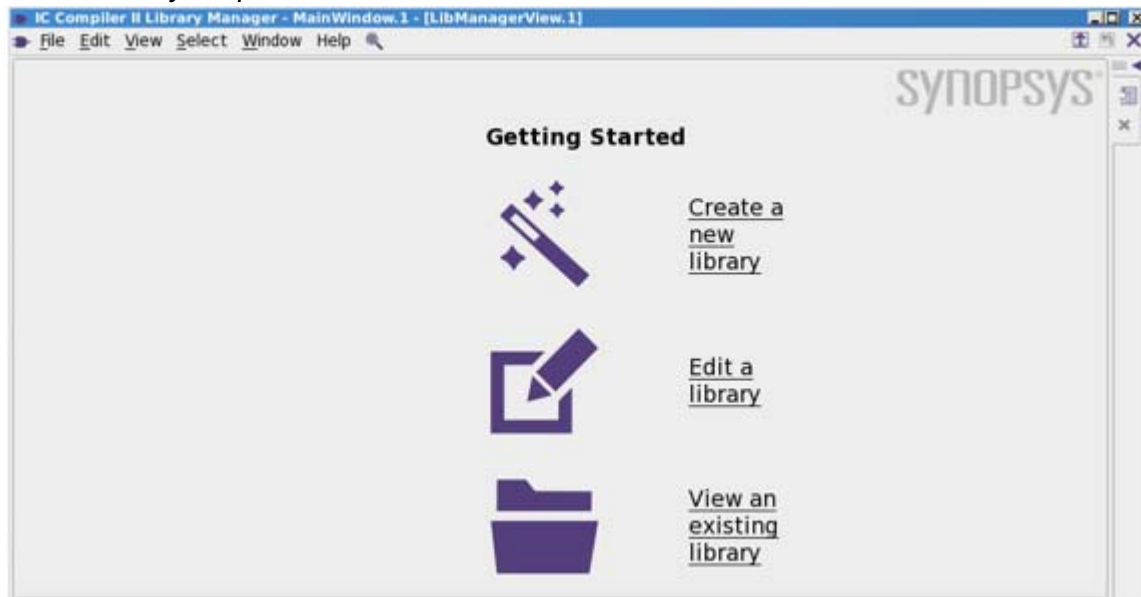


The following topics describe how to use the wizard to perform these tasks:

- [Creating a Cell Library](#)
- [Modifying a Cell Library](#)
- [Viewing a Cell Library](#)

---


## Creating a Cell Library

To use the library preparation wizard to create a new cell library,

1. Click the create icon (  ) or the “Create a new library” link.

The “Set up ‘Exploration’ Workspace” dialog box ([Figure B-2](#)) appears.


*Figure B-2 Set up “Exploration” Workspace Dialog Box*

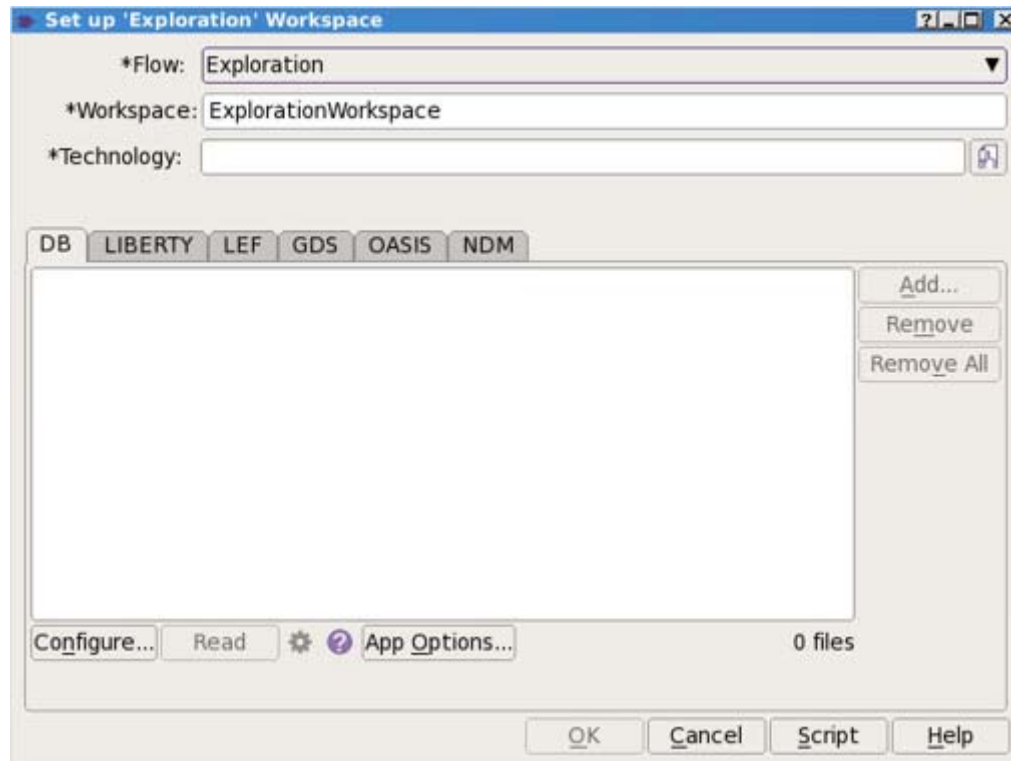

2. Select the library preparation flow in the Flow text box.

By default, the exploration flow is selected. To use another flow, select the flow from the drop-down list.

3. Specify the workspace name in the Workspace text box.
4. Specify the technology data source.

You can specify either a technology file, which must have a file extension of .tf, or a technology library, which must have a file extension of .ndm. You can either enter the file path or click  to browse for it.

5. Read the library source files.

To read the source files,

- Click the tab associated with the file type (DB for the logic libraries; LEF, GDS, or NDM for the physical libraries) and click Add, which opens the Open dialog box.
- Browse to the directory that contains the library source files, select the files, and click Open. To select multiple files, hold the Ctrl key.

When you open library source files, they appear in the “Set up ‘Exploration’ Workspace” dialog box.


- Click Read to read the source files listed in the dialog box.

For details about reading library source files, see [Loading the Logic Data](#) and [Loading the Physical Data](#).

6. Click OK to finish the workspace setup.

The library browser is updated to display the libraries loaded into the library workspace, as shown in [Figure B-3](#).

*Figure B-3 Library Browser After Loading Source Libraries*

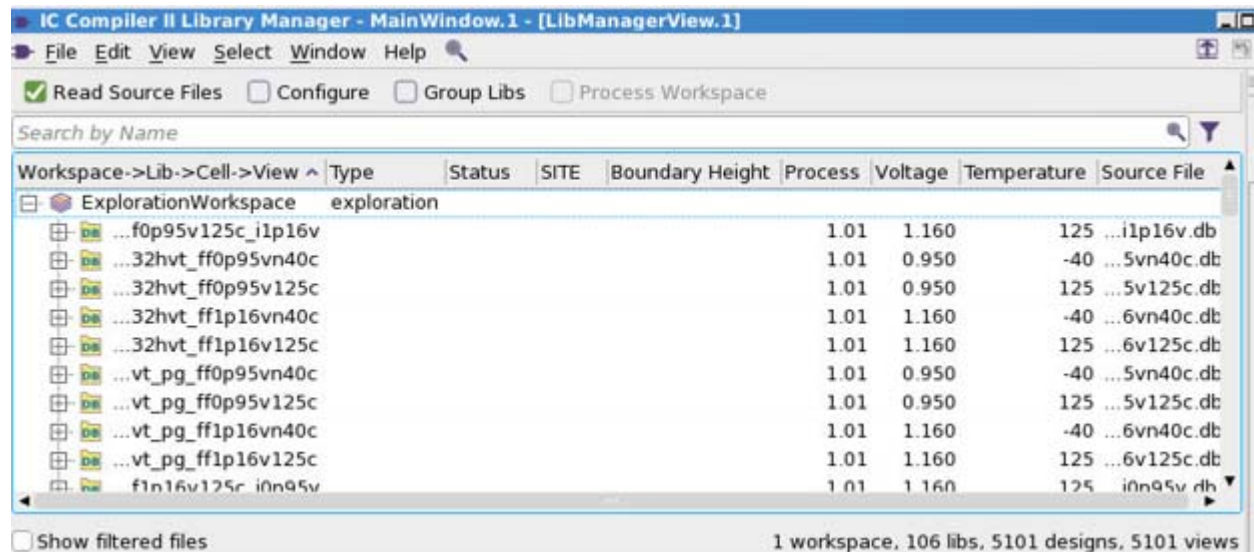

## 7. Configure the PVT filtering.

The library manager displays the current PVT configuration, as well as the filtering statistics, as shown in [Figure B-4](#).

*Figure B-4 PVT Configuration*



To modify the PVT configuration,

### a. Select Configure.

The Filter Process/Voltage/Temperature dialog box appears. The dialog box displays the settings available in the logic libraries loaded in step 5.

### b. Select the process, voltage, and temperature settings and click OK.


By default, the filtered logic libraries are not shown in the library browser. To display the filtered logic libraries, select “Show filtered files.” When you select this option, the library browser displays the filtered files in gray italic text.

For details about configuring PVT filtering, see [Filtering Logic Libraries Based on Operating Corners](#).

## 8. Create the subworkspaces by selecting Group Libs and then clicking OK in the Group Libraries dialog box.

The library browser is updated to display the library groups created by the library preparation wizard, as shown in [Figure B-5](#).

*Figure B-5 Library Browser After Grouping Libraries*

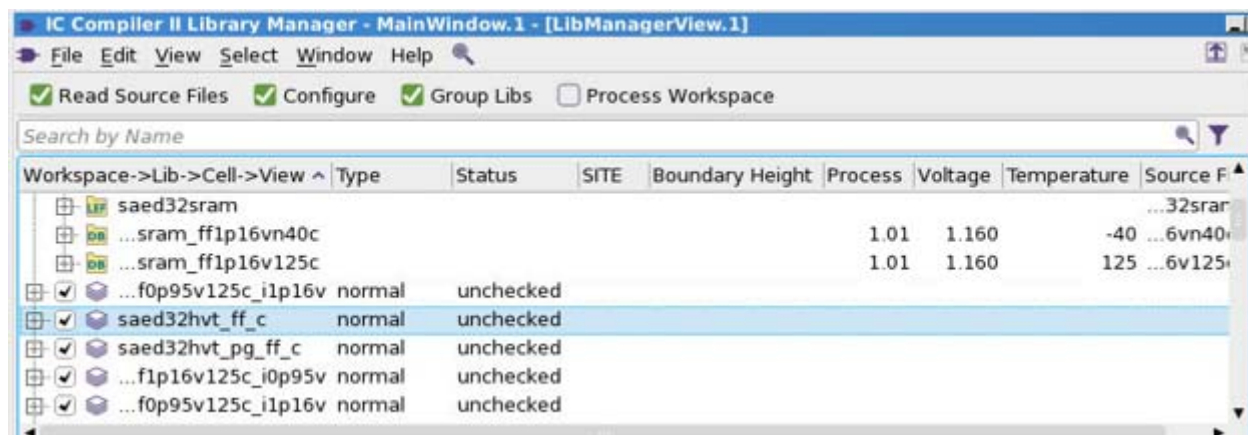



9. Validate the workspace by selecting Process Workspace and then clicking OK in the Process Workspace dialog box.

The workspace must pass validation before you can create a cell library. For details about workspace validation, see [Validating the Workspace](#).

10. Create the cell library by selecting Commit Workspace and then clicking OK in the Commit Workspace dialog box.

---


## Modifying a Cell Library

To use the library preparation wizard to modify an existing cell library,


1. Click the edit icon (  ) or the “Edit a library” link.

The “Set up ‘Edit’ Workspace” dialog box ([Figure B-6](#)) appears.


*Figure B-6 Set up “Edit” Workspace Dialog Box*

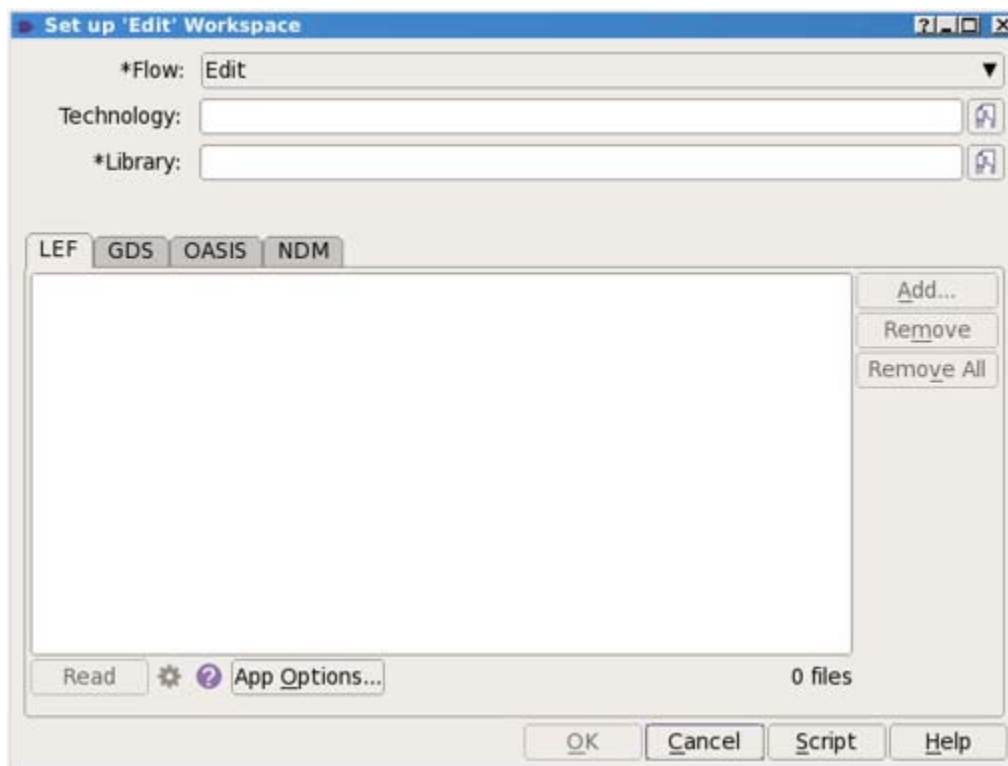

2. Specify the library in the Library text box.

You can either enter the file path or click  to browse for it.

3. If you want to update the technology data for the cell library, specify the technology data source in the Technology text box.

You can specify either a technology file, which must have a file extension of .tf, or a technology library, which must have a file extension of .ndm. You can either enter the file path or click  to browse for it.

4. Read the physical library source files.

To read the physical library source files,

- a. Click the tab associated with the file type you want to read (LEF, GDS, or NDM) and click Add, which opens the Open dialog box.
- b. Browse to the directory that contains the library source files, select the files, and click Open. To select multiple files, hold the Ctrl key.

When you open library source files, they appear in the “Set up ‘Edit’ Workspace” dialog box.

- c. Click Read to read the source files listed in the dialog box.

For details about reading physical library source files into an edit workspace, see [Modifying a Cell Library](#).

5. Validate the workspace by selecting Check Workspace in the library browser and then clicking OK in the Check Workspace dialog box.

The workspace must pass validation before you can create a cell library. For details about workspace validation, see [Validating the Workspace](#).


6. Save the updated cell library by selecting Commit Workspace and then clicking OK in the Commit Workspace dialog box.

---

## Viewing a Cell Library


You can use the GUI to list the cells in a cell library, view information about the cells, and view the layout of the cells.

To use the library preparation wizard to view an existing cell library,

1. Click the folder icon (  ) or the “View an existing library” link.

The Open Library dialog box appears.

2. Select the cell library.

You can either enter the path to the cell library or click  to browse for it.

3. If you want to edit the cell library, select “Open reference library for edit.”
4. Click OK.

The library browser opens with the selected cell library.

### See Also


- [Using the Library Browser](#)

## Working in the Main Window

When you start the library manager tool and open the GUI, the main window appears.

[Figure B-7](#) identifies the major features of the main window.

*Figure B-7 Main Window Features*

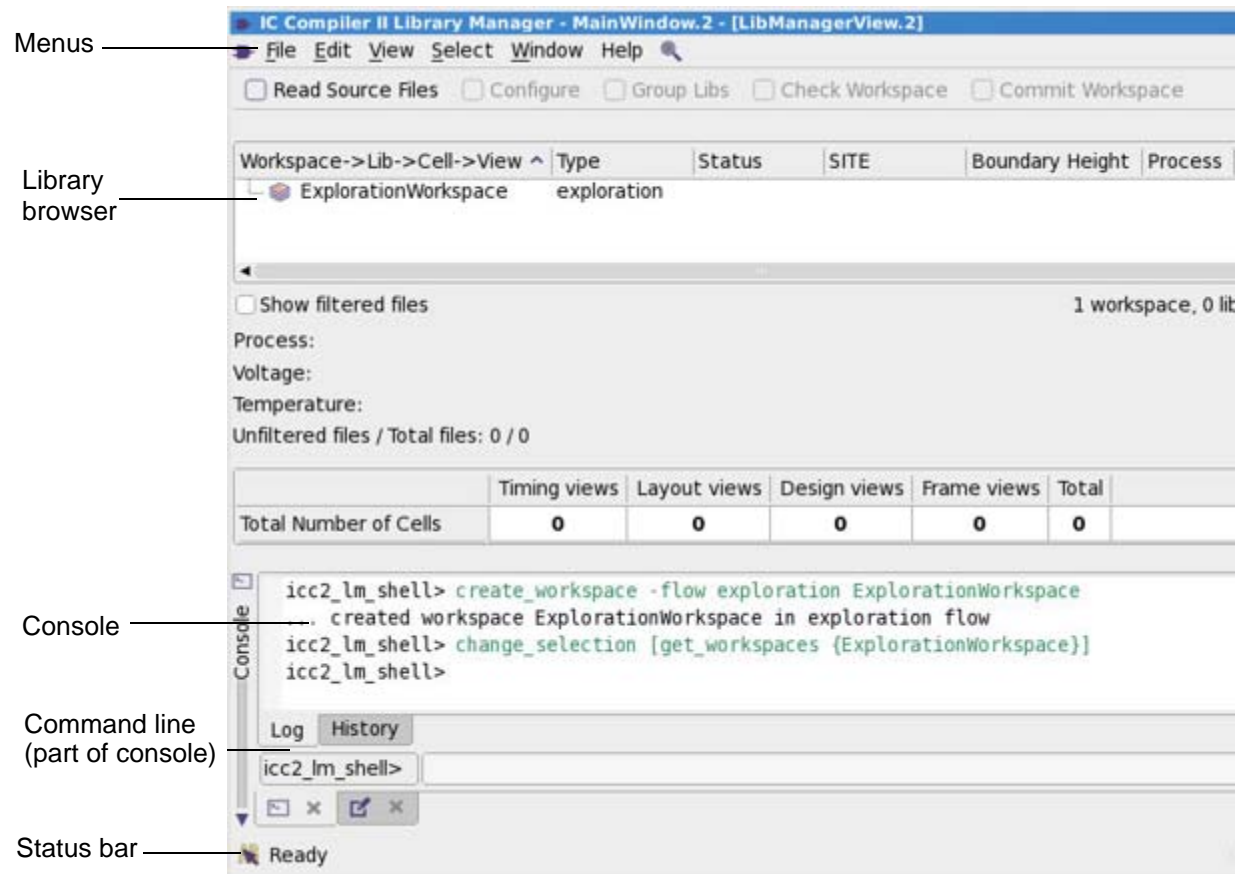

Typically, you use the main window to

- Run Tcl scripts
- Enter `icc2_lm_shell` commands, monitor command processing, and view messages in the console
- Open and close libraries and blocks (library cells or designs)
- Explore cell libraries in the library browser
- Set application options


- Open other GUI windows
- Close the GUI or exit the tool

## Using the Library Browser

You can use the library browser to view the cells in the source logic and physical libraries in a library workspace or the cells in a cell library.

The library browser shows a hierarchical view of the libraries loaded in memory. If a library workspace is open, it shows its source libraries; otherwise, it shows the open cell libraries. You can expand each library to show the blocks (library cells or designs) in the library. You can expand each block to show the views available for the block. The library browser also reports the number and types of cell views in the library. [Figure B-8](#) shows a library browser that displays an expanded cell library with one of its cells expanded to show its views.

Figure B-8 Library Browser

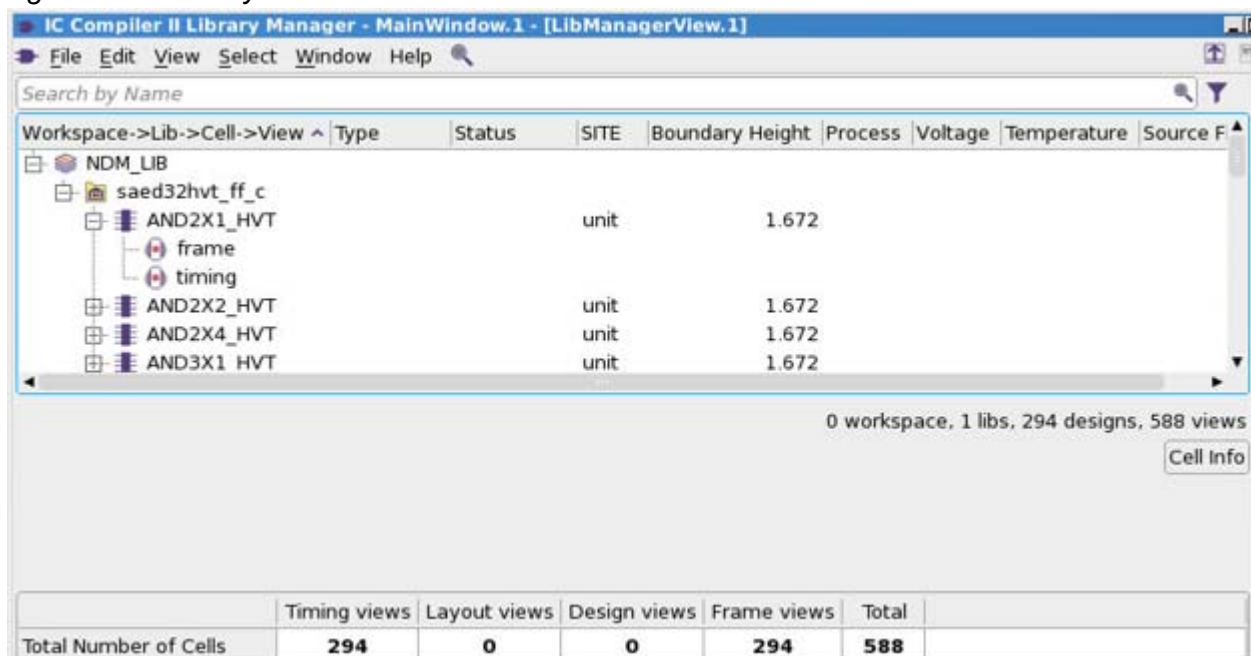

To sort the blocks displayed in the library browser, click the caret (^) in the browser header.

To filter the blocks, enter a string in the search box. As you type, the library browser updates to show only blocks that contain the text you entered. Click the X to the right side of the text box to clear the filter.

To open a block in a block window to view or modify its layout, select a physical view (frame, design, or layout) of the block, right-click, and choose Open Layout View. For information about using the block window, see the *IC Compiler II Graphical User Interface User Guide*.

To see detailed information about the library cells, display the library browser cell information.

- To display information for a specific cell, select one of its views and choose Cell Information from the context-sensitive menu.
- To display information for all cells in the library, click the “Cell info” button, which is located at the bottom right of the library browser.

Figure B-9 shows these features in the library browser. Figure B-10 shows an example cell information report.

Figure B-9 Displaying Cell Information in the Library Browser

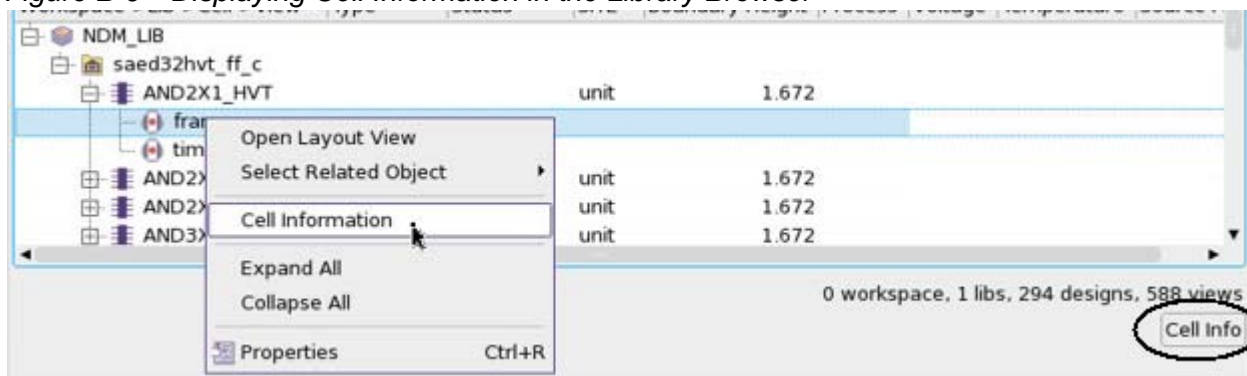


Figure B-10 Cell Information Report

Cell Information										
Number of cells: 294										
99.32% of cells have antenna information on all input pins										
100% of cells have antenna information on all output pins										
100% of cells have antenna information on all inout pins										
Cells	Views	Inputs	Outputs	Power	Ground	Site	Type	Boundary	Antenna	
saed32hvt_ff_c/AND2X1_HVT	f, t	2	1	VDD	VSS	unit	lib_cell	Yes	Yes	
saed32hvt_ff_c/AND2X2_HVT	f, t	2	1	VDD	VSS	unit	lib_cell	Yes	Yes	
saed32hvt_ff_c/AND2X4_HVT	f, t	2	1	VDD	VSS	unit	lib_cell	Yes	Yes	
saed32hvt_ff_c/AND3X1_HVT	f, t	3	1	VDD	VSS	unit	lib_cell	Yes	Yes	
saed32hvt_ff_c/AND3X2_HVT	f, t	3	1	VDD	VSS	unit	lib_cell	Yes	Yes	

## Using the Message Browser Window


After you run the `check_workspace` or `process_workspaces` command, you can view the messages in the message browser. To view the messages,

To view the messages,

1. Open the message browser window by choosing Window > Message Browser Window.
2. Load the message database by choosing File > Open Message Database, and then selecting the EMS file.

The message browser lists each of the messages (information, warning, and error), as well as the message status (W:waived, F:fixed, and A:active). To display the man page for a message, select the message in the browser view. [Figure B-11](#) shows an example of a message browser window.

*Figure B-11 Message Browser*

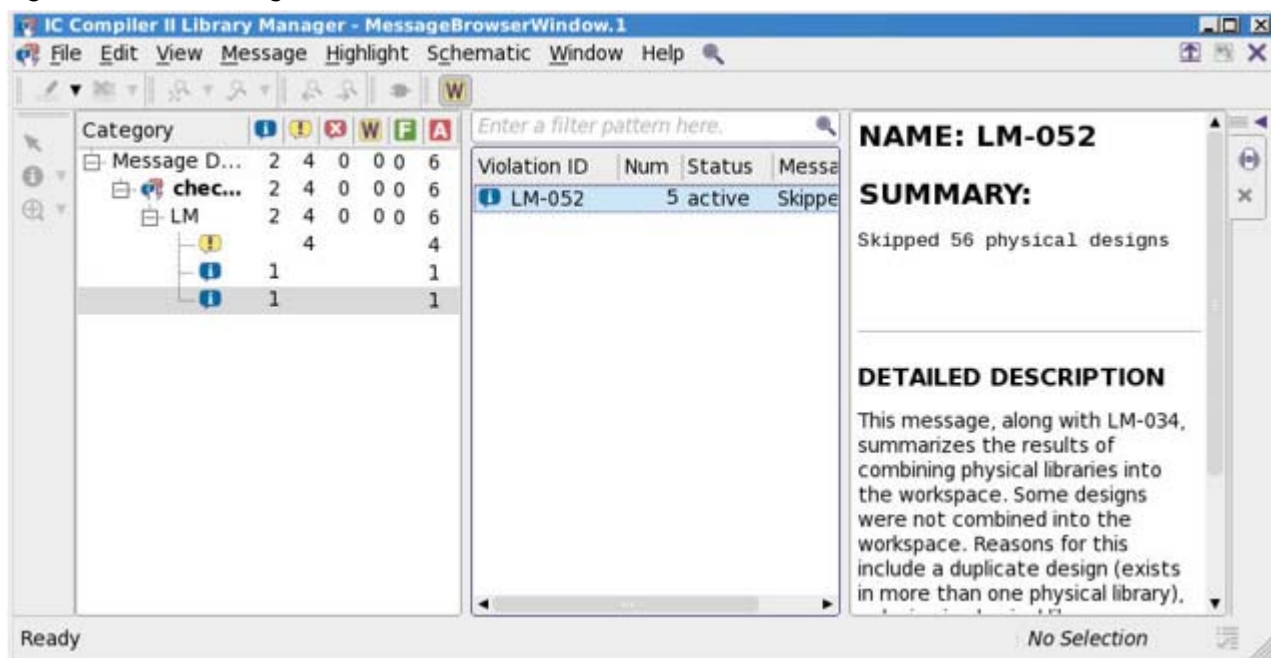

### See Also

- “Using the Message Browser” topic in the *IC Compiler II Graphical User Interface User Guide*





# C

## Using Non-PG Logic Libraries

---

This topic describes the following workspace checks when using logic libraries that do not use the PG-pin syntax:

- [PG Rail Checks](#)
- [PG Pin Connections](#)

## PG Rail Checks

For logic libraries that do not use the PG-pin syntax, the power rails and pins are derived from the library-level `power_supply` group and cell-level `rail_connection` attributes. The `power_rail` attributes in the `power_supply` group define the power rail names. The `rail_connection` attributes on a cell associate these power rails with the cell's power pins. The signal pins of a cell are associated with the PG rails by using the pin-level `input_signal_level` and `output_signal_level` attributes. [Example C-1](#) shows the use of these attributes to define the power connections in a .lib logic library file.

### Example C-1 Library Example With power\_supply Group

```
library (my_lib) {
  ...
  power_supply () {
    default_power_rail : VDD085;
    power_rail (VDD085, 0.85);
    power_rail (VDD105, 1.05);
    power_rail (VDD120, 1.20);
  }
  ...
  cell (LS_085_105) {
    is_level_shifter : true;
    rail_connection (VDDH, VDD105) ;
    rail_connection (VDDL, VDD085) ;
    ...
    pin (in) {
      direction : input;
      input_signal_level : VDDL;
      ...
    }
    pin (out) {
      direction : output;
      output_signal_level : VDDH;
      ...
    }
    ...
  } /* end cell group*/
  ...
} /* end library group*/
```

The tool verifies that each logic library has the same number of rails and they have the same names; however, if a rail is defined in a `power_supply` group but is not used, the tool ignores mismatches involving that rail and does not include the rail definition in the generated cell library.

If the rail order differs, the tool automatically updates the order using the information from the base library.

By default, if a rail name differs between the logic libraries, the tool issues an LM-043 error. If the mismatch is caused only by rail names and positions, and not rail type differences, you can use the `rename_rail` command to make the rail names match. For example, assume logic library A has a `power_rail` setting of (VDD1.0, 1.0) and logic library B has a `power_rail` setting of (VDD1.1, 1.1). You could use the `rename_rail` command to align these rails, as shown in the following example:

```
icc2_lm_shell> rename_rail -library A -from VDD1.0 -to VDD
icc2_lm_shell> rename_rail -library B -from VDD1.1 -to VDD
```

You can also use the `rename_rail` command to correct the situation where the `rail_connection` attribute for a cell uses the same PG pin name across libraries, but the rail name differs.

---

## PG Pin Connections

If the rail name specified for a `rail_connection` attribute is not defined in the library-level `power_supply` group, the tool issues an error message. To fix this error, use the `set_attribute` command to change the `rail_connection` attribute to a valid rail name. To see the rail names defined for a library workspace, use the `report_workspace -panes` command.

