


A cluster of various spheres in white, gold, and blue with gold and blue stripes, arranged in a 3D-like composition on the left side of the slide.

Computer Organization

Lab2

RISC-V Assembly language

Data Details



Topics

➤ RISC-V introduction

➤ Rars introduction

➤ Data Processing Details

- ✓ Data transfer: load & store

- ✓ Address alignment

- ✓ Data interpretation

➤ Practice



RISC-V introduction


- New open-source, license-free ISA spec.
- Appropriate for all levels of computing system, from microcontrollers to supercomputers.
- 32-bit, 64-bit, and 128-bit variants. (we use 32-bit in labs)

基本指令集	描述
RV32I	32-bit integer instruction set
RV32E	Subset of RV32I, for embedded scenarios
RV64I	64-bit integer instruction set, compatible with RV32I
RV128I	64-bit integer instruction set, compatible with RV32I and RV64I

扩展指令集	描述
M	Integer Multiply/Divide extension
A	Atomic extension
F	Single-precision floating-point extension
D	Double-precision floating-point extension
C	Compressed extension
...	Others

RARS - Quick Start(1)

- The Code area is reserved for your RISC-V assembly program editing.
- The Register area displays latest register content
 - ✓ Arithmetic operands are in registers
 - ✓ 32, 32-bit integer registers in RISC-V (x0~x31).
 - ✓ In RARS, registers are displaced using alternative ABI name (more meaningful)

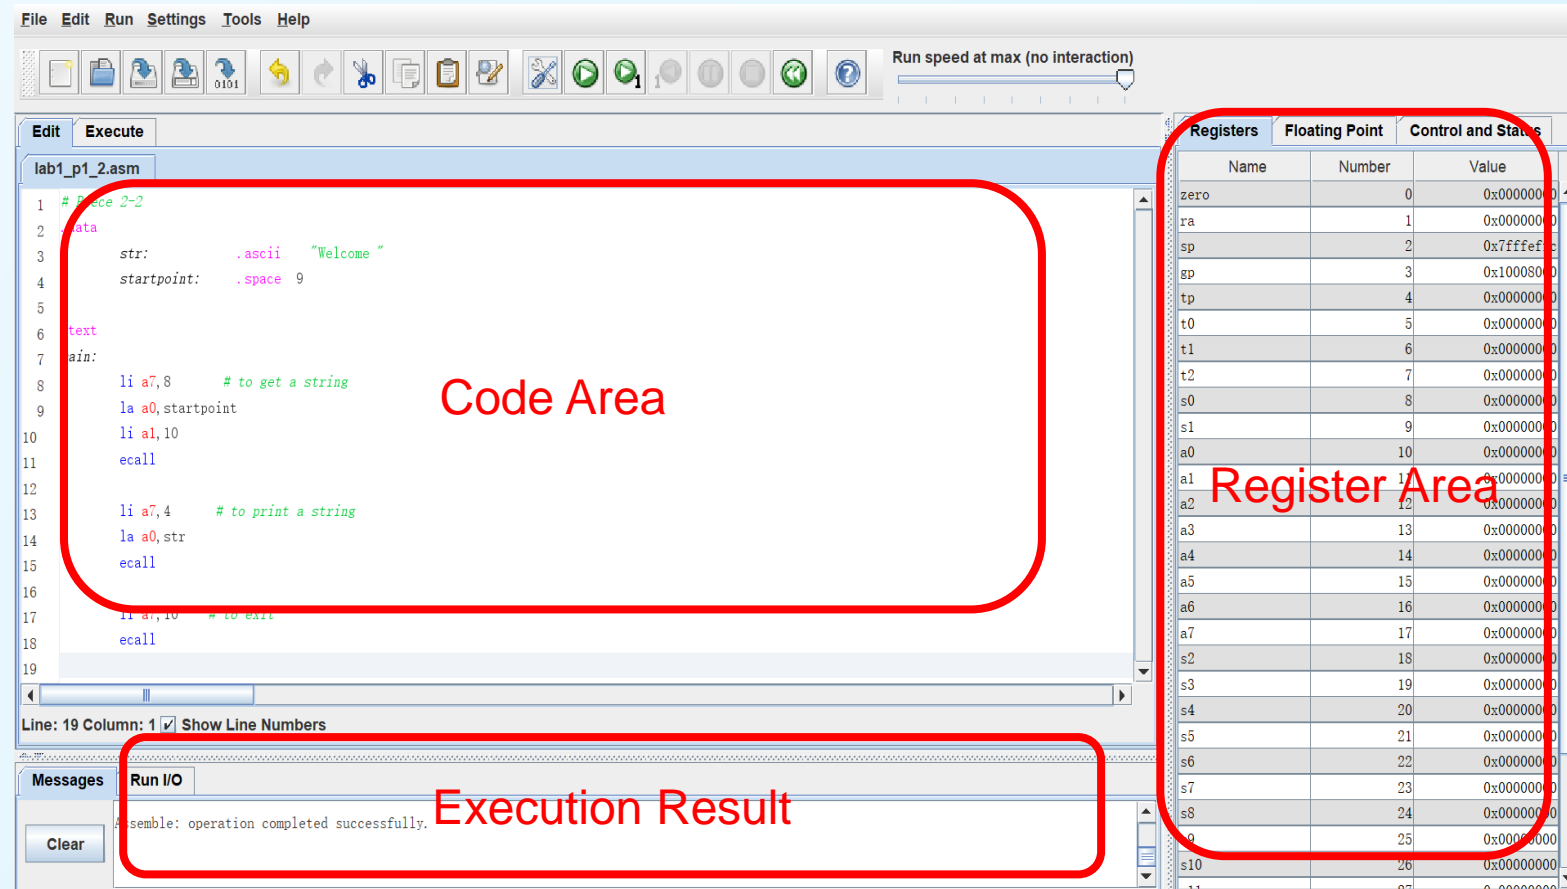



RARS - Quick Start(2)

➤ Data declaration

- ✓ Data declaration section starts with “. **data**”.
- ✓ The declaration means **a piece of memory is required to be allocated**. The declaration usually includes **lable** (name of address on this memory unit), **size**(optional), and **initial value**(optional).

➤ Code definition

- ✓ Code definition starts with “.**text**”, includes **basic instructions, extended instructions, labels of the code**(optional). At the end of the code, “**exit**” system service should be called.

➤ Comments

- ✓ Comments start from “#” till the end of current line

➤ Running in Rars

- ✓ Edit assembly codes
- ✓ Assemble the current file
- ✓ Run the current program



✓Run step by step



li: a pseudo code that load immediate value into register
la: a pseudo code that register to label's address


```
# Piece 2-2
.data
    str:        .ascii  "Welcome "
    startpoint: .space 9

.text
main:
    li a7,8      # to get a string
    la a0,startpoint
    li a1,10
    ecall

    li a7,4      # to print a string
    la a0,str
    ecall

    li a7,10     # to exit
    ecall
```

Show output on bottom of the console:

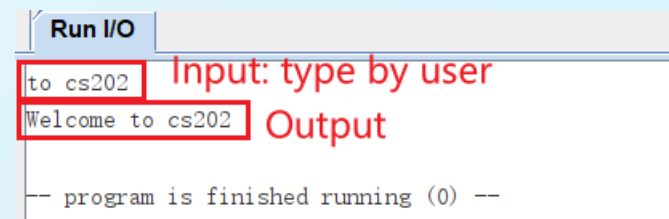

RARS - Quick Start(3)

- some instruction source program are translated to multiple RISC-V basic instructions (in the Basic column)
 - because they are pseudo instruction (basically syntactic sugar), converted to basic instruction and 32-bit machine codes by the assembler.
- Label info area can be activate by Settings->Show Labels Window
- The data declared in .data section can be found in Memory Area
 - See more details later

The screenshot displays the RARS application window. The 'Text Segment' pane is active, showing a table of instructions. The 'Data Segment' pane is also visible, showing a table of memory values. The 'Labels' window is open on the right, showing a list of labels and their addresses. The 'Messages' pane at the bottom shows the status 'Reset: reset completed.'

Assembled Instruction Info

Bkpt	Address	Code	Basic	Source
	0x00400000	0x123458b7	lui x17, 0x00012345	8: li a7, 0x12345678
	0x00400004	0x67888893	addi x17, x17, 0x00000678	
	0x00400008	0x00800893	addi x17, x0, 8	9: li a7, 8 # to get a string
	0x0040000c	0x0fc10517	auipc x10, 0x0000fc10	10: la a0, startpoint
	0x00400010	0xffc50513	addi x10, x10, 0xfffffff	
	0x00400014	0x00a00593	addi x11, x0, 10	11: li a1, 10
	0x00400018	0x00000073	ecall	12: ecall
	0x0040001c	0x00400893	addi x17, x0, 4	14: li a7, 4 # to print a string

Label Info Area

Label	Address
main	0x00400000
str	0x10010000
startpoint	0x10010008

Memory Area

Address	Value (+0)	Value (+4)	Value (+8)	Value (+12)	Value (+16)	Value (+20)	Value (+24)	Value (+28)
0x10010000	0x636c6557	0x20656d6f	0x00000000	0x00000000	0x00000000	0x00000000	0x00000000	0x00000000
0x10010020	0x00000000	0x00000000	0x00000000	0x00000000	0x00000000	0x00000000	0x00000000	0x00000000
0x10010040	0x00000000	0x00000000	0x00000000	0x00000000	0x00000000	0x00000000	0x00000000	0x00000000
0x10010060	0x00000000	0x00000000	0x00000000	0x00000000	0x00000000	0x00000000	0x00000000	0x00000000
0x10010080	0x00000000	0x00000000	0x00000000	0x00000000	0x00000000	0x00000000	0x00000000	0x00000000
0x100100a0	0x00000000	0x00000000	0x00000000	0x00000000	0x00000000	0x00000000	0x00000000	0x00000000

0x10010000 (.data) [X] Hexadecimal Addresses [X] Hexadecimal Values [] ASCII

Reset: reset completed.




RARS - Instructions

Some RISC-V assembly language instructions

Category	Instruction	Example	Meaning	Comments
Arithmetic	add	add x5, x6, x7	$x5 = x6 + x7$	Three register operands; add
	subtract	add x5, x6, x7	$x5 = x6 - x7$	Three register operands; subtract
Data transfer	load word	lw x5, 40(x6)	$x5 = \text{Mem}[x6 + 40]$	Word from memory to register
	store word	sw x5, 40(x6)	$\text{Mem}[x6 + 40] = x5$	Word from register to memory
Logical	and	and x5, x6, x7	$x5 = x6 \& x7$	Three register operands; bit-by-bit AND
Shift	shift left logical	sll x5, x6, x7	$x5 = x6 \ll x7$	Shift left by register
Conditional branch	branch if equal	beq x5, x6, 100	if($x5 == x6$) go to PC+100	PC-relative branch if registers equal
Unconditional branch	jump and link	jal x1, 100	$x1 = \text{PC} + 4$; go to PC+100	PC-relative procedure call



More instructions can be found in RARS Help

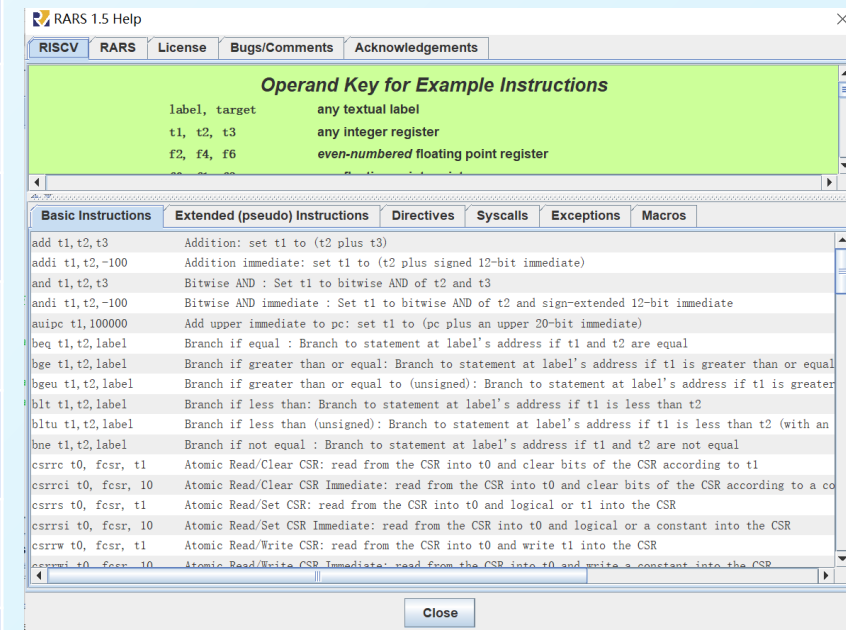



RARS - System Call

- A number of system services, mainly for input and output, are available in Rars.
- Example: display a string on the console(a7 = 4) and exit the program(a7 = 10).

```
#RISC-V piece 2-1
.data
str: .asciz "Hello,RISC-V"

.text
li a7,4
la a0,str
ecall

li a7,10
ecall
```

Table of Available Services

Name	Number	Description	Inputs	Outputs
PrintInt	1	Prints an integer	a0 = integer to print	N/A
PrintFloat	2	Prints a floating point number	fa0 = float to print	N/A
PrintDouble	3	Prints a double precision floating point number	fa0 = double to print	N/A
PrintString	4	Prints a null-terminated string to the console	a0 = the address of the string	N/A
ReadInt	5	Reads an int from input console	N/A	a0 = the int
ReadFloat	6	Reads a float from input console	N/A	fa0 = the float
ReadDouble	7	Reads a double from input console	N/A	fa0 = the double
ReadString	8	Reads a string from the console	a0 = address of input buffer a1 = maximum number of characters to read	N/A
Sbrk	9	Allocate heap memory	a0 = amount of memory in bytes	a0 = address to the allocated block
Exit	10	Exits the program with code 0	N/A	N/A
PrintChar	11	Prints an ascii character	a0 = character to print (only lowest byte is considered)	N/A
ReadChar	12	Reads a character from input console	N/A	a0 = the character

Show output on bottom of the console:

```
Run I/O
Hello, RISC-V
-- program is finished running (0) --
```

Tip: display all the system services information in “Help” of Rars.



Data transfer: load & store

- In RISC-V, memory could **ONLY** be accessed by data transfer instructions.
- In RISC-V, data must be in registers to perform arithmetic.
- Unit Conversion
 - ✓ 1 word = 32bit = 2*half word(2*16bit) = 4* byte(4*8bit)

Name	Example	Comments
32 registers	x0 - x31	Fast locations for data. In RISC-V, data must be in registers to perform arithmetic. Register x0 always equals 0.
2^{30} memory words	Memory[0], Memory[4], ...,	Accessed only by data transfer instructions. RISC-V uses byte addresses, so sequential word accesses differ by 4. Memory holds data structures, arrays, and spilled registers.



Data transfer: load(1)

- Load: transfer data to register

Some RISC-V load instructions(including pseudo code)

Mnemonic	Instruction	Example	Meaning	Comments
lw	Load word	lw x5, 40(x6)	$x5 = \text{Mem}[x6 + 40]$	Word from memory to register
lb	Load byte	lb x5, 40(x6)	$x5 = \text{Mem}[x6 + 40]$	Byte from memory to register
lui	Load upper immediate	lui x5, 0x12345	$x5 = 0x12345000$	Load 20-bit constant shifted left 12 bits
la	Load address	la x5, label1	$x5 = \text{label1's address}$	Set x5 to label1's address

- lui (Load upper immediate) loads 20-bit immediate constant shifted left 12 bits, can be used to load large constant

lui x17, 0x00012345	8: li a7, 0x12345678
addi x17, x17, 0x00000678	

- la (load address) is a extended (pseudo) instruction, which is implemented by two basic instructions: auipc (add upper immediate to PC), addi (add immediate).
- auipc (U-type): to add 20-bit upper immediate to PC; to write sum to register. a's address = 1001 0000

0x0040000c	0x0fc10397	auipc x7, 0x0000fc10	10: la t2, a
0x00400010	0xff438393	addi x7, x7, 0xffffffff4	



Data transfer: load(2)

- In addition to word data load (lw), RISC-V has byte, halfword data transfers (lb, lh), data is copied to the **low byte position** of register.
- Data is **sign-extended** to register.

Piece 2-4

.data

a: .word 0x12345678

b: .word 0x9abcdef0

.text

main:

lw t0, a # load word

lw t1, b

lb t0, a # load byte

lb t1, b

lh t0, a #load halfword

lh t1, b

t0	5	0x00000000
t1	6	0x00000000

t0	5	0x12345678
t1	6	0x9abcdef0

t0	5	0x00000078
t1	6	0xfffffffff0


t0	5	0x00005678
t1	6	0xffffdef0

➤ a: 12345678_{hex} = 0001 0010 0011 0100 0101 0110 0111 1000_{two}

➤ b: 9abcdef0_{hex} = 1001 1010 1011 1100 1101 1110 1111 0000_{two}

➤ When executing **lb** instruction


78_{hex} = 0111 1000_{two}



sign-extended

0000 0000 0000 0000 0000 0000 0111 1000_{two} = 00000078_{hex}

f0_{hex} = 1111 0000_{two}



sign-extended

1111 1111 1111 1111 1111 1111 1111 0000_{two} = ffffffff0_{hex}



Data transfer: store(1)

- Store: transfer data from register to memory

Some RISC-V store instructions

Mnemonic	Instruction	Example	Meaning	Comments
sw	Store word	sw x5, 40(x6)	Mem [x6 + 40] = x5	Word from register to memory
sb	Store byte	sb x5, 40(x6)	Mem [x6 + 40] = x5	Byte from register to memory

- **Question:** Is it necessary to implement “sa” instruction (store address)?

Why? If it is necessary to implement “sa”, how to do it?



Data transfer: store(2)

Piece 2-5

.data

a: .word 0x12345678

b: .word 0x9abcdef0

.text

main:

lw t0, a # load word

lw t1, b

la t2, a

sw t0, 8(t2) # store word

sw t1, 12(t2)

li a7,10 # to exit

ecall

- $t2: 10010000_{\text{hex}}$
- $8(t2): 10010000_{\text{hex}} + 8_{\text{ten}} = 10010008_{\text{hex}}$
- $12(t2) : 10010000_{\text{hex}} + 12_{\text{ten}} = 1001000c_{\text{hex}}$
- A word occupies 4 bytes, so $t2+8$ and $t2+12$ are multiples of 4.

a	b	8(t2)	12(t2)		
Data Segment					
Address	Value (+0)	Value (+4)	Value (+8)	Value (+c)	Value (+10)
0x10010000	0x12345678	0x9abcdef0	0x12345678	0x9abcdef0	0x0000f078
0x10010020	0x00000000	0x00000000	0x00000000	0x00000000	0x00000000




Address alignment (1)

- The value of “**label**” is determined by the Assembler according to the assembly source code.

```
# Piece 2-6
.data
    str:      .ascii  "Welcome "
    startpoint: .space 9
    a:        .word 0x12345678
    b:        .word 0x9abcdef0
.text
main:
    # .....


    li a7,10      # to exit
    ecall
```

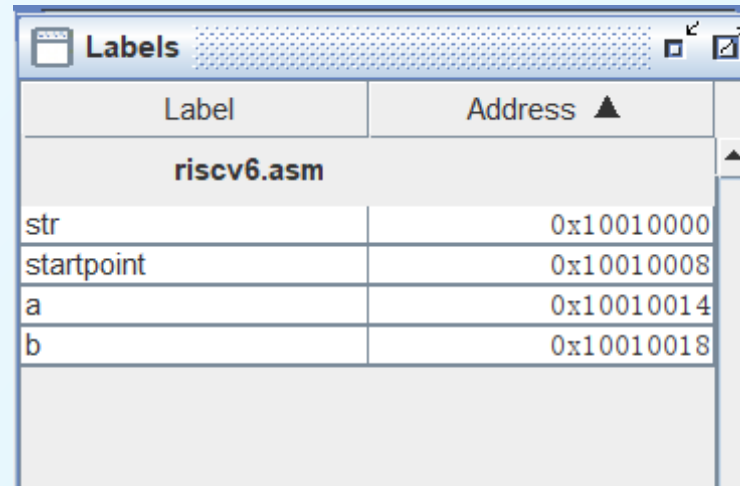

Label	Address ▲
riscv6.asm	
str	0x10010000
startpoint	0x10010008
a	0x10010014
b	0x10010018

Question: Why a's address is 0x10010014 but not 0x10010011?

- Tip: to show labels window, go to “Settings” menu.

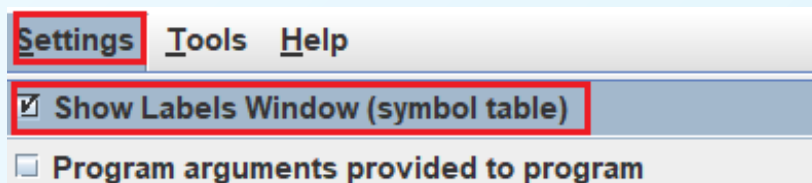



Address alignment (2)

- The address need to be **calculated by Baseline + offset** (Using the sum of the baseline address and offset as memory address).
 - ✓ Load the word from the memory unit whose address is the sum of 4 and the value in register t0 to register t2. **lw t2, 4(t0)**
 - ✓ Store half-word in register t2 to memory unit whose address is the sum of -12 and the value in register t0. **sh t2, -12(t0)**
- if it's lw, a word occupies 4 bytes, so t2+8 is multiples of 4.
- if it's sh, a half-word occupies 2 bytes, so t2-12 is multiples of 2.
- **Question:** Run the piece of codes on right hand, observe the executed results and explain the reason.

```
# Piece 2-7
.data
    a:    .word 0x12345678
    b:    .word 0x9abcdef0

.text
main:
    lw t0, a      # load word
    lw t1, b
    la t2, a

    sb t0, 8(t2)   # store byte
    sb t1, 9(t2)

    sw t0, 10(t2)  # store word
    sw t1, 14(t2)

    sh t0, 18(t2)  # store halfword
    sh t1, 20(t2)

    li a7,10      # to exit
    ecall
```



Data interpretation(1)

name: storage_type value(s)

example

```
var1:          .word    3            # create a single integer:
                                      #variable with initial value 3

array1:        .byte    'a','b'      # create a 2-element character
                                      # array with elements initialized:
                                      # to a and b

array2:        .space   40           # allocate 40 consecutive bytes,
                                      # with storage uninitialized
                                      # could be used as a 40-element
                                      # character array, or a
                                      # 10-element integer array;
                                      # a comment should indicate it.
```

.data

```
var1:          .word 3
array1:        .byte 'a', 'b'
```

Labels	
Label	Address ▲
riscv6.asm	
var1	0x10010000
array1	0x10010004

Data Segment		
Address	Value (+0)	Value (+4)
0x10010000	0x00000003	0x00006261



Display in ASCII code

Data Segment		
Address	Value (+0)	Value (+4)
0x10010000	\0 \0 \0 .	\0 \0 b a



Data interpretation(2)

macro_print_str.asm program can be found in Last page

- while calculate the data, if the instruction ends with “**u**” means the data are treated as **unsigned** integer, else the data are treated as **signed by default**.
- `slt t1,t2,t3`
set less than: if t2 is less than t3, then set t1 to 1 else set t1 to 0.
- `sltu t1,t2,t3`
set less than unsigned: if t2 is less than t3 using **unsigned** comparison, set t1 to 1 else set t1 to 0.
- RISC-V also has “unsigned byte” loads (`lbu`) which zero extends to fill register, and also has `lwu` and `lhu`.

Piece 2-8

```
.include "macro_print_str.asm"
```

```
.data
```

```
.text
```

```
main:
```

```
    print_string("\n -1 is less than 1 using slt (1 for yes and 0 for no): ")
```

```
    li t0,-1
```

```
    li t1,1
```

```
    slt a0,t0,t1
```

```
    li a7,1
```

```
    ecall
```

```
    print_string("\n -1 is less than 1 using sltu (1 for yes and 0 for no): ")
```

```
    sltu a0,t0,t1
```

```
    li a7,1
```

```
    ecall
```

```
end
```

Run I/O

```
-1 is less than 1 using slt (1 for yes and 0 for no): 1
-1 is less than 1 using sltu (1 for yes and 0 for no): 0
-- program is finished running (0) --
```



Data interpretation(3)

- Run the piece of codes on right hand, answer the questions.
 - ✓ Q1. What's the data stored in register a0 after execute "lw a0, tdata"?
 - ✓ Q2. What are the two display result?
 - ✓ Q3. Is the 2nd "lw a0, tdata" instruction after print_string("\n") redundant? If delete, what will be displayed, why?
- Tip: system call
 - ✓ code **1**: display data in **a0** as **signed** decimal value
 - ✓ code **36**: display data in **a0** as **unsigned** decimal value

```
# Piece 2-9
.include "macro_print_str.asm"
.data
    tdata: .word 0xFFFFFFFF
.text
main:
    lw a0, tdata
    li a7, 1
    ecall

    print_string("\n")
    lw a0, tdata
    li a7, 36
    ecall

    li a7, 10
    ecall
```



Data interpretation(4)

- Run the two pieces of codes on right hand, answer the questions.
 - ✓ Q1: What are the values stored in the register a0 after the operation of 'lb' and 'lbu'?
 - ✓ Q2: using "-1" as initial value of tdata instead of "0x80", answer Q1 again.

```
# Piece 2-10
.include "macro_print_str.asm"
.data
    tdata: .byte 0x80
.text
main:
    lb a0, tdata
    li a7, 1
    ecall

    print_string("\n")
    lb a0, tdata
    li a7, 36
    ecall

    end
```

```
# Piece 2-11
.include "macro_print_str.asm"
.data
    tdata: .byte 0x80
.text
main:
    lbu a0, tdata
    li a7, 1
    ecall

    print_string("\n")
    lbu a0, tdata
    li a7, 36
    ecall

    end
```



Practice 1

- Use RISC-V assembly language to program and realize the following functions on Rars: Using system calls to get the sid which has 8 numbers from input, print out the string: Welcome XXXXXXXX to RISC-V World (XXXXXXXX is an 8-digit number)
 - ✓ 1-1. complete the codes on the right hand, move the string “ to RISC-V World” from the memory unit addressed by “e1” to the memory unit addressed by the sum of 8 and “sid”.
 - ✓ 1-2. Is there any other way to implement the function?
 - ✓ 1-3. Which method would get better performance: 1-1 or 1-2?
- Tip 1: While get and put string by syscall, the end of string is “\0” which means getting a string would add a “\0” at the end of string, print a string would end with “\0”
- Tip 2: The difference between “**ascii**” and “**asciz**” is that “asciz” would add “\0” at the end of the string while “ascii” would not.

```
# Piece 2-12
```

```
.data
```

```
    str:      .ascii  "\nWelcome "
```

```
    sid:      .space  9
```

```
    e1:      .asciz  " to RISC-V
```

```
World"
```

```
.text
```

```
main:
```

```
    li a7, 8      # to get a string
```

```
    la a0, sid
```

```
    li a1, 9
```

```
    ecall
```

```
#complete code here
```

```
    li a7, 4      # to print a string
```

```
    la a0, str
```

```
    ecall
```

```
    li a7, 10     # to exit
```

```
    ecall
```




Practice 2

- Run the code on the right hand, answer the questions.
 - ✓ 2-1. What's the value of label alice?
 - ✓ 2-2. What's the value of label tony?
 - ✓ 2-3. What's the output after execute the system call on line 22?

```
lab1-practice4.asm
1  .data
2      name:  .space 16      # malloc 16 bytes, not initialize
3      mick:  .ascii "Mick\n" # malloc 4+1 = 5 bytes
4      alice: .asciz "Alice\n" ##### What's the value of alice?
5      tony:  .asciz "Tony\n" ##### What's the value of tony?
6      chen:  .asciz "Chen\n"
7
8  .text
9  main:
10     la t0, name
11     la t1, mick
12     sw t1, (t0)          # get the value of t0; use it as the address of a piece of memory
13     la t1, alice
14     sw t1, 4(t0)         # baseline: the content of t0; offset: 4
15     la t1, tony
16     sw t1, 8(t0)
17     la t1, chen
18     sw t1, 12(t0)
19
20     li a7, 4
21     lw a0, 0(t0)
22     ecall                # What's the output while this system call is done?
23
24     li a7, 10
25     ecall
```



Tip 1 : macro_print_str.asm

- Get help of definition and usage about macro from help page.
- While using the macro, put this file to the same directory as the file which use the macro.
- Name this file as “macro_print_str.asm”

```
.macro print_string(%str)
    .data
        pstr: .asciz  %str
    .text
        la a0,pstr
        li a7,4
        ecall
.end_macro

.macro end
    li a7,10
    ecall
.end_macro
```