



Install a stretch MetroCluster configuration

ONTAP MetroCluster

NetApp
April 28, 2021

This PDF was generated from https://docs.netapp.com/us-en/ontap-metrocluster/install-stretch/concept_deciding_whether_to_use_this_guide_stretch_mcc_installation_and_configuration_guide.html on April 28, 2021. Always check docs.netapp.com for the latest.

Table of Contents

- Stretch MetroCluster® Installation and Configuration Guide 1
 - Deciding whether to use the Stretch MetroCluster Installation and Configuration Guide 1
 - Preparing for the MetroCluster installation. 1
 - Choosing the correct installation procedure for your configuration 8
 - Cabling a two-node SAS-attached stretch MetroCluster configuration 9
 - Cabling a two-node bridge-attached stretch MetroCluster configuration 14
 - Configuring the MetroCluster software in ONTAP 22
 - Considerations for using virtual IP and Border Gateway Protocol with a MetroCluster configuration 62
 - Testing the MetroCluster configuration. 64
 - Connections in a stretch MetroCluster configurations with array LUNs 83
 - Considerations when removing MetroCluster configurations. 86
 - Using the Active IQ Unified Manager and ONTAP System Manager for further configuration and monitoring. 87
 - Considerations when using ONTAP in a MetroCluster configuration 88
 - Transitioning from a stretch to a fabric-attached MetroCluster configuration. 97
 - Where to find additional information. 98

Stretch MetroCluster® Installation and Configuration Guide

This content describes how to install and configure the MetroCluster hardware and software components in a stretch configuration.

Deciding whether to use the Stretch MetroCluster Installation and Configuration Guide

This guide describes how to install and configure the MetroCluster hardware and software components in a stretch configuration (sometimes referred to as a SAS optical MetroCluster configuration).

You should use this guide for planning, installing, and configuring a stretch MetroCluster configuration under the following circumstances:

- You want to understand the architecture of a stretch MetroCluster configuration
- You want to understand the requirements and best practices for configuring a stretch MetroCluster configuration.
- You want to use the command-line interface (CLI), not an automated scripting tool.

Preparing for the MetroCluster installation

As you prepare for the MetroCluster installation, you should understand the MetroCluster hardware architecture and required components.

Differences between the ONTAP MetroCluster configurations

The various MetroCluster configurations have key differences in the required components.

In all configurations, each of the two MetroCluster sites is configured as an ONTAP cluster. In a two-node MetroCluster configuration, each node is configured as a single-node cluster.

Feature		IP configurations	Fabric attached configurations		Stretch configurations	
			Four- or eight-node	Two-node	Two-node bridge-attached	Two-node direct-attached
Number of controllers	Four	Four or eight	Two	Two	Two	Two
Uses an FC switch storage fabric	No	Yes	Yes	No	No	No

Feature	IP configurations	Fabric attached configurations		Stretch configurations	
Uses an IP switch storage fabric	Yes	No	No	No	No
Uses FC-to-SAS bridges	No	Yes	Yes	Yes	No
Uses direct-attached SAS storage	Yes (local attached only)	No	No	No	Yes
Supports ADP	Yes (starting in ONTAP 9.4)	No	No	No	No
Supports local HA	Yes	Yes	No	No	No
Supports ONTAP AUSO	No	Yes	Yes	Yes	Yes
Supports unmirrored aggregates	Yes (starting in ONTAP 9.8)	Yes	Yes	Yes	Yes
Supports array LUNs	No	Yes	Yes	Yes	Yes
Supports ONTAP Mediator	Yes (starting in ONTAP 9.7)	No	No	No	No
Supports MetroCluster Tiebreaker	Yes (not in combination with ONTAP Mediator)	Yes	Yes	Yes	Yes

Considerations for using All SAN Array systems in MetroCluster configurations

Some All SAN Arrays (ASAs) are supported in MetroCluster configurations. In the MetroCluster documentation, the information for AFF models applies to the corresponding ASA system. For example, all cabling and other information for the AFF A400 system also applies to the ASA AFF A400 system.

Supported platform configurations are listed in the [NetApp Hardware Universe](#).

Considerations for configuring cluster peering

Each MetroCluster site is configured as a peer to its partner site. You should be familiar with the prerequisites and guidelines for configuring the peering relationships and when deciding whether to use shared or dedicated ports for those relationships.

Related information

[Cluster and SVM peering express configuration](#)

Prerequisites for cluster peering

Before you set up cluster peering, you should confirm that the connectivity, port, IP address, subnet, firewall, and cluster-naming requirements are met.

Connectivity requirements

Every intercluster LIF on the local cluster must be able to communicate with every intercluster LIF on the remote cluster.

Although it is not required, it is typically simpler to configure the IP addresses used for intercluster LIFs in the same subnet. The IP addresses can reside in the same subnet as data LIFs, or in a different subnet. The subnet used in each cluster must meet the following requirements:

- The subnet must have enough IP addresses available to allocate to one intercluster LIF per node.

For example, in a six-node cluster, the subnet used for intercluster communication must have six available IP addresses.

Each node must have an intercluster LIF with an IP address on the intercluster network.

Intercluster LIFs can have an IPv4 address or an IPv6 address.



ONTAP 9 enables you to migrate your peering networks from IPv4 to IPv6 by optionally allowing both protocols to be present simultaneously on the intercluster LIFs. In earlier releases, all intercluster relationships for an entire cluster were either IPv4 or IPv6. This meant that changing protocols was a potentially disruptive event.

Port requirements

You can use dedicated ports for intercluster communication, or share ports used by the data network. Ports must meet the following requirements:

- All ports that are used to communicate with a given remote cluster must be in the same IPspace.

You can use multiple IPspaces to peer with multiple clusters. Pair-wise full-mesh connectivity is required only within an IPspace.

- The broadcast domain that is used for intercluster communication must include at least two ports per node so that intercluster communication can fail over from one port to another port.

Ports added to a broadcast domain can be physical network ports, VLANs, or interface groups (ifgrps).

- All ports must be cabled.
- All ports must be in a healthy state.
- The MTU settings of the ports must be consistent.

Firewall requirements

Firewalls and the intercluster firewall policy must allow the following protocols:

- ICMP service
- TCP to the IP addresses of all the intercluster LIFs over the ports 10000, 11104, and 11105
- Bidirectional HTTPS between the intercluster LIFs

The default `intercluster` firewall policy allows access through the HTTPS protocol and from all IP addresses (0.0.0.0/0). You can modify or replace the policy if necessary.

Considerations when using dedicated ports

When determining whether using a dedicated port for intercluster replication is the correct intercluster network solution, you should consider configurations and requirements such as LAN type, available WAN bandwidth, replication interval, change rate, and number of ports.

Consider the following aspects of your network to determine whether using a dedicated port is the best intercluster network solution:

- If the amount of available WAN bandwidth is similar to that of the LAN ports and the replication interval is such that replication occurs while regular client activity exists, then you should dedicate Ethernet ports for intercluster replication to avoid contention between replication and the data protocols.
- If the network utilization generated by the data protocols (CIFS, NFS, and iSCSI) is such that the network utilization is above 50 percent, then you should dedicate ports for replication to allow for nondegraded performance if a node failover occurs.
- When physical 10 GbE or faster ports are used for data and replication, you can create VLAN ports for replication and dedicate the logical ports for intercluster replication.

The bandwidth of the port is shared between all VLANs and the base port.

- Consider the data change rate and replication interval and whether the amount of data that must be replicated on each interval requires enough bandwidth that it might cause contention with data protocols if sharing data ports.

Considerations when sharing data ports

When determining whether sharing a data port for intercluster replication is the correct intercluster network solution, you should consider configurations and requirements such as LAN type, available WAN bandwidth, replication interval, change rate, and number of ports.

Consider the following aspects of your network to determine whether sharing data ports is the best intercluster connectivity solution:

- For a high-speed network, such as a 40-Gigabit Ethernet (40-GbE) network, a sufficient amount of local LAN bandwidth might be available to perform replication on the same 40-GbE ports that are used for data access.

In many cases, the available WAN bandwidth is far less than 10 GbE LAN bandwidth.

- All nodes in the cluster might have to replicate data and share the available WAN bandwidth, making data port sharing more acceptable.
- Sharing ports for data and replication eliminates the extra port counts required to dedicate ports for replication.
- The maximum transmission unit (MTU) size of the replication network will be the same size as that used on the data network.
- Consider the data change rate and replication interval and whether the amount of data that must be replicated on each interval requires enough bandwidth that it might cause contention with data protocols if sharing data ports.
- When data ports for intercluster replication are shared, the intercluster LIFs can be migrated to any other intercluster-capable port on the same node to control the specific data port that is used for replication.

Considerations when using unmirrored aggregates

If your configuration includes unmirrored aggregates, you must be aware of potential access issues after switchover operations.

Considerations for unmirrored aggregates when doing maintenance requiring power shutdown

If you are performing negotiated switchover for maintenance reasons requiring site-wide power shutdown, you should first manually take offline any unmirrored aggregates owned by the disaster site.

If you do not, nodes at the surviving site might go down due to multi-disk panics. This could occur if switched-over unmirrored aggregates go offline or are missing because of the loss of connectivity to storage at the disaster site due to the power shutdown or a loss of ISLs.

Considerations for unmirrored aggregates and hierarchical namespaces

If you are using hierarchical namespaces, you should configure the junction path so that all of the volumes in that path are either on mirrored aggregates only or on unmirrored aggregates only. Configuring a mix of unmirrored and mirrored aggregates in the junction path might prevent access to the unmirrored aggregates after the switchover operation.

Considerations for unmirrored aggregates and CRS metadata volume and data SVM root volumes

The configuration replication service (CRS) metadata volume and data SVM root volumes must be on a mirrored aggregate. You cannot move these volumes to unmirrored aggregate. If they are on unmirrored aggregate, negotiated switchover and switchback operations are vetoed. The `metrocluster check` command provides a warning if this is the case.

Considerations for unmirrored aggregates and SVMs

SVMs should be configured on mirrored aggregates only or on unmirrored aggregates only. Configuring a mix of unmirrored and mirrored aggregates can result in a switchover operation that exceeds 120 seconds and result in a data outage if the unmirrored aggregates do not come online.

Considerations for unmirrored aggregates and SAN

A LUN should not be located on an unmirrored aggregate. Configuring a LUN on an unmirrored aggregate can result in a switchover operation that exceeds 120 seconds and a data outage.

Considerations for firewall usage at MetroCluster sites

If you are using a firewall at a MetroCluster site, you must ensure access for certain required ports.

The following table shows TCP/UDP port usage in an external firewall positioned between two MetroCluster sites.

Traffic type	Port/services
Cluster peering	11104 / TCP 11105 / TCP
ONTAP System Manager	443 / TCP
MetroCluster IP intercluster LIFs	65200 / TCP 10006 / TCP and UDP
Hardware assist	4444 / TCP

Preconfigured settings for new MetroCluster systems from the factory

New MetroCluster nodes and, if present, FC-to-SAS bridges are preconfigured and MetroCluster settings are enabled in the software. In most cases, you do not need to perform the detailed procedures provided in this guide.

Hardware racking and cabling

Depending on the configuration you ordered, you might need to rack the systems and complete the cabling.

[Cabling a two-node SAS-attached stretch MetroCluster configuration](#)

[Cabling a two-node bridge-attached stretch MetroCluster configuration](#)

FC-to-SAS bridge configurations


For configurations using FC-to-SAS bridges, the bridges received with the new MetroCluster configuration are preconfigured and do not require additional configuration unless you want to change the names and IP addresses.

Software configuration of the MetroCluster configuration

Nodes received with the new MetroCluster configuration are preconfigured with a single root aggregate. Additional configuration must be performed using the detailed procedures provided in this guide.

Hardware setup checklist


You need to know which hardware setup steps were completed at the factory and which steps you need to complete at each MetroCluster site.

Step	Completed at factory	Completed by you
Mount components in one or more cabinets.	Yes	No
Position cabinets in the desired location.	No	YesPosition them in the original order so that the supplied cables are long enough.
Connect multiple cabinets to each other, if applicable.	No	YesUse the cabinet interconnect kit if it is included in the order. The kit box is labeled.
Secure the cabinets to the floor, if applicable.	No	YesUse the universal bolt-down kit if it is included in the order. The kit box is labeled.
Cable the components within the cabinet.	YesCables 5 meters and longer are removed for shipping and placed in the accessories box.	No
Connect the cables between cabinets, if applicable.	No	YesCables are in the accessories box.
Connect management cables to the customer's network.	No	YesConnect them directly or through the CN1601 management switches, if present.  To avoid address conflicts, do not connect management ports to the customer's network until after you change the default IP addresses to the customer's values.
Connect console ports to the customer's terminal server, if applicable.	No	Yes

Step	Completed at factory	Completed by you
Connect the customer's data cables to the cluster.	No	Yes
Connect the cabinets to power and power on the components.	No	Yes Power them on in the following order: 1. PDUs 2. Disk shelves and FC-to-SAS bridges, if applicable 3. Nodes
Verify cabling by running the Config Advisor tool.	No	Yes

Choosing the correct installation procedure for your configuration


You must choose the correct installation procedure based on whether you are using FlexArray LUNs and how the storage controllers connect to the storage shelves.

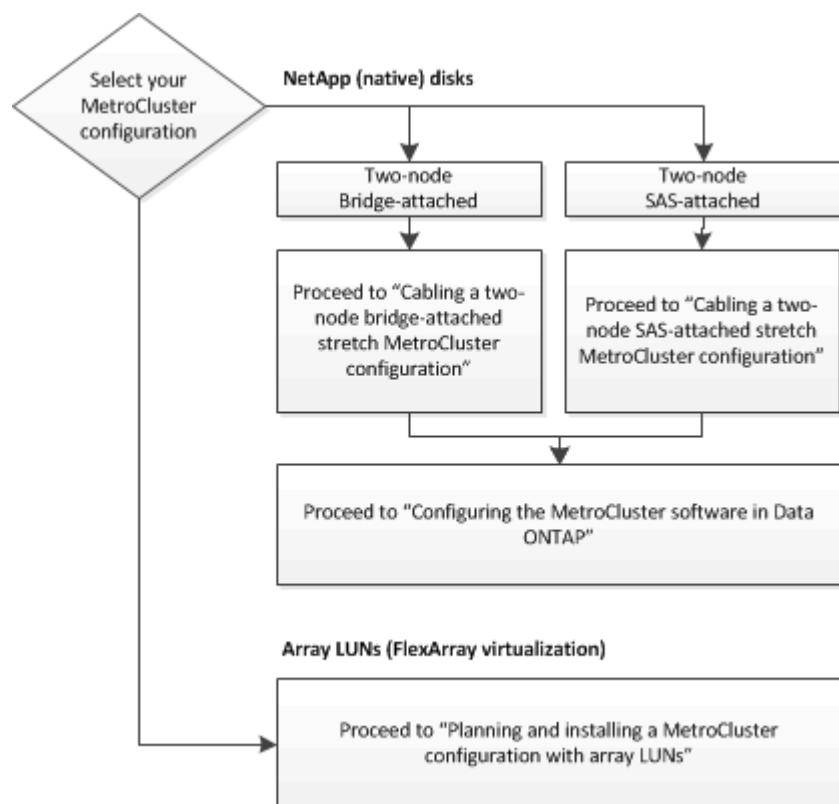

For this installation type...	Use these procedures...
Two-node stretch configuration with FC-to SAS bridges	<ol style="list-style-type: none"> 1. Cabling a two-node bridge-attached stretch MetroCluster configuration 2. Configuring the MetroCluster software in ONTAP
Two-node stretch configuration with direct-attached SAS cabling	<ol style="list-style-type: none"> 1. Cabling a two-node SAS-attached stretch MetroCluster configuration 2. Configuring the MetroCluster software in ONTAP
Installation with array LUNs	Connections in a stretch MetroCluster configurations with array LUNs

Cabling a two-node SAS-attached stretch MetroCluster configuration

The MetroCluster components must be physically installed, cabled, and configured at both geographic sites. The steps are slightly different for a system with native disk shelves as opposed to a system with array LUNs.

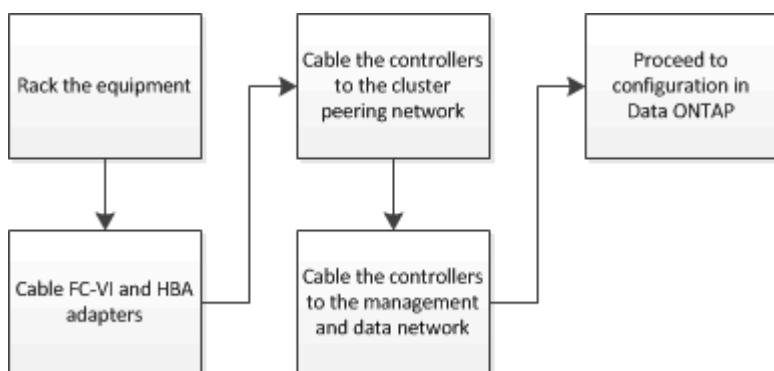

Parts of a two-node SAS-attached stretch MetroCluster configuration

The two-node MetroCluster SAS-attached configuration requires a number of parts, including two single-node clusters in which the storage controllers are directly connected to the storage using SAS cables.

The MetroCluster configuration includes the following key hardware elements:

- Storage controllers

The storage controllers connect directly to the storage using SAS cables.

Each storage controller is configured as a DR partner to a storage controller on the partner site.

- Copper SAS cables can be used for shorter distances.
- Optical SAS cables can be used for longer distances.



In systems using E-Series array LUNs, the storage controllers can be directly connected to the E-Series storage arrays. For other array LUNs, connections via FC switches are required.

[NetApp Interoperability Matrix Tool](#)

In the IMT, you can use the Storage Solution field to select your MetroCluster solution. You use the **Component Explorer** to select the components and ONTAP version to refine your search. You can click **Show Results** to display the list of supported configurations that match the criteria.

- Cluster peering network

The cluster peering network provides connectivity for mirroring of the storage virtual machine (SVM) configuration. The configuration of all SVMs on one cluster is mirrored to the partner cluster.

Required MetroCluster hardware components and naming guidelines for two-node SAS-attached stretch configurations

The MetroCluster configuration requires a variety of hardware components. For convenience and clarity, standard names for components are used throughout the MetroCluster documentation. Also, one site is referred to as Site A and the other site is referred to as Site B.

Supported software and hardware

The hardware and software must be supported for the MetroCluster FC configuration.

[NetApp Hardware Universe](#)

When using AFF systems, all controller modules in the MetroCluster configuration must be configured as AFF systems.

Hardware redundancy in the MetroCluster configuration

Because of the hardware redundancy in the MetroCluster configuration, there are two of each component at each site. The sites are arbitrarily assigned the letters A and B and the individual components are arbitrarily assigned the numbers 1 and 2.

Two single-node ONTAP clusters

The SAS-attached stretch MetroCluster configuration requires two single-node ONTAP clusters.

Naming must be unique within the MetroCluster configuration.

Example names:

- Site A: cluster_A
- Site B: cluster_B

Two storage controller modules

The SAS-attached stretch MetroCluster configuration requires two storage controller modules.

- Naming must be unique within the MetroCluster configuration.
- All controller modules in the MetroCluster configuration must be running the same version of ONTAP.
- All controller modules in a DR group must be of the same model.
- All controller modules in a DR group must use the same FC-VI configuration.

Some controller modules support two options for FC-VI connectivity:

- Onboard FC-VI ports
- An FC-VI card in slot 1 A mix of one controller module using onboard FC-VI ports and another using an add-on FC-VI card is not supported. For example, if one node uses onboard FC-VI configuration, then all other nodes in the DR group must use onboard FC-VI configuration as well.

Example names:

- Site A: controller_A_1
- Site B: controller_B_1

At least four SAS disk shelves (recommended)

The SAS-attached stretch MetroCluster configuration requires at least two SAS disk shelves. Four SAS disk shelves is recommended.

Two shelves are recommended at each site to allow disk ownership on a per-shelf basis. A minimum of one shelf at each site is supported.

Example names:

- Site A:
 - shelf_A_1_1
 - shelf_A_1_2
- Site B:
 - shelf_B_1_1
 - shelf_B_1_2

Mixing IOM12 and IOM 6 modules in a stack

Your version of ONTAP must support shelf mixing. Refer to the Interoperability Matrix Tool (IMT) to see if your version of ONTAP supports shelf mixing. [NetApp Interoperability](#)

For further details on shelf mixing, see: [Hot-adding shelves with IOM12 modules to a stack of shelves with IOM6 modules](#)

Installing and cabling MetroCluster components for two-node SAS-attached stretch configurations

The storage controllers must be cabled to the storage and to each other. The storage controllers must also be cabled to the data and management network.

Before you begin any procedure in this document

The following overall requirements must be met before completing this task:

- You must have familiarized yourself with the considerations and best practices for installing and cabling disk shelves for your disk shelf model.
- All components must be supported.

[NetApp Interoperability Matrix Tool](#)

In the IMT, you can use the Storage Solution field to select your MetroCluster solution. You use the **Component Explorer** to select the components and ONTAP version to refine your search. You can click **Show Results** to display the list of supported configurations that match the criteria.

About this task

- The terms node and controller are used interchangeably.

Racking the hardware components

If you have not received the equipment already installed in cabinets, you must rack the components.

This task must be performed on both MetroCluster sites.

Steps

1. Plan the positioning of the MetroCluster components.

The amount of rack space needed depends on the platform model of the storage controllers, the switch types, and the number of disk shelf stacks in your configuration.

2. Properly ground yourself.
3. Install the storage controllers in the rack or cabinet.

[AFF and FAS Documentation Center](#)

4. Install the disk shelves, daisy-chain the disk shelves in each stack, power them on, and set the shelf IDs.

See the appropriate guide for your disk shelf model for information about daisy-chaining disk shelves and setting shelf IDs.



Shelf IDs must be unique for each SAS disk shelf within each MetroCluster DR group (including both sites). When manually setting shelf IDs, you must power-cycle the disk shelf.

Cabling the controllers to each other and the storage shelves

The controller FC-VI adapters must be cabled directly to each other. The controller SAS ports must be cabled to both the remote and local storage stacks.

This task must be performed on both MetroCluster sites.

Steps

1. Cable the FC-VI ports.




The above illustration is representative. The specific FC-VI ports vary by controller module.

- FAS8200 and AFF A300 controller modules can be ordered with one of two options for FC-VI connectivity:
 - Onboard ports 0e and 0f configured in FC-VI mode.
 - Ports 1a and 1b on an FC-VI card in slot 1.
- AFF A700 and FAS9000 storage systems controller modules use four FC-VI ports each.
- AFF A400 and FAS8300 storage system controller modules use FC-VI ports 2a and 2b.

2. Cable the SAS ports.

The following illustration shows the connections. Your port usage might be different, depending on the available SAS and FC-VI ports on the controller module.

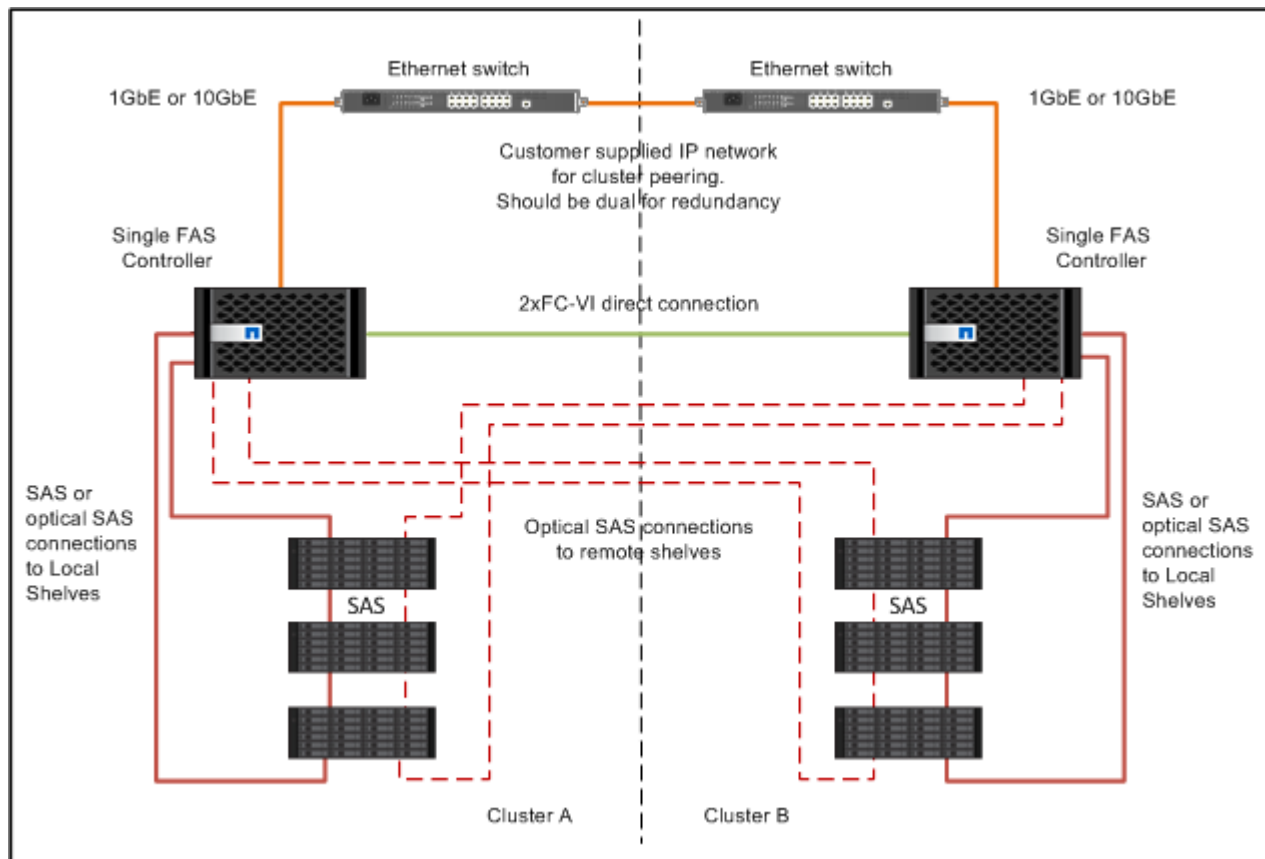

Cabling the cluster peering connections

You must cable the controller module ports used for cluster peering so that they have connectivity with the cluster on the partner site.

This task must be performed on each controller module in the MetroCluster configuration.

At least two ports on each controller module should be used for cluster peering.

The recommended minimum bandwidth for the ports and network connectivity is 1 GbE.

Steps

1. Identify and cable at least two ports for cluster peering and verify they have network connectivity with the partner cluster.

Cluster peering can be done on dedicated ports or on data ports. Using dedicated ports provides higher throughput for the cluster peering traffic.

[Cluster and SVM peering express configuration](#)

Cabling the management and data connections

You must cable the management and data ports on each storage controller to the site networks.

This task must be repeated for each new controller at both MetroCluster sites.

You can connect the controller and cluster switch management ports to existing switches in your network or to new dedicated network switches such as NetApp CN1601 cluster management switches.


Steps

1. Cable the controller's management and data ports to the management and data networks at the local site.

[AFF and FAS Documentation Center](#)

Cabling a two-node bridge-attached stretch MetroCluster configuration

The MetroCluster components must be physically installed, cabled, and configured at both geographic sites. The steps are slightly different for a system with native disk shelves as opposed to a system with array LUNs.

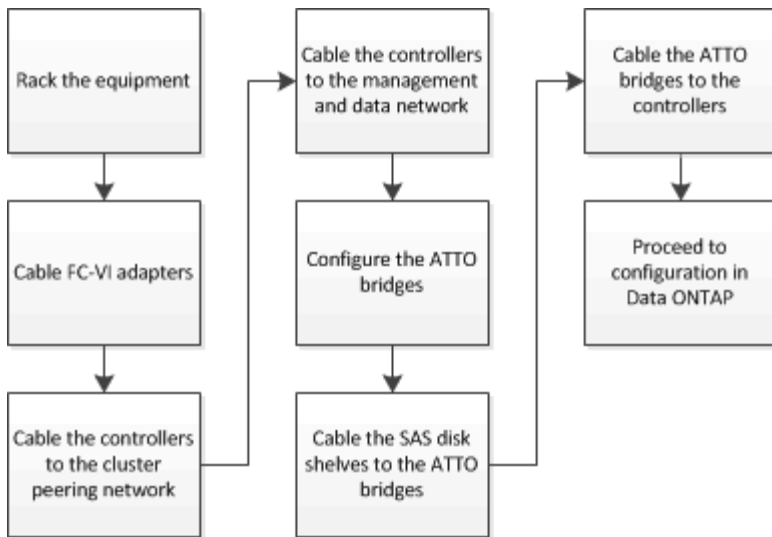

Parts of a two-node bridge-attached stretch MetroCluster configuration

As you plan your MetroCluster configuration, you should understand the parts of the configuration and how they work together.

The MetroCluster configuration includes the following key hardware elements:

- Storage controllers

The storage controllers are not connected directly to the storage but connected to FC-to-SAS bridges. The storage controllers are connected to each other by FC cables between each controller's FC-VI adapters.

Each storage controller is configured as a DR partner to a storage controller on the partner site.


- FC-to-SAS bridges

The FC-to-SAS bridges connect the SAS storage stacks to the FC initiator ports on the controllers, providing bridging between the two protocols.

- Cluster peering network

The cluster peering network provides connectivity for mirroring of the storage virtual machine (SVM) configuration. The configuration of all SVMs on one cluster is mirrored to the partner cluster.

The following illustration shows a simplified view of the MetroCluster configuration. For some connections, a single line represents multiple, redundant connections between the components. Data and management network connections are not shown.

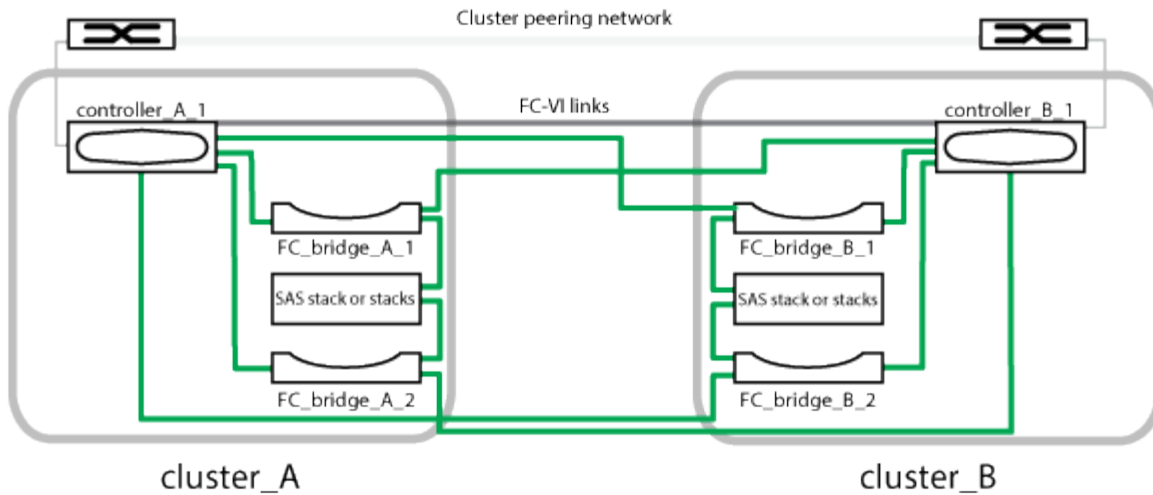

- The configuration consists of two single-node clusters.
- Each site has one or more stacks of SAS storage.



SAS shelves in MetroCluster configurations are not supported with ACP cabling.

Additional storage stacks are supported, but only one is shown at each site.

Required MetroCluster hardware components and naming conventions for two-node bridge-attached stretch configurations

When planning your MetroCluster configuration, you must understand the required and supported hardware and software components. For convenience and clarity, you should also understand the naming conventions used for components in examples throughout the documentation. For example, one site is referred to as Site A and the other site is referred to as Site B.

Supported software and hardware

The hardware and software must be supported for the MetroCluster FC configuration.

[NetApp Hardware Universe](#)

When using AFF systems, all controller modules in the MetroCluster configuration must be configured as AFF systems.

Hardware redundancy in the MetroCluster configuration

Because of the hardware redundancy in the MetroCluster configuration, there are two of each component at each site. The sites are arbitrarily assigned the letters A and B and the individual components are arbitrarily assigned the numbers 1 and 2.

Requirement for two single-node ONTAP clusters

The bridge-attached stretch MetroCluster configuration requires two single-node ONTAP clusters.

Naming must be unique within the MetroCluster configuration.

Example names:

- Site A: cluster_A
- Site B: cluster_B

Requirement for two storage controller modules

The bridge-attached stretch MetroCluster configuration requires two storage controller modules.

The controllers must meet the following requirements:

- Naming must be unique within the MetroCluster configuration.
- All controller modules in the MetroCluster configuration must be running the same version of ONTAP.
- All controller modules in a DR group must be of the same model.
- All controller modules in a DR group must use the same FC-VI configuration.

Some controller modules support two options for FC-VI connectivity:

- Onboard FC-VI ports
- An FC-VI card in slot 1 A mix of one controller module using onboard FC-VI ports and another using an add-on FC-VI card is not supported. For example, if one node uses onboard FC-VI configuration, then all other nodes in the DR group must use onboard FC-VI configuration as well.

Example names:

- Site A: controller_A_1
- Site B: controller_B_1

Requirement for FC-to-SAS bridges

The bridge-attached stretch MetroCluster configuration requires two or more FC-to-SAS bridges at each site.

These bridges connect the SAS disk shelves to the controller modules.



FibreBridge 6500N bridges are not supported in configurations running ONTAP 9.8 and later.

- FibreBridge 7600N and 7500N bridges support up to four SAS stacks.
- FibreBridge 6500N bridges support only one SAS stack.
- Each stack can use different models of IOM, but all shelves within a stack must use the same model.

The supported IOM models depend on the ONTAP version you are running.

- Naming must be unique within the MetroCluster configuration.

The suggested names used as examples in this guide identify the controller module that the bridge connects to and the port.

Example names:

- Site A:
 - bridge_A_1_*port-number*
 - bridge_A_2_*port-number*
- Site B:
 - bridge_B_1_*port-number*
 - bridge_B_2_*port-number*

Requirement for at least four SAS shelves (recommended)

The bridge-attached stretch MetroCluster configuration requires at least two SAS shelves. However, two shelves are recommended at each site to allow disk ownership on a per-shelf basis, for a total of four SAS shelves.

A minimum of one shelf at each site is supported.

Example names:

- Site A:
 - shelf_A_1_1
 - shelf_A_1_2
- Site B:
 - shelf_B_1_1
 - shelf_B_1_2

Mixing IOM12 and IOM 6 modules in a stack

Your version of ONTAP must support shelf mixing. Refer to the Interoperability Matrix Tool (IMT) to see if your version of ONTAP supports shelf mixing. [NetApp Interoperability](#)

For further details on shelf mixing, see: [Hot-adding shelves with IOM12 modules to a stack of shelves with IOM6 modules](#)

Information gathering worksheet for FC-to-SAS bridges

Before beginning to configure the MetroCluster sites, you should gather required configuration information.

Site A, FC-to-SAS bridge 1 (FC_bridge_A_1a)

Each SAS stack requires at least two FC-to-SAS bridges.

Each bridge connects to Controller_A_1_*port-number* and Controller_B_1_*port-number*.

Site A	Your value
Bridge_A_1a IP address	

Site A	Your value
Bridge_A_1a Username	
Bridge_A_1a Password	

Site A, FC-to-SAS bridge 2 (FC_bridge_A_1b)

Each SAS stack requires at least two FC-to-SAS bridges.

Each bridge connects to Controller_A_1_*port-number* and Controller_B_1_*port-number*.

Site A	Your value
Bridge_A_1b IP address	
Bridge_A_1b Username	
Bridge_A_1b Password	

Site B, FC-to-SAS bridge 1 (FC_bridge_B_1a)

Each SAS stack requires at least two FC-to-SAS bridges.

Each bridge connects to Controller_A_1_*port-number* and Controller_B_1_*port-number*.

Site B	Your value
Bridge_B_1a IP address	
Bridge_B_1a Username	
Bridge_B_1a Password	

Site B, FC-to-SAS bridge 2 (FC_bridge_B_1b)

Each SAS stack requires at least two FC-to-SAS bridges.

Each bridge connects to Controller_A_1_*port-number* and Controller_B_1_*port-number*.

Site B	Your value
Bridge_B_1b IP address	
Bridge_B_1b Username	
Bridge_B_1b Password	

Installing and cabling MetroCluster components

The storage controllers must be cabled to the storage and to each other. The storage controllers must also be cabled to the data and management networks.

Racking the hardware components

If you have not received the equipment already installed in cabinets, you must rack the components.

This task must be performed on both MetroCluster sites.

Steps

1. Plan out the positioning of the MetroCluster components.

The rack space depends on the platform model of the storage controllers, the switch types, and the number of disk shelf stacks in your configuration.

2. Properly ground yourself.
3. Install the storage controllers in the rack or cabinet.

[AFF and FAS Documentation Center](#)

4. Install the disk shelves, power them on, and set the shelf IDs.
 - You must power-cycle each disk shelf.
 - Shelf IDs must be unique for each SAS disk shelf within each MetroCluster DR group (including both sites).
5. Install each FC-to-SAS bridge:
 - a. Secure the “L” brackets on the front of the bridge to the front of the rack (flush-mount) with the four screws.

The openings in the bridge “L” brackets are compliant with rack standard ETA-310-X for 19-inch (482.6 mm) racks.

For more information and an illustration of the installation, see the *ATTO FibreBridge Installation and Operation Manual for your bridge model*.

- b. Connect each bridge to a power source that provides a proper ground.
- c. Power on each bridge.



For maximum resiliency, bridges that are attached to the same stack of disk shelves must be connected to different power sources.

The bridge Ready LED might take up to 30 seconds to illuminate, indicating that the bridge has completed its power-on self test sequence.

Cabling the controllers to each other

Each controller’s FC-VI adapters must be cabled directly to its partner.

Steps

1. Cable the FC-VI ports.



The above illustration is representative. The specific FC-VI ports vary by controller module.

- AFF A300 and FAS8200 controller modules can be ordered with one of two options for FC-VI connectivity:
 - Onboard ports 0e and 0f configured in FC-VI mode.
 - Ports 1a and 1b on an FC-VI card in slot 1.
- AFF A700 and FAS9000 storage systems controller modules use four FC-VI ports each.

Cabling the cluster peering connections

You must cable the controller module ports used for cluster peering so that they have connectivity with the cluster on the partner site.

This task must be performed on each controller module in the MetroCluster configuration.

At least two ports on each controller module should be used for cluster peering.

The recommended minimum bandwidth for the ports and network connectivity is 1 GbE.

Steps

1. Identify and cable at least two ports for cluster peering and verify they have network connectivity with the partner cluster.

Cluster peering can be done on dedicated ports or on data ports. Using dedicated ports provides higher throughput for the cluster peering traffic.

[Cluster and SVM peering express configuration](#)

Cabling the management and data connections

You must cable the management and data ports on each storage controller to the site networks.

This task must be repeated for each new controller at both MetroCluster sites.

You can connect the controller and cluster switch management ports to existing switches in your network or to new dedicated network switches such as NetApp CN1601 cluster management switches.

Steps

1. Cable the controller's management and data ports to the management and data networks at the local site.

[AFF and FAS Documentation Center](#)

Installing FC-to-SAS bridges and SAS disk shelves

You install and cable ATTO FibreBridge bridges and SAS disk shelves when adding new storage to the configuration.


For systems received from the factory, the FC-to-SAS bridges are preconfigured and do not require additional configuration.

This procedure is written with the assumption that you are using the recommended bridge management interfaces: the ATTO ExpressNAV GUI and ATTO QuickNAV utility.

You use the ATTO ExpressNAV GUI to configure and manage a bridge, and to update the bridge firmware. You use the ATTO QuickNAV utility to configure the bridge Ethernet management 1 port.


You can use other management interfaces instead, if needed, such as a serial port or Telnet to configure and manage a bridge and to configure the Ethernet management 1 port, and FTP to update the bridge firmware.

This procedure uses the following workflow:

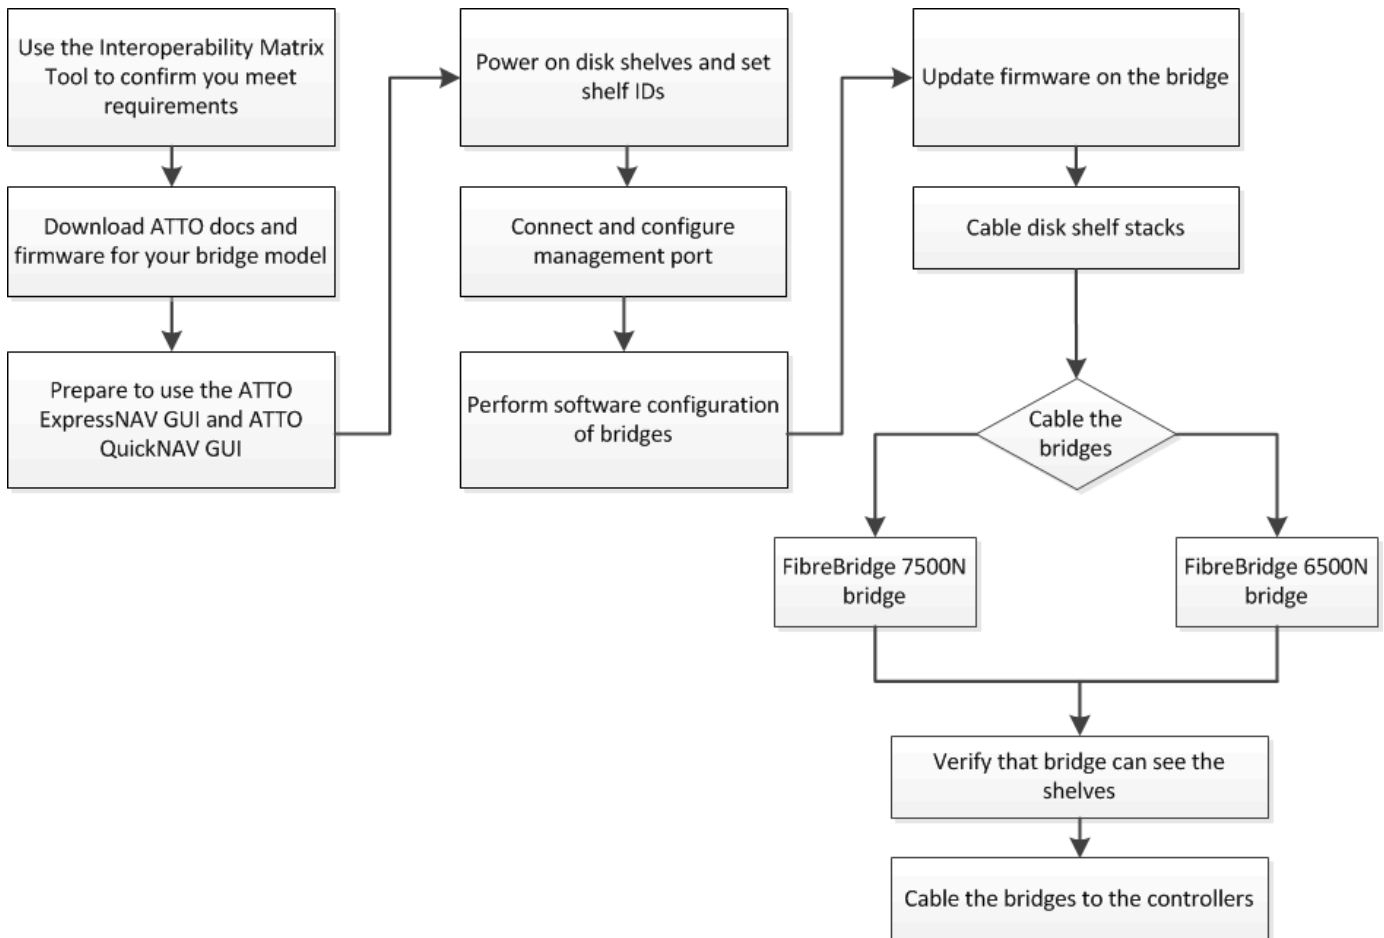

Configuring the MetroCluster software in ONTAP

You must set up each node in the MetroCluster configuration in ONTAP, including the node-level configurations and the configuration of the nodes into two sites. You must also implement the MetroCluster relationship between the two sites.

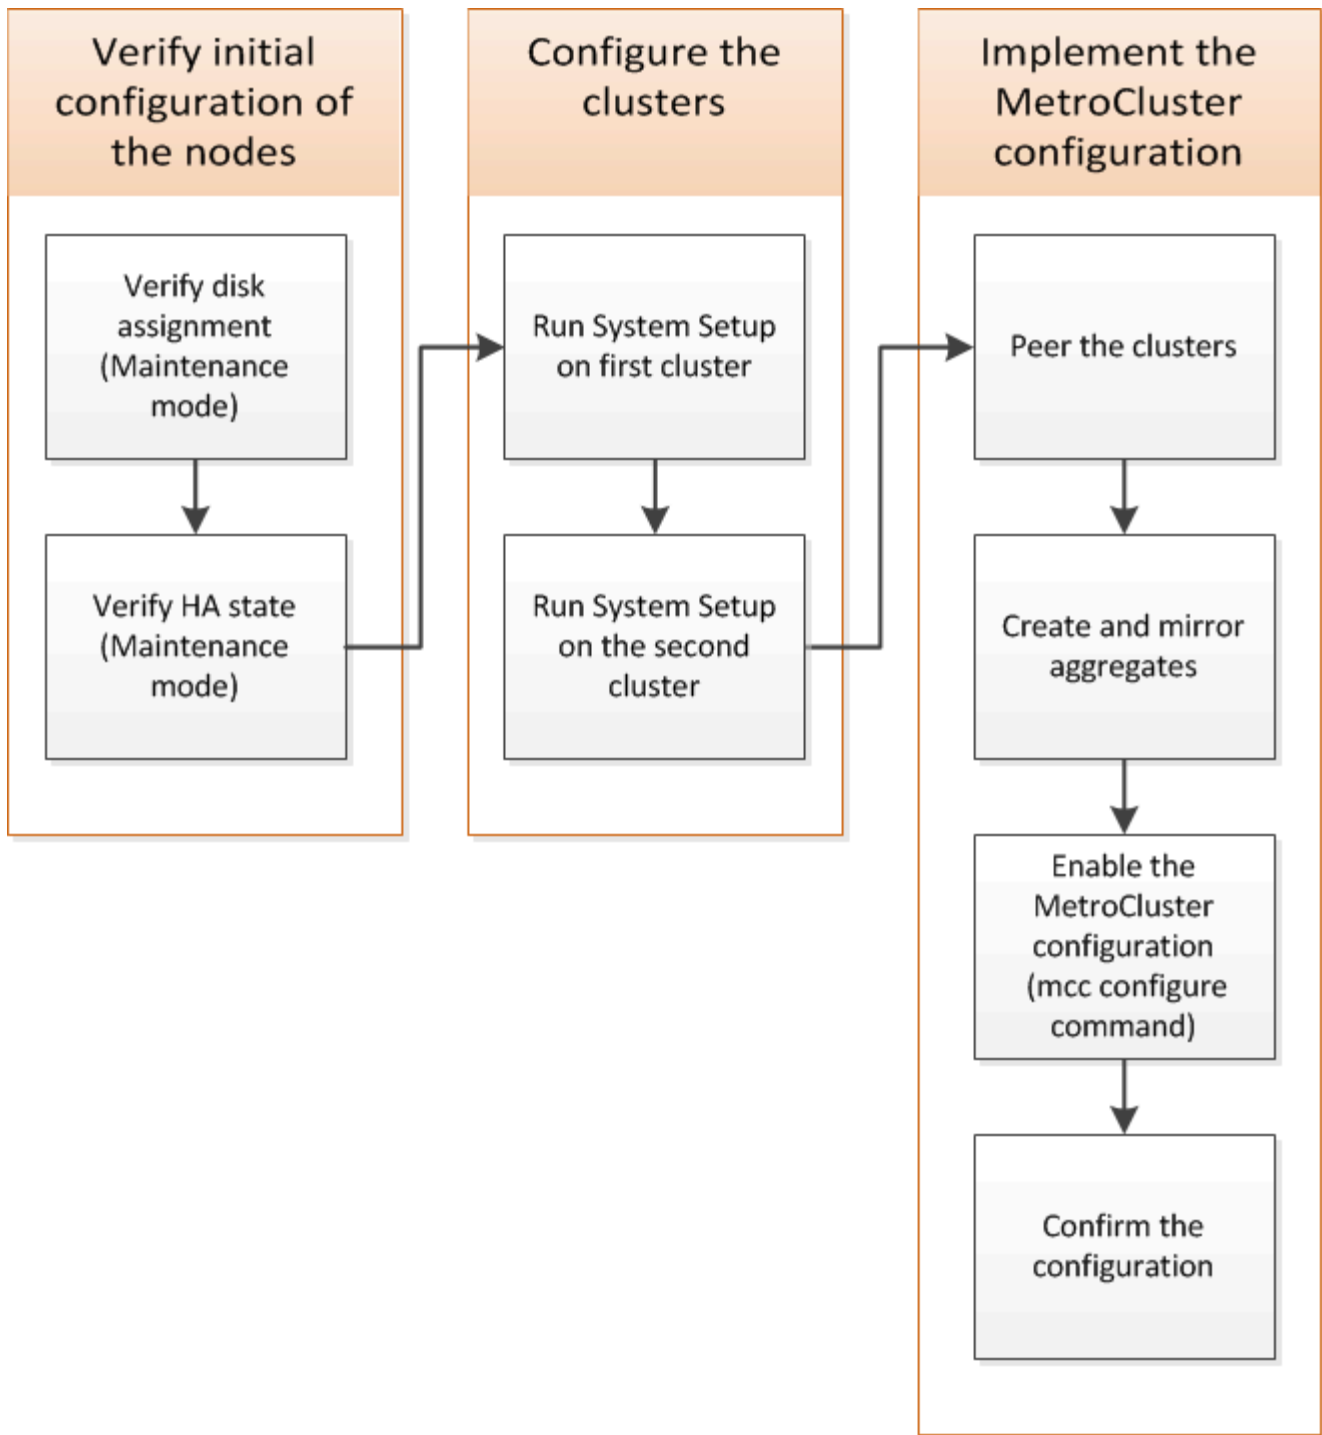

Gathering required information

You need to gather the required IP addresses for the controller modules before you begin the configuration process.

IP network information worksheet for site A

You must obtain IP addresses and other network information for the first MetroCluster site (site A) from your network administrator before you configure the system.

Site A cluster creation information

When you first create the cluster, you need the following information:

Type of information	Your values
Cluster nameExample used in this guide: site_A	
DNS domain	
DNS name servers	
Location	
Administrator password	

Site A node information

For each node in the cluster, you need a management IP address, a network mask, and a default gateway.

Node	Port	IP address	Network mask	Default gateway
Node 1 Example used in this guide: controller_A_1				
Node 2Not required if using two-node MetroCluster configuration (one node at each site). Example used in this guide: controller_A_2				

Site A LIFs and ports for cluster peering

For each node in the cluster, you need the IP addresses of two intercluster LIFs, including a network mask and a default gateway. The intercluster LIFs are used to peer the clusters.

Node	Port	IP address of intercluster LIF	Network mask	Default gateway
Node 1 IC LIF 1				
Node 1 IC LIF 2				

Site A time server information

You must synchronize the time, which requires one or more NTP time servers.

Node	Host name	IP address	Network mask	Default gateway
NTP server 1				
NTP server 2				

Site A AutoSupport information

You must configure AutoSupport on each node, which requires the following information:

Type of information		Your values
From email address		
Mail hosts	IP addresses or names	
Transport protocol	HTTP, HTTPS, or SMTP	
	Proxy server	
Recipient email addresses or distribution lists	Full-length messages	
	Concise messages	
	Partners	

Site A SP information

You must enable access to the Service Processor (SP) of each node for troubleshooting and maintenance, which requires the following network information for each node:

Node	IP address	Network mask	Default gateway
Node 1			

IP network information worksheet for site B

You must obtain IP addresses and other network information for the second MetroCluster site (site B) from your network administrator before you configure the system.

Site B cluster creation information

When you first create the cluster, you need the following information:

Type of information	Your values
Cluster nameExample used in this guide: site_B	
DNS domain	
DNS name servers	
Location	
Administrator password	

Site B node information

For each node in the cluster, you need a management IP address, a network mask, and a default gateway.

Node	Port	IP address	Network mask	Default gateway
Node 1 Example used in this guide: controller_B_1				
Node 2Not required for two-node MetroCluster configurations (one node at each site). Example used in this guide: controller_B_2				

Site B LIFs and ports for cluster peering

For each node in the cluster, you need the IP addresses of two intercluster LIFs, including a network mask and a default gateway. The intercluster LIFs are used to peer the clusters.

Node	Port	IP address of intercluster LIF	Network mask	Default gateway
Node 1 IC LIF 1				
Node 1 IC LIF 2				

Site B time server information

You must synchronize the time, which requires one or more NTP time servers.

Node	Host name	IP address	Network mask	Default gateway
NTP server 1				
NTP server 2				

Site B AutoSupport information

You must configure AutoSupport on each node, which requires the following information:

Type of information		Your values
From email address		
Mail hosts	IP addresses or names	
Transport protocol	HTTP, HTTPS, or SMTP	
	Proxy server	
Recipient email addresses or distribution lists	Full-length messages	
	Concise messages	
	Partners	

Site B SP information

You must enable access to the Service Processor (SP) of each node for troubleshooting and maintenance, which requires the following network information for each node:

Node	IP address	Network mask	Default gateway
Node 1 (controller_B_1)			

Similarities and differences between standard cluster and MetroCluster configurations

The configuration of the nodes in each cluster in a MetroCluster configuration is similar to that of nodes in a standard cluster.

The MetroCluster configuration is built on two standard clusters. Physically, the configuration must be symmetrical, with each node having the same hardware configuration, and all of the MetroCluster components must be cabled and configured. However, the basic software configuration for nodes in a MetroCluster configuration is the same as that for nodes in a standard cluster.

Configuration step	Standard cluster configuration	MetroCluster configuration
Configure management, cluster, and data LIFs on each node.	Same in both types of clusters	
Configure the root aggregate.	Same in both types of clusters	
Set up the cluster on one node in the cluster.	Same in both types of clusters	
Join the other node to the cluster.	Same in both types of clusters	
Create a mirrored root aggregate.	Optional	Required
Peer the clusters.	Optional	Required
Enable the MetroCluster configuration.	Does not apply	Required

Restoring system defaults and configuring the HBA type on a controller module

Unresolved directive in <stdin> - include::.../_include/steps_restore_defaults_and_configure_hbas.adoc[]

Configuring FC-VI ports on a X1132A-R6 quad-port card on FAS8020 systems

If you are using the X1132A-R6 quad-port card on a FAS8020 system, you can enter Maintenance mode to configure the 1a and 1b ports for FC-VI and initiator usage. This is not required on MetroCluster systems received from the factory, in which the ports are set appropriately for your configuration.

This task must be performed in Maintenance mode.



Converting an FC port to an FC-VI port with the `ucadmin` command is only supported on the FAS8020 and AFF 8020 systems. Converting FC ports to FCVI ports is not supported on any other platform.

Steps

1. Disable the ports:

```
storage disable adapter 1a
```

```
storage disable adapter 1b
```

```
*> storage disable adapter 1a
Jun 03 02:17:57 [controller_B_1:fc.adapter.offlining:info]: Offlining
Fibre Channel adapter 1a.
Host adapter 1a disable succeeded
Jun 03 02:17:57 [controller_B_1:fc.adapter.offline:info]: Fibre Channel
adapter 1a is now offline.
*> storage disable adapter 1b
Jun 03 02:18:43 [controller_B_1:fc.adapter.offlining:info]: Offlining
Fibre Channel adapter 1b.
Host adapter 1b disable succeeded
Jun 03 02:18:43 [controller_B_1:fc.adapter.offline:info]: Fibre Channel
adapter 1b is now offline.
*>
```

2. Verify that the ports are disabled:

ucadmin show

```
*> ucadmin show
```

Adapter	Current Mode	Current Type	Pending Mode	Pending Type	Admin Status
...					
1a	fc	initiator	-	-	offline
1b	fc	initiator	-	-	offline
1c	fc	initiator	-	-	online
1d	fc	initiator	-	-	online

3. Set the a and b ports to FC-VI mode:

ucadmin modify -adapter 1a -type fcvi

The command sets the mode on both ports in the port pair, 1a and 1b (even though only 1a is specified in the command).

```
*> ucadmin modify -t fcvi 1a
Jun 03 02:19:13 [controller_B_1:ucm.type.changed:info]: FC-4 type has
changed to fcvi on adapter 1a. Reboot the controller for the changes to
take effect.
Jun 03 02:19:13 [controller_B_1:ucm.type.changed:info]: FC-4 type has
changed to fcvi on adapter 1b. Reboot the controller for the changes to
take effect.
```

4. Confirm that the change is pending:

ucadmin show

```
*> ucadmin show
```

Adapter	Current Mode	Current Type	Pending Mode	Pending Type	Admin Status
...					
1a	fc	initiator	-	fcvi	offline
1b	fc	initiator	-	fcvi	offline
1c	fc	initiator	-	-	online
1d	fc	initiator	-	-	online

5. Shut down the controller, and then reboot into Maintenance mode.
6. Confirm the configuration change:

ucadmin show local

Node	Adapter	Mode	Type	Mode	Type	Status
...						
controller_B_1	1a	fc	fcvi	-	-	online
controller_B_1	1b	fc	fcvi	-	-	online
controller_B_1	1c	fc	initiator	-	-	online
controller_B_1	1d	fc	initiator	-	-	online

6 entries were displayed.

Verifying disk assignment in Maintenance mode in a two-node configuration

Before fully booting the system to ONTAP, you can optionally boot the system to Maintenance mode and verify the disk assignment on the nodes. The disks should be assigned to create a fully symmetric configuration with both sites owning their own disk shelves and serving data, where each node and each pool have an equal number of mirrored disks assigned to them.

The system must be in Maintenance mode.

New MetroCluster systems have disk assignment completed prior to shipment.

The following table shows example pool assignments for a MetroCluster configuration. Disks are assigned to pools on a per-shelf basis.

Disk shelf (example name)...	At site...	Belongs to...	And is assigned to that node's...
Disk shelf 1 (shelf_A_1_1)	Site A	Node A 1	Pool 0
Disk shelf 2 (shelf_A_1_3)			
Disk shelf 3 (shelf_B_1_1)		Node B 1	Pool 1
Disk shelf 4 (shelf_B_1_3)			
Disk shelf 9 (shelf_B_1_2)	Site B	Node B 1	Pool 0
Disk shelf 10 (shelf_B_1_4)			
Disk shelf 11 (shelf_A_1_2)		Node A 1	Pool 1
Disk shelf 12 (shelf_A_1_4)			

If your configuration includes DS460C disk shelves, you should manually assign the disks using the following guidelines for each 12-disk drawer:

Assign these disks in the drawer...	To this node and pool...
1 - 6	Local node's pool 0
7 - 12	DR partner's pool 1

This disk assignment pattern minimizes the effect on an aggregate if a drawer goes offline.

Steps

1. If your system was received from the factory, confirm the shelf assignments:

```
disk show -v
```

2. If necessary, you can explicitly assign disks on the attached disk shelves to the appropriate pool by using the `disk assign` command.

Disk shelves at the same site as the node are assigned to pool 0 and disk shelves located at the partner site are assigned to pool 1. You should assign an equal number of shelves to each pool.

- a. If you have not done so, boot each system into Maintenance mode.
- b. On the node on site A, systematically assign the local disk shelves to pool 0 and the remote disk shelves to pool 1:

```
disk assign -shelf disk_shelf_name -p pool
```

If storage controller node_A_1 has four shelves, you issue the following commands:

```
*> disk assign -shelf shelf_A_1_1 -p 0
*> disk assign -shelf shelf_A_1_3 -p 0

*> disk assign -shelf shelf_A_1_2 -p 1
*> disk assign -shelf shelf_A_1_4 -p 1
```

- c. On the node at the remote site (site B), systematically assign its local disk shelves to pool 0 and its remote disk shelves to pool 1:

disk assign -shelf disk_shelf_name -p pool

If storage controller node_B_1 has four shelves, you issue the following commands:

```
*> disk assign -shelf shelf_B_1_2 -p 0
*> disk assign -shelf shelf_B_1_4 -p 0

*> disk assign -shelf shelf_B_1_1 -p 1
*> disk assign -shelf shelf_B_1_3 -p 1
```

- d. Show the disk shelf IDs and bays for each disk:

disk show -v

Verifying the HA state of components

In a stretch MetroCluster configuration that is not preconfigured at the factory, you must verify that the HA state of the controller and chassis component is set to `mcc-2n` so that they boot up properly. For systems received from the factory, this value is preconfigured and you do not need to verify it.

The system must be in Maintenance mode.

Steps

1. In Maintenance mode, view the HA state of the controller module and chassis:

ha-config show

The controller module and chassis should show the value `mcc-2n`.

2. If the displayed system state of the controller is not `mcc-2n`, set the HA state for the controller:

ha-config modify controller mcc-2n

3. If the displayed system state of the chassis is not `mcc-2n`, set the HA state for the chassis:

ha-config modify chassis mcc-2n .. Halt the node. .. Wait until the node is back at the **LOADER** prompt.

4. Repeat these steps on each node in the MetroCluster configuration.

Setting up ONTAP in a two-node MetroCluster configuration

In a two-node MetroCluster configuration, on each cluster you must boot up the node, exit the Cluster Setup wizard, and use the `cluster setup` command to configure the node into a single-node cluster.

You must not have configured the Service Processor.

This task is for two-node MetroCluster configurations using native NetApp storage.

New MetroCluster systems are preconfigured; you do not need to perform these steps. However, you should configure AutoSupport.

This task must be performed on both clusters in the MetroCluster configuration.

For more general information about setting up ONTAP, see the [Software Setup Guide](#)

Steps

1. Power on the first node.



You must repeat this step on the node at the disaster recovery (DR) site.

The node boots, and then the Cluster Setup wizard starts on the console, informing you that AutoSupport will be enabled automatically.

```
::> Welcome to the cluster setup wizard.
```

You can enter the following commands at any time:

```
"help" or "?" - if you want to have a question clarified,  
"back" - if you want to change previously answered questions, and  
"exit" or "quit" - if you want to quit the cluster setup wizard.  
Any changes you made before quitting will be saved.
```

You can return to cluster setup at any time by typing "cluster setup".
To accept a default or omit a question, do not enter a value.

This system will send event messages and periodic reports to NetApp
Technical
Support. To disable this feature, enter
autosupport modify -support disable
within 24 hours.

Enabling AutoSupport can significantly speed problem determination and
resolution, should a problem occur on your system.
For further information on AutoSupport, see:
<http://support.netapp.com/autosupport/>

```
Type yes to confirm and continue {yes}: yes
```

```
Enter the node management interface port [e0M]:
```

```
Enter the node management interface IP address [10.101.01.01]:
```

```
Enter the node management interface netmask [101.010.101.0]:
```

```
Enter the node management interface default gateway [10.101.01.0]:
```

```
Do you want to create a new cluster or join an existing cluster?  
{create, join}:
```

2. Create a new cluster: **create**
3. Choose whether the node is to be used as a single node cluster.

```
Do you intend for this node to be used as a single node cluster? {yes,  
no} [yes]:
```

4. Accept the system default **yes** by pressing Enter, or enter your own values by typing **no**, and then pressing Enter.
5. Follow the prompts to complete the Cluster Setup wizard, pressing Enter to accept the default values or

typing your own values and then pressing Enter.

The default values are determined automatically based on your platform and network configuration.

6. After you complete the Cluster Setup wizard and it exits, verify that the cluster is active and the first node is healthy:

cluster show

The following example shows a cluster in which the first node (cluster1-01) is healthy and eligible to participate:

```
cluster1::> cluster show
Node                      Health  Eligibility
-----
cluster1-01              true    true
```

If it becomes necessary to change any of the settings you entered for the admin SVM or node SVM, you can access the Cluster Setup wizard by using the **cluster setup** command.

Configuring the clusters into a MetroCluster configuration

You must peer the clusters, mirror the root aggregates, create a mirrored data aggregate, and then issue the command to implement the MetroCluster operations.

Peering the clusters

The clusters in the MetroCluster configuration must be in a peer relationship so that they can communicate with each other and perform the data mirroring essential to MetroCluster disaster recovery.

Related information

[Cluster and SVM peering express configuration](#)

[Considerations when using dedicated ports](#)

[Considerations when sharing data ports](#)

Configuring intercluster LIFs

You must create intercluster LIFs on ports used for communication between the MetroCluster partner clusters. You can use dedicated ports or ports that also have data traffic.

Configuring intercluster LIFs on dedicated ports

You can configure intercluster LIFs on dedicated ports. Doing so typically increases the available bandwidth for replication traffic.

Steps

- 1. List the ports in the cluster:

```
network port show
```

For complete command syntax, see the man page.

The following example shows the network ports in `cluster01`:

```
cluster01::> network port show
```

						Speed
(Mbps)						
Node	Port	IPspace	Broadcast Domain	Link	MTU	Admin/Oper
-----	-----	-----	-----	-----	-----	
cluster01-01						
	e0a	Cluster	Cluster	up	1500	auto/1000
	e0b	Cluster	Cluster	up	1500	auto/1000
	e0c	Default	Default	up	1500	auto/1000
	e0d	Default	Default	up	1500	auto/1000
	e0e	Default	Default	up	1500	auto/1000
	e0f	Default	Default	up	1500	auto/1000
cluster01-02						
	e0a	Cluster	Cluster	up	1500	auto/1000
	e0b	Cluster	Cluster	up	1500	auto/1000
	e0c	Default	Default	up	1500	auto/1000
	e0d	Default	Default	up	1500	auto/1000
	e0e	Default	Default	up	1500	auto/1000
	e0f	Default	Default	up	1500	auto/1000

- 2. Determine which ports are available to dedicate to intercluster communication:

```
network interface show -fields home-port,curr-port
```

For complete command syntax, see the man page.

The following example shows that ports `e0e` and `e0f` have not been assigned LIFs:

```
cluster01::> network interface show -fields home-port,curr-port
vserver lif                home-port curr-port

Cluster cluster01-01_clus1  e0a      e0a
Cluster cluster01-01_clus2  e0b      e0b
Cluster cluster01-02_clus1  e0a      e0a
Cluster cluster01-02_clus2  e0b      e0b
cluster01
    cluster_mgmt            e0c      e0c
cluster01
    cluster01-01_mgmt1      e0c      e0c
cluster01
    cluster01-02_mgmt1      e0c      e0c
```

3. Create a failover group for the dedicated ports:

```
network interface failover-groups create -vserver system_SVM -failover-group
failover_group -targets physical_or_logical_ports
```

The following example assigns ports e0e and e0f to the failover group intercluster01 on the system SVMcluster01:

```
cluster01::> network interface failover-groups create -vserver cluster01
-failover-group
intercluster01 -targets
cluster01-01:e0e,cluster01-01:e0f,cluster01-02:e0e,cluster01-02:e0f
```

4. Verify that the failover group was created:

```
network interface failover-groups show
```

For complete command syntax, see the man page.

```

cluster01::> network interface failover-groups show

```

Vserver	Group	Failover Targets
Cluster	Cluster	cluster01-01:e0a, cluster01-01:e0b, cluster01-02:e0a, cluster01-02:e0b
cluster01	Default	cluster01-01:e0c, cluster01-01:e0d, cluster01-02:e0c, cluster01-02:e0d, cluster01-01:e0e, cluster01-01:e0f cluster01-02:e0e, cluster01-02:e0f
	intercluster01	cluster01-01:e0e, cluster01-01:e0f cluster01-02:e0e, cluster01-02:e0f

5. Create intercluster LIFs on the system SVM and assign them to the failover group.

ONTAP version	Command
9.6 and later	<code>network interface create -vserver system_SVM -lif LIF_name -service-policy default-intercluster -home-node node -home -port port -address port_IP -netmask netmask -failover -group failover_group</code>
9.5 and earlier	<code>network interface create -vserver system_SVM -lif LIF_name -role intercluster -home-node node -home-port port -address port_IP -netmask netmask -failover-group failover_group</code>

For complete command syntax, see the man page.

+ The following example creates intercluster LIFs cluster01_icl01 and cluster01_icl02 in the failover group intercluster01:

+


```
cluster01::> network interface create -vserver cluster01 -lif
cluster01_icl01 -service-
policy default-intercluster -home-node cluster01-01 -home-port e0e
-address 192.168.1.201
-netmask 255.255.255.0 -failover-group intercluster01

cluster01::> network interface create -vserver cluster01 -lif
cluster01_icl02 -service-
policy default-intercluster -home-node cluster01-02 -home-port e0e
-address 192.168.1.202
-netmask 255.255.255.0 -failover-group intercluster01
```

1. Verify that the intercluster LIFs were created:

In ONTAP 9.6 and later:

```
network interface show -service-policy default-intercluster
```

In ONTAP 9.5 and earlier:

```
network interface show -role intercluster
```

For complete command syntax, see the man page.

```
cluster01::> network interface show -service-policy default-intercluster
```

Current Is	Logical	Status	Network	Current
Vserver	Interface	Admin/Oper	Address/Mask	Node
Home				Port
cluster01	cluster01_icl01	up/up	192.168.1.201/24	cluster01-01 e0e
true	cluster01_icl02	up/up	192.168.1.202/24	cluster01-02 e0f
true				

2. Verify that the intercluster LIFs are redundant:

In ONTAP 9.6 and later:

```
network interface show -service-policy default-intercluster -failover
```

In ONTAP 9.6 and later:

In ONTAP 9.5 and earlier:

```
network interface show -role intercluster -failover
```

For complete command syntax, see the man page.

The following example shows that the intercluster LIFs `cluster01_icl01` and `cluster01_icl02` on the SVMe0e port will fail over to the `e0f` port.

```
cluster01::> network interface show -service-policy default-intercluster
-failover
```

Vserver	Logical Interface	Home Node:Port	Failover Policy	Failover Group
cluster01	cluster01_icl01	cluster01-01:e0e	local-only	
intercluster01			Failover Targets: cluster01-01:e0e, cluster01-01:e0f	
cluster01	cluster01_icl02	cluster01-02:e0e	local-only	
intercluster01			Failover Targets: cluster01-02:e0e, cluster01-02:e0f	

Related information

[Considerations when using dedicated ports](#)

Configuring intercluster LIFs on shared data ports

You can configure intercluster LIFs on ports shared with the data network. Doing so reduces the number of ports you need for intercluster networking.

Steps

1. List the ports in the cluster:

```
network port show
```

For complete command syntax, see the man page.

The following example shows the network ports in `cluster01`:

```
cluster01::> network port show
```

(Mbps)						Speed
Node	Port	IPspace	Broadcast Domain	Link	MTU	Admin/Oper

cluster01-01						
	e0a	Cluster	Cluster	up	1500	auto/1000
	e0b	Cluster	Cluster	up	1500	auto/1000
	e0c	Default	Default	up	1500	auto/1000
	e0d	Default	Default	up	1500	auto/1000
cluster01-02						
	e0a	Cluster	Cluster	up	1500	auto/1000
	e0b	Cluster	Cluster	up	1500	auto/1000
	e0c	Default	Default	up	1500	auto/1000
	e0d	Default	Default	up	1500	auto/1000

2. Create intercluster LIFs on the system SVM:

In ONTAP 9.6 and later:

```
network interface create -vserver system_SVM -lif LIF_name -service-policy default-intercluster -home-node node -home-port port -address port_IP -netmask netmask
```

In ONTAP 9.5 and earlier:

```
network interface create -vserver system_SVM -lif LIF_name -role intercluster -home-node node -home-port port -address port_IP -netmask netmask
```

For complete command syntax, see the man page.

The following example creates intercluster LIFs cluster01_icl01 and cluster01_icl02:

```
cluster01::> network interface create -vserver cluster01 -lif
cluster01_icl01 -service-
policy default-intercluster -home-node cluster01-01 -home-port e0c
-address 192.168.1.201
-netmask 255.255.255.0

cluster01::> network interface create -vserver cluster01 -lif
cluster01_icl02 -service-
policy default-intercluster -home-node cluster01-02 -home-port e0c
-address 192.168.1.202
-netmask 255.255.255.0
```

3. Verify that the intercluster LIFs were created:

In ONTAP 9.6 and later:

```
network interface show -service-policy default-intercluster
```

In ONTAP 9.5 and earlier:

```
network interface show -role intercluster
```

For complete command syntax, see the man page.

```
cluster01::> network interface show -service-policy default-intercluster
```

Current Is	Logical	Status	Network	Current
Vserver	Interface	Admin/Oper	Address/Mask	Node
Home				Port
cluster01	cluster01_icl01	up/up	192.168.1.201/24	cluster01-01 e0c
true	cluster01_icl02	up/up	192.168.1.202/24	cluster01-02 e0c
true				

4. Verify that the intercluster LIFs are redundant:

In ONTAP 9.6 and later:

```
network interface show -service-policy default-intercluster -failover
```

In ONTAP 9.5 and earlier:

```
network interface show -role intercluster -failover
```

For complete command syntax, see the man page.

The following example shows that the intercluster LIFs `cluster01_icl01` and `cluster01_icl02` on the `e0c` port will fail over to the `e0d` port.

```
cluster01::> network interface show -service-policy default-intercluster
-failover
```

Vserver	Logical Interface	Home Node:Port	Failover Policy	Failover Group

cluster01				
	cluster01_icl01	cluster01-01:e0c	local-only	
	192.168.1.201/24			
		Failover Targets: cluster01-01:e0c, cluster01-01:e0d		
	cluster01_icl02	cluster01-02:e0c	local-only	
	192.168.1.201/24			
		Failover Targets: cluster01-02:e0c, cluster01-02:e0d		

Related information

[Considerations when sharing data ports](#)

Creating a cluster peer relationship

You must create the cluster peer relationship between the MetroCluster clusters.

Creating a cluster peer relationship

You can use the `cluster peer create` command to create a peer relationship between a local and remote cluster. After the peer relationship has been created, you can run `cluster peer create` on the remote cluster to authenticate it to the local cluster.

- You must have created intercluster LIFs on every node in the clusters that are being peered.
- The clusters must be running ONTAP 9.3 or later.

Steps

1. On the destination cluster, create a peer relationship with the source cluster:

```
cluster peer create -generate-passphrase -offer-expiration MM/DD/YYYY  
HH:MM:SS|1...7days|1...168hours -peer-addr peer_LIF_IPs -ipspace ipspace
```

If you specify both `-generate-passphrase` and `-peer-addr`s, only the cluster whose intercluster LIFs are specified in `-peer-addr`s can use the generated password.

You can ignore the `-ipspace` option if you are not using a custom IPspace. For complete command syntax, see the man page.

The following example creates a cluster peer relationship on an unspecified remote cluster:

```
cluster02::> cluster peer create -generate-passphrase -offer-expiration  
2days
```

```
                Passphrase: UCa+6lRVICXeL/gq1WrK7ShR  
                Expiration Time: 6/7/2017 08:16:10 EST  
Initial Allowed Vserver Peers: -  
                Intercluster LIF IP: 192.140.112.101  
                Peer Cluster Name: Clus_7ShR (temporary generated)
```

```
Warning: make a note of the passphrase - it cannot be displayed again.
```

2. On source cluster, authenticate the source cluster to the destination cluster:

```
cluster peer create -peer-addr peer_LIF_IPs -ipspace ipspace
```

For complete command syntax, see the man page.

The following example authenticates the local cluster to the remote cluster at intercluster LIF IP addresses 192.140.112.101 and 192.140.112.102:

```
cluster01::> cluster peer create -peer-addr  
192.140.112.101,192.140.112.102
```

```
Notice: Use a generated passphrase or choose a passphrase of 8 or more  
characters.
```

```
                To ensure the authenticity of the peering relationship, use a  
phrase or sequence of characters that would be hard to guess.
```

```
Enter the passphrase:  
Confirm the passphrase:
```

```
Clusters cluster02 and cluster01 are peered.
```

Enter the passphrase for the peer relationship when prompted.

3. Verify that the cluster peer relationship was created:

cluster peer show -instance

```
cluster01::> cluster peer show -instance

Peer Cluster Name: cluster02
Remote Intercluster Addresses: 192.140.112.101,
192.140.112.102
Availability of the Remote Cluster: Available
Remote Cluster Name: cluster2
Active IP Addresses: 192.140.112.101,
192.140.112.102

Cluster Serial Number: 1-80-123456
Address Family of Relationship: ipv4
Authentication Status Administrative: no-authentication
Authentication Status Operational: absent
Last Update Time: 02/05 21:05:41
IPspace for the Relationship: Default
```

4. Check the connectivity and status of the nodes in the peer relationship:

cluster peer health show

```
cluster01::> cluster peer health show
```

Node	cluster-Name	Node-Name			
	Ping-Status	RDB-Health	Cluster-Health	Avail...	

cluster01-01	cluster02	cluster02-01			
	Data: interface_reachable				
	ICMP: interface_reachable	true	true	true	
		cluster02-02			
	Data: interface_reachable				
	ICMP: interface_reachable	true	true	true	
cluster01-02	cluster02	cluster02-01			
	Data: interface_reachable				
	ICMP: interface_reachable	true	true	true	
		cluster02-02			
	Data: interface_reachable				
	ICMP: interface_reachable	true	true	true	

Creating a cluster peer relationship (ONTAP 9.2 and earlier)

You can use the `cluster peer create` command to initiate a request for a peering relationship between a local and remote cluster. After the peer relationship has been requested by the local cluster, you can run `cluster peer create` on the remote cluster to accept the relationship.

- You must have created intercluster LIFs on every node in the clusters being peered.
 - The cluster administrators must have agreed on the passphrase each cluster will use to authenticate itself to the other.
1. On the data protection destination cluster, create a peer relationship with the data protection source cluster:

```
cluster peer create -peer-addr peer_LIF_IPs -ip space ip space
```

You can ignore the `-ip space` option if you are not using a custom IP space. For complete command syntax, see the man page.

The following example creates a cluster peer relationship with the remote cluster at intercluster LIF IP addresses 192.168.2.201 and 192.168.2.202:

```
cluster02::> cluster peer create -peer-addr  
192.168.2.201,192.168.2.202  
Enter the passphrase:  
Please enter the passphrase again:
```

Enter the passphrase for the peer relationship when prompted.

2. On the data protection source cluster, authenticate the source cluster to the destination cluster:

```
cluster peer create -peer-addr peer_LIF_IPs -ip space ip space
```

For complete command syntax, see the man page.

The following example authenticates the local cluster to the remote cluster at intercluster LIF IP addresses 192.140.112.203 and 192.140.112.204:

```
cluster01::> cluster peer create -peer-addr  
192.168.2.203,192.168.2.204  
Please confirm the passphrase:  
Please confirm the passphrase again:
```

Enter the passphrase for the peer relationship when prompted.

3. Verify that the cluster peer relationship was created:

```
cluster peer show -instance
```


For complete command syntax, see the man page.

```
cluster01::> cluster peer show -instance
Peer Cluster Name: cluster01
Remote Intercluster Addresses: 192.168.2.201,192.168.2.202
Availability: Available
Remote Cluster Name: cluster02
Active IP Addresses: 192.168.2.201,192.168.2.202
Cluster Serial Number: 1-80-000013
```

4. Check the connectivity and status of the nodes in the peer relationship:

cluster peer health show

For complete command syntax, see the man page.

```
cluster01::> cluster peer health show
Node          cluster-Name          Node-Name
              Ping-Status          RDB-Health Cluster-Health
Avail...
-----
cluster01-01
              cluster02          cluster02-01
              Data: interface_reachable
              ICMP: interface_reachable true          true
true
              cluster02-02
              Data: interface_reachable
              ICMP: interface_reachable true          true
true
cluster01-02
              cluster02          cluster02-01
              Data: interface_reachable
              ICMP: interface_reachable true          true
true
              cluster02-02
              Data: interface_reachable
              ICMP: interface_reachable true          true
true
```

Mirroring the root aggregates

You must mirror the root aggregates to provide data protection.

By default, the root aggregate is created as RAID-DP type aggregate. You can change the root aggregate from RAID-DP to RAID4 type aggregate. The following command modifies the root aggregate for RAID4 type aggregate:

```
storage aggregate modify -aggregate aggr_name -raidtype raid4
```



On non-ADP systems, the RAID type of the aggregate can be modified from the default RAID-DP to RAID4 before or after the aggregate is mirrored.

Steps

1. Mirror the root aggregate:

```
storage aggregate mirror aggr_name
```

The following command mirrors the root aggregate for controller_A_1:

```
controller_A_1::> storage aggregate mirror aggr0_controller_A_1
```

This mirrors the aggregate, so it consists of a local plex and a remote plex located at the remote MetroCluster site.

2. Repeat the previous step for each node in the MetroCluster configuration.

Related information

[Logical storage management](#)

[ONTAP concepts](#)

Creating a mirrored data aggregate on each node

You must create a mirrored data aggregate on each node in the DR group.

- You should know what drives or array LUNs will be used in the new aggregate.
- If you have multiple drive types in your system (heterogeneous storage), you should understand how you can ensure that the correct drive type is selected.
- Drives and array LUNs are owned by a specific node; when you create an aggregate, all drives in that aggregate must be owned by the same node, which becomes the home node for that aggregate.
- Aggregate names should conform to the naming scheme you determined when you planned your MetroCluster configuration.

[Disk and aggregate management](#)

Steps

1. Display a list of available spares:

```
storage disk show -spare -owner node_name
```

2. Create the aggregate by using the `storage aggregate create -mirror true` command.

If you are logged in to the cluster on the cluster management interface, you can create an aggregate on any node in the cluster. To ensure that the aggregate is created on a specific node, use the `-node` parameter or specify drives that are owned by that node.

You can specify the following options:

- Aggregate's home node (that is, the node that owns the aggregate in normal operation)
- List of specific drives or array LUNs that are to be added to the aggregate
- Number of drives to include



In the minimum supported configuration, in which a limited number of drives are available, you must use the `force-small-aggregate` option to allow the creation of a three disk RAID-DP aggregate.

- Checksum style to use for the aggregate
- Type of drives to use
- Size of drives to use
- Drive speed to use
- RAID type for RAID groups on the aggregate
- Maximum number of drives or array LUNs that can be included in a RAID group
- Whether drives with different RPM are allowed For more information about these options, see the `storage aggregate create` man page.

The following command creates a mirrored aggregate with 10 disks:

```
cluster_A::> storage aggregate create aggr1_node_A_1 -diskcount 10
-node node_A_1 -mirror true
[Job 15] Job is queued: Create aggr1_node_A_1.
[Job 15] The job is starting.
[Job 15] Job succeeded: DONE
```

3. Verify the RAID group and drives of your new aggregate:

```
storage aggregate show-status -aggregate aggregate-name
```

Creating unmirrored data aggregates

You can optionally create unmirrored data aggregates for data that does not require the redundant mirroring provided by MetroCluster configurations.

- You should know what drives or array LUNs will be used in the new aggregate.
- If you have multiple drive types in your system (heterogeneous storage), you should understand how you can verify that the correct drive type is selected.

In MetroCluster FC configurations, the unmirrored aggregates will only be online after a switchover if the remote disks in the aggregate are accessible. If the ISLs fail, the local node may be unable to access the data in the unmirrored remote disks. The failure of an aggregate can lead to a reboot of the local node.



The unmirrored aggregates must be local to the node owning them.

- Drives and array LUNs are owned by a specific node; when you create an aggregate, all drives in that aggregate must be owned by the same node, which becomes the home node for that aggregate.
- Aggregate names should conform to the naming scheme you determined when you planned your MetroCluster configuration.
- The [Disks and Aggregates Power Guide](#) contains more information about mirroring aggregates.

Steps

1. Display a list of available spares:

```
storage disk show -spare -owner node_name
```

2. Create the aggregate:

```
storage aggregate create
```

If you are logged in to the cluster on the cluster management interface, you can create an aggregate on any node in the cluster. To verify that the aggregate is created on a specific node, you should use the `-node` parameter or specify drives that are owned by that node.

You can specify the following options:

- Aggregate's home node (that is, the node that owns the aggregate in normal operation)
- List of specific drives or array LUNs that are to be added to the aggregate
- Number of drives to include
- Checksum style to use for the aggregate
- Type of drives to use
- Size of drives to use
- Drive speed to use
- RAID type for RAID groups on the aggregate
- Maximum number of drives or array LUNs that can be included in a RAID group
- Whether drives with different RPM are allowed For more information about these options, see the `storage aggregate create` man page.

The following command creates a unmirrored aggregate with 10 disks:

```
controller_A_1::> storage aggregate create aggr1_controller_A_1
-diskcount 10 -node controller_A_1
[Job 15] Job is queued: Create aggr1_controller_A_1.
[Job 15] The job is starting.
[Job 15] Job succeeded: DONE
```

3. Verify the RAID group and drives of your new aggregate:

```
storage aggregate show-status -aggregate aggregate-name
```

Implementing the MetroCluster configuration

You must run the `metrocluster configure` command to start data protection in a MetroCluster configuration.

- There should be at least two non-root mirrored data aggregates on each cluster.

Additional data aggregates can be either mirrored or unmirrored.

You can verify this with the `storage aggregate show` command.



If you want to use a single mirrored data aggregate, then see [step 1](#) for instructions.

- The ha-config state of the controllers and chassis must be `mcc-2n`.

You issue the `metrocluster configure` command once, on any of the nodes, to enable the MetroCluster configuration. You do not need to issue the command on each of the sites or nodes, and it does not matter which node or site you choose to issue the command on.

Steps

1. Configure the MetroCluster in the following format:

If your MetroCluster configuration has...	Then do this...
Multiple data aggregates	From any node's prompt, configure MetroCluster: metrocluster configure node-name

If your MetroCluster configuration has...	Then do this...
A single mirrored data aggregate	<p>a. From any node's prompt, change to the advanced privilege level:</p> <pre>set -privilege advanced</pre> <p>You need to respond with y when you are prompted to continue into advanced mode and you see the advanced mode prompt (*>).</p> <p>b. Configure the MetroCluster with the -allow-with-one-aggregate true parameter:</p> <pre>metrocluster configure -allow-with-one-aggregate true node-name</pre> <p>c. Return to the admin privilege level:</p> <pre>set -privilege admin</pre>



The best practice is to have multiple data aggregates. If the first DR group has only one aggregate and you want to add a DR group with one aggregate, you must move the metadata volume off the single data aggregate. For more information on this procedure, see [Moving a metadata volume in MetroCluster configurations](#).

The following command enables the MetroCluster configuration on all of the nodes in the DR group that contains controller_A_1:

```
cluster_A::*> metrocluster configure -node-name controller_A_1

[Job 121] Job succeeded: Configure is successful.
```

2. Verify the networking status on site A:

```
network port show
```

The following example shows the network port usage:

```
cluster_A::> network port show
```

Node	Port	IPspace	Broadcast Domain	Link	MTU	Speed (Mbps) Admin/Oper

controller_A_1						
	e0a	Cluster	Cluster	up	9000	auto/1000
	e0b	Cluster	Cluster	up	9000	auto/1000
	e0c	Default	Default	up	1500	auto/1000
	e0d	Default	Default	up	1500	auto/1000
	e0e	Default	Default	up	1500	auto/1000
	e0f	Default	Default	up	1500	auto/1000
	e0g	Default	Default	up	1500	auto/1000

7 entries were displayed.

3. Verify the MetroCluster configuration from both sites in the MetroCluster configuration.

a. Verify the configuration from site A:

metrocluster show

```
cluster_A::> metrocluster show
```

Cluster	Entry Name	State

Local: cluster_A	Configuration state	configured
	Mode	normal
	AUSO Failure Domain	auso-on-cluster-
disaster		
Remote: cluster_B	Configuration state	configured
	Mode	normal
	AUSO Failure Domain	auso-on-cluster-
disaster		

b. Verify the configuration from site B:

metrocluster show

```
cluster_B::> metrocluster show
```

Cluster	Entry Name	State
-----	-----	-----
Local: cluster_B	Configuration state	configured
	Mode	normal
	AUSO Failure Domain	auso-on-cluster-
disaster		
Remote: cluster_A	Configuration state	configured
	Mode	normal
	AUSO Failure Domain	auso-on-cluster-
disaster		

Configuring SNMPv3 in a MetroCluster configuration

The authentication and privacy protocols on the switches and on the ONTAP system must be the same.

ONTAP currently supports AES-128 and AES-256 encryption.

Steps

1. Create an SNMP user for each switch from the controller prompt:

security login create

```
Controller_A_1::> security login create -user-or-group-name snmpv3user
-application snmp -authentication-method usm -role none -remote-switch
-ipaddress 10.10.10.10
```

2. Respond to the following prompts as required at your site:


```
Enter the authoritative entity's EngineID [remote EngineID]:
```

```
Which authentication protocol do you want to choose (none, md5, sha, sha2-256) [none]: sha
```

```
Enter the authentication protocol password (minimum 8 characters long):
```

```
Enter the authentication protocol password again:
```

```
Which privacy protocol do you want to choose (none, des, aes128) [none]: aes128
```

```
Enter privacy protocol password (minimum 8 characters long):
```

```
Enter privacy protocol password again:
```



The same username can be added to different switches with different IP addresses.

3. Create an SNMP user for the rest of the switches.

The following example shows how to create a username for a switch with the IP address 10.10.10.11.

```
Controller_A_1::> security login create -user-or-group-name snmpv3user  
-application snmp -authentication-method usm -role none -remote-switch  
-ipaddress 10.  
10.10.11
```

4. Check that there is one login entry for each switch:

```
security login show
```

```

Controller_A_1::> security login show -user-or-group-name snmpv3user
-fields remote-switch-ipaddress

vserver      user-or-group-name application authentication-method
remote-switch-ipaddress

-----
-----

node_A_1 SVM 1 snmpv3user      snmp      usm
10.10.10.10

node_A_1 SVM 2 snmpv3user      snmp      usm
10.10.10.11

node_A_1 SVM 3 snmpv3user      snmp      usm
10.10.10.12

node_A_1 SVM 4 snmpv3user      snmp      usm
10.10.10.13

4 entries were displayed.

```

5. Configure SNMPv3 on the switches from the switch prompt:

snmpconfig --set snmpv3

If you require RO access, after 'User (ro):' specify the 'snmpv3user' as shown in the example:

```

Switch-A1:admin> snmpconfig --set snmpv3
SNMP Informs Enabled (true, t, false, f): [false] true
SNMPv3 user configuration(snmp user not configured in FOS user database
will have physical AD and admin role as the default):
User (rw): [snmpadmin1]
Auth Protocol [MD5(1)/SHA(2)/noAuth(3)]: (1..3) [3]
Priv Protocol [DES(1)/noPriv(2)/AES128(3)/AES256(4)]: (2..2) [2]
Engine ID: [00:00:00:00:00:00:00:00]
User (ro): [snmpuser2] snmpv3user
Auth Protocol [MD5(1)/SHA(2)/noAuth(3)]: (1..3) [2]
Priv Protocol [DES(1)/noPriv(2)/AES128(3)/AES256(4)]: (2..2) [3]

```

The example shows how to configure a read-only user. You can adjust the RW users if needed. You should also set passwords on unused accounts to secure them and use the best encryption available in your ONTAP release.

6. Configure encryption and passwords on the remaining switch users as required on your site.

Configuring FC-to-SAS bridges for health monitoring

In systems running ONTAP versions prior to 9.8, if your configuration includes FC-to-SAS bridges, you must perform some special configuration steps to monitor the FC-to-SAS bridges in the MetroCluster configuration.

- Third-party SNMP monitoring tools are not supported for FibreBridge bridges.
- Starting with ONTAP 9.8, FC-to-SAS bridges are monitored via in-band connections by default, and additional configuration is not required.



Starting with ONTAP 9.8, the **storage bridge** command is replaced with **system bridge**. The following steps show the **storage bridge** command, but if you are running ONTAP 9.8 or later, the **system bridge** command is preferred.

Steps

1. From the ONTAP cluster prompt, add the bridge to health monitoring:
 - a. Add the bridge, using the command for your version of ONTAP:

ONTAP version	Command
9.5 and later	storage bridge add -address 0.0.0.0 -managed-by in-band -name bridge-name
9.4 and earlier	storage bridge add -address bridge-ip-address -name bridge-name

- b. Verify that the bridge has been added and is properly configured:

storage bridge show

It might take as long as 15 minutes to reflect all data because of the polling interval. The ONTAP health monitor can contact and monitor the bridge if the value in the **Status** column is **ok**, and other information, such as the worldwide name (WWN), is displayed.

The following example shows that the FC-to-SAS bridges are configured:

```

controller_A_1:> storage bridge show

Bridge                Symbolic Name Is Monitored  Monitor Status
Vendor Model          Bridge WWN
-----
-----
ATTO_10.10.20.10  atto01          true           ok           Atto
FibreBridge 7500N    20000010867038c0
ATTO_10.10.20.11  atto02          true           ok           Atto
FibreBridge 7500N    20000010867033c0
ATTO_10.10.20.12  atto03          true           ok           Atto
FibreBridge 7500N    20000010867030c0
ATTO_10.10.20.13  atto04          true           ok           Atto
FibreBridge 7500N    2000001086703b80

4 entries were displayed

controller_A_1:>

```

Checking the MetroCluster configuration

You can check that the components and relationships in the MetroCluster configuration are working correctly. You should do a check after initial configuration and after making any changes to the MetroCluster configuration. You should also do a check before a negotiated (planned) switchover or a switchback operation.

If the `metrocluster check run` command is issued twice within a short time on either or both clusters, a conflict can occur and the command might not collect all data. Subsequent `metrocluster check show` commands do not show the expected output.

1. Check the configuration:

`metrocluster check run`

The command runs as a background job and might not be completed immediately.

```

cluster_A:> metrocluster check run
The operation has been started and is running in the background. Wait
for
it to complete and run "metrocluster check show" to view the results. To
check the status of the running metrocluster check operation, use the
command,
"metrocluster operation history show -job-id 2245"

```

```
cluster_A::> metrocluster check show
Last Checked On: 9/13/2017 20:41:37
```

Component	Result
-----	-----
nodes	ok
lifs	ok
config-replication	ok
aggregates	ok
clusters	ok
5 entries were displayed.	

2. Display more detailed results from the most recent `metrocluster check run` command:

```
metrocluster check aggregate show
```

```
metrocluster check cluster show
```

```
metrocluster check config-replication show
```

```
metrocluster check lif show
```

```
metrocluster check node show
```

The `metrocluster check show` commands show the results of the most recent `metrocluster check run` command. You should always run the `metrocluster check run` command prior to using the `metrocluster check show` commands so that the information displayed is current.

The following example shows the `metrocluster check aggregate show` command output for a healthy four-node MetroCluster configuration:

```
cluster_A::> metrocluster check aggregate show
```

```
Last Checked On: 8/5/2014 00:42:58
```

Node	Aggregate	Check
Result		
-----	-----	-----
controller_A_1	controller_A_1_aggr0	mirroring-status
ok		disk-pool-allocation
ok		ownership-state
ok	controller_A_1_aggr1	

```

ok
mirroring-status
disk-pool-allocation
ok
ownership-state
ok
controller_A_1_aggr2
mirroring-status
ok
disk-pool-allocation
ok
ownership-state
ok
controller_A_2
controller_A_2_aggr0
mirroring-status
ok
disk-pool-allocation
ok
ownership-state
ok
controller_A_2_aggr1
mirroring-status
ok
disk-pool-allocation
ok
ownership-state
ok
controller_A_2_aggr2
mirroring-status
ok
disk-pool-allocation
ok
ownership-state
18 entries were displayed.

```

The following example shows the `metrocluster check cluster show` command output for a healthy four-node MetroCluster configuration. It indicates that the clusters are ready to perform a negotiated switchover if necessary.

Last Checked On: 9/13/2017 20:47:04

Cluster	Check	Result

mccint-fas9000-0102	negotiated-switchover-ready	not-applicable
	switchback-ready	not-applicable
	job-schedules	ok
	licenses	ok
	periodic-check-enabled	ok
mccint-fas9000-0304	negotiated-switchover-ready	not-applicable
	switchback-ready	not-applicable
	job-schedules	ok
	licenses	ok
	periodic-check-enabled	ok
10 entries were displayed.		

Related information

[Disk and aggregate management](#)

[Network and LIF management](#)

Checking for MetroCluster configuration errors with Config Advisor

You can go to the NetApp Support Site and download the Config Advisor tool to check for common configuration errors.

Config Advisor is a configuration validation and health check tool. You can deploy it at both secure sites and non-secure sites for data collection and system analysis.



Support for Config Advisor is limited, and available only online.

1. Go to the Config Advisor download page and download the tool.

[NetApp Downloads: Config Advisor](#)

2. Run Config Advisor, review the tool's output and follow the recommendations in the output to address any issues discovered.

Verifying switchover, healing, and switchback

You should verify the switchover, healing, and switchback operations of the MetroCluster configuration.

1. Use the procedures for negotiated switchover, healing, and switchback that are mentioned in the [MetroCluster Management and Disaster Recovery Guide](#).

Protecting configuration backup files

You can provide additional protection for the cluster configuration backup files by specifying a remote URL (either HTTP or FTP) where the configuration backup files will be uploaded in addition to the default locations in the local cluster.

1. Set the URL of the remote destination for the configuration backup files: `system configuration backup settings modify URL-of-destination`


The [System Administration Guide](#) contains additional information under the section *Managing configuration backups*.

Considerations for using virtual IP and Border Gateway Protocol with a MetroCluster configuration

Starting with ONTAP 9.5, ONTAP supports layer 3 connectivity using virtual IP (VIP) and Border Gateway Protocol (BGP). The combination VIP and BGP for redundancy in the front-end networking with the back-end MetroCluster redundancy provides a layer 3 disaster recovery solution.

Review the following guidelines and illustration when planning your layer 3 solution. For details on implementing VIP and BGP in ONTAP, refer to the following section:

Configuring virtual IP (VIP) LIFs

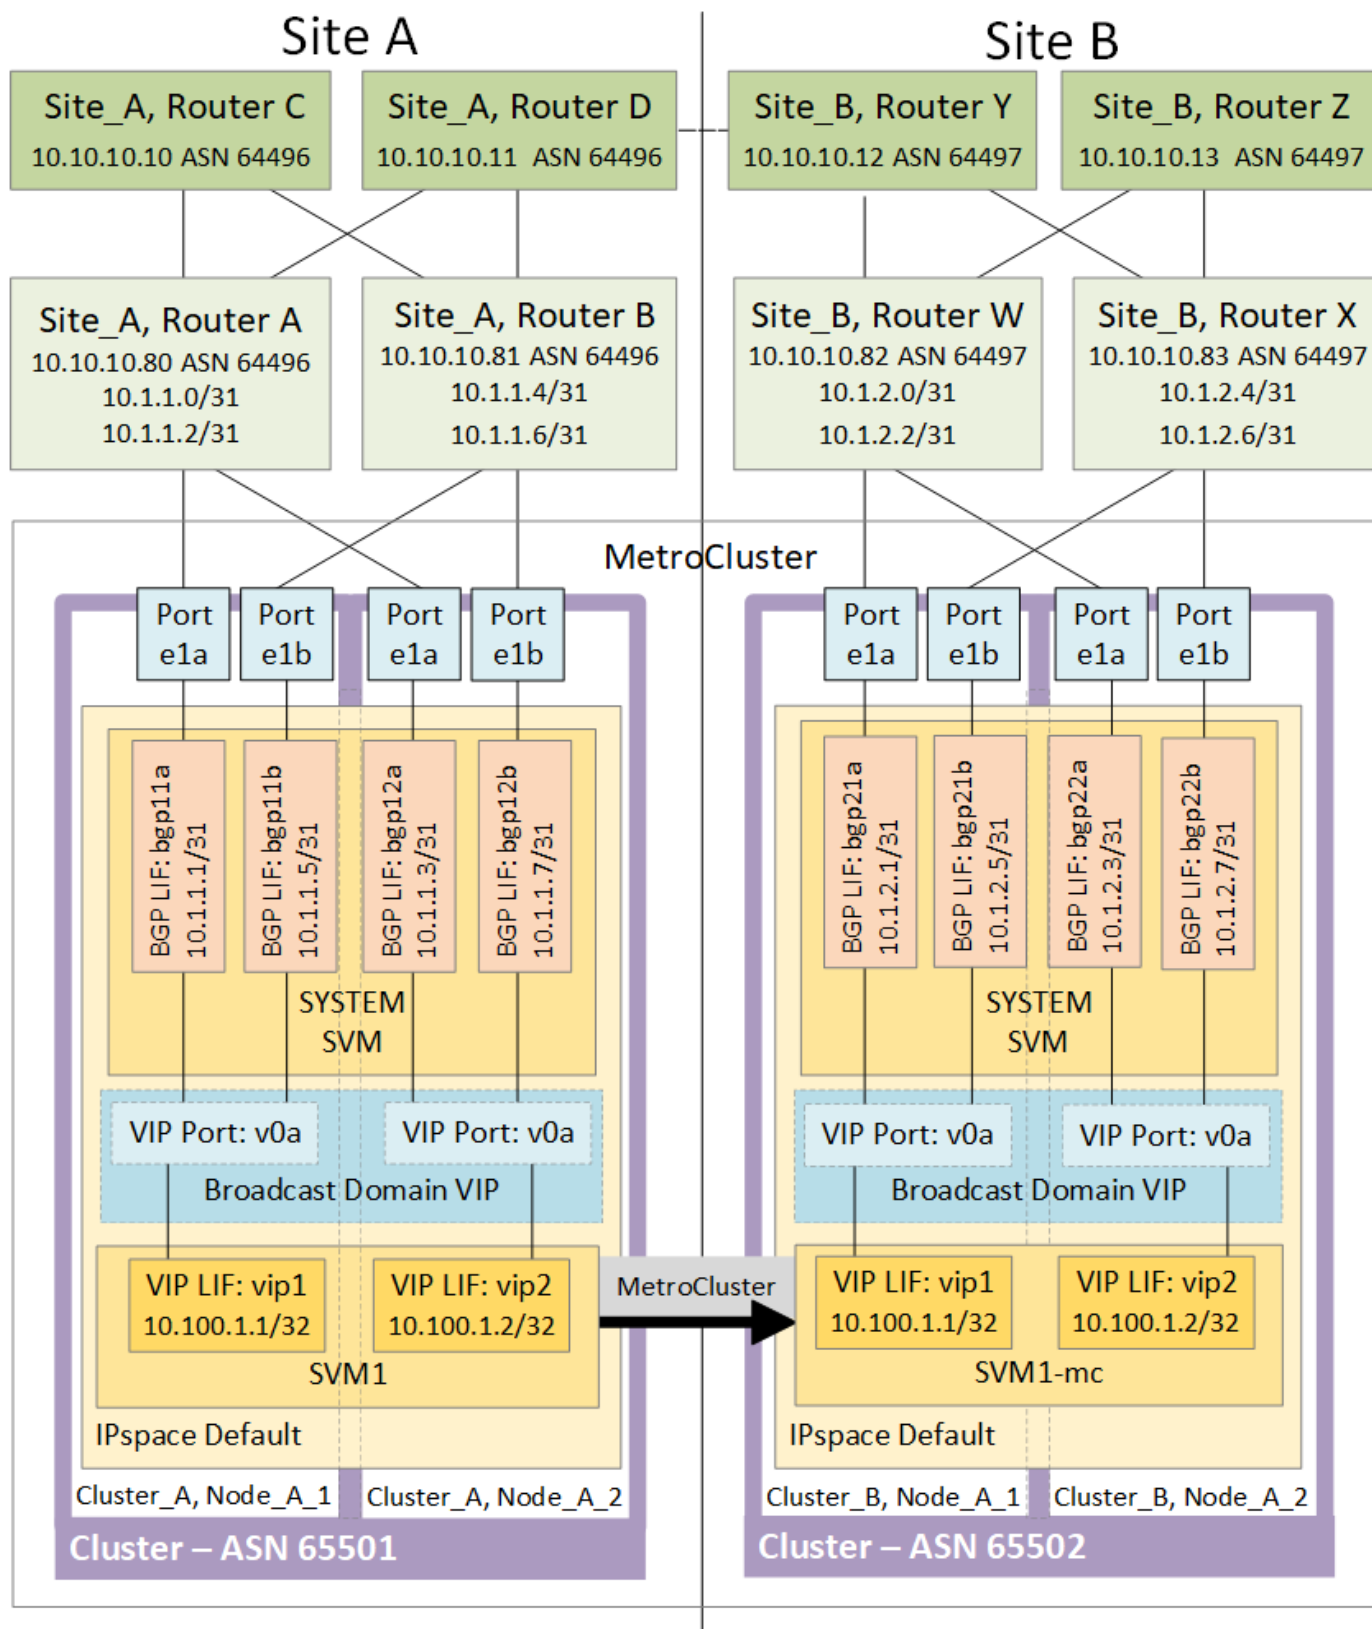

ONTAP limitations

ONTAP does not automatically verify that all nodes on both sites of the MetroCluster configuration are configured with BGP peering.

ONTAP does not perform route aggregation but announces all individual virtual LIF IPs as unique host routes

at all times.

ONTAP does not support true AnyCast — only a single node in the cluster presents a specific virtual LIF IP (but is accepted by all physical interfaces, regardless of whether they are BGP LIFs, provided the physical port is part of the correct IPspace). Different LIFs can migrate independently of each other to different hosting nodes.

Guidelines for using this Layer 3 solution with a MetroCluster configuration

You must configure your BGP and VIP correctly to provide the required redundancy.

Simpler deployment scenarios are preferred over more complex architectures (for example, a BGP peering router is reachable across an intermediate, non-BGP router). However, ONTAP does not enforce network design or topology restrictions.

VIP LIFs only cover the frontend/data network.

Depending on your version of ONTAP, you must configure BGP peering LIFs in the node SVM, not the system or data SVM. In 9.8, the BGP LIFs are visible in the cluster (system) SVM and the node SVMs are no longer present.

Each data SVM requires the configuration of all potential first hop gateway addresses (typically, the BGP router peering IP address), so that the return data path is available if a LIF migration or MetroCluster failover occurs.

BGP LIFs are node specific, similar to intercluster LIFs — each node has a unique configuration, which does not need to be replicated to DR site nodes.

configured, the existence of the v0a (v0b and so on.) continuously validates the connectivity, guaranteeing that a LIF migrate or failover succeeds (unlike L2, where a broken configuration is only visible after the outage).

A major architectural difference is that clients should no longer share the same IP subnet as the VIP of data SVMs. An L3 router with appropriate enterprise grade resiliency and redundancy features enabled (for example, VRRP/HSRP) should be on the path between storage and clients for the VIP to operate correctly.

The reliable update process of BGP allows for smoother LIF migrations because they are marginally faster and have a lower chance of interruption to some clients

You can configure BGP to detect some classes of network or switch misbehaviors faster than LACP, if configured accordingly.

External BGP (EBGP) uses different AS numbers between ONTAP node(s) and peering routers and is the preferred deployment to ease route aggregation and redistribution on the routers. Internal BGP (IBGP) and the use of route reflectors is not impossible but outside the scope of a straightforward VIP setup.

After deployment, you must check that the data SVM is accessible when the associated virtual LIF is migrated between all nodes on each site (including MetroCluster switchover) to verify the correct configuration of the static routes to the same data SVM.

VIP works for most IP-based protocols (NFS, SMB, iSCSI).

Testing the MetroCluster configuration

You can test failure scenarios to confirm the correct operation of the MetroCluster configuration.

Verifying negotiated switchover

You can test the negotiated (planned) switchover operation to confirm uninterrupted data availability.

This test validates that data availability is not affected (except for Microsoft Server Message Block (SMB) and Solaris Fibre Channel protocols) by switching the cluster over to the second data center.

This test should take about 30 minutes.

This procedure has the following expected results:

- The `metrocluster switchover` command will present a warning prompt.

If you respond **yes** to the prompt, the site the command is issued from will switch over the partner site.

For MetroCluster IP configurations:

- For ONTAP 9.4 and earlier:
 - Mirrored aggregates will become degraded after the negotiated switchover.
- For ONTAP 9.5 and later:
 - Mirrored aggregates will remain in normal state if the remote storage is accessible.
 - Mirrored aggregates will become degraded after the negotiated switchover if access to the remote storage is lost.
- For ONTAP 9.8 and later:
 - Unmirrored aggregates that are located at the disaster site will become unavailable if access to the remote storage is lost. This might lead to a controller outage.

Steps

1. Confirm that all nodes are in the configured state and normal mode:

`metrocluster node show`

```
cluster_A::> metrocluster node show
```

Cluster	Configuration State	Mode
-----	-----	
Local: cluster_A	configured	normal
Remote: cluster_B	configured	normal

2. Begin the switchover operation:

`metrocluster switchover`

```
cluster_A::> metrocluster switchover
Warning: negotiated switchover is about to start. It will stop all the
data Vservers on cluster "cluster_B" and
automatically re-start them on cluster "cluster_A". It will finally
gracefully shutdown cluster "cluster_B".
```

3. Confirm that the local cluster is in the configured state and switchover mode:

metrocluster node show

```
cluster_A::> metrocluster node show
```

Cluster	Configuration State	Mode
-----	-----	
Local: cluster_A	configured	switchover
Remote: cluster_B	not-reachable	-
configured	normal	

4. Confirm that the switchover operation was successful:

metrocluster operation show

```
cluster_A::> metrocluster operation show

cluster_A::> metrocluster operation show
Operation: switchover
State: successful
Start Time: 2/6/2016 13:28:50
End Time: 2/6/2016 13:29:41
Errors: -
```

5. Use the **vserver show** and **network interface show** commands to verify that DR SVMs and LIFs have come online.

Verifying healing and manual switchback

You can test the healing and manual switchback operations to verify that data availability is not affected (except for SMB and Solaris FC configurations) by switching back the cluster to the original data center after a negotiated switchover.

This test should take about 30 minutes.

The expected result of this procedure is that services should be switched back to their home nodes.

Steps

1. Verify that healing is completed:

metrocluster node show

The following example shows the successful completion of the command:

```
cluster_A::> metrocluster node show
DR                               Configuration  DR
Group Cluster Node              State          Mirroring Mode
-----
1      cluster_A
      node_A_1      configured      enabled      heal roots
completed
      cluster_B
      node_B_2      unreachable      -           switched over
42 entries were displayed.metrocluster operation show
```

2. Verify that all aggregates are **mirrored**:

storage aggregate show

The following example shows that all aggregates have a RAID Status of mirrored:

```
cluster_A::> storage aggregate show
cluster Aggregates:
Aggregate Size      Available Used% State   #Vols  Nodes      RAID
Status
-----
data_cluster
      4.19TB      4.13TB    2% online      8 node_A_1  raid_dp,
mirrored,
normal

root_cluster
      715.5GB    212.7GB   70% online      1 node_A_1  raid4,
mirrored,
normal

cluster_B Switched Over Aggregates:
Aggregate Size      Available Used% State   #Vols  Nodes      RAID
Status
-----
data_cluster_B
      4.19TB      4.11TB    2% online      5 node_A_1  raid_dp,
mirrored,
normal

root_cluster_B      -          -      - unknown      - node_A_1  -
```

3. Boot nodes from the disaster site.
4. Check the status of switchback recovery:

metrocluster node show

```
cluster_A::> metrocluster node show
DR
Group Cluster Node      Configuration  DR
State          Mirroring Mode
-----
1      cluster_A
      node_A_1      configured    enabled    heal roots
completed
      cluster_B
      node_B_2      configured    enabled    waiting for
switchback                                recovery

2 entries were displayed.
```

5. Perform the switchback:

metrocluster switchback

```
cluster_A::> metrocluster switchback
[Job 938] Job succeeded: Switchback is successful. Verify switchback
```

6. Confirm status of the nodes:

metrocluster node show

```
cluster_A::> metrocluster node show
DR
Group Cluster Node Configuration State DR Mirroring Mode
-----
1      cluster_A
           node_A_1      configured enabled normal
      cluster_B
           node_B_2      configured enabled normal

2 entries were displayed.
```

7. Confirm status of the metrocluster operation:

metrocluster operation show

The output should show a successful state.

```
cluster_A::> metrocluster operation show
Operation: switchback
State: successful
Start Time: 2/6/2016 13:54:25
End Time: 2/6/2016 13:56:15
Errors: -
```

Loss of a single FC-to-SAS bridge

You can test the failure of a single FC-to-SAS bridge to make sure there is no single point of failure.

This test should take about 15 minutes.

This procedure has the following expected results:

- Errors should be generated as the bridge is switched off.
- No failover or loss of service should occur.
- Only one path from the controller module to the drives behind the bridge is available.



Starting with ONTAP 9.8, the **storage bridge** command is replaced with **system bridge**. The following steps show the **storage bridge** command, but if you are running ONTAP 9.8 or later, the **system bridge** command is preferred.

Steps

1. Turn off the power supplies of the bridge.
2. Confirm that the bridge monitoring indicates an error:

storage bridge show

```
cluster_A::> storage bridge show
```

Monitor	Bridge	Symbolic Name	Vendor	Model	Bridge WWN	Is Monitored
ATTO_10.65.57.145	bridge_A_1	Atto	FibreBridge	6500N	200000108662d46c	true
error						

3. Confirm that drives behind the bridge are available with a single path:

storage disk error show


```
cluster_A::> storage disk error show
Disk          Error Type          Error Text
-----
-----
1.0.0          onedomain          1.0.0 (5000cca057729118): All paths
to this array LUN are connected to the same fault domain. This is a
single point of failure.
1.0.1          onedomain          1.0.1 (5000cca057727364): All paths
to this array LUN are connected to the same fault domain. This is a
single point of failure.
1.0.2          onedomain          1.0.2 (5000cca05772e9d4): All paths
to this array LUN are connected to the same fault domain. This is a
single point of failure.
...
1.0.23         onedomain          1.0.23 (5000cca05772e9d4): All paths
to this array LUN are connected to the same fault domain. This is a
single point of failure.
```

Verifying operation after power line disruption

You can test the MetroCluster configuration's response to the failure of a PDU.

The best practice is for each power supply unit (PSU) in a component to be connected to separate power supplies. If both PSUs are connected to the same power distribution unit (PDU) and an electrical disruption occurs, the site could down or a complete shelf might become unavailable. Failure of one power line is tested to confirm that there is no cabling mismatch that could cause a service disruption.

This test should take about 15 minutes.

This test requires turning off power to all left-hand PDUs and then all right-hand PDUs on all of the racks containing the MetroCluster components.

This procedure has the following expected results:

- Errors should be generated as the PDUs are disconnected.
- No failover or loss of service should occur.

Steps

1. Turn off the power of the PDUs on the left-hand side of the rack containing the MetroCluster components.
2. Monitor the result on the console by using the `system environment sensors show -state fault` and `storage shelf show -errors` commands.

```
cluster_A::> system environment sensors show -state fault
```

Node	Sensor	State	Value/Units	Crit-Low	Warn-Low	Warn-Hi	Crit-Hi

node_A_1							
	PSU1	fault					
			PSU_OFF				
	PSU1 Pwr In OK	fault					
			FAULT				
node_A_2							
	PSU1	fault					
			PSU_OFF				
	PSU1 Pwr In OK	fault					
			FAULT				

4 entries were displayed.

```
cluster_A::> storage shelf show -errors
```

```
Shelf Name: 1.1
Shelf UID: 50:0a:09:80:03:6c:44:d5
Serial Number: SHFHU1443000059
```

Error Type	Description
Power	Critical condition is detected in storage shelf power supply unit "1". The unit might fail.Reconnect PSU1

3. Turn the power back on to the left-hand PDUs.
4. Make sure that ONTAP clears the error condition.
5. Repeat the previous steps with the right-hand PDUs.

Verifying operation after loss of a single storage shelf

You can test the failure of a single storage shelf to verify that there is no single point of failure.

This procedure has the following expected results:

- An error message should be reported by the monitoring software.
- No failover or loss of service should occur.
- Mirror resynchronization starts automatically after the hardware failure is restored.

Steps

1. Check the storage failover status:

storage failover show

```
cluster_A::> storage failover show
```

Node	Partner	Possible	State Description
node_A_1	node_A_2	true	Connected to node_A_2
node_A_2	node_A_1	true	Connected to node_A_1

2 entries were displayed.

2. Check the aggregate status:

storage aggregate show

```
cluster_A::> storage aggregate show
```

```
cluster Aggregates:
```

Aggregate	Size	Available	Used%	State	#Vols	Nodes	RAID
-----------	------	-----------	-------	-------	-------	-------	------

Status	-----	-----	-----	-----	-----	-----	-----
--------	-------	-------	-------	-------	-------	-------	-------

node_A_1data01_mirrored	4.15TB	3.40TB	18%	online	3	node_A_1	
-------------------------	--------	--------	-----	--------	---	----------	--

raid_dp,

mirrored,

normal

node_A_1root	707.7GB	34.29GB	95%	online	1	node_A_1	
--------------	---------	---------	-----	--------	---	----------	--

raid_dp,

mirrored,

normal

node_A_2_data01_mirrored	4.15TB	4.12TB	1%	online	2	node_A_2	
--------------------------	--------	--------	----	--------	---	----------	--

raid_dp,

mirrored,

normal

node_A_2_data02_unmirrored	2.18TB	2.18TB	0%	online	1	node_A_2	
----------------------------	--------	--------	----	--------	---	----------	--

raid_dp,

normal

node_A_2_root	707.7GB	34.27GB	95%	online	1	node_A_2	
---------------	---------	---------	-----	--------	---	----------	--

raid_dp,

mirrored,

normal

3. Verify that all data SVMs and data volumes are online and serving data:

```
vserver show -type data
```

```
network interface show -fields is-home false
```

```
volume show !vol0,!MDV*
```

```
cluster_A::> vservers show -type data
```

```
cluster_A::> vservers show -type data
```

Vserver	Type	Subtype	Admin State	Operational State	Root Volume
Aggregate					

SVM1	data	sync-source		running	SVM1_root
node_A_1_data01_mirrored					
SVM2	data	sync-source		running	SVM2_root
node_A_2_data01_mirrored					

```
cluster_A::> network interface show -fields is-home false
There are no entries matching your query.
```

```
cluster_A::> volume show !vol0,!MDV*
```

Vserver	Volume	Aggregate	State	Type	Size
Available Used%					
-----		-----			

SVM1					
	SVM1_root				
		node_A_1data01_mirrored	online	RW	10GB
9.50GB	5%				
SVM1					
	SVM1_data_vol				
		node_A_1data01_mirrored	online	RW	10GB
9.49GB	5%				
SVM2					
	SVM2_root				
		node_A_2_data01_mirrored	online	RW	10GB
9.49GB	5%				
SVM2					
	SVM2_data_vol				
		node_A_2_data02_unmirrored	online	RW	1GB
972.6MB	5%				

4. Identify a shelf in Pool 1 for node node_A_2 to power off to simulate a sudden hardware failure:

```
storage aggregate show -r -node node-name !*root
```

The shelf you select must contain drives that are part of a mirrored data aggregate.

In the following example, shelf ID 31 is selected to fail.

```
cluster_A::> storage aggregate show -r -node node_A_2 !*root
Owner Node: node_A_2
Aggregate: node_A_2_data01_mirrored (online, raid_dp, mirrored) (block
checksums)
Plex: /node_A_2_data01_mirrored/plex0 (online, normal, active, pool0)
RAID Group /node_A_2_data01_mirrored/plex0/rg0 (normal, block
checksums)
```

					Usable	
Physical	Position	Disk	Pool	Type	RPM	Size
Size	Status					

dparity	2.30.3		0	BSAS	7200	827.7GB
828.0GB (normal)						
parity	2.30.4		0	BSAS	7200	827.7GB
828.0GB (normal)						
data	2.30.6		0	BSAS	7200	827.7GB
828.0GB (normal)						
data	2.30.8		0	BSAS	7200	827.7GB
828.0GB (normal)						
data	2.30.5		0	BSAS	7200	827.7GB
828.0GB (normal)						

```

Plex: /node_A_2_data01_mirrored/plex4 (online, normal, active, pool1)
RAID Group /node_A_2_data01_mirrored/plex4/rg0 (normal, block
checksums)
```

					Usable	
Physical	Position	Disk	Pool	Type	RPM	Size
Size	Status					

dparity	1.31.7		1	BSAS	7200	827.7GB
828.0GB (normal)						
parity	1.31.6		1	BSAS	7200	827.7GB
828.0GB (normal)						
data	1.31.3		1	BSAS	7200	827.7GB
828.0GB (normal)						

```

data      1.31.4      1    BSAS      7200  827.7GB
828.0GB (normal)
data      1.31.5      1    BSAS      7200  827.7GB
828.0GB (normal)

Aggregate: node_A_2_data02_unmirrored (online, raid_dp) (block
checksums)
Plex: /node_A_2_data02_unmirrored/plex0 (online, normal, active,
pool0)
RAID Group /node_A_2_data02_unmirrored/plex0/rg0 (normal, block
checksums)

Usable
Physical
Position Disk          Pool Type      RPM      Size
Size Status
-----
-----
dparity  2.30.12          0    BSAS      7200  827.7GB
828.0GB (normal)
parity   2.30.22          0    BSAS      7200  827.7GB
828.0GB (normal)
data     2.30.21          0    BSAS      7200  827.7GB
828.0GB (normal)
data     2.30.20          0    BSAS      7200  827.7GB
828.0GB (normal)
data     2.30.14          0    BSAS      7200  827.7GB
828.0GB (normal)
15 entries were displayed.

```

5. Physically power off the shelf that you selected.

6. Check the aggregate status again:

```
*storage aggregate *
```

```
storage aggregate show -r -node node_A_2 !*root
```

The aggregate with drives on the powered-off shelf should have a **degraded** RAID status, and drives on the affected plex should have a **failed** status, as shown in the following example:

```

cluster_A::> storage aggregate show
Aggregate      Size Available Used% State    #Vols  Nodes      RAID
Status
-----
-----
node_A_1data01_mirrored
          4.15TB      3.40TB   18% online        3 node_A_1

```

```

raid_dp,

mirrored,

normal
node_A_1root
          707.7GB    34.29GB    95% online          1 node_A_1
raid_dp,

mirrored,

normal
node_A_2_data01_mirrored
          4.15TB     4.12TB     1% online          2 node_A_2
raid_dp,

mirror

degraded
node_A_2_data02_unmirrored
          2.18TB     2.18TB     0% online          1 node_A_2
raid_dp,

normal
node_A_2_root
          707.7GB    34.27GB    95% online          1 node_A_2
raid_dp,

mirror

degraded
cluster_A::> storage aggregate show -r -node node_A_2 !*root
Owner Node: node_A_2
Aggregate: node_A_2_data01_mirrored (online, raid_dp, mirror degraded)
(block checksums)
Plex: /node_A_2_data01_mirrored/plex0 (online, normal, active, pool0)
RAID Group /node_A_2_data01_mirrored/plex0/rg0 (normal, block
checksums)

Usable
Physical
Position Disk                                Pool Type    RPM    Size
Size Status
-----
dparity 2.30.3                                0    BSAS    7200  827.7GB
828.0GB (normal)

```



```

    parity    2.30.4                0    BSAS    7200    827.7GB
828.0GB (normal)
    data      2.30.6                0    BSAS    7200    827.7GB
828.0GB (normal)
    data      2.30.8                0    BSAS    7200    827.7GB
828.0GB (normal)
    data      2.30.5                0    BSAS    7200    827.7GB
828.0GB (normal)

```

Plex: /node_A_2_data01_mirrored/plex4 (offline, failed, inactive, pool1)

RAID Group /node_A_2_data01_mirrored/plex4/rg0 (partial, none checksums)

				Usable	
Physical					
Position	Disk	Pool	Type	RPM	Size
Size	Status				

dparity	FAILED	-	-	-	827.7GB
- (failed)					
parity	FAILED	-	-	-	827.7GB
- (failed)					
data	FAILED	-	-	-	827.7GB
- (failed)					
data	FAILED	-	-	-	827.7GB
- (failed)					
data	FAILED	-	-	-	827.7GB
- (failed)					

Aggregate: node_A_2_data02_unmirrored (online, raid_dp) (block checksums)

Plex: /node_A_2_data02_unmirrored/plex0 (online, normal, active, pool0)

RAID Group /node_A_2_data02_unmirrored/plex0/rg0 (normal, block checksums)

				Usable	
Physical					
Position	Disk	Pool	Type	RPM	Size
Size	Status				

dparity	2.30.12	0	BSAS	7200	827.7GB
828.0GB (normal)					
parity	2.30.22	0	BSAS	7200	827.7GB
828.0GB (normal)					

```
data      2.30.21      0    BSAS    7200    827.7GB
828.0GB (normal)
data      2.30.20      0    BSAS    7200    827.7GB
828.0GB (normal)
data      2.30.14      0    BSAS    7200    827.7GB
828.0GB (normal)
```

15 entries were displayed.

7. Verify that the data is being served and that all volumes are still online:

```
vserver show -type data
```

```
network interface show -fields is-home false
```

```
volume show !vol0,!MDV*
```

```

cluster_A::> vservers show -type data

cluster_A::> vservers show -type data

```

Vserver	Type	Subtype	Admin State	Operational State	Root Volume
Aggregate					
SVM1	data	sync-source		running	SVM1_root
node_A_1_data01_mirrored					
SVM2	data	sync-source		running	SVM2_root
node_A_1_data01_mirrored					

```

cluster_A::> network interface show -fields is-home false
There are no entries matching your query.

cluster_A::> volume show !vol0,!MDV*

```

Vserver	Volume	Aggregate	State	Type	Size
Available	Used%				
SVM1					
	SVM1_root	node_A_1data01_mirrored	online	RW	10GB
9.50GB	5%				
SVM1					
	SVM1_data_vol	node_A_1data01_mirrored	online	RW	10GB
9.49GB	5%				
SVM2					
	SVM2_root	node_A_1data01_mirrored	online	RW	10GB
9.49GB	5%				
SVM2					
	SVM2_data_vol	node_A_2_data02_unmirrored	online	RW	1GB
972.6MB	5%				

8. Physically power on the shelf.

Resynchronization starts automatically.

9. Verify that resynchronization has started:

storage aggregate show

The affected aggregate should have a **resyncing** RAID status, as shown in the following example:

```
cluster_A::> storage aggregate show
cluster Aggregates:
Aggregate      Size Available Used% State  #Vols  Nodes      RAID
Status
-----
node_A_1_data01_mirrored
      4.15TB      3.40TB    18% online      3 node_A_1
raid_dp,
mirrored,
normal
node_A_1_root
      707.7GB      34.29GB    95% online      1 node_A_1
raid_dp,
mirrored,
normal
node_A_2_data01_mirrored
      4.15TB      4.12TB     1% online      2 node_A_2
raid_dp,
resyncing
node_A_2_data02_unmirrored
      2.18TB      2.18TB     0% online      1 node_A_2
raid_dp,
normal
node_A_2_root
      707.7GB      34.27GB    95% online      1 node_A_2
raid_dp,
resyncing
```

10. Monitor the aggregate to confirm that resynchronization is complete:

storage aggregate show

The affected aggregate should have a **normal** RAID status, as shown in the following example:

```
cluster_A::> storage aggregate show
cluster Aggregates:
Aggregate      Size Available Used% State  #Vols  Nodes      RAID
Status
-----
node_A_1data01_mirrored
      4.15TB      3.40TB    18% online      3 node_A_1
raid_dp,
mirrored,
normal
node_A_1root
      707.7GB      34.29GB    95% online      1 node_A_1
raid_dp,
mirrored,
normal
node_A_2_data01_mirrored
      4.15TB      4.12TB     1% online      2 node_A_2
raid_dp,
normal
node_A_2_data02_unmirrored
      2.18TB      2.18TB     0% online      1 node_A_2
raid_dp,
normal
node_A_2_root
      707.7GB      34.27GB    95% online      1 node_A_2
raid_dp,
resyncing
```

Connections in a stretch MetroCluster configurations with array LUNs

In a stretch MetroCluster configuration with array LUNs, you must connect the FC-VI ports across controllers. Direct connectivity is supported between the controllers and E-Series storage arrays. For all other array LUN configurations, you must use FC switches


in the configuration.

You can also set up a stretch MetroCluster configuration with both disks and array LUNs. In such a configuration, you must use either FC-to-SAS bridges or SAS optical cables to connect the controllers to disks.

Example of a stretch MetroCluster configuration with array LUNs

In a stretch MetroCluster configuration with array LUNs, you must cable the FC-VI ports for direct connectivity between the controllers. In addition, you must cable each controller's HBA ports to switch ports on the corresponding FC switches. Cabling to the array LUNs is the same as that in a fabric-attached MetroCluster, except for E-Series array LUNs, which can be directly connected.

The following illustration shows the FC-VI ports cabled across controllers A and B in a stretch MetroCluster configuration:

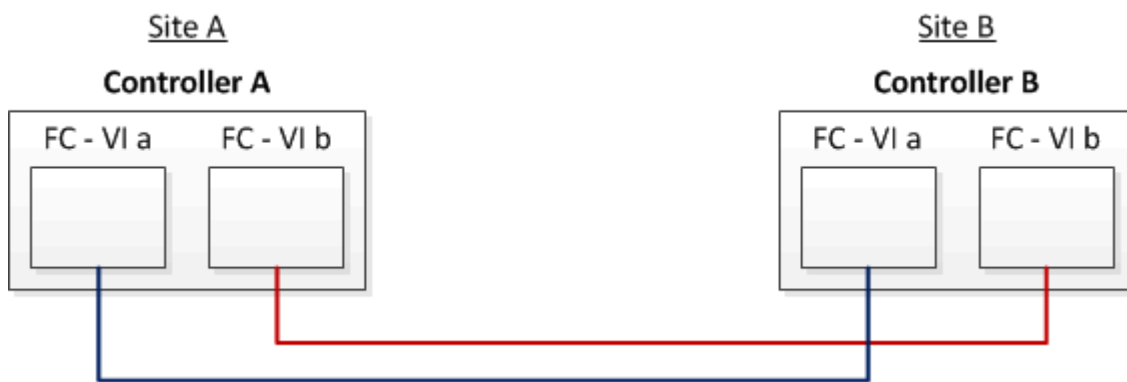

FAS9000 storage systems controller modules use four FC-VI ports each.

For configurations with E-Series array LUNs, you can directly attach the E-Series LUNs.

[Direct Attach support for Stretch MetroCluster Configuration with NetApp E-Series array](#)

Except for connecting the FC-VI ports, the rest of the procedure for setting up a MetroCluster configuration with array LUNs that are not using E-Series array LUNs requires FC switches and is the same as using array LUNs in fabric-attached configurations.

[Fabric-attached MetroCluster installation and configuration](#)

Examples of two-node stretch MetroCluster configurations with disks and array LUNs


For setting up a stretch MetroCluster configuration with native disks and array LUNs, you must use either FC-to-SAS bridges or SAS optical cables to connect the ONTAP systems to the disk shelves. You must use FC switches for connecting array LUNs to the ONTAP systems.

A minimum of eight HBA ports is required for an ONTAP system to connect to both native disks and array LUNs.


In the following examples representing two-node stretch MetroCluster configurations with disks and array

LUNs, HBA ports 0a through 0d are used for connection with array LUNs, while ports 1a through 1d are used for connections with native disks.


The following illustration shows a two-node stretch MetroCluster configuration in which the native disks are connected to the ONTAP systems through SAS optical cables:

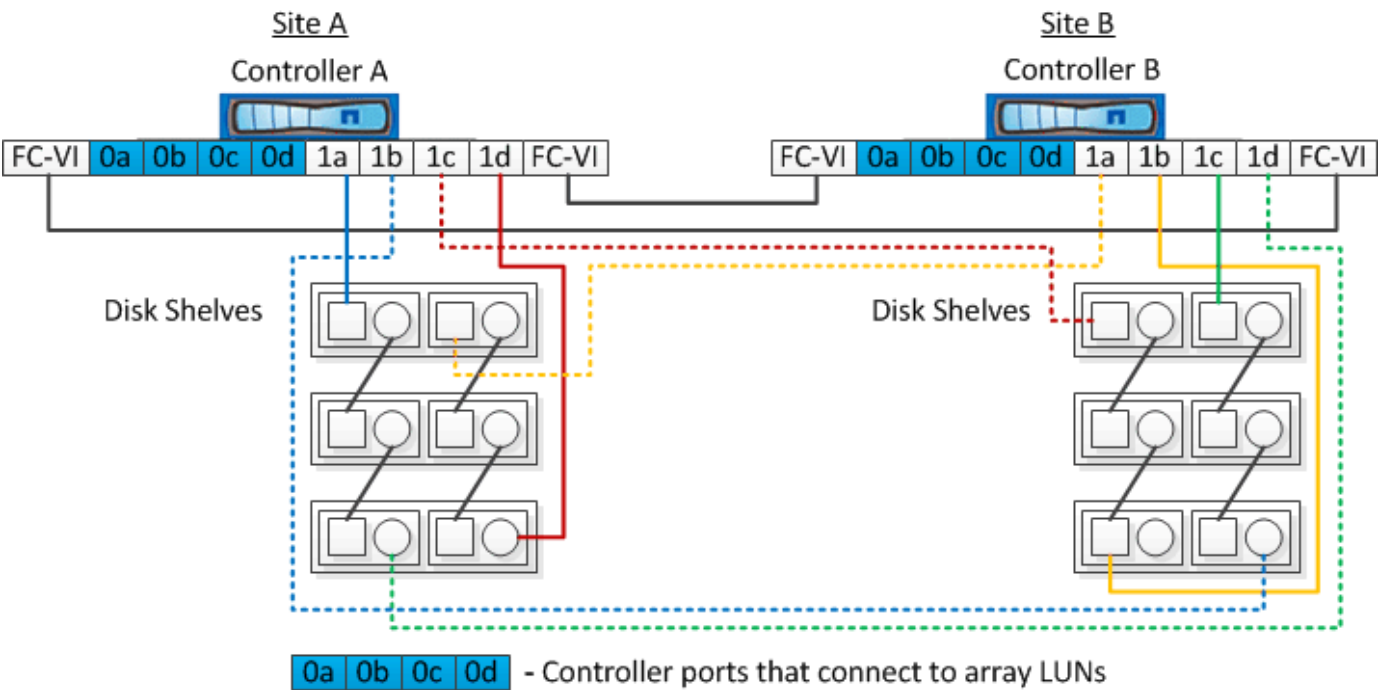

The following illustration shows a two-node stretch MetroCluster configuration in which the native disks are connected to the ONTAP systems through FC-to-SAS bridges:

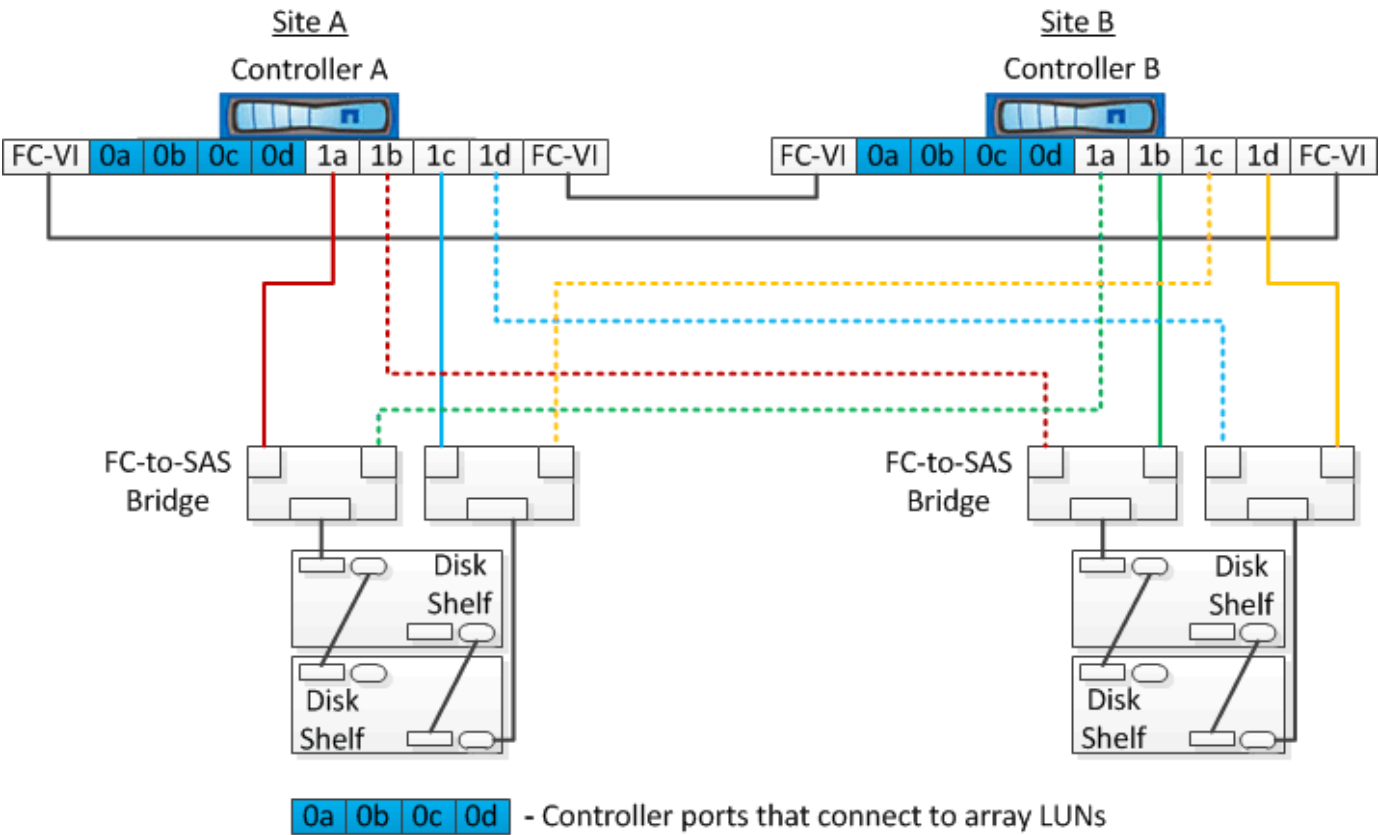

The following illustration shows a two-node stretch MetroCluster configuration with the array LUN connections:

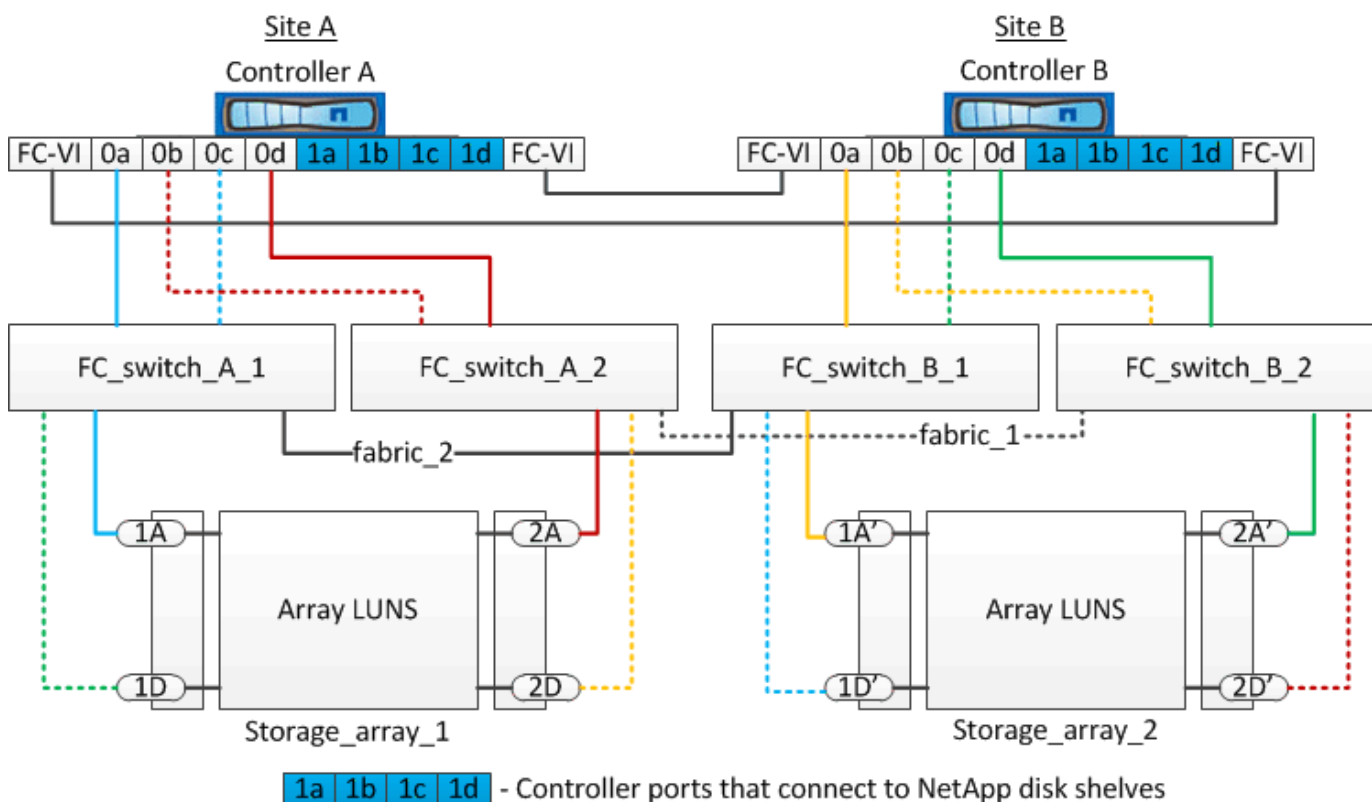

If required, you can also use the same FC switches to connect both native disks and array LUNs to the controllers in the MetroCluster configuration.

[Fabric-attached MetroCluster installation and configuration](#)

Example of a stretch MetroCluster configuration with E-Series storage arrays

In a stretch MetroCluster configuration with E-Series storage array LUNs, you can directly connect the storage controllers and the storage arrays. Unlike other array LUNs, FC switches are not required.

The [Direct Attach support for Stretch MetroCluster Configuration with NetApp E-Series array](#) Knowledgebase article provides examples of configurations with E-Series array LUNs.

Considerations when removing MetroCluster configurations

You can remove the MetroCluster configuration from all of the nodes in a disaster recovery (DR) group. After removing the MetroCluster configuration, all disk connectivity and interconnects should be adjusted to be in a supported state. If you need to remove the MetroCluster configuration, contact technical support.



You cannot reverse the MetroCluster unconfiguration. This process should only be done with the assistance of technical support.

Using the Active IQ Unified Manager and ONTAP System Manager for further configuration and monitoring

The Active IQ Unified Manager and ONTAP System Manager can be used for GUI management of the clusters and monitoring of the configuration.

Each node has ONTAP System Manager pre-installed. To load System Manager, enter the cluster management LIF address as the URL in a web browser that has connectivity to the node.

You can also use Active IQ Unified Manager to monitor the MetroCluster configuration.

Related information

[Active IQ Unified Manager and ONTAP System Manager Documentation](#)

Synchronizing the system time using NTP

Each cluster needs its own Network Time Protocol (NTP) server to synchronize the time between the nodes and their clients. You can use the Edit DateTime dialog box in System Manager to configure the NTP server.

You must have downloaded and installed System Manager. System Manager is available from the NetApp Support Site.

- You cannot modify the time zone settings for a failed node or the partner node after a takeover occurs.
- Each cluster in the MetroCluster FC configuration should have its own separate NTP server or servers used by the nodes and (if present) FC-to-SAS bridges at that MetroCluster site.

If you are using the MetroCluster Tiebreaker software, it should also have its own separate NTP server.

Steps

1. From the home page, double-click the appropriate storage system.
2. Expand the **Cluster** hierarchy in the left navigation pane.
3. In the navigation pane, click **Configuration > System Tools > DateTime**.
4. Click **Edit**.
5. Select the time zone.
6. Specify the IP addresses of the time servers, and then click **Add**.

You must add an NTP server to the list of time servers. The domain controller can be an authoritative server.

7. Click **OK**.
8. Verify the changes you made to the date and time settings in the Date and Time window.

Considerations when using ONTAP in a MetroCluster configuration

When using ONTAP in a MetroCluster configuration, you should be aware of certain considerations for licensing, peering to clusters outside the MetroCluster configuration, performing volume operations, NVFAIL operations, and other ONTAP operations.

Licensing considerations

- Both sites should be licensed for the same site-licensed features.
- All nodes should be licensed for the same node-locked features.

SnapMirror consideration

- SnapMirror SVM disaster recovery is only supported on MetroCluster configurations running versions of ONTAP 9.5 or later.

MetroCluster operations in ONTAP System Manager

Depending on your ONTAP version, some MetroCluster-specific operations can be performed using ONTAP System Manager.

- Switchover and switchback in MetroCluster IP configurations (starting in ONTAP 9.7).
- Provision and grow of mirrored aggregates in the MetroCluster IP configurations (starting in ONTAP 9.8).

Unmirrored aggregates are not supported in System Manager.

FlexCache support in a MetroCluster configuration

Starting with ONTAP 9.7, FlexCache volumes are supported on MetroCluster configurations. You should be aware of requirements for manual repeer after switchover or switchback operations.

SVM repeer after switchover when FlexCache origin and cache are within the same MetroCluster site

After a negotiated or unplanned switchover, any SVM FlexCache peering relationship within the cluster must be manually configured.

For example, SVMs vs1 (cache) and vs2 (origin) are on site_A. These SVMs are peered.

After switchover, SVMs vs1-mc and vs2-mc are activated at the partner site (site_B). They must be manually repeer for FlexCache to work using the `vserver peer repeer` command.

SVM repeer after switchover or switchback when a FlexCache destination is on a third cluster and in disconnected mode

For FlexCache relationships to a cluster outside of the MetroCluster configuration, the peering must always be manually reconfigured after a switchover if the involved clusters are in disconnected mode during switchover.

For example:

- One end of the FlexCache (cache_1 on vs1) resides on MetroCluster site_A has one end of the FlexCache
- The other end of the FlexCache (origin_1 on vs2) resides on site_C (not in the MetroCluster configuration)

When switchover is triggered, and if site_A and site_C are not connected, you must manually repeer the SVMs on site_B (the switchover cluster) and site_C using the `vserver peer repeer` command after the switchover.

When switchback is performed, you must again repeer the SVMs on site_A (the original cluster) and site_C.

FabricPool support in MetroCluster configurations

Starting with ONTAP 9.7, MetroCluster configurations support FabricPool storage tiers.

For general information on using FabricPools, see the [Disks and Aggregates Power Guide](#).

Considerations when using FabricPools

- The clusters must have FabricPool licenses with matching capacity limits.
- The clusters must have IPSpaces with matching names.

This can be the default IPSpace, or an IP space an administrator has created. This IPSpace will be used for FabricPool object store configuration setups.

- For the selected IPSpace, each cluster must have an intercluster LIF defined that can reach the external object store

Configuring an aggregate for use in a mirrored FabricPool



Before you configure the aggregate you must set up object stores as described in "Setting up object stores for FabricPool in a MetroCluster configuration" in the [Disks and Aggregates Power Guide](#).

To configure an aggregate for use in a FabricPool:

1. Create the aggregate or select an existing aggregate.
2. Mirror the aggregate as a typical mirrored aggregate within the MetroCluster configuration.
3. Create the FabricPool mirror with the aggregate, as described in the [Disks and Aggregates Power Guide](#):
 - a. Attach a primary object store.

This object store is physically closer to the cluster.

- b. Add a mirror object store.

This object store is physically further distant to the cluster than the primary object store.

FlexGroup support in MetroCluster configurations

Starting with ONTAP 9.6 MetroCluster configurations support FlexGroup volumes.

Job schedules in a MetroCluster configuration

In ONTAP 9.3 and later, user-created job schedules are automatically replicated between clusters in a MetroCluster configuration. If you create, modify, or delete a job schedule on a cluster, the same schedule is automatically created on the partner cluster, using Configuration Replication Service (CRS).



System-created schedules are not replicated and you must manually perform the same operation on the partner cluster so that job schedules on both clusters are identical.

Cluster peering from the MetroCluster site to a third cluster

Because the peering configuration is not replicated, if you peer one of the clusters in the MetroCluster configuration to a third cluster outside of that configuration, you must also configure the peering on the partner MetroCluster cluster. This is so that peering can be maintained if a switchover occurs.

The non-MetroCluster cluster must be running ONTAP 8.3 or later. If not, peering is lost if a switchover occurs even if the peering has been configured on both MetroCluster partners.

LDAP client configuration replication in a MetroCluster configuration

An LDAP client configuration created on a storage virtual machine (SVM) on a local cluster is replicated to its partner data SVM on the remote cluster. For example, if the LDAP client configuration is created on the admin SVM on the local cluster, then it is replicated to all the admin data SVMs on the remote cluster. This MetroCluster feature is intentional so that the LDAP client configuration is active on all the partner SVMs on the remote cluster.

Networking and LIF creation guidelines for MetroCluster configurations

You should be aware of how LIFs are created and replicated in a MetroCluster configuration. You must also know about the requirement for consistency so that you can make proper decisions when configuring your network.

Related information

[ONTAP concepts](#)

IPspace object replication and subnet configuration requirements

You should be aware of the requirements for replicating IPspace objects to the partner cluster and for configuring subnets and IPv6 in a MetroCluster configuration.

IPspace replication

You must consider the following guidelines while replicating IPspace objects to the partner cluster:

- The IPspace names of the two sites must match.
- IPspace objects must be manually replicated to the partner cluster.

Any storage virtual machines (SVMs) that are created and assigned to an IPspace before the IPspace is replicated will not be replicated to the partner cluster.

Subnet configuration

You must consider the following guidelines while configuring subnets in a MetroCluster configuration:

- Both clusters of the MetroCluster configuration must have a subnet in the same IPspace with the same subnet name, subnet, broadcast domain, and gateway.
- The IP ranges of the two clusters must be different.

In the following example, the IP ranges are different:

```
cluster_A::> network subnet show
```

```
IPspace: Default
```

Subnet		Broadcast		Avail/	
Name	Subnet	Domain	Gateway	Total	Ranges
-----	-----	-----	-----	-----	
subnet1	192.168.2.0/24	Default	192.168.2.1	10/10	
	192.168.2.11-192.168.2.20				

```
cluster_B::> network subnet show
```

```
IPspace: Default
```

Subnet		Broadcast		Avail/	
Name	Subnet	Domain	Gateway	Total	Ranges
-----	-----	-----	-----	-----	
subnet1	192.168.2.0/24	Default	192.168.2.1	10/10	
	192.168.2.21-192.168.2.30				

IPv6 configuration

If IPv6 is configured on one site, IPv6 must be configured on the other site as well.

Requirements for LIF creation in a MetroCluster configuration

You should be aware of the requirements for creating LIFs when configuring your network in a MetroCluster configuration.

You must consider the following guidelines when creating LIFs:

- Fibre Channel: You must use stretched VSAN or stretched fabrics
- IP/iSCSI: You must use layer 2 stretched network
- ARP broadcasts: You must enable ARP broadcasts between the two clusters
- Duplicate LIFs: You must not create multiple LIFs with the same IP address (duplicate LIFs) in an IPspace

- NFS and SAN configurations: You must use different storage virtual machines (SVMs) for both the unmirrored and mirrored aggregates

Verify LIF creation

You can confirm the successful creation of a LIF in a MetroCluster configuration by running the `metrocluster check lif show` command. If you encounter any issues while creating the LIF, you can use the `metrocluster check lif repair-placement` command to fix the issues.

LIF replication and placement requirements and issues

You should be aware of the LIF replication requirements in a MetroCluster configuration. You should also know how a replicated LIF is placed on a partner cluster, and you should be aware of the issues that occur when LIF replication or LIF placement fails.

Replication of LIFs to the partner cluster

When you create a LIF on a cluster in a MetroCluster configuration, the LIF is replicated on the partner cluster. LIFs are not placed on a one-to-one name basis. For availability of LIFs after a switchover operation, the LIF placement process verifies that the ports are able to host the LIF based on reachability and port attribute checks.

The system must meet the following conditions to place the replicated LIFs on the partner cluster:

Condition	LIF type: FC	LIF type: IP/iSCSI
Node identification	<p>ONTAP attempts to place the replicated LIF on the disaster recovery (DR) partner of the node on which it was created.</p> <p>If the DR partner is unavailable, the DR auxiliary partner is used for placement.</p>	<p>ONTAP attempts to place the replicated LIF on the DR partner of the node on which it was created.</p> <p>If the DR partner is unavailable, the DR auxiliary partner is used for placement.</p>
Port identification	<p>ONTAP identifies the connected FC target ports on the DR cluster.</p>	<p>The ports on the DR cluster that are in the same IPspace as the source LIF are selected for a reachability check.</p> <p>If there are no ports in the DR cluster in the same IPspace, the LIF cannot be placed.</p> <p>All of the ports in the DR cluster that are already hosting a LIF in the same IPspace and subnet are automatically marked as reachable; and can be used for placement. These ports are not included in the reachability check.</p>

Condition	LIF type: FC	LIF type: IP/iSCSI
Reachability check	<p>Reachability is determined by checking for the connectivity of the source fabric WWN on the ports in the DR cluster.</p> <p>If the same fabric is not present at the DR site, the LIF is placed on a random port on the DR partner.</p>	<p>Reachability is determined by the response to an Address Resolution Protocol (ARP) broadcast from each previously identified port on the DR cluster to the source IP address of the LIF to be placed.</p> <p>For reachability checks to succeed, ARP broadcasts must be allowed between the two clusters.</p> <p>Each port that receives a response from the source LIF will be marked as possible for placement.</p>
Port selection	<p>ONTAP categorizes the ports based on attributes such as adapter type and speed, and then selects the ports with matching attributes.</p> <p>If no ports with matching attributes are found, the LIF is placed on a random connected port on the DR partner.</p>	<p>From the ports that are marked as reachable during the reachability check, ONTAP prefers ports that are in the broadcast domain that is associated with the subnet of the LIF.</p> <p>If there are no network ports available on the DR cluster that are in the broadcast domain that is associated with the subnet of the LIF, then ONTAP selects ports that have reachability to the source LIF.</p> <p>If there are no ports with reachability to the source LIF, a port is selected from the broadcast domain that is associated with the subnet of the source LIF, and if no such broadcast domain exists, a random port is selected.</p> <p>ONTAP categorizes the ports based on attributes such as adapter type, interface type, and speed, and then selects the ports with matching attributes.</p>
LIF placement	From the reachable ports, ONTAP selects the least loaded port for placement.	From the selected ports, ONTAP selects the least loaded port for placement.

Placement of replicated LIFs when the DR partner node is down

When an iSCSI or FC LIF is created on a node whose DR partner has been taken over, the replicated LIF is placed on the DR auxiliary partner node. After a subsequent giveback operation, the LIFs are not automatically

moved to the DR partner. This can lead to LIFs being concentrated on a single node in the partner cluster. During a MetroCluster switchover operation, subsequent attempts to map LUNs belonging to the storage virtual machine (SVM) fail.

You should run the `metrocluster check lif show` command after a takeover operation or giveback operation to verify that the LIF placement is correct. If errors exist, you can run the `metrocluster check lif repair-placement` command to resolve the issues.

LIF placement errors

LIF placement errors that are displayed by the `metrocluster check lif show` command are retained after a switchover operation. If the `network interface modify`, `network interface rename`, or `network interface delete` command is issued for a LIF with a placement error, the error is removed and does not appear in the output of the `metrocluster check lif show` command.

LIF replication failure

You can also check whether LIF replication was successful by using the `metrocluster check lif show` command. An EMS message is displayed if LIF replication fails.

You can correct a replication failure by running the `metrocluster check lif repair-placement` command for any LIF that fails to find a correct port. You should resolve any LIF replication failures as soon as possible to verify the availability of LIF during a MetroCluster switchover operation.



Even if the source SVM is down, LIF placement might proceed normally if there is a LIF belonging to a different SVM in a port with the same IPspace and network in the destination SVM.

Volume creation on a root aggregate

The system does not allow the creation of new volumes on the root aggregate (an aggregate with an HA policy of CFO) of a node in a MetroCluster configuration.

Because of this restriction, root aggregates cannot be added to an SVM using the `vserver add-aggregates` command.

SVM disaster recovery in a MetroCluster configuration

Starting with ONTAP 9.5, active storage virtual machines (SVMs) in a MetroCluster configuration can be used as sources with the SnapMirror SVM disaster recovery feature. The destination SVM must be on the third cluster outside of the MetroCluster configuration.

You should be aware of the following requirements and limitations of using SVMs with SnapMirror disaster recovery:


- Only an active SVM within a MetroCluster configuration can be the source of an SVM disaster recovery relationship.

A source can be a sync-source SVM before switchover or a sync-destination SVM after switchover.

- When a MetroCluster configuration is in a steady state, the MetroCluster sync-destination SVM cannot be


the source of an SVM disaster recovery relationship, since the volumes are not online.

The following image shows the SVM disaster recovery behavior in a steady state:

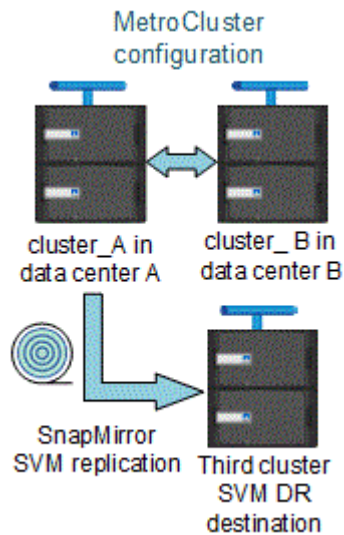

- When the sync-source SVM is the source of an SVM DR relationship, the source SVM DR relationship information is replicated to the MetroCluster partner.

This enables the SVM DR updates to continue after a switchover as shown in the following image:

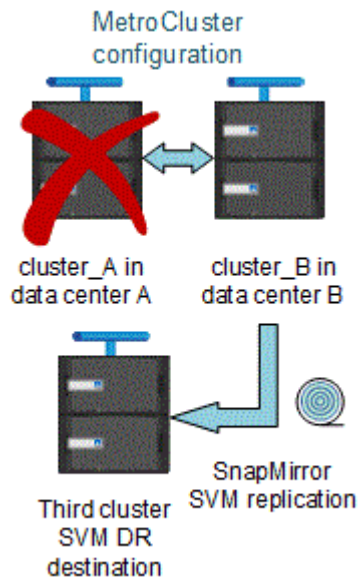

- During the switchover and switchback processes, replication to the SVM DR destination might fail.


However, after the switchover or switchback process completes, the next SVM DR scheduled updates will succeed.

See the section “Replicating the SVM configuration” in the [Data Protection Power Guide](#) for details on configuring an SVM DR relationship.

SVM resynchronization at a disaster recovery site

During resynchronization, the storage virtual machines (SVMs) disaster recovery (DR) source on the MetroCluster configuration is restored from the destination SVM on the non-MetroCluster site.

During resynchronization, the source SVM (cluster_A) temporarily acts as a destination SVM as shown in the following image:

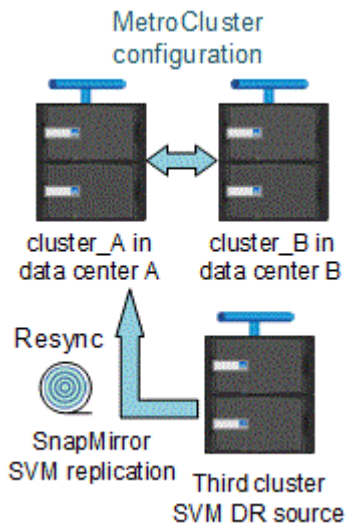

If an unplanned switchover occurs during resynchronization

Unplanned switchovers that occur during the resynchronization will halt the resynchronization transfer. If an unplanned switchover occurs, the following conditions are true:

- The destination SVM on the MetroCluster site (which was a source SVM prior to resynchronization) remains as a destination SVM. The SVM at the partner cluster will continue to retain its subtype and remain inactive.
- The SnapMirror relationship must be re-created manually with the sync-destination SVM as the destination.
- The SnapMirror relationship does not appear in the SnapMirror show output after a switchover at the survivor site unless a SnapMirror create operation is executed.

Performing switchback after an unplanned switchover during resynchronization

To successfully perform the switchback process, the resynchronization relationship must be broken and deleted. Switchback is not permitted if there are any SnapMirror DR destination SVMs in the MetroCluster configuration or if the cluster has an SVM of subtype "dp-destination".

Output of the storage disk show and storage shelf show commands in a two-node stretch MetroCluster configuration

In a two-node stretch MetroCluster configuration, the `is-local-attach` field of the `storage disk show` and `storage shelf show` commands shows all of the disks and storage shelves as local, regardless of the node to which they are attached.

Output for the storage aggregate plex show command is indeterminate after a MetroCluster switchover

When you run the `storage aggregate plex show` command after a MetroCluster switchover, the status of plex0 of the switched over root aggregate is indeterminate and is displayed as `failed`. During this time, the switched over root is not updated. The actual status of this plex can only be determined after the MetroCluster healing phase.

Modifying volumes to set the NVFAIL flag in case of switchover

You can modify a volume so that the NVFAIL flag is set on the volume in the event of a MetroCluster switchover. The NVFAIL flag causes the volume to be fenced off from any modification. This is required for volumes that need to be handled as if committed writes to the volume were lost after the switchover.



In ONTAP versions earlier than 9.0, the NVFAIL flag is used for each switchover. In ONTAP 9.0 and later versions, the unplanned switchover (USO) is used.

Steps

1. Enable MetroCluster configuration to trigger NVFAIL on switchover by setting the `vol -dr-force -nvfail` parameter to on:

```
vol modify -vserver vservice-name -volume volume-name -dr-force-nvfail on
```

Transitioning from a stretch to a fabric-attached MetroCluster configuration

In a fabric-attached MetroCluster configuration, the nodes are in different locations. This geographical difference increases the disaster protection. To transition from a stretch to a fabric-attached MetroCluster configuration, you must add FC switches and, if necessary, FC-to-SAS bridges to the configuration.

- You must have disabled automatic switchover on both of the clusters by running the `metrocluster modify -auto-switchover-failure-domain auto-disabled` command.
- You must have shut down the nodes.

This procedure is disruptive.

The MetroCluster configuration must be transitioned on both sites. After upgrading the MetroCluster configuration, you must enable automatic switchover on both the clusters. You also must validate the configuration by running the `metrocluster check run` command.

This procedure gives an overview of the required steps. For detailed steps, you must refer to specific sections in the [Fabric-attached MetroCluster Installation and Configuration Guide](#). You do not need to do a full installation and configuration.

Steps

1. Prepare for the upgrade by carefully reviewing the "Preparing for the MetroCluster installation" section of the [Fabric-attached MetroCluster Installation and Configuration Guide](#).
2. Install, cable, and configure the required switches and FC-to-SAS bridges.



You should use the procedures in the section "Cabling a fabric-attached MetroCluster configuration" of the [Fabric-attached MetroCluster Installation and Configuration Guide](#).

3. Refresh the MetroCluster configuration using the following steps.

Do not use the procedures in the section "Configuring the MetroCluster software in ONTAP" found in the xref:./install-stretch/ [Fabric-attached MetroCluster Installation and Configuration Guide](#).

- a. Enter advanced privilege mode: `+ set -privilege advanced`
- b. Refresh the MetroCluster configuration: `+ metrocluster configure -refresh true`

The following command refreshes the MetroCluster configuration on all the nodes in the DR group that contains controller_A_1:

```
controller_A_1::*> metrocluster configure -refresh true
[Job 009] Job succeeded: Configure is successful.
```

- c. Return to admin privilege mode: `+ set -privilege admin`
4. Check the MetroCluster configuration for errors and verify that it is operational.

You should use the procedures in the following sections of the [Fabric-attached MetroCluster Installation and Configuration Guide](#):

- Checking for MetroCluster configuration errors with Config Advisor
- Verifying local HA operation
- Verifying switchover, healing, and switchback

Where to find additional information

You can learn more about MetroCluster configuration and operation from the NetApp documentation library.

MetroCluster and miscellaneous guides

Guide	Content
ONTAP 9 Documentation Center	<ul style="list-style-type: none">• All MetroCluster guides
	<ul style="list-style-type: none">• A technical overview of the MetroCluster FC configuration and operation.• Best practices for MetroCluster FC configuration.

Fabric-attached MetroCluster installation and configuration	<ul style="list-style-type: none"> • Fabric-attached MetroCluster architecture • Cabling the configuration • Configuring the FC-to-SAS bridges • Configuring the FC switches • Configuring the MetroCluster in ONTAP
MetroCluster IP installation and configuration	<ul style="list-style-type: none"> • MetroCluster IP architecture • Cabling the configuration • Configuring the MetroCluster in ONTAP
MetroCluster management and disaster recovery	<ul style="list-style-type: none"> • Understanding the MetroCluster configuration • Switchover, healing and switchback • Disaster recovery
Maintain MetroCluster Components	<ul style="list-style-type: none"> • Guidelines for maintenance in a MetroCluster FC configuration • Hardware replacement or upgrade and firmware upgrade procedures for FC-to-SAS bridges and FC switches • Hot-adding a disk shelf in a fabric-attached or stretch MetroCluster FC configuration • Hot-removing a disk shelf in a fabric-attached or stretch MetroCluster FC configuration • Replacing hardware at a disaster site in a fabric-attached or stretch MetroCluster FC configuration • Expanding a two-node fabric-attached or stretch MetroCluster FC configuration to a four-node MetroCluster configuration. • Expanding a four-node fabric-attached or stretch MetroCluster FC configuration to an eight-node MetroCluster FC configuration.
MetroCluster Transition Guide MetroCluster Upgrade and Expansion Guide	<ul style="list-style-type: none"> • Upgrading or refreshing a MetroCluster configuration • Transitioning from a MetroCluster FC configuration to a MetroCluster IP configuration • Expanding a MetroCluster configuration by adding additional nodes
MetroCluster Tiebreaker Software Installation and Configuration Guide	<ul style="list-style-type: none"> • Monitoring the MetroCluster configuration with the MetroCluster Tiebreaker software

Active IQ Unified Manager documentation NetApp Documentation: Product Guides and Resources	<ul style="list-style-type: none"> • Monitoring the MetroCluster configuration and performance
Copy-based transition	<ul style="list-style-type: none"> • Transitioning data from 7-Mode storage systems to clustered storage systems
ONTAP concepts	<ul style="list-style-type: none"> • How mirrored aggregates work

Copyright Information

Copyright © 2021 NetApp, Inc. All rights reserved. Printed in the U.S. No part of this document covered by copyright may be reproduced in any form or by any means-graphic, electronic, or mechanical, including photocopying, recording, taping, or storage in an electronic retrieval system- without prior written permission of the copyright owner.

Software derived from copyrighted NetApp material is subject to the following license and disclaimer:

THIS SOFTWARE IS PROVIDED BY NETAPP "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE HEREBY DISCLAIMED. IN NO EVENT SHALL NETAPP BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

NetApp reserves the right to change any products described herein at any time, and without notice. NetApp assumes no responsibility or liability arising from the use of products described herein, except as expressly agreed to in writing by NetApp. The use or purchase of this product does not convey a license under any patent rights, trademark rights, or any other intellectual property rights of NetApp.

The product described in this manual may be protected by one or more U.S. patents, foreign patents, or pending applications.

RESTRICTED RIGHTS LEGEND: Use, duplication, or disclosure by the government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.277-7103 (October 1988) and FAR 52-227-19 (June 1987).

Trademark Information

NETAPP, the NETAPP logo, and the marks listed at <http://www.netapp.com/TM> are trademarks of NetApp, Inc. Other company and product names may be trademarks of their respective owners.