



User Manual UM3148

DT5730/DT5725

8-Channel 14-bit 500/250 MS/s Digitizer

Rev. 2 - 10 June 2016

Purpose of this Manual

This document contains the full hardware description of the DT5730 and DT5725 digitizers and the principle of operating as Waveform Digitizer (based on the hereafter called *default firmware*).

Firmware version of reference: rel. 4.8_0.5

For any reference to registers in this user manual, please refer to document [RD2] at the digitizer web page.

Change Document Record

Date	Revision	Changes
14 February 2014	00	Initial release
15 December 2014	01	Added new § 6 on cooling management and § 7 on temperature protection. Updated § Trigger Management. General revision.
10 June 2016	02	Fully reviewed to the new DT5725 digitizer (250 MS/s). Updated § 1, § 3, § 5, § 8, § Clock Distribution, § PLL Mode, § Trigger Clock, § Channel Calibration, § Custom Sized Events, § Event Structure, § Trigger Distribution, § DPP-PSD Control Software, § 13. Added § Changing the ADC Frequency, § CAENScope, § MC ² Analyzer (MC ² A)

Symbols, abbreviated terms and notation

GUI	Graphical User Interface
DPP	Digital Pulse Processing
ETTT	Extended Trigger Time Tag
OS	Operating System
PSD	Pulse Shape Discrimination
TTT	Trigger Time Tag

Reference Documents

- [RD1] GD2512 – CAENUpgrader QuickStart Guide
- [RD2] UM5118 – 725-730 Families Default Firmware Registers
- [RD3] GD2783 – First Installation Guide to Desktop Digitizers & MCA
- [RD4] UM1934 - CAENComm User & Reference Manual
- [RD5] UM1935 - CAENDigitizer User & Reference Manual
- [RD6] UM2091 - CAEN WaveDump User Manual
- [RD7] GD2483 - WaveDump QuickStart Guide
- [RD8] UM2092 - CAENSCOPE User Manual
- [RD9] UM2580 - Digital Pulse Shape Discriminator (DPP-PSD) User Manual
- [RD10] UM3182 - DPP-PHA and MC²Analyzer User Manual
- [RD11] GD2728 – How to make Coincidences with CAEN Digitizers

All documents can be downloaded at: <http://www.caen.it/csite/LibrarySearch.jsp>

CAEN S.p.A.
Via Vetraia, 11 55049 Viareggio (LU) - ITALY
Tel. +39.0584.388.398 Fax +39.0584.388.959
info@caen.it
www.caen.it

© CAEN SpA – 2016

Disclaimer

No part of this manual may be reproduced in any form or by any means, electronic, mechanical, recording, or otherwise, without the prior written permission of CAEN SpA.

The information contained herein has been carefully checked and is believed to be accurate; however, no responsibility is assumed for inaccuracies. CAEN SpA reserves the right to modify its products specifications without giving any notice; for up to date information please visit www.caen.it.

MADE IN ITALY : We stress the fact that all the boards are made in Italy because in this globalized world, where getting the lowest possible price for products sometimes translates into poor pay and working conditions for the people who make them, at least you know that who made your board was reasonably paid and worked in a safe environment. (this obviously applies only to the boards marked "MADE IN ITALY", we cannot attest to the manufacturing process of "third party" boards).



Index

Purpose of this Manual	2
Change Document Record	2
Symbols, abbreviated terms and notation	2
Reference Documents	2
Index	4
List of Figures.....	5
List of Tables	5
1 Introduction.....	6
2 Block Diagram	8
3 Technical Specifications	9
4 Packaging and Compliance	10
5 Power Requirements	11
6 Cooling Management.....	12
7 Temperature Protection	13
8 Panels Description.....	14
Front Panel.....	15
Rear Panel.....	18
9 Functional Description	19
Analog Input Stage.....	19
Clock Distribution.....	20
PLL Mode.....	21
Changing the ADC Frequency.....	21
Trigger Clock.....	21
Acquisition Modes	22
Channel Calibration	22
Acquisition Run/Stop	26
Acquisition Triggering: Samples & Events	27
Multi-Event Memory Organization	28
Custom Sized Events.....	28
Event Structure	29
Event Format Example.....	30
Acquisition Synchronization	31
Trigger Management.....	32
Software Trigger	32
External Trigger	32
Self-Trigger	33
Trigger Coincidence Level	35
Trigger Distribution	39
Example	40
Reset, Clear and Default Configuration	41
Global Reset	41
Memory Reset	41
Timer Reset	41
Data Transfer Capabilities.....	42
Block Transfers	42
Single Data Transfer	42
Optical Link and USB Access.....	43
10 Drivers & Libraries	44
Drivers	44
Libraries	44
11 Software Tools.....	46

CAENUpgrader	46
CAENComm Demo	47
CAEN WAVEDump	48
CAENScope	49
DPP-PSD Control Software	50
MC ² Analyzer (MC ² A)	51
12 HW Installation.....	52
Power-on Sequence.....	52
Power-on Status	52
13 Firmware and Upgrades	53
Default Firmware Upgrade	54
Upgrade Files Description	54
DPP Firmware Upgrade	54
Upgrade File Description	54
14 Technical Support.....	55
Returns and Repairs	55
Technical Support Service	55

List of Figures

Fig. 2.1: Block Diagram.....	8
Fig. 4.1: Front view	10
Fig. 5.1: AC/DC power supply provided with the module.....	11
Fig. 8.1: Front panel view	14
Fig. 8.2: Rear panel view	14
Fig. 9.1: Analog Input Diagram	19
Fig. 9.2: Clock Distribution Diagram.....	20
Fig. 9.3: Typical channel before the calibration (A and B) and after the calibration (C)	22
Fig. 9.4: Automatic calibration at WaveDump first run	24
Fig. 9.5: Temperature monitoring with manual calibration in WaveDump software	24
Fig. 9.6: Channel calibration in DPP-PSD Control Software	25
Fig. 9.7: Channel calibration in MC ² Analyzer software	25
Fig. 9.8: Trigger overlap.....	27
Fig. 9.9: Block Diagram of the trigger management	32
Fig. 9.10: Self Trigger and Trigger Request logic for Ch0 and Ch1 couple. A single trigger request signal is generated.....	33
Fig. 9.11: Channel over/under threshold signal.....	33
Fig. 9.12: Channel pulse signal	34
Fig. 9.13: Trigger request management at mezzanine level with Majority level = 0	36
Fig. 9.14: Trigger request management at motherboard level with Majority level = 0	36
Fig. 9.15: Trigger request relationship with Majority level = 1 and T _{TVAW} ≠ 0.....	37
Fig. 9.16: Trigger request relationship with Majority level = 1 and T _{TVAW} = 0.....	38
Fig. 9.17: Trigger configuration on GPO front panel output connector	39
Fig. 10.1: Required libraries and drivers.....	45
Fig. 11.1: CAENUpgrader Graphical User Interface.....	46
Fig. 11.2: CAENComm Demo Java and LabVIEW graphical interface.....	47
Fig. 11.3: CAEN WaveDump	48
Fig. 11.4: CAENScope main frame	49
Fig. 11.5: DPP-PSD Control Software: Top – DPP settings Tab and typical ⁶⁰ Co Total Charge Spectrum; Bottom - PSD 2-D Scatter Plot.....	50
Fig. 11.6: MC ² Analyzer (MC ² A) software tool	51
Fig. 12.1: Front panel LEDs status at power ON.....	52

List of Tables

Tab. 1.1: Table of models and related items.....	7
Tab. 3.1: Specifications table	9
Tab. 9.1: Buffer Organization	28
Tab. 9.2: TRG OPTIONS configuration table	29
Tab. 9.3: Event Format Example.....	30

1 Introduction

The DT5730 is a Desktop module housing a 8-channel 14-bit 500 MS/s FLASH ADC Waveform Digitizer with software selectable $2 V_{pp}$ or $0.5 V_{pp}$ input dynamic range on single ended MCX coaxial connectors. The DC offset is adjustable in the $\pm 1 V$ (@ $2 V_{pp}$) or ± 0.25 (@ $0.5 V_{pp}$) range via a 16-bit DAC on each channel (see § **Analog Input Stage**).

Operationally, the mod. DT5725 differs from the DT5730 for working at 250 MS/s sampling frequency.

The ADC resolution and the sampling frequency make these digitizers well suited for mid-fast signal detection systems (e.g. liquid or inorganic scintillators coupled to PMTs or Silicon Photomultipliers).

Each channel has a SRAM Multi-Event Buffer divisible into $1 \div 1024$ buffers of programmable size. Two sizes of the channel digital memory are available by ordering option (see **Tab. 1.1**).

DT5730 and DT5725 digitizers are provided with FPGAs that can run special DPP firmware for Physics Applications (see § **13**).

A common acquisition trigger signal can be fed externally via the front panel TRG-IN input connector or via software. Alternatively, each channel is able to generate a self-trigger when the input signal goes under/over a programmable threshold. For each couple of adjacent channels, the relevant self-triggers are then processed to provide out a single trigger request. In the DPP firmware, the trigger requests can be used at channel level for the event acquisition (independent triggering), while in the default firmware they can be processed by the board to generate a common trigger causing all the channels to acquire an event simultaneously. The trigger from one board can be propagated to the other boards through the front panel GPO output connector.

During the acquisition, the data stream is continuously written in a circular memory buffer. When the trigger occurs, the digitizer writes further samples for the post trigger and freezes the buffer that can be read by one of the provided readout links. The acquisition can continue without any dead time in a new buffer.

DT5730 and DT5725 feature front panel CLK-IN connector as well as an internal PLL for clock synthesis from internal/external references. Multi-board synchronization is supported, so all DT5730 or all DT5725 can be synchronized to a common clock source and ensuring Trigger time stamps alignment. The fan-in of an external clock signal to each CLK-IN is required. Once synchronized, all data will be aligned and coherent across the multi-board system.

Each module houses USB 2.0 and Optical Link interfaces. USB 2.0 allows data transfers up to 30 MB/s. The Optical Link (CAEN proprietary CONET protocol) supports transfer rate of 80 MB/s and offers Daisy chain capability. Therefore, it is possible to connect up to 8 ADC modules to a single A2818 Optical Link Controller, or up to 32 using a A3818 (4-link version). Optical Link and USB accesses are internally arbitrated.

Board Models		Description	Product Code
DT5730	DT5730 - 8 ch. 14bit 500 MS/s Digitizer: 640kS/ch,CE30, SE		WDT5730XAAAAA
DT5730B	DT5730B - 8 ch. 14bit 500 MS/s Digitizer: 5.12MS/ch,CE30, SE		WDT5730BXAAAA
DT5725	DT5725 - 8 ch. 14bit 250 MS/s Digitizer: 640kS/ch,CE30, SE		WDT5725XAAAAA
DT5725B	DT5730B - 8 ch. 14bit 250 MS/s Digitizer: 5.12MS /ch,CE30, SE		WDT5725BXAAAA
DPP Firmware ^(*)		Description	Product Code
DPP-PSD (730 family)	DPP-PSD - Digital Pulse Processing for Pulse Shape Discrimination (x730)		WFWDPDPNGAA30
DPP-PSD (725 family)	DPP-PSD - Digital Pulse Processing for Pulse Shape Discrimination (x725)		WFWDPDPNGAA25
DPP-PHA (730 family)	DPP-PHA - Digital Pulse Processing for Pulse Height Analysis (x730)		WFWDPPTFAA30
DPP-PHA (725 family)	DPP-PHA - Digital Pulse Processing for Pulse Height Analysis(x725)		WFWDPPTFAA25
Related Products		Description	Product Code
A2818	A2818 – PCI Optical Link (Rhos compliant)		WA2818XAAAAA
A3818A	A3818A – PCIe 1 Optical Link		WA3818AXAAAA
A3818B	A3818B – PCIe 2 Optical Link		WA3818BXAAAA
A3818C	A3818C – PCIe 4 Optical Link		WA3818CXAAAA
Accessories		Description	Product Code
A317	Clock Distribution Cable		WA317XAAAAAA
A318	SE to Differential Clock Adapter		WA318XAAAAAA
A654	Single Channel MCX to LEMO Cable Adapter		WA654XAAAAAA
A654 KIT4	4 MCX TO LEMO Cable Adapter		WA654K4AAAAA
A654 KIT8	8 MCX TO LEMO Cable Adapter		WA654K8AAAAA
A659	A659 - Single Channel MCX to BNC Cable Adapter		WA659XAAAAAA
A659 KIT4	4 MCX TO BNC Cable Adapter		WA659K4AAAAA
A659 KIT8	8 MCX TO BNC Cable Adapter		WA659K8AAAAA
AI2730	Optical Fibre 30 m simplex		WAI2730XAAAA
AI2720	Optical Fibre 20 m simplex		WAI2720XAAAA
AI2705	Optical Fibre 5 m simplex		WAI2705XAAAA
AI2703	Optical Fibre 30 cm simplex		WAI2703XAAAA
AY2730	Optical Fibre 30 m duplex		WAY2730XAAAA
AY2720	Optical Fibre 20 m duplex		WAY2720XAAAA
AY2705	Optical Fibre 5 m duplex		WAY2705XAAAA

Tab. 1.1: Table of models and related items

^(*) Multi-license packs are also available. Please, refer to the Digitizer web page for the relevant ordering options.

2 Block Diagram

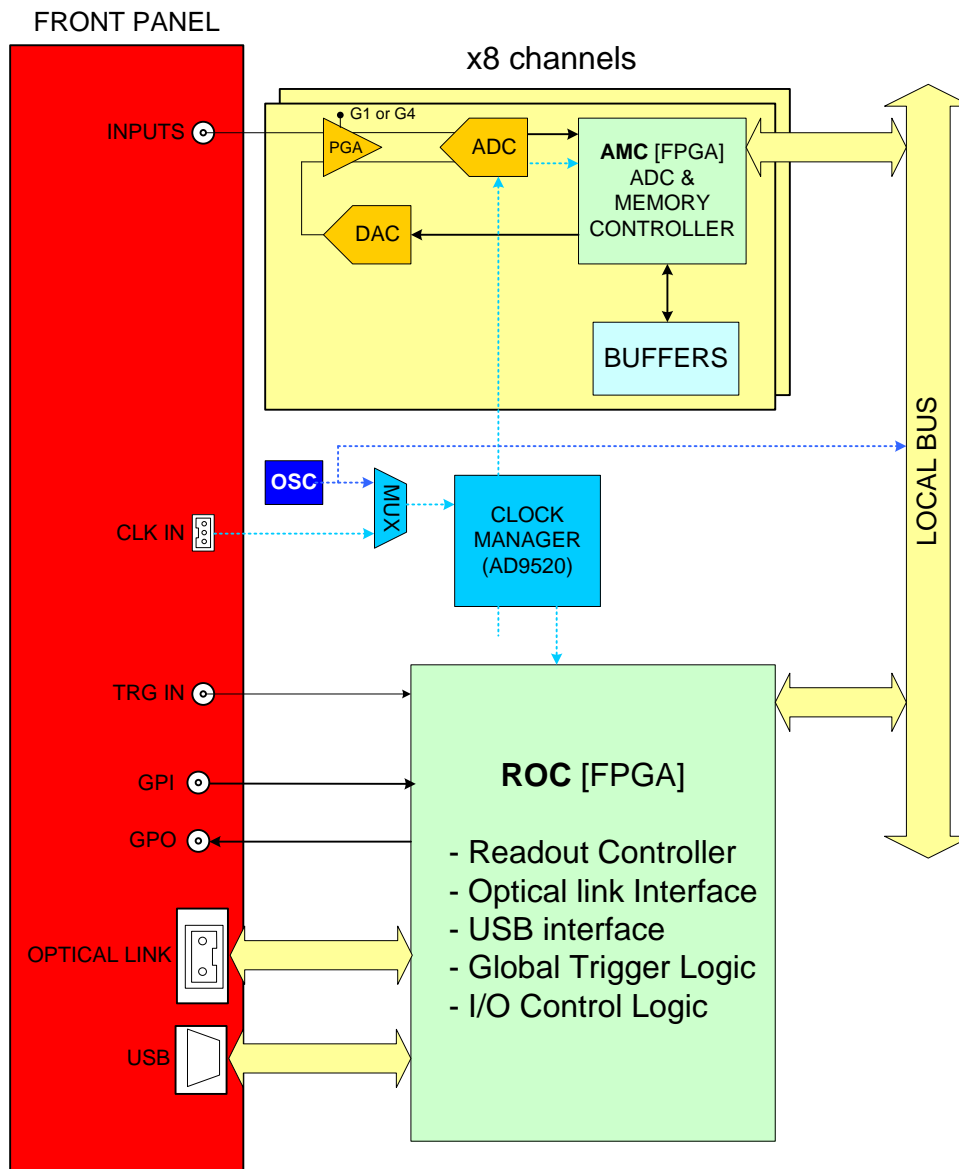


Fig. 2.1: Block Diagram

3 Technical Specifications

GENERAL	Form Factor 154x50x164 mm ³ (WxHxD) Desktop		
ANALOG INPUT	Channels 8 channels Single ended	Connector MCX	Bandwidth 250 MHz (DT5730) 125 MHz (DT5725)
	Impedance Z _{in} = 50 Ω	Full Scale Range 0.5 or 2 V _{pp} (default) SW selectable	Offset Programmable 16-bit DAC for DC offset adjustment on each channel. Range: ±1 V (@2V _{pp}); ±0.25 V (@0.5V _{pp})
DIGITAL CONVERSION	Resolution 14 bits	Sampling Rate 500 MS/s Simultaneously on each channel (DT5730 250 MS/s Simultaneously on each channel (DT5725)	
ADC CLOCK GENERATION	Clock source: internal/external On-board programmable PLL provides generation of the main board clocks from an internal (50 MHz local Oscillator) or external (front panel CLK-IN connector) reference		
DIGITAL I/O	CLK-IN (AMP Modu II) AC coupled differential input clock. LVDS, ECL, PECL, LVPECL, CML (single ended NIM/TTL available by CAEN adapter) Jitter<100ppm requested	GPO (LEMO) General purpose digital output NIM/TTL, R _t = 50 Ω	
	TRG-IN (LEMO) External trigger digital input NIM/TTL, Z _{in} = 50 Ω	GPI (LEMO) General purpose digital input NIM/TTL, Z _{in} = 50 Ω	
MEMORY	640 kS/ch or 5.12 MS/s Multi-event Buffer divisible into 1 ÷ 1024 buffers Independent read and write access; programmable event size and pre/post-trigger		
TRIGGER	Trigger Source <i>Self-trigger</i> : channel over/under-threshold for Common or Individual (DPP firmware only) Trigger generation <i>External-trigger</i> : Common trigger by TRG-IN connector <i>Software-trigger</i> : Common trigger by software command	Trigger Propagation GPO programmable digital output Trigger Time Stamp <i>Default FW</i> : 31-bit counter, 16 ns resolution, 17 s range; 48-bit extension available by firmware <i>DPP-PHA/DPP-PSD FW (DT5730)</i> : 31-bit counter, 2 ns resolution, 4 s range; 47-bit extension available by firmware; 10-bit and 2 ps fine time stamp by digital CFD (DPP-PSD FW only); 64-bit extension available by software <i>DPP-PHA/DPP-PSD FW (DT5725)</i> : 31-bit counter, 4 ns resolution, 8 s range; 47-bit extension available by firmware; 10-bit and 4 ps fine time stamp by digital CFD (DPP-PSD FW only); 64-bit extension available by software	
SYNCHRONIZATION	Clock Propagation <i>One-to-many</i> : clock distribution from an external clock source on CLK-IN connector	Acquisition Synchronization Sync, Start/Stop through digital I/O (TRG-IN or GPI input, GPO output) Trigger Time Stamps Alignment By GPI input connector	
ADC & MEM. CONTROLLER	Altera Cyclone EP4CE30 (one FPGA serves 4 channels)		
COMMUNICATION INTERFACE	Optical Link CAEN CONET proprietary protocol Up to 80 MB/s transfer rate Daisy chainable: it is possible to connect up to 8 or 32 ADC modules to a single Optical Link Controller (respectively A2818 or A3818)	USB USB 2.0 compliant Up to 30 MB/s transfer rate	
DPP FW SUPPORTED	DPP-PSD for the Pulse Shape Discrimination (e.g. Neutron-Gamma discrimination) DPP-PHA for the Pulse Height Analysis		
FIRMWARE UPGRADE	Firmware can be upgraded via USB/Optical Link		
SOFTWARE	General purpose C libraries, configuration tools, readout software (Windows and Linux support)		
POWER CONSUMPTIONS	DT5730	2.8 A @ 12 V (Typ.)	
	DT5725	t.b.d.	

Tab. 3.1: Specifications table

4 Packaging and Compliancy

DT5725 and DT5730 modules are Desktop boards housed in a 154 W x 50 H x 164 D mm³ alloy box.



Fig. 4.1: Front view

CAUTION: to manage the product, consult the operating instructions provided.



A POTENTIAL RISK EXISTS IF THE OPERATING INSTRUCTIONS ARE NOT FOLLOWED!

CAEN provides the specific document “Precautions for Handling, Storage and Installation” available in the documentation tab of the product web page that the user is mandatory to read before to operate with CAEN equipment.

5 Power Requirements

Both DT5725 and DT5730 modules are powered by the external AC/DC stabilized power supply provided with the digitizer and included in the delivered kit.

The DT5730 typical power consumption is 2.8 A (@ +12 V).



Note.: Using a different power supply source, like battery or linear type, it is recommended the source to provide +12 V and, at least, 3.5 A in case of DT5730; the power jack is a 2.1 mm type, a suitable cable is the RS 656-3816 type (or similar)



Fig. 5.1: AC/DC power supply provided with the module

6 Cooling Management

Starting from **revision 4** of the motherboard (readable at 0xF04C address of the *Configuration ROM*), DT5730 and DT5725 feature an automatic fan speed control to guarantee an appropriate cooling in consequence of internal temperature variations. The automatic control is managed by the ROC FPGA firmware from **revision 4.4** on.

CAEN HEARTLY RECOMMENDS TO MONITOR THE TEMPERATURE OF THE ADC CHIPS DURING THE BOARD OPERATION BY READING AT REGISTER ADDRESS 0x1nA8.

The user can manually set the fan speed through the bit[3] at register address 0x8168 (refer to [RD2]):

Hardware revision ≥ 4 and ROC FPGA firmware revision ≥ 4.4

- Bit[3] = 0 (default) sets the automatic fan speed control;
- Bit[3] = 1 sets HIGH the fan speed.

Hardware revision < 4 and ROC FPGA firmware revision < 4.4

- Bit[3] = 0 (default) sets LOW the fan speed;
- Bit[3] = 1 sets HIGH the fan speed.



WARNING: It is recommended not to run ROC FPGA firmware **revision < 4.4** on DT5730 or DT5725 with hardware **revision ≥ 4** as the fans will work always at the maximum speed to prevent from hardware damages, but with a high noisiness on the other hand.

7 Temperature Protection

TEMPERATURE PROTECTION IS NOT AVAILABLE FOR DEFAULT FIRMWARE RELEASES < 4.5_0.3 (REFER TO § 13)

To preserve hardware damages, DT5730 and DT5725 implement an automatic turning off of the board channels in event of internal over-temperature. Internal temperature can be monitored through register address 0x1nA8.

The over-temperature limit is fixed at 70°C. As soon as the internal temperature exceeds 70°C, the board enters the temperature protection condition and the firmware automatically performs the following actions:

- turns off all the channel ADCs;
- stops the acquisition, if running (data possibly stored at that moment can be readout in any case).

This status is valid as long as the internal temperature remains over 62°C. Starting from 61°C, the user is allowed to turn on the channel ADCs again and restart the acquisition, if necessary.

The temperature protection can be controlled through register addresses 0x8104 and 0x81C0.

8 Panels Description

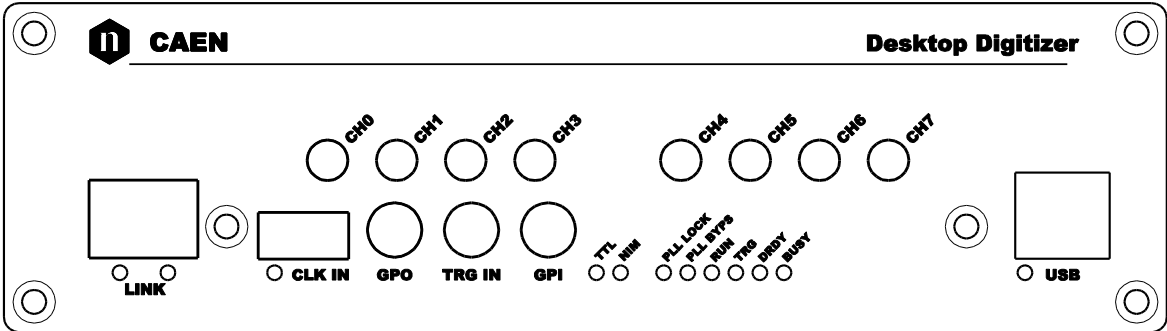


Fig. 8.1: Front panel view

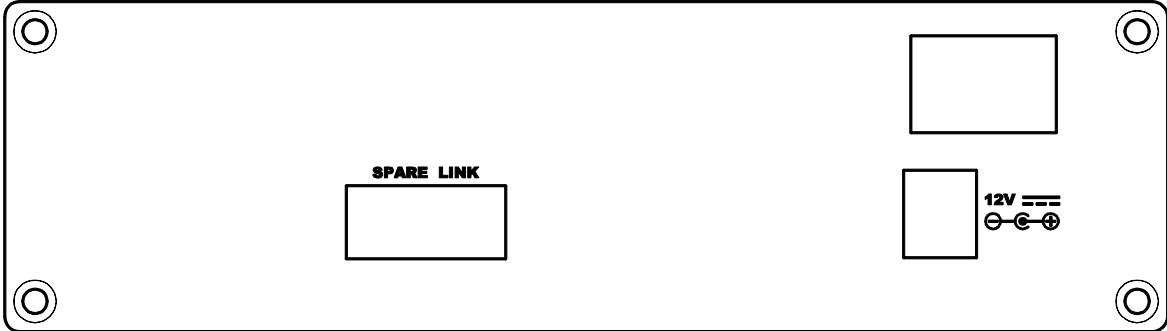


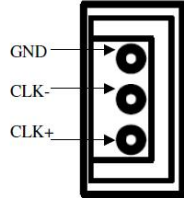




Fig. 8.2: Rear panel view


Front Panel

ANALOG INPUT		
	FUNCTION Input connectors (CH0 to CH7) receiving the input analog signals.	MECHANICAL SPECS Series: MCX connectors. Type: CS 85MCX-50-0-16. Manufacturer: SUHNER
	ELECTRICAL SPECS Input dynamics: 2 or 0.5 V _{pp} (SW selectable) Input impedance (Z _{in}): 50 Ω.	Suggested plug: MCX-50-2-16 type. Suggested cable: RG174 type.
CLK IN		
	FUNCTION Input connector for the external clock.	MECHANICAL SPECS Series: AMPMODU connectors. Type: 3-102203-4 (3-pin). Manufacturer: AMP Inc.
	ELECTRICAL SPECS Sign. type: differential (LVDS, ECL, PECL, LVPECL, CML). CAEN provides single-ended to differential A318 cable adapter (see Tab. 1.1) for CLK-IN. Coupling: AC. Z _{diff} : 100 Ω.	PINOUT 

CLK IN LED (GREEN): indicates the external clock is enabled.

GPO		
	FUNCTION General purpose programmable digital output connector to propagate: <ul style="list-style-type: none"> – the internal trigger sources; – the channel probes (i.e. signals from the mezzanines); – GPI signal according to register addresses 0x8110 and 0x811C, or <ul style="list-style-type: none"> – the motherboard probes (i.e. signals from the motherboard), like the Run signal, ClkOut signal, ClockPhase signal, PLL_Unlock signal or Busy signal according to register address 0x811C.	MECHANICAL SPECS Series: 101 A 004 connectors. Type: DLP 101 A 004-28. Manufacturer: FISCHER. Alternatively: Type: EPL 00 250 NTN. Manufacturer: LEMO.
	ELECTRICAL SPECS Signal level: NIM or TTL. Requires 50 Ω termination.	

TRG IN		
	FUNCTION Digital input connector for the external trigger.	MECHANICAL SPECS Series: 101 A 004 connectors. Type: DLP 101 A 004-28. Manufacturer: FISCHER. Alternatively: Type: EPL 00 250 NTN. Manufacturer: LEMO.
	ELECTRICAL SPECS Signal level: NIM or TTL. Input impedance (Z_{in}): 50 Ω .	

GPI		
	FUNCTION General purpose programmable input connector. Can be used to reset the time stamp (see § Timer Reset) or to start/stop the acquisition.	MECHANICAL SPECS Series: 101 A 004 connectors. Type: DLP 101 A 004-28. Manufacturer: FISCHER. Alternatively: Type: EPL 00 250 NTN. Manufacturer: LEMO.
	ELECTRICAL SPECS Signal level: NIM or TTL. Input impedance (Z_{in}): 50 Ω .	

OPTICAL LINK PORT



FUNCTION

Optical LINK connector for data readout and flow control. Daisy chainable. Compliant to Multimode 62.5/125µm cable featuring LC connectors on both sides.

ELECTRICAL SPECS

Transfer rate: up to 80 MB/s.


MECHANICAL SPECS

Series: SFF Transceivers.

Type: FTLF8519F-2KNL (LC connectors).

Manufacturer: FINISAR.

PINOUT



TX (red wrap)

RX (black wrap)

LINK LEDs (GREEN/YELLOW): right LED (GREEN) indicates the network presence, while left LED (YELLOW) signals the data transfer activity.

USB PORT



FUNCTION

USB connector for data readout and flow control.

ELECTRICAL SPECS

Standard: compliant to USB 2.0 and USB 1.0.

Transfer rate: up to 30 MB/s.

MECHANICAL SPECS

Series: USB connectors.

Type: 787780-2 (B-Type).

Manufacturer: AMP Inc.

USB LINK LED (GREEN): indicates the USB communication is active.

DIAGNOSTICS LEDs



TTL (GREEN): indicates the TTL standard is set for GPO, TRG IN, GPI;

NIM (GREEN): indicates the NIM standard is set for GPO, TRG IN, GPI;

PLL LOCK (GREEN): indicates the PLL is locked to the reference clock;

PLL BYPS (GREEN): indicates the PLL drives directly the ADCs. PLL circuit is switched off and PLL LOCK LED is turned off;

RUN (GREEN): indicates the acquisition is running (data taking). See § Acquisition Run/Stop;

TRG (GREEN): indicates the trigger is accepted.

DRDY (GREEN): indicates the event/data is present in the Output Buffer.

BUSY (RED): indicates all the buffers are full for at least one channel.

Rear Panel

SPARE LINK



FUNCTION

Auxiliary connector reserved for CAEN usage.

ELECTRICAL SPECS

Not available.

MECHANICAL SPECS

Series: Header connectors.

Type: 7610-5002-5+5.

Manufacturer: 3M.

DC INPUT



FUNCTION

Input connector for the desktop Digitizer main power supply from the external AC/DC adapter.

ELECTRICAL SPECS

Typ. Input voltage: +12 VDC.

MECHANICAL SPECS

Series: CC power supply connectors

Type: RAPC722X (DC power jack).

Manufacturer: Switchcraft Inc.

PINOUT



ON/OFF SWITCH



FUNCTION

Panel switch for module power supply ON/OFF:

○ → power supply OFF.

I → power supply ON.

ELECTRICAL SPECS

Not available.

MECHANICAL SPECS

Series: A1 switches.

Type: A11331122000 (Single pole two way)

Manufacturer: Molveno.

IDENTIFYING LABEL



FUNCTION

Board's identifying label indicating:

- the model;
- the serial number (S/N);
- the symbol of the CE conformity marking.

9 Functional Description

Analog Input Stage

Input dynamics can be $2 V_{pp}$ (default) or $0.5 V_{pp}$, by software selection (basing on the Programmable Gain Amplifier in the scheme of **Fig. 9.1**), on single ended MCX coaxial connectors (see § 8). A 16-bit DAC allows to add a DC offset in order to preserve the full dynamic range also in the extreme case of unipolar positive or negative input signal. The input bandwidth ranges from DC to 250 MHz (@3dB) for DT5730, to 125 MHz (@3dB) for DT5725, by 2nd order linear phase anti-aliasing low-pass filter.

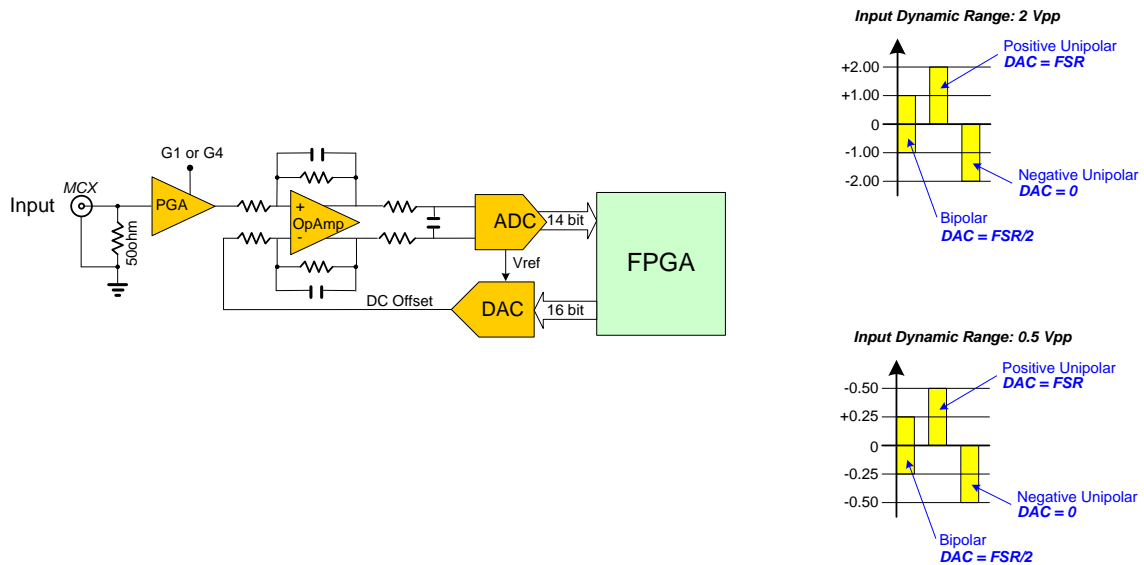


Fig. 9.1: Analog Input Diagram

Setting the input range requires a write access at register address 0x1n28, while at register address 0x1n98 it is possible to configure the DC offset level.

Clock Distribution

The module clock distribution takes place on two domains: OSC-CLK and REF-CLK; the former is a fixed 50MHz clock provided by an on-board oscillator, the latter provides the ADC sampling clock.

OSC-CLK handles Local Bus (communication between motherboard and mezzanine boards; see red traces in **Fig. 9.2**).

REF-CLK handles ADC sampling, trigger logic, acquisition logic (samples storage into RAM, buffer freezing on trigger) through a clock chain. Such domain can use either an external (via front panel signal on CLK-IN) or an internal (via local oscillator) source; in the latter case, OSC-CLK and REF-CLK will be synchronous (the operation mode remains the same anyway).

DT5730 and DT5725 use an integrated phase-locked-loop (PLL) and clock distribution device, AD9520. It is used to generate the sampling clock for ADCs and the mezzanine FPGA (SAMP-CLK0/SAMP-CLK1), as well as the trigger logic synchronization clock (TRG-CLK).

Both clocks can be generated from the internal oscillator (50 MHz) or from external clock input. By default, the board uses the internal clock as PLL reference (REF-CLK).

The external clock can be selected by write access at register address 0x8100 (refer to **[RD2]**). The external clock signal must be differential (LVDS, ECL, PECL, LVPECL, CML) with a jitter lower than 100ppm (see § **Tab. 3.1**).

AD9520 configuration can be changed and stored into non-volatile memory. Changing the AD9520 configuration is primarily intended to be used for external PLL reference clock frequency change:

DT5730 and DT5725 lock to an external 50 MHz clock with default AD9520 configuration (see § **PLL Mode**).

Refer to the AD9520 datasheet for more details:

http://www.analog.com/static/imported-files/data_sheets/AD9520-3.pdf

(in case the active link above doesn't work, copy and paste it on the internet browser)

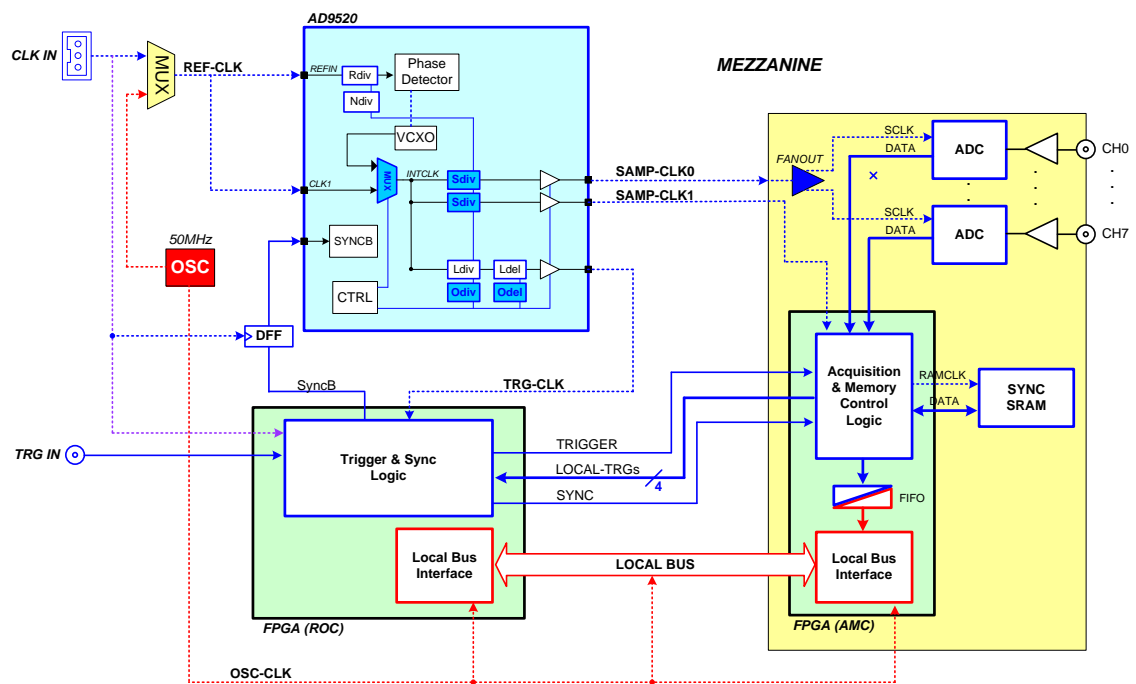


Fig. 9.2: Clock Distribution Diagram

PLL Mode

The Phase Detector within the AD9520 device allows to couple REF-CLK with a VCXO (500 MHz frequency) providing out the nominal ADCs frequency (500 MHz for DT5730 and 250 MHz for DT5725); for this purpose, it is necessary that REF-CLK is a submultiple of the VCXO frequency.

As introduced in § **Clock Distribution**, the source of the REF-CLK signal can be external (see **Fig. 9.2**) on CLK-IN front panel connector or internal from the 50 MHz local oscillator. The following options are allowed:

1. 50 MHz internal clock source – It's the standard operating mode, where the default AD9520 configuration doesn't require to be changed. OSC-CLK = REF-CLK.
2. 50 MHz external clock source – In this case it is not required to reprogram the AD9520 dividers, as the external clock reference is identical to the frequency of the internal oscillator. CLK-IN = OSC-CLK = REF-CLK.

Note that, In order the board to sense the external signal on CLK-IN and use it as new reference, bit[6] at register address 0x8100 must be set (see **[RD2]**).

3. External clock source different from 50 MHz – In this case, the user is required to program the AD9520 dividers in order to lock the VCXO to REF-CLK in order to provide out the 500 MHz (DT5730) or 250 MHz (DT5725) nominal sampling frequency. In principle, the allowed external frequencies are submultiples of the VCXO frequency (500 MHz). CLK-IN = REF-CLK.



Note: the user who wants to work as in point 3, please contact CAEN indicating the required reference clock frequency to check its feasibility and then receive the PLL programming file. The "Upgrade PLL" function in CAENUpgrader software tool can be used to update the digitizer PLL. See § 11 for the program description and refer to **[RD1]** for documentation. The programming file also takes care to set the board to sense the external signal on CLK-IN.

Changing the ADC Frequency

Please, contact CAEN (see § 14) for information on the feasibility to operate the DT5730/DT5725 with a sampling frequency lower than the nominal.

Trigger Clock

TRG-CLK signal has a 125-MHz frequency, that is equal to 1/4 (DT5730) or 1/2 (DT5725) of SAMP-CLK. In consequence, a 4 samples (DT5730) or 2 samples (DT5725) "uncertainty" occurs over the acquisition window.

Acquisition Modes

Channel Calibration

The module performs a self-calibration of the ADCs at its power-on. Anyway, in order to achieve the best performance, the calibration procedure is recommended to be executed by the user, on command, after the ADCs have stabilized their operating temperature. The calibration will not need to be repeated at each run unless the operating temperature changes significantly, or clock settings are modified (e.g. switching from internal to external clock).


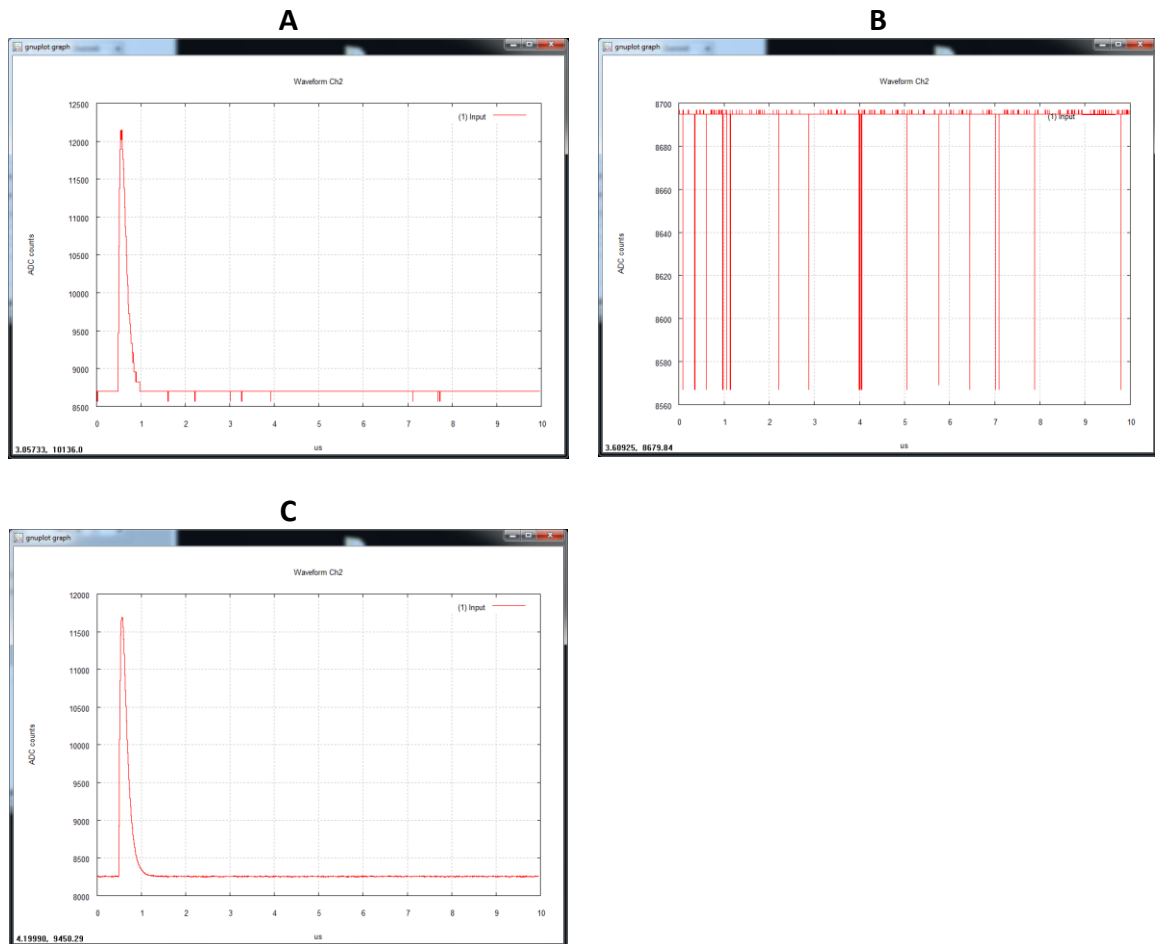


Fig. 9.3: Typical channel before the calibration (A and B) and after the calibration (C)

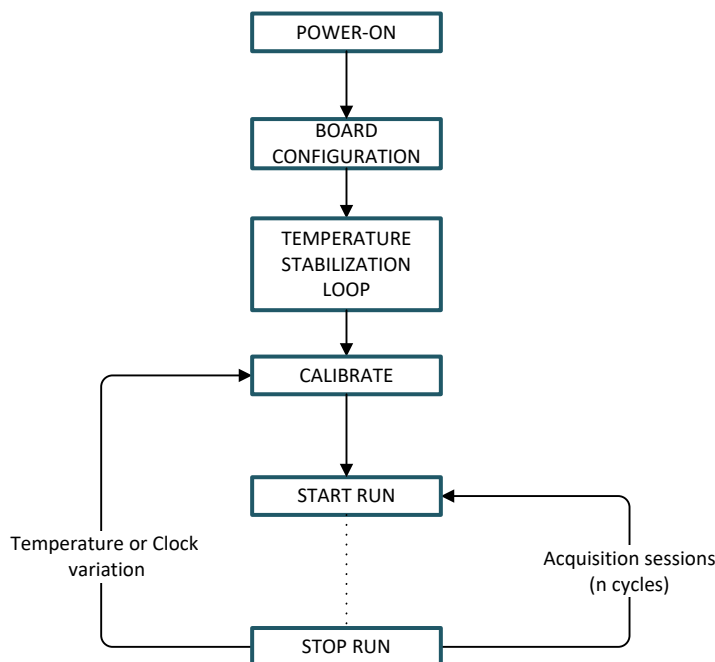The diagram below schematizes the flow for a proper calibration:



- At low level, the ADCs temperature can be read at the register address 0x1nA8, while the calibration must be performed through register address 0x809C. The following steps are required:
 - Write whatever value at register address 0x809C: the self-calibration process will start simultaneously on each channel of the board and the "Calibrating bit" flag of register address 0x1n88 will be set to 0.
 - Poll the "Calibrating bit" flag until it returns to 1.



Note: It is normally not required to calibrate after a board reset but, if a Reset command is intentionally issued to the digitizer (write access at register address 0xEF24) to be directly followed by a calibration procedure, it is recommended to wait for the board to reach stable conditions (indicatively 100 ms) before to start the calibration.

- At the library level, developers can exploit the CAENDigitizer library (see § 10) dedicated routines like *ReadTemperature()* function for temperature readings, *Set/GetChannelDCOffset* for DC Offset management, *Reset()* function to reset the board, and the *Calibrate()* function which executes the channel calibration steps above described.



IMPORTANT NOTE: Starting from CAENDigitizer release 2.6.1, the *Reset()* function has been modified so that it no longer includes the channel calibration routine implemented in the code. This calibration must be performed on command by the dedicated *Calibrate()* function. Please, see the Library user manual for reference ([RD5]).

- At software level, CAEN manages the on command channel calibration in different readout software (please, refer the relevant software User Manual for details).

➤ WaveDump

1. Launch WaveDump. This software performs an automatic ADC calibration and displays a message when it is completed (see Fig. 9.4).

```
*****
Wave Dump 3.7.2_20160420
*****
Opening Configuration File WaveDumpConfig.txt
Connected to CAEN Digitizer Model DT5725
ROC FPGA Release is 04.10 - Build 0401
AMC FPGA Release is 00.06 - Build 0401

ADC Calibration successfully executed.

[s] start/stop the acquisition, [q] quit, [SPACE] help
_
```

Fig. 9.4: Automatic calibration at WaveDump first run

This allows the user to start using the program sure that the digitizer has been calibrated at least once.

NOTE THAT: If SKIP_STARTUP_CALIBRATION parameter is set to YES in WaveDump configuration file, the automatic start-up calibration is not performed and no message is displayed

2. At any time, the user can check the channel temperatures (with the acquisition not running) by issuing multiple “m” commands from the keyboard.
3. In case of significant variations, issuing a “c” command provokes a manual channel calibration to be executed (see Fig. 9.5).

```
Reading at 4.49 MB/s <Trg Rate: 1137.62 Hz>
Reading at 4.47 MB/s <Trg Rate: 1133.66 Hz>
Acquisition stopped
CH00: 31 C
CH01: 31 C
CH02: 31 C
CH03: 31 C
CH04: 28 C
CH05: 28 C
CH06: 28 C
CH07: 28 C

CH00: 31 C
CH01: 31 C
CH02: 31 C
CH03: 31 C
CH04: 29 C
CH05: 29 C
CH06: 29 C
CH07: 29 C

ADC Calibration successfully executed.
```

Fig. 9.5: Temperature monitoring with manual calibration in WaveDump software

4. A new acquisition can start.

Please, refer to WaveDump User Manual for complete software description ([RD6]).

➤ **DPP-PSD Control Software**

1. Launch DPP-PSD Control Software
2. Connect to the digitizer
3. Before to start the acquisition, go to the “Stats” tab and monitor the channel temperatures displayed in the relevant column until you see they don’t vary significantly
4. Go to the “General” tab and press the “Calibrate” button
5. Start the acquisition



Fig. 9.6: Channel calibration in DPP-PSD Control Software

➤ **MC²Analyzer**

1. Launch MC²A
2. Connect to the digitizer
3. Before to start the acquisition, monitor the channel temperatures in *Tools->ADC calibration*
4. Press “Calibrate” button to perform the calibration
5. Start the acquisition

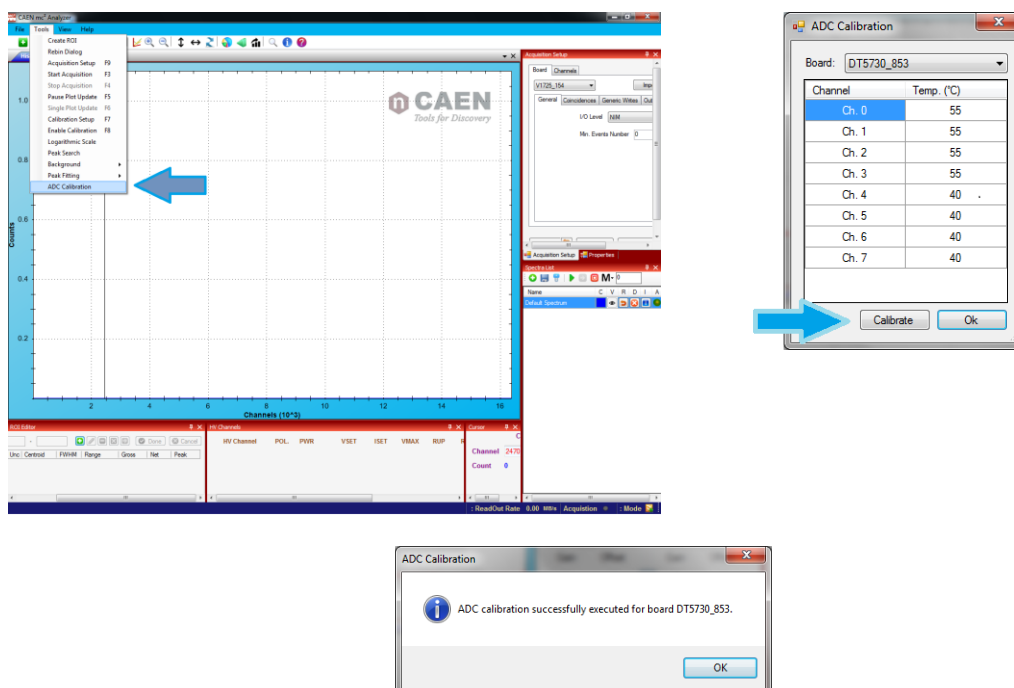


Fig. 9.7: Channel calibration in MC²Analyzer software

Acquisition Run/Stop

The acquisition can be started and stopped in different ways, according to bits[1:0] setting at register address 0x8100 and bit[2] of the same register:

- SW CONTROLLED (bits[1:0] = 00): Start and Stop take place by software command. Bit[2] = 0 means stopped, while bit[2] = 1 means running.
- GPI CONTROLLED MODE (bits[1:0] = 01): If the acquisition is armed (i.e. bit[2] = 1), then Run starts when GPI is asserted and stops when GPI returns inactive. If bit[2] = 0, the acquisition is always off.
- FIRST TRIGGER CONTROLLED (bits[1:0] = 10): bit[2] = 1 arms the acquisition and the Start is issued on the first trigger pulse (rising edge) on the TRG-IN connector. This pulse is not used as a trigger; actual triggers start from the second pulse on TRG-IN. The Stop acquisition must be SW controlled (i.e. reset of bit[2]).

Acquisition Triggering: Samples & Events

When the acquisition is running, a trigger signal allows to:

- Store the 31-bit counter value of the Trigger Time Tag (TTT).
The counter (representing a time reference), like so the Trigger Logic Unit (see **Fig. 9.2**) operates at a frequency of 125 MHz (i.e. 8 ns or 4 ADC clock cycles in case of DT5730, while 2 ADC clock cycles in case of DT5725). Due to the way the acquired data are written into the board internal memory (i.e. in 4-sample bunches), the TTT counter is read every 2 trigger logic clock cycles, which means the trigger time stamp resolution results in 16 ns (i.e. 62.5 MHz). Basing on that, the LSB of the TTT is always “0”;
- Increment the EVENT COUNTER.
- Fill the active buffer with the pre/post-trigger samples, whose number is programmable (Acquisition window width), freezing then the buffer for readout purposes, while acquisition continues on another buffer.

An event is therefore composed by the trigger time tag, pre- and post-trigger samples and the event counter.

Overlap between “acquisition windows” may occur (a new trigger occurs while the board is still storing the samples related to the previous trigger); this overlap can be either rejected or accepted (programmable via software).

If the board is programmed to accept the overlapped triggers (by programming at register address 0x8000), as the “overlapping” trigger arrives, the current active buffer is filled up, then the samples storage continues on the subsequent one. In this case events will not have all the same size (see **Fig. 9.8** below)

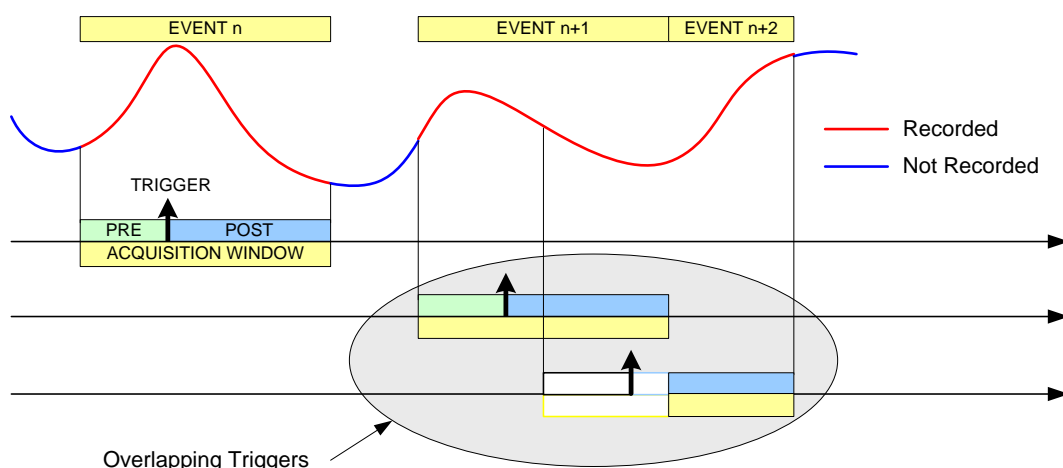


Fig. 9.8: Trigger overlap

A trigger can be refused for the following causes:

- Acquisition is not active.
- Memory is FULL and therefore there are no available buffers.
- The required number of samples for building the pre-trigger of the event is not reached yet; this happens typically as the trigger occurs too early either with respect to the *RUN Acquisition* command (see § **Acquisition Run/Stop**) or with respect to a buffer emptying after a *Memory FULL* status (see § **Acquisition Synchronization**).
- The trigger overlaps the previous one and the board is not enabled for accepting overlapped triggers.

As a trigger is refused, the current buffer is not frozen and the acquisition continues writing on it. The EVENT COUNTER can be programmed in order to be either incremented or not. If this function is enabled, the EVENT COUNTER value identifies the number of the triggers sent (but the event number sequence is lost); if the function is not enabled, the EVENT COUNTER value coincides with the sequence of buffers saved and readout.

Multi-Event Memory Organization

Each channel of the DT5730/DT5725 features a SRAM memory to store the acquired events. The memory size for the event storage is 640 kS/ch or 5.12 MS/s, according to the board version (see **Tab. 1.1**), and it can be divided in a programmable number of buffers, N_b (N_b from 1 up to 1024), by register address 0x800C, as described in **Tab. 9.1** below.

Register Value	Buffer Number (N_b)	Size of one Buffer (Samples)	
		SRAM 640 kS/ch ^(*)	SRAM 5.12 MS/ch ^(*)
0x00	1	640k - 10	5.12M - 10
0x01	2	320k - 10	2.56M - 10
0x02	4	160k - 10	1.28M - 10
0x03	8	80k - 10	640k - 10
0x04	16	40k - 10	320k - 10
0x05	32	20k - 10	160k - 10
0x06	64	10k - 10	80k - 10
0x07	128	5k - 10	40k - 10
0x08	256	2560 - 10	20k - 10
0x09	512	1280 - 10	10k - 10
0x0A	1024	640 - 10	5120 - 10

Tab. 9.1: Buffer Organization

Having 640 kS memory size as reference, this means that each buffer contains $640k/N_b$ samples (e.g. $N_b = 1024$ means 640 samples in each buffer).

(*)IMPORTANT: For AMC FPGA firmware release < **0.2**, the Size of one Buffer related to each Buffer Number must be intended as the number of the samples in **Tab. 9.1**. without decreasing by 10 samples.

Custom Sized Events

In case an event size minor than the buffer size is needed, the user can set the value N_{loc} at register address 0x8020; the event is so forced to be made by $10 \cdot N_{loc}$ samples. Setting $N_{loc} = 0$, the custom size is disabled. The value of N_{loc} must be set in order that the relevant number of samples does not exceed the buffer size and it mustn't be modified while the acquisition is running.



Note: Even using the custom size setting, the number of buffers and the buffer size are not affected by N_{loc} , but they are still determined by N_b .

The concepts of buffer organization and custom size directly affect the width of the acquisition window (i.e. number of the digitized waveform samples per event). The *Record Length* parameter defined in CAEN software (such as WaveDump and CAENScope introduced in § 11) and the *Set/GetRecordLength()* function of the CAENDigitizer library (refer to **[RD5]**) rely on these concepts.

Event Structure

The event can be readout via Optical Link or USB; data format is 32-bit long word (see **Tab. 9.3**)

An event is structured in:

- **Header** (four 32-bit words)
- **Data** (variable size and format)

Header consists in 4 words including the following information:

- **EVENT SIZE (Bit[27:0] of 1st header word)** = It is the size of the event (number of 32-bit long words);
- **BOARD FAIL FLAG (Bit[26] of 2nd header word)** = Implemented from ROC FPGA firmware revision **4.5** on (*reserved* otherwise), this bit is set to "1" in consequence of a hardware problem (e.g. PLL unlocking or over-temperature condition). The user can collect more information about the cause by reading at register address 0x8104 and contact CAEN Support Service if necessary (see § **14**);
- **Bit[24] (2nd header word)** = This bit identifies the event format; it is reserved and **must be 0**;
- **Bit[23:8] (2nd header word)** = Starting from revision **4.6** of the ROC FPGA firmware, these 16 bits can be programmed to provide different trigger information according to the setting of the bits[22:21] at register address 0x811C (**Tab. 9.2**).



Note: for ROC FPGA firmware revisions lower than **4.6**, these bits are *reserved*.

REGISTER 0x811C Bits[22:21]	FUNCTIONAL DESCRIPTION	Bit[23:8] (16 bits in the 2 nd header word)
00 (default)	<i>Not used</i>	Must be 0
01	Event Trigger Source	Indicates the trigger source causing the event acquisition: Bits[23:19] = 0000 Bit[18] = Software Trigger Bit[17] = External Trigger Bit[16] = 0 Bits[11:8] = Trigger requests from the couple of channels (refer to § Self-Trigger)
10	Extended Trigger Time Tag (ETTT)	A 48-bit Trigger Time Tag (ETTT) information is configured, where Bits[23:8] contributes as the 16 most significant bits together to the 32-bit TTT field (4 th header word). Note: in the 48-bit TTT, the overflow bit is not provided.
11	<i>Not used</i>	<i>reserved</i>

Tab. 9.2: TRG OPTIONS configuration table

- **CHANNEL MASK (Bit[7:0] of 2nd header word)** = It is the mask of the channels participating in the event. This information must be used by the software to acknowledge which channel the samples are coming from.
- **EVENT COUNTER (Bit[23:0] of 3rd header word)** = This is the trigger counter; it can count either accepted triggers only, or all triggers.

- **TRIGGER TIME TAG (Bit[31:0] of 4th header word)** = It is the 31-bit Trigger Time Tag information (31-bit counter and 32nd bit as roll over flag), which is the trigger time reference. If the ETTT option is enabled, then this field becomes the 32 less significant bits of the extended 48-bit trigger time tag information in addition to the 16 bits (MSB) of the TRG OPTIONS field (2nd event word). Note that, in the ETTT case, the roll over flag is no more provided. The trigger time tag is reset either as the acquisition starts or via front panel signal on GPI connector, and increments with 125-MHz frequency (every 4 ADC clock cycles in case of DT5730 or 2 ADC clock cycles with DT5725). The trigger time tag value is read at half this frequency (62.5 MHz). So, the trigger time tag specifications result in 16 ns resolution and 17 s range(i.e. $8 \text{ ns} \cdot (2^{31}-1)$), which can be extended to 625 h (i.e. $8 \text{ ns} \cdot (2^{48}-1)$) by the Extended Trigger Time Tag option.

Data are the samples from the enabled channels. Data from masked channels are not read.

Event Format Example

Tab. 9.3 shows the event data format of DT5730/DT5725 when all the 8 channels are enabled. The structure is described in § **Event Structure**.

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0												
1				0				1				0				EVENT SIZE																											
RESERVED				BF _{RES}				0				RESERVED / TRG OPTIONS																CHANNEL MASK [7:0]															
RESERVED								EVENT COUNTER																																			
TRIGGER TIME TAG																																											
0		0		SAMPLE [1] – CH[0]												0		0		SAMPLE [0] – CH[0]																							
0		0		SAMPLE [3] – CH[0]												0		0		SAMPLE [2] – CH[0]																							
...																																											
0		0		SAMPLE [N-1] – CH[0]												0		0		SAMPLE [N-2] – CH[0]																							
0		0		SAMPLE [1] – CH[1]												0		0		SAMPLE [0] – CH[1]																							
0		0		SAMPLE [3] – CH[1]												0		0		SAMPLE [2] – CH[1]																							
...																																											
0		0		SAMPLE [N-1] – CH[1]												0		0		SAMPLE [N-2] – CH[1]																							
...																																											
0		0		0		0		SAMPLE [1] – CH[7]												0		0		SAMPLE [0] – CH[7]																			
0		0		SAMPLE [3] – CH[7]												0		0		SAMPLE [2] – CH[7]																							
...																																											
0		0		SAMPLE [N-1] – CH[7]												0		0		SAMPLE [N-2] – CH[7]																							

HEADER	
DATA CH0	
DATA CH1	
...	
DATA CH7	

Tab. 9.3: Event Format Example

Acquisition Synchronization

Each channel of the digitizer is provided with a SRAM memory that can be organized in a programmable number N_b of circular buffers ($N_b = [1:1024]$, see **Tab. 9.1**). When the trigger occurs, the FPGA writes further a programmable number of samples for the post-trigger and freezes the buffer, so that the stored data can be read via USB or Optical Link. The acquisition can continue without dead-time in a new buffer.

When all buffers are filled, the board is considered FULL: no trigger is accepted and the acquisition stops (i.e. the samples coming from the ADC are not written into the memory, so they are lost). As soon as at least one buffer is read out, the board exits the FULL condition and acquisition restarts.



Note: When the acquisition restarts, no trigger is accepted until at least the entire buffer is written. This means that the dead time is extended for a certain time (depending on the size of the acquisition window) after the board exits the FULL condition.

A way to eliminate this extra dead time is by setting bit[5] = 1 at register address 0x8100. The board is so programmed to enter the FULL condition when N-1 buffers are written: no trigger is then accepted, but samples writing continues in the last available buffer. As soon as one buffer is readout and becomes free, the board exits the FULL condition and can immediately accept a new trigger. This way, the FULL reflects the BUSY condition of the board (i.e. inability to accept triggers); if required, the BUSY signal can be provided out on the digitizer front panel through the GPO LEMO connector (bit[20], bits[19:18] and bits[17:16] at register address 0x811C).



Note: when bit[5] = 1, the minimum number of circular buffers to be programmed is $N = 2$.

In some cases, the BUSY propagation from the digitizer to other parts of the system has some latency and it can happen that one or more triggers occur while the digitizer is already FULL and unable to accept those triggers. This condition causes event loss and it is particularly unsuitable when there are multiple digitizers running synchronously, because the triggers accepted by one board and not by other boards cause event misalignment.

In this cases, it is possible to program the BUSY signal to be asserted when the digitizer is close to FULL condition, but it has still some free buffers (Almost FULL condition). In this mode, the digitizer remains able to accept some more triggers even after the BUSY assertion and the system can tolerate a delay in the inhibit of the trigger generation. When the Almost FULL condition is enabled by setting the Almost FULL level (register address 0x816C) to X, the BUSY signal is asserted as soon as X buffers are filled, although the board still goes FULL (and rejects triggers) when the number of filled buffers is N or N-1, depending on bit[5] at register address 0x8100 as described above.

It is possible to provide the BUSY signal on the digitizer front panel GPO output (bit[20], bits[19:18] and bits[17:16] at register address 0x811C are involved).

Trigger Management

According to the default firmware operating, all the channels in a board share the same trigger (board common trigger), so they acquire an event simultaneously and in the same way (a determined number of samples according to buffer organization and custom size settings, and position with respect to the trigger given by the post-trigger).



Note: For the trigger management in the DPP firmware operating, please refer to [RD9] and [RD10].

The generation of a common acquisition trigger is based on different trigger sources (configurable at register address 0x810C):

- Software trigger
- External trigger
- Self-trigger
- Coincidence

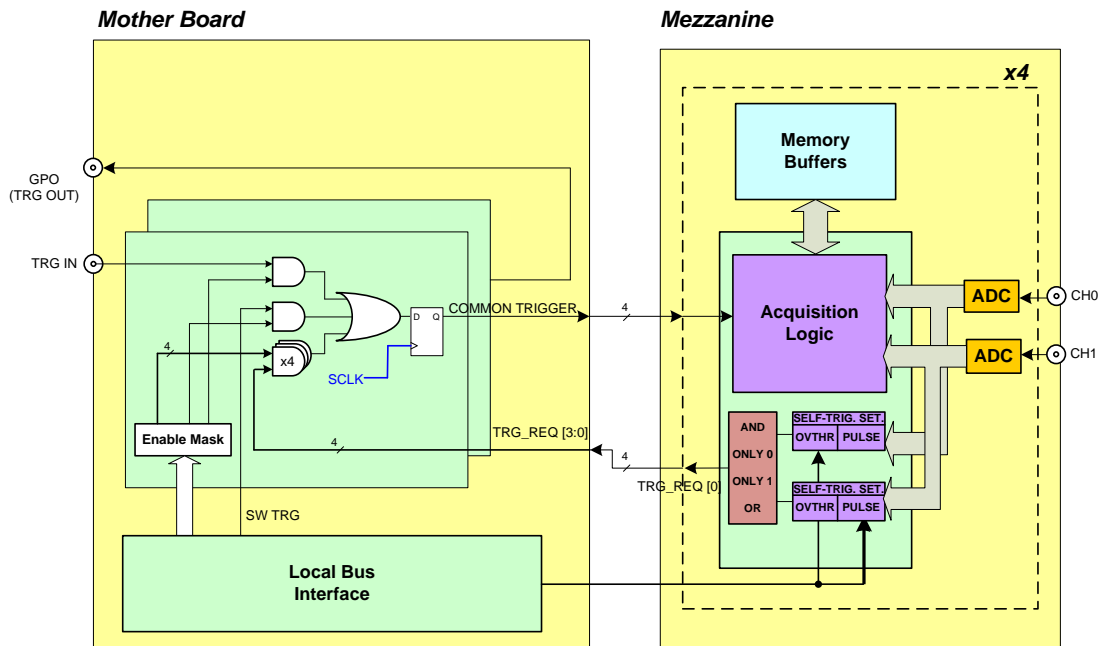


Fig. 9.9: Block Diagram of the trigger management

Software Trigger

Software triggers are internally produced via a software command (write access at register address 0x8108) through USB or Optical Link.

External Trigger

A TTL or NIM external signal can be provided in the front panel TRG-IN connector (configurable at register address 0x811C). If the external trigger is not synchronized with the internal clock, a 1-clock period jitter occurs.

Self-Trigger

Each channel is able to generate a self-trigger signal when the digitized input pulse exceeds a configurable threshold (register address 0x1n60). The self-triggers of each couple of adjacent channels are then processed to provide out a single trigger request. The trigger requests are propagated to the central trigger logic where they are ORed to produce the board common trigger, which is finally distributed back to all channels causing the event acquisition (see **Fig. 9.9**). **Fig. 9.10** schematizes the self-trigger and trigger request logic having the channel 0 and channel 1 couple as an example.

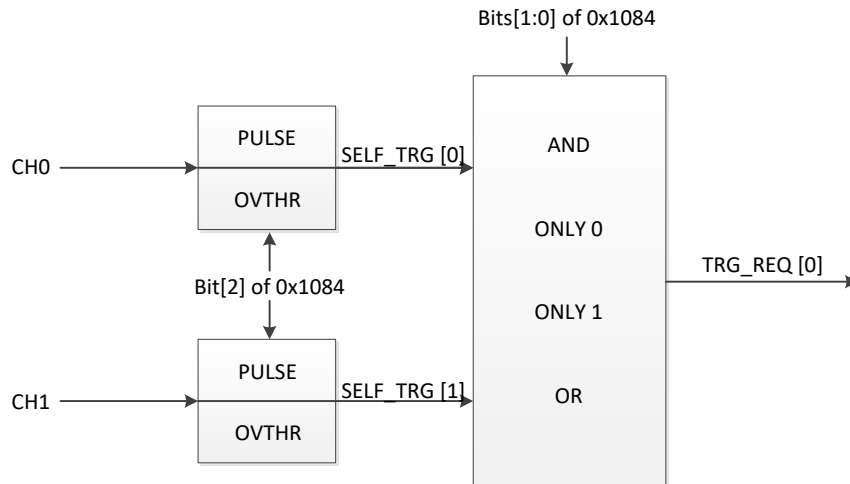


Fig. 9.10: Self Trigger and Trigger Request logic for Ch0 and Ch1 couple. A single trigger request signal is generated.

The FPGA, by register address 0x1n84, can be programmed in order the self-trigger to be:

- an *over/under-threshold signal* (see **Fig. 9.11**). This signal can be programmed to be active (i.e. "1") as long as the input pulse is over the threshold or under the threshold (depending on the trigger polarity bit at register address 0x8000).

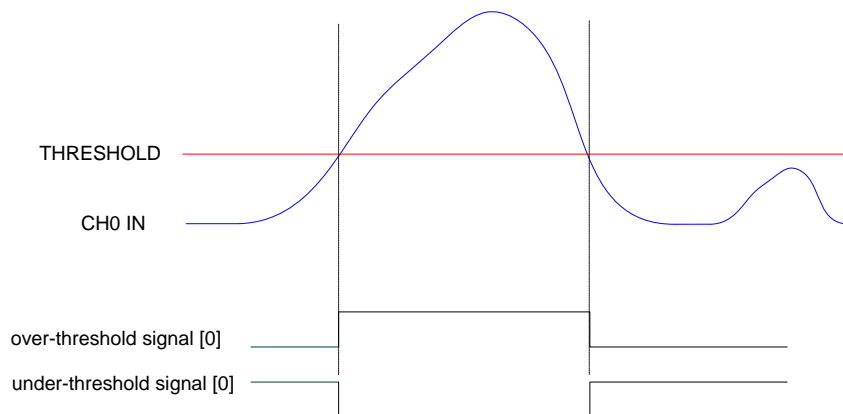


Fig. 9.11: Channel over/under threshold signal

- a pulse of configurable width (see Fig. 9.12). The width parameter can be set at register address 0x1n70.

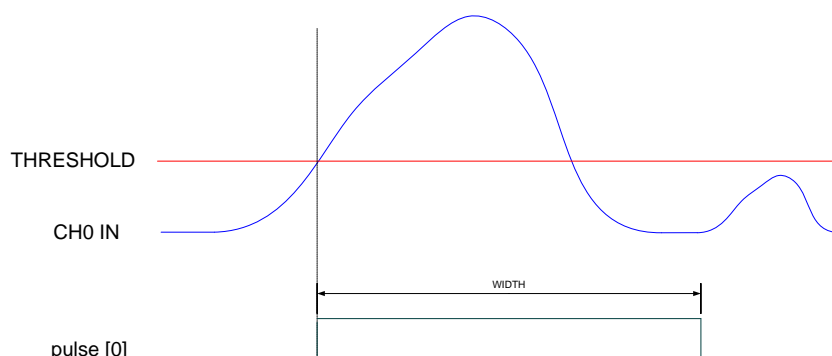


Fig. 9.12: Channel pulse signal

The FPGA, by register address 0x1n84, can be programmed in order the trigger request for a couple of adjacent channels to be the

AND,
ONLY CH(n),
ONLY CH(n+1),
OR

of the relevant self-trigger signals (see Fig. 9.10).

Default Conditions: by default, the FPGA is programmed so that the trigger request is the OR of two pulses of 4ns-width.



Note: the above described configurability of both the self-trigger logic and the trigger request logic are supported only by AMC FPGA firmware releases > 0.1.

Previous firmware don't implement the register address 0x1n84 as well as the 0x1n70, the self-trigger is intended only as the over/under threshold signal and a trigger request is intended only as the OR of the self-triggers couple.

Trigger Coincidence Level

Operating with the default firmware, the acquisition trigger is a board common trigger. This common trigger allows the coincidence acquisition mode to be performed through the Majority operation.



Note: From AMC FPGA firmware release > 0.1, it is possible to program the self-trigger logic as described in § Self-Trigger.

Enabling the coincidences is possible by writing at register address 0x810C:

- Bits[3:0] enable the trigger request signals to participate in the coincidence;
- Bits[23:20] set the coincidence window (T_{TVAW}) linearly in steps of the Trigger clock (8 ns);
- Bits[26:24] set the Majority (i.e. Coincidence) level; the coincidence takes place when:

Number of enabled trigger requests > Majority level

Supposing bits[3:0] = FF (i.e. all the 4 trigger request are enabled) and bits[26:24] = 01 (i.e. Majority level = 1), a board common trigger is issued whenever at least two of the enabled trigger requests are in coincidence within the programmed T_{TVAW} .

The Majority level must be smaller than the number of trigger requests enabled via bits[3:0] mask. By default, bits[26:24] = 00 (i.e. Majority level = 0), which means the coincidence acquisition mode is disabled and the T_{TVAW} is meaningless. In this case, the board common trigger is simple OR of the signals from the enabled channels pairs.

Fig. 9.13 and Fig. 9.14 show the trigger management in case the coincidences are disabled

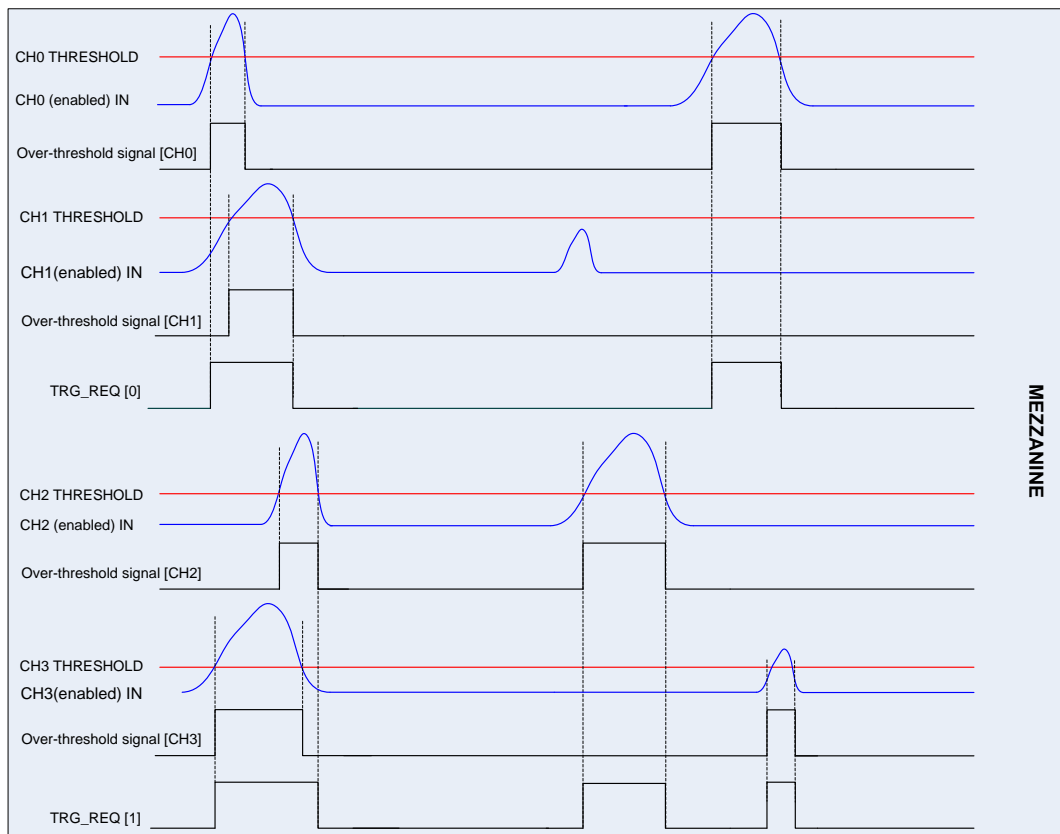


Fig. 9.13: Trigger request management at mezzanine level with Majority level = 0

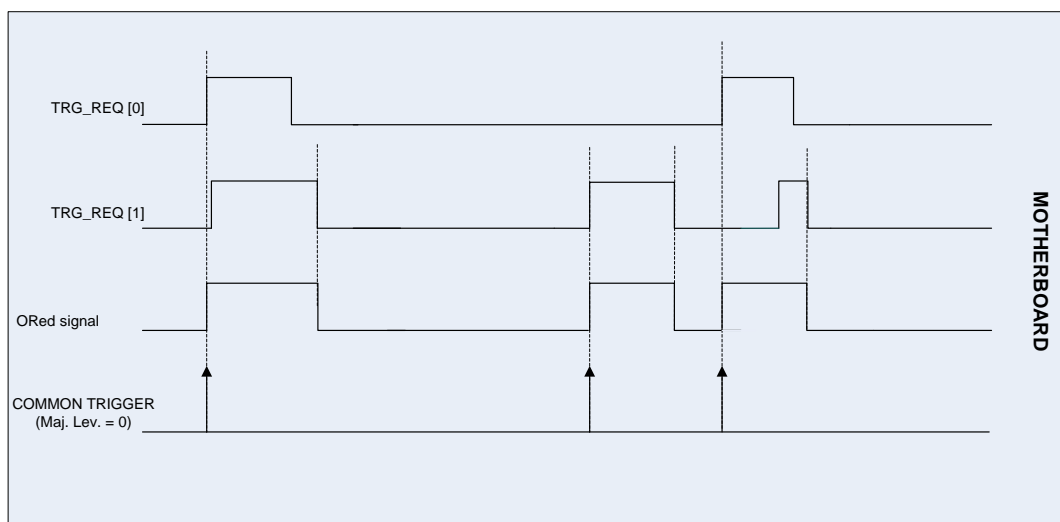


Fig. 9.14: Trigger request management at motherboard level with Majority level = 0

Fig. 9.15 and shows the trigger management in case the coincidences are enabled with Majority level = 1 and T_{TVAW} is a value different from 0. In order to simplify the description, CH1 and CH3 channels are considered disabled, so that the relevant trigger requests are the over-threshold signals from CH0 and CH1.

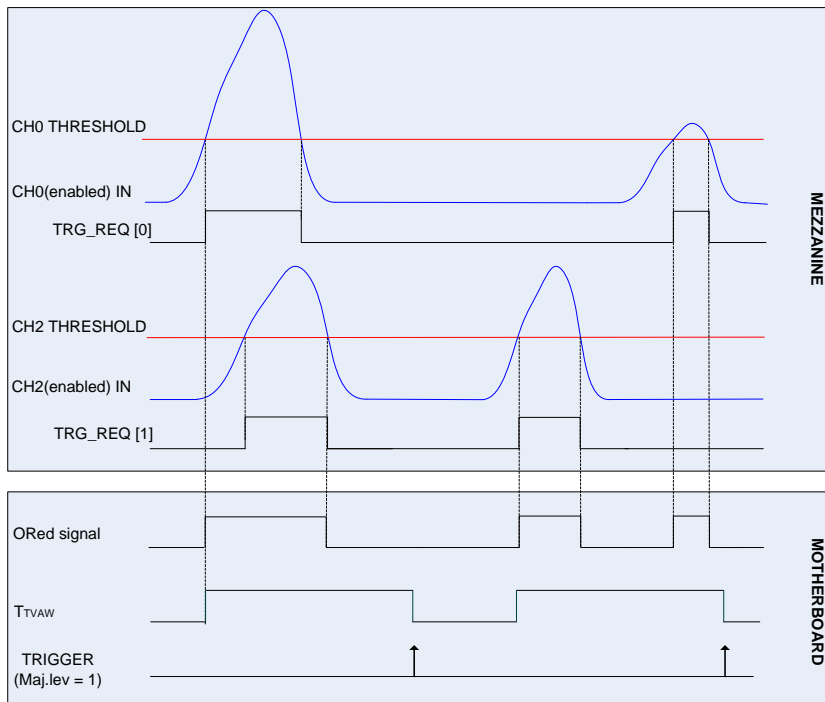


Fig. 9.15: Trigger request relationship with Majority level = 1 and $T_{TVAW} \neq 0$



Note: with respect to the position where the common trigger is generated, the portion of input signal stored depends on the programmed length of the acquisition window and on the post trigger setting.

Fig. 9.16 shows the trigger management in case the coincidences are enabled with Majority level = 1 and $T_{TVAW} = 0$ (i.e. 1 clock cycle). In order to simplify the description, CH1 and CH3 channels are considered disabled, so that the relevant trigger requests are the over-threshold signals from CH0 and CH1.

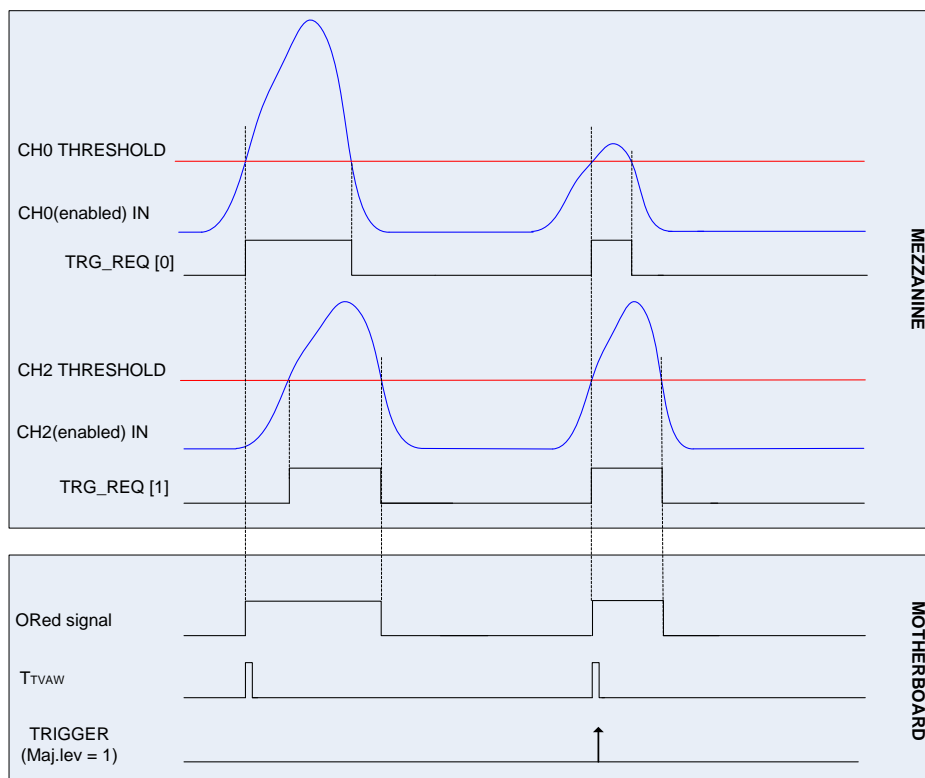


Fig. 9.16: Trigger request relationship with Majority level = 1 and $T_{TVAW} = 0$

In this case, the common trigger is issued if at least two of the enabled trigger requests are instantaneously in coincidence (no T_{TVAW} is waited).



Note: a practical example of making coincidences with the digitizer in the standard operating is detailed in **[RD11]**.

Example

For instance, it could be required to start the acquisition on all the channels of a multi-board system as soon as one of the channels of a board (board “n”) crosses its threshold. Trigger Out signal is then fed to an external Fan Out logic unit; the obtained signal has then to be provided to the external trigger input TRG-IN of all the boards in the system (including the board which generated the Trigger Out signal). In this case, the programming steps to perform are following described:

1. Register 0x8110 on board “n”:
 - Enable the desired trigger request as Trigger Out signal on board “n” (by bits[3:0] mask);
 - Disable Software Trigger and External Trigger as Trigger Out signal on board “n” (bits[31:30] = 00);
 - Set Trigger Out signal as the OR of the enabled trigger requests on board “n” (bits[9:8] = 00).
2. Register 0x811C on board “n”:
 - Configure the digitizer to propagate on GPO the internal trigger sources according to the 0x8110 settings (i.e. the enabled trigger request, in the specific case) on board “n” (bits[17:16] = 00).
3. Register 0x810C on all the boards in the system (including board “n”):
 - Enable External Trigger to participate in the board’s common acquisition trigger, disable Software Trigger and the Trigger Requests from the channels (bits[31:30] = 01; bits[3:0] = 0000).

Reset, Clear and Default Configuration

Global Reset

Global Reset is performed at power-on of the module or via software by write access at register address 0xEF24 (whatever 32-bit value can be written). It allows to clear the data off the Output Buffer, the event counter and performs a FPGAs global reset, which restores the FPGAs to the default configuration. It initializes all counters to their initial state and clears all detected error conditions.

Memory Reset

The Memory Reset clears the data off the Output Buffer.

The Memory Reset can be forwarded via a write access at register address 0xEF28 (whatever 32-bit value can be written).

Timer Reset

The Timer Reset allows to initialize the timer which allows to tag an event. The Timer Reset can be forwarded with a pulse sent to the front panel GPI input (leading edge sensitive).

Data Transfer Capabilities

DT5730 and DT5725 feature a Multi-Event digital memory per channel, configurable by the user to be divided into 1 up to 1024 buffers, as detailed in § **Multi-Event Memory Organization**. Once they are written in the memory, the events become available for readout via USB or Optical Link. During the memory readout, the board can store other events (independently from the readout) on the available free buffers. The acquisition process is so “dead timeless” until the memory becomes full (see § **Acquisition Synchronization**).

The events are readout sequentially and completely, starting from the Header of the first available event, followed by the samples of the enabled channels (from 0 to 7) as reported in **Tab. 9.3**. Once an event is completed, the relevant memory buffer becomes free and ready to be written again (old data are lost). After the last word in an event, the first word (Header) of the subsequent event is readout. It is not possible to readout an event partially.

The size of the event (EVENT SIZE) is configurable and depends on register addresses 0x8020 and 0x800C, as well as on the number of enabled channels.

Block Transfers

The Block Transfer readout mode allows to read N complete events sequentially, where N is set at register address 0xEF1C, or by using the *SetMaxNumEventsBLT* function of the CAENDigitizer library (consult **[RD5]** at p. 19).

When developing programs, the readout process can be implemented on different basis :

- Using **Interrupts**: as soon as the programmed number of events is available for readout, the board sends an interrupt to the PC over the optical communication link (**not supported by USB**).
- Using **Polling** (interrupts disabled): by performing periodic read accesses to a specific register of the board it is possible to know the number of events present in the board and perform a BLT read of the specific size to read them out.
- Using **Continuous Read** (interrupts disabled): continuous data read of the maximum allowed size (e.g. total memory size) is performed by the software without polling the board. The actual size of the block read is determined by the board that terminates the BLT access at the end of the data, according to the configuration of register address 0xEF1C, or the library function *SetMaxNumEventsBLT* mentioned above. If the board is empty, the BLT access is immediately terminated and the “Read Block” function will return 0 bytes (it is the *ReadData* function in the CAENDigitizer Library, refer to **[RD5]**).

Whatever the method from above, it is suggested to ask the board for the maximum of the events per block being set. Furthermore, the greater this maximum, the greater the readout efficiency, despite of a greater memory allocation required on the host station side that is actually not a real drawback, considering the features of the personal computers available on the market.



Note: Involved registers and library functions are detailed respectively in **[RD2]** and **[RD5]**.

Single Data Transfer

This mode allows to readout a word per time, from the header (actually 4 words) of the first available event, followed by all the words until the end of the event, then the second event is transferred. The exact sequence of the transferred words is shown in § **Event Structure**.

It is suggested, after the 1st word is transferred, to check the EVENT SIZE information and then do as many cycles as necessary (actually EVENT SIZE -1) in order to read completely the event.

Optical Link and USB Access

The board houses a USB2.0 compliant port, providing a transfer rate up to 30 MB/s, and a daisy chainable Optical Link (communication path which uses optical fiber cables as physical transmission line) providing transfer rate up to 80 MB/s. The latter allows to connect up to 8 DT5730/DT5725 boards to a single A2818 PCI Optical Link Controller or up to 32 boards to a single A3818 PCIe Optical Link Controller. Detailed information on CAEN PCI/PCIe Controllers can be find at www.caen.it:

Home / Products / Modular Pulse Processing Electronics / PCI/PCIe / Optical Controllers

The parameters for read/write accesses via optical link are Address Modifier, Base Address, data Width, etc.; wrong parameter settings cause Bus Error.

Bit[3] at register address 0xEF00 allows to enable the module to broadcast an interrupt request on the Optical Link; the enabled Optical Link Controllers propagate the interrupt on the PCI bus as a request from the Optical Link is sensed. Interrupts can also be managed at the CAENDigitizer library level (see "Interrupt Configuration" in [RD5]).

10 Drivers & Libraries

Drivers

In order to interface with the DT5730/DT5725, CAEN provides the drivers for all the different types of physical communication channels featured by the board and compliant with Windows and Linux OS:

- **USB 2.0 Drivers** are downloadable on CAEN website (www.caen.it) in the “Software/Firmware” tab at the DT5730 and DT5725 web pages (**login required**).



Note: For Microsoft Windows OS, the USB driver installation is detailed in [RD3].

- **Optical Link Drivers** are managed by the A2818 PCI card or the A3818 PCIe card. The driver installation package is available on CAEN website in the “Software/Firmware” area at the A2818 or A3818 page (**login required**).



Note: For the installation of the Optical Link driver, refer to the User Manual of the specific Controller.

Libraries

CAEN libraries are a set of middleware software required by CAEN software tools for a correct functioning. These libraries, including also demo and example programs, represent a powerful base for users who want to develop customized applications for the digitizer control (communication, configuration, readout, etc.):

- **CAENVMELib** is a set of ANSI C functions which permit a user program to use and configure the CAEN Bridges and Controllers V1718/VX1718 (VME-USB2.0 Bridge), V2718/VX2718 (VME-PCI/PCIe Optical Link Bridge), A2818/A3818 (PCI/PCIe-CONET Controller).

The CAENVMELib installation package is available on CAEN website in the ‘Download’ area at the CAENVMELib Library page.

- **CAENComm** library manages the communication at low level (read and write access). The purpose of the CAENComm is to implement a common interface to the higher software layers, masking the details of the physical channel and its protocol, thus making the libraries and applications that rely on the CAENComm independent from the physical layer. Moreover, the CAENComm is based in turn on CAENVMELib and it requires the CAENVMELib library (access to the VME bus) even in the cases where the VME is not used. This is the reason why **CAENVMELib has to be already installed on your PC before installing the CAENComm**.

The CAENComm installation package is available on CAEN website in the ‘Download’ area at the CAENComm Library page.

- **CAENDigitizer** is a library of functions designed specifically for the Digitizer family and it supports also the boards running the DPP firmware. The CAENDigitizer library is based on the CAENComm which is based on CAENVMELib, as said above. For this reason, **the CAENVMELib and CAENComm libraries must be already installed on the host PC before installing the CAENDigitizer**.

The CAENDigitizer installation package is available on CAEN website in the ‘Download’ area at the CAENDigitizer Library page.

The CAENComm (and so the CAENDigitizer) supports the following communication channels:

PC → USB → DT5730/DT5725

PC → PCI (A2818) → CONET → DT5730/DT5725

PC → PCIe (A3818) → CONET → DT5730/DT5725

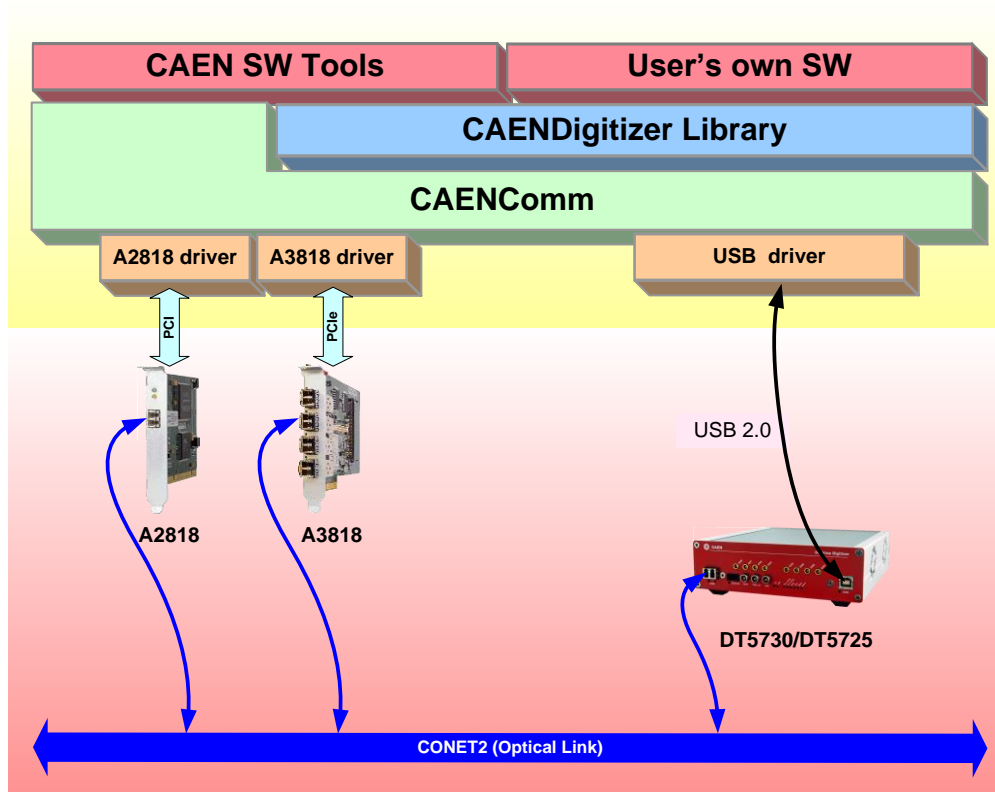


Fig. 10.1: Required libraries and drivers

If required to be installed apart by the user (see § 11), CAEN Libraries are available for download on CAEN web site (www.caen.it) in the “Download” tab at the library web page:

Home / Products / Firmware/Software / Digitizer Software / Software Libraries / <CAEN Library>

Install first CAENVMLib, then CAENComm library, finally CAENDigitizer library.

11 Software Tools

CAEN provides software tools to interface the DT5730/DT5725, which are available for [free download](http://www.caen.it) on www.caen.it at:

Home / Products / Firmware/Software / Digitizer Software

CAENUpgrader

CAENUpgrader is a free software composed of command line tools together with a Java Graphical User Interface.

Specifically for the DT5730/DT5725, CAENUpgrader allows in few easy steps to:

- Upload different firmware versions on the board
- Select which copy of the stored firmware must be loaded at power-on
- Read the firmware release of the board and the bridge (when used)
- Manage the firmware license, in case of pay firmware
- Upgrade the internal PLL
- Get the Board Info file, useful in case of support

CAENUpgrader can operate with Windows and Linux, 32 and 64-bit OSs.

The program relies on the CAENComm and CAENVMELib libraries (see § 10) and requires third-party Java SE6 (or later) to be installed.



Note: Windows version of CAENUpgrader is stand-alone (the required libraries are installed locally with the program), while the version for Linux needs the required libraries to be previously installed by the user.

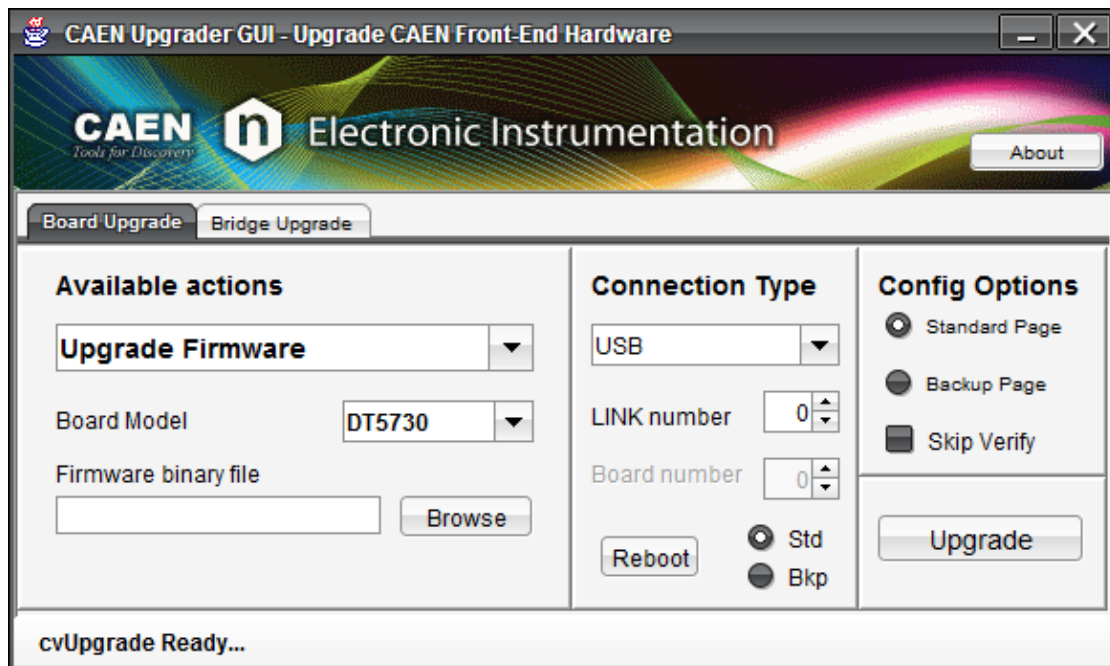


Fig. 11.1: CAENUpgrader Graphical User Interface

CAENUpgrader installation package can be downloaded on CAEN web site (**login required**) at:

Home / Products / Firmware/Software / Digitizer Software / Configuration Tools / CAENUpgrader

The reference document for installation instructions and program detailed description is **[RD1]**, downloadable at the same page above, in the *Documentation* tab.

CAENComm Demo

CAENComm Demo is a simple program developed in C/C++ source code and provided both with Java and LabVIEW GUI interface. The demo mainly allows for a full board configuration at low level by direct read/write access to the registers and may be used as a debug instrument.

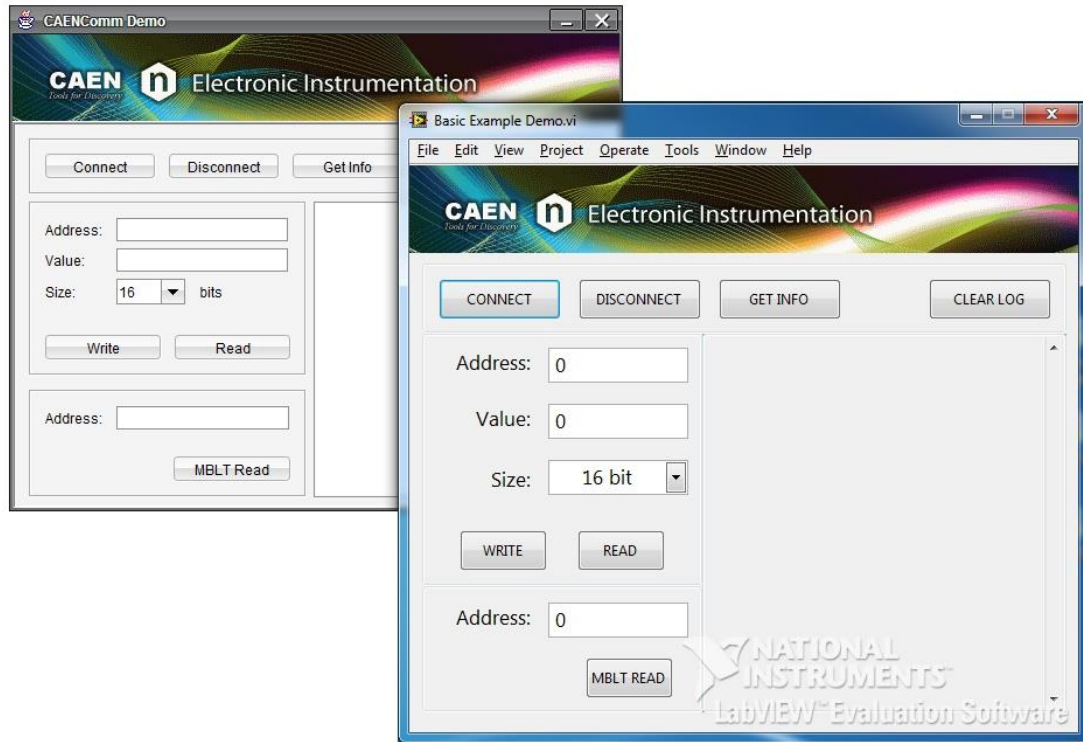


Fig. 11.2: CAENComm Demo Java and LabVIEW graphical interface

CAENComm Demo can operate with Windows OSs, 32 and 64-bit. It requires CAENComm and CAEVMELib libraries as additional software to be installed (see § 10).

The Demo is included in the CAENComm library installation Windows package, which can be downloaded on CAEN web site (**login required**) at:

Home / Products / Firmware/Software / Digitizer Software / Software Libraries / CAENComm Library

CAEN WAVEDump

WaveDump is a basic console application, with no graphics, supporting only CAEN digitizers running the default firmware. It allows the user to program a single board (according to a text configuration file containing a list of parameters and instructions), to start/stop the acquisition, read the data, display the readout and trigger rate, apply some post-processing (e.g. FFT and amplitude histogram), save data to a file and also plot the waveforms using Gnuplot (third-party graphing utility: www.gnuplot.info).

WaveDump is a very helpful example of C code demonstrating the use of libraries and methods for an efficient readout and data analysis. Thanks to the included source files and the VS project, starting with this demo is strongly recommended to all those users willing to write the software on their own.

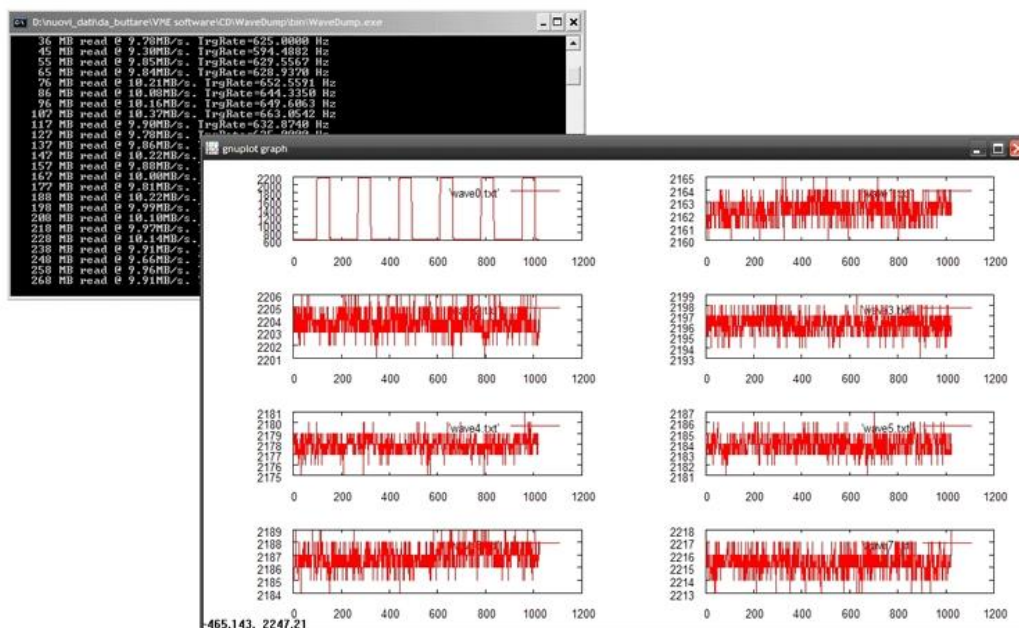


Fig. 11.3: CAEN WaveDump

CAEN WaveDump can operate with Windows and Linux, 32 and 64-bit OSs.

The program relies on the CAENDigitizer, CAENComm and CAENVMELib libraries (see § 10). Linux users are required to install the third-party Gnuplot.



Note: Windows version of WaveDump is stand-alone (the required libraries are installed locally with the program), while the version for Linux needs the required libraries to be previously installed by the user.

The installation packages can be downloaded on CAEN web site (**login required**) at:

Home / Products / Firmware/Software / Digitizer Software / Readout Software / CAEN WaveDump

The reference documents for installation instructions and program detailed description are **[RD6]** and **[RD7]**, downloadable at the same page above, in the *Documentation* tab.

CAENScope

In a brand new framework, CAENScope software implements the features of an easy-to-use digital oscilloscope to be used with CAEN digitizers running the default firmware.



Note: CAENScope support for 725 digitizer family is **COMING SOON**

CAENScope user friendly interface presents different sections to easily manage the digitizer configuration and plot the waveforms. Once connected, the program retrieves the digitizer information. Different parameters can be set for the channels, the trigger and the trace visualization (up to 12 traces can be simultaneously plotted). Signals are recordable to files in two different formats: Binary (SQLite db) and Text (XML). It is also possible to save and restore the program settings.

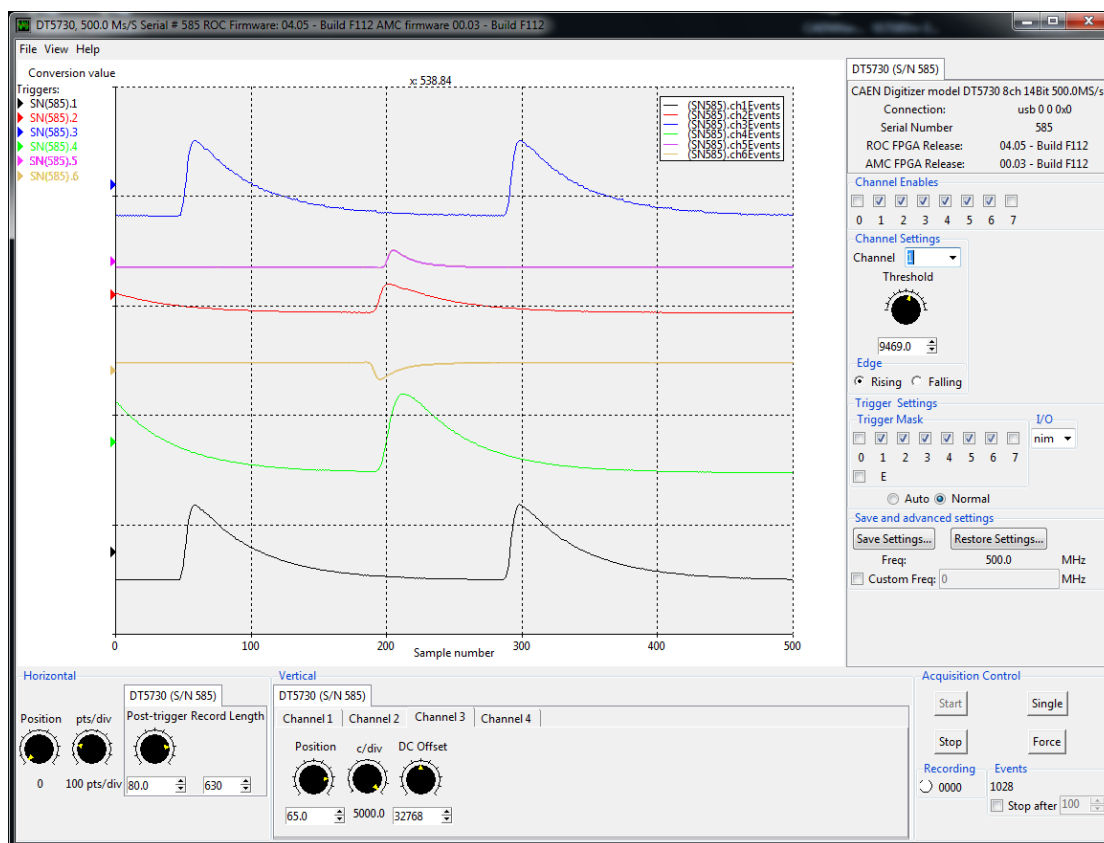


Fig. 11.4: CAENScope main frame

CAENScope can operate with Windows and Linux, 32 and 64-bit OSs. Linux users are required to install the following packages:

- sharutils;
- libXft;
- libXss (specifically for Debian derived distributions, e.g. Debian, Ubuntu, etc.);
- libXScrnSaver (specifically for RedHat derived distributions, e.g. RHEL, Fedora, Centos, etc.).

The program relies on the CAENDigitizer, CAENComm and CAENVMELib libraries.



Note: Windows version of CAENScope is stand-alone (the required libraries are installed locally with the program), while the version for Linux needs the required libraries to be previously installed by the user.

The installation packages can be downloaded on CAEN web site (**login required**) at:

Home / Products / Firmware/Software / Digitizer Software / Readout Software / CAENSCOPE

The reference document for installation instructions and program detailed description is **[RD8]**, downloadable at the same page above, in the *Documentation* tab.

DPP-PSD Control Software

The DT730 and DT5725 can be equipped (on payment) with a special DPP-PSD firmware.

DPP-PSD Control Software is a software interface for configuration, acquisition, data plotting to be used with the digitizers who can run the DPP-PSD special firmware. It allows the user to set the parameters for the acquisition, to configure the DPP, to perform the data readout, the histogram collection and the spectrum or waveform plotting and saving. The program doesn't feature data analysis, but can be easily interfaced to software tools for offline analysis.

DPP-PSD Control Software is available both for Windows and Linux platforms.

The program relies on the CAENDigitizer, CAENComm and CAENVMLib libraries (see § 10). Third-party Java SE6 (or later) needs to be installed.



Note: Windows version of DPP-PSD Control Software is stand-alone (the required libraries are installed locally with the program; only the communication driver must be installed apart by the user), while the version for Linux needs the required libraries to be already installed apart.

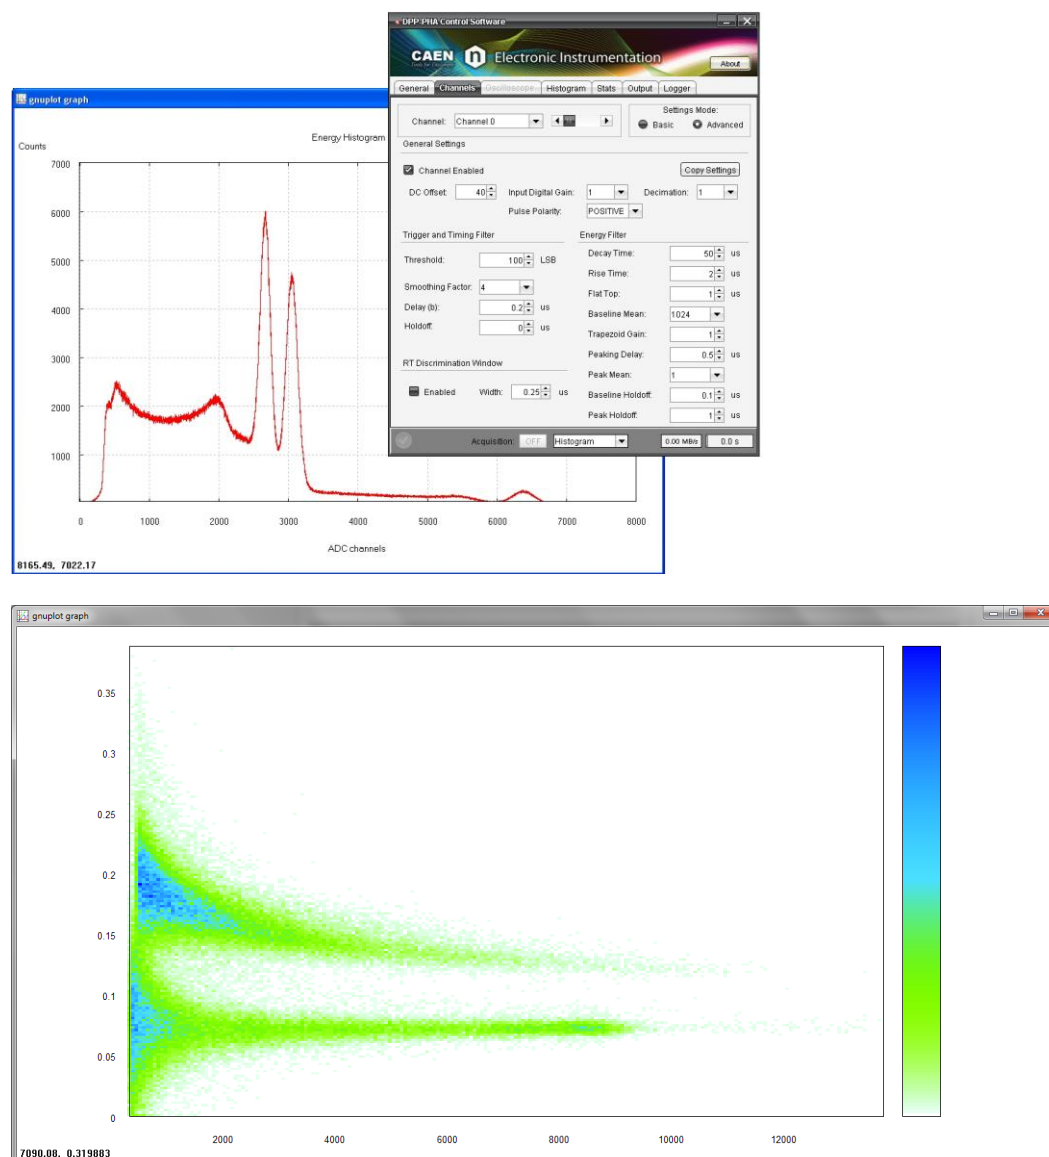


Fig. 11.5: DPP-PSD Control Software: Top – DPP settings Tab and typical ^{60}Co Total Charge Spectrum; Bottom - PSD 2-D Scatter Plot

The installation package can be downloaded on CAEN web site (www.caen.it) at:

Home / Products / Firmware/Software / Digitizer Software / Readout Software / DPP-PSD Control Software

The reference document for installation instructions and program detailed description is [RD9].

MC²Analyzer (MC²A)

MC²Analyzer (MC²A) is a software specifically designed for digitizers running the special DPP-PHA firmware (724, 725 and 730 families) and the Digital MCAs (x780 Dual Digital MCA, x781 Dual/Quad Digital MCA, DT5770).

The software is able to completely control and manage a set of boards acquiring data simultaneously, making therefore a multi-board system a "Multichannel - Multichannel Analyzer".

MC²A allows the user to set all the relevant DPP-PHA parameters for each acquisition channel (like trigger threshold, shaping parameters, etc.), handle the communication with the connected boards, run the data acquisition and plot both waveforms for on-line monitoring of the acquisition and histograms. It can also control the HV power supplies provided in the x780.

Moreover, it is able to perform advanced mathematical analysis on both the ongoing histograms and collected spectra: peak search, background subtraction, peak fitting, energy calibration, ROI selection, dead time compensation, histogram rebin and other features available.

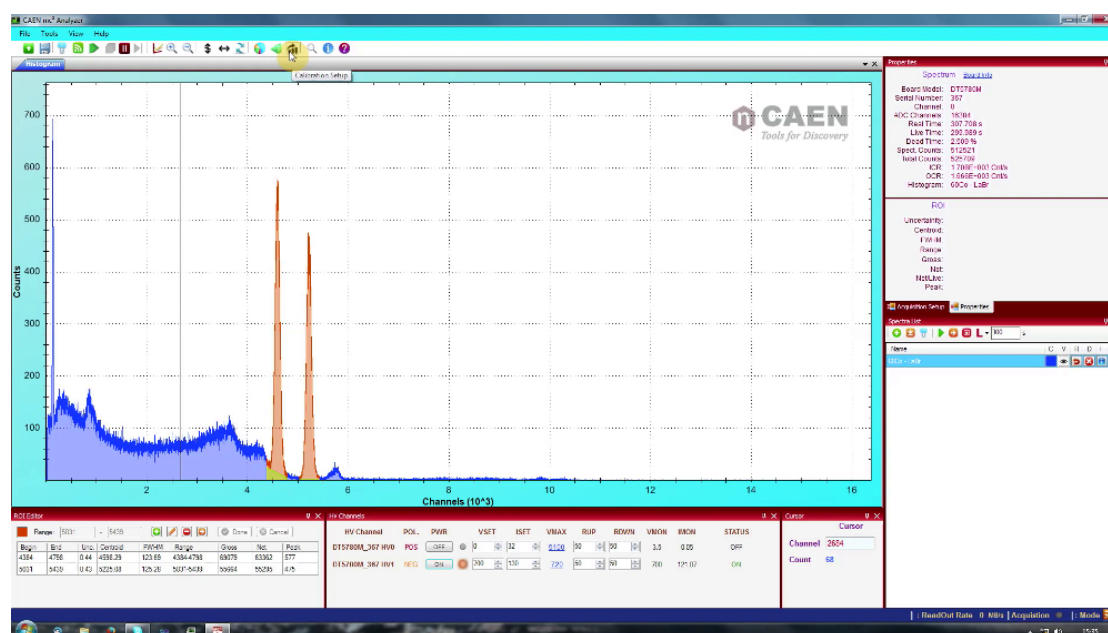


Fig. 11.6: MC²Analyzer (MC²A) software tool

MC²Analyzer is currently available only for Windows platforms. The installation package can be downloaded on CAEN web site (www.caen.it) at:

Home / Products / Firmware/Software / Digitizer Software / Readout Software

The reference document for installation instructions and program detailed description is [RD10].



Note: Windows version of MC²Analyzer is stand-alone (the required libraries are installed locally with the program; only the communication driver must be installed apart by the user).

12 HW Installation

Power-on Sequence

To power on the board, follow the procedure below:

1. connect the 12V DC power supply to the DT5730/DT5725 through the DC input rear connector;
2. power up the DT5730/DT5725 through the ON/OFF rear switch.

See § **Rear Panel** to identify the relevant components

Power-on Status

At power-on, the module is in the following status:

- the Output Buffer is cleared;
- registers are set to their default configuration.

After the power-on, the front panel LEDs status is that only the NIM and PLL LOCK remain ON (see **Fig. 12.1**).



Fig. 12.1: Front panel LEDs status at power ON

AFTER POWER-ON, CAEN RECOMMENDS TO PERFORM THE CHANNEL CALIBRATION AS DESCRIBED AT PAGE 22 IN ORDER TO ACHIEVE THE BEST DEVICE PERFORMANCE

13 Firmware and Upgrades

The board hosts one FPGA on the mainboard and two FPGAs on the mezzanine (i.e. one FPGA per 4 channels). The channel FPGAs firmware is identical. A unique file is provided that will update all the FPGAs at the same time.

ROC FPGA MAINBOARD FPGA (Readout Controller + VME interface):

FPGA Altera Cyclone EP1C20.

AMC FPGA MEZZANINE FPGA (ADC readout/Memory Controller):

FPGA Altera Cyclone EP4CE30

The firmware is stored onto the on-board FLASH memory. Two copies of the firmware are stored in two different pages of the FLASH, referred to as Standard (STD) and Backup (BKP). In case of default firmware, the board is delivered equipped with the same firmware version on both pages.

At power-on, a microcontroller reads the FLASH memory and programs the module automatically loading the first working firmware copy, that is the STD one by default.

It is possible to upgrade the board firmware via USB or Optical Link by writing the FLASH with the CAENUpgrader software (see § 11).

IT IS STRONGLY SUGGESTED TO OPERATE THE DIGITIZER UPON THE STD COPY OF THE FIRMWARE. UPGRADES ARE SO RECOMMENDED ONLY ON THE STD PAGE OF THE FLASH. THE BKP COPY IS TO BE INTENDED ONLY FOR RECOVERY USAGE. IF BOTH PAGES RESULT CORRUPTED, THE USER WILL NO LONGER BE ABLE TO UPLOAD THE FIRMWARE VIA USB OR OPTICAL LINK AGAIN AND THE BOARD NEEDS TO BE SENT TO CAEN IN REPAIR!

In case of upgrading failure (e.g. STD FLASH page is corrupted), the user can try to reboot the board: after a power cycle, the system programs the board automatically from the alternative FLASH page (e.g. BKP FLASH page) if this is not corrupted as well. The user can so perform a further upgrade attempt on the STD page to restore the firmware copy.

At power-on, if the user cannot communicate with the board, it needs to be sent back to CAEN in repair (see § 14).

Default Firmware Upgrade

The DT5730 and DT5725 are delivered running a default firmware to operate the board for waveform recording.

The default firmware updates are available for download on CAEN website (www.caen.it) in the *Software/Firmware* tab at the DT5730/DT5725 web pages (**login required**):

Home / Products / Modular Pulse Processing Electronics / Desktop / Digitizers / DT5730 (or DT5725)

Upgrade Files Description

The programming file has the extension .CFA (CAEN Firmware Archive) and is a sort of archive format file aggregating all the default firmware files compatible with the same family of digitizers.

CFA and its name follows this general scheme:

x730_revX.Y_W.Z.CFA

x725_revX.Y_W.Z.CFA

where:

- x730 (x725) are all the boards the file is compliant to: DT5730 (DT5725), N6730 (N6725), V1730 (V1725), VX1730 (VX1725)
- X.Y is the major/minor revision number of the mainboard FPGA
- W.Z is the major/minor revision number of the channel FPGA

DPP Firmware Upgrade

CAEN provides DT5730 and DT5725 with special DPP-PSD and DPP-PHA firmware for Physics Applications. The digitizer running DPP-PSD firmware becomes a digital replacement of dual gate QDC, discriminator and gate generator. The digitizer running DPP-PHA firmware becomes a digital replacement of Shaping Amplifier and Peak Sensing ADC (Multi-Channel Analyzer) by means of digital trapezoidal filters.

- The DPP-PSD firmware updates are available for download on CAEN website in the *Download* tab (**login required**) at:

Home / Products / Firmware/Software / Digitizer Software / Readout Software / DPP-PSD Control Software

- The DPP-PHA firmware updates are available for download on CAEN website in the *Download* tab (**login required**) at:

Home / Products / Firmware/Software / Digitizer Software / Readout Software / DPP-PHA Control Software

Upgrade File Description

The programming file has the extension .CFA (CAEN Firmware Archive) and is a sort of archive format file aggregating all the DPP-PSD firmware files compatible with the same family of digitizers

CFA and its name follows this general scheme:

x730_DPP-PSD_rev_X.Y_136.Z.CFA

x725_DPP-PSD_rev_X.Y_136.Z.CFA

x730_DPP-PHA_rev_X.Y_139.Z.CFA

x725_DPP-PHA_rev_X.Y_139.Z.CFA

where the major revision number of the channel FPGA (136 or 139) is fixed for the specific DPP algorithm and digitizer family. The other fields have the same meaning as in the default firmware file description.



Note: DPP special firmware is a pay firmware requiring a license to be purchased. If not licensed, the firmware can be loaded but it will run fully functional with a time limitation per power cycle (30 minutes). Details on the license ordering procedure can be found in [RD1].



Note: if the DPP firmware license is included in the same order of a DT5730 (DT5725), the customer will be delivered with the digitizer already running the licensed (i.e. unlocked) special firmware. Once unlocked, upgrading the same kind of DPP firmware requires no further licensing.

14 Technical Support

CAEN support services are available for the user by accessing the *Support & Services* area on CAEN website at www.caen.it.

Returns and Repairs

Users who need for product(s) return and repair have to fill and send the Product Return Form (PRF) in the *Returns and Repairs* area at *Home / Support & Services*, describing the specific failure. A printed copy of the PRF must also be included in the package to be shipped.

Contacts for shipping are reported on the website at *Home / Contacts*.

Technical Support Service

CAEN makes available the technical support of its specialists at the e-mail addresses below:

support.nuclear@caen.it
(for questions about the hardware)

support.computing@caen.it
(for questions about software and libraries)



CAEN SpA is acknowledged as the only company in the world providing a complete range of High/Low Voltage Power Supply systems and Front-End/Data Acquisition modules which meet IEEE Standards for Nuclear and Particle Physics. Extensive Research and Development capabilities have allowed CAEN SpA to play an important, long term role in this field. Our activities have always been at the forefront of technology, thanks to years of intensive collaborations with the most important Research Centres of the world. Our products appeal to a wide range of customers including engineers, scientists and technical professionals who all trust them to help achieve their goals faster and more effectively.



CAEN S.p.A.
Via Vetràia, 11
55049 Viareggio
Italy
Tel. +39.0584.388.398
Fax +39.0584.388.959
info@caen.it
www.caen.it

CAEN GmbH
Klingenstraße 108
D-42651 Solingen
Germany
Phone +49 (0)212 254 4077
Fax +49 (0)212 25 44079
Mobile +49 (0)151 16 548 484
info@caen-de.com
www.caen-de.com

CAEN Technologies, Inc.
1140 Bay Street - Suite 2 C
Staten Island, NY 10305
USA
Tel. +1.718.981.0401
Fax +1.718.556.9185
info@caentechnologies.com
www.caentechnologies.com