

TFT Series

Communication Protocol SDK

Development Handbook

Date: July, 2012

2012 GRANDING. All rights reserved.

If there is some change of information in this handbook, Granding won't inform specially.

- GRANDING, is our company logo. Biokey is core technology logo of Granding. Both logos have been registered in China and America.
- Other trademarks and product names mentioned in this handbook are produced by other companies. Granding has no property of them.
- Please solve use problems (instead of development kit problem) during development by yourself.
- Granding has no responsibility for data loss caused by users or programs.
- This handbook is designed on the basis of SDK 6.2.4.1.

Contents

1 SDK Description.....	8
2 Quick Start.....	8
2.1 Terms	8
2.2 Common Processes.....	10
2.2.1 Downloading Attendance Records	10
2.2.2 Downloading Operation Records.....	11
2.2.3 Setting Access Control.....	11
2.2.4 Downloading User Information, or Fingerprint Templates	12
2.2.5 Receiving Real-time Events	13
2.2.6 Enrolling Users Online (Uploading Information,and Fingerprint Templates of Users).....	13
2.2.7 Uploading Short Messages	14
3 Related Attributes	14
3.1 AccGroup.....	14
3.2 AccTimeZones.....	15
3.3 BASE64.....	15
3.4 CardNumber	15
3.5 CommPort	15
3.6 ConvertBIG5.....	15
3.7 PINWidth	15
3.8 GetStrCardNumber	15
3.9 SetStrCardNumber	16
4 Real-time Event Functions.....	16
4.1 Obtaining Real-Time Events.....	16
4.1.1 RegEvent.....	16
4.1.2 ReadRTLog	17
4.1.3 GetRTLog.....	18
4.2 Real-Time Events	18
4.2.1 OnConnected	18
4.2.2 OnDisConnected	18
4.2.3 OnAlarm	18
4.2.4 OnDoor.....	19
4.2.5 OnAttTransactionEx.....	19
4.2.6 OnEnrollFingerEx	20
4.2.7 OnFinger	20
4.2.8 OnFingerFeature	20
4.2.9 OnHIDNum.....	20
4.2.10 OnNewUser	20
4.2.11 OnVerify	21

4.2.12 OnWriteCard.....	21
4.2.13 OnEmptyCard.....	21
4.2.14 OnEMData.....	21

5 Common Functions.....21

5.1 Device Connection Functions.....	21
5.1.1 Connect_Net.....	21
5.1.2 Connect_Com.....	22
5.1.3 Disconnect.....	23
5.2 Data Management Functions	23
5.2.1 Attendance Record Data.....	23
5.2.1.1 ReadGeneralLogData	23
5.2.1.2 ReadAllGLogData.....	23
5.2.1.3 SSR_GetGeneralLogData.....	24
5.2.1.4 ClearGLog.....	25
5.2.2 Operation Record Data	26
5.2.2.1 ReadSuperLogData	26
5.2.2.2 ReadAllSLogData	26
5.2.2.3 GetSuperLogData.....	26
5.2.2.4 GetAllSLogData.....	29
5.2.2.5 ClearSLog	29
5.2.2.6 GetSuperLogData2.....	29
5.2.3 User Information Functions	30
5.2.3.1 ReadAllUserID.....	30
5.2.3.2 SSR_EnableUser.....	31
5.2.3.3 SetUserInfoEx	31
5.2.3.4 GetUserInfoEx	32
5.2.3.5 DeleteUserInfoEx.....	33
5.2.3.6 SSR_GetAllUserInfo	33
5.2.3.7 SSR_GetUserInfo.....	34
5.2.3.8 SSR_SetUserInfo	35
5.2.4 Registration Data Functions (Including Both User Information and Fingerprint).....	35
5.2.4.1 SSR_DeleteEnrollData	35
5.2.4.2 SSR_DeleteEnrollDataExt	36
5.2.5 Fingerprint Template Functions.....	37
5.2.5.1 ReadAllTemplate	37
5.2.5.2 SSR_GetUserTmp.....	37
5.2.5.3 SSR_GetUserTmpStr.....	38
5.2.5.4 SSR_SetUserTmp	38
5.2.5.5 SSR_SetUserTmpStr.....	39
5.2.5.6 SSR_DelUserTmp	40
5.2.5.7 SSR_SetUserTmpExt	40
5.2.5.8 SSR_DelUserTmpExt	41
5.2.5.9 SetUserTmpEx	41
5.2.5.10 SetUserTmpExStr.....	42

5.2.5.11 GetUserTmpEx	43
5.2.5.12 GetUserTmpExStr.....	44
5.2.6 Others	45
5.2.6.1 SMS Functions	45
5.2.6.2 Work Code Functions	49
5.2.6.3 Holiday Functions	50
5.2.6.4 DST Functions.....	51
5.2.6.5 Shortcut Keys	53
5.2.6.6 Fingerprint Template Conversion Functions.....	55
5.2.7 System Data Management Functions.....	58
5.2.7.1 ClearKeeperData	58
5.2.7.2 ClearData	58
5.2.7.3 GetDataFile	59
5.2.7.4 SendFile	59
5.2.7.5 RefreshData	60
5.2.8 Attendance Photo.....	60
5.2.8.1 GetPhotoNamesByTime	60
5.2.8.2 GetPhotoByName.....	60
5.2.8.3 GetPhotoCount.....	60
5.2.8.4 ClearPhotoByTime.....	60
5.3 Access Control Functions (Time Slot, Group, Open Door Combination).....	60
5.3.1 GetUserGroup	60
5.3.2 SetUserGroup.....	61
5.3.3 GetTZInfo	61
5.3.4 SetTZInfo.....	62
5.3.5 SSR_SetUnLockGroup	63
5.3.6 SSR_GetUnLockGroup.....	63
5.3.7 SSR_SetGroupTZ.....	64
5.3.8 SSR_GetGroupTZ	64
5.3.9 GetUserTZs.....	65
5.3.10 SetUserTZs	66
5.3.11 GetUserTZStr	66
5.3.12 SetUserTZStr.....	67
5.3.13 ACUnlock	68
5.3.14 GetACFun.....	68
5.3.15 GetDoorState.....	68
5.3.16 UseGroupTimeZone	69
5.4 Device Management Functions	69
5.4.1 IsTFTMachine.....	69
5.4.2 GetDeviceStatus.....	70
5.4.3 GetDeviceInfo.....	71
5.4.4 SetDeviceInfo	74
5.4.5 SetDeviceTime	74
5.4.6 SetDeviceTime2	75
5.4.7 GetDeviceTime.....	75
5.4.8 GetSerialNumber	75
5.4.9 GetProductCode	76
5.4.10 GetFirmwareVersion	76
5.4.11 GetSDKVersion	77

5.4.13 SetDeviceIP	78
5.4.14 GetDeviceMAC	78
5.4.15 SetDeviceMAC	78
5.4.16 GetWiegandFmt.....	79
5.4.17 SetWiegandFmt	79
5.4.18 GetCardFun.....	80
5.4.19 SetDeviceCommPwd	80
5.4.20 SetCommPassword	81
5.4.21 QueryState	81
5.4.22 GetVendor	82
5.4.23 GetDeviceStrInfo	82
5.4.24 GetPlatform	82
5.4.25 ReadAOptions	83
5.4.26 GetSysOption	83
5.4.27 SetSysOption.....	84
5.5 others	84
5.5.1 Device Control Functions	84
5.5.1.1 ClearAdministrators	84
5.5.1.2 EnableDevice	85
5.5.1.3 EnableClock	85
5.5.1.4 DisableDeviceWithTimeOut	86
5.5.1.5 PowerOffDevice.....	86
5.5.1.6 RestartDevice.....	86
5.5.1.7 SleepDevice	87
5.5.2 Online Registration Functions	87
5.5.2.1 StartEnrollEx.....	87
5.5.2.2 StartVerify.....	88
5.5.2.3 StartIdentify	88
5.5.2.4 CancelOperation.....	88
5.5.3 Card Operation Functions	89
5.5.3.1 WriteCard	89
5.5.3.2 EmptyCard	89
5.5.4 Others	90
5.5.4.1 GetLastError.....	90
5.5.4.2 GetHIDEventCardNumAsStr	90
5.5.4.3 CaptureImage.....	91
5.5.4.4 UpdateFirmware	91
5.5.4.5 BeginBatchUpdate.....	92
5.5.4.6 BatchUpdate.....	92
5.5.4.7 CancelBatchUpdate.....	93
5.5.4.8 PlayVoice	93
5.5.4.9 PlayVoiceByIndex	94

6 FAQs94

6.1 How to Download Attendance Records?	94
---	----

6.2 How to Create a User Online?	94
6.3 How to Import or Download Data from USB Disk?	94
6.4 How to Use Biokey to Write the Collected Fingerprint Templates Offline?	97
6.5 How to Obtain All Information of All Users?	97
6.6 How to Connect to the Device?	97
6.7 Password Is Invalid After SetUserInfo Is Used	98
6.8 How to Convert an Online Template into an Offline Template?	98
6.9 Demo Program Fails to Connect to the Device.	98
6.10 Offline Fingerprint Device Keeps Working After Being Connected	98
6.11 Illegal Characters Are Displayed or Screen Display Is Abnormal After Non-English Names or Short Messages Are Uploaded to the Device	99
6.12 Card Management Problems	99
6.13 Firewall or Router Traversal	99
6.14 Difference between ZKFinger10.0 and ZKFinger9.0 and Comparison between Templates	100
6.15 Uploading a Large Capacity of Fingerprints	100
6.16 Differences between High-speed Upload and Ordinary Upload	100
6.17 How to Determine Whether the Device Uses ZKFinger10.0 or ZKFinger9.0?	100
6.18 How to Upload, Download, and Delete ZKFinger10.0 Templates?	101
6.19 How to Upload, Download, and Delete ZKFinger9.0 Templates?	102

1 SDK Description

The offline communication SDK is an interface for data communication with offline fingerprint devices, access control devices, and RFID card devices. It can be used to conveniently manage user information and fingerprints, download attendance records, operation records, user information, and fingerprint templates, set devices, and configure access control. The SDK is used to:

1. Download attendance records.
2. Upload and download user information, card information, fingerprints, and face information.
3. Set access control rules of access control devices.
4. Set device time, match thresholds, etc.
5. Trigger various events of devices in real time, for example, fingerprint verification.
6. Directly enroll users online.
7. Set SMS and work code (available only on devices that support this function) of users.
8. Set personalized prompt tones, function keys, etc.

2 Quick Start

2.1 Terms

1. Real-time event

After the SDK and the device communicate with each other successfully, some operations on the device (for example, connecting to the device, verifying a user, and enrolling a user) trigger corresponding events in real time, and data is transmitted to the PC (host computer).

The triggered events are called real-time events. Users can monitor device states and user operations in real time through real-time events.

2. FP

Shortened form of "fingerprint".

3. Fingerprint algorithm

A fingerprint algorithm refers to the algorithm used to generate and verify fingerprint templates. At present, ZKFinger 9.0 is the latest fingerprint algorithm used by Granding black & white devices. It is a high-speed algorithm with higher performance. For details, see FAQs.

4. High-speed buffer

A high-speed buffer refers to the memory requested by the SDK on a PC during usage. In the data upload or download process, data is first saved in the buffer before being processed.

5. Time slot, group, open door combination


These three terms are the most important concepts of access control.

A time slot is a time range. A time slot includes the time information of one week, and a time range is specified for each day of this week. For example, the following expression indicates a time range from 00:00 to 22:11 in each day of one week: 00002211000022110000221100002211000022110000221100002211. Generally, 50 time slots can be set in the device.

A group is a collection. When many users have the same access control privileges, these users can be added to the same group and use the group time slot. Then, time slots can be set for the group.

An open door combination refers to the groups that are required for unlock. If the open door combination contains only one group, it indicates that the door is opened when any of the users in this group passes verification. If the open door combination contains two or more groups, the door is opened only after all groups pass verification. For example, an open door combination contains groups A and B, the door is opened only after a member of group A and a member of group B pass verification.

The following figure shows the relationship of the three concepts:

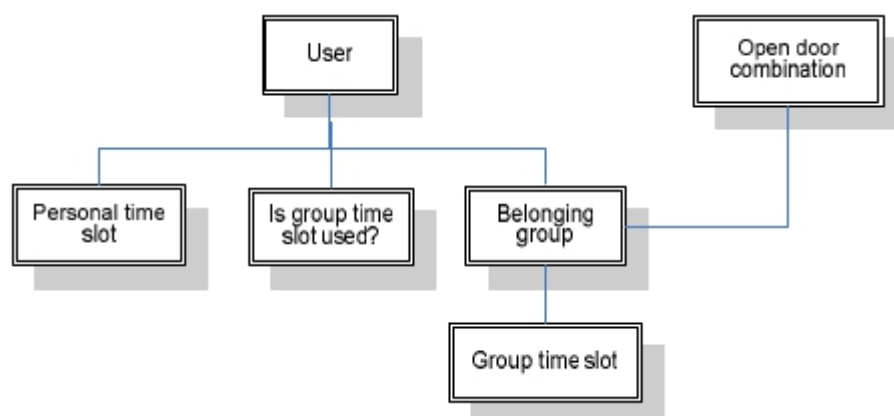


6. Operation record

An operation record, also called management record, is a record generated when users or administrators operate on the device, for example, powering on/off the device and enrolling a user.


2.2 Common Processes

For details, see the descriptions of the demo program.


2.2.1 Downloading Attendance Records

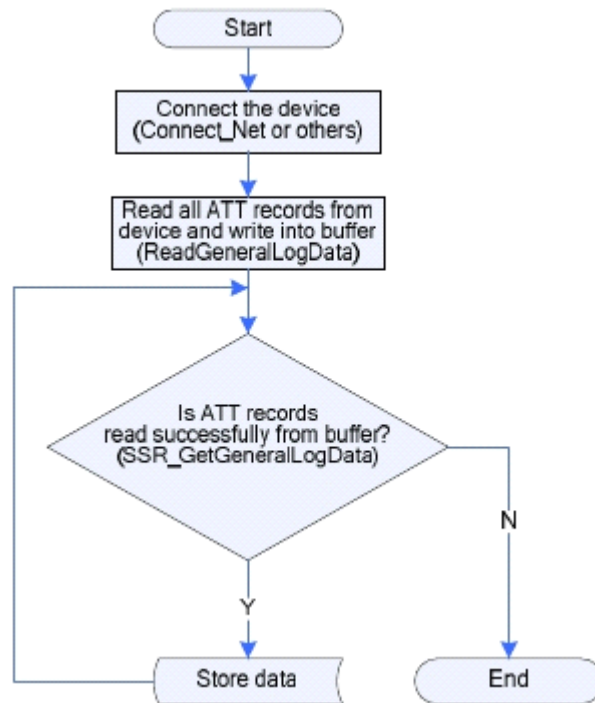

2.2.2 Downloading Operation Records

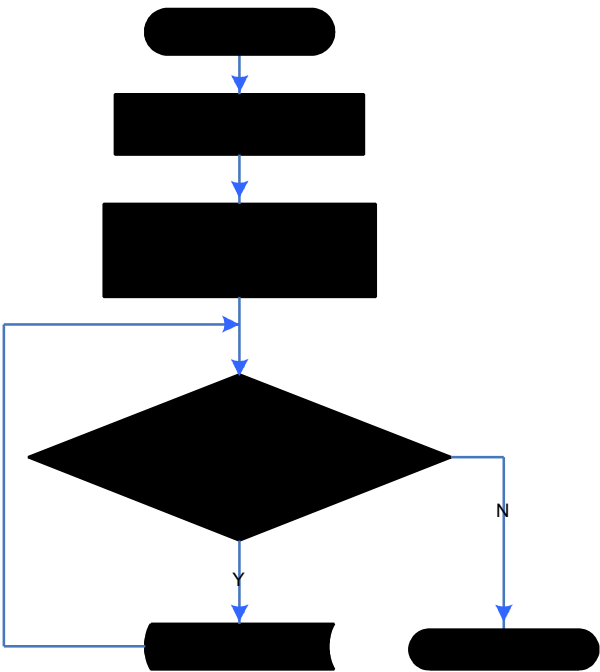


2.2.3 Setting Access Control

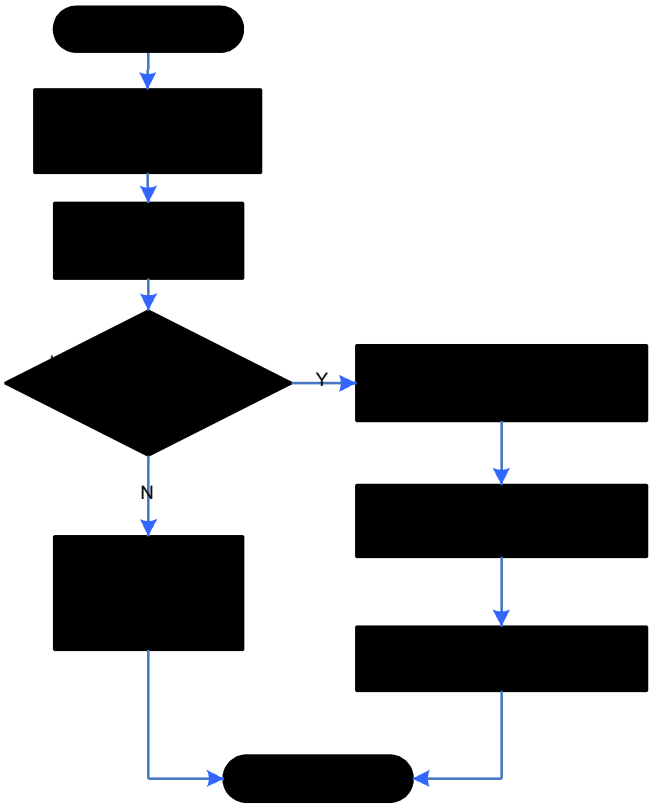


2.2.4 Downloading User Information, or Fingerprint Templates

The left diagram shows the process of downloading the information of all users. The right diagram shows the process of downloading the information of a specified user.

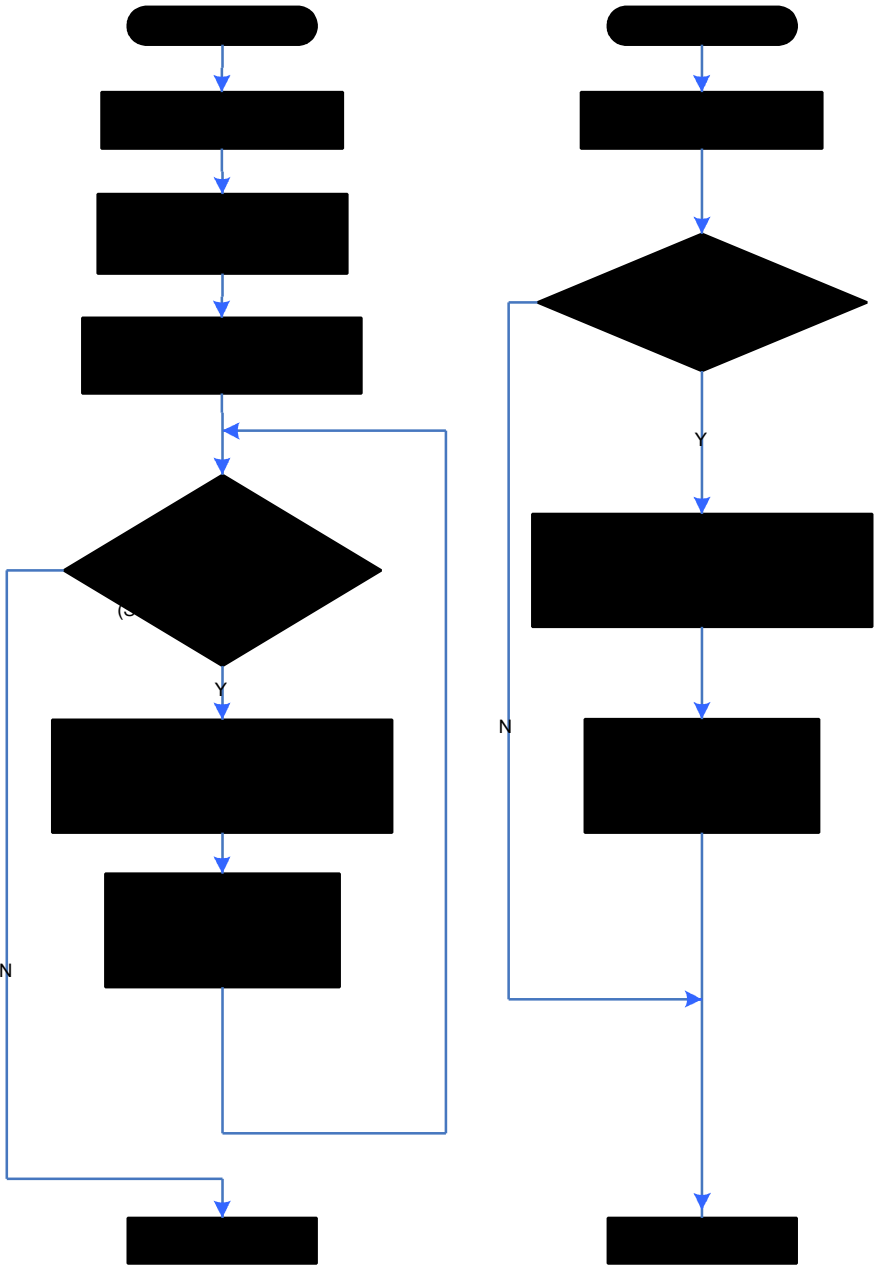


2.2.5 Receiving Real-time Events

Real-time events can be received in two modes. The second mode is recommended.

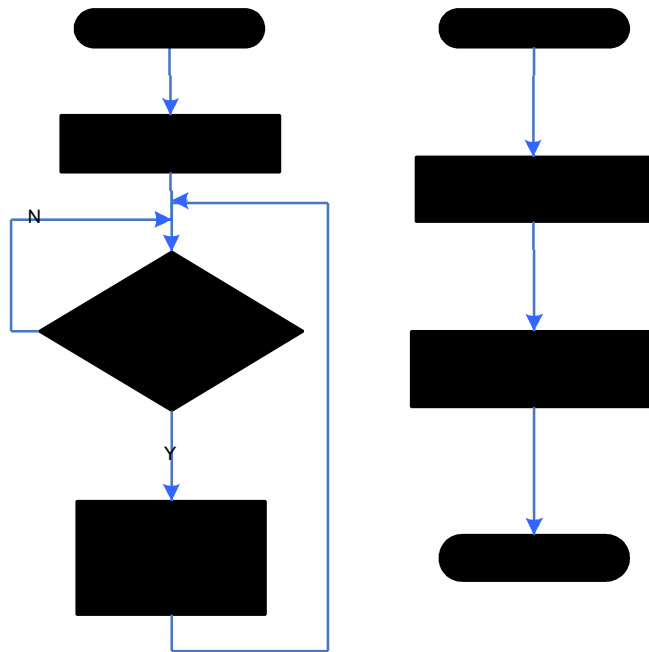


2.2.6 Enrolling Users Online (Uploading Information, and Fingerprint Templates of Users)

There are two online user enrollment modes. The left diagram shows the process in which the device accesses the enrollment interface to enroll a user after being connected. The right diagram shows the process of creating a user on the device and uploading the card number, password, and fingerprint information for the user (that is, enrolling a card user, a password user, and a fingerprint user).

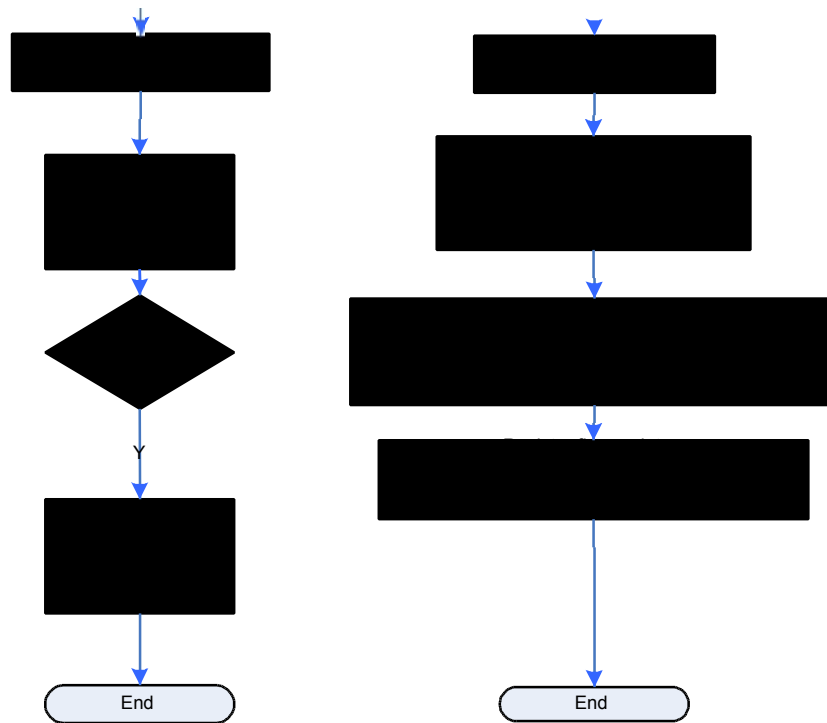

2.2.7 Uploading Short Messages

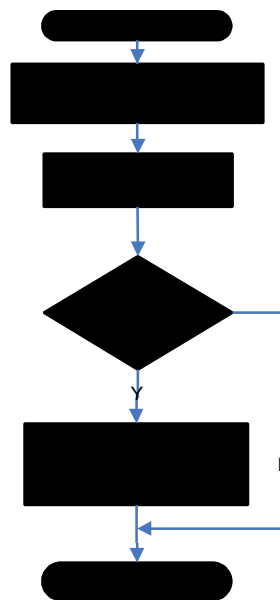

3 Related Attributes

3.1 AccGroup

Usage: Set or obtain the group to which a user belongs.

If this attribute is set before user information is uploaded, the user group is set when SetUserInfo is used to upload user information. Otherwise, AccGroup is 1 by default.

Type: LONG, writable

3.2 AccTimeZones

Usage: Set the time slot of a user.

If this attribute is set before user information is uploaded, the time slot of a user is set when SetUserInfo is used to upload user information.

Type: LONG *. It can be regarded as a long one-dimensional array with subscript 3.
Readable/writable

3.3 BASE64

Usage: When the value is set to True, the SDK outputs the character string template in base64 codes. Otherwise, the SDK outputs the character string template in hexadecimal codes.

Type: LONG, readable/writable

3.4 CardNumber

Usage: Set or read the card number of a user. If this attribute is unavailable, use GetStrCardnumber and SetStrCardnumber instead.

Type: LONG, readable/writable

3.5 CommPort

Usage: Set the number of the serial port or the port for RS485 communication.

Type: LONG, readable/writable

3.6 ConvertBIG5

Usage: When the value is set to True, the SDK automatically converts the font from simplified Chinese to traditional Chinese for offline development. This function is invalid for series products of Multilanguage versions. Do not set this function in this case.

Type: LONG, readable/writable

Caution: This attribute is invalid for Multilanguage versions. In addition, you do not need to modify this attribute for ZEM100 5.22, ZEM200 5.30, and later versions.

3.7 PINWidth

Usage: Indicate the maximum length of the user ID (Arabic numeral).

Type: LONG, read only

3.8 GetStrCardNumber

[Definition]

VARIANT_BOOL GetStrCardNumber([out] BSTR* ACardNumber)

[Usage]

Obtain the value of cardnumber of the SDK. Generally, this function can be used to obtain the card number of a user immediately after the user information is obtained.

[Parameter]

AcardNumber

Card number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetUserInfo

3.9 SetStrCardNumber

[Definition]

VARIANT_BOOL SetStrCardNumber([in] BSTR ACardNumber)

[Usage]

Set the value of cardnumber of the SDK. Generally, this function can be used to set the card number of a user before the user information is set.

[Parameter]

AcardNumber

Card number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetUserInfo

4 Real-time Event Functions

4.1 Obtaining Real-Time Events

4.1.1 RegEvent

[Definition]

VARIANT_BOOL RegEvent([in] LONG dwMachineNumber, [in] LONG EventMask)

[Usage]

Register required real-time events.

[Parameter]

dwMachineNumber:

Device number

EventMask:

Code of an event. Values are as follows:

1	OnAttTransaction, OnAttTransactionEx
2 (1<<1)	OnFinger
4 (1<<2)	OnNewUser
8 (1<<3)	OnEnrollFinger
16 (1<<4)	OnKeyPress
256 (1<<7)	OnVerify
512 (1<<8)	OnFingerFeature
1024 (1<<9)	OnDoor, OnAlarm
2048 (1<<10)	OnHIDNum
4096 (1<<11)	OnWriteCard
8192 (1<<12)	OnEmptyCard
16384 (1<<13)	OnDeleteTemplate

To register multiple real-time events, perform the XOR operation between binary codes of related events. For example, to register all real-time events, the value of EventMask is 65535.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

ReadRTLog, GetRTLog

4.1.2 ReadRTLog

[Definition]

VARIANT_BOOL ReadRTLog([in] LONG dwMachineNumber)

[Usage]

Read real-time events and write them to the buffer of the PC. This function can be used with GetRTLog to actively obtain real-time events from the device after the PC connects to the device successfully.

[Parameter]

dwMachineNumber:

Device number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetRTLog

4.1.3 GetRTLog

[Definition]

VARIANT_BOOL GetRTLog(LONG dwMachineNumber)

[Usage]

Obtain an event from the buffer of the PC and trigger the event. This function can be used with ReadRTLog to actively obtain real-time events from the device after the PC connects to the device successfully.

[Parameter]

dwMachineNumber:

Device number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

ReadRTLog

4.2 Real-Time Events

4.2.1 OnConnected

This event is triggered when the PC connects to the device successfully. No value is returned.

4.2.2 OnDisconnected

This event is triggered when the PC disconnects from the device successfully. No value is returned.

4.2.3 OnAlarm

OnAlarm (LONG AlarmType, LONG EnrollNumber, LONG Verified)

This event is triggered when the device reports an alarm.

[Return Value]

Alarm Type: Type of an alarm. 55: Tamper alarm. 58: False alarm. 32: Threatened alarm. 34: Anti-pass back alarm.

EnrollNumber: User ID. The value is 0 when a tamper alarm, false alarm, or threatened alarm is given. The value is the user ID when other threatened alarm or anti-pass back alarm is given.

Verified: Whether to verify The value is 0 when a tamper alarm, false alarm, or threatened alarm is given. The value is 1 when other alarms are given.

4.2.4 OnDoor

OnDoor (LONG EventType)

This event is triggered when the device opens the door.

[Return Value]

EventType: Open door type

4: The door is not closed. 53: Exit button. 5: The door is closed. 1: The door is opened unexpectedly.

4.2.5 OnAttTransactionEx

OnAttTransactionEx (BSTR EnrollNumber, LONG IsInvalid, LONG AttState, LONG VerifyMethod, LONG Year, LONG Month, LONG Day, LONG Hour, LONG Minute, LONG Second, LONG WorkCode)

This event is triggered after verification succeeds.

[Return Value]

EnrollNumber: UserID of a user.

IsInvalid: Whether a record is valid. 1: Not valid. 0: Valid.

AttState: Attendance state. 0—Check-In (default value) 1—Check-Out 2—Break-Out 3—Break-In 4—OT-In 5—OT-Out

VerifyMethod: Verification mode. Generally, 0: password verification, 1: fingerprint verification, 2: card verification.

In multi-verification mode:

FP_OR_PW_OR_RF	0
FP	1
PIN	2
PW	3
RF	4
FP_OR_PW	5
FP_OR_RF	6
PW_OR_RF	7
PIN_AND_FP	8
FP_AND_PW	9
FP_AND_RF	10
PW_AND_RF	11
FP_AND_PW_AND_RF	12
PIN_AND_FP_AND_PW	13
FP_AND_RF_OR_PIN	14

Year/Month/Day/Hour/Minute/ Second indicates the time when verification succeeds.

WorkCode: work code returned during verification. Return 0 when the device does not support work code.

4.2.6 OnEnrollFingerEx

OnEnrollFinger (LONG EnrollNumber, LONG FingerIndex, LONG ActionResult, LONG TemplateLength)

This event is triggered when a fingerprint is registered.

[Return Value]

EnrollNumber: User ID of the fingerprint being registered

FingerIndex: Index of the current fingerprint

ActionResult: Operation result. Return 0 if the operation is successful, or return a value greater than 0.

TemplateLength: Length of the fingerprint template

4.2.7 OnFinger

This event is triggered when a fingerprint is placed on the fingerprint sensor of the device. No value is returned.

4.2.8 OnFingerFeature

OnFingerFeature (LONG Score)

This event is triggered when a user places a finger and the device registers the fingerprint.

[Return Value]

Score: Quality score of a fingerprint

4.2.9 OnHIDNum

OnHIDNum (LONG CardNumber)

This event is triggered when a card is swiped.

[Return Value]

CardNumber: Number of a card that can be an ID card or an HID card. If the card is a Mifare card, the event is triggered only when the card is used as an ID card.

4.2.10 OnNewUser

OnNewUser (LONG EnrollNumber)

This event is triggered when a new user is successfully enrolled.

[Return Value]

EnrollNumber: UserID of the newly enrolled user.

4.2.11 OnVerify

OnVerify (LONG UserID)

This event is triggered when a user is verified.

[Return Value]

When verification succeeds, UserID indicates the ID of the user. Return the card number if card verification is successful, or return -1.

4.2.12 OnWriteCard

OnWriteCard (LONG EnrollNumber, LONG ActionResult, LONG Length)

This event is triggered when the device writes a card.

[Return Value]

EnrollNumber: ID of the user to be written into a card

ActionResult: Result of writing user information into a card. 0: Success. Other values: Failure.

Length: Size of the data to be written into a card

4.2.13 OnEmptyCard

OnEmptyCard (LONG ActionResult)

This event is triggered when a Mifare card is emptied.

[Return Value]

ActionResult: Result of emptying a card. 0: Success. Other values: Failure.

4.2.14 OnEMData

OnEMData (LONG DataType, LONG DataLen, CHAR* DataBuffer)

This event is triggered when the device sends an unknown event to SDK.

[Return Value]

DataType: Type of the returned event

DataLen: Data length

DataBuffer: Actual data

5 Common Functions

5.1 Device Connection Functions

5.1.1 Connect_Net

[Definition]

VARIANT_BOOL Connect_Net([in] BSTR IPAdd, [in] long PortI)

[Usage]

Connect to the device via the IP address and set up a network connection with the device.

[Parameter]

IPAdd:

IP address of the device

Port:

Port number used for connecting to the device. The default value is 4370.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

Disconnect, Connect_Com, Connect_USB

5.1.2 Connect_Com

[Definition]

VARIANT_BOOL Connect_Com([in] long ComPort, [in] long MachineNumber, [in] long BaudRate)

[Usage]

Connect to the device via a serial port, that is, via RS232 or RS485 port.

Note: This function can be also used for some devices that use USB Client to communicate with the PC. However, the USB client driver must be first installed to simulate a serial port.

After the installation succeeds, you can view the serial port number via the device manager on the PC or find the virtual serial port number via the program. For details, see "USBClient" of the demo program.

[Parameter]

ComPort:

Serial port number of the PC for connecting to the device

MachineNumber:

Device number

BaudRate:

Baud rate

[Return Value]

Return True if it is successful, or return False.

[Related Function]

Disconnect, Connect_Net, Connect_USB

5.1.3 Disconnect

[Definition]

Disconnect(void)

[Usage]

Disconnect from the device and release related resources.

[Parameter]

None

[Return Value]

None

[Related Function]

Connect_Net, Connect_Com, Connect_USB

5.2 Data Management Functions

5.2.1 Attendance Record Data

5.2.1.1 ReadGeneralLogData

[Definition]

VARIANT_BOOL ReadGeneralLogData([in] long dwMachineNumber)

[Usage]

Read attendance records and write them into the internal buffer of the PC. This function is the same as ReadAllGLogData.

[Parameter]

dwMachineNumber:

Device number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

ReadAllGLogData, GetAllGLogData, GetGeneralLogData, GetGeneralLogDataStr, ClearGLog, GetGeneralExtLogData

5.2.1.2 ReadAllGLogData

[Definition]

VARIANT_BOOL ReadAllGLogData ([in] long dwMachineNumber)

[Usage]

Read attendance records and write them into the internal buffer of the PC. This function is the same as ReadGeneralLogData.

[Parameter]

dwMachineNumber:

Device number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

ReadGeneralLogData, GetAllGLogData, GetGeneralLogData, GetGeneralLogDataStr,
ClearGLog, GetGeneralExtLogData

5.2.1.3 SSR_GetGeneralLogData

[Definition]

VARIANT_BOOL SSR_GetGeneralLogData([in] LONG dwMachineNumber, [out] BSTR* dwEnrollNumber, [out] LONG* dwVerifyMode, [out] LONG* dwInOutMode, [out] LONG* dwYear, [out] LONG* dwMonth, [out] LONG* dwDay, [out] LONG* dwHour, [out] LONG* dwMinute, [out] LONG* dwSecond, [out] LONG* dwWorkcode)

[Usage]

Read attendance records one by one from the internal buffer. Before using this function, you can use ReadAllGLogData or ReadGeneralLogData to read attendance records from the device and write them into the internal buffer of the PC. Each time this function is executed, the pointer points to the next attendance record.

[Parameter]

dwMachineNumber

Device number

dwEnrollNumber

Pointer pointing to a BSTR variable. The value is the user ID of the received attendance record. The value consists of up to 24 bits.

dwVerifyMode

Pointer pointing to a long variable. The value is the verification mode of the received attendance record. The values are as follows:

Generally, 0: password verification, 1: fingerprint verification, 2: card verification.

In multi-verification mode:

FP_OR_PW_OR_RF 0

FP 1

PIN 2

PW 3

RF 4

FP_OR_PW 5

FP_OR_RF 6

PW_OR_RF 7

PIN_AND_FP	8
FP_AND_PW	9
FP_AND_RF	10
PW_AND_RF	11
FP_AND_PW_AND_RF	12
PIN_AND_FP_AND_PW	13
FP_AND_RF_OR_PIN	14

dwInOutMode

Pointer pointing to a long variable. The value is the AttState of the received attendance record. The values are as follows:

0—Check-In (default value) 1—Check-Out 2—Break-Out
3—Break-In 4—OT-In 5—OT-Out

dwYear, dwMonth, dwDay, dwHour, dwMinute, dwSecond

Pointers pointing to long variables. The values are the date and time of the received attendance record.

dwWorkcode

Pointer pointing to a long variable. The value is the work code of the received attendance record.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

ReadGeneralLogData

5.2.1.4 ClearGLog

[Definition]

VARIANT_BOOL ClearGLog([in] long dwMachineNumber)

[Usage]

Clear all attendance records from the device.

[Parameter]

dwMachineNumber

Device number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

ClearSLog, ClearKeeperData

5.2.2 Operation Record Data

5.2.2.1 ReadSuperLogData

[Definition]

VARIANT_BOOL ReadSuperLogData([in]long dwMachineNumber)

[Usage]

Read operation records and write them into the internal buffer of the PC. This function is the same as ReadAllSLogData.

[Parameter]

dwMachineNumber:
Device number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

ReadAllSLogData, GetAllSLogData, GetSuperLogData, ClearSLog

5.2.2.2 ReadAllSLogData

[Definition]

VARIANT_BOOL ReadAllSLogData([in] long dwMachineNumber)

[Usage]

Read operation records and write them into the internal buffer of the PC. This function is the same as ReadSuperLogData.

[Parameter]

dwMachineNumber:
Device number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

ReadSuperLogData, GetAllSLogData, GetSuperLogData, ClearSLog

5.2.2.3 GetSuperLogData

[Definition]

VARIANT_BOOL GetSuperLogData([in] long dwMachineNumber, [out] long* dwTMachineNumber, [out] long* dwSEnrollNumber, [out] long* Params4, [out] long* Params1, [out] long* Params2, [out] long* dwManipulation, [out] long* Params3, [out] long* dwYear, [out] long* dwMonth, [out] long* dwDay, [out] long* dwHour, [out] long* dwMinute)

[Usage]

Read operation records one by one from the internal buffer. Before using this function, you can use ReadAllSLogData or ReadSuperLogData to read operation records from the device and write them into the internal buffer of the PC. Each time this function is executed, the pointer points to the next operation record. This function is the similar to GetSuperLogData2 except that GetSuperLogData2 can be used to obtain more accurate operation record time (in seconds).

[Parameter]

dwMachineNumber

Device number

dwTMachineNumber

Pointer pointing to a long variable. The value is the device number of the received operation record.

dwSEnrollNumber

Pointer pointing to a long variable. The value is the administrator ID of the received operation record.

Params4

Pointer pointing to a long variable. The value varies with dwManipulation.

Params1

Pointer pointing to along variable. The value varies with dwManipulation.

Params2

Pointer pointing to a long variable. The value varies with dwManipulation.

dwManipulation

Pointer pointing to a long variable. The value is the operation type. The specific values are as follows:

Value of dwManipulation	Meaning of dwManipulation	Params1	Params2	Params3	Params4
0	Power on				
1	Power off				
3	Alarm	Alarm type. 58: False alarm. 54: Door entry alarm, 53: Exit button alarm, 55: Tamper alarm, 65535: Alarm off			
4	Enter menu				

Value of dwManipulation	Meaning of dwManipulation	Params1	Params2	Params3	Params4
5	Change setting	Number of the set option			
6	Register a fingerprint	ID of the operated user	Operation result. 0: Success. Other values: Failure.	Index of the registered fingerprint	Length of the fingerprint template (2: Threatened fingerprint)
7	Register a password				
14	Create an MF card	ID of the operated user		Number of fingerprints written into the MF card	Size of fingerprint data written into the MF card
20	Copy data from the MF card to the device			Number of fingerprints read out from the MF card	
22	Restore factory setting				
30	Enroll a new user	ID of the operated user	Operation result		
32	Threatened alarm	Whether to verify. 0: Key alarm. 1: Verify alarm	Note: When the value is Verify alarm, dwSEnrollNumber returns the ID of the threatened user.		
34	Anti-pass back	Whether the alarm is an anti-pass back alarm.			

Params3

Pointer pointing to a long variable. The value varies with dwManipulation.

dwYear, dwMonth, dwDay, dwHour, dwMinute

Pointers pointing to long variables. The values are the date and time of the received operation record.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetSuperLogData2, GetAllSLogData

5.2.2.4 GetAllSLogData

[Definition]

GetAllSLogData([in] long dwMachineNumber, [out] long* dwTMachineNumber, [out] long* dwSEnrollNumber, [out] long* dwSMachineNumber, [out] long* dwGEnrollNumber, [out] long* dwGMachineNumber, [out] long* dwManipulation, [out] long* dwBackupNumber, [out] long* dwYear, [out] long* dwMonth, [out] long* dwDay, [out] long* dwHour, [out] long* dwMinute)

[Usage]

Read operation records one by one from the internal buffer. Before using this function, you can use ReadAllSLogData or ReadSuperLogData to read operation records from the device and write them into the internal buffer of the PC. Each time this function is executed, the pointer points to the next operation record. This function is the same as GetSuperLogData except that interface names are different to achieve compatibility.

[Parameter]

Same as GetSuperLogData

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetSuperLogData

5.2.2.5 ClearSLog

[Definition]

VARIANT_BOOL ClearSLog([in] long dwMachineNumber)

[Usage]

Clear all operation records from the device.

[Parameter]

dwMachineNumber

Device number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

ClearGLog, ClearKeeperData

5.2.2.6 GetSuperLogData2

[Definition]

VARIANT_BOOL GetSuperLogData2([in] LONG dwMachineNumber, [out] LONG* dwTMachineNumber, [out] LONG* dwSEnrollNumber, [out] LONG* Params4, [out] LONG* Params1, [out] LONG* Params2, [out] LONG* dwManipulation, [out] LONG* Params3, [out] LONG* dwYear, [out] LONG* dwMonth, [out] LONG* dwDay, [out] LONG* dwHour, [out] LONG* dwMinute, [out] LONG* dwSecs)

[Usage]

Read operation records one by one from the internal buffer. Before using this function, you can use ReadAllSLogData or ReadSuperLogData to read operation records from the device and write them into the internal buffer of the PC. Each time this function is executed, the pointer points to the next operation record. This function is the similar to GetSuperLogData except that GetSuperLogData can be used to obtain more accurate operation record time (in seconds).

[Parameter]

dwYear, dwMonth, dwDay, dwHour, dwMinute, dwSecs

Pointers pointing to long variables. The values are the date and time of the received operation record.

For other parameters, see GetSuperLogData.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

ReadAllSLogData, GetSuperLogData

5.2.3 User Information Functions

5.2.3.1 ReadAllUserID

[Definition]

VARIANT_BOOL ReadAllUserID([in] long dwMachineNumber)

[Usage]

Read all user information except fingerprint templates, such as user ID, password, name, and card number, and write the user information into the memory of the PC. After this function is executed, you can use GetAllUserID to take out user information.

[Parameter]

dwMachineNumber

Device number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetAllUserID

5.2.3.2 SSR_EnableUser

[Definition]

VARIANT_BOOL EnableUser([in] long dwMachineNumber, [in] long dwEnrollNumber, [in] long dwEMachineNumber, [in] long dwBackupNumber, [in] VARIANT_BOOL bFlag)

[Usage]

Set whether a user is enabled.

[Parameter]

dwMachineNumber

Device number

dwEnrollNumber

User ID

dwEMachineNumber, dwBackupNumber

Invalid parameter without specific meanings

bFlag

User enable flag. True: Enabled. False: Disabled.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

None

5.2.3.3 SetUserInfoEx

[Definition]

VARIANT_BOOL SetUserInfoEx([in] LONG dwMachineNumber, [in] LONG dwEnrollNumber, [in] LONG VerifyStyle, [in] BYTE* Reserved)

[Usage]

Upload the user verification mode or group verification mode. Only the devices supporting multiple verification modes support this function.

[Parameter]

dwMachineNumber

Device number

dwEnrollNumber

User ID

VerifyStyle

Verification mode

The values of user verification mode set by black & white devices range from 1 to 15, that is, there are 15 verification modes. For details, see parameters of

GetGeneralLogData. If group verification mode is used, the values of verification mode range from 129 to 134, representing groups 1 to 5 respectively.

For TFT access control fingerprint devices: 0 (group verification mode), 128(FP/PW/RF), 129(FP), 130(PIN), 131(PW), 132(RF), 133(FP&RF), 134(FP/PW), 135(FP/RF), 136(PW/RF), 137(PIN&FP), 138(FP&PW), 139(PW&RF), 140(FP&PW&RF), 141(PIN&FP&PW), 142(FP&RF/PIN).

Reserved

Reserved parameter temporarily without specific meanings.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetUserInfoEx, DeleteUserInfoEx

5.2.3.4 GetUserInfoEx

[Definition]

VARIANT_BOOL GetUserInfoEx([in] LONG dwMachineNumber, [in] LONG dwEnrollNumber, [out] LONG* VerifyStyle, [out] BYTE* Reserved)

[Usage]

Obtain the user verification mode. Only the devices support multiple verification modes support this function.

[Parameter]

dwMachineNumber

Device number

dwEnrollNumber

User ID

VerifyStyle

Verification mode of the user described by dwEnrollNumber. The values are as follows:

The values of user verification mode set by black & white devices range from 1 to 15, that is, there are 15 verification modes. For details, see parameters of GetGeneralLogData. If group verification mode is used, the values of verification mode range from 129 to 134, representing groups 1 to 5 respectively.

For TFT access control fingerprint device: 0 (group verification mode), 128(FP/PW/RF), 129(FP), 130(PIN), 131(PW), 132(RF), 133(FP&RF), 134(FP/PW), 135(FP/RF), 136(PW/RF), 137(PIN&FP), 138(FP&PW), 139(PW&RF), 140(FP&PW&RF), 141(PIN&FP&PW), 142(FP&RF/PIN).

Reserved

Reserved parameter without specific meanings.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetUserInfoEx, DeleteUserInfoEx

5.2.3.5 DeleteUserInfoEx

[Definition]

VARIANT_BOOL DeleteUserInfoEx([in] LONG dwMachineNumber, [in] LONG dwEnrollNumber)

[Usage]

Delete the multiple verification modes of the specified user. Only the devices supporting multiple verification modes support this function.

[Parameter]

dwMachineNumber
Device number
dwEnrollNumber
User ID

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetUserInfoEx, GetUserInfoEx

5.2.3.6 SSR_GetAllUserInfo

[Definition]

VARIANT_BOOL GetAllUserInfo([out] long dwMachineNumber, [out] long* dwEnrollNumber, [out] BSTR * Name, [out] BSTR * Password, [out] long * Privilege, [out] VARIANT_BOOL * Enabled)

[Usage]

Obtain all user information. Before executing this function, you can use ReadAllUserID to read out all user information and write it into the memory. Each time GetAllUserInfo is executed, the pointer points to the next user information. After all user information is read, False is returned. The difference between this function and GetAllUserID is that this function can obtain more information.

[Parameter]

dwMachineNumber
Device number
dwEnrollNumber
User ID
Name

User name

Password

User password

Privilege

User privilege. 0: common user, 1: enroller, 2: administrator, 3: super administrator

dwEnable

Whether the user is enabled. 1: Enabled. 0: Disabled.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

ReadAllUserID, GetAllUserID

5.2.3.7 SSR_GetUserInfo

[Definition]

VARIANT_BOOL SSR_GetUserInfo([in] LONG dwMachineNumber, [in] BSTR dwEnrollNumber, [out] BSTR* Name, [out] BSTR* Password, [out] LONG* Privilege, [out] VARIANT_BOOL* Enabled)

[Usage]

Obtain the information of the specified user.

[Parameter]

dwMachineNumber

Device number

dwEnrollNumber

User ID

Name

Name of the user described by dwEnrollNumber

Password

Password of the user described by dwEnrollNumber

Privilege

Privilege of the user described by dwEnrollNumber. 3: administrator, 0: common user

Enabled

User enable flag. 1: Enabled. 0: Disabled

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SSR_SetUserInfo

5.2.3.8 SSR_SetUserInfo

[Definition]

VARIANT_BOOL SetUserInfo([in] long dwMachineNumber, [in] long dwEnrollNumber, [in] BSTR Name, [in] BSTR Password, [in] long Privilege, [in] VARIANT_BOOL Enabled)

[Usage]

Set user information. If the user is unavailable, the device automatically creates the user.

[Parameter]

dwMachineNumber

Device number

dwEnrollNumber

User ID

Name

User name to be set

Password

User password to be set. If the value is null, the user password on the device is cleared.

Privilege

User privilege. 0: common user, 1: enroller, 2: administrator, 3: super administrator

Enabled

User enable flag. 1: Enabled. 0: Disabled

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetUserInfo

5.2.4 Registration Data Functions (Including Both User Information and Fingerprint)

5.2.4.1 SSR_DeleteEnrollData

[Definition]

VARIANT_BOOL DeleteEnrollData([in] long dwMachineNumber, [in] long dwEnrollNumber, [in] long dwEMachineNumber, [in] long dwBackupNumber)

[Usage]

Delete registration data.

[Parameter]

dwMachineNumber, dwEMachineNumber

Device number

dwEnrollNumber

User ID

dwBackupNumber

Index of the fingerprint

The value ranges from 0 to 9. In this case, the device also checks whether the user has other fingerprints or passwords. If no, the device deletes the user.

When the value is 10, the device deletes the password. The device also checks whether the user has fingerprint data. If no, the device deletes the user.

When the value is 11 or 13, the device deletes all fingerprint data of the user. When the value is 12, the device deletes the user (including all fingerprints, card numbers and passwords of the user).

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetEnrollData, GetEnrollData

5.2.4.2 SSR_DeleteEnrollDataExt

[Definition]

VARIANT_BOOL SSR_DeleteEnrollDataExt([in]LONG dwMachineNumber, [in] BSTR dwEnrollNumber, [in] LONG dwBackupNumber)

[Usage]

Delete registration data. The difference between this function and SSR_DeleteEnrollData is that this function can delete all fingerprints. This function achieves a higher efficiency.

[Parameter]

dwMachineNumber

Device number

dwEnrollNumber

User ID

dwBackupNumber

Index of the fingerprint

The value ranges from 0 to 9. In this case, the device also checks whether the user has other fingerprints or passwords. If no, the device deletes the user.

When the value is 0, the device deletes the password. The device also checks whether the user has fingerprint data. If no, the device deletes the user.

When the value is 11 or 13, the device deletes all fingerprint data of the user. When the value is 12, the device deletes the user (including all fingerprints, card numbers and passwords of the user).

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SSR_SetUserInfo, SSR_SetUserTmp, SSR_DeleteEnrollData

5.2.5 Fingerprint Template Functions

5.2.5.1 ReadAllTemplate

[Definition]

VARIANT_BOOL ReadAllTemplate([in] LONG dwMachineNumber)

[Usage]

Read out all fingerprint templates from the device and write them into the memory of the PC. This function is used to read out and write all the fingerprints into the memory at a time. This function achieves a higher speed in comparison with the way of obtaining fingerprints one by one.

[Parameter]

dwMachineNumber
Device number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

None

5.2.5.2 SSR_GetUserTmp

[Definition]

VARIANT_BOOL GetUserTmp([in] long dwMachineNumber, [in] long dwEnrollNumber, [in] long dwFingerIndex, [out] BYTE* TmpData, [out] long * TmpLength)

[Usage]

Obtain the ZKFinger 9.0 fingerprint templates of a user in binary mode. The only difference between this function and GetUserTmpStr is the fingerprint template format.

[Parameter]

dwMachineNumber
Device number
dwEnrollNumber
User ID
dwFingerIndex
Index of the fingerprint. The value ranges from 0 to 9.
TmpData
Fingerprint template data

TmpLength

Fingerprint template length

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetUserTmp

5.2.5.3 SSR_GetUserTmpStr

[Definition]

VARIANT_BOOL GetUserTmpStr([in] long dwMachineNumber,[in] long dwEnrollNumber,
[in] long dwFingerIndex, [out] BSTR* TmpData, [out] long * TmpLength)

[Usage]

Obtain the ZKFinger 9.0 fingerprint templates of a user in string form. The only difference between this function and GetUserTmp is the fingerprint template format.

[Parameter]

dwMachineNumber

Device number

dwEnrollNumber

User ID

dwFingerIndex

Index of the fingerprint. The value ranges from 0 to 9.

TmpData

Fingerprint template data

TmpLength

Fingerprint template length

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetUserTmpStr

5.2.5.4 SSR_SetUserTmp

[Definition]

VARIANT_BOOL SetUserTmp([in] long dwMachineNumber, [in] long dwEnrollNumber, [in]
long dwFingerIndex, [in] BYTE* TmpData)

[Usage]

Upload the ZKFinger 9.0 fingerprint templates of a user in binary mode. The only difference between this function and SetUserTmpStr is the fingerprint template format. Caution: The user must have

been created on the device. If the same index is already registered by the user, the fingerprint template will be overwritten.

[Parameter]

dwMachineNumber

Device number

dwEnrollNumber

User ID

dwFingerIndex

Index of the fingerprint. The value ranges from 0 to 9.

TmpData

Fingerprint template data

TmpLength

Fingerprint template length

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetUserTmp

5.2.5.5 SSR_SetUserTmpStr

[Definition]

VARIANT_BOOL SetUserTmpStr([in] long dwMachineNumber, [in]long dwEnrollNumber, [in] long dwFingerIndex, [in]BSTR TmpData)

[Usage]

Set the ZKFinger 9.0 fingerprint templates of a user in string form. The only difference between this function and SetUserTmp is the fingerprint template format. Caution: The user must have been created on the device. If the same index is already registered by the same user, the fingerprint template will be overwritten.

[Parameter]

dwMachineNumber

Device number

dwEnrollNumber

User ID

dwFingerIndex

Index of the fingerprint. The value ranges from 0 to 9.

TmpData

Fingerprint template

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetUserTmpStr

5.2.5.6 SSR_DelUserTmp

[Definition]

VARIANT_BOOL DelUserTmp([in] long dwMachineNumber, [in] long dwEnrollNumber, [in] long dwFingerIndex)

[Usage]

Delete the fingerprint template of a specified user.

[Parameter]

dwMachineNumber

Device number

dwEnrollNumber

User ID

dwFingerIndex

Index of the fingerprint. The value ranges from 0 to 9.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetUserTmp, SetUserTmp

5.2.5.7 SSR_SetUserTmpExt

[Definition]

VARIANT_BOOL SSR_SetUserTmpExt([in] LONG dwMachineNumber, [in] LONG IsDeleted, [in] BSTR dwEnrollNumber, [in] LONG dwFingerIndex, [in] BYTE* TmpData)

[Usage]

Upload the ZKFinger 9.0 fingerprint templates of a user. This function is an enhancement of SSR_SetUserTmp.

[Parameter]

dwMachineNumber

Device number

IsDeleted

Deletion flag, that is, whether to overwrite the original fingerprint if the fingerprint with the specified index to be uploaded already exists in the device. 1: Overwrite the original fingerprint. 0: Not overwrite the original fingerprint.

dwEnrollNumber

User ID

dwFingerIndex

Index of the fingerprint. The value ranges from 0 to 9.

TmpData

Fingerprint template

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SSR_SetUserTmp

5.2.5.8 SSR_DelUserTmpExt

[Definition]

VARIANT_BOOL SSR_DelUserTmpExt([in] LONG dwMachineNumber, [in] BSTR dwEnrollNumber, [in] LONG dwFingerIndex)

[Usage]

Delete the fingerprints of a specified user. The difference between this function and DelUserTmp is that DelUserTmp supports 24-bit user ID.

[Parameter]

dwMachineNumber

Device number

dwEnrollNumber

User ID

dwFingerIndex

Index of the fingerprint. The value ranges from 0 to 9. When the value is 13, all fingerprints of the user are deleted.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SSR_DelUserTmp

5.2.5.9 SetUserTmpEx

[Definition]

VARIANT_BOOL SetUserTmpEx([in] LONG dwMachineNumber, [in] BSTR dwEnrollNumber, [in] LONG dwFingerIndex, [in] LONG Flag, [in] BYTE* TmpData)

[Usage]

Upload ordinary fingerprint templates or duress fingerprint templates of a user in binary mode(ZKFinger 10.0). The only difference between this function and SetUserTmpExStr is the

fingerprint template format. Caution: The user must have been created on the device, or the user information must be uploaded together with the fingerprint templates. If the template with the same index is already registered by the same user, the fingerprint template will be overwritten. Note: TFT devices supporting duress fingerprints (with firmware version 6.60 or later) can support this function.

[Parameter]

dwMachineNumber

Device number

dwEnrollNumber

User ID

dwFingerIndex

Fingerprint index

Flag

Flag used to indicate whether the fingerprint template is valid or is a duress fingerprint template. 0: Invalid; 1: Valid; 3: duress fingerprint template.

TmpData

Fingerprint template data

TmpLength

Fingerprint template length

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetUserTmpEx, SSR_SetUserInfo, BeginBatchUpdate, BatchUpdate

5.2.5.10 SetUserTmpExStr

[Definition]

VARIANT_BOOL SetUserTmpExStr([in] LONG dwMachineNumber, [in] BSTR dwEnrollNumber, [in] LONG dwFingerIndex, [in] LONG Flag, [in] BSTR TmpData)

[Usage]

Upload ordinary fingerprint templates or duress fingerprint templates of a user in string mode(ZKFinger 10.0). The only difference between this function and SetUserTmpEx is the fingerprint template format. Caution: The user must have been created on the device, or the user information must be uploaded together with the fingerprint templates. If the template with the same index is already registered by the same user, the fingerprint template will be

overwritten. Note: TFT devices supporting duress fingerprints (with firmware version 6.60 or later) can support this function.

[Parameter]

dwMachineNumber

Device number

dwEnrollNumber

User ID

dwFingerIndex

Fingerprint index

Flag

Flag used to indicate whether the fingerprint template is valid or is a duress fingerprint template. 0: Invalid; 1: Valid; 3: duress fingerprint template.

TmpData

Fingerprint template data

TmpLength

Fingerprint template length

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetUserTmpExStr, SSR_SetUserInfo, BeginBatchUpdate, BatchUpdate

5.2.5.11 GetUserTmpEx

[Definition]

VARIANT_BOOL GetUserTmpEx([in] LONG dwMachineNumber, [in] BSTR dwEnrollNumber, [in] LONG dwFingerIndex, [out] LONG * Flag, [out] BYTE* TmpData, [out] LONG* TmpLength)

[Usage]

Download ordinary fingerprint templates or duress fingerprint templates of a user in binary mode(ZKFinger 10.0). The only difference between this function and GetUserTmpExStr is the fingerprint template format. Note: TFT devices supporting duress fingerprints (with firmware version 6.60 or later) can support this function.

[Parameter]

dwMachineNumber

Device number

dwEnrollNumber

User ID

dwFingerIndex

Fingerprint index

Flag

Flag used to indicate whether the fingerprint template is valid or is a duress fingerprint template. 0: Invalid; 1: Valid; 3: duress fingerprint template.

TmpData

Fingerprint template data

TmpLength

Fingerprint template length

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetUserTmpEx, SSR_GetUserInfo

5.2.5.12 GetUserTmpExStr

[Definition]

VARIANT_BOOL GetUserTmpExStr([in] LONG dwMachineNumber, [in] BSTR dwEnrollNumber, [in] LONG dwFingerIndex,[out] LONG * Flag, [out] BSTR* TmpData, [out] LONG* TmpLength)

[Usage]

Download ordinary fingerprint templates or duress fingerprint templates of a user in string mode(ZKFinger 10.0). The only difference between this function and GetUserTmpEx is the fingerprint template format. Note: TFT devices supporting duress fingerprints (with firmware version 6.60 or later) can support this function.

[Parameter]

dwMachineNumber

Device number

dwEnrollNumber

User ID

dwFingerIndex

Fingerprint index

Flag

Flag used to indicate whether the fingerprint template is valid or is a duress fingerprint template. 0: Invalid; 1: Valid; 3: duress fingerprint template.

TmpData

Fingerprint template data

TmpLength

Fingerprint template length

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetUserTmpExStr, SSR_GetUserInfo

5.2.6 Others

5.2.6.1 SMS Functions

5.2.6.1.1 SetSMS

[Definition]

VARIANT_BOOL SetSMS([in] LONG dwMachineNumber, [in] LONG ID, [in] LONG Tag, [in] LONG ValidMinutes, [in] BSTR StartTime, [in] BSTR Content)

[Usage]

Add a short message to the device. To set a short message of a user, use SetUserSMS to allocate the short message to the user.

[Parameter]

dwMachineNumber

Device number

ID

Short message number

Tag

Short message type. 253: public short message, 254: personal short message, 255: reserved short message

ValidMinutes

Valid duration of a short message. The value ranges from 0 to 65535. That is, the short message becomes valid at StartTime and keeps valid for ValidMinutes.

StartTime

Start time when a short message becomes valid, in a string format of yyyy-mm-dd
hh:mm:ss

Content

Content of a short message

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetSMS, DeleteSMS, ClearSMS, SetUserSMS

5.2.6.1.2 SSR_SetUserSMS

[Definition]

VARIANT_BOOL SetUserSMS([in] LONG dwMachineNumber, [in] LONG dwEnrollNumber,
[in] LONG SMSID)

[Usage]

Set a short message of a user, that is, allocate the short message with the specified number in the device to a specific user.

[Parameter]

dwMachineNumber

Device number

dwEnrollNumber

User ID

SMSID

Short message number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetSMS, GetSMS, DeleteSMS, ClearSMS

[Supporting Device]

Only TFT devices support this function. For black & white devices, see `ssr_SetUserSMS`.

5.2.6.1.3 GetSMS

[Definition]

VARIANT_BOOL GetSMS([in] LONG dwMachineNumber, [in] LONG ID, [out] LONG* Tag,
[out] LONG* ValidMinutes, [out] BSTR* StartTime, [out] BSTR *Content)

[Usage]

Obtain details of a short message (including content, start time, short message type, and valid duration) by short message number.

[Parameter]

dwMachineNumber

Device number

ID

Short message number

Tag

Short message type. 253: public short message, 254: personal short message, 255: reserved short message

ValidMinutes

Valid duration of a short message. The value ranges from 0 to 65535. That is, the short message becomes valid at StartTime and keeps valid for ValidMinutes.

StartTime

Start time when a short message becomes valid

Content

Content of a short message

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetSMS, SetUserSMS, GetSMS, DeleteSMS, ClearSMS

5.2.6.1.4 DeleteSMS

[Definition]

VARIANT_BOOL DeleteSMS([in] LONG dwMachineNumber, [in] LONG ID)

[Usage]

Delete a short message with the specified number from the device.

[Parameter]

dwMachineNumber

Device number

ID

Short message number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetSMS, ClearSMS

5.2.6.1.5 SSR_DeleteUserSMS

[Definition]

VARIANT_BOOL DeleteUserSMS([in]LONG dwMachineNumber, [in]LONG dwEnrollNumber, [in] LONG SMSID)

[Usage]

Delete the specified short message of a specified user. In this case, only the mapping between the user and short message, instead of the short message, is deleted.

[Parameter]

dwMachineNumber
Device number
dwEnrollNumber
User ID
SMSID
Short message number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetUserSMS

5.2.6.1.6 ClearUserSMS

[Definition]

VARIANT_BOOL ClearUserSMS([in] LONG dwMachineNumber)

[Usage]

Clear only all mappings between a user and short messages, instead of short messages.

[Parameter]

dwMachineNumber
Device number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

ClearSMS, SetSMS

5.2.6.1.7 ClearSMS

[Definition]

VARIANT_BOOL ClearSMS([in] LONG dwMachineNumber)

[Usage]

Clear all the short messages from the device.

[Parameter]

dwMachineNumber
Device number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetSMS

5.2.6.2 Work Code Functions

5.2.6.2.1 SSR_GetWorkCode

[Definition]

VARIANT_BOOL GetWorkCode([in] LONG WorkCodeID, [out] BSTR* AWorkCode)

[Usage]

Obtain the ID of the specified work code. For details, see SetWorkCode.

[Parameter]

WorkCodeID

ID of the work code

AWorkCode

ID of the work code described by WorkCodeID

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetWorkCode

5.2.6.2.2 SSR_SetWorkCode

[Definition]

VARIANT_BOOL SetWorkCode([in] LONG WorkCodeID, [in] LONG AWorkCode)

[Usage]

Define the work code with the specified number. Note: Black & white devices support work codes in all ranges. However, after this function is used to define work codes, only the work codes within the defined range can be input. For example:

SetWorkCode (1, 345)

SetWorkCode (2, 567)

In the preceding example, only the work codes 345 and 567 can be input.

[Parameter]

WorkCodeID

ID of a work code

AWorkCode

ID of the work code described by WorkCodeID

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetWorkCode

5.2.6.2.3 SSR_DeleteWorkCode

[Definition]

VARIANT_BOOL DeleteWorkCode([in] LONG WorkCodeID)

[Usage]

Delete the work code with specified ID. For details, see SetWorkCode.

[Parameter]

WorkCodeID

ID of the work code

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetWorkCode, GetWorkCode, ClearWorkCode

5.2.6.2.4 SSR_ClearWorkCode

[Definition]

VARIANT_BOOL SSR_ClearWorkCode(void)

[Usage]

Delete all customized work codes.

[Parameter]

None

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SSR_GetWorkCode, SSR_SetWorkCode, SSR_DeleteWorkCode

5.2.6.3 Holiday Functions

5.2.6.3.1 SSR_GetHoliday

[Definition]

VARIANT_BOOL SSR_GetHoliday([in] LONG dwMachineNumber, [in] LONG HolidayID, [out] LONG* BeginMonth, [out] LONG* BeginDay, [out] LONG* EndMonth, [out] LONG* EndDay, [out] LONG* TimeZoneID)

[Usage]

Obtain holiday settings on the device by holiday ID.

[Parameter]

dwMachineNumber

Device number

HolidayID

Holiday ID

BeginMonth, BeginDay
Start time of holidays
EndMonth, EndDay
End time of holidays
TimeZoneID
Time slot ID of holidays

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SSR_SetHoliday

5.2.6.3.2 SSR_SetHoliday

[Definition]

VARIANT_BOOL SSR_SetHoliday([in] LONG dwMachineNumber, [in] LONG HolidayID, [in] LONG BeginMonth, [in] LONG BeginDay, [in] LONG EndMonth, [in] LONG EndDay, [in] LONG TimeZoneID)

[Usage]

Set holidays.

[Parameter]

dwMachineNumber
Device number
HolidayID
Holiday ID
BeginMonth, BeginDay
Start time of holidays
EndMonth, EndDay
End time of holidays
TimeZoneID
ID of the time slot of holidays

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SSR_GetHoliday

5.2.6.4 DST Functions

5.2.6.4.1 SetDaylight

[Definition]

VARIANT_BOOL SetDaylight([in] LONG dwMachineNumber, [in] LONG Support, [in] BSTR BeginTime, [in] BSTR EndTime)

[Usage]

Set whether to use daylight saving time (DST), start time and end time of DST.

[Parameter]

dwMachineNumber

Device number

Support

Whether to use DST. 1: use, 0: not use

BeginTime

Start time of DST, in format of mmdd hh:mm

EndTime

End time of DST, in format of mmdd hh:mm

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetDaylight

5.2.6.4.2 GetDaylight

[Definition]

VARIANT_BOOL GetDaylight ([in] LONG dwMachineNumber, [out] LONG* Support, [out] BSTR* BeginTime, [out] BSTR* EndTime)

[Usage]

Obtain DST settings of the current device.

[Parameter]

dwMachineNumber

Device number

Support

Whether to use DST. 1: use, 0: not use

BeginTime

Start time of DST, in format of mmdd hh:mm

EndTime

End time of DST, in format of mmdd hh:mm

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetDaylight

5.2.6.5 Shortcut Keys

5.2.6.5.1 SSR_SetShortcutkey

[Definition]

VARIANT_BOOL SSR_SetShortcutkey([in] LONG ShortKeyID, [in] LONG ShortKeyFun, [in] LONG StateCode, [in] BSTR StateName, [in] LONG StateAutoChange, [in] BSTR StateAutoChangeTime)

[Usage]

Set a specific function key, equal to the function of defining function keys of the TFT device.

[Parameter]

ShortKeyID

ID of a shortcut key. The mappings are as follows: F1 — 1, F2 — 2, F3 — 3...

ShortKeyFun

Function of a shortcut key.

0: not defined, 1: state key, 2: work code, 3: view short messages

The value of this parameter affects the settings of the four parameters below. See descriptions of the four parameters below.

StateCode

State of a state key.

If the set key is not a state key, the value of this parameter is ignored. That is, if the value of ShortKeyFun is not 1, the value of this parameter is ignored.

If the set key is a state key (that is, the value of ShortKeyFun is 1), this parameter specifies the state of the set state key. The valid value ranges from 0 to 255. The states of state keys must be unique. If the states of state keys are repeated, the function cannot be called. For example, the F2 key is a state key and its state value is 2. If you use this function to set F3 as a state key and specify 2 as the state value of F3, you cannot call this function.

StateName

Name of a state key.

If the set key is not a state key, the value of this parameter is ignored. That is, if the value of ShortKeyFun is not 1, the value of this parameter is ignored.

If the set key is a state key (that is, the value of ShortKeyFun is 1), this parameter specifies the name of the set state key. The value consists of up to 18 characters.

StateAutoChange

If the set key is not a state key, the value of this parameter is ignored. That is, if the value of ShortKeyFun is not 1, the value of this parameter is ignored.

If the set key is a state key (that is, the value of ShortKeyFun is 1), this parameter specifies whether the automatic change function of the set state key is enabled. 0: disabled, 1: enabled.

StateAutoChangeTime

If the set key is not a state key, the value of this parameter is ignored. That is, if the value of ShortKeyFun is not 1, the value of this parameter is ignored.

If the set key is a state key, this parameter specifies the automatic change time of the set state key. The requirements are as follows:

1. "08:30;09:00;08:00;12:00;11:12;00:00;00:00;"
2. Hour and minute are separated by ":" without any space. Days are separated by ";" without any space.
3. The automatic change time of each day (with one week as a cycle) must be specified, that is, the device changes from attendance state to the state described by StateName (the value is defined by StateCode) when the specified time is reached. If no automatic change occurs in a specific day, set hour and minute to 0.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SSR_GetShortkey

5.2.6.5.2 SSR_GetShortkey

[Definition]

VARIANT_BOOL SSR_GetShortkey([in] LONG ShortKeyID, [in] LONG *ShortKeyFun, [in] LONG *StateCode, [in] BSTR *StateName, [in] LONG *AutoChange, [in] BSTR *AutoChangeTime)

[Usage]

Obtain the setting of a specific function key.

[Parameter]

ShortKeyID

ID of the specified key to be obtained. The mappings are as follows: F1 ? 1, F2 ? 2, F3 ? 3

ShortKeyFun

Function of the specified key.

0: not defined, 1: state key, 2: work code, 3: view short messages

StateCode

If the specified key is a state key (that is, the value of ShortKeyFun is 1), return the state of this state key, Otherwise, return 0.

StateName

If the specified key is a state key (that is, the value of ShortKeyFun is 1), return the name of this state key. Otherwise, return a null string.

AutoChange

If the specified key is a state key (that is, the value of **ShortKeyFun** is **1**), return whether this state key is automatically changed. Otherwise, return 0.

AutoChangeTime

If the specified key is a state key (that is, the value of **ShortKeyFun** is **1**), return automatic change time (in string form) of this state key. Otherwise, return a null string.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SSR_SetShortkey

5.2.6.6 Fingerprint Template Conversion Functions

5.2.6.6.1 GetFPTempLength

[Definition]

GetFPTempLength([in] BYTE* dwEnrollData, [out] long * Len)

[Usage]

Calculate the length of a specified fingerprint template.

[Parameter]

dwEnrollData

Pointer pointing at the fingerprint template

Len

Length of the fingerprint template described by dwEnrollData

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetFPTempLengthStr

5.2.6.6.2 GetFPTempLengthStr

[Definition]

GetFPTempLengthStr([in] BSTR dwEnrollData, [out] long * Len)

[Usage]

Calculate the length of a specified fingerprint template.

[Parameter]

dwEnrollData

Fingerprint template in string form

Len

Length of the fingerprint template described by dwEnrollData

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetFPTempLength

5.2.6.6.3 FPTempConvert**[Definition]**

VARIANT_BOOL FPTempConvert([in] BYTE* TmpData1, [out] BYTE* TmpData2, [out] long *Size)

[Usage]

Convert an offline fingerprint template into a Biokey fingerprint template. The only difference between this function and FPTempConvertStr is the data format.

[Parameter]

TmpData1

Offline fingerprint template to be converted

TmpData2

Converted Biokey fingerprint template

Size

Size of the converted Biokey fingerprint template

[Return Value]

Return True if it is successful, or return False.

[Related Function]

FPTempConvertStr, FPTempConvertNew, FPTempConvertNewStr

5.2.6.6.4 FPTempConvertStr**[Definition]**

VARIANT_BOOL FPTempConvertStr([in] BSTR TmpData1,[out]BSTR* TmpData2, [out] long *Size)

[Usage]

Convert an offline fingerprint template into a Biokey fingerprint template in string form. The only difference between this function and FPTempConvert is the data format.

[Parameter]

TmpData1

Offline fingerprint template to be converted

TmpData2

Converted Biokey fingerprint template

Size

Size of the converted Biokey fingerprint template

[Return Value]

Return True if it is successful, or return False.

[Related Function]

FPTempConvert, FPTempConvertNew, FPTempConvertNewStr

5.2.6.6.5 FPTempConvertNew**[Definition]**

```
VARIANT_BOOL FPTempConvertNew([in] BYTE* TmpData1, [out] BYTE* TmpData2, [out]  
long *Size)
```

[Usage]

Convert a Biokey fingerprint template into an offline fingerprint template. The only difference between this function and FPTempConvertNewStr is the data format.

[Parameter]

TmpData1

Offline fingerprint template to be converted into

TmpData2

Converted offline fingerprint template

Size

Size of the converted offline fingerprint template

[Return Value]

Return True if it is successful, or return False.

[Related Function]

FPTempConvertNewStr, FPTempConvert, FPTempConvertStr

5.2.6.6.6 FPTempConvertNewStr**[Definition]**

```
VARIANT_BOOL FPTempConvertNewStr([in] BSTR TmpData1, [out] BSTR* TmpData2,  
[out] long *Size)
```

[Usage]

Convert a Biokey fingerprint template into an offline fingerprint template in string form. The only difference between this function and FPTempConvertNew is the data format.

[Parameter]

TmpData1

Offline fingerprint template to be converted into

TmpData2

Converted offline fingerprint template

Size

Size of the converted offline fingerprint template

[Return Value]

Return True if it is successful, or return False.

[Related Function]

FPTempConvertNew, FPTempConvert, FPTempConvertStr

5.2.7 System Data Management Functions

5.2.7.1 ClearKeeperData

[Definition]

VARIANT_BOOL ClearKeeperData([in] long dwMachineNumber)

[Usage]

Clear all data in the device.

[Parameter]

dwMachineNumber
Device number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

ClearGLog, ClearSLog

5.2.7.2 ClearData

[Definition]

VARIANT_BOOL ClearData([in] LONG dwMachineNumber, [in] LONG DataFlag)

[Usage]

Clear the record specified by DataFlag from the device.

[Parameter]

dwMachineNumber
Device number

DataFlag

Type of the records to be cleared. The value ranges from 1 to 5. The meanings are as follows:

1. Attendance record
2. Fingerprint template data
3. None
4. Operation record
5. User information

When the value of this parameter is 5, all user data in the device is deleted. Note: All fingerprint templates are also deleted.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

ClearKeeperData

5.2.7.3 GetDataFile**[Definition]**

VARIANT_BOOL GetDataFile([in] LONG dwMachineNumber, [in] LONG DataFlag, [in] BSTR FileName)

[Usage]

Obtain the specified data file from the device.

[Parameter]

dwMachineNumber

Device number

DataFlag

Type of the data file to be obtained

1. Attendance record data file
2. Fingerprint template data file
3. None
4. Operation record data file
5. User information data file
6. SMS data file
7. SMS and user relationship data file
8. Extended user information data file
9. Work code data file

FileName

Name of the obtained data file

[Return Value]

Return True if it is successful, or return False.

[Related Function]**5.2.7.4 SendFile****[Definition]**

VARIANT_BOOL SendFile([in] LONG dwMachineNumber,[in] BSTR FileName)

[Usage]

Send files to the device, usually to the **/mnt/mtdblock/** directory. For TFT devices, if user pictures or advertisement pictures are sent, the files should be named in the following formats and automatically moved to corresponding directories.

Naming of advertisement pictures: prefix "ad" + a numeral ranging from 1 to 20 + suffix ".jpg", for example, **ad_4.jpg**

Naming of user pictures: user ID + ".jpg", for example, **1.jpg**

[Parameter]

dwMachineNumber

Device number

FileName

Name of the file to be sent

[Return Value]

Return True if it is successful, or return False.

[Related Function]

ReadFile

5.2.7.5 RefreshData

[Definition]

VARIANT_BOOL RefreshData([in] long dwMachineNumber)

[Usage]

Refresh the data in the device. This function is usually called after user information or fingerprints are uploaded. In this way, the modifications take effect immediately.

[Parameter]

dwMachineNumber

Device number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

None

5.2.8 Attendance Photo

5.2.8.1 GetPhotoNamesByTime

[Definition]

VARIANT_BOOL GetPhotoNamesByTime([in]long dwMachineNumber, [in]long iFlag, [in]BSTR sTime, [in]BSTR eTime, [out]BSTR* AllPhotoName)

[Usage]

Download attendance photo names from device.

[Parameter]

dwMachineNumber

Device number

iFlag

When iFlag is 0, download all photos from device. When iFlag is 1, download photo between sTime and eTime

sTime

Begin time, format: YYYY-MM-DD hh:mm:ss
eTime
End time, format: YYYY-MM-DD hh:mm:ss
AllPhotoName
Attendance photo names. Format: verify succeed photo(\t delimiter) + \n + verify failed photo(\t delimiter)

[Return Value]

Return True if it is successful, or return False.

[Related Function]

None

5.2.8.2 GetPhotoByName

[Definition]

VARIANT_BOOL GetPhotoByName([in]long dwMachineNumber, [in]BSTR PhotoName, [out]BYTE* PhotoData, [out]long* PhotoLength)

[Usage]

Download attendance photo.

[Parameter]

dwMachineNumber
Device number
PhotoName
Photo's name
PhotoData
The binary data of photo
PhotoLength
The size of photo data

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetPhotoNamesByTime

5.2.8.3 GetPhotoCount

[Definition]

VARIANT_BOOL GetPhotoCount([in]long dwMachineNumber, [in]long* Count, [in]long iFlag)

[Usage]

Get the number of attendance photo.

[Parameter]

dwMachineNumber
Device number
Count
Number of attendance photo.
iFlag
When iFlag is 0, get the number of all attendance photo, when iFlag is 1, get the number of verify succeed photo, when iFlag is 2, get the number of verify failed photo.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

None

5.2.8.4 ClearPhotoByTime

[Definition]

VARIANT_BOOL ClearPhotoByTime([in]long dwMachineNumber, [in]long iFlag, [in]BSTR sTime, [in]BSTR eTime)

[Usage]

Delete attendance photo.

[Parameter]

dwMachineNumber

Device number

iFlag

When iFlag is 0, delete all attendance photo, when iFlag is 1, delete the photos between sTime and eTime

sTime

Begin time

eTime

End time

[Return Value]

Return True if it is successful, or return False.

[Related Function]

None

5.3 Access Control Functions (Time Slot, Group, Open Door Combination)

5.3.1 GetUserGroup

[Definition]

VARIANT_BOOL GetUserGroup([in] long dwMachineNumber, [in] long dwEnrollNumber, [out] long *UserGrp)

[Usage]

Obtain the number of the group to which a specified user belongs.

[Parameter]

dwMachineNumber

Device number

dwEnrollNumber

User ID

UserGrp

Group number of the user described by dwEnrollNumber. The value ranges from 1 to 5.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetUserGroup

5.3.2 SetUserGroup

[Definition]

VARIANT_BOOL SetUserGroup([in] long dwMachineNumber, [in] long dwEnrollNumber, [in] long UserGrp)

[Usage]

Set the group to which a specified user belongs.

[Parameter]

dwMachineNumber

Device number

dwEnrollNumber

User ID

UserGrp

Group number. The value ranges from 1 to 5.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetUserGroup

5.3.3 GetTZInfo

[Definition]

VARIANT_BOOL GetTZInfo([in] long dwMachineNumber, [in] long TZIndex, [out] BSTR *TZ)

[Usage]

Obtain the information of the time slot with the specified number.

[Parameter]

dwMachineNumber

Device number

TZIndex

Time slot index

TZ

Time slot with the index described by TZIndex. Every eight bits represent a time slot, in format of hhmmhhmm. For example, 101112230000235900002359000023590000235900002359 indicates a time slot covering the whole day from Monday to Saturday and from 10:11 to 12:23 of Sunday.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetTZInfo

5.3.4 SetTZInfo

[Definition]

VARIANT_BOOL SetTZInfo([in] long dwMachineNumber, [in] long TZIndex, [in] BSTR TZ)

[Usage]

Set the information of the time slot with the specified number.

[Parameter]

dwMachineNumber

Device number

TZIndex

Time slot index

TZ

Time slot to be set. Every eight bits represent a time slot, in format of hhmmhhmm. For example, 101112230000235900002359000023590000235900002359 indicates a time slot covering the whole day from Monday to Saturday and from 10:11 to 12:23 of Sunday.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetTZInfo

5.3.5 SSR_SetUnLockGroup

[Definition]

VARIANT_BOOL SSR_SetUnLockGroup([in] LONG dwMachineNumber, [in] LONG CombNo, [in] LONG Group1, [in] LONG Group2, [in] LONG Group3, [in] LONG Group4, [in] LONG Group5)

[Usage]

Set the open door combination.

[Parameter]

dwMachineNumber

Device number

CombNo

Combination number. The value ranges from 1 to 10, that is, the device supports a maximum of 10 open door combinations.

Group1, Group2, Group3, Group4, Group5

Number of the group in the open door combination. Each open door combination contains five group numbers. Each group number ranges from 1 to 99. For example, SSR_SetUnLockGroup (1, 1, 2, 23, 14, 0, 56) means that the open is opened only when members of groups 2, 23, 14, and 56 pass verification.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SSR_GetUnLockGroup

5.3.6 SSR_GetUnLockGroup

[Definition]

VARIANT_BOOL SSR_GetUnLockGroup([in] LONG dwMachineNumber, [in] LONG CombNo, [out] LONG* Group1, [out] LONG* Group2, [out] LONG* Group3, [out] LONG* Group4, [out] LONG* Group5)

[Usage]

Obtain the open door combination by open door combination number.

[Parameter]

dwMachineNumber

Device number

CombNo

Combination number. The value ranges from 1 to 10.

Group1, Group2, Group3, Group4, Group5

Specific combinations of specified open door groups, that is, which groups are contained in a combination. The group number is returned. Each combination contains a maximum of five groups. Each group number ranges from 1 to 99.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SSR_SetUnLockGroup

5.3.7 SSR_SetGroupTZ

[Definition]

VARIANT_BOOL SSR_SetGroupTZ([in] LONG dwMachineNumber, [in] LONG GroupNo, [in] LONG Tz1, [in] LONG Tz2, [in] LONG Tz3, [in] LONG VaildHoliday, [in] LONG VerifyStyle)

[Usage]

Set the time slot of a group.

[Parameter]

dwMachineNumber

Device number

GroupNo

Group number. The value ranges from 1 to -99.

Tz1, Tz2, Tz3

Time slot index. Each group can contain three time slots.

VaildHoliday

Whether holiday settings are valid

VerifyStyle

Verification mode of a group. Meanings: 0(FP/PW/RF), 1(FP), 2(PIN), 3(PW), 4(RF), 5(FP&RF),

6(FP/PW), 7(FP/RF), 8(PW/RF), 9(PIN&FP), 10(FP&PW), 11(PW&RF),

12(FP&PW&RF), 13(PIN&FP&PW), 14(FP&RF/PIN)

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SSR_GetGroupTZ

5.3.8 SSR_GetGroupTZ

[Definition]

VARIANT_BOOL SSR_GetGroupTZ([in] LONG dwMachineNumber, [in] LONG GroupNo, [out] LONG* Tz1, [out] LONG* Tz2, [out] LONG* Tz3, LONG* VaildHoliday, LONG* VerifyStyle)

[Usage]

Obtain the time slots of a group.

[Parameter]

dwMachineNumber

Number of the fingerprint device

GroupNo

Group number. The value ranges from 1 to 99.

Tz1 , Tz2, Tz3

Indexes of the three time slots of a specified combination. Each group number ranges from 1 to 50.

VaildHoliday

Whether holiday settings are valid. 1: valid, 0: invalid

VerifyStyle

Verification mode of the fingerprint device. Values: 0(FP/PW/RF), 1(FP), 2(PIN), 3(PW), 4(RF), 5(FP&RF), 6(FP/PW), 7(FP/RF), 8(PW/RF), 9(PIN&FP), 10(FP&PW), 11(PW&RF), 12(FP&PW&RF), 13(PIN&FP&PW), 14(FP&RF/PIN)

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SSR_SetGroupTZ

5.3.9 GetUserTZs

[Definition]

VARIANT_BOOL GetUserTZs([in] long dwMachineNumber, [in] long UserID, [out] long *TZs)

[Usage]

Obtain the time slot setting of a user. Each user has three time slots. The only difference between this function and GetUserTZStr is the format of returned time slot index.

[Parameter]

dwMachineNumber

Device number

UserID

User ID

TZs

Open door time slot of a user. The TZs pointers have three values that store indexes of three time slots respectively. The indexes of three time slots can be obtained by using TZs[0], TZs[1], and TZs[2] respectively.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetUserTZs, SetUserTZStr

5.3.10 SetUserTZs

[Definition]

VARIANT_BOOL SetUserTZs([in] long dwMachineNumber, [in] long UserID, [in] long *TZs)

[Usage]

Set the time slot of a user. A maximum of three time slots can be set for each user. The difference between this function and SetUserTZStr is the format of imported time slot index.

[Parameter]

dwMachineNumber

Device number

UserID

User ID

TZs

Time slot index. When TZs[3] is 0, the group setting is used. When TZs[3] is not 0, a time slot number set by the user can be specified. This parameter is a long pointer. Indexes of three time slots can be imported respectively by TZs[0], TZs[1], and TZs[2].

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetUserTZs, GetUserTZStr

5.3.11 GetUserTZStr

[Definition]

VARIANT_BOOL GetUserTZStr([in] long dwMachineNumber, [in] long UserID, [out] BSTR *TZs)

[Usage]

Obtain the time slots of a user. The only difference between this function and GetUserTZs is the format of returned time slot index.

[Parameter]

dwMachineNumber

Device number

UserID

User ID

TZs

Unlock time slot of a user. The formats are as follows:

Black & white access control devices: X1:X2:X3. X1, X2, and X3 represent the indexes of the customized time slots used by the user. To determine whether the user uses the group time slot, check the return value of the UseGroupTimeZone function. For example, if user A uses customized time slots 1, 2, and 3, the fingerprint device returns "1:2:3".

TFT access control devices: X1:X2:X3:X4. X4 represents whether to use the group time slot. If the value is 0, the group time slot is used; if the value is **1**, the group time slot is not used, that is, the personal time slot is used. X1, X2, and X3 represent the indexes of the used time slots. For example, if user A uses customized time slots 1 and 2, the fingerprint device returns "1:2:0:1".

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetUserTZStr, GetUserTZs

5.3.12 SetUserTZStr

[Definition]

VARIANT_BOOL SetUserTZStr([in] long dwMachineNumber, [in] long UserID, [in] BSTR TZs)

[Usage]

Set the time slots of a user. Time slots are separated by ":". The only difference between this function and SetUserTZs is the format of imported time slot index.

[Parameter]

dwMachineNumber

Device number

UserID

User ID

TZs

See GetUserTZStr.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetUserTZStr, SetUserTZs

5.3.13 ACUnlock

[Definition]

VARIANT_BOOL ACUnlock([in] long dwMachineNumber, [in] long Delay)

[Usage]

Open the door, enable the open door controller to output a unlock signal, and close the door after 10-second delay.

[Parameter]

dwMachineNumber

Device number

Delay

Open door delay

[Return Value]

Return True if it is successful, or return False.

[Related Function]

None

5.3.14 GetACFun

[Definition]

VARIANT_BOOL GetACFun([out] long* ACFun)

[Usage]

Obtain whether the device has the access control function.

[Parameter]

ACFun

Flag of the access control function of the device. 0: no access control, 1: simple access control, 2: middle-level access control, 6: high-level access control, 14: high-level access control + always open, 15: access control available

[Return Value]

Return True if it is successful, or return False.

[Related Function]

None

5.3.15 GetDoorState

[Definition]

VARIANT_BOOL GetDoorState([in] LONG MachineNumber, [out] LONG* State)

[Usage]

Obtain the current door state. 1: opened, 0: closed. It is Deprecated, please refer to OnDoor Event.

[Parameter]

MachineNumber

Device number

State

Door state

[Return Value]

Return True if it is successful, or return False.

[Related Function]

None

5.3.16 UseGroupTimeZone

[Definition]

VARIANT_BOOL UseGroupTimeZone(void)

[Usage]

Determine whether a user uses the group time slot setting. This function must be used together with GetUserTZs or GetUserTZStr to ensure the correct return values. That is, use GetUserTZs or GetUserTZStr to obtain the time slot settings of the specified user, and then use UseGroupTimeZone to determine whether the user uses the group time slot setting.

[Parameter]

None

[Return Value]

Return True if the group time slot is used, or return False.

[Related Function]

GetUserTZs, GetUserTZStr

5.4 Device Management Functions

5.4.1 IsTFTMachine

[Definition]

VARIANT_BOOL IsTFTMachine([in] LONG dwMachineNumber)

[Usage]

Determine whether the current device is a TFT device.

[Parameter]

dwMachineNumber

Device number

[Return Value]

Return True if the current device is a TFT device. Return False if the current device is a black & white device.

[Related Function]

None

5.4.2 GetDeviceStatus

[Definition]

VARIANT_BOOL GetDeviceStatus([in] long dwMachineNumber, [in] long dwStatus, [out] long* dwValue)

[Usage]

Obtain the data storage status of the device, for example, number of administrators and number of current users.

[Parameter]

dwMachineNumber

Device number

dwStatus

Data to be obtained. The value ranges from 1 to 22. Values:

- 1 Number of administrators
- 2 Number of registered users
- 3 Number of fingerprint templates in the device
- 4 Number of passwords
- 5 Number of operation records
- 6 Number of attendance records
- 7 Fingerprint template capacity
- 8 User capacity
- 9 Attendance record capacity
- 10 Residual fingerprint template capacity
- 11 Residual user capacity
- 12 Residual attendance record capacity
- 21 Number of faces
- 22 Face capacity

Returned 0 in other cases.

dwValue

Value of dwStatus

[Return Value]

Return True if it is successful, or return False.

[Related Function]

None

5.4.3 GetDeviceInfo

[Definition]

VARIANT_BOOL GetDeviceInfo([in] long dwMachineNumber, [in] long dwInfo, [out] long* dwValue)

[Usage]

Obtain related information of the device, such as language and baud rate.

[Parameter]

dwMachineNumber

Device number

dwInfo

Type of the information to be obtained. The value ranges from 1 to 68 (except for 65).
Values:

- 1 Maximum number of administrators. Generally, return 500.
- 2 Device number
- 3 Language
The return values received by dwValue are as follows:
 - 0 Language with suffix "E", usually representing English
 - 1 Others
 - 2 Language with suffix "T", usually representing traditional Chinese
 - 3 Language with suffix "L", usually representing Thai language
- 4 Idle duration (minutes). That is, the device enters standby state or is powered off after keeping idle for a period specified by this value.
- 5 Lock duration, namely, driver lock duration
- 6 Number of attendance record alarms. That is, the device reports an alarm when the number of attendance records reaches this value.
- 7 Number of operation record alarms. That is, the device reports an alarm when the number of operation records reaches this value.
- 8 Repeated record time, that is, the minimum interval of opening the same attendance record by the same user
- 9 Baud rate in RS232/RS485 communication

The return values received by dwValue are as follows:

- 0 1200bps
- 1 2400
- 2 4800
- 3 9600
- 4 19200
- 5 38400
- 6 57600

Others: 115200

- 10 Parity check. Generally, return 0.
- 11 Stop bit. Generally, return 0.
- 12 Date separator. Generally, return 1.
- 13 Whether network function is enabled. Values: 1: enabled, 0: disabled
- 14 Whether RS232 is enabled
- 15 Whether RS485 is enabled
- 16 Whether voice function is supported
- 17 Whether high-speed comparison is performed
- 18 Idle mode, that is, the state that the device enters after idle period. Values: 87: power-off, 88: hibernate
- 19 Automatic power-off time point. The default value is 255, that is, the device does not power off automatically.
- 20 Automatic power-on time point. The default value is 255, that is, the device does not power on automatically.
- 21 Automatic hibernation time point. The default value is 255, that is, the device does not hibernate automatically.
- 22 Automatic ring time point. The default value is 65535, that is, the device does not ring automatically.
- 23 1:N match threshold
- 24 Match threshold during registration
- 25 1:1 match threshold
- 26 Whether to display match score during verification
- 27 Number of concurrent unlock users
- 82 Verify only card number
- 29 Network speed

The return values received by dwValue are as follows:

- 1 100M-H
- 4 10M-F
- 5 100M-F

8 AUTO

Others: 10M-H

- 30 Whether the card must be registered
- 31 Waiting time before the device automatically returns when there is temporarily no operation
- 32 Waiting time before the device automatically returns when no response is returned after the PIN is input
- 33 Waiting time before the device automatically returns when there is response after entering the menu
- 34 Time format
- 35 Whether 1:1 match must be used
- 36—40 Automatic ring time points 2, 3, 4, 5, and 6. The default values are **65535**, that is, the device does not ring automatically.
- 41—56 Automatic state change time points 1 to 16. The default values are **-1**, that is, the device does not change state automatically.
- 57 Wiegand failure ID
- 58 Wiegand threaten ID
- 59 Wiegand region-position code
- 60 Wiegand output pulse width
- 61 Wiegand output pulse interval
- 62 Start sector of Mifare card for storing fingerprints
- 63 Total sectors of Mifare card for storing fingerprints
- 64 Number of fingerprints stored on Mifare card
- 66 Whether to display attendance state
- 67 Not available temporarily
- 68 Not supported

8999 In this case, dwValue is used as both input and output parameters. As the input parameter, dwValue represent the name of another option to be obtained. As the output parameter, dwValue represents the value of the option (in this case, dwValue is similar to GetSysOption).

Note: The return values of the preceding time points are numerals. To convert the numeral into the time point, convert the value into a binary numeral where the lowest eight bits represent minute and the highest bits represent hour. For example, if the return value is 2860, it can be converted into 101100101100 in binary, of which the lowest eight bits 00101100 (that is, 44) and the highest eight bits are 00001011 (that is, 11), that is, the actual time point is 11:44.

dwValue

Value described by dwInfo

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetDeviceInfo

5.4.4 SetDeviceInfo

[Definition]

VARIANT_BOOL SetDeviceInfo([in] long dwMachineNumber, [in] long dwInfo, [in] long dwValue)

[Usage]

Set the related information of the device, such as language and repeated record time.

[Parameter]

dwMachineNumber

Device number

dwInfo

Type of the information to be set. The value ranges from 1 to 20. For the meanings of values, see GetDeviceInfo.

dwValue

Value of the information described by dwInfo

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetDeviceInfo

5.4.5 SetDeviceTime

[Definition]

VARIANT_BOOL SetDeviceTime([in] long dwMachineNumber)

[Usage]

Set the local computer time to the device time. To set the specified time, see SetDeviceTime2.

[Parameter]

dwMachineNumber

Device number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetDeviceTime2, GetDeviceTime

5.4.6 SetDeviceTime2

[Definition]

VARIANT_BOOL SetDeviceTime2([in] LONG dwMachineNumber, [in] LONG dwYear, [in] LONG dwMonth, [in] LONG dwDay, [in] LONG dwHour, [in] LONG dwMinute, [in] LONG dwSecond)

[Usage]

Set the device time (or specify the time).

[Parameter]

dwMachineNumber

Device number

dwYear, dwMonth, dwDay, dwHour, dwMinute, dwSecond

Date and time to be set

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetDeviceTime, GetDeviceTime

5.4.7 GetDeviceTime

[Definition]

VARIANT_BOOL GetDeviceTime([in] long dwMachineNumber, [out] long* dwYear, [out] long* dwMonth, [out] long* dwDay, [out] long* dwHour, [out] long* dwMinute, [out] long* dwSecond)

[Usage]

Obtain the device time.

[Parameter]

dwMachineNumber

Device number

dwYear, dwMonth, dwDay, dwHour, dwMinute, dwSecond

Long pointers pointing to variables. The values are the date and time of the device.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetDeviceTime, SetDeviceTime2

5.4.8 GetSerialNumber

[Definition]

VARIANT_BOOL GetSerialNumber([in] long dwMachineNumber, [out] BSTR*
dwSerialNumber)

[Usage]

Obtain the serial number of the device.

[Parameter]

dwMachineNumber
Device number
dwSerialNumber
Serial number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

None

5.4.9 GetProductCode

[Definition]

VARIANT_BOOL GetProductCode([in] long dwMachineNumber, [out] BSTR*
lpszProductCode)

[Usage]

Obtain device name.

[Parameter]

dwMachineNumber
Device number
lpszProductCode
Device name

[Return Value]

Return True if it is successful, or return False.

[Related Function]

None

5.4.10 GetFirmwareVersion

[Definition]

VARIANT_BOOL GetFirmwareVersion([in] long dwMachineNumber, [out] BSTR* strVersion)

[Usage]

Obtain the firmware version of the device.

[Parameter]

dwMachineNumber

Device number

strVersion

Firmware version

[Return Value]

Return True if it is successful, or return False.

[Related Function]

None

5.4.11 GetSDKVersion

[Definition]

VARIANT_BOOL GetSDKVersion([out] BSTR* strVersion)

[Usage]

Obtain the SDK version.

[Parameter]

strVersion

SDK version

[Return Value]

Return True if it is successful, or return False.

[Related Function]

None

5.4.12 GetDeviceIP

[Definition]

VARIANT_BOOL GetDeviceIP([in] long dwMachineNumber, [out] BSTR *IPAddr)

[Usage]

Obtain the IP address of the device.

[Parameter]

dwMachineNumber

Device number

IPAddr

IP address

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetDeviceIP

5.4.13 SetDeviceIP

[Definition]

VARIANT_BOOL SetDeviceIP([in] long dwMachineNumber, [in] BSTR IPAddr)

[Usage]

Set the IP address of the device.

[Parameter]

dwMachineNumber

Device number

IPAddr

IP address

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetDeviceIP

5.4.14 GetDeviceMAC

[Definition]

VARIANT_BOOL GetDeviceMAC([in] LONG dwMachineNumber, [out] BSTR *sMAC)

[Usage]

Obtain the MAC address of the device.

[Parameter]

dwMachineNumber

Device number

sMAC

MAC address

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetDeviceMAC

5.4.15 SetDeviceMAC

[Definition]

VARIANT_BOOL SetDeviceMAC([in] LONG dwMachineNumber, [in] BSTR sMAC)

[Usage]

Set the MAC address of the device.

[Parameter]

dwMachineNumber
Device number
sMAC
MAC address

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetDeviceMAC

5.4.16 GetWiegandFmt

[Definition]

```
VARIANT_BOOL GetWiegandFmt( [in] LONG dwMachineNumber, [out] BSTR  
*sWiegandFmt)
```

[Usage]

Obtain Wiegand format of the device.

[Parameter]

dwMachineNumber
Device number
sWiegandFmt
Wiegand format

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetWiegandFmt

5.4.17 SetWiegandFmt

[Definition]

```
VARIANT_BOOL SetWiegandFmt([in] LONG dwMachineNumber, [in] BSTR sWiegandFmt)
```

[Usage]

Set Wiegand format of the device.

[Parameter]

dwMachineNumber
Device number
sWiegandFmt
Wiegand format

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetWiegandFmt

5.4.18 GetCardFun**[Definition]**

VARIANT_BOOL GetCardFun([in] LONG dwMachineNumber, [in] LONG* CardFun)

[Usage]

Obtain whether the device supports the RF card.

[Parameter]

dwMachineNumber

Device number

CardFun

Values: 1: The device supports only RF card verification. 2: The device supports both RF card verification and fingerprint verification. 0: The device does not support RF card verification.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

None

5.4.19 SetDeviceCommPwd**[Definition]**

VARIANT_BOOL SetDeviceCommPwd([in] LONG dwMachineNumber, [in] LONG CommKey)

[Usage]

Set the communication password of the device. The communication password is stored in the device.

[Parameter]

dwMachineNumber

Device number

CommKey

Communication password

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetCommPassword

5.4.20 SetCommPassword

[Definition]

VARIANT_BOOL SetCommPassword([in] long CommKey)

[Usage]

Set the communication password of the PC. A connection can be set up only when the PC and the device use the same communication password.

[Parameter]

CommKey

Communication password

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetDeviceCommPwd

5.4.21 QueryState

[Definition]

VARIANT_BOOL QueryState([out] LONG *State)

[Usage]

Query the current state of the device.

[Parameter]

State

Current state of the device. Values are as follows:

- 0 Waiting
- 1 Registering a fingerprint
- 2 Identifying a fingerprint
- 3 Accessing menu
- 4 Busy (doing other tasks)
- 5 Waiting for writing data into card

[Return Value]

Return True if it is successful, or return False.

[Related Function]

None

5.4.22 GetVendor

[Definition]

VARIANT_BOOL GetVendor([in] BSTR* strVendor)

[Usage]

Obtain the vendor name of the device.

[Parameter]

strVendor

Vendor name of the device

[Return Value]

Return True if it is successful, or return False.

[Related Function]

None

5.4.23 GetDeviceStrInfo

[Definition]

VARIANT_BOOL GetDeviceStrInfo([in] LONG dwMachineNumber, [in] LONG dwInfo, [out] BSTR* Value)

[Usage]

Obtain the manufacturing time of the device.

[Parameter]

dwMachineNumber

Device number

dwInfo

This parameter can be set to 1 only.

Value

Manufacturing time of the device

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetDeviceInfo

5.4.24 GetPlatform

[Definition]

VARIANT_BOOL GetPlatform([in] LONG dwMachineNumber, [out] BSTR* Platform)

[Usage]

Obtain the platform name of the device.

[Parameter]

dwMachineNumber
Device number
Platform
Platform name

[Return Value]

Return True if it is successful, or return False.

[Related Function]

None

5.4.25 ReadAOptions

[Definition]

VARIANT_BOOL ReadAOptions([in] BSTR AOption, [out] BSTR* AValue)

[Usage]

Read the values of specified configuration parameters from the device. The parameters beginning with "~" are skipped.

[Parameter]

Aoption
Parameter name
Avalue
Value of the parameter described by Aoption

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetSysOption

5.4.26 GetSysOption

[Definition]

VARIANT_BOOL GetSysOption([in] LONG dwMachineNumber, [in] BSTR Option, [out] BSTR* Value)

[Usage]

Obtain the parameters from the device. Note: This function can be used to obtain the algorithm version used by the device.

[Parameter]

dwMachineNumber
Device number
Option

Parameter name. When the parameter is the character string "~ZKFPVersion", if the returned Value is 10, the current device uses ZKFinger10.0; if the returned Value is null or 9, the current device uses ZKFinger9.0.

Value

Value of the parameter described by Option

[Return Value]

Return True if it is successful, or return False.

[Related Function]

SetSysOption

5.4.27 SetSysOption

[Definition]

VARIANT_BOOL SetSysOption([in] LONG dwMachineNumber, [in] BSTR Option, [in] BSTR Value)

[Usage]

Configure the parameters in the device.

[Parameter]

dwMachineNumber

Device number

Option

Name of the parameter to be set

Value

Value of the parameter described by Option

[Return Value]

Return True if it is successful, or return False.

[Related Function]

GetSysOption

5.5 others

5.5.1 Device Control Functions

5.5.1.1 ClearAdministrators

[Definition]

VARIANT_BOOL ClearAdministrators([in] long dwMachineNumber)

[Usage]

Clear all administrator privileges from the device.

[Parameter]

dwMachineNumber

Device number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

None

5.5.1.2 EnableDevice

[Definition]

VARIANT_BOOL EnableDevice([in] long dwMachineNumber, [in] VARIANT_BOOL bFlag)

[Usage]

Enable or disable the device. If the device is disabled, the fingerprint sensor, keypad, card modules, etc. are disabled.

[Parameter]

dwMachineNumber

Device number

bFlag

User enable flag. 1: Enabled. 0: Disabled.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

None

5.5.1.3 EnableClock

[Definition]

VARIANT_BOOL EnableClock([in] LONG Enabled)

[Usage]

Enable or disable the clock display with colon ":". If enabled, the device clock is displayed with a colon and synchronized to the main interface. If disabled, the clock is displayed without a colon.

[Parameter]

Enabled

Display control. 1: Enabled. 0: Disabled.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

None

5.5.1.4 DisableDeviceWithTimeOut

[Definition]

VARIANT_BOOL DisableDeviceWithTimeOut([in] LONG dwMachineNumber, [in] LONG TimeOutSec)

[Usage]

Disable the device for a period of time.

[Parameter]

dwMachineNumber

Device number

TimeOutSec

Duration of disabling the device

[Return Value]

Return True if it is successful, or return False.

[Related Function]

EnableDevice

5.5.1.5 PowerOffDevice

[Definition]

VARIANT_BOOL PowerOffDevice([in] long dwMachineNumber)

[Usage]

Power off the device.

[Parameter]

dwMachineNumber

Device number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

None

5.5.1.6 RestartDevice

[Definition]

VARIANT_BOOL RestartDevice([in] LONG dwMachineNumber)

[Usage]

Restart the device.

[Parameter]

dwMachineNumber

Device number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

PowerOffDevice

5.5.1.7 SleepDevice**[Definition]**

VARIANT_BOOL SleepDevice([in] long dwMachineNumber)

[Usage]

Enable the device to enter hibernation mode.

[Parameter]

dwMachineNumber

Device number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

RestartDevice, PowerOffDevice, ResumeDevice, SuspendDevice

5.5.2 Online Registration Functions**5.5.2.1 StartEnrollEx****[Definition]**

VARIANT_BOOL StartEnroll([in] LONG UserID, [in] LONG FingerID, [in] LONG Flag)

[Usage]

Enroll a user, and enable the device to enter enrollment state and wait until the user place a finger. Note: After this function is used, and a user enrolls the same finger three times to complete enrollment, the device may make no response. In this case, use StartIdentify to force the device to enter waiting state.

[Parameter]

UserID

ID of the user to be enrolled

FingerID

Index of the fingerprint of the user to be enrolled. The value ranges from 0 to 9.

Flag

Whether the fingerprint template is valid or is a threatened fingerprint template. 0: Invalid; 1: Valid; 3: Threatened fingerprint template.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

CancelOperation, StartVerify, StartIdentify

5.5.2.2 StartVerify

[Definition]

VARIANT_BOOL StartVerify([in] LONG UserID, [in] LONG FingerID)

[Usage]

Start 1:1 verification.

[Parameter]

UserID

ID of the user to be verified

FingerID

Index of the fingerprint of the user to be verified. The value ranges from 0 to 9.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

StartIdentify, CancelOperation

5.5.2.3 StartIdentify

[Definition]

VARIANT_BOOL StartIdentify(void)

[Usage]

Start 1: N comparison and enable the device to enter 1:N verification state.

[Parameter]

None

[Return Value]

Return True if it is successful, or return False.

[Related Function]

CancelOperation, StartVerify

5.5.2.4 CancelOperation

[Definition]

VARIANT_BOOL CancelOperation(void)

[Usage]

Cancel the current fingerprint enrollment state of the device.

[Parameter]

None

[Return Value]

Return True if it is successful, or return False.

[Related Function]

StartEnroll, StartEnrollEx

5.5.3 Card Operation Functions

5.5.3.1 WriteCard

[Definition]

VARIANT_BOOL WriteCard([in] LONG dwMachineNumber, [in] LONG dwEnrollNumber, [in] LONG dwFingerIndex1, [in] BYTE* TmpData1, [in] LONG dwFingerIndex2, [in] BYTE* TmpData2, [in] LONG dwFingerIndex3, [in] BYTE* TmpData3, [in] LONG dwFingerIndex4, [in] BYTE* TmpData4,)

[Usage]

Write the information and fingerprint template of a specified user into the MF card. After this function is called, the MF card must be verified by the device.

[Parameter]

dwMachineNumber

Device number

dwEnrollNumber

User ID

dwFingerIndex1, dwFingerIndex2, dwFingerIndex3, dwFingerIndex4

Index of fingerprint (0-3)

TmpData1, TmpData2, TmpData3, TmpData4

Fingerprint templates corresponding to fingerprints. TmpData1 cannot be null.

[Return Value]

Return True if it is successful, or return False.

[Related Function]

EmptyCard

5.5.3.2 EmptyCard

[Definition]

VARIANT_BOOL EmptyCard([in] LONG dwMachineNumber)

[Usage]

Clear the data from the MF card.

[Parameter]

dwMachineNumber

Device number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

WriteCard

5.5.4 Others

5.5.4.1 GetLastError

[Definition]

GetLastError([out] long* dwErrorCode)

[Usage]

Obtain the last error information.

[Parameter]

dwErrorCode

Error code returned. Values are as follows:

-100	Operation failed or data not exist
-10	Transmitted data length is incorrect
-5	Data already exists
-4	Space is not enough
-3	Error size
-2	Error in file read/write
-1	SDK is not initialized and needs to be reconnected
0	Data not found or data repeated
1	Operation is correct
4	Parameter is incorrect
101	Error in allocating buffer

[Return Value]

None

[Related Function]

Return True if it is successful, or return False.

5.5.4.2 GetHIDEventCardNumAsStr

[Definition]

VARIANT_BOOL GetHIDEventCardNumAsStr([out] BSTR* strHIDEventCardNum)

[Usage]

Obtain the number of the card that is latest used.

[Parameter]

strHIDEventCardNum

Number of the card lately used

[Return Value]

Return True if it is successful, or return False.

[Related Function]

OnHIDNum

5.5.4.3 CaptureImage**[Definition]**

VARIANT_BOOL CaptureImage([in] VARIANT_BOOL FullImage, [in] LONG *Width, [in] LONG *Height, [in] BYTE *Image, [in] BSTR ImageFile)

[Usage]

Capture the image of the fingerprint on the fingerprint sensor.

[Parameter]

FullImage

Whether to capture the entire image. Return True if the device captures the whole image. Return False if the device captures only the fingerprint.

Width

Width of the image to be captured

Height

Height of the image to be captured

Image

Binary fingerprint image

ImageFile

Storage name of the specified fingerprint image to be captured (including the storage path)

[Return Value]

Return True if it is successful, or return False.

[Related Function]

None

5.5.4.4 UpdateFirmware**[Definition]**

VARIANT_BOOL UpdateFirmware([in] BSTR FirmwareFile)

[Usage]

Upgrade the firmware. To use this function, you need to obtain corresponding firmware from technical engineers of Granding.

[Parameter]

FirmwareFile

File name of the firmware to be upgraded (including the path)

[Return Value]

Return True if it is successful, or return False.

[Related Function]

None

5.5.4.5 BeginBatchUpdate**[Definition]**

VARIANT_BOOL BeginBatchUpdate([in] LONG dwMachineNumber, [in] LONG UpdateFlag)

[Usage]

Start uploading data in batches. For example, if you call this function before uploading data such as user templates and user information, the SDK stores the data temporarily in the buffer during upload. Then, you can run BatchUpdate to import temporary data into the device.

[Parameter]

dwMachineNumber

Device number

UpdateFlag

Fingerprint overwrite flag, that is, when a user fingerprint template is uploaded, if the fingerprint index has been specified for an existing fingerprint, the device prompts whether to overwrite the existing fingerprint template. 1: Forcibly overwrite, 0: Not overwrite

[Return Value]

Return True if it is successful, or return False.

[Related Function]

BatchUpdate, CancelBatchUpdate

5.5.4.6 BatchUpdate**[Definition]**

VARIANT_BOOL BatchUpdate([in] LONG dwMachineNumber)

[Usage]

Start uploading data in batches. Generally, this function is used only after BeginBatchUpdate is used to upload related data.

[Parameter]

dwMachineNumber

Device number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

BeginBatchUpdate, CancelBatchUpdate

5.5.4.7 CancelBatchUpdate

[Definition]

VARIANT_BOOL CancelBatchUpdate([in] LONG dwMachineNumber)

[Usage]

Cancel uploading data in batches. Generally, this function can be used to release the buffer reserved for batch upload after BeginBatchUpdate and before BatchUpdate.

[Parameter]

dwMachineNumber

Device number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

BeginBatchUpdate, BatchUpdate

5.5.4.8 PlayVoice

[Definition]

VARIANT_BOOL PlayVoice([in] LONG Position, [in] LONG Length)

[Usage]

Play tones with the specified consecutive numbers. Tone numbers are determined by the device. You can view the tone numbers in Voice Test menu of the device. Generally, the values range from 0 to 11.

[Parameter]

Position

Start tone number

Length

End tone number

[Return Value]

Return True if it is successful, or return False.

[Related Function]

PlayVoiceByIndex

5.5.4.9 PlayVoiceByIndex

[Definition]

VARIANT_BOOL PlayVoiceByIndex([in] LONG Index)

[Usage]

Play tones with the specified numbers. Tone numbers are determined by the device. You can view the tone numbers in Voice Test menu of the device. Generally, the values range from 0 to 11.

[Parameter]

Index

Number of the tone to be played

[Return Value]

Return True if it is successful, or return False.

[Related Function]

PlayVoice

6 FAQs

6.1 How to Download Attendance Records?

First, use ReadGeneralLogData to read all attendance records and write them into the memory. Then, use GetGeneralLogData repeatedly to obtain attendance records. When GetGeneralLogData returns False, it means that all attendance records are obtained. Then, you can write the obtained records into database or display them in other forms to finish downloading. You can follow the same steps to download operation records.

6.2 How to Create a User Online?

First, use SetUserInfo to write user information (such as enrollment number, password, and name) into the device. Then, use SetUserTmpStr/SetUserTmp/SetEnrollDataStr/SetEnrollData to set fingerprint templates for the user. This method improves enrollment efficiency and is suitable when user information has been collected and stored in media such as database.

To upload user information and corresponding fingerprint templates in batches, use BeginBatchUpdate or SetUserInfo together with SetUserInfo, BatchUpdate, EnableDevice, or RefreshData. For details, see demo program.

6.3 How to Import or Download Data from USB Disk?

Many existing offline products support data download from USB disks. Many customers are concerned about data formats of USB disks. As the downloaded data formats are complex, Granding provides a tool for importing data from USB disks to database. Database is open for

customers to download data. In addition, Granding also provides examples on how to process data files (*.dat, etc.) collected from USB disks and how to write the data into specified data files. All structs adopt 1 byte alignment mode.

Data in USB disks include user information, fingerprint templates, face templates, attendance records, and short messages. Detailed data structures are used in demo program. They are described briefly below:

User data structure:

```
typedef struct _User_{
    U16 PIN; //Internal number of a user
    U8 Privilege;
    char Password[8];
    char Name[24];
    U8 Card[4];
    U8 Group;
    U16 TimeZones[4];
    char PIN2[24]; //User ID
}
```

Data structure of 9.0 fingerprint template:

```
typedef struct _Template_{
    U16 Size; //fingerprint template length
    U16 PIN; //internal user ID, which corresponds to PIN2 in user table
    BYTE FingerID; // fingerprint backup index
    BYTE Valid;
    BYTE Template[MAXTEMPLATESIZE]; //maximize template length
} //MAXTEMPLATESIZE 602 Bytes
```

Data structure of template.fp10:

```
typedef struct _Template_{
    U16 Size; //entire structure data size
    U16 PIN; //user ID
    BYTE FingerID; //fingerprint index
    BYTE Valid; //flag
    BYTE *Template; //template
}
```

Attendance record,

```
struct _AttLog_{
```

```

        U16 PIN;
        U8 PIN2[24];
        BYTE verified;
        time_t time_second;
        BYTE status;
        U32 workcode;
        BYTE reserved[4];
    }

```

Exported as a text file:

attlog.dat format explanation:

segment:

BadgeNumber(employee number),

checktime,

DeviceID,

checktype(check status),

VerifyCode(verification ways:password or fingerprint or other)

Workcode

There is an Ascii code #9(Tab) between each segment. When development, move to the segment value you want to choose by "Tab".

If the device has the output data protection function, the serial number of the current device is displayed in first line and the hash value in the last line of the file to which attendance records are exported from USB disk.

Data structure of SMS

```

typedef struct _SMS_{
    BYTE Tag;      //category
    U16 ID;         //data content flag. 0 indicates that the record is invalid.
    U16 ValidMinutes; //valid minutes. 0 indicates that the record is permanently valid.
    U16 Reserved;
    U32 StartTime;  //start time
    BYTE Content[MAX_SMS_CONTENT_SIZE+1]; //short message content
} // MAX_SMS_CONTENT_SIZE      60 Bytes

```

Data structure between SMS and user pin//user->sms,udata.dat

```

typedef struct _UData_{
    U16 PIN;        //0 indicates that the record is invalid
    U16 SmsID;

```

```
}GCC_PACKED TUData, *PUData; //4Bytes
```

Data structure of face template:

```
typedef struct _FaceTmp_{  
    U16 Size;//face template size  
    U16 PIN;//user ID  
    BYTE FaceID;//Face ID  
    BYTE Valid;//flag  
    U16 Reserve;//reserve  
    U32 ActiveTime;  
    U32 VfCount;//Verify Count  
    BYTE FaceTmp[FACE_TMP_MAXSIZE]  
}  
//FACE_TMP_MAXSIZE=1024*2+512
```

6.4 How to Use Biokey to Write the Collected Fingerprint Templates Offline?

When a fingerprint is collected, Biokey usually obtains the fingerprint template during enrollment. For example, the currently enrolled fingerprint template can be obtained via OnEnroll. After obtaining the fingerprint template, Biokey converts it into an offline fingerprint template. Then, the template can be written into the device.

6.5 How to Obtain All Information of All Users?

Use ReadAllUserID to read IDs of all users and write them into memory. Then, use GetAllUserID repeatedly to obtain EnrollmentNumber of users, and use GetUserInfo to obtain user information. If necessary, you can also use GetUserTmpStr to obtain the fingerprint templates in string form.

6.6 How to Connect to the Device?

During connection, the device can be regarded as an independent PC. However, the IP address of the device must match the IP address to be connected. Some devices, for example F4, support serial port connection and network connection. Therefore, during different connections, you need to set the device differently, modify communication mode, and set the controller switch to TCP/IP or RS232/485. Otherwise, the connection may fail. Sometimes, if the device fails to be connected due to busy serial ports, you can restart the program. If the application keeps connecting to the device without being manually disconnected, you can use DisableDeviceWithTimeout to set the automatic disconnection time of the device. If some connections are used to download or modify data via serial ports or network, you can use EnableDevice to keep the device working and restore the connections after communication finishes, so as to maintain data consistency and avoid unknown errors.

6.7 Password Is Invalid After SetUserInfo Is Used.

After SetUserInfo is called, Password may be set to null. If so, password verification will fail. To keep the password unchanged when writing user information, use GetUserInfo to obtain user password and transmit the password value to the Password parameter of SetUserInfo before using SetUserInfo.

6.8 How to Convert an Online Template into an Offline Template?

Use FPTempConvertNew to convert the collected templates into offline fingerprint templates. See related descriptions of Biokey SDK for how to obtain the templates collected by Biokey. FPTempConvertNew is used to convert binary fingerprint templates. Parameters temp1 and temp2 are binary parameters. You can also use FPTempConvertNewStr to convert Biokey fingerprint templates of string type into offline fingerprint templates.

6.9 Demo Program Fails to Connect to the Device.

After the attendance management program is installed, users can connect to the device by using the attendance management program, but cannot connect to the device by using demo program. The reason is that DLL is copied to the directory of the attendance management program but registered in the installation directory during program installation. Generally, SDK loads controls from the system directory. Therefore, if the SDK version in the system directory is different from that in the attendance software directory, conflicts occur. (DLL function addresses of different versions are different, but OCX functions are the same in programming. Therefore, the problem is found only during runtime.)

Caution: The common procedure for registering the SDK in the system is as follows:

1. If an SDK has been already registered in the system, run **regsvr32 /u zkemkeeper.dll** to unregister the original SDK.
2. Copy all DLLs to the system directory, for example, win2000 is located in winnt\system32.
3. Run regsvr32 "registration path\zkemkeeper.dll" to register the SDK.
4. Correctly load controls in development environment (learn the usage of development tool by yourself. Relevant details are omitted here).
5. Try to use the SDK of the same version in development or running environment.

6.10 Offline Fingerprint Device Keeps Working After Being Connected.

After connecting the SDK to the offline fingerprint device, use EnableDevice to keep the offline fingerprint device working (see EnableDevice), so as to maintain data consistency and avoid unknown errors. After the offline fingerprint device is working, the keypad and fingerprint sensor stop working. After communication finishes, disconnect the SDK from the device or use EnableDevice again to restore the offline fingerprint device to normal state.

DisableDeviceWithTimeOut is recommended.

6.11 Illegal Characters Are Displayed or Screen Display Is Abnormal After Non-English Names or Short Messages Are Uploaded to the Device.

First, check whether the device supports the specified language. For example, if the current language of the device is English, but an Arabic name is uploaded to the device, the name cannot be displayed normally. If the device already supports the language, but the name still cannot be displayed, use related functions to convert the user name into UTF-8 format (for example, use `AnsiToUTF8()` in Dephi), and then use `SetUserInfo` to upload the user name.

6.12 Card Management Problems

How to register a card in the device? How to obtain the user card?

The SDK has the `cardnumber` parameter. If this parameter is invisible in development environment, use `GetStrCardNumber` and `SetStrCardNumber` instead.

For a user enrolled in the device, the card number is a kind of user information. When `SetUserInfo` is used to set user information, `cardnumber` is automatically used as the card number and set for the user.

The procedure for registering a card is as follows:

Set `cardnumber` -> Upload user information

The procedure for obtaining the card number of a user is as follows:

Obtain information of the specified user -> Obtain `cardnumber`

Note: The card number is internally defined as four unsigned bytes of long type. If VB does not support four unsigned bytes, verification can be started after the last three bytes of the card number are input (if the last three bytes are different from each other).

6.13 Firewall or Router Traversal

In most cases, the device to be connected needs to traverse firewalls or routers, and UDP socket and port 4370 are used for SDK communication. Therefore, UDP and port 4370 must be enabled on firewalls or routers. If the device traverses gateways via port mapping, the device can be accessed via port number and IP address of routers. Generally, if UDP and port 4370 are enabled and can be pinged, the device can be connected. Certainly, in the case of data download, network connection must be considered. In addition, some devices that support SOAP ports can be accessed via embedded Web Server and SOAP.

Caution: The zem100 series products can traverse internet via port mapping. For zem200 products, as the devices run on Linux, they can be accessed after the gateway is configured if the local network environment supports gateway communication. Certainly, there are still some other methods for accessing the device, for example, VPN and IP mapping. The connection scheme should be selected according to specific network environments.

6.14 Difference between ZKFinger10.0 and ZKFinger9.0 and Comparison between Templates

Algorithm performance: Compared with ZKFinger9.0, ZKFinger10.0 achieves better false acceptance rate (FAR), false rejection rate (FRR), and enrollment rejection rate (ERR), better image processing effect of low-quality fingerprints (for example, fingerprints are too dry or too wet, or users have worn or injury), and 10 times faster comparison.

Template size: The size of a ZKFinger10.0 fingerprint template is about 1.6 KB. The size of a ZKFinger9.0 fingerprint template is about 512B. When ZKFinger10.0 is used, a Mifare card with at least 2 KB capacity should be used for data storage.

Template compatibility: The ZKFinger10.0 and ZKFinger9.0 fingerprint templates are incompatible with each other. If a user who have already registered ZKFinger9.0 fingerprint templates wants to use ZKFinger10.0, the user has to register fingerprint templates again, and vice versa.

6.15 Uploading a Large Capacity of Fingerprints

Large capacity usually means over 1500 fingerprints. Some devices can hold 8000 fingerprints or more. Fingerprint templates must be uploaded in batches. In this mode, the upload is much faster. For how to upload fingerprint templates in batches, see descriptions of batch process function.

6.16 Differences between High-speed Upload and Ordinary Upload

In an ordinary upload, each time upload functions (such as SetUserInfo and SetUserTmpStr) are used, the SDK communicates with the device and uploads related data to the device.

In a high-speed upload, BeginBatchUpload is used to create a temporary buffer to store the data to be uploaded in subsequent operations. Then, BatchUpload can be used to upload all the data in the buffer to the device at a time. This mode greatly reduces communications between the SDK and the device, and raises the speed of large-capacity upload in particular.

6.17 How to Determine Whether the Device Uses ZKFinger10.0 or ZKFinger9.0?

Use the following function:

VARIANT_BOOL GetSysOption([in] LONG dwMachineNumber, [in] BSTR Option, [out] BSTR* Value)

The Option parameter constantly "~ZKFPVersion". If the returned Value is 10, the device uses ZKFinger10.0. If the returned Value is 9 or null (null is returned as old TFT devices do not have this value), the device uses ZKFinger9.0.

For example:

```
zkem.GetSysOption(EmManth.EmMan.Dev.MachineNumber,'~ZKFPVersion',verSionFp);
```

If verSionFp='10', the device uses ZKFinger10.0

If verSionFp='9' or verSionFp='', the device uses ZKFinger9.0

6.18 How to Upload, Download, and Delete ZKFinger10.0 Templates?

ZKFinger10.0 provides faster comparison, but the template size and storage mode are different from those of older versions:

When ZKFinger10.0 is used, the size of a fingerprint template is about 1.6 KB. When an older version is used, the size of a fingerprint template is smaller than 608B.

You can use follow function to upload,download and delete ZKFinger10.0 Templates:

VARIANT_BOOL **SetUserTmpEx**([in] LONG dwMachineNumber, [in] BSTR dwEnrollNumber, [in] LONG dwFingerIndex,[in] LONG Flag, [in] BYTE* TmpData)

VARIANT_BOOL **GetUserTmpEx**([in] LONG dwMachineNumber, [in] BSTR dwEnrollNumber, [in] LONG dwFingerIndex,[out] LONG * Flag, [out] BYTE* TmpData, [out] LONG* TmpLength)

VARIANT_BOOL **SetUserTmpExStr**([in] LONG dwMachineNumber, [in] BSTR dwEnrollNumber, [in] LONG dwFingerIndex,[in] LONG Flag, [in] BSTR TmpData)

VARIANT_BOOL **GetUserTmpExStr**([in] LONG dwMachineNumber, [in] BSTR dwEnrollNumber, [in] LONG dwFingerIndex,[out] LONG * Flag, [out] BSTR* TmpData, [out] LONG* TmpLength)

The above four functions can upload and download both ordinary fingerprint templates (Flag=1) and threatened fingerprint templates (Flag=3). Additionally, they can be used for both ZKFinger10.0 templates and ZKFinger9.0 templates.

To delete ZKFinger10.0 templates, you can use the following functions (these two functions are used on TFT devices to delete fingerprint templates):

VARIANT_BOOL **SSR_DelUserTmp**([in] LONG dwMachineNumber, [in] BSTR EnrollNumber, [in]LONG dwFingerIndex)

VARIANT_BOOL **SSR_DelUserTmpExt**([in] LONG dwMachineNumber, [in] BSTR dwEnrollNumber, [in]LONG dwFingerIndex)

Note:

Ver6.60 is the internal version of device firmware. You can obtain it by using GetFirmwareVersion after SDK connects to the device (or by using the attendance software).

Caution: The internal version obtained is different from the firmware version that you view on the device.

6.19 How to Upload, Download, and Delete ZKFinger9.0 Templates?

The functions used to upload and download ordinary ZKFinger9.0 templates (that is, SSR_GetUserTmp, SSR_GetUserTmpStr, SSR_SetUserTmp, and SSR_SetUserTmpStr) in earlier SDK versions are continuously used in the present SDK version.

New functions (that is, SetUserTmpEx, GetUserTmpEx, SetUserTmpExStr, and GetUserTmpExStr) are also added in the present SDK version. These functions can upload and download both ordinary fingerprint templates (Flag=1) and threatened fingerprint templates (Flag=3). But they are used only on the TFT devices with firmware Ver6.60 or later. Additionally, they can be used for both ZKFinger10.0 templates and ZKFinger9.0 templates.

To delete ZKFinger9.0 templates, you can use SSR_DelUserTmp or SSR_DelUserTmpExt.