

## 1. Description

### 1.1. Project

Project Name	smartAlarmCube
Board Name	smartAlarmCube
Generated with:	STM32CubeMX 4.20.0
Date	07/09/2017


### 1.2. MCU

MCU Series	STM32F1
MCU Line	STM32F103
MCU name	STM32F103C8Tx
MCU Package	LQFP48
MCU Pin number	48

### 1.3. Caution

The report was generated although the configuration was in a modified state. It may be not accurate

## 2. Pinout Configuration

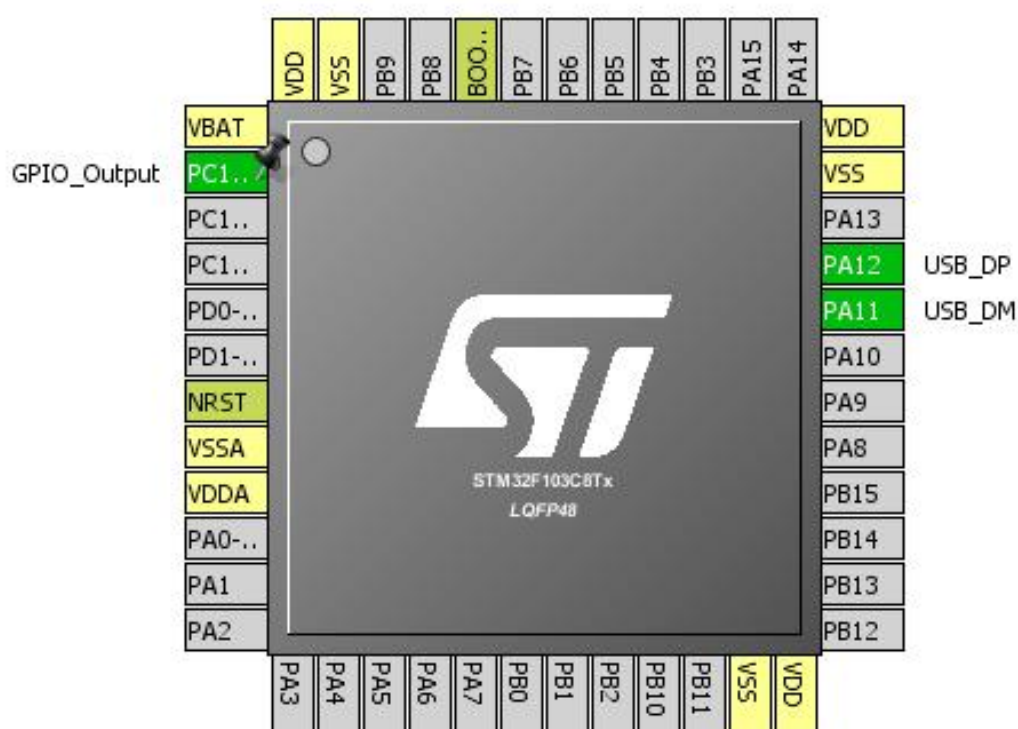


### 3. Pins Configuration

Pin Number LQFP48	Pin Name (function after reset)	Pin Type	Alternate Function(s)	Label
1	VBAT	Power		
2	PC13-TAMPER-RTC *	I/O	GPIO_Output	
7	NRST	Reset		
8	VSSA	Power		
9	VDDA	Power		
23	VSS	Power		
24	VDD	Power		
32	PA11	I/O	USB_DM	
33	PA12	I/O	USB_DP	
35	VSS	Power		
36	VDD	Power		
44	BOOT0	Boot		
47	VSS	Power		
48	VDD	Power		

\* The pin is affected with an I/O function

#### 4. Clock Tree Configuration

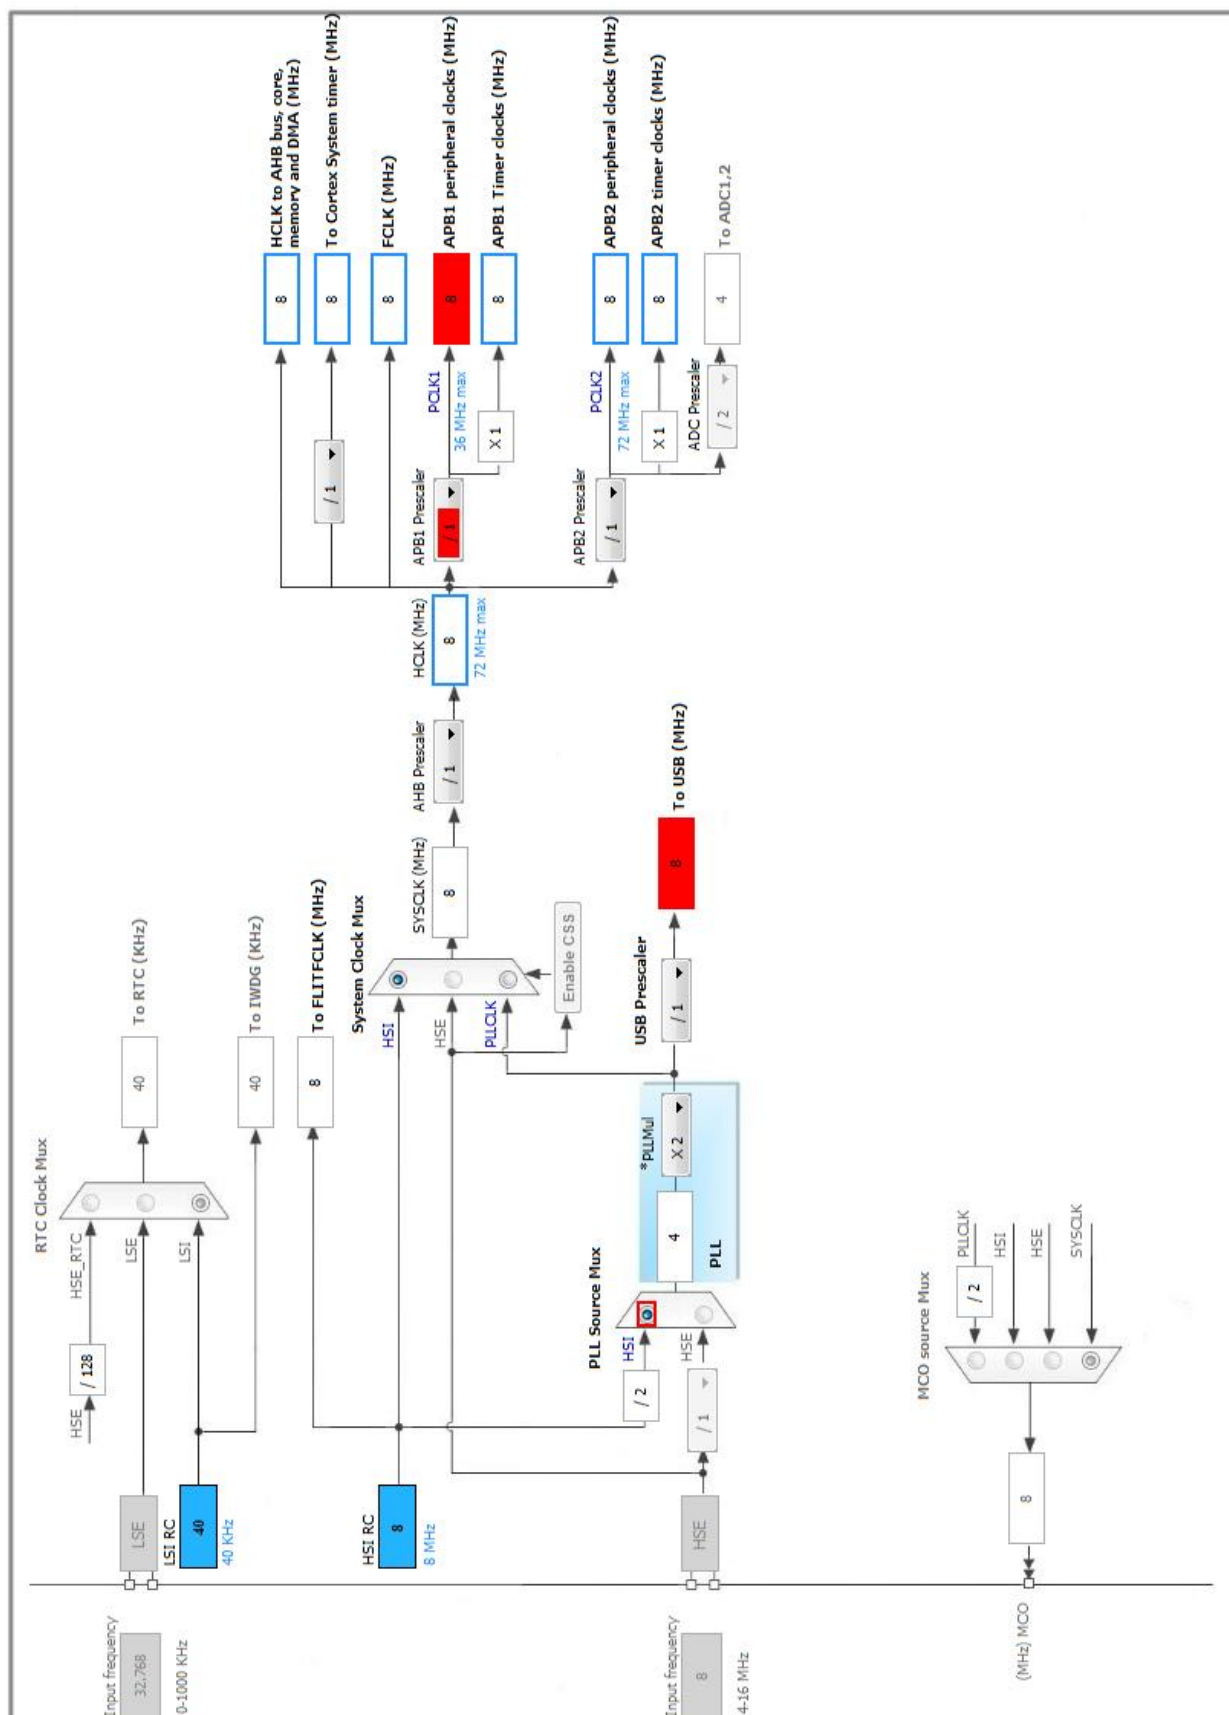

## 5. IPs and Middleware Configuration

### 5.1. USB

mode: Device (FS)

#### 5.1.1. Parameter Settings:

##### Basic Parameters:

Speed	Full Speed 12MBit/s
Endpoint 0 Max Packet size	8 Bytes

##### Power Parameters:

Low Power	Disabled
Link Power Management	Disabled
Battery Charging	Disabled

\* User modified value

## 6. System Configuration

### 6.1. GPIO configuration

IP	Pin	Signal	GPIO mode	GPIO pull/up pull down	Max Speed	User Label
USB	PA11	USB_DM	n/a	n/a	n/a	
	PA12	USB_DP	n/a	n/a	n/a	
GPIO	PC13-TAMPER-RTC	GPIO_Output	Output Push Pull	n/a	Low	

### 6.2. DMA configuration

nothing configured in DMA service

### 6.3. NVIC configuration

Interrupt Table	Enable	Preenmption Priority	SubPriority
Non maskable interrupt	true	0	0
Hard fault interrupt	true	0	0
Memory management fault	true	0	0
Prefetch fault, memory access fault	true	0	0
Undefined instruction or illegal state	true	0	0
System service call via SWI instruction	true	0	0
Debug monitor	true	0	0
Pendable request for system service	true	0	0
System tick timer	true	0	0
PVD interrupt through EXTI line 16	unused		
Flash global interrupt	unused		
RCC global interrupt	unused		
USB high priority or CAN TX interrupts	unused		
USB low priority or CAN RX0 interrupts	unused		

\* User modified value

## ***7. Power Consumption Calculator report***

### 7.1. Microcontroller Selection

Series	STM32F1
Line	STM32F103
MCU	STM32F103C8Tx
Datasheet	13587_Rev17

### 7.2. Parameter Selection

Temperature	25
Vdd	3.3



## 8. Software Project

### 8.1. Project Settings

Name	Value
Project Name	smartAlarmCube
Project Folder	C:\work\SmartAlarm\smartAlarmCube
Toolchain / IDE	MDK-ARM V4
Firmware Package Name and Version	STM32Cube FW_F1 V1.4.0

### 8.2. Code Generation Settings

Name	Value
STM32Cube Firmware Library Package	Copy all used libraries into the project folder
Generate peripheral initialization as a pair of '.c/.h' files	No
Backup previously generated files when re-generating	No
Delete previously generated files when not re-generated	Yes
Set all free pins as analog (to optimize the power consumption)	No