

B2 - BACnet / Modbus (Advanced)


BACnet MS/TP - Workshop I

2-way EPIV4

B2 - BACnet - Workshop I


2-way EPIV4

Team A
YABE

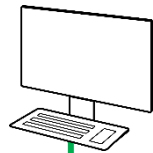

Addr = ____
InstNr = ____

Team B
YABE

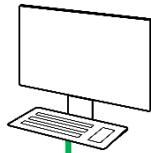

Addr = ____
InstNr = ____

First define the network addresses within your group

Group 1: BACnet Addresses 10..19, Instance IDs 110..119

Group 2: BACnet Addresses 20..29, Instance IDs 120..129

Group 3: BACnet Addresses 30..39, Instance IDs 130..139

Group 4: BACnet Addresses 40..49, Instance IDs 140..149

Baudrate 19'200

Max Master 127



BKN

Addr = ____
InstNr = ____



PRCA-BAC

Addr = ____
InstNr = ____




22DTH-16M

Addr = ____
InstNr = ____



EP015R6+BAC-HHM

Addr = ____
InstNr = ____

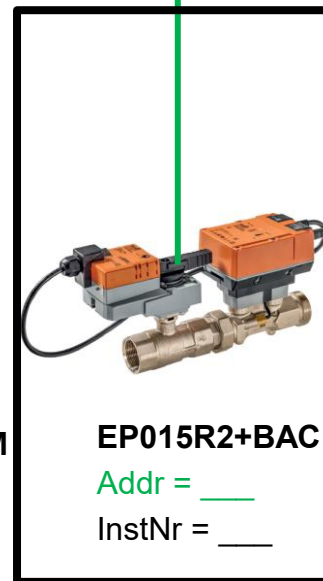

EP015R2+BAC

Addr = ____
InstNr = ____



P-22RTM-1U00D-2

Addr = ____
InstNr = ____

— Serial network (RS485)

B2 - BACnet - Workshop I

2-way EPIV4


1. Configure all the devices according the network overview.

 Find your appropriate configuration tool in the documents (LINK.10, Belimo Assistant 2, etc.)

2. Start YABE. Click on **Add device** and **Add yourself with BACnet/MSTP**.

 Check on which COM port your RS485-USB adapter is

 Pay attention to the BACnet settings on your actuator you just made

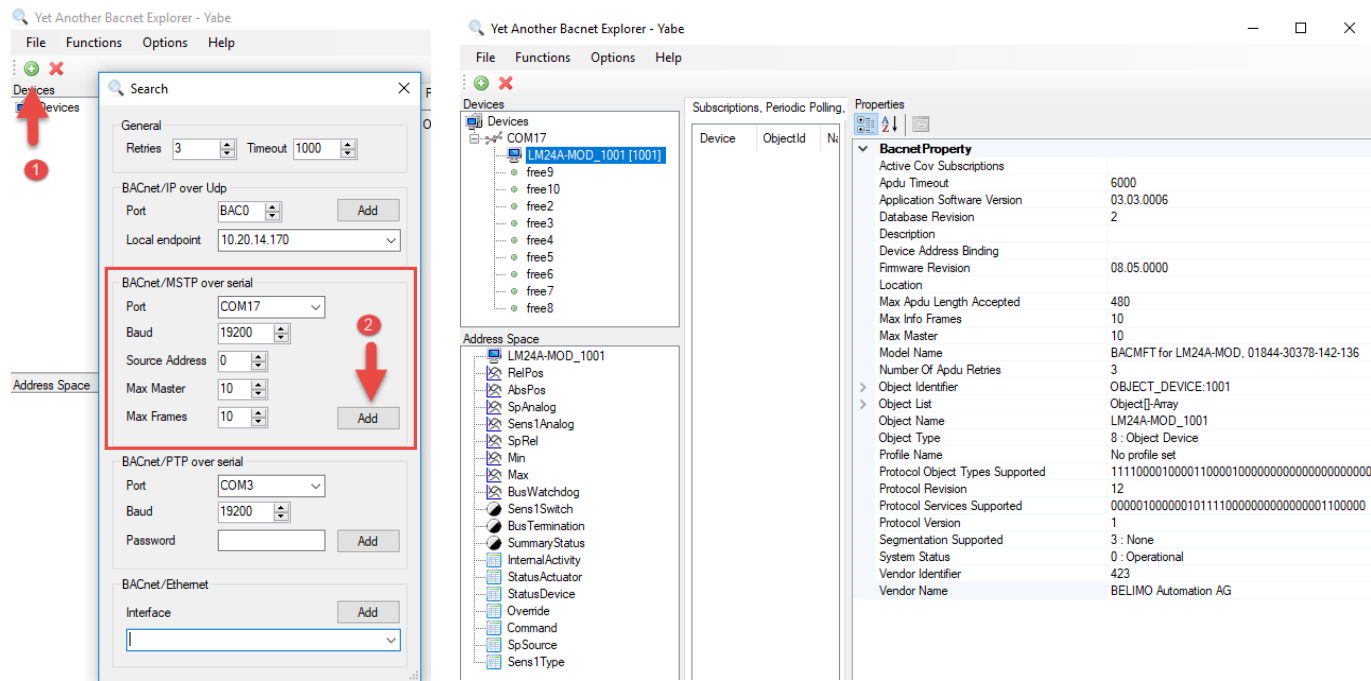

B2 - BACnet - Workshop I

2-way EPIV4

3. Select the 2-way EPIV4 under *Devices*.
4. Read out all the BACnet objects of the device
5. Click on the BACnet object “Device”
 1. What is the *Application Software Version*?
 2. With which BACnet object can you write the setpoint?
 3. With which BACnet object can you read out the relative position?
 1. _____
 2. _____
 3. _____
6. Try as many COV subscriptions as possible. How many COV subscriptions could you make?

B2 - BACnet - Workshop I

2-way EPIV4



7. Set [BusOverride] to “Open”

Check if “Overriden” is true, both for [SpRel] and [SpAnalog] Yes ☐ No ☐

Set [BusOverride] back to “None”

Check if “Overriden” is false, both for [SpRel] and [SpAnalog] Yes ☐ No ☐

8. Read [ErrorState]

Manually activate gear release

Read [ErrorState] again

Check if “Overriden” is true for [RelPos] Yes ☐ No ☐

Manually deactivate gear release

Check if “Overriden” is false for [RelPos] Yes ☐ No ☐

B2 - BACnet - Workshop I

2-way EPIV4



9. Set [Vmin] to 35%

Set [Vmax] to 30%

Could you set [Vmax] to 30%? Yes ☐ No ☐

What are the last actual values?

[Vmin]:

[Vmax]:

Set [Vmax] to 40%

Set [Vmin] to 45%

Could you set Vmin to 45%? Yes ☐ No ☐

What are the last actual values?

[Vmin]:

[Vmax]:
