


B2 - BACnet / Modbus (Advanced)

BACnet - Workshop I

BKN


B2 - BACnet - Workshop I – BKN

Team A
YABE

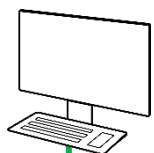

Addr = ____
InstNr = ____

Team B
YABE

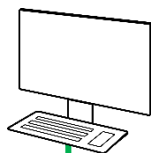

Addr = ____
InstNr = ____

First define the network addresses within your group

Group 1: BACnet Addresses 10..19, Instance IDs 110..119


Group 2: BACnet Addresses 20..29, Instance IDs 120..129

Group 3: BACnet Addresses 30..39, Instance IDs 130..139

Group 4: BACnet Addresses 40..49, Instance IDs 140..149

Baudrate 19'200

Max Master 127

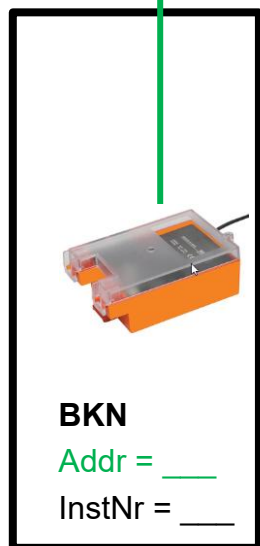

BKN

Addr = ____
InstNr = ____



PRCA-BAC

Addr = ____
InstNr = ____



22DTH-16M

Addr = ____
InstNr = ____



EP015R6+BAC-HHM

Addr = ____
InstNr = ____



EP015R2+BAC

Addr = ____
InstNr = ____



P-22RTM-1U00D-2

Addr = ____
InstNr = ____

— Serial network (RS485)

B2 - BACnet - Workshop I – BKN


1. Configure all the devices according the network overview.

💡 Find your appropriate configuration tool in the documents (LINK.10, Belimo Assistant 2, etc.)

2. Start YABE. Click on **Add device** and **Add yourself with BACnet/MSTP**.

💡 Check on which COM port your RS485-USB adapter is

💡 Pay attention to the BACnet settings on your actuator you just made

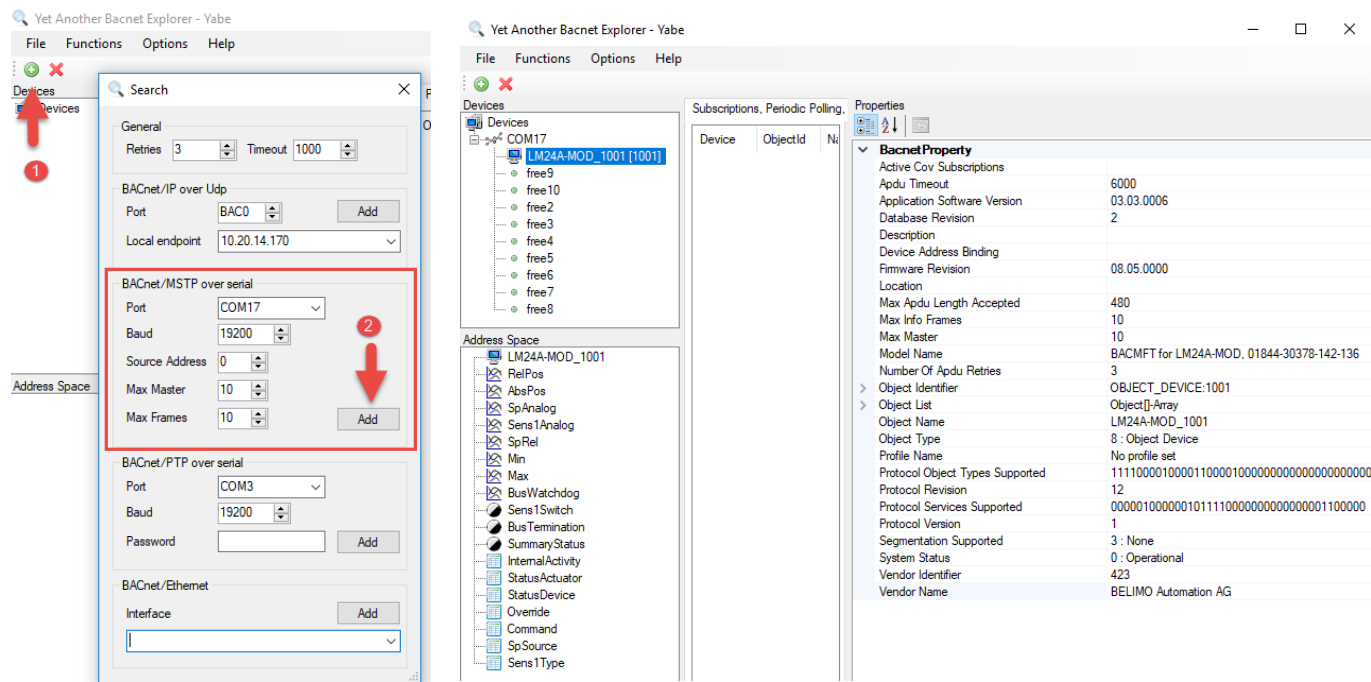

B2 - BACnet - Workshop I – BKN

3. Select the BKN under *Devices*.
 4. Read out all the BACnet objects of the device
 5. Click on the BACnet object “Device”
What is the *Application Software Version*?
-

6.
 1. Read out *Present Value* of “AI-1”
 2. Read out *Present Value* of “AV-121”
 1.

 2.

7. What is the “OffsetDeviceID” for?
-

B2 - BACnet - Workshop I – BKN



8. 1. What are the different Tripping Status?

1.

2.

3.

4.

9. Try to subscribe to as many BACnet objects as possible. How many object can you subscribe to?

10. Change a COV Increment. Can you?
