1. Overview

The following steps ensure the material is loaded correctly so it arrives safely and in proper condition at the correct distributor.

2. Trailer Preparation

1. Once the trailer has arrived, whether a live-load or a drop-trailer, the PIV operator must ensure it is safely docked. The operator must exit the facility to complete the steps to ensure that the trailer will not move during loading.

A) Apply the Gladhand lock to the airline.

B) Chock the wheels—The wheel chocks must be inserted under the tire to prevent the trailer from moving during loading.

- Apply 2-wheel chocks, one on each side.

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.

2. The operator will return inside the facility and lock the trailer using the long handle.

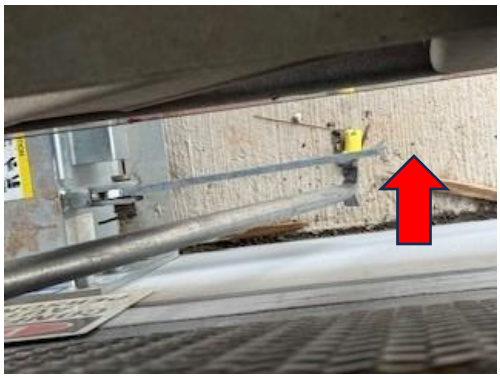

C) Lift up the lever on the lock's right-hand side to lower the mechanism.

D)Then, on the left-hand side, push down to lock it in place

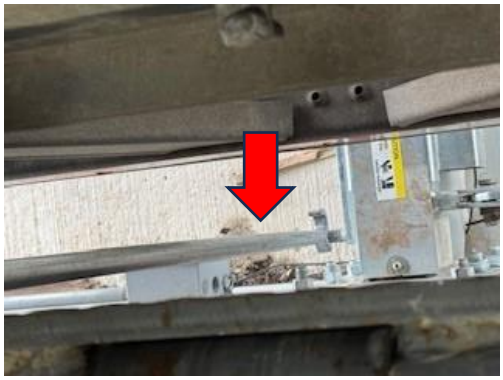

3. Once locked in place, the light on the left side of the dock will shine green, indicating that it is now safe to load. The light on the driver's side will show red, letting them know they are locked in and cannot leave.

- ✓ If the light did not switch automatically, then manually turn the key

- The key can be left in 'Auto' or manually switched from red to green

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.

4. Engage the Dock Plate.

D) Using the green button, lift the plate all the way up, then lower it only after it has been fully raised.

Dock plate properly placed.

5. Finally, inspect the trailer to ensure safe loading can occur, see '[Trailer Inspection and Release Form SWI]'.

a) Use the light available on the dock and check for;

- ✓ Any kind of damage to the trailer's flooring (large chips, dents, and holes)
- ✓ Any leftover debris, which should be promptly removed
- ✓ Any unsanitary conditions/unpleasant order, please report these immediately to your Supervisor

6. If the driver provided straps, put them aside and use them once loading is completed.

3. Dock Preparations

Once the trailer has been safely secured to the dock, ensure everything can be loaded as efficiently as possible.

- ✓ The LTL Packing team is responsible for configuring the pallets so that they are flat across the top for double stacking. Still, the operator should always inspect the staged pallets and make any necessary adjustments.

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.

1. When attempting to double stack, follow the heavy-to-light rule. Put a larger, heavier, and flatter pallet on the bottom with a lighter pallet.

2. Always confirm that the bottom pallet's weight can support the weight going on top.
   a. Empty/lightly packed boxes will collapse, risking the integrity of the product

✓ The operator might need to rearrange the order of cartons within the pallet to double-stack with leadership approval.

4. LOADING

Once double-stacked capabilities are determined or if carton rearrangement is needed, the operator can begin loading pallets into the assigned door/trailer. Before loading, the operator must scan each pallet.

1. The driver scans the door before loading the order, assigning that door locator for the rest of the order.

2. Each LPN must be individually scanned before entering the trailer.

✓ To prevent misloads, the operator must pick up the pallets with the PIV's forks, scan the LPN, and proceed to load.

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.

3. If MWA does not accept the scan, review the pallet and attempt to troubleshoot to resolve the scanning issue.

   Ex: the pallet might be in TX5 instead of TX4. WI - Outbound - Loading

   ✓ If the discrepancy cannot be solved, load the remaining pallets, then escalate to the Supervisor

4. Each delivery should include a stack of paperwork, two copies of the Bill of Lading and a Packing List. Remove them from the pallets and return them to the Clerk. One copy of the BOL will be provided to the driver.

   ✓ The loader should sign the BOLs before loading and returning them to the coordinator.
   ✓ Ensure pallet weight distribution is followed. Weight must be considered when planning which pallets go within the trailer
   ✓ Return all cones to the Cone Storage area

   A) Begin by placing the pallets on the right or left side of the trailer, alternating between the sides until the delivery is completely loaded or the trailer is full. *Reference Section 5 (Below) for best loading practices.*

5. Loading Methods

Depending on the number of pallets in the delivery, there are several ways to load the pallets to protect the product and utilize the space as efficiently as possible. Below are several ways to load pallets into the trailer frequently used at Zebra Distribution sites.

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.

1. **Straight Loading**—Straight loading into the trailer using standard 48x40 two-way pallets in the direction of the pallet stringers is the simplest way to load a trailer, but neither utilizes all the available space nor offers the best protection.

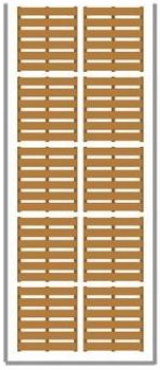

2. **Sideways**—This requires the use of partial or four-way entry pallets. Pallets are picked up perpendicular to the stringers. Loading standard 48x40 pallets maximizes space utilization and prevents product shifting.

3. **Pinwheel**—This method is utilized when the containers do not have sufficient space to load pallets side by side. Interlocking the pallets provides additional stability. It is often used for taller loads or when double-stacking loads of mixed cartons, weights, and sizes. It is frequently used in Zebra Distribution sites.

6. Additional Notes

Bluestar loads require pictures!

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.

1. When the operator completes 25%, 50% and 100% of the load, they must contact their supervisors to take pictures.

   ✓ The Supervisor must take pictures!

2. To comply with **Bluestar's** requests:

- A pallet containing more than two layers of the same item and mixed items must be separated by pallet and wrapped into one unit before loading. The same item layers must be even!
- If additional cases of the same item are unevenly layered, the additional mixed cases of different SKUs must be on a separate pallet.
- If the whole pallet is mixed, we leave it as mixed. *See the images below.*

3. If the loader does not complete the load by the end of their shift, they must communicate with the 2nd shift leads and operators to complete the loading.

7. Disengaging the Dock

1. Once the order has been loaded into the trailer, the safety protocols on the dock that were put in place must be disengaged.

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.

- ✓ Use the long handle to release the trailer. Once it has been successfully released, the light should show red on the dock side and green on the driver's side; if not, manually turn it to the red side
- ✓ Remove the wheel chocks
- ✓ Remove the glad-hand lock

8. References

Document #	Document Title
	WI - Outbound - Loading
	Trailer Inspection and Release Form SWI

9. Revision History

The following table lists all revisions (including the original document) to this procedure, the date, and the reason for the revision.

Rev.	Rev. Date	Description of Change	Revised By
01	04/18/25	Original issue	V. Savic

This document contains proprietary information which is the exclusive property of Zebra Technologies Corp.

The most recent version of this document is located on the ISO Library.
Verify revision number before use.