README.md 11/9/2021

## Lab 7: Daniel Havránek

Link to this file in your GitHub repository:

https://github.com/Dan5049/Digital-electronic-2

## Analog-to-Digital Conversion

1. Complete table with voltage divider, calculated, and measured ADC values for all five push buttons.

| Push button | PC0[A0] voltage | ADC value (calculated) | ADC value (measured) |
|-------------|-----------------|------------------------|----------------------|
| Right       | 0 V             | 0                      | 0                    |
| Up          | 0.495 V         | 101                    | 99                   |
| Down        | 1.203 V         | 246                    | 256                  |
| Left        | 1.97 V          | 403                    | 410                  |
| Select      | 3.182 V         | 651                    | 640                  |
| none        | 5 V             | 1023                   | 1023                 |

2. Code listing of ACD interrupt service routine for sending data to the LCD/UART and identification of the pressed button. Always use syntax highlighting and meaningful comments:

```
* Function: ADC complete interrupt
 * Purpose: Display value on LCD and send it to UART.
ISR(ADC_vect)
   // WRITE YOUR CODE HERE
   uint16 t value = ∅;
    char lcd_string[4] = "0000";
    char lcd_stringx[4] = "0000";
    value = ADC;
    itoa(value, lcd_string, 10);
    lcd_gotoxy(8, 0);
    lcd_puts(" ");
    lcd_gotoxy(8, 0);
    lcd_puts(lcd_string);
    uart_puts(lcd_string);
    itoa(value, lcd_stringx, 16);
    lcd_gotoxy(13, 0);
    lcd_puts(lcd_stringx);
    uart_puts(" ");
    uart_puts(lcd_stringx);
```

README.md 11/9/2021


```
uart_puts("\r\n");
}
```

## **UART** communication

1. (Hand-drawn) picture of UART signal when transmitting three character data De2 in 4800 7O2 mode (7 data bits, odd parity, 2 stop bits, 4800 Bd).



2. Flowchart figure for function get\_parity(uint8\_t data, uint8\_t type) which calculates a parity bit of input 8-bit data according to parameter type. The image can be drawn on a computer or by hand. Use clear descriptions of the individual steps of the algorithms.

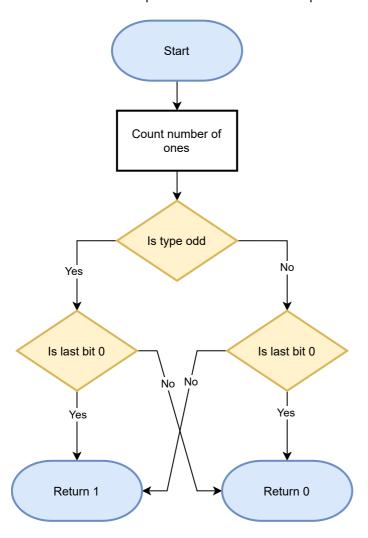

## Temperature meter

Consider an application for temperature measurement and display. Use temperature sensor TC1046, LCD, one LED and a push button. After pressing the button, the temperature is measured, its value is displayed on the LCD and data is sent to the UART. When the temperature is too high, the LED will start blinking.

1. Scheme of temperature meter. The image can be drawn on a computer or by hand. Always name all components and their values.

README.md 11/9/2021

