



Technical Safety Concept Lane Assistance

Document Version: [Version 1.0] Template Version 1.0, Released on 2017-06-21



Document history

[Instructions: Fill in the date, version and description fields. You can fill out the Editor field with your name if you want to do so. Keep track of your editing as if this were a real world project.

For example, if this were your first draft or first submission, you might say version 1.0. If this is a second submission attempt, then you'd add a second line with a new date and version 2.0

Date	Version	Editor	Description
2019/3/1	1.0	Harrison	Initial version

Table of Contents

[Instructions: We have provided a table of contents. If the table of contents is not showing up correctly in your word processor of choice, please update it. The table of contents should show each section of the document and page numbers or links. Most word processors can do this for you. In <u>Google Docs</u>, you can use headings for each section and then go to Insert > Table of Contents. Microsoft Word has similar capabilities]

Document history

Table of Contents

Purpose of the Technical Safety Concept

Inputs to the Technical Safety Concept

Functional Safety Requirements

Refined System Architecture from Functional Safety Concept

Functional overview of architecture elements

Technical Safety Concept

Technical Safety Requirements

Refinement of the System Architecture

Allocation of Technical Safety Requirements to Architecture Elements

Warning and Degradation Concept

Purpose of the Technical Safety Concept

[Instructions: Answer what is the purpose of a technical safety concept?]

- Turning functional safety requirements into technical safety requirements
- Allocating technical safety requirements to the system architecture

Inputs to the Technical Safety Concept


Functional Safety Requirements

[Instructions: Provide the functional safety requirements derived in the functional safety concept]

ID	Functional Safety Requirement	A S I L	Fault Tolerant Time Interval	Safe State
Functional Safety Requirement 01-01	The lane keeping item shall ensure that the lane departure oscillating torque amplitude is below Max_Torque_Amplitude.	С	50ms	Turn the lane departure warning function off
Functional Safety Requirement 01-02	The lane keeping item shall ensure that the lane departure oscillating torque frequency is below Max_Torque_Frequency.	С	50ms	Turn the lane departure warning function off
Functional Safety Requirement 02-01	The electronic power steering ECU shall ensure that the lane keeping assistance torque is applied for only Max_Duration	В	500ms	Turn the lane keeping assistance torque to 0.

Refined System Architecture from Functional Safety Concept

[Instructions: Provide the refined system architecture from the functional safety concept]

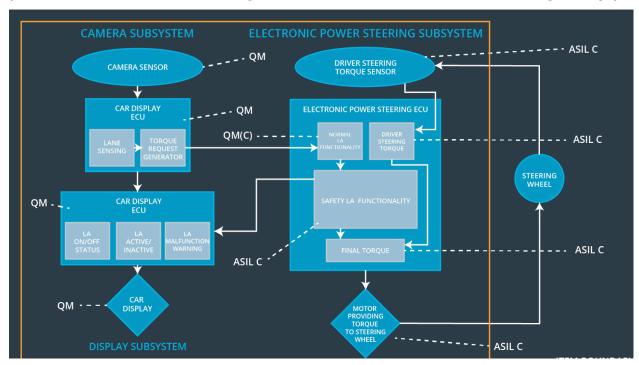

Functional overview of architecture elements

[Instructions: Provide a description for each functional safety element; what is each element's purpose in the lane assistance item?]

Element	Description
Camera Sensor	Camera sensors get the scene on the road
Camera Sensor ECU - Lane Sensing	ECU detects the lane according to the raw data from camera sensors and determine whether there is a lane departure
Camera Sensor ECU - Torque request generator	ECU send the requested torque to the EPS ECU
Car Display	Display warnings and system status
Car Display ECU - Lane Assistance On/Off Status	Receive system status signal from EPS ECU and determines to display the on/off status.

Car Display ECU - Lane Assistant Active/Inactive	Receive system status signal from EPS ECU and determines to display the active/inactive status
Car Display ECU - Lane Assistance malfunction warning	Receive system warning signal from EPS ECU and determines to display the warnings or not
Driver Steering Torque Sensor	Sense how hard the driver move the steering wheel
Electronic Power Steering (EPS) ECU - Driver Steering Torque	Gets the hard to turn steering wheel from camera ECU and from driver steering torque sensor, then output the desired torque to steering wheel.
EPS ECU - Normal Lane Assistance Functionality	Send the requested torque from camera ECU normally without checking any safety relevant requirements.
EPS ECU - Lane Departure Warning Safety Functionality	Ensure that the amplitude of the 'LDW_Torque_Request' sent to the 'Final electronic power steering Torque' component is below 'Max_Torque_Amplitude' and 'Max_Torque_Frequency'. Also, send LDW_Error_Status to the CAR DISPLAY ECU.
EPS ECU - Lane Keeping Assistant Safety Functionality	Ensure that the lane keeping assistance torque is applied for only Max_Duration.
EPS ECU - Final Torque	Combine all the received signals from LA Safety Functionality and Driver Steering Torque block and data integrity check block and output the final torque to the motor.
Motor	Operate the torque request.

Technical Safety Concept

Technical Safety Requirements

[Instructions: Fill in the technical safety requirements for the lane departure warning first functional safety requirement. We have provided the associated functional safety requirement in the first table below. Hint: The technical safety requirements were discussed in the lesson videos. The architecture allocation column should contain element names such as LDW Safety block, Data Transmission Integrity Check, etc. Allocating the technical safety requirements to the "EPS ECU" does not provide enough detail for a technical safety concept.]

Lane Departure Warning (LDW) Requirements:

Functional Safety Requirement 01-01 with its associated system elements

(derived in the functional safety concept)

ID	Functional Safety Requirement	Electronic Power Steering ECU	Camera ECU	Car Display ECU
Functional Safety Requirement 01-01	The lane keeping item shall ensure that the lane departure oscillating torque amplitude is below Max_Torque_Amplitude	X		

Technical Safety Requirements related to Functional Safety Requirement 01-01 are:

ID	Technical Safety Requirement	A S I L	Fault Tolerant Time Interval	Architecture Allocation	Safe State
Technical Safety Requireme nt 01	The LDW safety component shall ensure that the amplitude of the 'LDW_Torque_Request' sent to the 'Final electronic power steering Torque' component is below 'Max_Torque_Amplitude.	C	50ms	LDW Safety Functionality	Turn the lane departure warning function off
Technical Safety Requireme nt 02	As soon as the LDW function deactivates the LDW feature, the 'LDW Safety' software block shall send a signal to the car display ECU to turn on a warning light.	С	50ms	LDW Safety Functionality	Turn the lane departure warning function off
Technical Safety Requireme nt 03	As soon as a failure is detected by the LDW function, it shall deactivate the LDW feature and the 'LDW_Torque_Request' shall be set to zero.	С	50ms	LDW Safety Functionality	Turn the lane departure warning function off

Technical Safety Requireme nt 04	The validity and integrity of the data transmission for 'LDW_Torque_Request' signal shall be ensured.	С	50ms	Data Transition Integrity Check	Turn the lane departure warning function off
Technical Safety Requireme nt 05	Memory test shall be conducted at start up of the EPS ECU to check for any faults in memory.	A	Ignition cycle	Safety Startup Memory Test	Turn the lane departure warning function off

[Instructions: Fill in the technical safety requirements for the lane departure warning second functional safety requirement. We have provided the associated functional safety requirement in the table below. Hint:. Most of the technical safety requirements will be the same. At least one technical safety requirement will have to be slightly modified because we are talking about frequency instead of amplitude. These requirements were not given in the lessons]

Functional Safety Requirement 01-2 with its associated system elements (derived in the functional safety concept)

ID	Functional Safety Requirement	Electronic Power Steering ECU	Camera ECU	Car Display ECU
Functional Safety Requirement 01-02	The lane keeping item shall ensure that the lane departure oscillating torque frequency is below Max_Torque_Frequency	X		

Technical Safety Requirements related to Functional Safety Requirement 01-02 are:

L Interval

Technical Safety Requirement 01	The LDW safety component shall ensure that the frequency of the 'LDW_Torque_Request' sent to the 'Final electronic power steering Torque' component is below 'Max_Torque_Frequency.	С	50ms	LDW Safety Functionality	Turn the lane departur e warning function off
Technical Safety Requirement 02	As soon as the LDW function deactivates the LDW feature, the 'LDW Safety' software block shall send a signal to the car display ECU to turn on a warning light.	С	50ms	LDW Safety Functionality	Turn the lane departur e warning function off
Technical Safety Requirement 03	As soon as a failure is detected by the LDW function, it shall deactivate the LDW feature and the 'LDW_Torque_Request' shall be set to zero.	С	50ms	LDW Safety Functionality	Turn the lane departur e warning function off
Technical Safety Requirement 04	The validity and integrity of the data transmission for 'LDW_Torque_Request' signal shall be ensured.	С	50ms	Data Transition Integrity Check	Turn the lane departur e warning function off
Technical Safety Requirement 05	Memory test shall be conducted at start up of the EPS ECU to check for any faults in memory.	A	Ignition cycle	Safety Startup Memory Test	Turn the lane departur e warning function off

Lane Departure Warning (LDW) Verification and Validation Acceptance Criteria:

[OPTIONAL: For each technical safety requirement, identify both the verification and validation acceptance criteria. "Validation" asks whether or not you chose the appropriate parameters. "Verification" involves testing to make sure the vehicle behaves as expected when the parameter value is crossed. There is not necessarily one right answer. Look at your verification and validation acceptance criteria from the functional safety concept for inspiration.]

Lane Keeping Assistance (LKA) Requirements:

[Instructions: Fill in the technical safety requirements for the lane keeping assistance functional safety requirement 02-01. We have provided the associated functional safety requirement in the table below. Hint:. You can reuse the technical safety requirements from functional safety requirement 01-01. But you need to change the language because we are now looking at a different system. The ASIL and Fault Tolerant Time Interval are different as well.]

Functional Safety Requirement 02-1 with its associated system elements (derived in the functional safety concept)

ID	Functional Safety Requirement	Electronic Power Steering ECU	Camera ECU	Car Display ECU
Functional Safety Requirement 02-01	The lane keeping item shall ensure that the lane keeping assistance torque is applied for only Max_Duration	X		

Technical Safety Requirements related to Functional Safety Requirement 02-01 are:

ID	Technical Safety Requirement	A S I L	Fault Tolerant Time Interval	Allocation to Architecture	Safe State
Technical Safety Requireme nt 01	The LDW safety component shall ensure that the duration to send the 'LDW_Torque_Request' to the 'Final electronic power steering Torque' component is below 'Max_Duration.	В	500ms	LDW Safety Functionality	Turn the lane keeping assistance torque to 0.


Technical Safety Requireme nt 02	As soon as the LDW function deactivates the LDW feature, the 'LDW Safety' software block shall send a signal to the car display ECU to turn on a warning light.	В	500ms	LDW Safety Functionality	Turn the lane keeping assistance torque to 0.
Technical Safety Requireme nt 03	As soon as a failure is detected by the LDW function, it shall deactivate the LDW feature and the 'LDW_Torque_Request' shall be set to zero.	В	500ms	LDW Safety Functionality	Turn the lane keeping assistance torque to 0.
Technical Safety Requireme nt 04	The validity and integrity of the data transmission for 'LDW_Torque_Request' signal shall be ensured.	В	500ms	Data Transition Integrity Check	Turn the lane keeping assistance torque to 0.
Technical Safety Requireme nt 05	Memory test shall be conducted at start up of the EPS ECU to check for any faults in memory.	A	Ignition cycle	Safety Startup Memory Test	Turn the lane keeping assistance torque to 0.

Lane Keeping Assistance (LKA) Verification and Validation Acceptance Criteria:

[OPTIONAL: For each technical safety requirement, identify both the verification and validation acceptance criteria. "Validation" asks whether or not you chose the appropriate parameters. "Verification" involves testing to make sure the vehicle behaves as expected when the parameter value is crossed. There is not necessarily one right answer. Look at your verification and validation acceptance criteria from the functional safety concept for inspiration.]

Refinement of the System Architecture

[Instructions: Include the refined system architecture. Hint: The refined system architecture should include the system architecture from the end of the technical safety lesson, including all of the ASIL labels.]

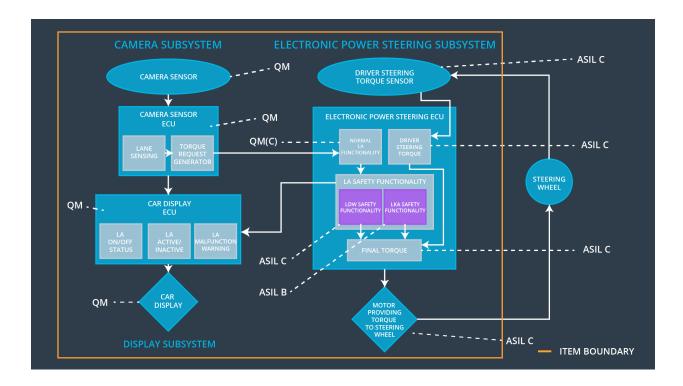

Allocation of Technical Safety Requirements to Architecture Elements

[Instructions: We already included the allocation as part of the technical requirement tables. Here you can state that for this particular item, all technical safety requirements are allocated to the Electronic Power Steering ECU]

For this particular item, all technical safety requirements are allocated to the Electronic Power Steering ECU.

Warning and Degradation Concept

[Instructions: We've already identified that for any system malfunction, the lane assistance functions will be turned off and the driver will receive a warning light indication. The technical safety requirements have not changed how functionality will be degraded or what the warning will be.

So in this case, the warning and degradation concept is the same for the technical safety requirements as for the functional safety requirements. You can copy the functional safety warning and degradation concept here.

Oftentimes, a technical safety analysis will lead to a more detailed warning and degradation concept.

Mode Degradation invoked?	ID	Degradation Mode	Trigger for Degradation		Driver Warning
---------------------------	----	---------------------	----------------------------	--	----------------

		Mode		
WDC-01	Turn off the functionality	The lane departure oscillating torque amplitude or frequency is above Max_Torque_A mplitude or Max_Torque_Fr equency.	Y	Turn on a warning light on the dashboard when the system malfunctions.
WDC-02	Turn off the functionality	The lane keeping assistance torque is applied for more than Max_Duration	Y	Turn on a warning light on the dashboard when the system malfunctions.