

Totally Integrated Automation Portal

PLC_1 [CPU 1214C DC/DC/DC]

PLC_1

Project information

Name	PLC_1	Author	Korisnik	Comment	
Slot	1	Rack	0		

Catalog information

Short designation	CPU 1214C DC/DC/DC	Description	Work memory 100 KB; 24VDC power supply with DI14 x 24VDC SINK/ SOURCE, DQ10 x 24VDC and AI2 on board; 6 high-speed counters and 4 pulse outputs on board; signal board expands on-board I/O; up to 3 communication modules for serial communication; up to 8 signal modules for I/O expansion; 0.04 ms/1000 instructions; PROFINET interface for programming, HMI and PLC to PLC communication	Article number	6ES7 214-1AG40-0XB0
-------------------	--------------------	-------------	--	----------------	---------------------

Firmware version

V4.2

Connection resources\

	Station resources - Reserved - Maximum	Station resources - Reserved - Configured	Station resources - Dynamic - Configured	Module resources - PLC_1 [CPU 1214C DC/DC/DC] - Configured	Module resources - CM 1243-5 [CM 1243-5] - Configured	Module resources - CM 1241 (RS485)_1 [CM 1241 (RS485)] - Configured
Maximum number of resources:		62	6	68	6	0
	Maximum	Configured	Configured	Configured	Configured	Configured
PG communication:	4	-	-	-	-	-
HMI communication:	12	2	0	2	0	0
S7 communication:	8	0	0	0	0	0
Open user communication:	8	0	0	0	0	0
Web communication:	30	-	-	-	-	-
Other communication:	-	-	0	0	0	0
Total resources used:		2	0	2	0	0
Available resources:		60	6	66	6	0

Overview of addresses\Overview of addresses\Overview of addresses

Inputs	True	Outputs	True	Address gaps	False
Slot	True				

Type	Addr. from	Addr. to	Module	PIP	Device name	Device number	Size	Master / IO system	Rack	Slot
I	0	1	DI 14/DQ 10_1	Automatic update	PLC_1 [CPU 1214C DC/DC/DC]	-	2 Bytes	-	0	1 1
O	0	1	DI 14/DQ 10_1	Automatic update	PLC_1 [CPU 1214C DC/DC/DC]	-	2 Bytes	-	0	1 1
I	64	67	AI 2_1	Automatic update	PLC_1 [CPU 1214C DC/DC/DC]	-	4 Bytes	-	0	1 2
I	1000	1003	HSC_1	Automatic update	PLC_1 [CPU 1214C DC/DC/DC]	-	4 Bytes	-	0	1 16
I	1004	1007	HSC_2	Automatic update	PLC_1 [CPU 1214C DC/DC/DC]	-	4 Bytes	-	0	1 17
I	1008	1011	HSC_3	Automatic update	PLC_1 [CPU 1214C DC/DC/DC]	-	4 Bytes	-	0	1 18
I	1012	1015	HSC_4	Automatic update	PLC_1 [CPU 1214C DC/DC/DC]	-	4 Bytes	-	0	1 19
I	1016	1019	HSC_5	Automatic update	PLC_1 [CPU 1214C DC/DC/DC]	-	4 Bytes	-	0	1 20
I	1020	1023	HSC_6	Automatic update	PLC_1 [CPU 1214C DC/DC/DC]	-	4 Bytes	-	0	1 21
O	1000	1001	Pulse_1	Automatic update	PLC_1 [CPU 1214C DC/DC/DC]	-	2 Bytes	-	0	1 32
O	1002	1003	Pulse_2	Automatic update	PLC_1 [CPU 1214C DC/DC/DC]	-	2 Bytes	-	0	1 33
O	1004	1005	Pulse_3	Automatic update	PLC_1 [CPU 1214C DC/DC/DC]	-	2 Bytes	-	0	1 34
O	1006	1007	Pulse_4	Automatic update	PLC_1 [CPU 1214C DC/DC/DC]	-	2 Bytes	-	0	1 35
O	2	2	DQ 8x24VDC_1	Automatic update	PLC_1 [CPU 1214C DC/DC/DC]	-	1 Bytes	-	0	2
I	68	83	AI 8x13BIT_1	Automatic update	PLC_1 [CPU 1214C DC/DC/DC]	-	16 Bytes	-	0	3
O	64	71	AQ 4x14BIT_1	Automatic update	PLC_1 [CPU 1214C DC/DC/DC]	-	8 Bytes	-	0	4

Totally Integrated Automation Portal

PLC_1 [CPU 1214C DC/DC/DC] / Program blocks

Main [OB1]

Main Properties

General

Name	Main	Number	1	Type	OB	Language	LAD
Numbering	Automatic						

Information

Title	"Main Program Sweep (Cycle)"	Author		Comment		Family	
Version	0.1	User-defined ID					

Name	Data type	Default value
▼ Input		
Initial_Call	Bool	
Remanence	Bool	
Temp		
Constant		

Network 1:

%FC50

"FC_OPC_NAM"

EN

ENO

Network 2:

%FC60

"FC_UPR_MOTOROM"

EN

ENO

Network 3:

%FC70

"FC_HMI"

EN

ENO

Network 4:

%FC80

"FC_AUTOMATIZACUA"

EN

ENO

Totally Integrated Automation Portal

PLC_1 [CPU 1214C DC/DC/DC] / Program blocks

DB_UDT [DB2]

DB_UDT Properties

General

Name	DB_UDT	Number	2	Type	DB	Language	DB
Numbering	Automatic						

Information

Title		Author		Comment		Family	
Version	0.1	User-defined ID					

Name	Data type	Start value	Retain
▼ Static			
UDT_SYS	"UDT_M_sFC"		False

Totally Integrated Automation Portal

PLC_1 [CPU 1214C DC/DC/DC] / Program blocks

FC_SYS_BLOK [FC1]

FC_SYS_BLOK Properties

General

Name	FC_SYS_BLOK	Number	1	Type	FC	Language	SCL
Numbering	Automatic						

Information

Title		Author		Comment		Family	
Version	0.1	User-defined ID					

Name	Data type	Default value
▼ Input		
M_START_DES_DI	Bool	
M_START_LIV_DI	Bool	
M_STOP_DI	Bool	
M_IZBOR_OZICENJA_DI	Int	
M_NACIN_STARTA_DI	Int	
M_E-STOP_DI	Bool	
▼ Output		
M_DES_DO	Bool	
M_LIV_DO	Bool	
M_DIRECT_START_DO	Bool	
M_SOFT_START_DO	Bool	
M_ZVIJEZDA_START_DO	Bool	
M_TROKUT_START_DO	Bool	
M_ALARM_LMP	Bool	
M_GRE_SUS_DO	Bool	
▼ InOut		
UDT_VARIJEBLE	"UDT_M_sFC"	
Temp		
Constant		
▼ Return		
FC_SYS_BLOK	Void	

```
0001 //STOP
0002 //
0003 #UDT_VARIJEBLE.M_STOP_IO := #M_STOP_DI OR #"M_E-STOP_DI";
0004 //GREŠKA
0005 //GREŠKA SMJERA
0006 //
0007 #UDT_VARIJEBLE.M_GRESKA_SMJERA_IO := #UDT_VARIJEBLE.M_DES_IO AND #UDT_VARIJEBLE.M_LIV_IO;
0008 //GREŠKA OŽIČENJA
0009 //
0010 #UDT_VARIJEBLE.M_GRESKA_OZICENJA_IO := #M_TROKUT_START_DO AND #M_ZVIJEZDA_START_DO;
0011 //GREŠKA NAČINA STARTA
0012 //
0013 #UDT_VARIJEBLE.M_GRESKA_START_IO := #M_DIRECT_START_DO AND #M_SOFT_START_DO;
0014 //GREŠKA E-STOP
0015 //
0016 #UDT_VARIJEBLE."M_GRESKA_E-STOP_IO" := #"M_E-STOP_DI";
0017 #M_ALARM_LMP := #"M_E-STOP_DI";
0018 //SVE GRESKE
0019 //
0020 #UDT_VARIJEBLE.M_GRESKA_IO :=
0021     #UDT_VARIJEBLE.M_GRESKA_SMJERA_IO OR
0022     #UDT_VARIJEBLE.M_GRESKA_OZICENJA_IO OR
0023     #UDT_VARIJEBLE.M_GRESKA_START_IO OR
0024     #UDT_VARIJEBLE."M_GRESKA_E-STOP_IO";
0025
0026
0027 //
0028 //ODABIR SMIJERA MOTORA
0029 //
0030 //Pokretanje motora desno
0031 "R_TRIG_DB"(CLK := #M_START_DES_DI,
0032             Q => #UDT_VARIJEBLE.M_TRIG_DES);
0033 #UDT_VARIJEBLE.M_DES_IO :=
0034 (
0035     (#UDT_VARIJEBLE.M_TRIG_DES AND NOT #UDT_VARIJEBLE.M_LIV_IO)
0036 OR
0037     #UDT_VARIJEBLE.M_DES_IO
0038 )
0039 AND NOT #UDT_VARIJEBLE.M_STOP_IO
0040 AND NOT #UDT_VARIJEBLE.M_GRESKA_IO;
0041 //
0042 //Pokretanje motora lijevo
0043 "R_TRIG_DB_1"(CLK := #M_START_LIV_DI,
0044              Q => #UDT_VARIJEBLE.M_TRIG_LIV);
0045 #UDT_VARIJEBLE.M_LIV_IO :=
0046 (
0047     (#UDT_VARIJEBLE.M_TRIG_LIV AND NOT #UDT_VARIJEBLE.M_DES_IO)
0048 OR
```

Totally Integrated Automation Portal		
<pre>0049 #UDT_VARIJEBLE.M_LIV_IO) 0050 AND NOT #UDT_VARIJEBLE.M_STOP_IO 0051 AND NOT #UDT_VARIJEBLE.M_GRESKA_IO; 0052 // 0053 //ODABIR NAČINA STARTA MOTORA 0054 // 0055 #M_DIRECT_START_DO := FALSE; 0056 #M_SOFT_START_DO := FALSE; 0057 IF (#UDT_VARIJEBLE.M_DES_IO OR #UDT_VARIJEBLE.M_LIV_IO) THEN 0058 CASE #M_IZBOR_OZICENJA_DI OF 0059 1: // DIREKTAN NAČIN STARTA 0060 #M_DIRECT_START_DO := TRUE; 0061 #M_SOFT_START_DO := FALSE; 0062 ; 0063 2: // SOFT NAČIN STARTA 0064 #M_SOFT_START_DO := TRUE; 0065 #M_DIRECT_START_DO := FALSE; 0066 ; 0067 ELSE // GREŠKA 0068 #M_DIRECT_START_DO := FALSE; 0069 #M_SOFT_START_DO := FALSE; 0070 ; 0071 END_CASE; 0072 ELSE 0073 //NIJE ODABRAN SMIJER 0074 // 0075 #M_DIRECT_START_DO := FALSE; 0076 #M_SOFT_START_DO := FALSE; 0077 0078 END_IF; 0079 //ODABIR OŽIČENJA 0080 // 0081 #M_TROKUT_START_DO := FALSE; 0082 #M_ZVIJEZDA_START_DO := FALSE; 0083 // TAJMER ZA ZVIJEZDA-TROKUT 0084 "IEC_Timer_ZVI_TRO_DB".TON(0085 IN := (#M_NACIN_STARTA_DI = 3) 0086 AND (#M_DIRECT_START_DO OR #M_SOFT_START_DO) 0087 AND (#UDT_VARIJEBLE.M_DES_IO OR #UDT_VARIJEBLE.M_LIV_IO), 0088 PT := #UDT_VARIJEBLE.M_TON_ZVI_TRO_PT, 0089 Q => #UDT_VARIJEBLE.M_TON_ZVI_TRO_OUT 0090); 0091 IF (#M_DIRECT_START_DO OR #M_SOFT_START_DO) THEN 0092 CASE #M_NACIN_STARTA_DI OF 0093 1: // POKRETANJE MOTORA TROKUTOM 0094 #M_TROKUT_START_DO := TRUE; 0095 #M_ZVIJEZDA_START_DO := FALSE; 0096 ; 0097 2: // POKRETANJE MOTORA ZVIJEZDA 0098 #M_TROKUT_START_DO := FALSE; 0099 #M_ZVIJEZDA_START_DO := TRUE; 0100 ; 0101 3: // POKRETANJE MOTORA ZVIJEZDA-TROKUT 0102 0103 IF NOT #UDT_VARIJEBLE.M_TON_ZVI_TRO_OUT THEN 0104 // Prvo radi ZVIJEZDA 0105 #M_ZVIJEZDA_START_DO := TRUE; 0106 #M_TROKUT_START_DO := FALSE; 0107 ELSE 0108 // Nakon 1 sekunde prebaci na TROKUT 0109 #M_ZVIJEZDA_START_DO := FALSE; 0110 #M_TROKUT_START_DO := TRUE; 0111 ; 0112 END_IF; 0113 ELSE // GREŠKA 0114 #M_TROKUT_START_DO := FALSE; 0115 #M_ZVIJEZDA_START_DO := FALSE; 0116 ; 0117 END_CASE; 0118 ELSE 0119 //NIJE ODABRAN NAČIN POKRETANJA MOTORA 0120 // 0121 #M_TROKUT_START_DO := FALSE; 0122 #M_ZVIJEZDA_START_DO := FALSE; 0123 0124 END_IF; 0125 0126 //IZLAZ ZA GREŠE 0127 // 0128 #M_GRE_SUS_DO := #UDT_VARIJEBLE.M_GRESKA_IO; 0129 //IZLAZ ZA POKRETANJE MOTORA U DESNU STRANU 0130 // 0131 #M_DES_DO := #UDT_VARIJEBLE.M_DES_IO; 0132 //IZLAZ ZA POKRETANJE MOTORA U LIJEVU STARNU 0133 // 0134 #M_LIV_DO := #UDT_VARIJEBLE.M_LIV_IO; 0135 0136</pre>		


PLC_1 [CPU 1214C DC/DC/DC] / Program blocks

FC_UPR_MOTOROM [FC60]

FC_UPR_MOTOROM Properties							
General							
Name	FC_UPR_MOTOROM	Number	60	Type	FC	Language	LAD
Numbering	Manual						
Information							
Title	FC_UPR_MOTOROM[60]	Author		Comment	Blok upravljanja motorom	Family	
Version	0.1	User-defined ID					

Name	Data type	Default value
Input		
Output		
InOut		
Temp		
Constant		
▼ Return		
FC_UPR_MOTOROM	Void	


Network 1: Sistemski blok motora

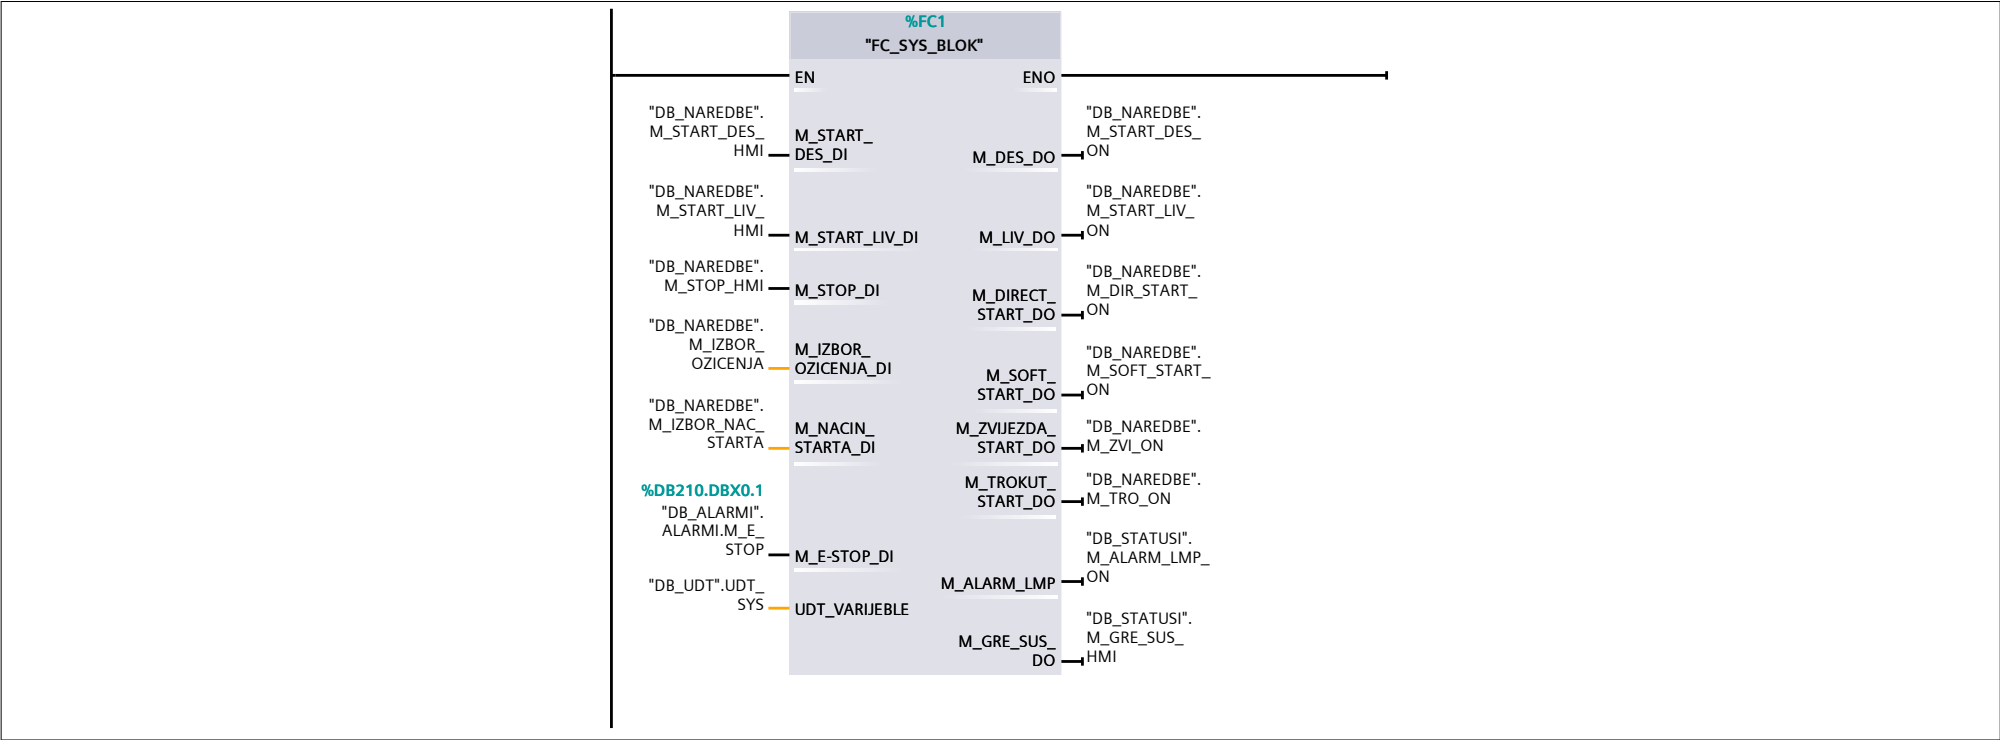


Network 2: Pokretanje motora desno



Network 3: Pokretanje motora lijevo

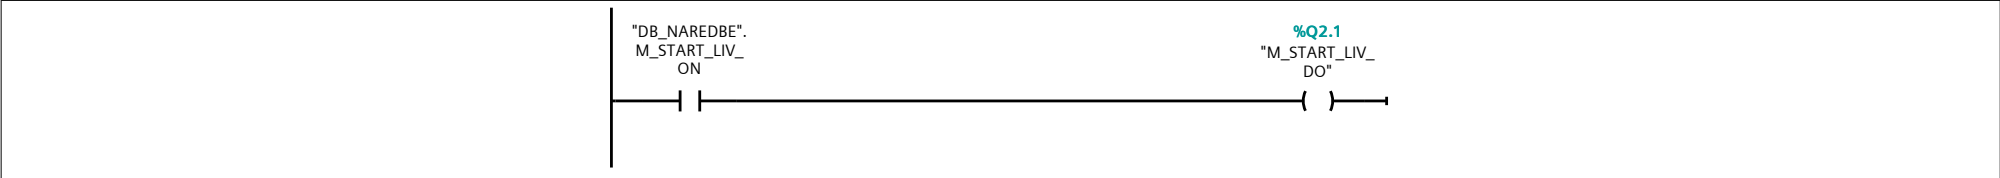

Network 4: Uključenje/Isključenje kočnice lampa

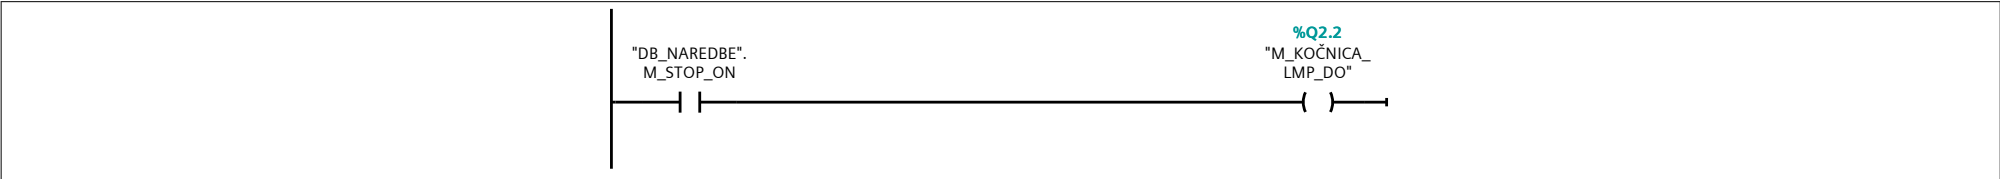

Network 5: Izlaz izbora ožičenja

Totally Integrated Automation Portal		
"DB_NAREDBE". M_DIR_START_ ON %Q2.3 "M_DIRECT_ START_DO" "DB_NAREDBE". M_SOFT_START_ ON %Q2.5 "M_SOFT_ START_DO"		
Network 6: Izlaz načina starta		
"DB_NAREDBE". M_ZVI_ON %Q2.6 "M_ZVIJEZDA_DO" "DB_NAREDBE". M_TRO_ON %Q2.7 "M_TROKUT_DO" "DB_NAREDBE". M_ZVI_TRO_ ON %Q2.4 "M_ZVIJEZDA_ TROKUT_DO"		
Network 7: Uključenje/Isključenje alarma lampa		
"DB_STATUSI". M_ALARM_LMP_ ON %Q0.0 "ALARM_LMP_DO"		

Totally Integrated Automation Portal

PLC_1 [CPU 1214C DC/DC/DC] / Program blocks

DB_NAREDBE [DB200]

DB_NAREDBE Properties

General

Name	DB_NAREDBE	Number	200	Type	DB	Language	DB
Numbering	Manual						

Information

Title		Author		Comment		Family	
Version	0.1	User-defined ID					


Name	Data type	Start value	Retain
▼ Static			
M_IZBOR_OZICENJA	Int	0	False
M_IZBOR_NAC_STARTA	Int	0	False
M_START_DES_ON	Bool	false	False
M_START_LIV_ON	Bool	false	False
M_STOP_ON	Bool	false	False
M_DIR_START_ON	Bool	false	False
M_SOFT_START_ON	Bool	false	False
M_ZVI_TRO_ON	Bool	false	False
M_TRO_ON	Bool	false	False
M_ZVI_ON	Bool	false	False
M_START_DES_DUGME_HMI	Bool	false	False
M_START_DES_HMI	Bool	false	False
M_START_LIV_DUGME_HMI	Bool	false	False
M_START_LIV_HMI	Bool	false	False
M_STOP_DUGME_HMI	Bool	false	False
M_STOP_HMI	Bool	false	False
M_DIRECT_HMI	Bool	false	False
M_SOFT_HMI	Bool	false	False
M_ZVI_TRO_HMI	Bool	false	False
M_ZVI_HMI	Bool	false	False
M_TRO_HMI	Bool	false	False
M_AUTO_KOCNICA_HMI	Bool	false	False
M_KOCNICA_ON_HMI	Bool	false	False
M_KOCNICA_OFF_HMI	Bool	false	False
M_KOCNICA_HMI_INP	Int	0	False
M_KOCNICA_ON_AUX	Bool	false	False
M_NAC_RAD_AUTO	Bool	false	False
M_NAC_RAD_DUGME	Bool	false	False
M_NAC_RADA_AUX	Bool	false	False
M_LEVEL_1_AUX	Bool	false	False
M_LEVEL_2_AUX	Bool	false	False
M_LEVEL_3_AUX	Bool	false	False
M_LEVEL_1_DUGME	Bool	false	False
M_LEVEL_2_DUGME	Bool	false	False
M_LEVEL_3_DUGME	Bool	false	False
M_START_DES_AUTO	Bool	false	False
M_START_DES_AUTO_AUX	Bool	false	False
M_START_LIV_AUTO	Bool	false	False
M_START_LIV_AUTO_AUX	Bool	false	False
M_STOP_LIVO_AUTO	Bool	false	False
M_STOP_DESNO_AUTO	Bool	false	False
M_LEVEL_1_HMI	Bool	false	False
M_LEVEL_2_HMI	Bool	false	False
M_LEVEL_3_HMI	Bool	false	False
M_START_AUTO_CIK	Bool	false	False
M_AUTO_CIKLUS_STOP	Bool	false	False
RESET_AUTO_CIKLUS	Bool	false	False
M_RES_AUTO_CIK_DES	Bool	false	False
M_RES_AUTO_CIK_STOP	Bool	false	False
M_RES_AUTO_CIK_DUGME	Bool	false	False
M_RES_AUTO_CIK_HMI	Bool	false	False

PLC_1 [CPU 1214C DC/DC/DC] / Program blocks


FC_HMI [FC70]

FC_HMI Properties							
General							
Name	FC_HMI	Number	70	Type	FC	Language	LAD
Numbering	Manual						
Information							
Title	FC_HMI[FC70]	Author		Comment	Blok komunikacije sa HMI	Family	
Version	0.1	User-defined ID					
Name				Data type		Default value	
Input							
Output							
InOut							
Temp							
Constant							
▼ Return							
FC_HMI				Void			


Network 1: Blokada promjene načina starta i ožičenja dok motor radi

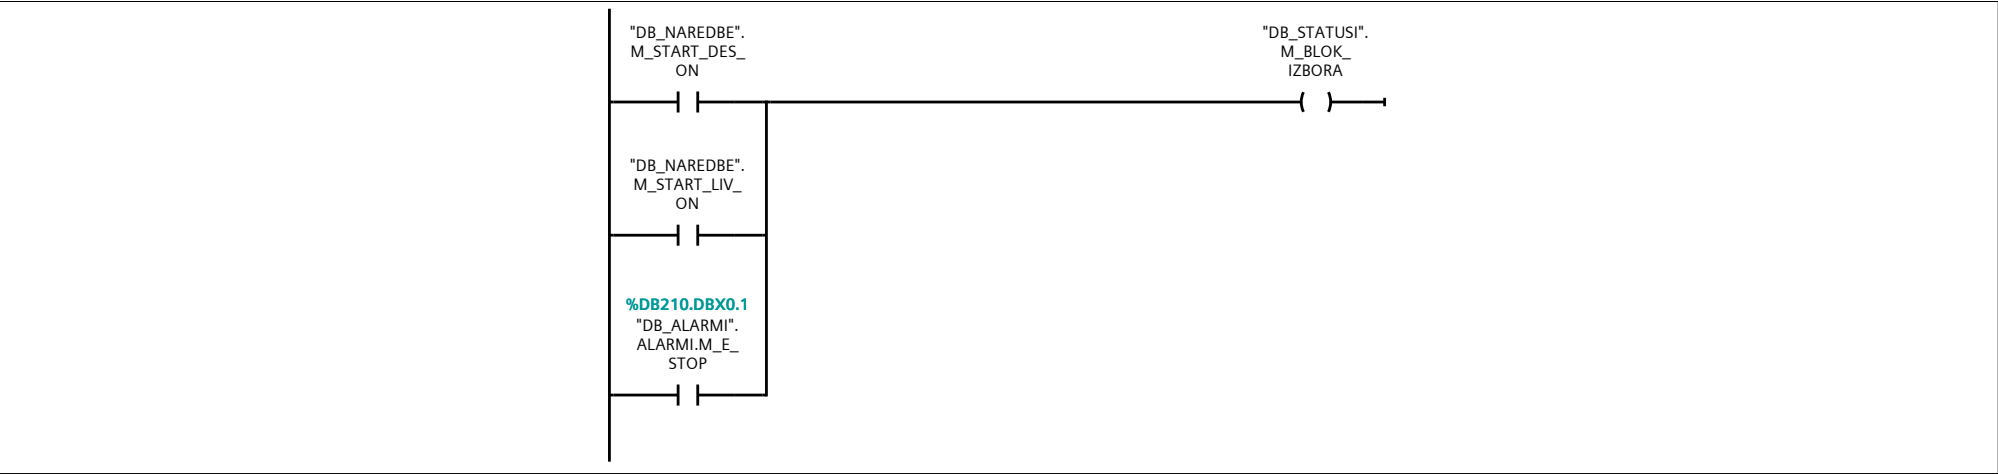

Network 2: Odabir načina ožičenja

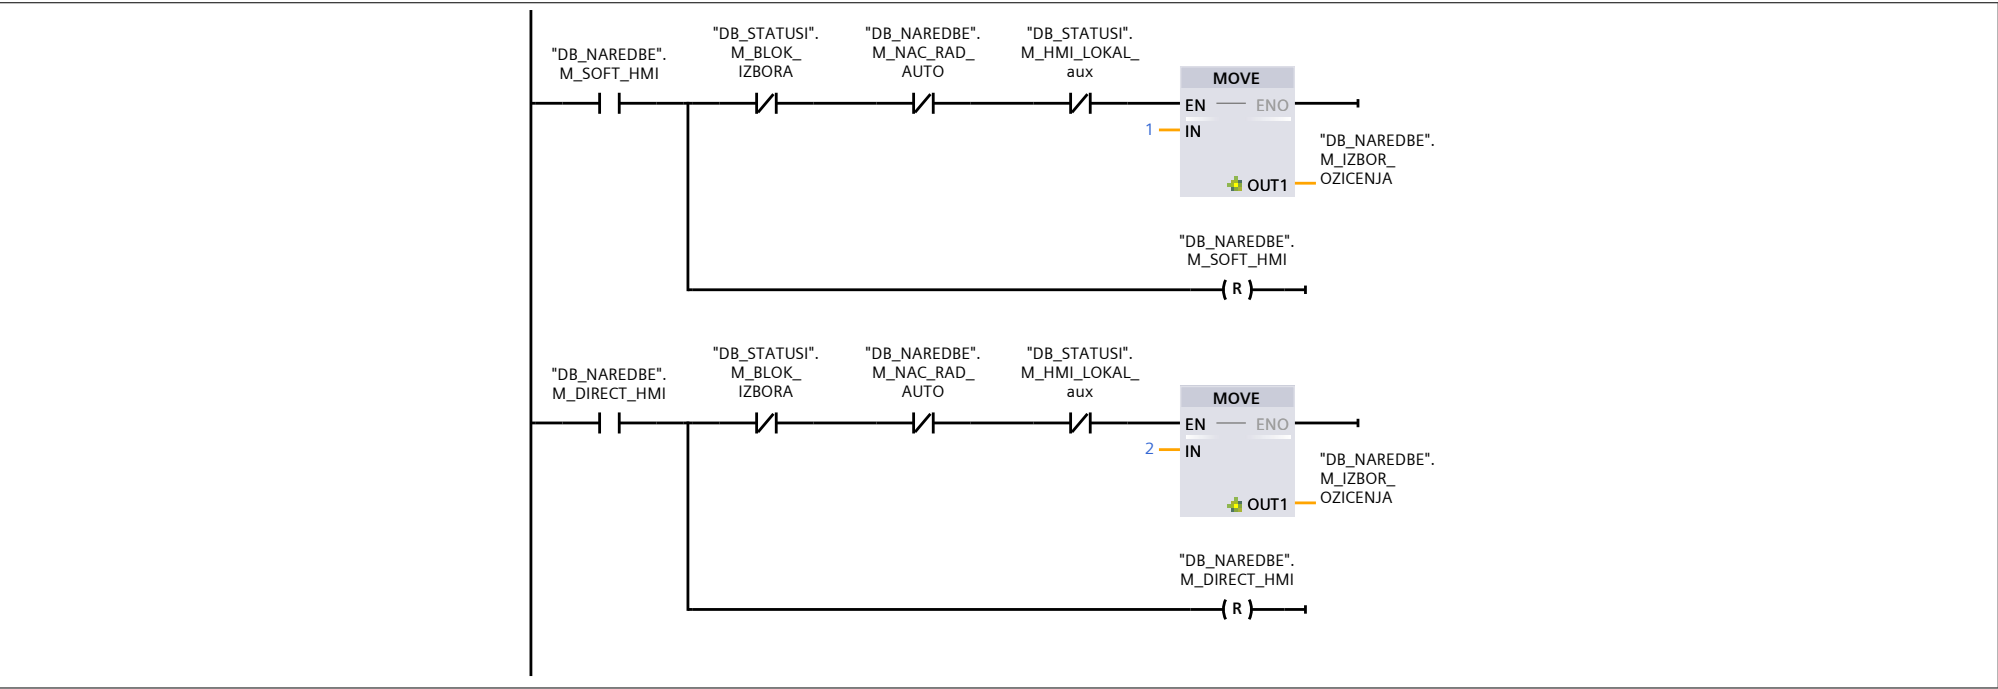


Network 3: Odabir načina starta motora

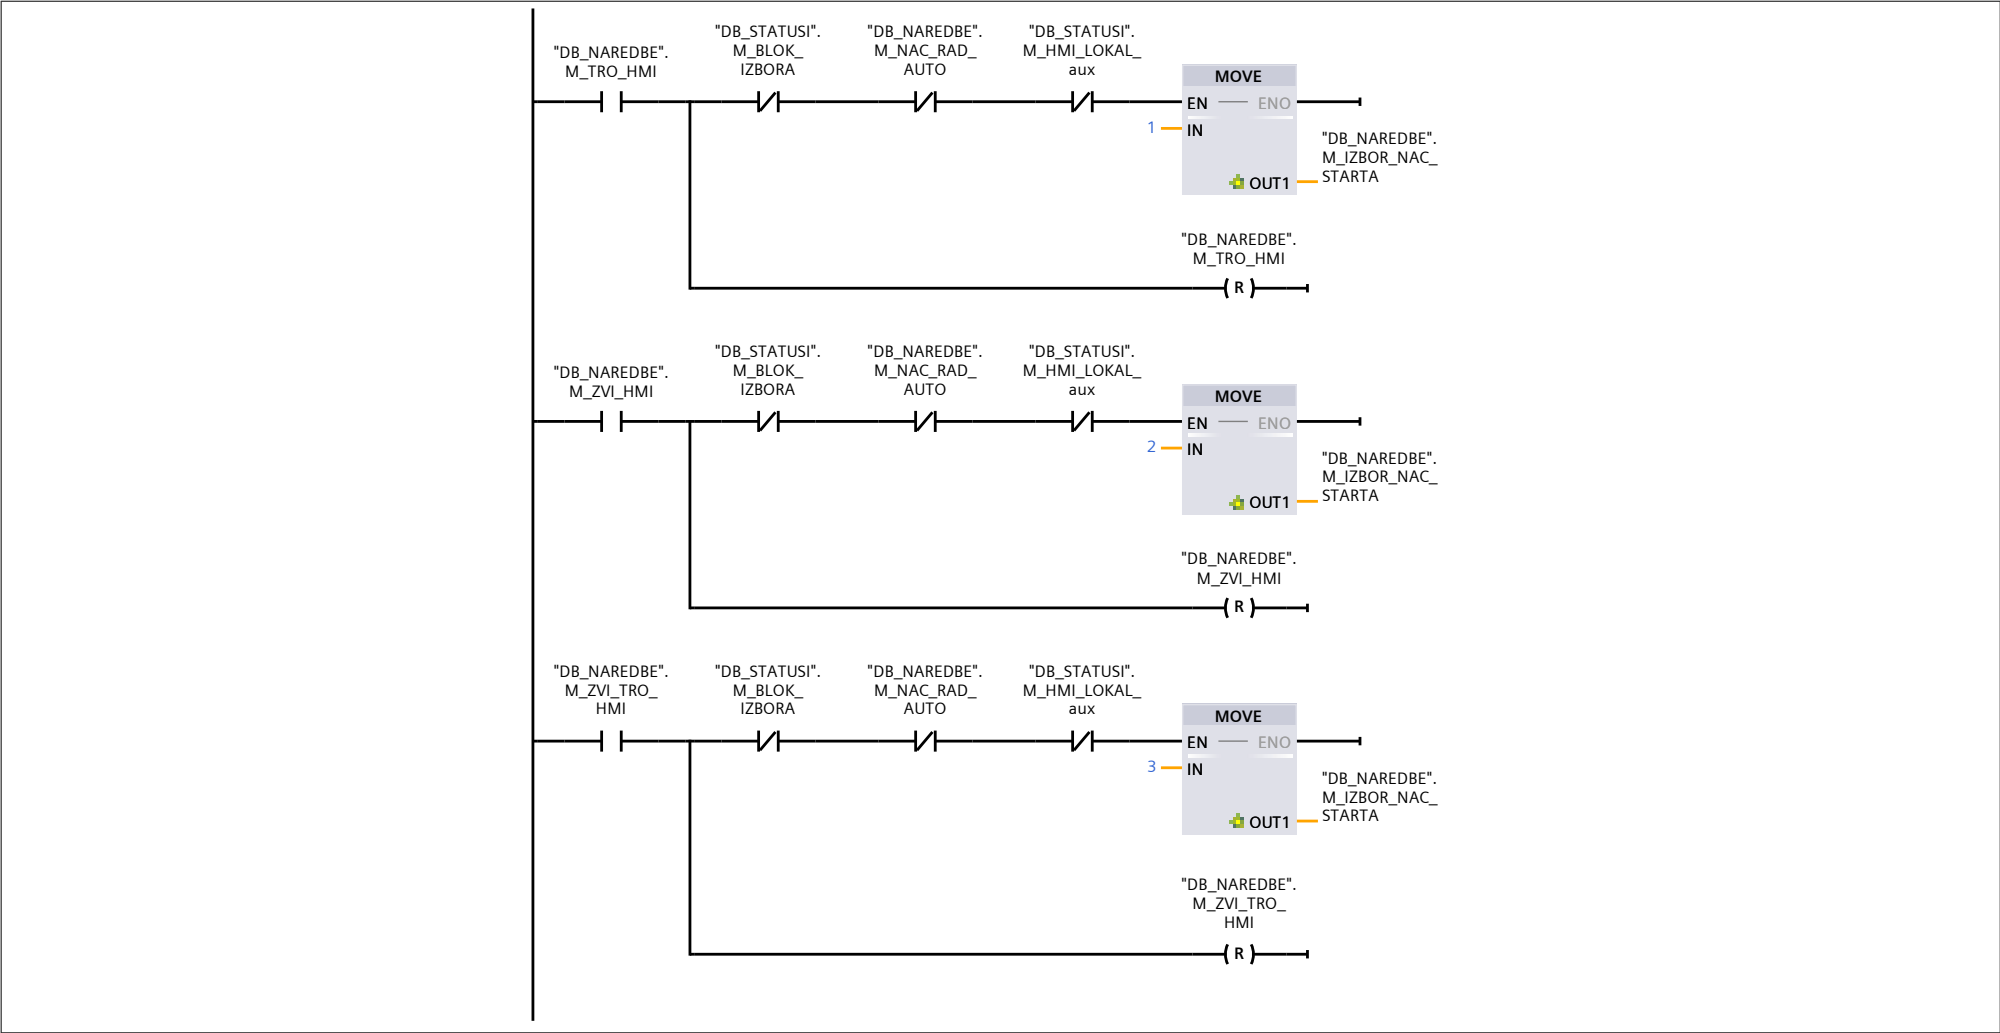


Network 4: Dugme za odabir načina rada RUČNO/AUTOMATSKI




Network 5: Odabir načina rada RUČNO/AUTOMATSKI Toggle button

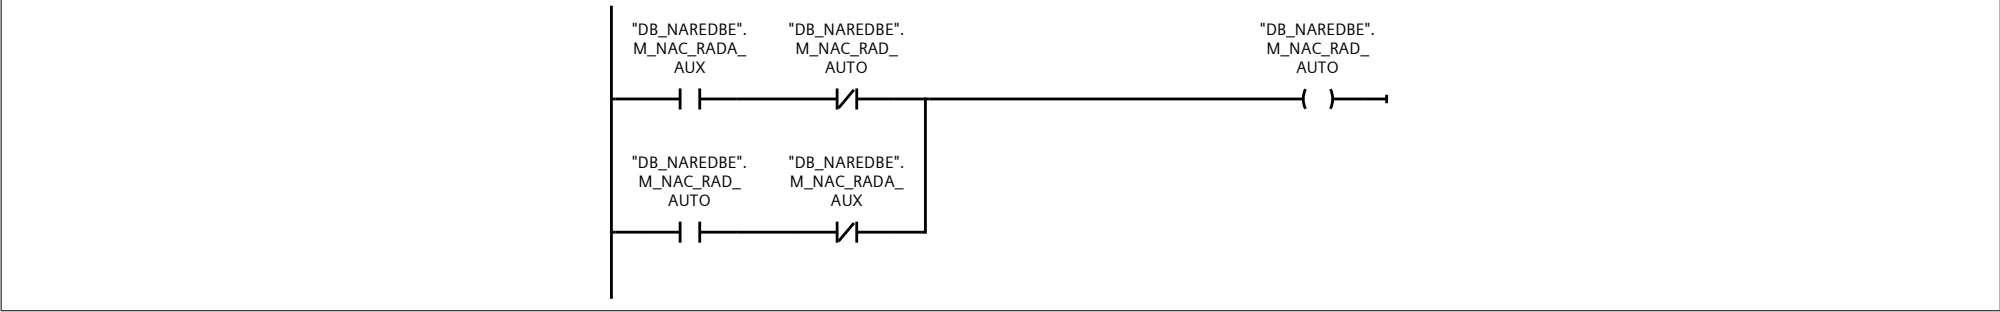


Network 6: Dugme automatskog ciklusa LEVEL 1

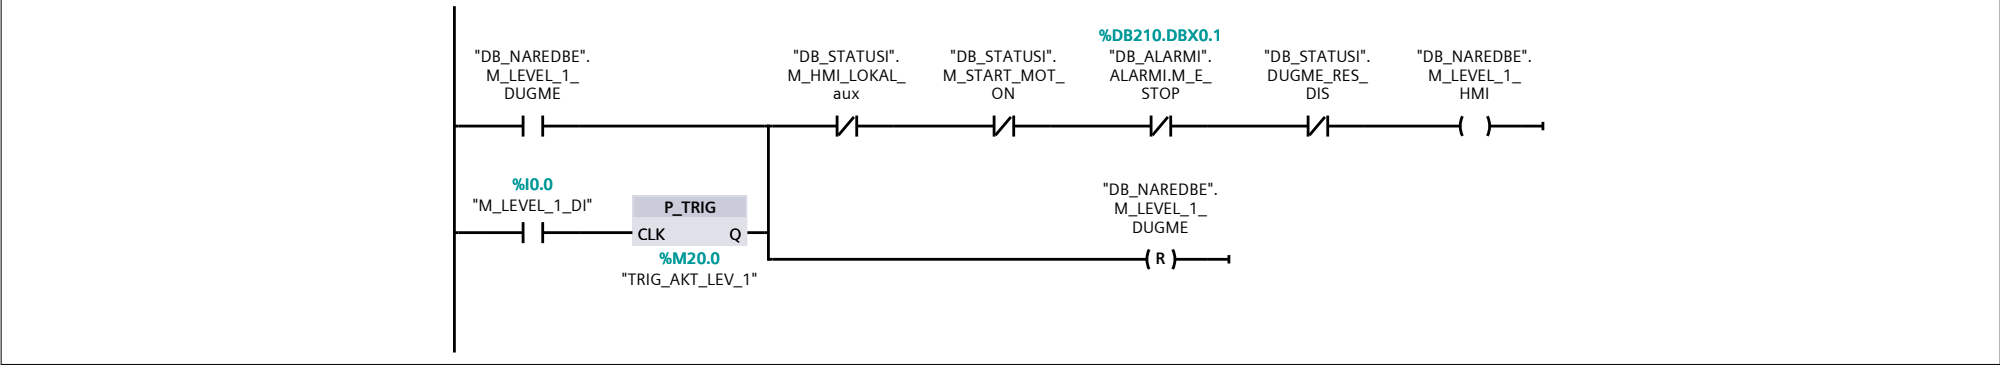


Network 7: Dugme automatskog ciklusa LEVEL 2

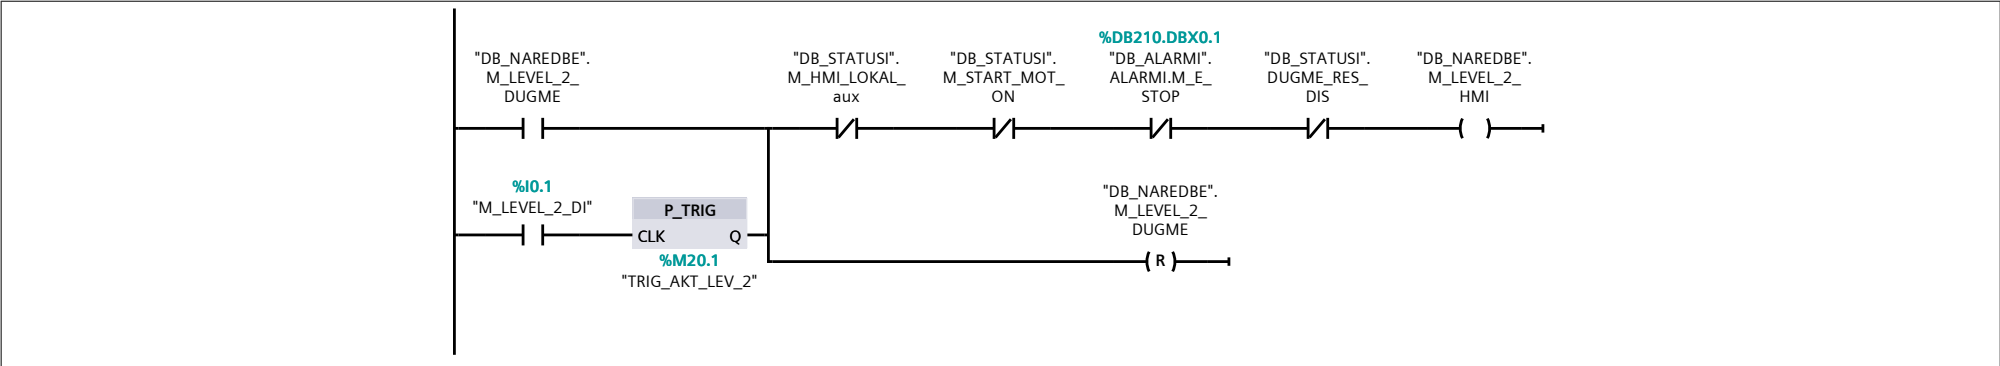


Network 8: Dugme automatskog ciklusa LEVEL 3

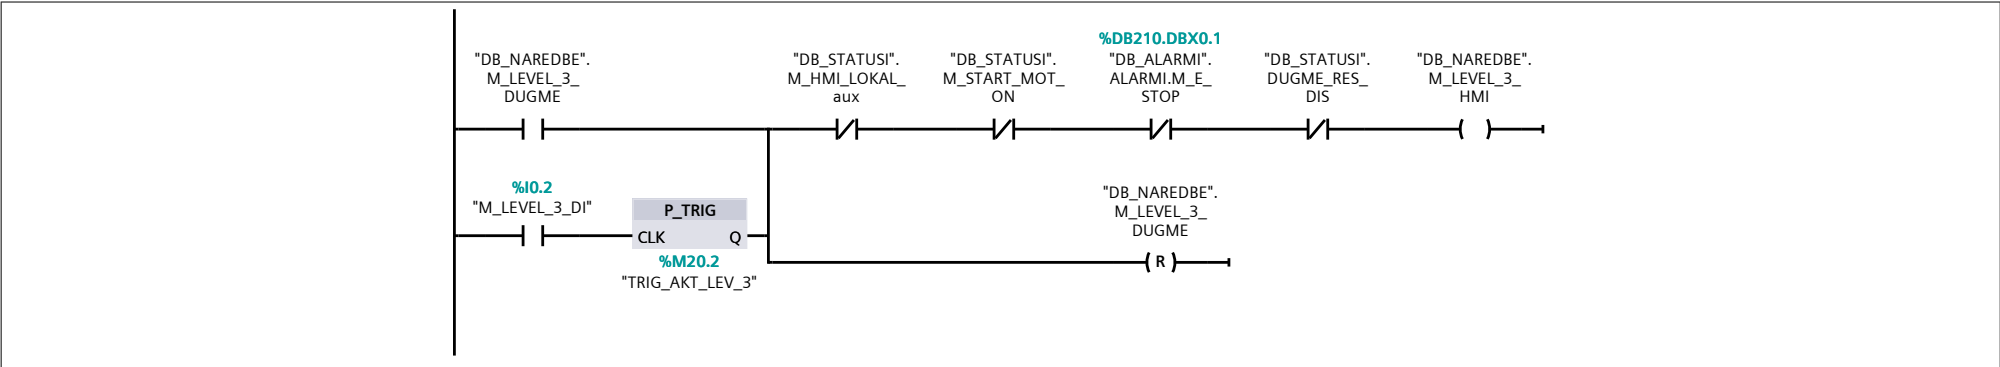


Network 9: Dugme za reset dizala u početnu poziciju

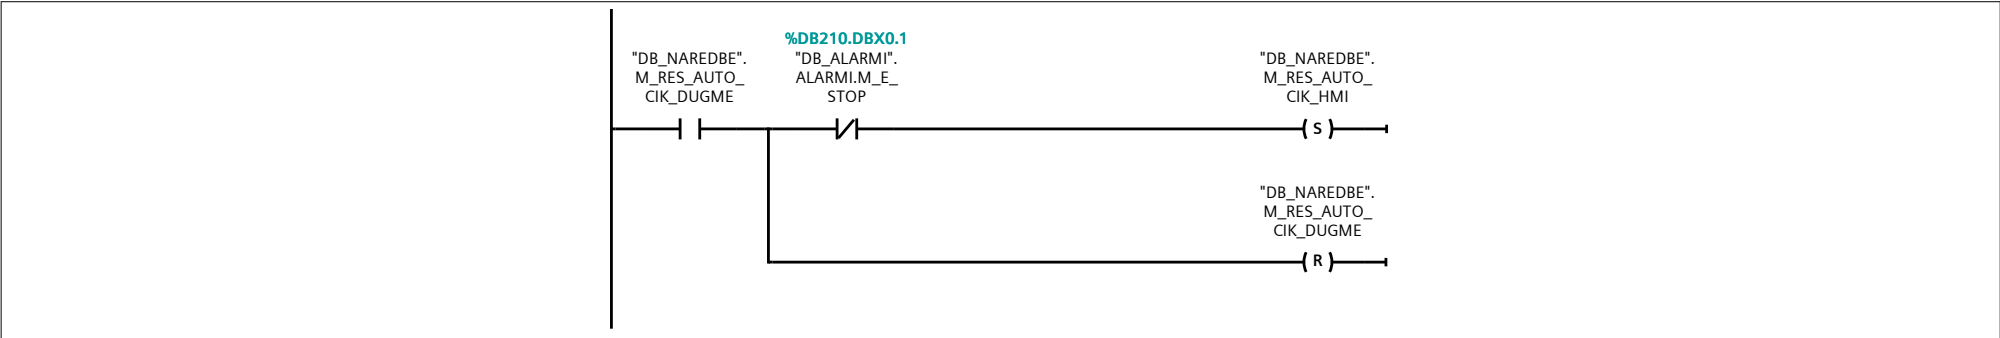


Network 10: HMI - uključenje motora u desnom smjeru (dolje)

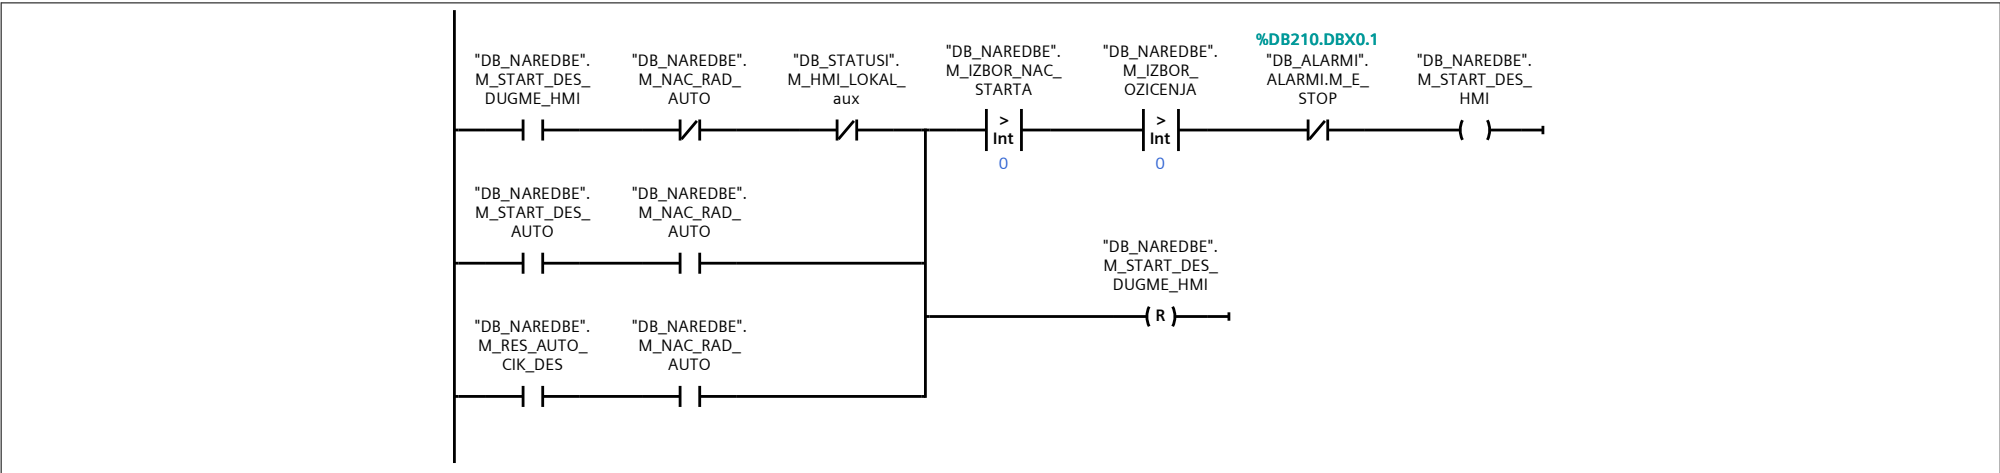

Network 11: HMI - uključenje motora u lijevom smjeru (gore)

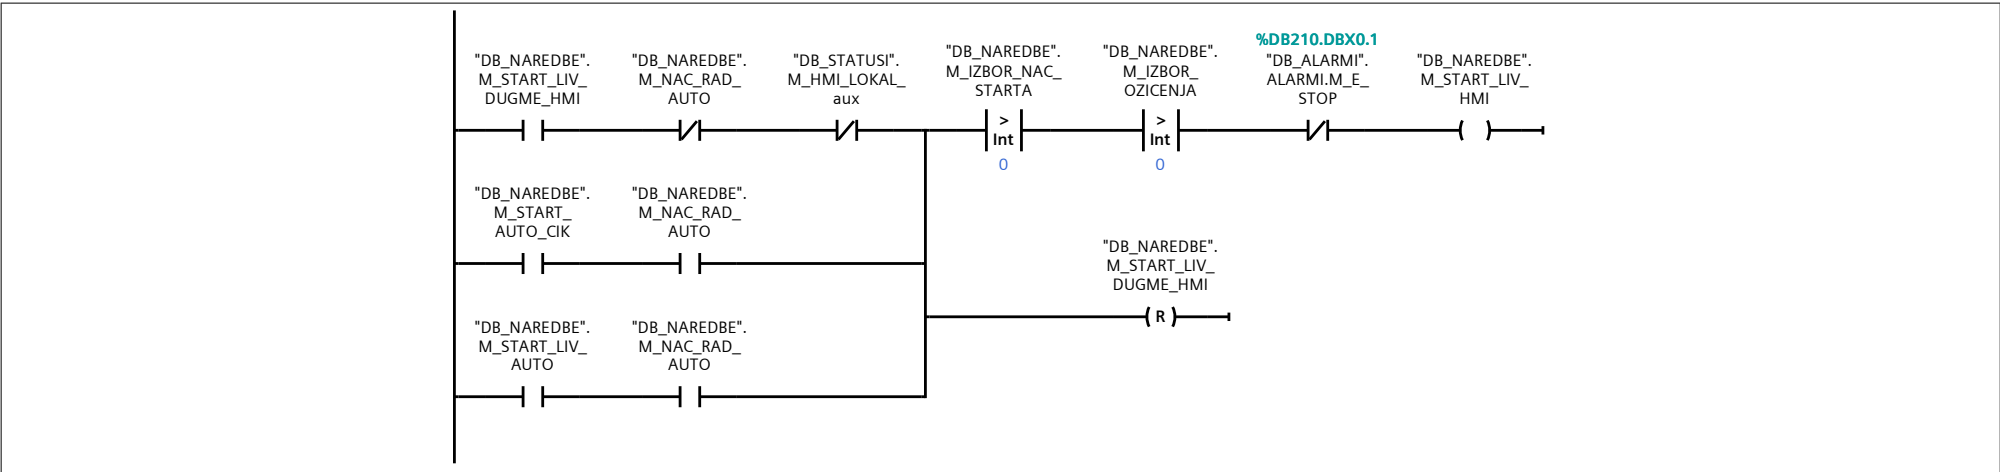


Network 12: HMI - isključenje motora

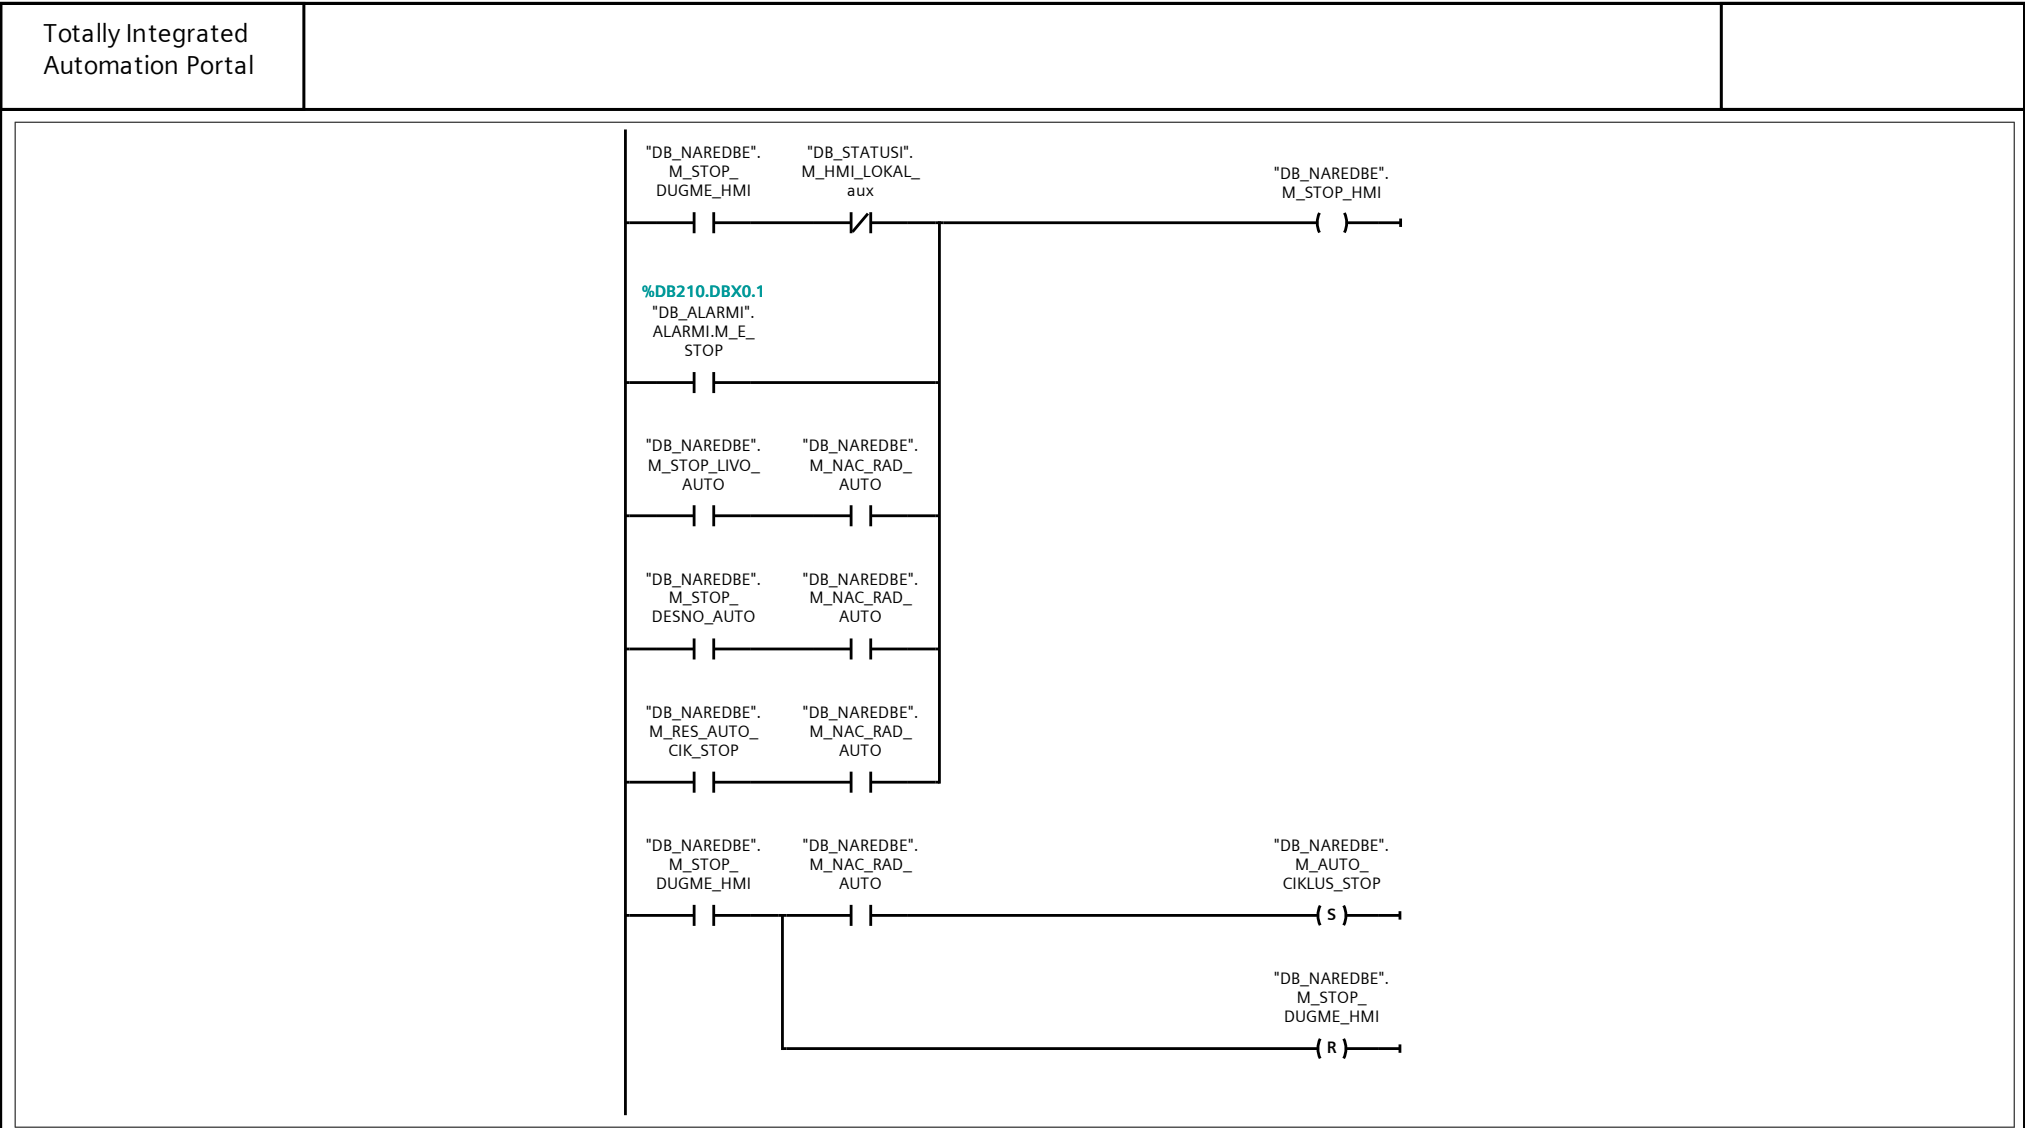


Network 13: Vizualizacija HMI

Network 13: Vizualizacija HMI (1.1 / 2.1)

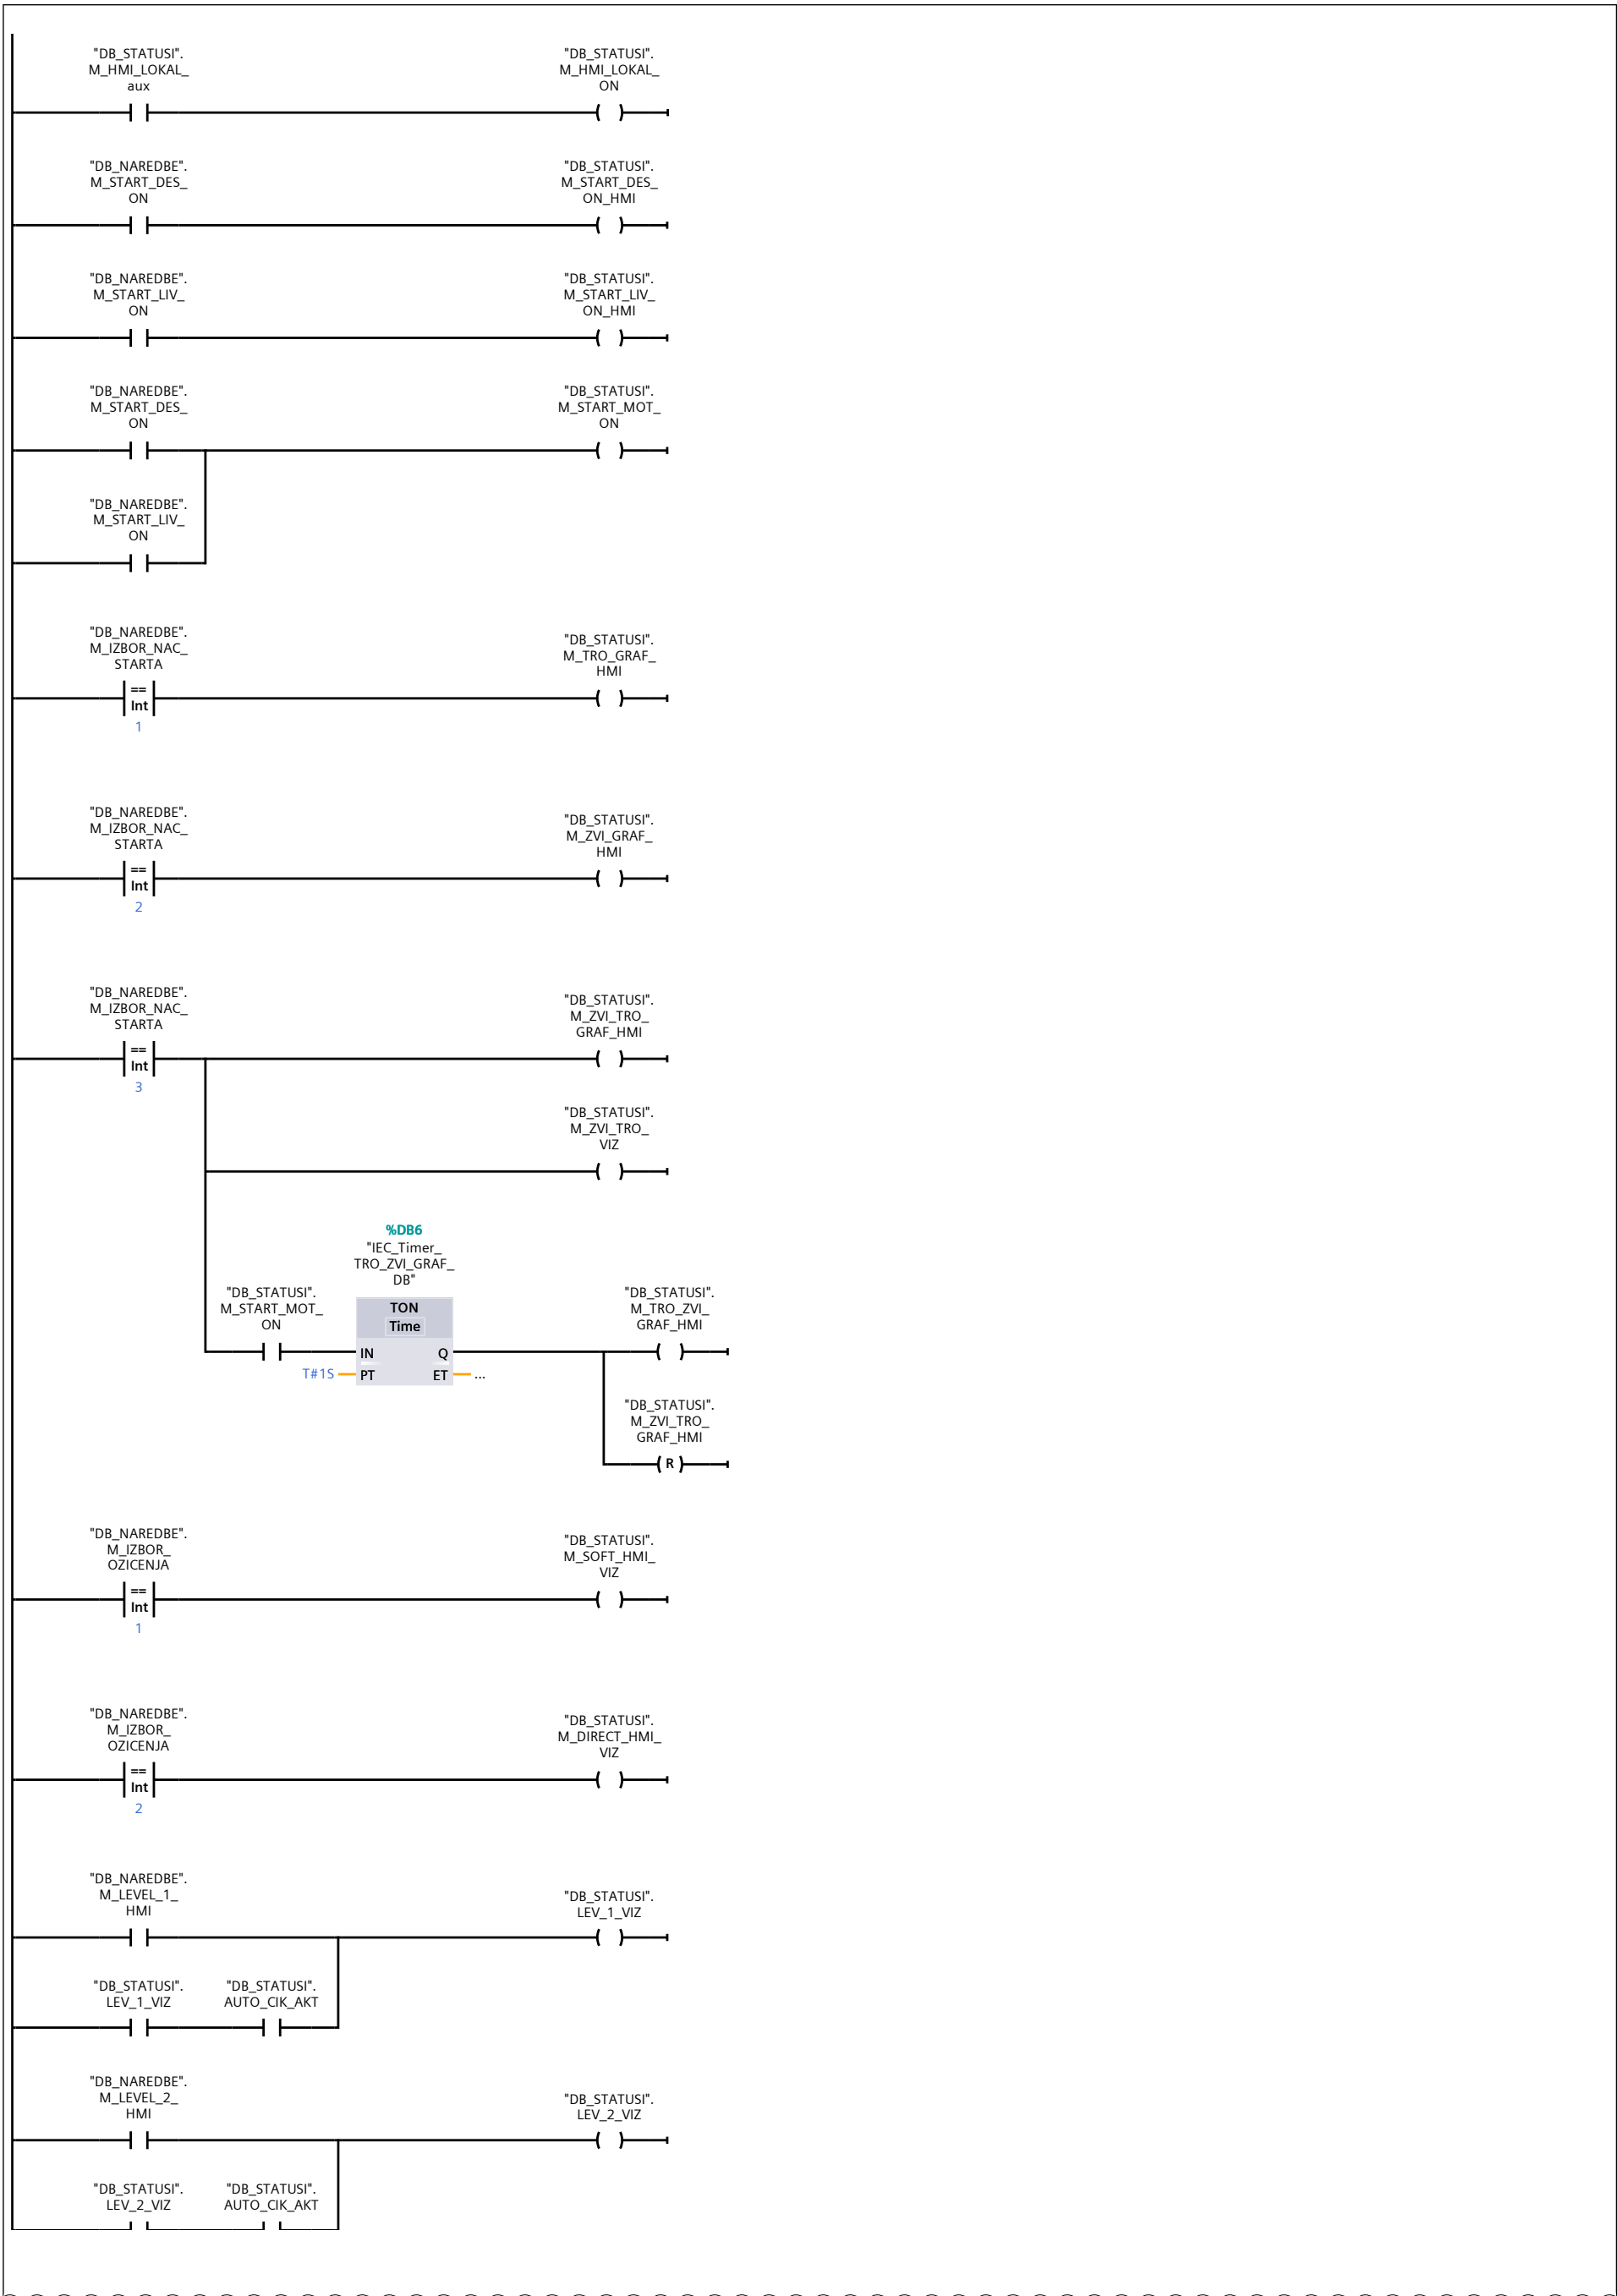


Network 13: Vizualizacija HMI (2.1 / 2.1)


1.1 (Page7 - 5)

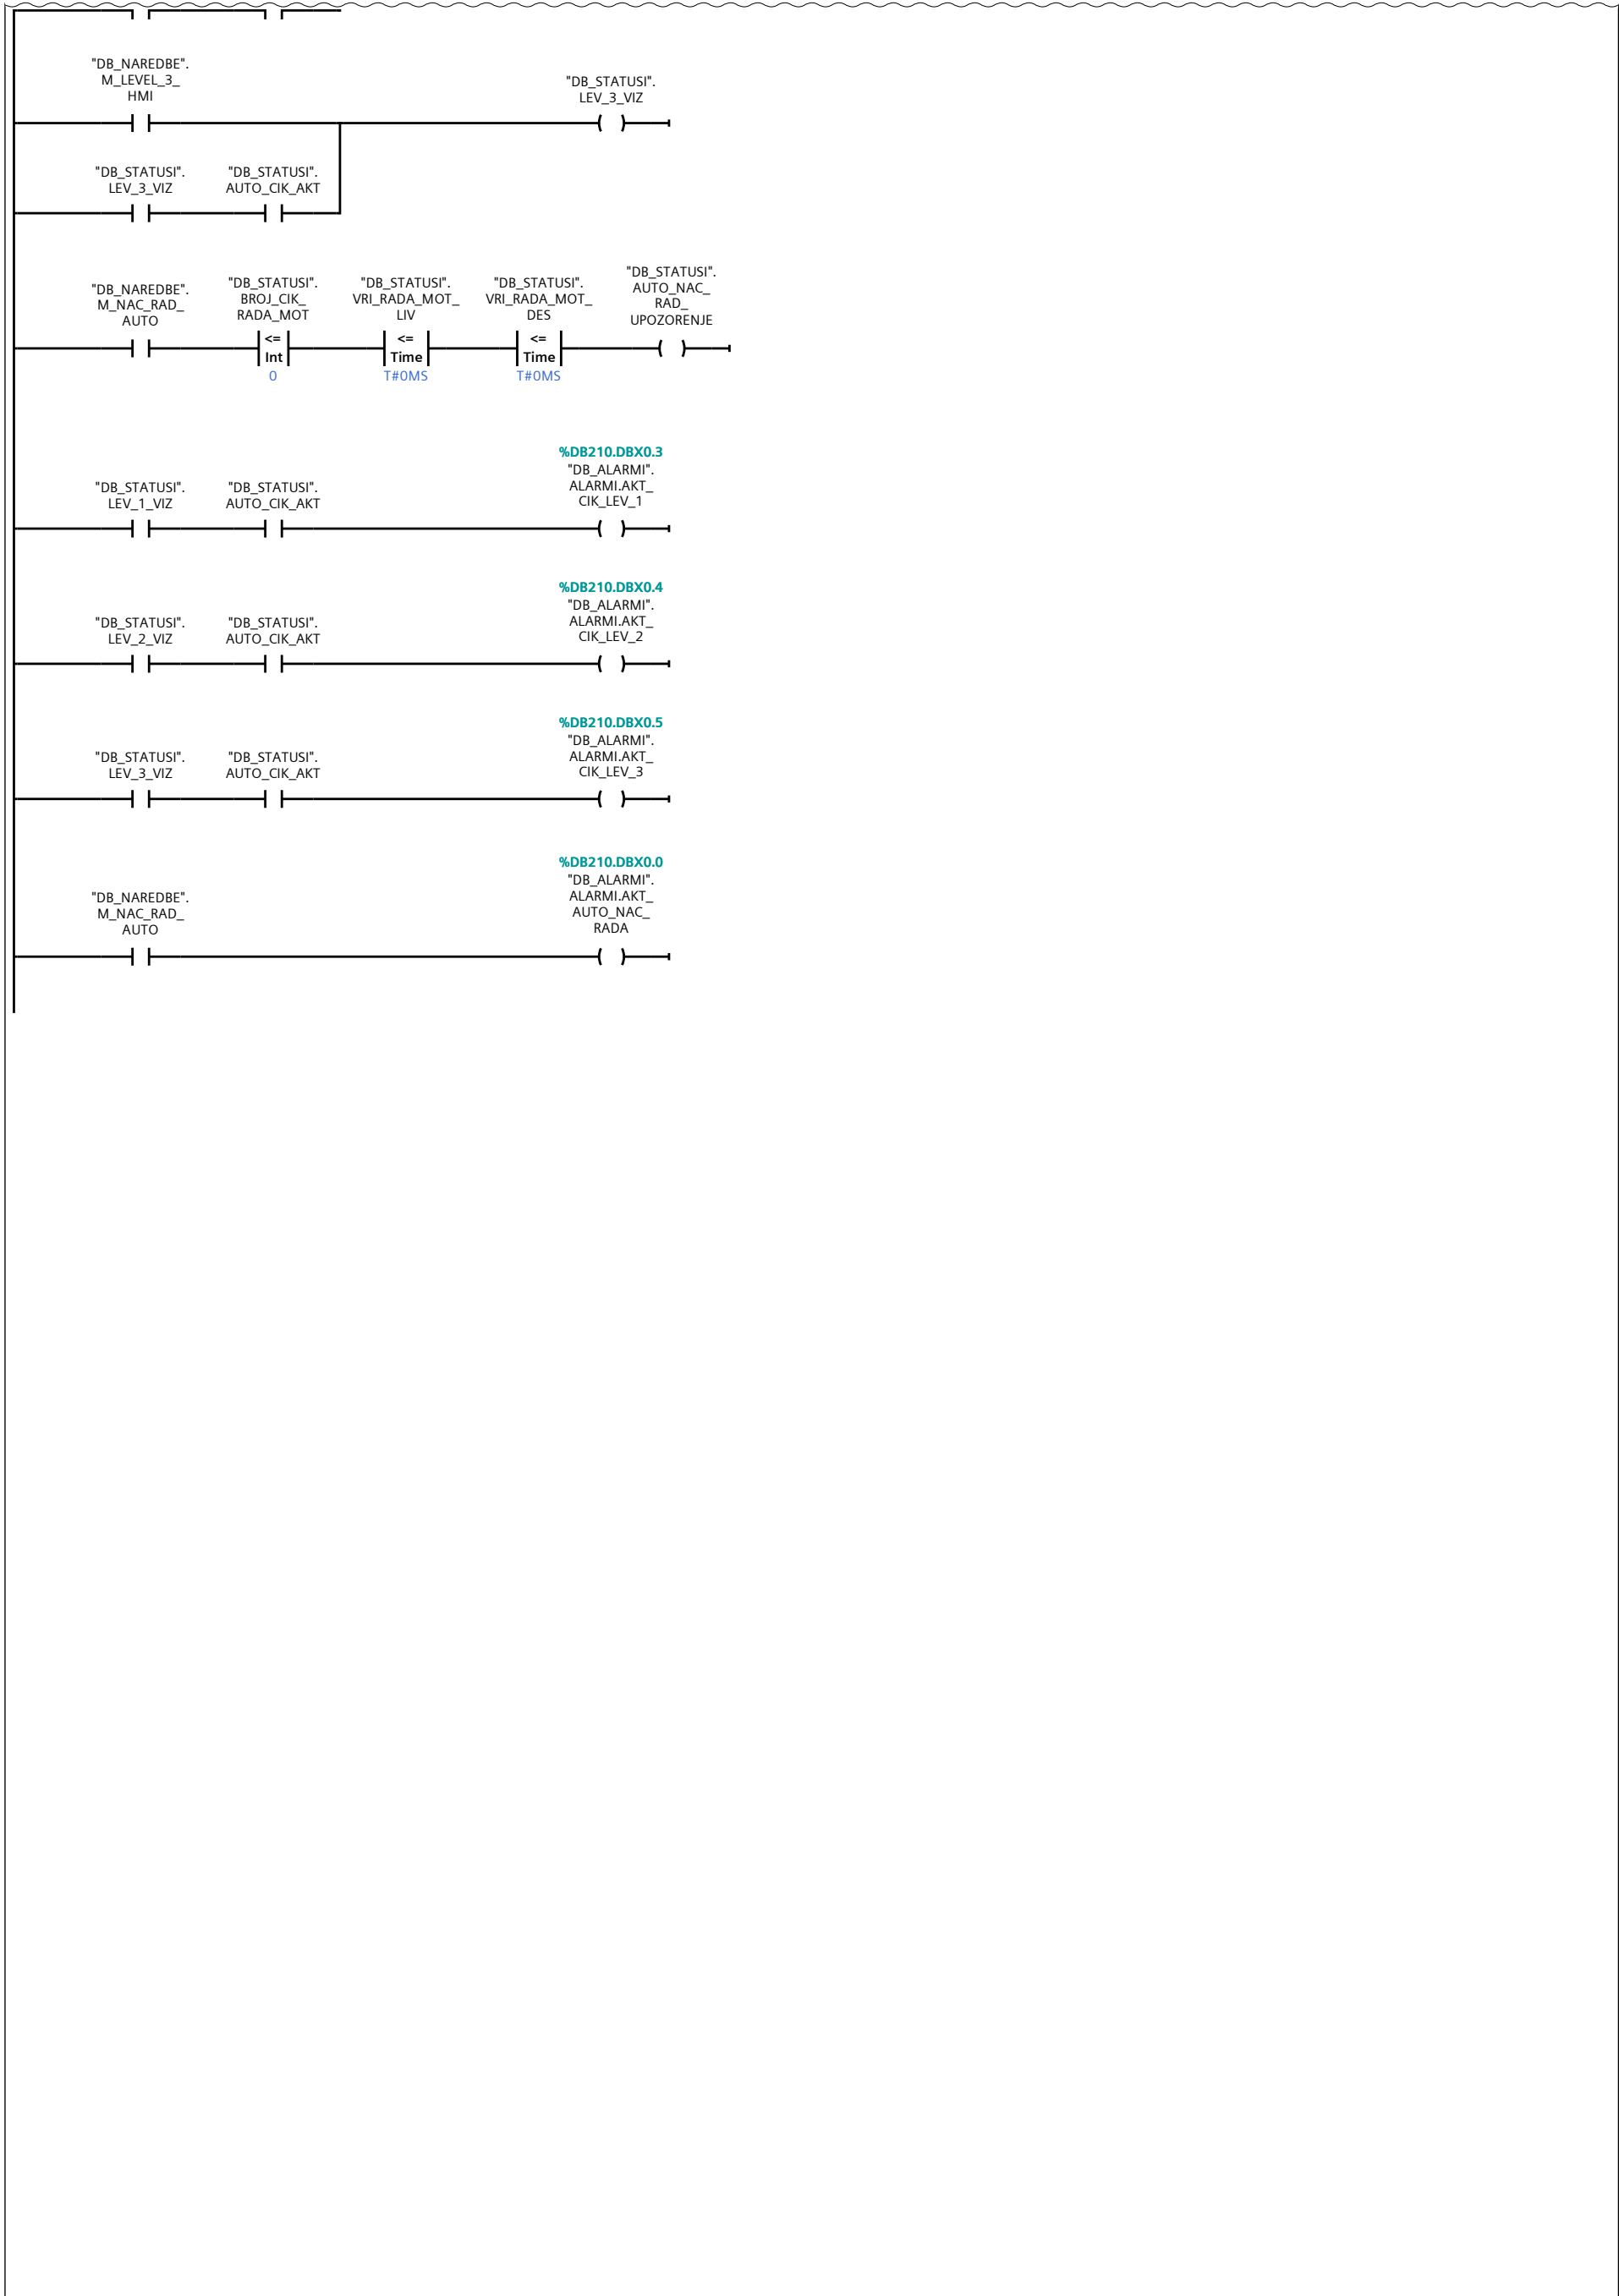

Network 14: Trend statusi motora LIJEVO/DESNO

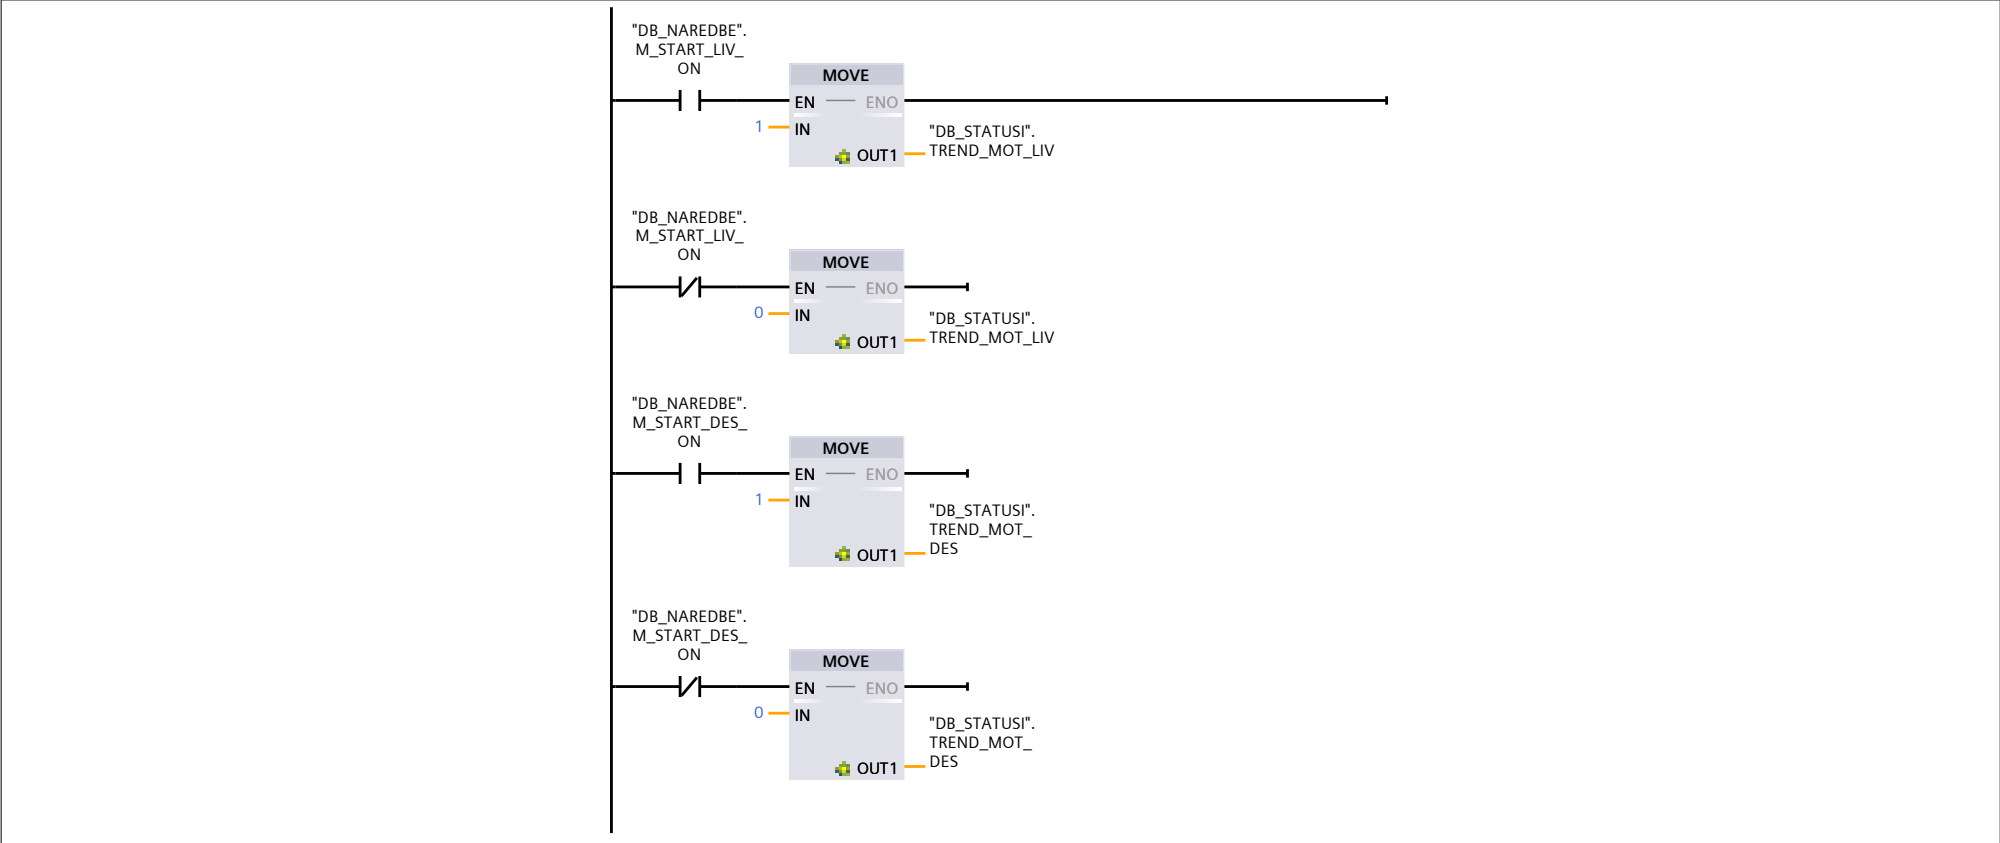

Network 15: Trend statusi motora LEVEL 1/ LEVEL 2/ LEVEL 3

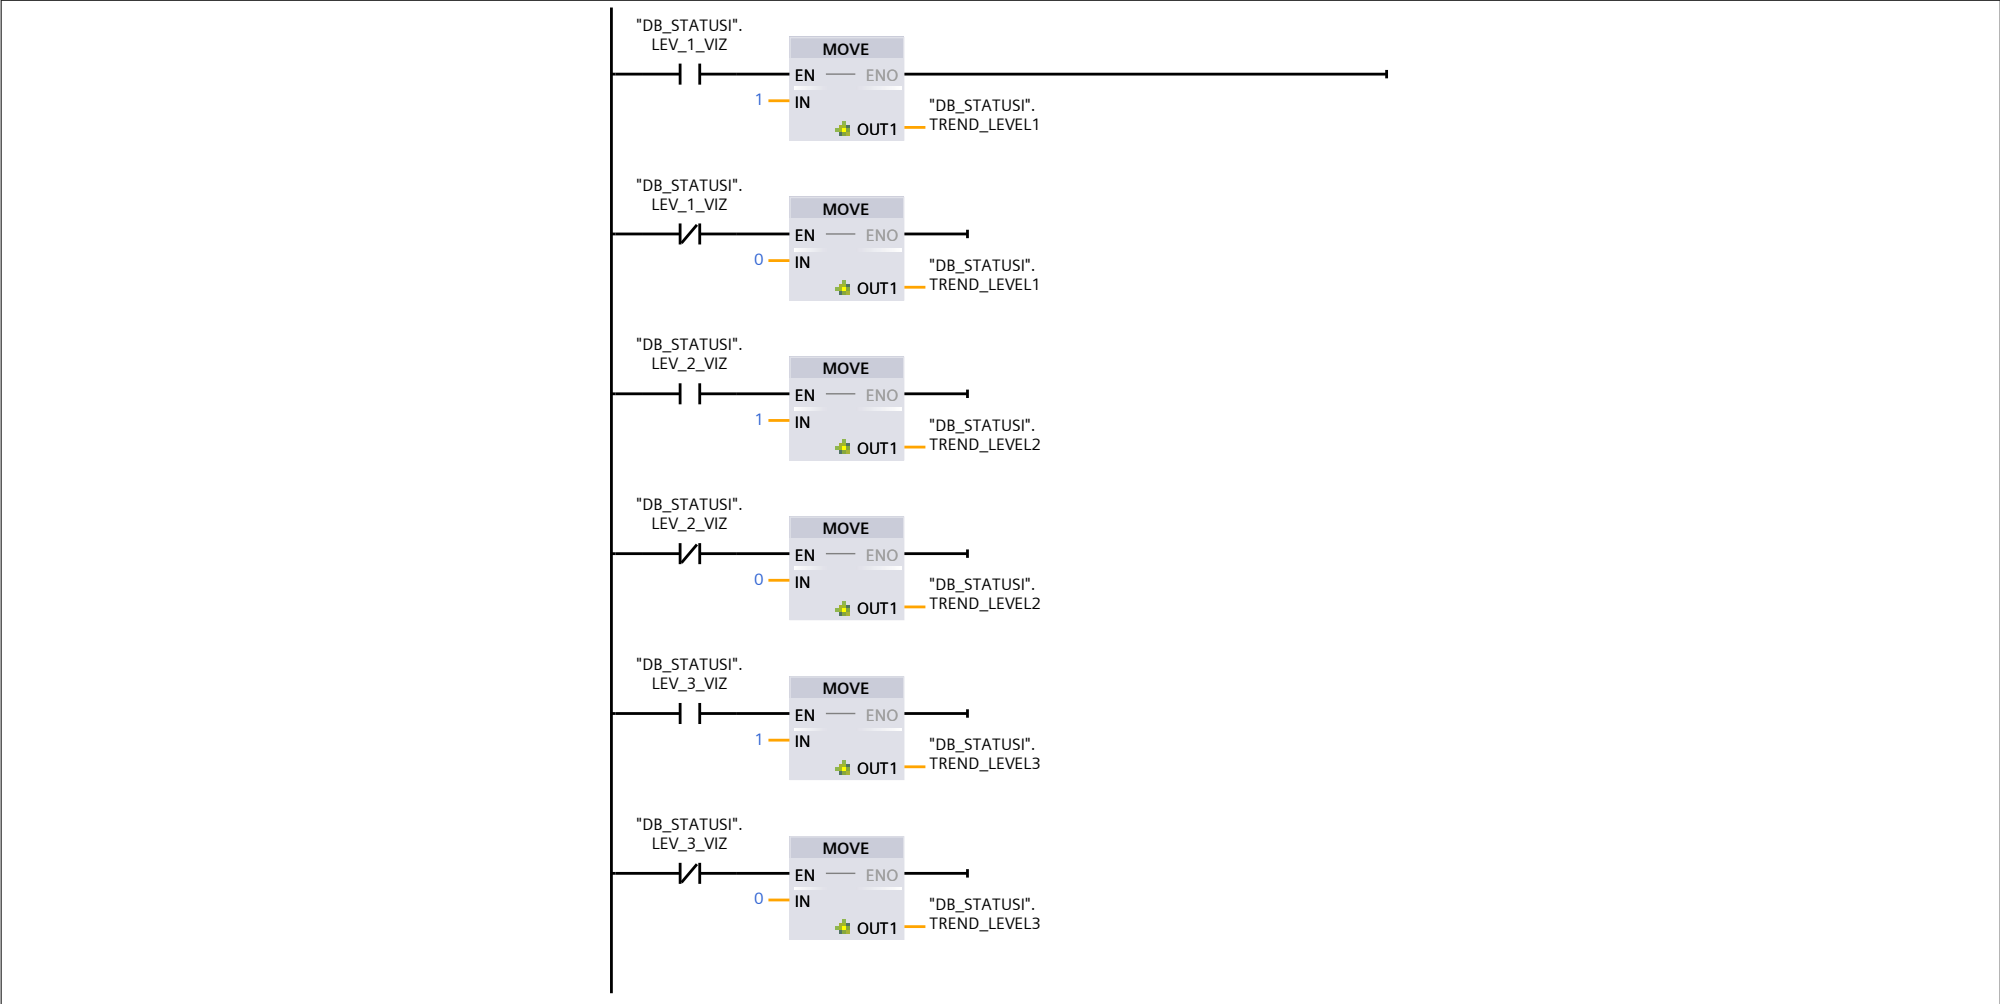


PLC_1 [CPU 1214C DC/DC/DC] / Program blocks


FC_OPC_NAM [FC50]

FC_OPC_NAM Properties							
General							
Name	FC_OPC_NAM	Number	50	Type	FC	Language	LAD
Numbering	Manual						
Information							
Title	FC_OPC_NAM[FC50]	Author		Comment	Blok za detekciju uključenosti glavnih osigurača	Family	
Version	0.1	User-defined ID					
Name				Data type		Default value	
Input							
Output							
InOut							
Temp							
Constant							
▼ Return							
FC_OPC_NAM				Void			

Network 1: Detekcija uključenosti nužnog sklopa

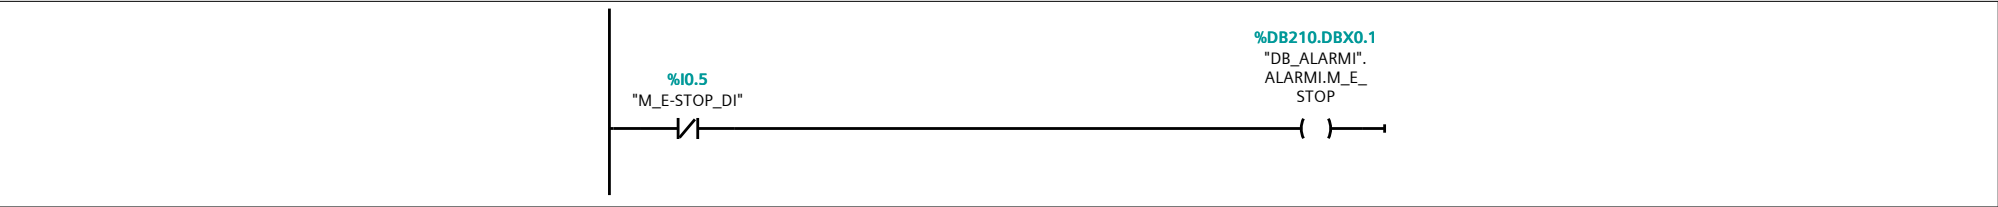

Network 2: Definiranje načina rada upravljanja

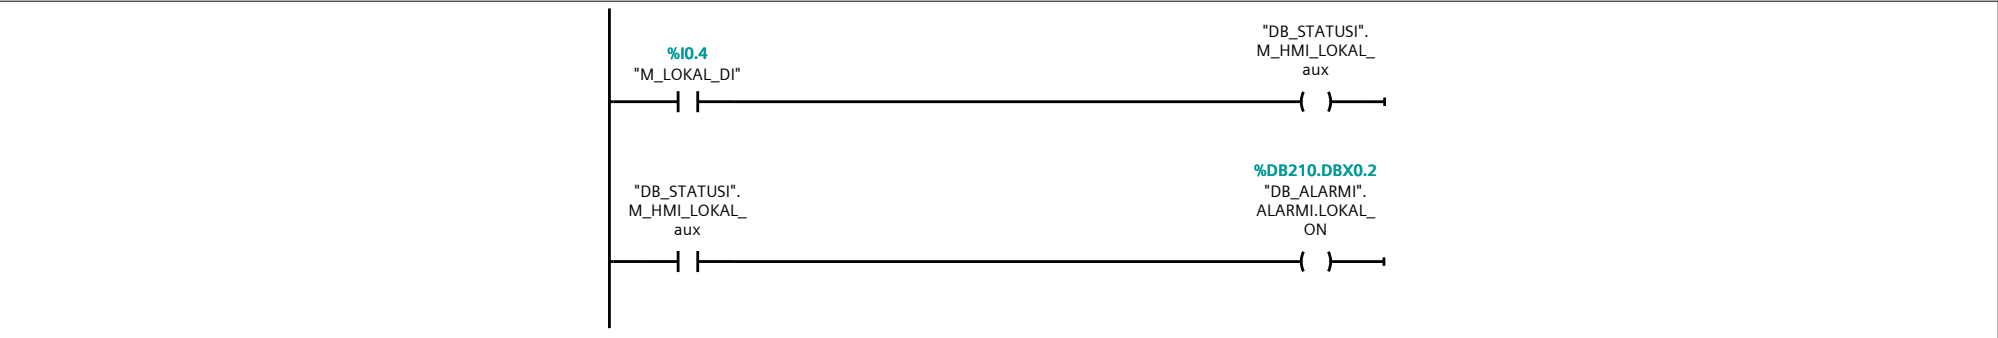


PLC_1 [CPU 1214C DC/DC/DC] / Program blocks

FC_SIM [FC10]

FC_SIM Properties							
General							
Name	FC_SIM	Number	10	Type	FC	Language	LAD
Numbering	Manual						
Information							
Title	FC_SIM[FC10]	Author		Comment	Blok za simuliranje ulaznih varijabli	Family	
Version	0.1	User-defined ID					
Name				Data type		Default value	
Input							
Output							
InOut							
Temp							
Constant							
▼ Return							
FC_SIM				Void			


Network 1: M: Ulazna varijabla za uključenje nužnog isklopa

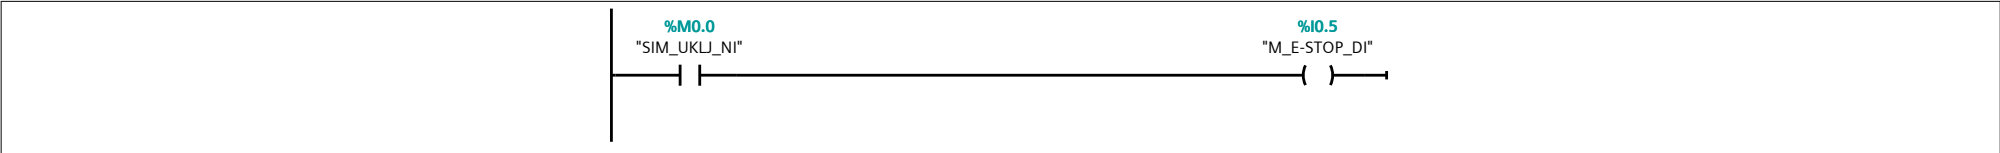

Network 2: M: Ulazna varijabla za odabir Remote/Lokal




Network 3: M: Ulazna varijabla za uključenje kočnice

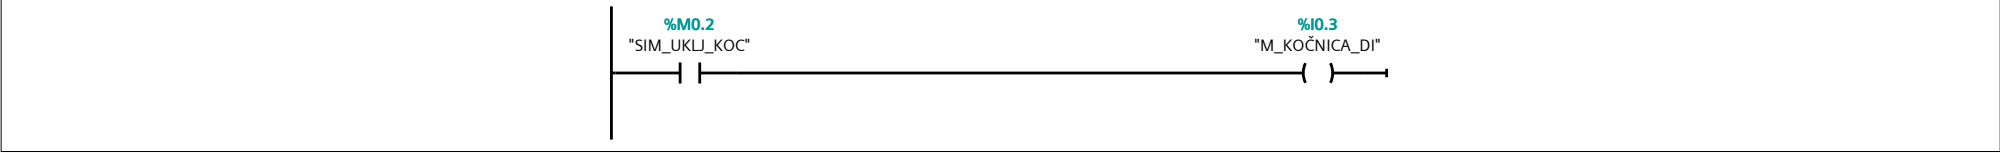


Network 4: M: Dugme za izbor rada motora level 1



Network 5: M: Dugme za izbor rada motora level 2

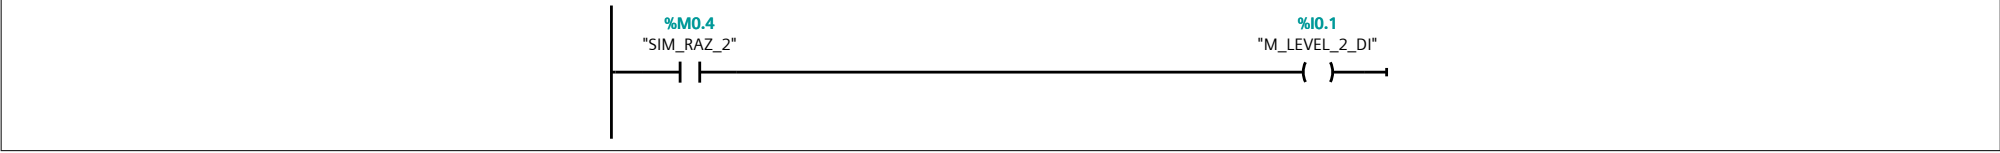

Network 6: M: Dugme za izbor rada motora level 3

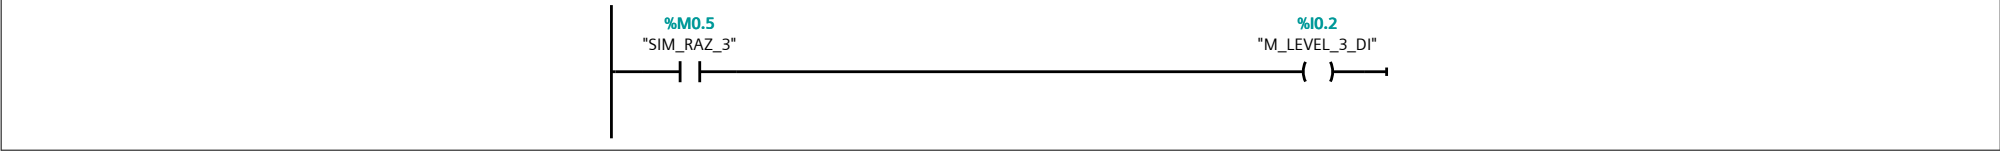

Totally Integrated Automation Portal

PLC_1 [CPU 1214C DC/DC/DC] / Program blocks

DB_ALARM1 [DB210]

DB_ALARM1 Properties

General

Name	DB_ALARM1	Number	210	Type	DB	Language	DB
Numbering	Manual						

Information

Title		Author		Comment		Family	
Version	0.1	User-defined ID					

Name	Data type	Start value	Retain
▼ Static			
ALARM1	Struct		False

Totally Integrated Automation Portal

PLC_1 [CPU 1214C DC/DC/DC] / Program blocks

DB_STATUSI [DB215]

DB_STATUSI Properties

General

Name	DB_STATUSI	Number	215	Type	DB	Language	DB
Numbering	Manual						

Information

Title		Author		Comment		Family	
Version	0.1	User-defined ID					

Name	Data type	Start value	Retain
▼ Static			
M_ALARM_LMP_ON	Bool	false	False
M_HMI_LOKAL_aux	Bool	false	False
M_HMI_LOKAL_ON	Bool	false	False
BROJ_CIK_RADA_MOT_LEV_1	Int	0	False
BROJ_CIK_RADA_MOT_LEV_2	Int	0	False
BROJ_CIK_RADA_MOT_LEV_3	Int	0	False
BROJ_CIK_RADA_MOT_AUX	Int	0	False
BROJ_CIK_RADA_MOT	Int	0	False
VRI_RADA_MOT_LIV_LEV_1	Time	T#0S	False
VRI_RADA_MOT_DES_LEV_1	Time	T#0S	False
VRI_RADA_MOT_LIV_LEV_2	Time	T#0S	False
VRI_RADA_MOT_DES_LEV_2	Time	T#0S	False
VRI_RADA_MOT_LIV_LEV_3	Time	T#0S	False
VRI_RADA_MOT_DES_LEV_3	Time	T#0S	False
VRI_RADA_MOT_LIV	Time	T#0ms	False
VRI_RADA_MOT_DES	Time	T#0ms	False
LEV_1_VIZ	Bool	false	False
LEV_2_VIZ	Bool	false	False
LEV_3_VIZ	Bool	false	False
AUTO_NAC_RAD_UPOZORENJE	Bool	false	False
M_START_DES_ON_HMI	Bool	false	False
M_START_LIV_ON_HMI	Bool	false	False
M_TRO_GRAF_HMI	Bool	false	False
M_ZVI_GRAF_HMI	Bool	false	False
M_ZVI_TRO_GRAF_HMI	Bool	false	False
M_TRO_ZVI_GRAF_HMI	Bool	false	False
M_GRE_SUS_HMI	Bool	false	False
M_START_MOT_ON	Bool	false	False
M_DIRECT_HMI_VIZ	Bool	false	False
M_SOFT_HMI_VIZ	Bool	false	False
M_ZVI_TRO_VIZ	Bool	false	False
AUTO_KORAK	Int	0	False
AUTO_CIK_AKT	Bool	false	False
STOP_AUTO_CIKLUS	Bool	false	False
BROJ_CIKLUSA_HMI	Int	0	False
TREND_MOT_DES	Int	0	False
TREND_MOT_LIV	Int	0	False
TREND_LEVEL1	Int	0	False
TREND_LEVEL2	Int	0	False
TREND_LEVEL3	Int	0	False
DUGME_RES_DIS	Bool	false	False
M_BLOK_IZBORA	Bool	false	False
M_START_DES_ON_VIZ	Bool	false	False
M_START_LIV_ON_VIZ	Bool	false	False


PLC_1 [CPU 1214C DC/DC/DC] / Program blocks

FC_AUTOMATIZACIJA [FC80]


FC_AUTOMATIZACIJA Properties							
General							
Name	FC_AUTOMATIZACIJA	Number	80	Type	FC	Language	LAD
Numbering	Manual						
Information							
Title	FC_AUTOMATIZACIJA[FC80]	Author		Comment	Blok za automatski ciklus	Family	
Version	0.1	User-defined ID					

Name	Data type	Default value
Input		
Output		
InOut		
Temp		
Constant		
▼ Return		
FC_AUTOMATIZACIJA	Void	


Network 1: M: Reset tagova automatskog ciklusa u slučaju STOP i E-Stop

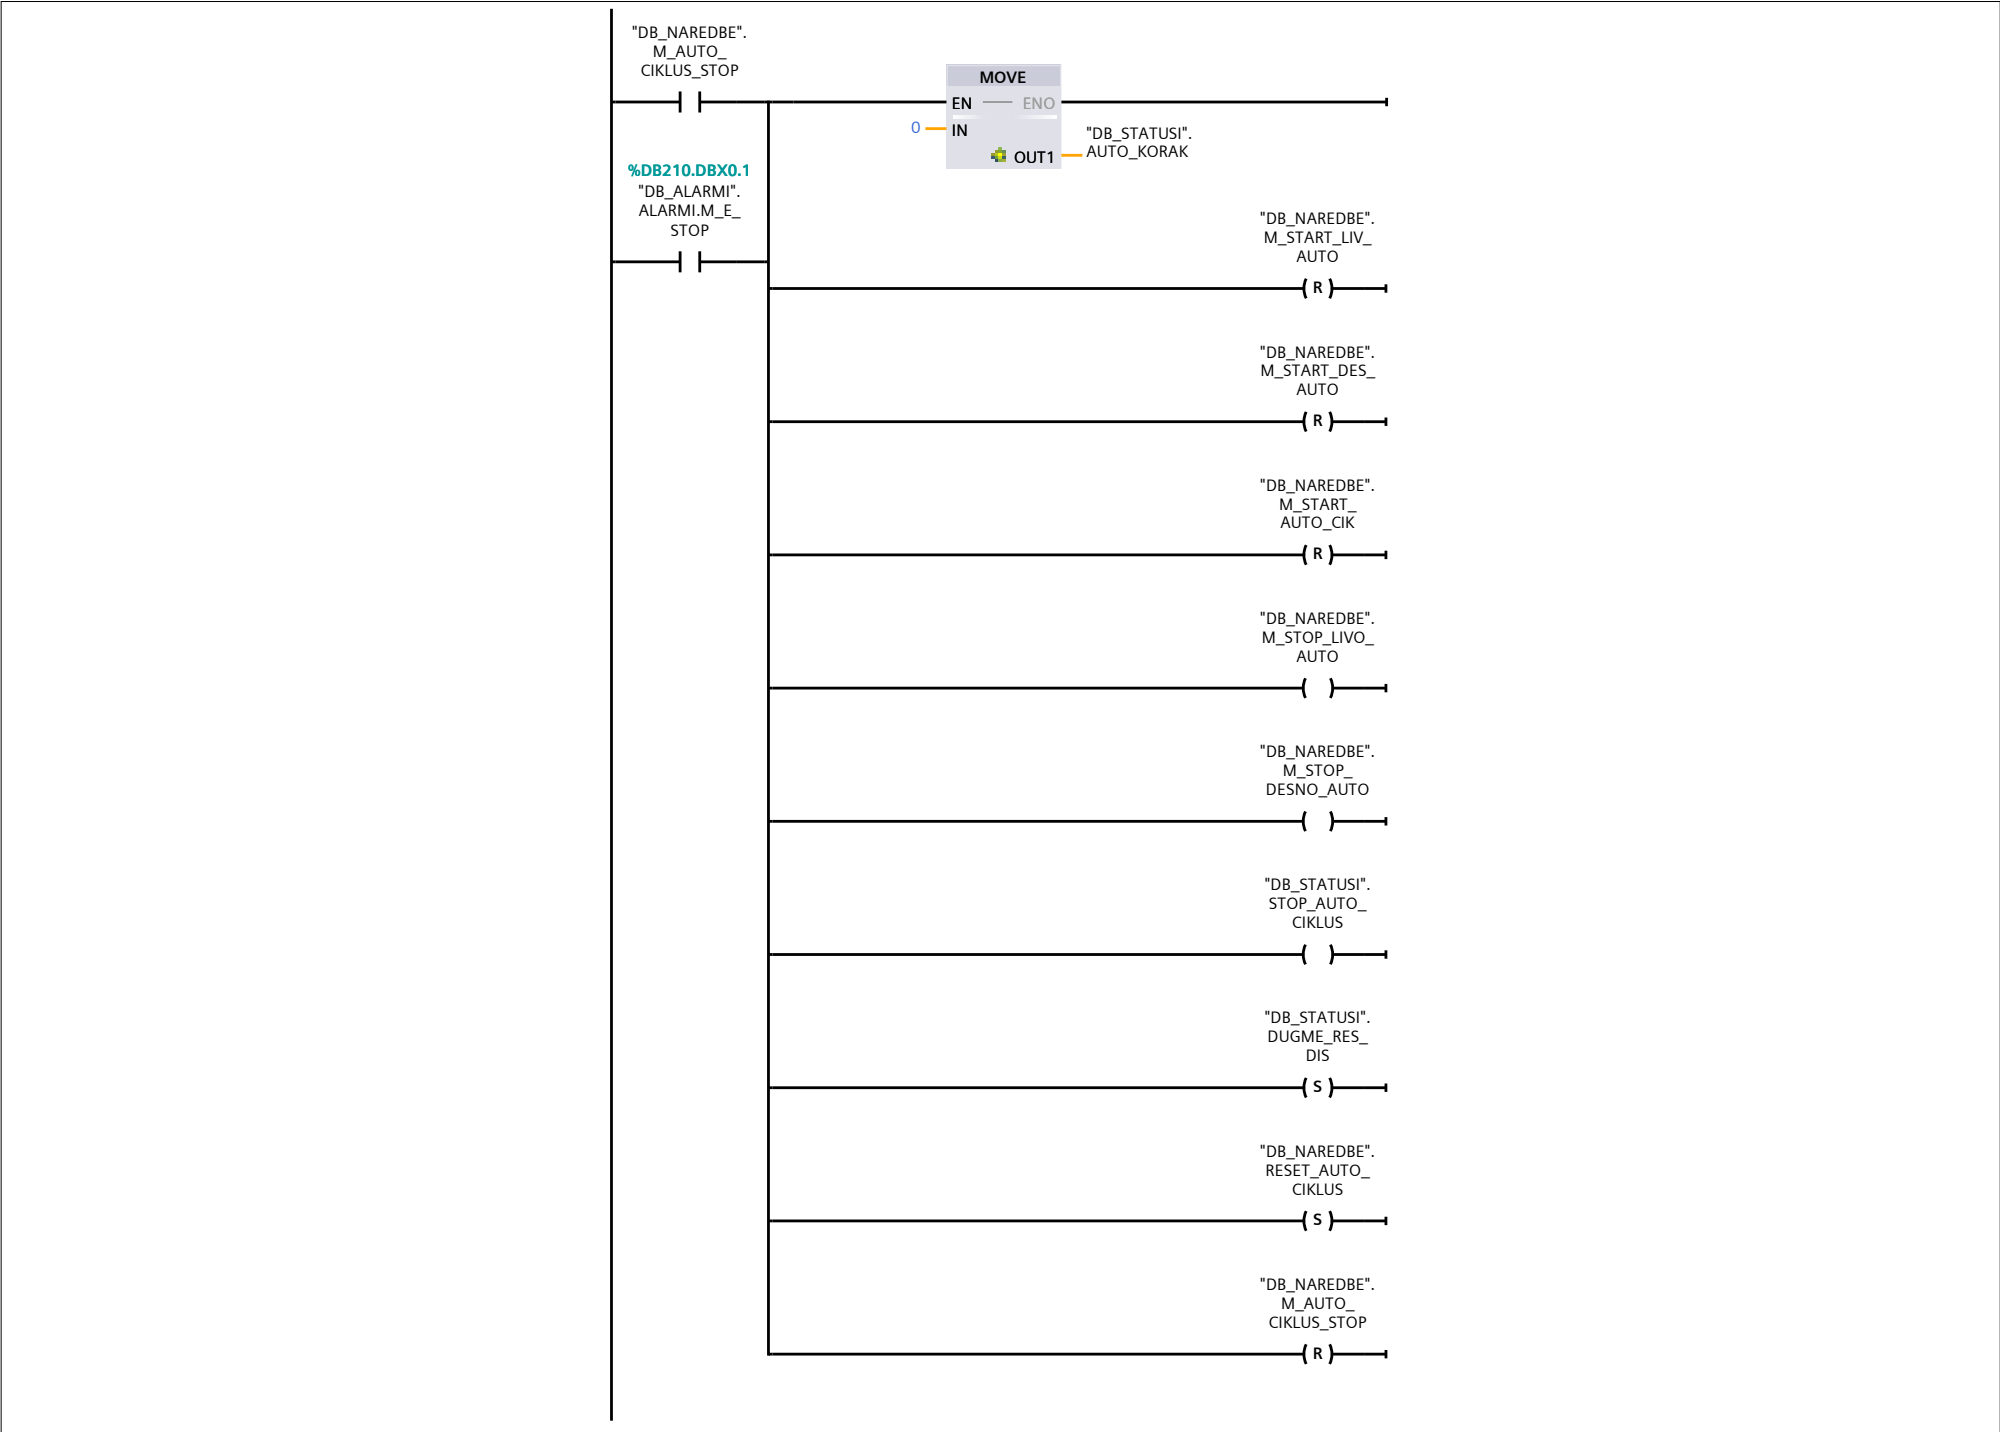


Network 2: Reset položaja motora

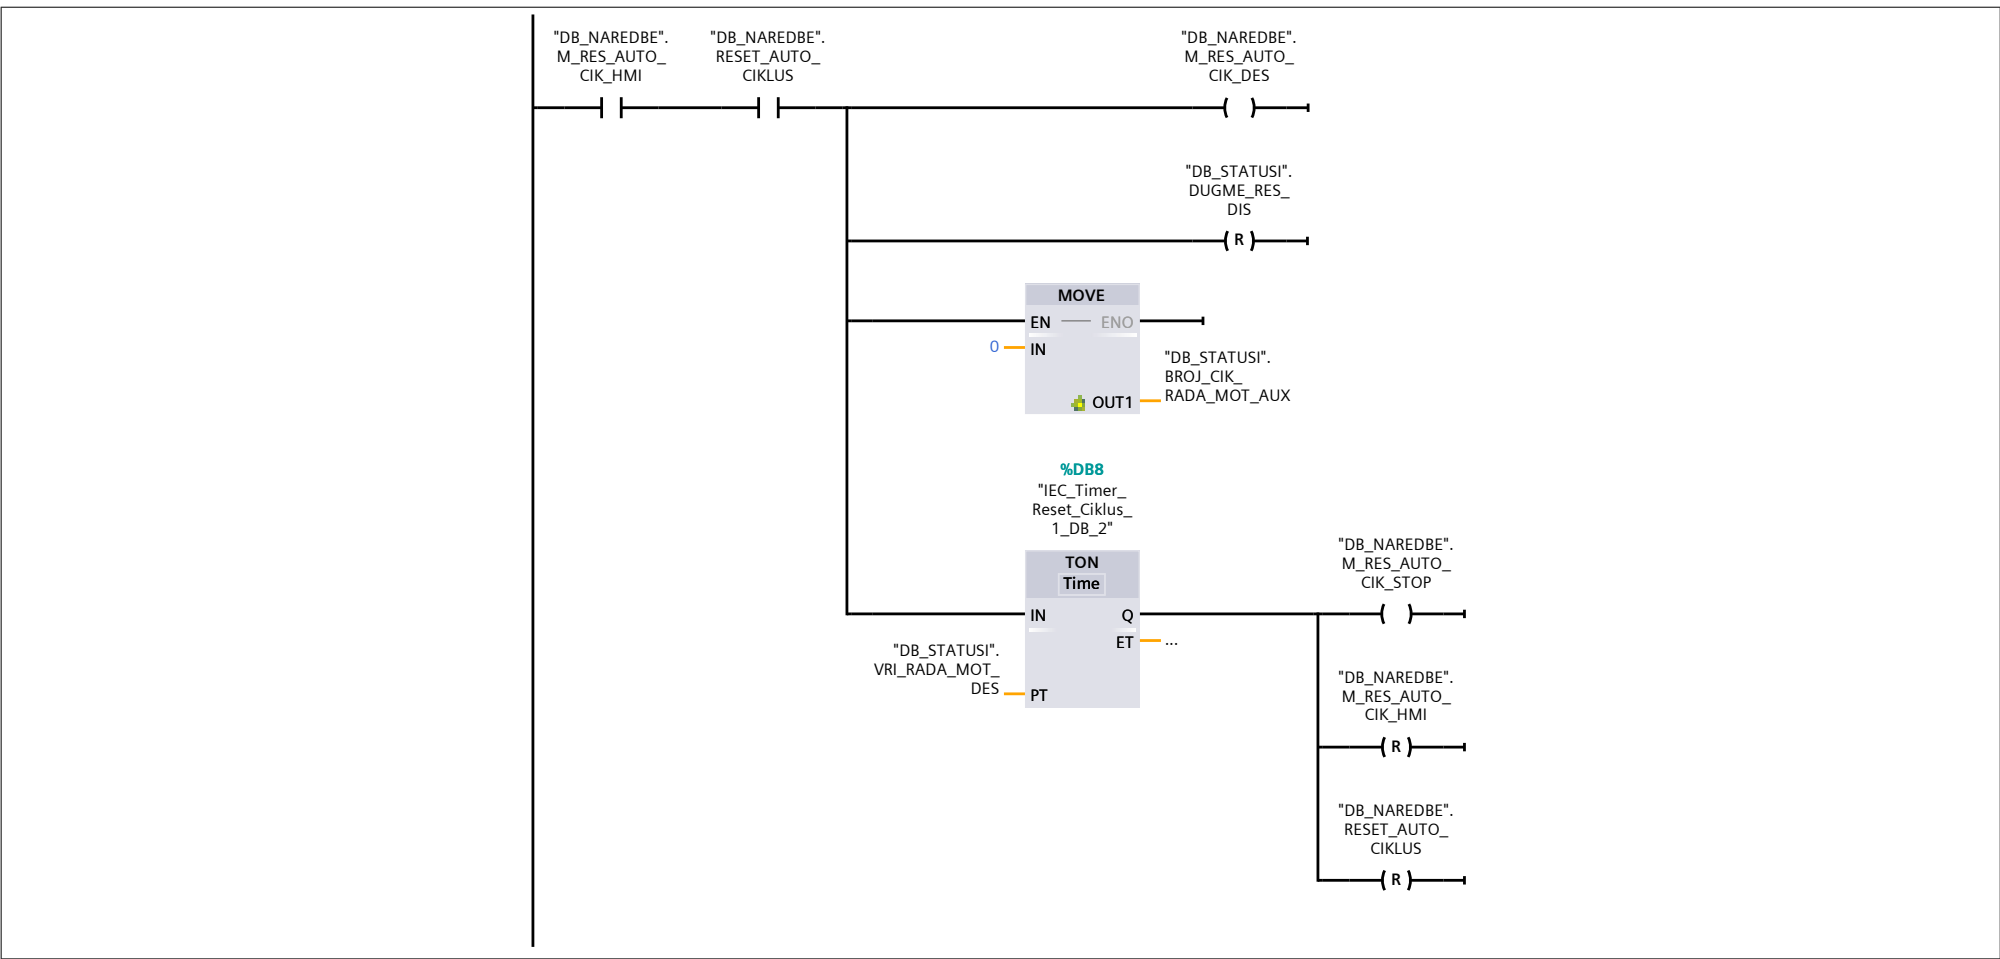


Network 3: M: Postavljanje ožičenja i načina starta za pojedinu razinu

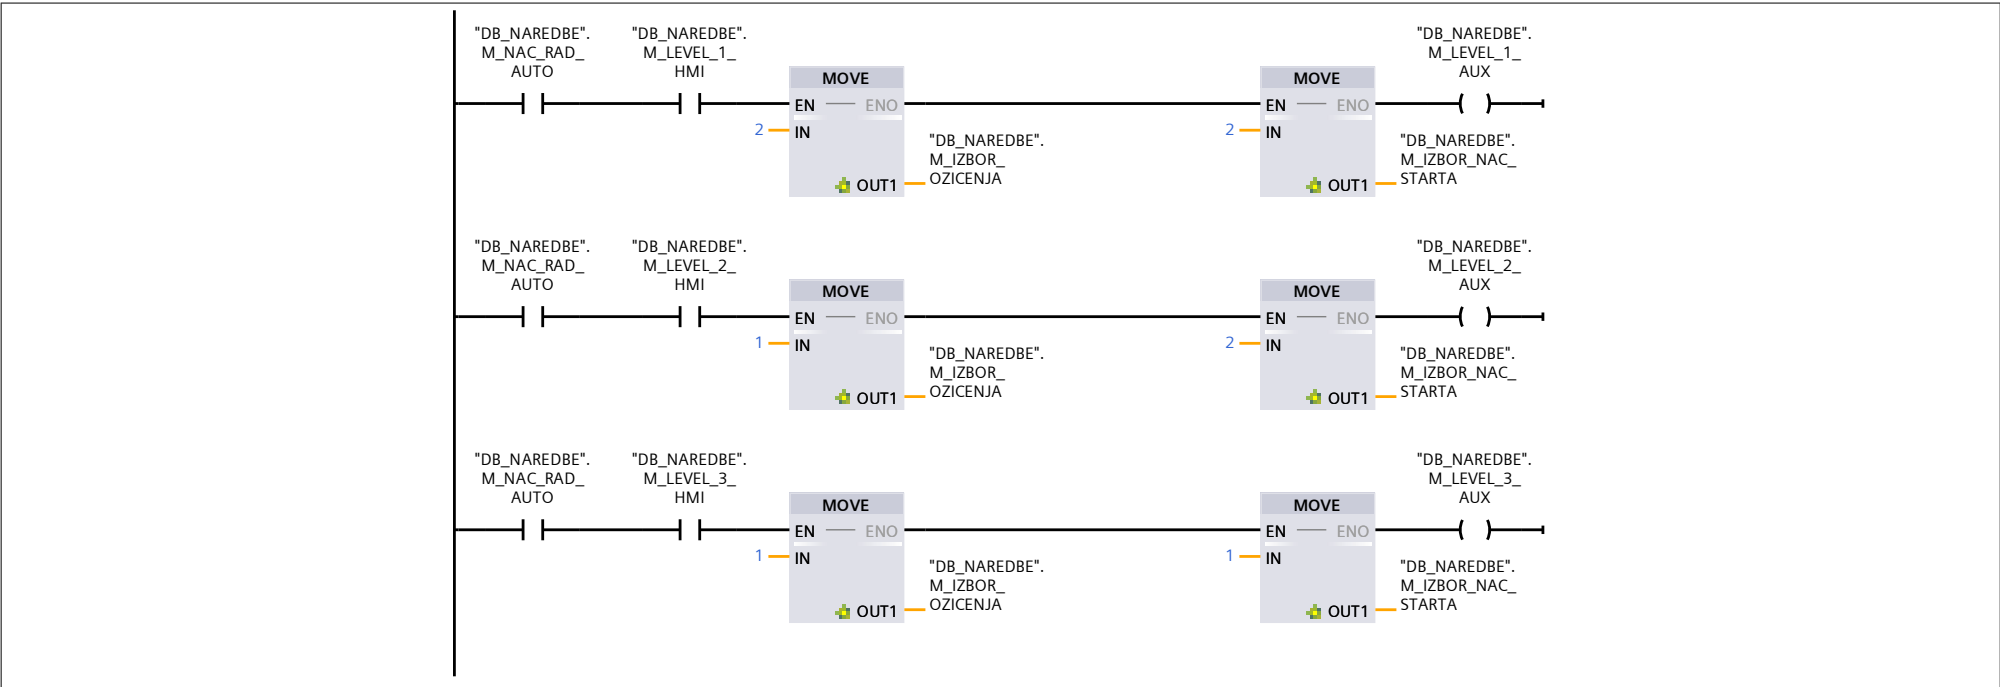


Network 4: M: Određivanje broja ciklusa, vrijeme rada motora u lijevom i desnom smjeru

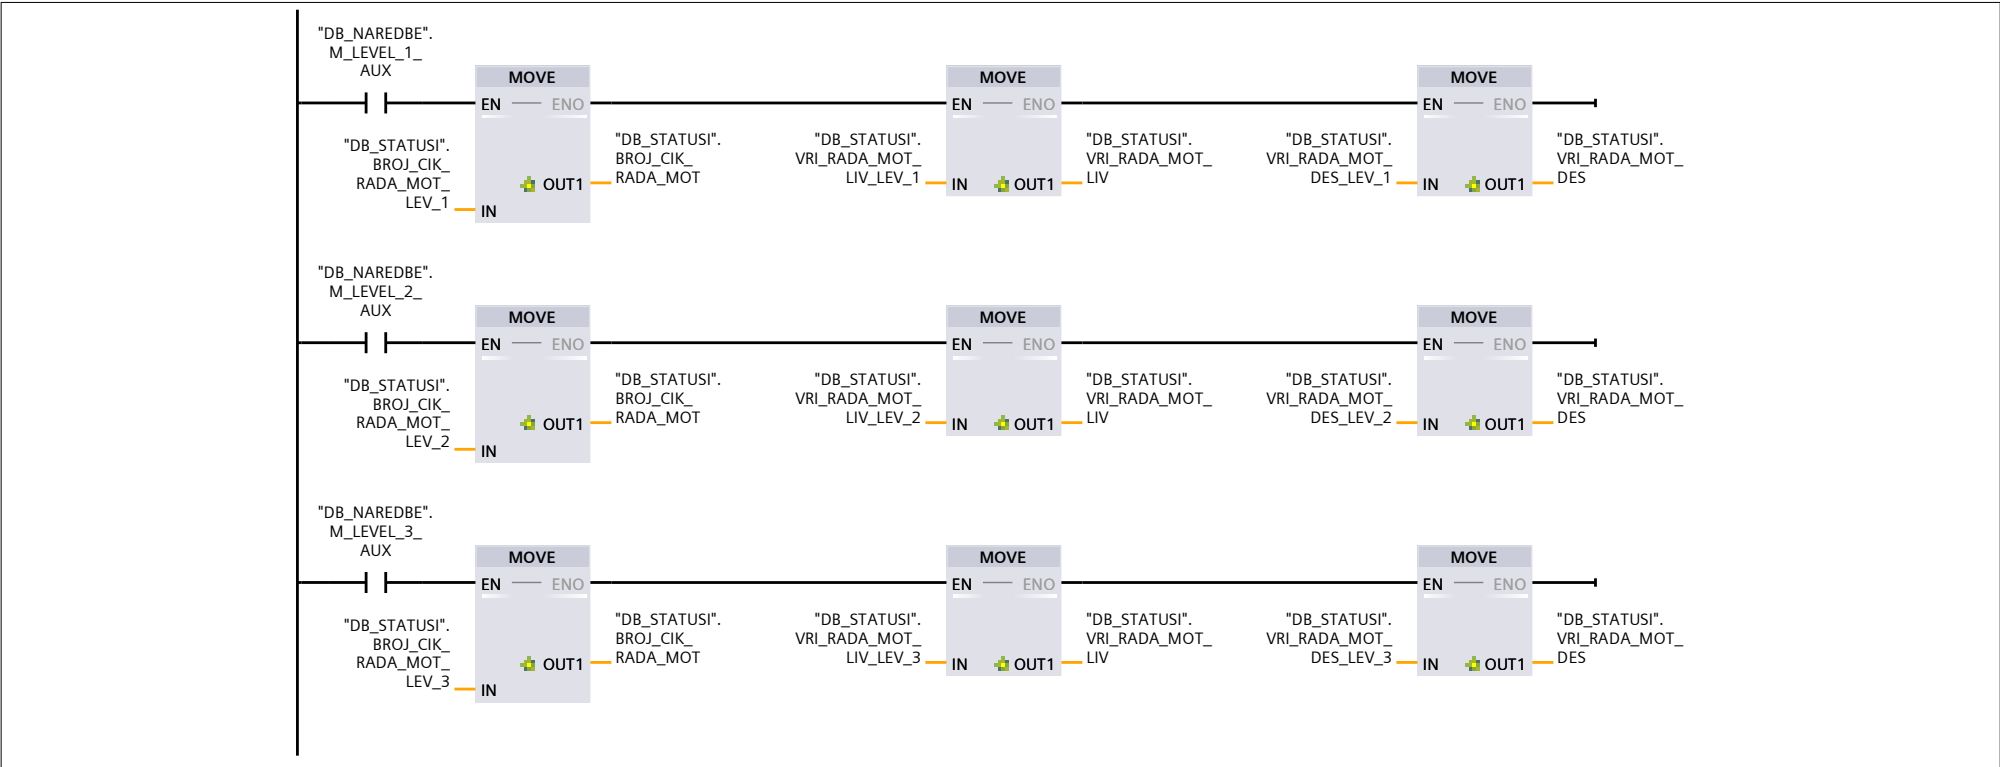


Network 5: M: Pokretanje automatskog ciklusa

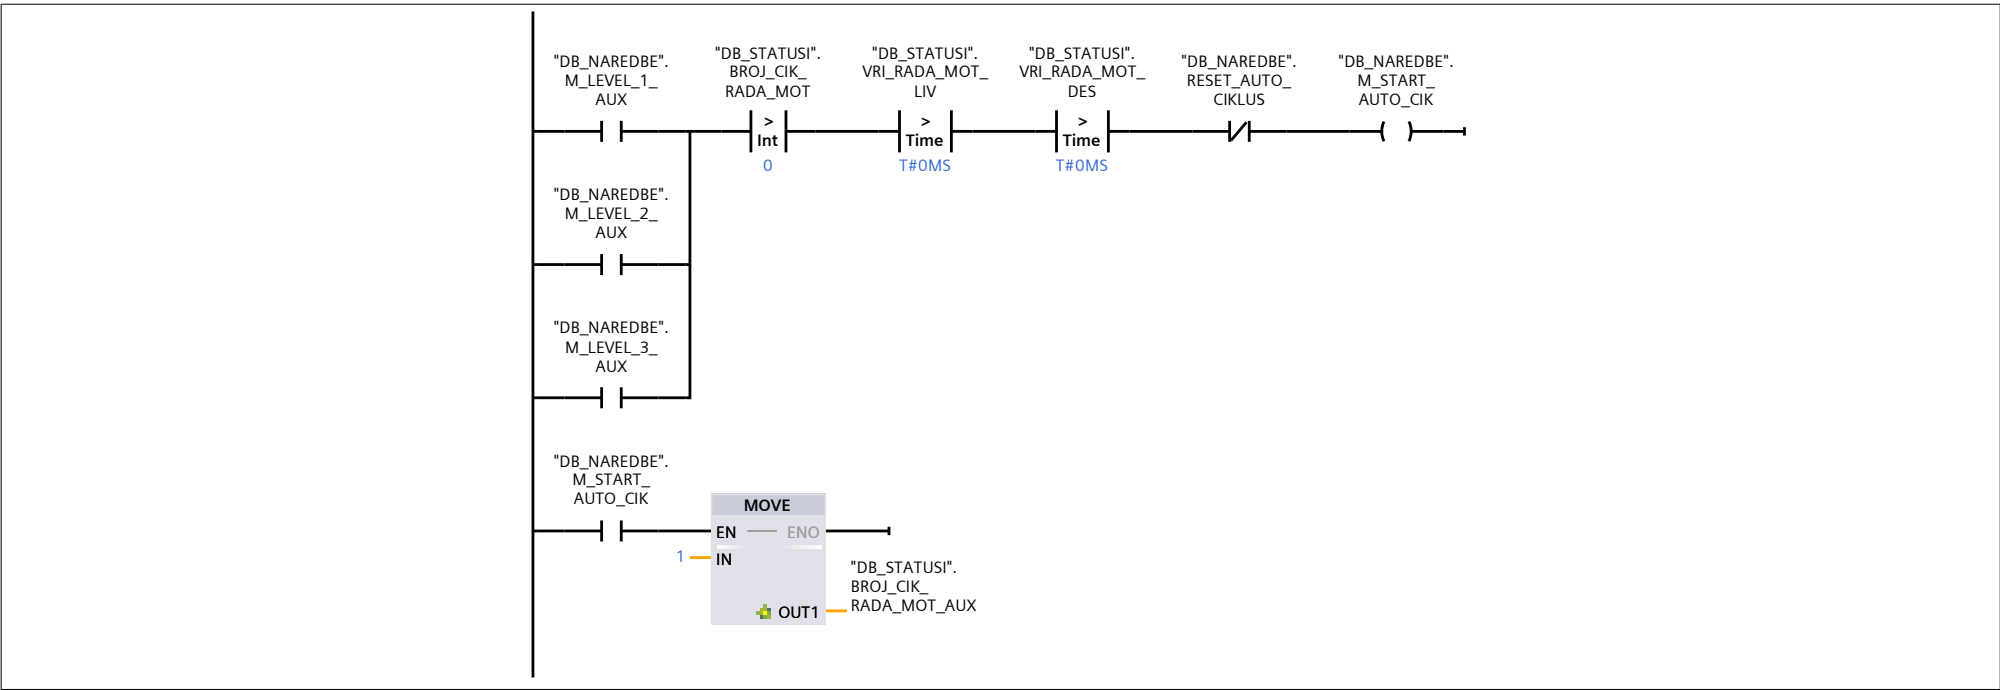


Network 6: M: Ispitivanje uvjeta za pokretanje auto ciklusa

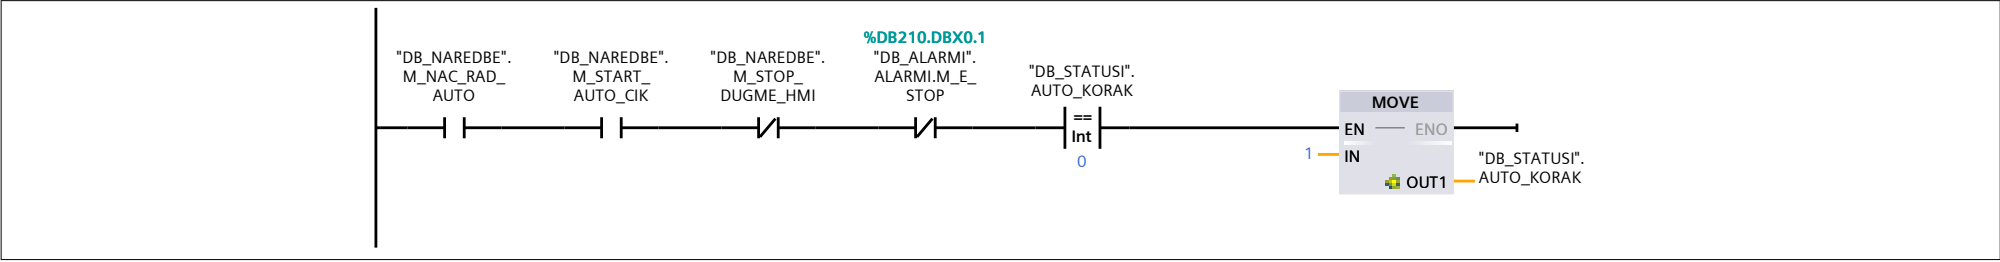


Network 7: M: Pokretanje motora lijevo u automatskom ciklusu

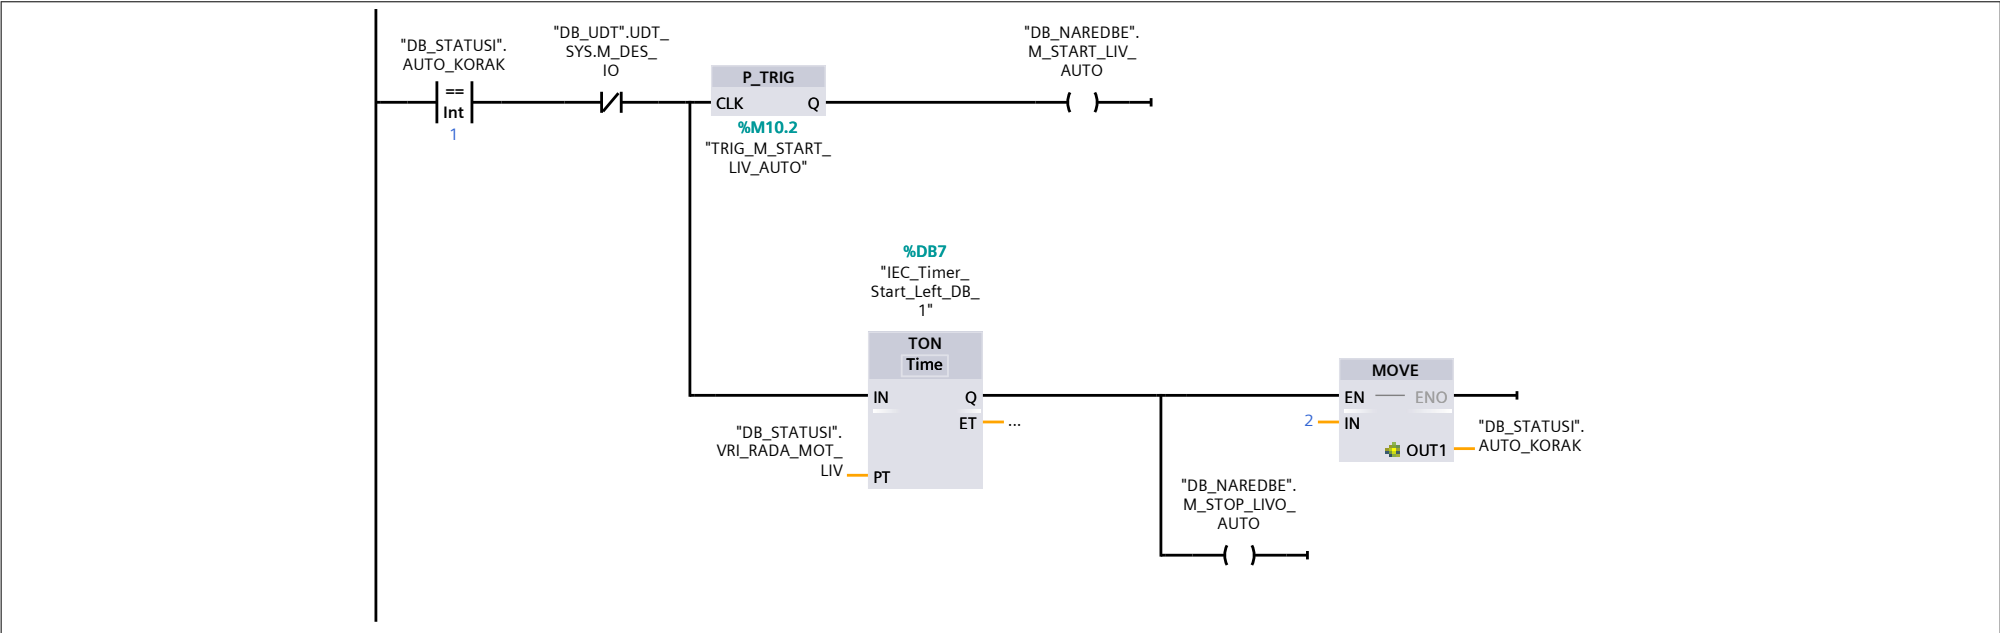


Network 8: M: Pauza nakon rada motora lijevo

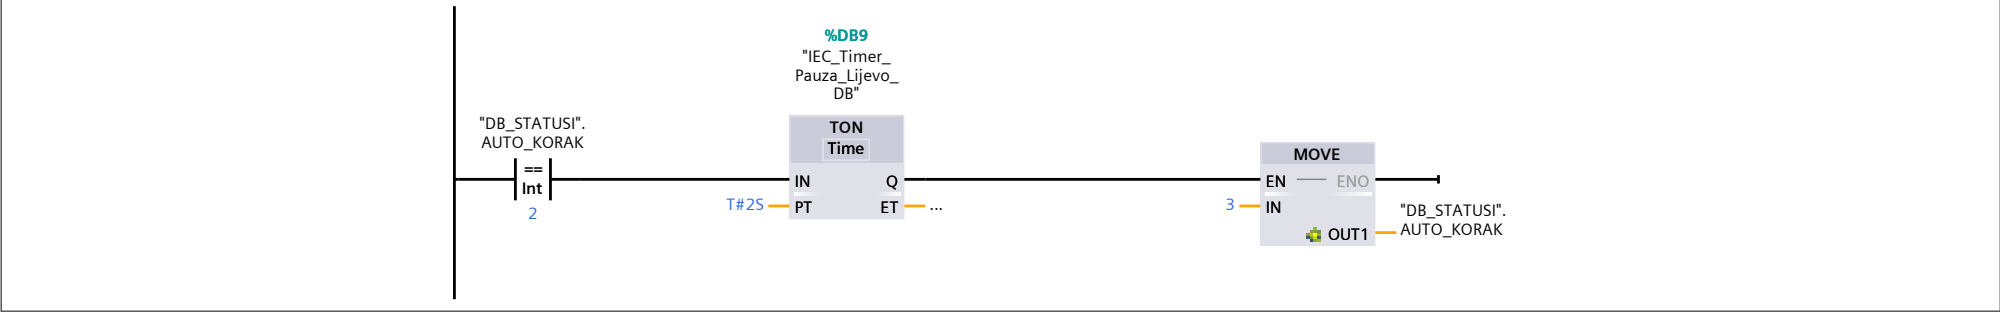


Network 9: M: Pokretanje motora desno u automatskom ciklusu

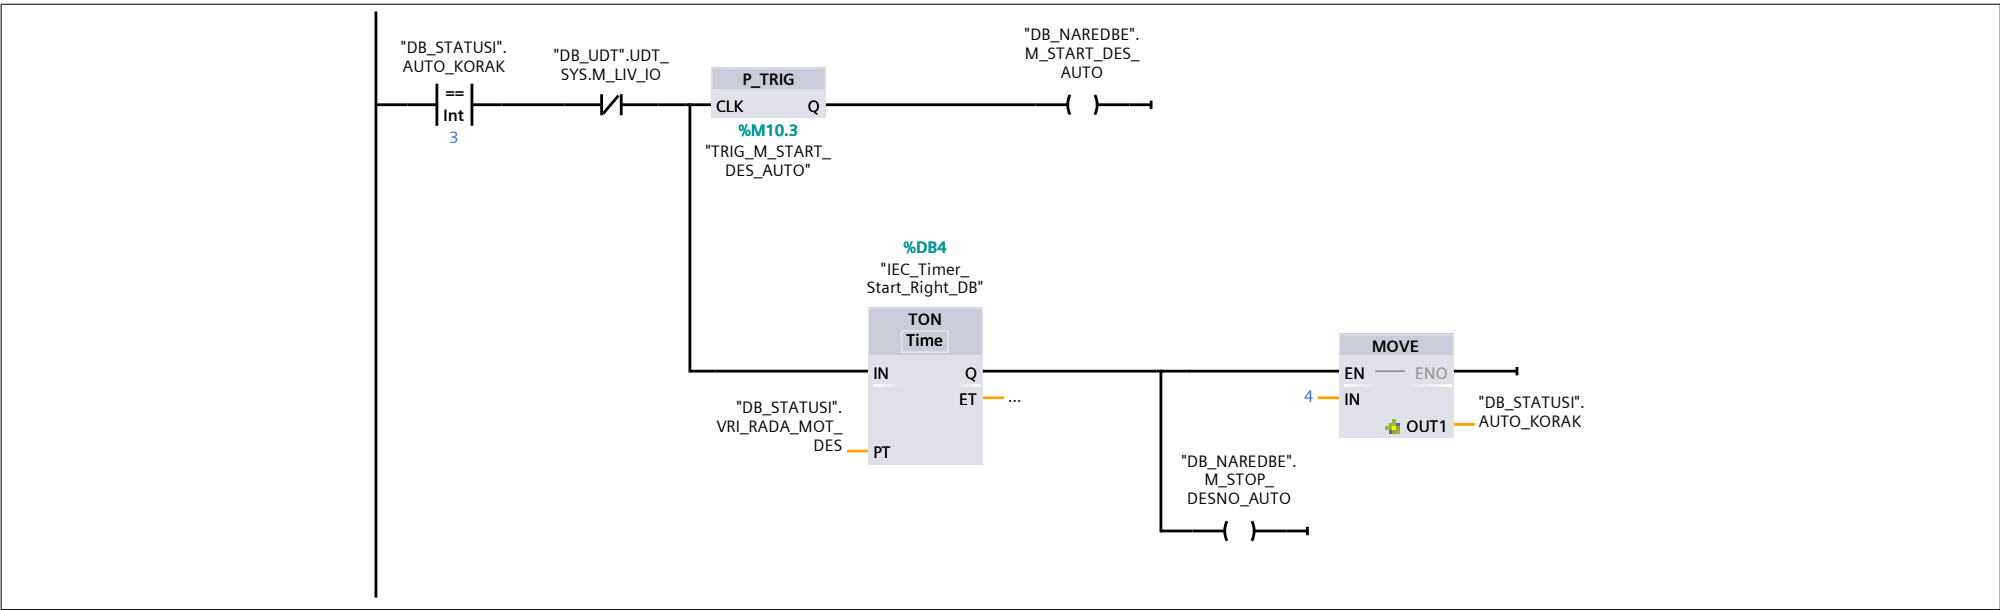


Network 10: Pauza nakon rada motora desno

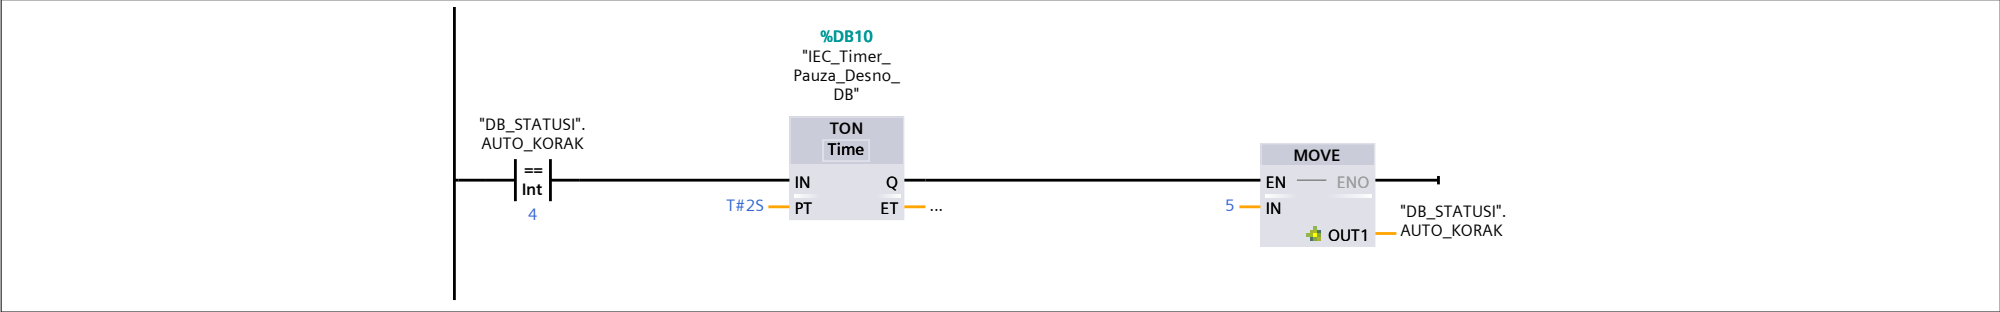

Network 11: M: Povećanje i provjera broja ciklusa

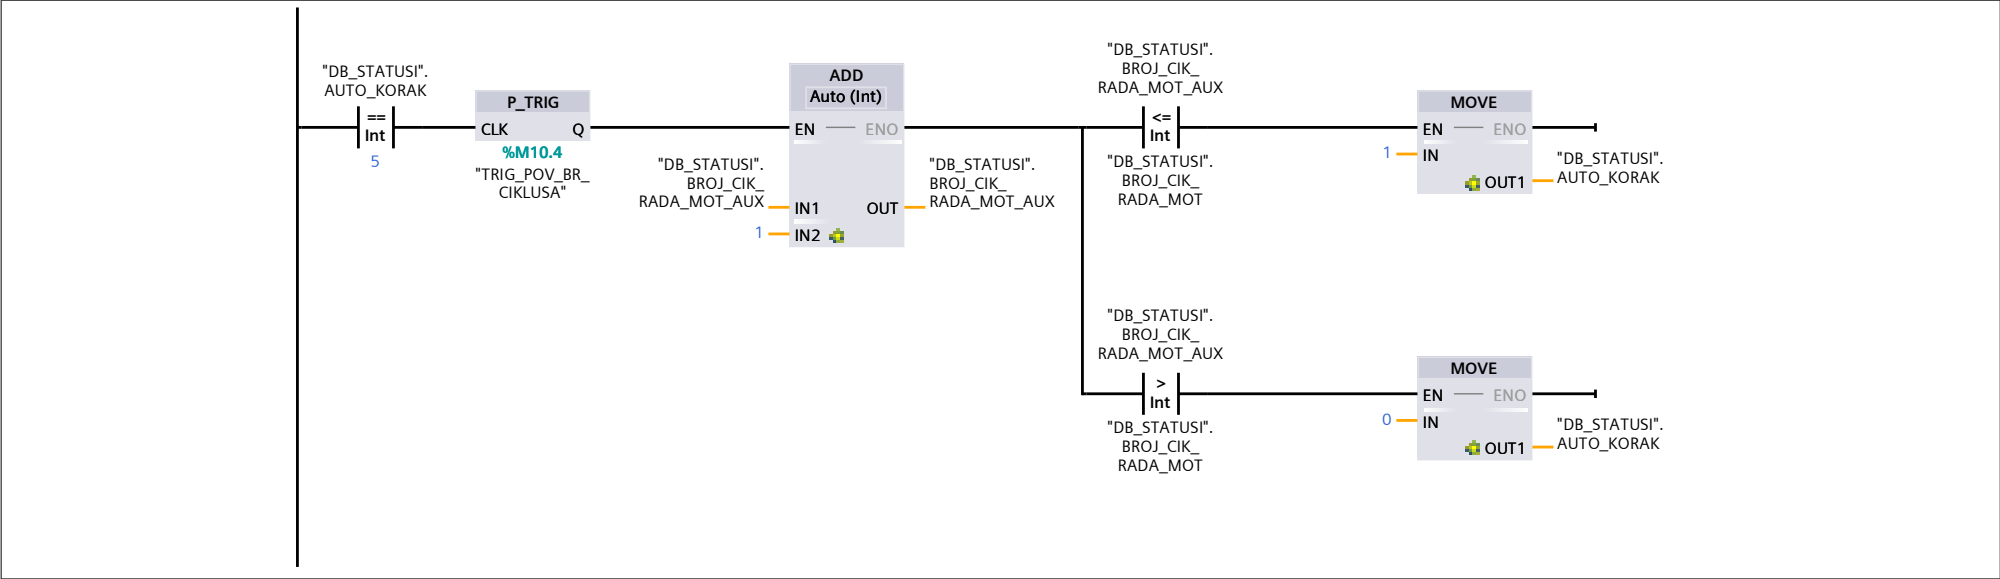

Network 12: M: Vizualizacija trenutnog broja ciklusa

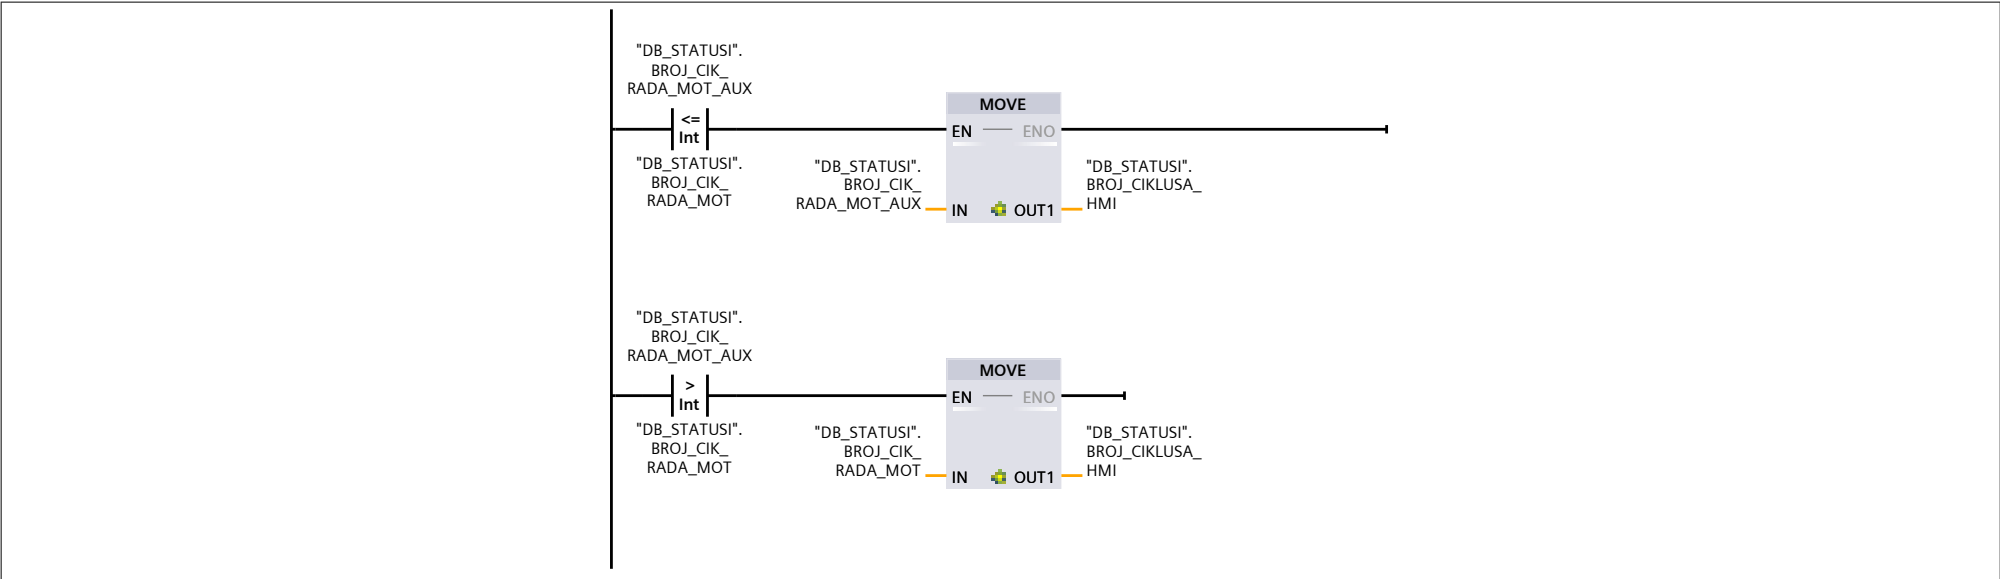

Network 13: Vizualizacija trajanja auto ciklusa

Totally Integrated Automation Portal		
"DB_STATUSI". AUTO_KORAK > Int 0 "DB_STATUSI". STOP_AUTO_ CIKLUS "DB_STATUSI". AUTO_CIK_AKT		

Totally Integrated Automation Portal

PLC_1 [CPU 1214C DC/DC/DC] / Program blocks / System blocks / Program resources

R_TRIG [FB1001]

R_TRIG Properties

General

Name	R_TRIG	Number	1001	Type	FB	Language	SCL
Numbering	Automatic						

Information

Title		Author	SIMATIC	Comment		Family	BIT
Version	1.0	User-defined ID	R_TRIG				

Name	Data type	Default value	Retain
▼ Input			
CLK	Bool	false	Non-retain
▼ Output			
Q	Bool	false	Non-retain
InOut			
▼ Static			
Stat_Bit	Bool	false	Non-retain

Totally Integrated Automation Portal

PLC_1 [CPU 1214C DC/DC/DC] / Program blocks / System blocks / Program resources

R_TRIG_DB [DB1]

R_TRIG_DB Properties

General

Name	R_TRIG_DB	Number	1	Type	DB	Language	DB
Numbering	Automatic						

Information

Title		Author	SIMATIC	Comment		Family	BIT
Version	1.0	User-defined ID	R_TRIG				

Name	Data type	Start value	Retain
▼ Input			
CLK	Bool	false	False
▼ Output			
Q	Bool	false	False
InOut			
▼ Static			
Stat_Bit	Bool	false	False

Totally Integrated Automation Portal

PLC_1 [CPU 1214C DC/DC/DC] / Program blocks / System blocks / Program resources

R_TRIG_DB_1 [DB3]

R_TRIG_DB_1 Properties

General

Name	R_TRIG_DB_1	Number	3	Type	DB	Language	DB
Numbering	Automatic						

Information

Title		Author	SIMATIC	Comment		Family	BIT
Version	1.0	User-defined ID	R_TRIG				

Name	Data type	Start value	Retain
▼ Input			
CLK	Bool	false	False
▼ Output			
Q	Bool	false	False
InOut			
▼ Static			
Stat_Bit	Bool	false	False

Totally Integrated Automation Portal

PLC_1 [CPU 1214C DC/DC/DC] / Program blocks / System blocks / Program resources

IEC_Timer_TRO_ZVI_GRAF_DB [DB6]

IEC_Timer_TRO_ZVI_GRAF_DB Properties

General

Name	IEC_Timer_TRO_ZVI_GRAF_DB	Number	6	Type	DB	Language	DB
Numbering	Automatic						

Information

Title		Author	Simatic	Comment		Family	IEC
Version	1.0	User-defined ID	IEC_TMR				

Name	Data type	Start value	Retain
▼ Static			
PT	Time	T#0ms	False
ET	Time	T#0ms	False
IN	Bool	false	False
Q	Bool	false	False

Totally Integrated Automation Portal

PLC_1 [CPU 1214C DC/DC/DC] / Program blocks / System blocks / Program resources

IEC_Timer_Start_Right_DB [DB4]

IEC_Timer_Start_Right_DB Properties

General

Name	IEC_Timer_Start_Right_DB	Number	4	Type	DB	Language	DB
Numbering	Automatic						

Information

Title		Author	Simatic	Comment		Family	IEC
Version	1.0	User-defined ID	IEC_TMR				

Name	Data type	Start value	Retain
▼ Static			
PT	Time	T#0ms	False
ET	Time	T#0ms	False
IN	Bool	false	False
Q	Bool	false	False

Totally Integrated Automation Portal

PLC_1 [CPU 1214C DC/DC/DC] / Program blocks / System blocks / Program resources

IEC_Timer_Start_Left_DB_1 [DB7]

IEC_Timer_Start_Left_DB_1 Properties

General

Name	IEC_Timer_Start_Left_DB_1	Number	7	Type	DB	Language	DB
Numbering	Automatic						

Information

Title		Author	Simatic	Comment		Family	IEC
Version	1.0	User-defined ID	IEC_TMR				

Name	Data type	Start value	Retain
▼ Static			
PT	Time	T#0ms	False
ET	Time	T#0ms	False
IN	Bool	false	False
Q	Bool	false	False

Totally Integrated Automation Portal

PLC_1 [CPU 1214C DC/DC/DC] / Program blocks / System blocks / Program resources

IEC_Timer_Reset_Ciklus_1_DB_2 [DB8]

IEC_Timer_Reset_Ciklus_1_DB_2 Properties

General

Name	IEC_Timer_Reset_Ci- klus_1_DB_2	Number	8	Type	DB	Language	DB
Numbering	Automatic						

Information

Title		Author	Simatic	Comment		Family	IEC
Version	1.0	User-defined ID	IEC_TMR				

Name	Data type	Start value	Retain
▼ Static			
PT	Time	T#0ms	False
ET	Time	T#0ms	False
IN	Bool	false	False
Q	Bool	false	False

Totally Integrated Automation Portal

PLC_1 [CPU 1214C DC/DC/DC] / Program blocks / System blocks / Program resources

IEC_Timer_Pauza_Lijevo_DB [DB9]

IEC_Timer_Pauza_Lijevo_DB Properties

General

Name	IEC_Timer_Pauza_Lijevo_DB	Number	9	Type	DB	Language	DB
Numbering	Automatic						

Information

Title		Author	Simatic	Comment		Family	IEC
Version	1.0	User-defined ID	IEC_TMR				

Name	Data type	Start value	Retain
▼ Static			
PT	Time	T#0ms	False
ET	Time	T#0ms	False
IN	Bool	false	False
Q	Bool	false	False

Totally Integrated Automation Portal

PLC_1 [CPU 1214C DC/DC/DC] / Program blocks / System blocks / Program resources

IEC_Timer_Pauza_Desno_DB [DB10]

IEC_Timer_Pauza_Desno_DB Properties

General

Name	IEC_Timer_Pauza_Desno_DB	Number	10	Type	DB	Language	DB
Numbering	Automatic						

Information

Title		Author	Simatic	Comment		Family	IEC
Version	1.0	User-defined ID	IEC_TMR				

Name	Data type	Start value	Retain
▼ Static			
PT	Time	T#0ms	False
ET	Time	T#0ms	False
IN	Bool	false	False
Q	Bool	false	False

Totally Integrated Automation Portal

PLC_1 [CPU 1214C DC/DC/DC] / Program blocks / System blocks / Program resources

IEC_Timer_ZVI_TRO_DB [DB11]

IEC_Timer_ZVI_TRO_DB Properties

General

Name	IEC_Timer_ZVI_TRO_DB	Number	11	Type	DB	Language	DB
Numbering	Automatic						

Information

Title		Author	Simatic	Comment		Family	IEC
Version	1.0	User-defined ID	IEC_TMR				

Name	Data type	Start value	Retain
▼ Static			
PT	Time	T#0ms	False
ET	Time	T#0ms	False
IN	Bool	false	False
Q	Bool	false	False

Totally Integrated Automation Portal		
PLC_1 [CPU 1214C DC/DC/DC] Technology objects This folder is empty.		

PLC_1 [CPU 1214C DC/DC/DC] / PLC tags / Default tag table [34]

PLC tags

PLC tags				
	Name	Data type	Address	Retain

PLC_1 [CPU 1214C DC/DC/DC] / PLC tags / Default tag table [34]

User constants

User constants			
	Name	Data type	Value

--	--	--

Totally Integrated Automation Portal																																																																								
PLC_1 [CPU 1214C DC/DC/DC] / PLC tags / Izlazi [12] PLC tags <table><tr><th colspan="5">PLC tags</th></tr><tr><th></th><th>Name</th><th>Data type</th><th>Address</th><th>Retain</th></tr><tr><td></td><td>ALARM_LMP_DO</td><td>Bool</td><td>%Q0.0</td><td>False</td></tr><tr><td></td><td>LEVEL_1_LMP_DO</td><td>Bool</td><td>%Q0.1</td><td>False</td></tr><tr><td></td><td>LEVEL_2_LMP_DO</td><td>Bool</td><td>%Q0.2</td><td>False</td></tr><tr><td></td><td>LEVEL_3_LMP_DO</td><td>Bool</td><td>%Q0.3</td><td>False</td></tr><tr><td></td><td>M_DES_DO</td><td>Bool</td><td>%Q2.0</td><td>False</td></tr><tr><td></td><td>M_START_LIV_DO</td><td>Bool</td><td>%Q2.1</td><td>False</td></tr><tr><td></td><td>M_KOČNICA_LMP_DO</td><td>Bool</td><td>%Q2.2</td><td>False</td></tr><tr><td></td><td>M_DIRECT_START_DO</td><td>Bool</td><td>%Q2.3</td><td>False</td></tr><tr><td></td><td>M_ZVIJEZDA_TROKUT_DO</td><td>Bool</td><td>%Q2.4</td><td>False</td></tr><tr><td></td><td>M_SOFT_START_DO</td><td>Bool</td><td>%Q2.5</td><td>False</td></tr><tr><td></td><td>M_ZVIJEZDA_DO</td><td>Bool</td><td>%Q2.6</td><td>False</td></tr><tr><td></td><td>M_TROKUT_DO</td><td>Bool</td><td>%Q2.7</td><td>False</td></tr></table>			PLC tags						Name	Data type	Address	Retain		ALARM_LMP_DO	Bool	%Q0.0	False		LEVEL_1_LMP_DO	Bool	%Q0.1	False		LEVEL_2_LMP_DO	Bool	%Q0.2	False		LEVEL_3_LMP_DO	Bool	%Q0.3	False		M_DES_DO	Bool	%Q2.0	False		M_START_LIV_DO	Bool	%Q2.1	False		M_KOČNICA_LMP_DO	Bool	%Q2.2	False		M_DIRECT_START_DO	Bool	%Q2.3	False		M_ZVIJEZDA_TROKUT_DO	Bool	%Q2.4	False		M_SOFT_START_DO	Bool	%Q2.5	False		M_ZVIJEZDA_DO	Bool	%Q2.6	False		M_TROKUT_DO	Bool	%Q2.7	False
PLC tags																																																																								
	Name	Data type	Address	Retain																																																																				
	ALARM_LMP_DO	Bool	%Q0.0	False																																																																				
	LEVEL_1_LMP_DO	Bool	%Q0.1	False																																																																				
	LEVEL_2_LMP_DO	Bool	%Q0.2	False																																																																				
	LEVEL_3_LMP_DO	Bool	%Q0.3	False																																																																				
	M_DES_DO	Bool	%Q2.0	False																																																																				
	M_START_LIV_DO	Bool	%Q2.1	False																																																																				
	M_KOČNICA_LMP_DO	Bool	%Q2.2	False																																																																				
	M_DIRECT_START_DO	Bool	%Q2.3	False																																																																				
	M_ZVIJEZDA_TROKUT_DO	Bool	%Q2.4	False																																																																				
	M_SOFT_START_DO	Bool	%Q2.5	False																																																																				
	M_ZVIJEZDA_DO	Bool	%Q2.6	False																																																																				
	M_TROKUT_DO	Bool	%Q2.7	False																																																																				

Totally Integrated Automation Portal											
PLC_1 [CPU 1214C DC/DC/DC] / PLC tags / Izlazi [12] User constants <table><tr><th colspan="3">User constants</th></tr><tr><th>Name</th><th>Data type</th><th>Value</th></tr><tr><td colspan="3"></td></tr></table>			User constants			Name	Data type	Value			
User constants											
Name	Data type	Value									

Totally Integrated Automation Portal				
PLC_1 [CPU 1214C DC/DC/DC] / PLC tags / mem_VAR [23]				
PLC tags				
PLC tags				
	Name	Data type	Address	Retain
	M_KOC_M	Bool	%M26.1	False
	SIM_UKLJ_NI	Bool	%M0.0	False
	SIM_UKLJ_REM_LOK	Bool	%M0.1	False
	SIM_UKLJ_KOC	Bool	%M0.2	False
	SIM_RAZ_1	Bool	%M0.3	False
	SIM_RAZ_2	Bool	%M0.4	False
	SIM_RAZ_3	Bool	%M0.5	False
	TRIG_OB20	Bool	%M10.0	False
	TRIG_OB21	Bool	%M10.1	False
	TRIG_M_START_LIV_AUTO	Bool	%M10.2	False
	TRIG_M_START_DES_AUTO	Bool	%M10.3	False
	TRIG_POV_BR_CIKLUSA	Bool	%M10.4	False
	TRIG_RES_ALA_ERR	Bool	%M50.5	False
	TRIG_RES_ALA_WAR	Bool	%M50.6	False
	TRIG_KOC_AUTO	Bool	%M50.7	False
	TRIG_KOC_RUC_ON	Bool	%M51.0	False
	TRIG_RES_AKT_CIK_LEV_1_ALARM	Bool	%M51.1	False
	TRIG_RES_AKT_CIK_LEV_2_ALARM	Bool	%M51.2	False
	TRIG_RES_AKT_CIK_LEV_3_ALARM	Bool	%M51.3	False
	TRIG_RES_NAC_RAD_AUTO	Bool	%M51.4	False
	TRIG_AKT_LEV_1	Bool	%M20.0	False
	TRIG_AKT_LEV_2	Bool	%M20.1	False
	TRIG_AKT_LEV_3	Bool	%M20.2	False

User constants

User constants			
	Name	Data type	Value

--	--	--

Totally Integrated Automation Portal

PLC_1 [CPU 1214C DC/DC/DC] / PLC tags / Ulazi [6]

PLC tags

PLC tags				
	Name	Data type	Address	Retain
	M_LEVEL_1_DI	Bool	%I0.0	False
	M_LEVEL_2_DI	Bool	%I0.1	False
	M_LEVEL_3_DI	Bool	%I0.2	False
	M_KOČNICA_DI	Bool	%I0.3	False
	M_LOKAL_DI	Bool	%I0.4	False
	M_E-STOP_DI	Bool	%I0.5	False

Totally Integrated Automation Portal											
PLC_1 [CPU 1214C DC/DC/DC] / PLC tags / Ulazi [6] User constants <table><tr><td colspan="3">User constants</td></tr><tr><td>Name</td><td>Data type</td><td>Value</td></tr><tr><td colspan="3"></td></tr></table>			User constants			Name	Data type	Value			
User constants											
Name	Data type	Value									

Totally Integrated Automation Portal

PLC_1 [CPU 1214C DC/DC/DC] / PLC data types

UDT_M_sFC

UDT_M_sFC Properties

General

Name	UDT_M_sFC	Number	2	Type	UDT	Language	
Numbering							

Information

Title		Author		Comment		Family	
Version		User-defined ID					

Name	Data type	Default value
M_DES_IO	Bool	false
M_LIV_IO	Bool	false
M_STOP_IO	Bool	false
M_GRESKA_IO	Bool	false
M_TRIG_DES	Bool	false
M_TRIG_LIV	Bool	false
M_BRZINA_POSTAVKA_IO	Int	0
M_GRESKA_SMJERA_IO	Bool	false
M_GRESKA_OZICENJA_IO	Bool	false
M_GRESKA_START_IO	Bool	false
M_GRESKA_TIMEOUT_IO	Bool	false
M_GRESKA_KOCNICA_IO	Bool	false
M_GRESKA_E-STOP_IO	Bool	false
M_GRESKA_SET	Bool	false
M_GRESKA_RESET	Bool	false
M_BRAKE_BLOCK	Bool	false
M_TON_ZVI_TRO_PT	Time	T#1S
M_TON_ZVI_TRO_OUT	Bool	false

Totally Integrated Automation Portal		
PLC_1 [CPU 1214C DC/DC/DC] / PLC data types System data types This folder is empty.		

Totally Integrated Automation Portal

PLC_1 [CPU 1214C DC/DC/DC] / Watch and force tables

Force table

Name	Address	Display format	Force value
"Level_1":P	%I0.0:P	Bool	
"Level_2":P	%I0.1:P	Bool	
"Level_3":P	%I0.2:P	Bool	
"Kočnica":P	%I0.3:P	Bool	
"Remote":P	%I0.4:P	Bool	
"E-Stop":P	%I0.5:P	Bool	

Totally Integrated Automation Portal		
--------------------------------------	--	--

PLC_1 [CPU 1214C DC/DC/DC] / Watch and force tables

Watch table_1

Name	Address	Display format	Modify value
"ALARM_LMP_DO"	%Q0.0	Bool	
"LEVEL_1_LMP_DO"	%Q0.1	Bool	
"LEVEL_2_LMP_DO"	%Q0.2	Bool	
"LEVEL_3_LMP_DO"	%Q0.3	Bool	
"M_DES_DO"	%Q2.0	Bool	
"M_START_LIV_DO"	%Q2.1	Bool	
"M_KOČNICA_LMP_DO"	%Q2.2	Bool	
"M_DIRECT_START_DO"	%Q2.3	Bool	
"M_ZVIJEZDA_TROKUT_DO"	%Q2.4	Bool	
"M_SOFT_START_DO"	%Q2.5	Bool	
"M_ZVIJEZDA_DO"	%Q2.6	Bool	
"M_TROKUT_DO"	%Q2.7	Bool	

--	--	--

Totally Integrated Automation Portal			
PLC_1 [CPU 1214C DC/DC/DC] Traces <table><tr><th>Name</th></tr></table>			Name
Name			

Totally Integrated Automation Portal		
PLC_1 [CPU 1214C DC/DC/DC] / Traces Measurements This folder is empty.		

Totally Integrated Automation Portal		
PLC_1 [CPU 1214C DC/DC/DC] / Traces Combined measurements Name		

Totally Integrated Automation Portal		
PLC_1 [CPU 1214C DC/DC/DC] PLC alarm text lists This folder is empty.		

Totally Integrated Automation Portal		
--------------------------------------	--	--

PLC_1 [CPU 1214C DC/DC/DC] / Local modules

DQ 8x24VDC _1

DQ 8x24VDC _1

General\Project information

Name	DQ 8x24VDC _1	Author	Korisnik	Comment	
Slot	2				

General\Catalog information

Short designation	SM 1222 DQ8 x 24VDC	Description	Digital output module DQ8 x 24VDC; plug-in terminal blocks	Article number	6ES7 222-1BF32-0XB0
Firmware version	V2.0				

DQ 8\Project information

Name	DQ 8x24VDC _1	Comment		
------	---------------	---------	--	--

DQ 8\Digital outputs

Reaction to CPU STOP	Use substitute value				
----------------------	----------------------	--	--	--	--

DQ 8\Digital outputs\Channel0

Channel address	Q2.0	Substitute a value of 1 on a change from RUN to STOP.	0	
-----------------	------	---	---	--

DQ 8\Digital outputs\Channel1

Channel address	Q2.1	Substitute a value of 1 on a change from RUN to STOP.	0	
-----------------	------	---	---	--

DQ 8\Digital outputs\Channel2

Channel address	Q2.2	Substitute a value of 1 on a change from RUN to STOP.	0	
-----------------	------	---	---	--

DQ 8\Digital outputs\Channel3

Channel address	Q2.3	Substitute a value of 1 on a change from RUN to STOP.	0	
-----------------	------	---	---	--

DQ 8\Digital outputs\Channel4

Channel address	Q2.4	Substitute a value of 1 on a change from RUN to STOP.	0	
-----------------	------	---	---	--

DQ 8\Digital outputs\Channel5

Channel address	Q2.5	Substitute a value of 1 on a change from RUN to STOP.	0	
-----------------	------	---	---	--

DQ 8\Digital outputs\Channel6

Channel address	Q2.6	Substitute a value of 1 on a change from RUN to STOP.	0	
-----------------	------	---	---	--

DQ 8\Digital outputs\Channel7

Channel address	Q2.7	Substitute a value of 1 on a change from RUN to STOP.	0	
-----------------	------	---	---	--

DQ 8\I/O addresses\Output addresses

Start address	2.0	End address	2.7	Organization block	0
Process image	0				

Totally Integrated Automation Portal		
--------------------------------------	--	--

PLC_1 [CPU 1214C DC/DC/DC] / Local modules

AI 8x13BIT_1

AI 8x13BIT_1

General\Project information

Name	AI 8x13BIT_1	Author	Korisnik	Comment	
Slot	3				

General\Catalog information

Short designation	SM 1231 AI8	Description	Analog input module AI8 x 13 bits; plug-in terminal blocks; input: 2.5V, 5V, 10V and 0/4 to 20mA; configurable frequency suppression; configurable smoothing; configurable diagnostics	Article number	6ES7 231-4HF32-0XB0
Firmware version	V2.0				

AI 8\Project information

Name	AI 8x13BIT_1	Comment		
------	--------------	---------	--	--

AI 8\Module diagnostics

Enable power supply diagnostics	1	Additional diagnostics may be selected for each input/output.		
---------------------------------	---	---	--	--

AI 8\Analog inputs\Noise reduction

Integration time	50 Hz (20 ms)				
------------------	---------------	--	--	--	--

AI 8\Analog inputs\Channel0

Channel address	IW68	Measurement type	Voltage	Voltage range	+/- 10 V
Smoothing	Weak (4 cycles)			Enable broken wire diagnostics	0
Enable overflow diagnostics	1	Enable underflow diagnostics	1		

AI 8\Analog inputs\Channel1

Channel address	IW70	Measurement type	Voltage	Voltage range	+/- 10 V
Smoothing	Weak (4 cycles)			Enable broken wire diagnostics	0
Enable overflow diagnostics	1	Enable underflow diagnostics	1		

AI 8\Analog inputs\Channel2

Channel address	IW72	Measurement type	Voltage	Voltage range	+/- 10 V
Smoothing	Weak (4 cycles)			Enable broken wire diagnostics	0
Enable overflow diagnostics	1	Enable underflow diagnostics	1		

AI 8\Analog inputs\Channel3

Channel address	IW74	Measurement type	Voltage	Voltage range	+/- 10 V
Smoothing	Weak (4 cycles)			Enable broken wire diagnostics	0
Enable overflow diagnostics	1	Enable underflow diagnostics	1		

AI 8\Analog inputs\Channel4

Channel address	IW76	Measurement type	Voltage	Voltage range	+/- 10 V
Smoothing	Weak (4 cycles)			Enable broken wire diagnostics	0
Enable overflow diagnostics	1	Enable underflow diagnostics	1		

AI 8\Analog inputs\Channel5

Channel address	IW78	Measurement type	Voltage	Voltage range	+/- 10 V
Smoothing	Weak (4 cycles)			Enable broken wire diagnostics	0
Enable overflow diagnostics	1	Enable underflow diagnostics	1		

AI 8\Analog inputs\Channel6

Channel address	IW80	Measurement type	Voltage	Voltage range	+/- 10 V
Smoothing	Weak (4 cycles)			Enable broken wire diagnostics	0
Enable overflow diagnostics	1	Enable underflow diagnostics	1		

AI 8\Analog inputs\Channel7

Channel address	IW82	Measurement type	Voltage	Voltage range	+/- 10 V
Smoothing	Weak (4 cycles)			Enable broken wire diagnostics	0
Enable overflow diagnostics	1	Enable underflow diagnostics	1		

AI 8\I/O addresses\Input addresses

Start address	68	End address	83	Organization block	0
Process image	0				

Totally Integrated Automation Portal		
--------------------------------------	--	--

PLC_1 [CPU 1214C DC/DC/DC] / Local modules

AQ 4x14BIT_1

AQ 4x14BIT_1

General\Project information

Name	AQ 4x14BIT_1	Author	Korisnik	Comment	
Slot	4				

General\Catalog information

Short designation	SM 1232 AQ4	Description	Analog output module AQ4 x 14 bits; plug-in terminal blocks; output: +/-10V and 0 to 20 mA; configurable diagnostics; configurable substitute value for output		Article number	6ES7 232-4HD32-0XB0
Firmware version	V2.0					

AQ 4\Project information

Name	AQ 4x14BIT_1	Comment		
------	--------------	---------	--	--

AQ 4\Module diagnostics

Enable power supply diagnostics	1	Additional diagnostics may be selected for each input/output.		
---------------------------------	---	---	--	--

AQ 4\Analog outputs

Reaction to CPU STOP

Use substitute value

AQ 4\Analog outputs\Channel0

Channel address	QW64	Analog output type	Voltage	Voltage range	+/- 10 V
Substitute value for channel on a change from RUN to STOP	0.000V			Enable short circuit diagnostics	0
Enable overflow diagnostics	1	Enable underflow diagnostics	1		

AQ 4\Analog outputs\Channel1

Channel address	QW66	Analog output type	Voltage	Voltage range	+/- 10 V
Substitute value for channel on a change from RUN to STOP	0.000V			Enable short circuit diagnostics	0
Enable overflow diagnostics	1	Enable underflow diagnostics	1		

AQ 4\Analog outputs\Channel2

Channel address	QW68	Analog output type	Voltage	Voltage range	+/- 10 V
Substitute value for channel on a change from RUN to STOP	0.000V			Enable short circuit diagnostics	0
Enable overflow diagnostics	1	Enable underflow diagnostics	1		

AQ 4\Analog outputs\Channel3

Channel address	QW70	Analog output type	Voltage	Voltage range	+/- 10 V
Substitute value for channel on a change from RUN to STOP	0.000V			Enable short circuit diagnostics	0
Enable overflow diagnostics	1	Enable underflow diagnostics	1		

AQ 4\I/O addresses\Output addresses

Start address	64	End address	71	Organization block	0
Process image	0				

Totally Integrated Automation Portal		
PLC_1 [CPU 1214C DC/DC/DC] / Local modules CM 1243-5 [CM 1243-5] This folder is empty.		

CM 1241 (RS485)_1

CM 1241 (RS485)_1					
General\Project information					
Name	CM 1241 (RS485)_1	Author	Korisnik	Comment	
Slot	102				
General\Catalog information					
Short designation	CM 1241 (RS485)	Description	Communications module with RS485 interface; 9-pin D-sub female connector	Article number	6ES7 241-1CH30-0XB0
Firmware version	V1.0				
RS-485 interface\General\Project information					
Name	RS-485 interface	Comment			
RS-485 interface\IO-Link					
Baud rate	9.6 kbps	Parity	No parity	Data bits	8 bits per character
Stop bits	1	Flow control	None	XON character (HEX)	0
(ASCII)	NUL	XOFF character (HEX)	0	(ASCII)	NUL
Wait time	1ms				
RS-485 interface\Configuration of transmitted message\Transmission options					
RTS ON delay	0ms	RTS OFF delay	0ms	Send break at message start	0
Number of bit times in a break	12Bit times	Send idle line after a break	0	Idle line after a break	12Bit times
RS-485 interface\Configuration of received message\Message start\					
Define message start conditions	Start on any character	Recognize message start with broken line	0	Recognize message start with idle line	0
Idle line time	40Bit times	Recognize message start with single character	0	Message start character (HEX)	2
Message start character (ASCII)	STX	Recognize message start with a character sequence	0	Number of strings to define	1
RS-485 interface\Configuration of received message\Message start\5-character message start sequence\Message start sequence 1					
Check character 1	0	Character value (HEX):	0	Character value (ASCII):	ANY
		Check character 2	0	Character value (HEX):	0
Character value (ASCII):	ANY			Check character 3	0
Character value (HEX):	0	Character value (ASCII):	ANY		
Check character 4	0	Character value (HEX):	0	Character value (ASCII):	ANY
		Check character 5	0	Character value (HEX):	0
Character value (ASCII):	ANY				
RS-485 interface\Configuration of received message\Message start\5-character message start sequence\Message start sequence 2					
Check character 1	0	Character value (HEX):	0	Character value (ASCII):	ANY
		Check character 2	0	Character value (HEX):	0
Character value (ASCII):	ANY			Check character 3	0
Character value (HEX):	0	Character value (ASCII):	ANY		
Check character 4	0	Character value (HEX):	0	Character value (ASCII):	ANY
		Check character 5	0	Character value (HEX):	0
Character value (ASCII):	ANY				
RS-485 interface\Configuration of received message\Message start\5-character message start sequence\Message start sequence 3					
Check character 1	0	Character value (HEX):	0	Character value (ASCII):	ANY
		Check character 2	0	Character value (HEX):	0
Character value (ASCII):	ANY			Check character 3	0
Character value (HEX):	0	Character value (ASCII):	ANY		
Check character 4	0	Character value (HEX):	0	Character value (ASCII):	ANY
		Check character 5	0	Character value (HEX):	0
Character value (ASCII):	ANY				
RS-485 interface\Configuration of received message\Message start\5-character message start sequence\Message start sequence 4					
Check character 1	0	Character value (HEX):	0	Character value (ASCII):	ANY
		Check character 2	0	Character value (HEX):	0
Character value (ASCII):	ANY			Check character 3	0
Character value (HEX):	0	Character value (ASCII):	ANY		

Totally Integrated Automation Portal							
Check character 4	0	Character value (HEX):	0	Character value (AS-CII):	ANY		
		Check character 5	0	Character value (HEX):	0		
Character value (AS-CII):	ANY						
RS-485 interface\Configuration of received message\Message end\Define message end conditions							
Recognize message end by message timeout	1	Message timeout	200ms	Recognize message end by response timeout	0		
Response timeout	200ms	Recognize message end by inter-character timeout	0	Inter-character gap timeout	12Bit times		
Recognize message end by maximum length	0	Maximum length of message	1bytes	Read message length from message	0		
Offset of length field in message	1bytes	Size of length field	1bytes	The length field following the data is not included in the message length	0bytes		
Recognize message end with a character sequence	0						
RS-485 interface\Configuration of received message\Message end\5-character message end sequence							
Check character 1	0	Character value (HEX):	0	Character value (AS-CII):	ANY		
Check character 2	0	Character value (HEX):	0	Character value (AS-CII):	ANY		
Check character 3	0	Character value (HEX):	0	Character value (AS-CII):	ANY		
Check character 4	0	Character value (HEX):	0	Character value (AS-CII):	ANY		
Check character 5	0	Character value (HEX):	0	Character value (AS-CII):	ANY		