

Project Name : IWS (PVT AWS)

Camera: Impact By Honeywell 2MP Camera

Cam 1 – 192.168.22.221

rtsp://admin:Admin%4012@192.168.22.221:554/h264/ch1/main/av_stream

Cam 2 – 192.168.22.222

rtsp://admin:Admin%4012@192.168.22.222:554/h264/ch1/main/av_stream

Cam 3 – 192.168.22.223

rtsp://admin:Admin%4012@192.168.22.223:554/h264/ch1/main/av_stream

Cam 4 – 192.168.22.224

rtsp://admin:Admin%4012@192.168.22.224:554/h264/ch1/main/av_stream

Router: COFE Modem

IP Address : 192.168.22.1

Username : admin

Password : admin

RFID Reader:

RFID Baud Rate : 115200

Interface : RS232 (USB)

Weight Scale :

Weight Scale Baud Rate : 9600

Interface : RS232 (USB)

Signal Indicator :

Indicator (A-Uno) Baud Rate : 9600

Interface : USB

LED Display:

Display Baud Rate : 9600

Interface : RS485 (USB)

HEX - 01 10 00 00 00 20 40

ASCII - <L3><F1><S0><G><Message>

NOTE:


F1 - BIG FONT SIZE



S0 - STATIC

S1 - RUNNING

G - COLOUR (R/G/B/C/Y/K/W) ANY COLOUR

Example (HEX): 01 10 00 00 00 20 40 3C 4C 33 3E 3C 46 31 3E 3C 53 31 3E 3C
47 3E 3C 52 65 61 6C 54 65 63 68 20 53 79 73 74 65 6D 73 2E 2E
2E 21 21 21 20 3E

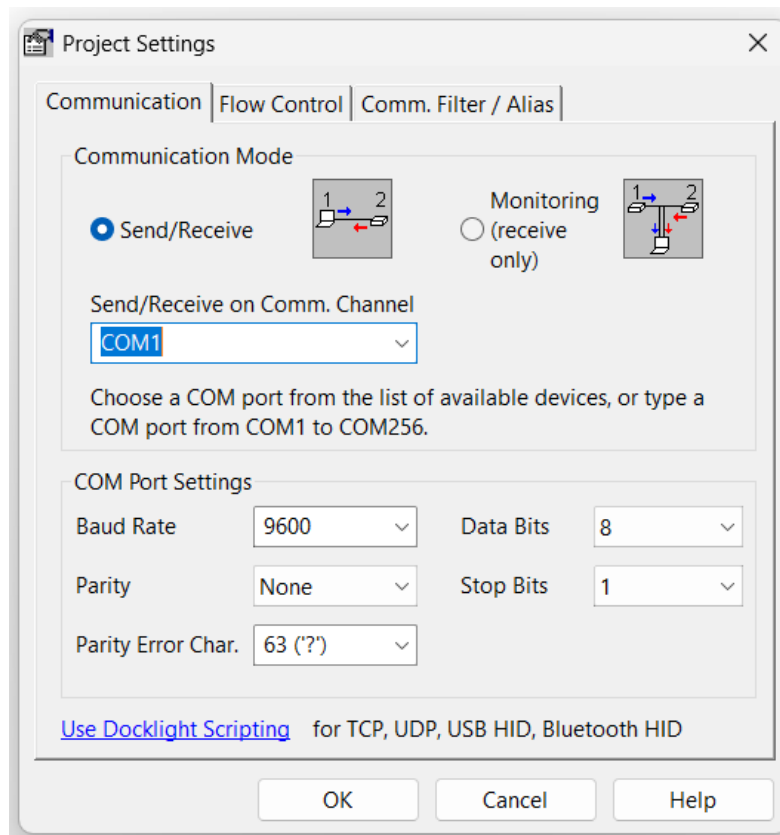

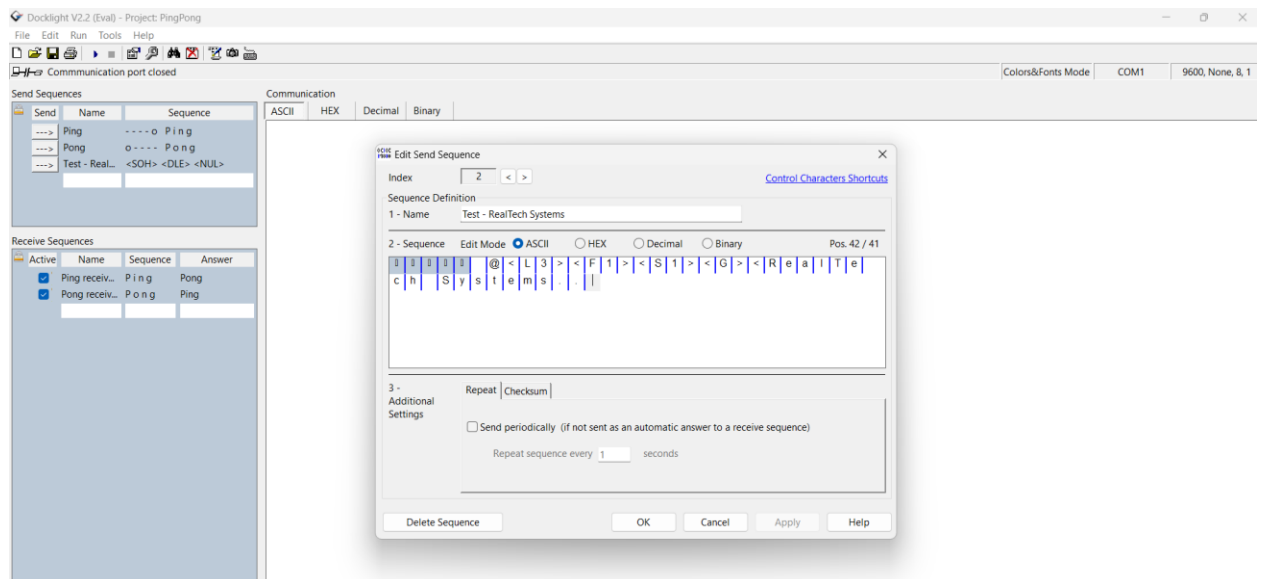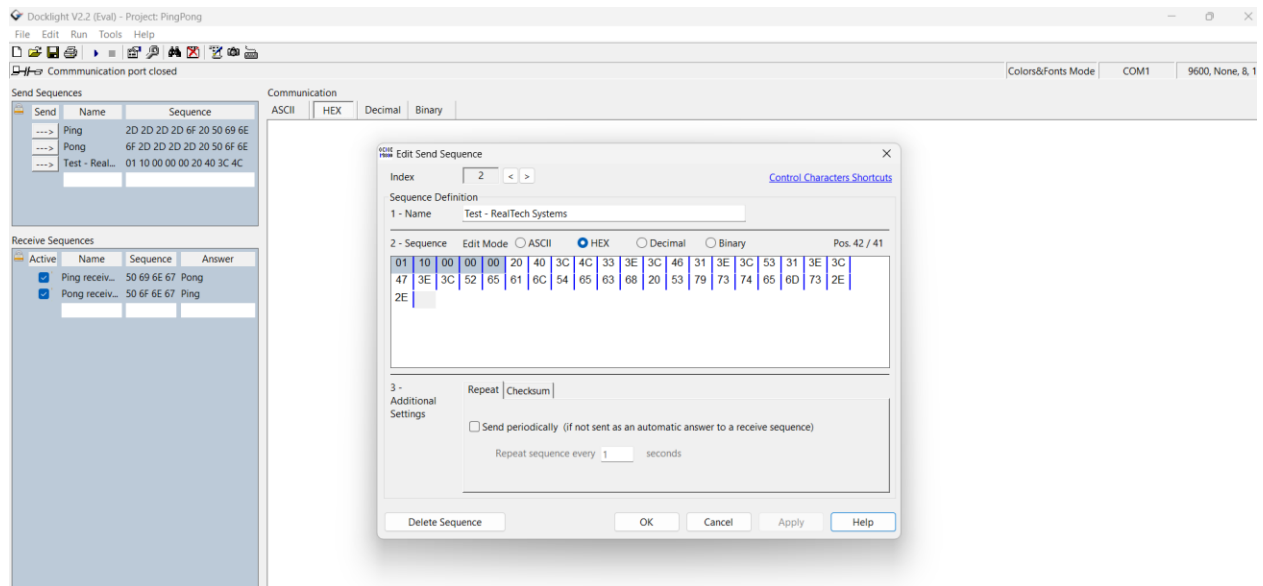

Speaker :

Speaker Interface : USB to Audio Cable

Temp Connect : Bluetooth

Boom Barrier and Photo Electric Sensor:

Interface : I/Os (Need to Plan)

Raspberry PI:

Model : Raspberry PI 5

RAM : 4GB

Memory Card : Sandisk Ultra – 32GB

Host Name : IWS-PVT

Username : iwsrts

Password : rts@12345

SSH : Enable

VNC : Enable

SPI : Enable

I2C : Enable

Serial Port : Enable

Serial Console : Enalbe

1-Wire : Enable

OS Customisation

General Services Options

☒ Set hostname: IWS-PVT .local

☒ Set username and password

Username: iworks

Password:

☒ Configure wireless LAN

SSID: RTS_AWS-AP

Password:

☐ Hidden SSID

Wireless LAN country: IN

☒ Set locale settings

Time zone: Asia/Calcutta

Keyboard layout:

CANCEL SAVE

Control Centre

Display

Interfaces

Keyboard

Localisation

Mouse

Performance

SSH:

VNC:

SPI:

I2C:

Serial Port:

Serial Console:

1-Wire:

Close

