


Uncontrolled_CT_FWR

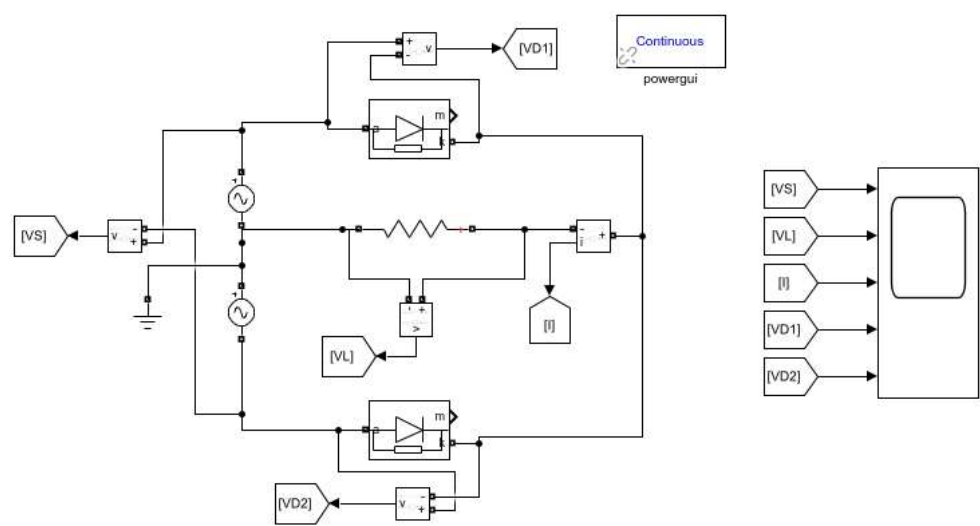

lenovo

15-Jun-2026 14:37:07

Table of Contents

- [Model - Uncontrolled_CT_FWR](#)
- [System - Uncontrolled_CT_FWR](#)
- [Appendix](#)

List of Tables

- [AC Voltage Source Block Properties](#)
- [Current Measurement Block Properties](#)
- [Diode Block Properties](#)
- [From Block Properties](#)
- [Goto Block Properties](#)
- [Ground Block Properties](#)
- [PSB option menu block Block Properties](#)
- [Series RLC Branch Block Properties](#)
- [Voltage Measurement Block Properties](#)
- [Block Type Count](#)

Model - Uncontrolled_CT_FWR

Full Model Hierarchy

- [Uncontrolled_CT_FWR](#)

Simulation Parameter	Value
Solver	FixedStepAuto
RelTol	1e-3
Refine	1
MaxOrder	5
FixedStep	1e-6
ZeroCross	on

[\[more info\]](#).

System - Uncontrolled_CT_FWR

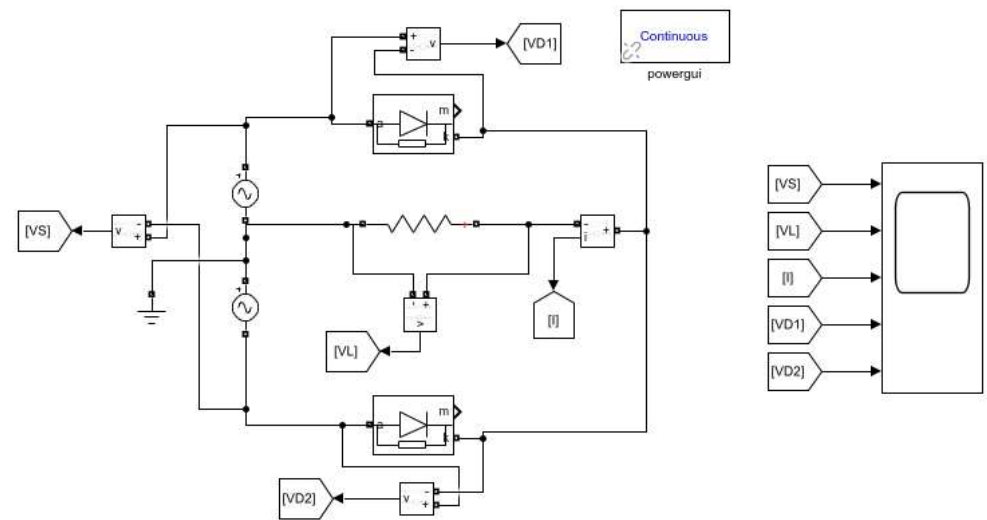


Table 1. AC Voltage Source Block Properties

Name	Amplitude	Phase	Frequency	Sample Time	Measurements	Bus Type
AC Voltage Source	21.2	0	50	0	None	swing
AC Voltage Source1	21.2	0	50	0	None	swing

Table 2. Current Measurement Block Properties

Name
Current Measurement

Table 3. Diode Block Properties

Name	Ron	Lon	Vf	IC	Rs	Cs	Measurements
Diode	0.001	0	0.8	0	500	250e-9	on
Diode1	0.001	0	0.8	0	500	250e-9	on

Table 4. From Block Properties

Name	Goto Tag	Icon Display	Goto Blk Name	Goto Blk Location	Defined In Blk
From	VS	Tag	Goto	Uncontrolled_CT_FWR	do not delete this gain
From1	VL	Tag	Goto3	Uncontrolled_CT_FWR	do not delete this gain
From2	I	Tag	Goto4	Uncontrolled_CT_FWR	do not delete this gain
From3	VD1	Tag	Goto2	Uncontrolled_CT_FWR	do not delete this gain
From4	VD2	Tag	Goto1	Uncontrolled_CT_FWR	do not delete this gain

Table 5. Goto Block Properties

Name	Goto Tag	Icon Display	Tag Visibility	From Blk	From Blk Location	Used By Blk
Goto	VS	Tag	local	From	Uncontrolled_CT_FWR	Scope
Goto1	VD2	Tag	local	From4	Uncontrolled_CT_FWR	Scope
Goto2	VD1	Tag	local	From3	Uncontrolled_CT_FWR	Scope
Goto3	VL	Tag	local	From1	Uncontrolled_CT_FWR	Scope
Goto4	I	Tag	local	From2	Uncontrolled_CT_FWR	Scope

Table 6. Ground Block Properties

Name	Physical Domain	Sub Class Name	Left Port Type	Right Port Type
Ground	powersysdomain	unknown	p1	p1

Table 7. PSB option menu block Block Properties

Name	Simulation Mode	Iterations	Frequency	Indice	Pbase	Err Max	Units V	Units W	Function Messages	Echomessages	Current Source Switches	Disable Snubber Devices	Disable Ron Switches	Disable Vf Switches	Display Equations	Method
powergui	Continuous	50	50		100e6	1e-4	kV	MW	off	off	off	off	off	off	off	off

Table 8. Series RLC Branch Block Properties

Name	Branch Type	Resistance	Measurements
Series RLC Branch	R	30	None

Table 9. Voltage Measurement Block Properties

Name

Name
Voltage Measurement1
Voltage Measurement2
Voltage Measurement3
Voltage Measurement4

Appendix

Table 10. Block Type Count

BlockType	Count	Block Names
Goto	5	Goto , Goto1 , Goto2 , Goto3 , Goto4
From	5	From , From1 , From2 , From3 , From4
Voltage Measurement (m)	4	Voltage Measurement1 , Voltage Measurement2 , Voltage Measurement3 , Voltage Measurement4
Diode (m)	2	Diode , Diode1
AC Voltage Source (m)	2	AC Voltage Source , AC Voltage Source1
Series RLC Branch (m)	1	Series RLC Branch
Scope	1	Scope
PSB option menu block (m)	1	powergui
Ground (m)	1	Ground
Current Measurement (m)	1	Current Measurement