

Annual Maintenance SLP99

Dealer Information

Dealer Name: _____ Technician: _____

Today's Date: _____ Date of last maintenance: _____

Customer Information

Name: _____ Phone: _____

Address: _____

City: _____ State: _____ Zip: _____

Equipment Information

Furnace Model #: _____ Serial #: _____

Evap Coil Model#: _____ Serial #: _____

Outdoor Unit Model#: _____ Serial#: _____

Thermostat Mfg: _____ Model#: _____

PRE-CHECKS

- ☐ 1. Inspect the outdoor vent termination to confirm it is correct and unobstructed
- ☐ 2. Diagnostic codes recalled from memory: _____
- ☐ 3. Confirm dip switch settings are set correctly (dip switches are ignored when icomfort t-stat is used)
- ☐ 4. Electrical connections tight? (check all Jack Plug Pins, spade & screw terminals, field wiring, etc.)
- ☐ 5. Is the unit properly grounded? Yes _____ No _____
- ☐ 6. Are all gas pipe connections tight and leak tested? Yes _____ No _____
- ☐ 7. Fuel type: Natural Gas _____ LP/Propane _____ Other _____
- ☐ 8. Air filter clean and secure (replace if necessary)? Yes _____ No _____
- ☐ 9. Air filter size & type: _____
- ☐ 10. Check the condition of the blower motor / blower assembly, clean if necessary
- ☐ 11. Inspect the burners for rust, spider webs, obstructions, etc., clean if necessary
- ☐ 12. Inspect the condition and cleanliness of the heat exchanger, clean if necessary
- ☐ 13. Inspect the vent system for obstruction, leaks, proper size, and proper pitch, correct as needed

- ☐ 14. Inspect condensate trap and drain lines, clean or replace as needed
- ☐ 15. Inspect all pressure switch hoses and hose ports, clean or replace as needed
- ☐ 16. Check cabinet pitch using a level, shim cabinet to adjust if needed


OPERATIONAL CHECKS

- ☐ 17. Supply voltage (VAC): _____
- ☐ 18. Secondary transformer voltage (VAC): _____
- ☐ 19. Static line gas pressure (in-w.c.): _____ (measured with unit off , all gas appl. off)
- ☐ 20. Operating line gas pressure (in-w.c.): _____ (unit firing at 100%, all gas appl. operating)
- ☐ 21. Manifold pressure (in-w.c.): @35% _____ @100% _____
- ☐ 22. Delta signal pressure to gas valve (in-w.c.): @35% _____ @100% _____
- ☐ 23. After measuring the delta signal pressures & the manifold pressures at each firing rate, confirm that these values match those published in the SLP99 service manual. If they do not, you must troubleshoot the unit and make the necessary repairs until they are within the acceptable limits before proceeding.
- ☐ 24. Flue gas carbon dioxide content (% CO₂): @35% _____ @100% _____
- ☐ 25. Flue gas carbon monoxide content (ppm CO): @35% _____ @100% _____
- ☐ 26. Heating blower cfm: @35% _____ @100% _____
- ☐ 27. Flame signal–initial readings (microamps): @35% _____ @100% _____
- ☐ 28. Flame signal–final readings (microamps): @35% _____ @100% _____
- ☐ 29. Furnace input (Btuh): _____ (clock gas meter with unit operating @ 100% capacity)
- ☐ 30. Rec. temperature rise per unit nameplate: @35% _____ °F, @100% _____ °F
- ☐ 31. Actual temperature rise: @35% _____ °F, @100% _____ °F
- ☐ 32. Fan off timing set to (seconds): _____
- ☐ 33. Supply air temperature when blower times off: _____ °F (rec: 15-20 °F ΔT)
- ☐ 34. Observe the flow of condensate as unit operates on high fire. Is unit draining properly?
- ☐ 35. Clear all diagnostic codes

SLP99

Service Information

5/2021

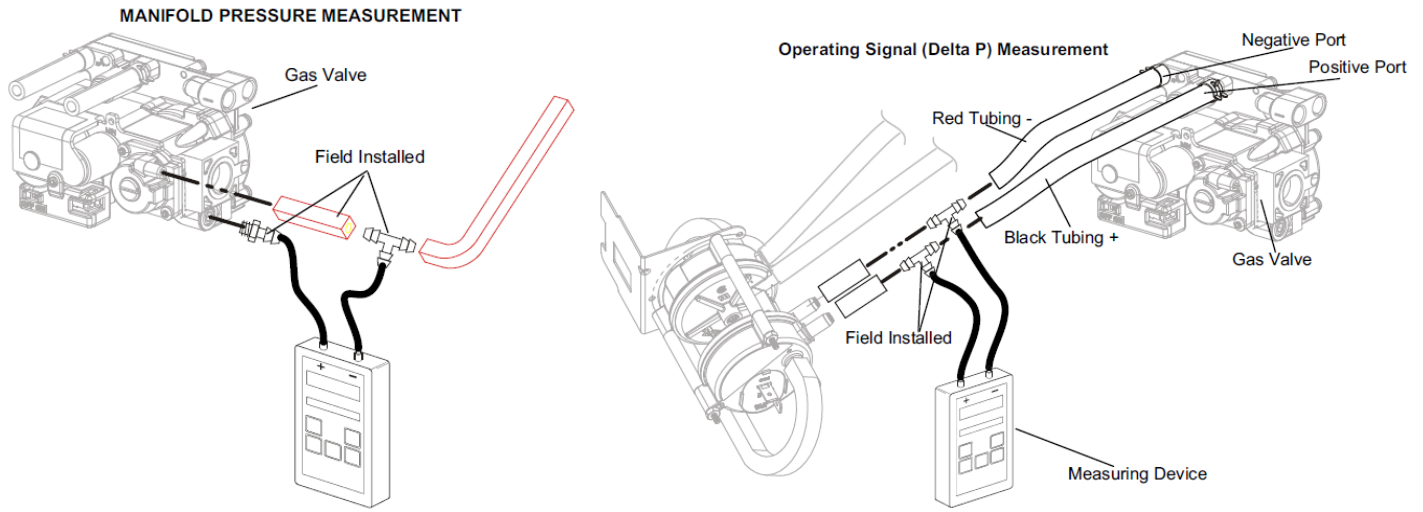

Manifold and Operating Signal Pressures in inches 0 - 7500 ft (0 - 2286 m)

SLP99 Firing Rate	Manifold Pressure Nat Gas		Manifold Pressure LP/Propane		Operating Pressure Signal (Delta P)	
	Min	Max	Min	Max	Min	Max
Low	0.4	0.95	1.2	2.8	0.20	0.40
High	3.0	3.8	9.1	10.5	0.95	1.25
-090-060C Only	Min	Max	Min	Max	Min	Max
Low	0.30	0.85			0.15	0.35
Low			1.2	2.8	0.20	0.40
High	3.0	3.8	9.1	10.5	0.95	1.20

NOTE - The values given in table are measurements only. The gas valve should **NOT** be adjusted.

NOTE - A natural to LP/propane gas changeover kit (table 31) is necessary to convert this unit. Refer to the changeover kit installation instruction for the conversion procedure.

High Fire

SLP99UHV Unit	CO ₂ % For Nat	CO ₂ % For L.P.
070	6.5 - 9.0	7.7 - 10.2
09036C/48C		
09060C	6.7 - 9.2	8.0 - 10.5
110	6.5 - 9.0	7.7 - 10.2
135		
The maximum carbon monoxide reading should not exceed 100 ppm.		

Low Fire

SLP99UHV Unit	CO ₂ % For Nat	CO ₂ % For L.P.
070	4.7 - 7.2	5.7 - 8.2
09036C/48C		
09060C	5.3 - 7.8	5.7 - 8.2
110	4.7 - 7.2	5.7 - 8.2
135		
The maximum carbon monoxide reading should not exceed 100 ppm.		