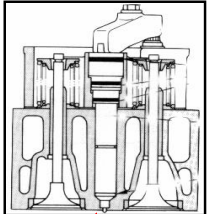
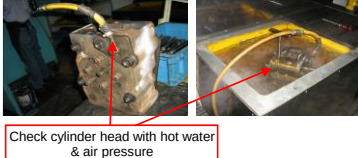
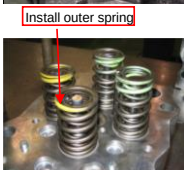
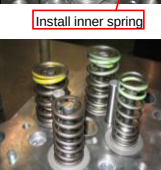
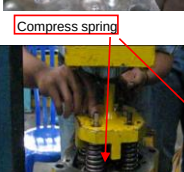
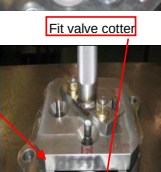
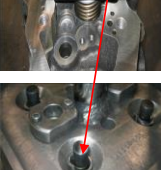
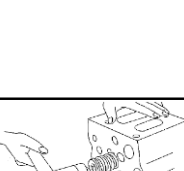
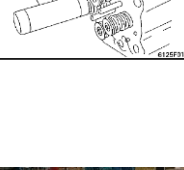
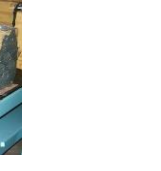


ASSEMBLY CHECK SHEET CYLINDER HEAD ENGINE ALL SERIES	WO NO.		PART NAME	CYL. HEAD ASS'Y	DOCUMENT NO.	RC/QR04/EG/03/02
	ENGINE MODEL		PART NUMBER		PUBLIC DATE	13/10/2009
	ENGINE S/N		START DATE /TIME		REVISION NO.	00
	MACHINE MODEL		FINISH DATE / TIME		PAGE	2 of 2

ASSEMBLY BY		All dimensions in millimetres
		All torques in Kilogram metres

NO	PARTS	CHECK POINT	CONDITION TO BE CHECKED	SPEC.	SIGN			REMARKS (SKETCH, PHOTOS & COMMENT)
					MEC	QA	SPV	
1	CYL.HEAD ASSEMBLY	Head Assy Threads Cyl.Heads	- Head Assy must be free from crack, dents, pitting, rust and worn - Make sure all threads are not damage - Make sure top surface and bottom surface of the Cylinder heads are good conditions - Make sure the Cylinder Heads are clean					
2	VALVE GUIDES	Bores	- The Valve Guides be renew after measured. - Make sure the Valve Guide bores are clean when reinstall of the Valve Guides • Before inserting the valve guide, coat the outer dimension of the valve guide with small quantity of engine oil (SAE 15W-40)	GO and NO GO Hyd. Press				 Insert and press valve guides
3	INSERT VALVE	Insert Valve Bores Valve Sinking	- Make sure the dimension of the Insert Valve bores - Check that there is no dust, crack, corrosive and dirt - Install the Insert Valve be carefully • Diameter between Insert Valve bore and Insert Valve must interference see measurement check sheet • When install Insert Valves must straight to hole position - Check Valve sinking/Protrusion and refer to Standard (Shop Manual or measurement Check Sheet) • If sinking or Protrusion out of standard, cutting Insert or Valve and recheck sinking or Protrusion it must standard condition.	Special Tool Grinding Valve machine or Cutting Insert machine				 Install insert valve  Check valve sinking 
4	NOZZLE SLEEVE	Nozzle Sleeve Condition	- The Nozzle Sleeves must be renew - Check the O-ring grooves and the Nozzle Sleeve bores are clean when reinstall of the Nozzle Sleeves - Make sure the Nozzle Sleeves are in good position • When install and cutting the Nozzle Sleeves must use the Special Tool and refer to replacing Nozzle Holder Sleeve in Shop Manual (see replacing nozzle holder sleeve Job Instruction). • Check and measure protrusions of Nozzles after cutting Nozzle Sleeves (See and Record at the Measurement Check Sheet).					 Check nozzle protrusions 
5	CRACK & LEAK TEST CYL.HEAD	Pressure test	- Air Pressure Test 1. Assemble plate and flange 2. Connect a hose to flange 3. Place the Cyl. Head in a water bath with hot water 4. Apply air pressure (3.0 ~ 3.5 kg/cm²) for approx 5 ~ 10 Min. 5. Check for any air leakage in the water. 6. Replace Cyl. Head if there are crack.	3.0 ~ 3.5 kg/cm ² for approx 5 ~ 10 Min. (82°C ~ 93°C)				 Check cylinder head with hot water & air pressure

ASSEMBLY CHECK SHEET CYLINDER HEAD ENGINE ALL SERIES	WO NO.		PART NAME	CYL. HEAD ASS'Y	DOCUMENT NO.	RC/QR04/EG/03/02
	ENGINE MODEL		PART NUMBER		PUBLIC DATE	13/10/2009
	ENGINE S/N		START DATE /TIME		REVISION NO.	00
	MACHINE MODEL		FINISH DATE / TIME		PAGE	2 of 2

NO	PARTS	CHECK POINT	CONDITION TO BE CHECKED	SPEC.	SIGN			REMARKS (SKETCH, PHOTOS & COMMENT)																						
					MEC	QA	SPV																							
6	VALVE & SPRING ASSEMBLY		- Make sure Cylinder Head free from Dirt and foreign material - Make sure all component that will assembly already clean 1. Align with casting mark on Cylinder Head and assembly Intake valve and Exhaust valve coat the valve steam and the face of the Valve thinly with engine oil (SAE 15W ~ 40) ● Make sure of Valve (Intake and Exhaust) correct arrangement ● Make sure the Valves are following to PSN Valve code					               																						
		PSN	<table border="1"> <thead> <tr> <th>ENGINE MODEL</th><th>VALVE INTAKE</th><th>VALVE EXHAUST</th></tr> </thead> <tbody> <tr> <td>140 SERIES</td><td>I</td><td>CX / PX</td></tr> <tr> <td>170 SERIES</td><td>AN / BN</td><td>EX / X</td></tr> <tr> <td>125 SERIES</td><td>IN / BN</td><td>EX / BX</td></tr> <tr> <td>155 SERIES</td><td>I</td><td>E</td></tr> <tr> <td>170-3</td><td>IN</td><td>E</td></tr> <tr> <td colspan="3">ACTUAL</td></tr> <tr> <td></td><td></td><td></td></tr> </tbody> </table>	ENGINE MODEL	VALVE INTAKE	VALVE EXHAUST	140 SERIES	I	CX / PX	170 SERIES	AN / BN	EX / X	125 SERIES	IN / BN	EX / BX	155 SERIES	I	E	170-3	IN	E	ACTUAL								
ENGINE MODEL	VALVE INTAKE	VALVE EXHAUST																												
140 SERIES	I	CX / PX																												
170 SERIES	AN / BN	EX / X																												
125 SERIES	IN / BN	EX / BX																												
155 SERIES	I	E																												
170-3	IN	E																												
ACTUAL																														
			2. Install lower seat to Cylinder Head, install valve seal (125 series + 140 series), then Assembly inner and outer spring 3. Install upper seat 4. Compress spring and fit Valve cotter in groove of valve steam ● Make sure the Valve cotter good position in groove of Valve Steam ● Recheck and make sure that Valve, Spring Valve and Seat Spring correct arrangement ● Recheck pitch of Valve Spring (The Spring with the unequal pitch is assembled with the narrow pitch at the Head End) Tap Valve Steam end with plastic Hammer and check that Valve cotter is completely fitted. 5. Recheck Cylinder Head Assy completely. ● Coat Cylinder Head (bottom surface, upper surface, Intake and Exhaust side and Spring) with engine oil SAE 15W - 40) ● Plugging and masking the Cylinder Head. 6. Keep Cylinder Head Assy in keeping area.																											

[illegible]



ASSEMBLY CHECK SHEET CYLINDER HEAD ENGINE ALL SERIES	WO NO.		PART NAME	CYL. HEAD ASS'Y	DOCUMENT NO.	RC/QR04/EG/03/02
	ENGINE MODEL		PART NUMBER		PUBLIC DATE	13/10/2009
	ENGINE S/N		START DATE /TIME		REVISION NO.	00
	MACHINE MODEL		FINISH DATE / TIME		PAGE	2 of 2