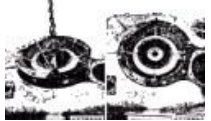
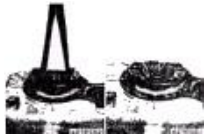
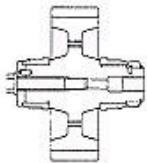


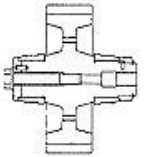
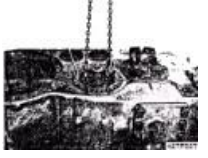
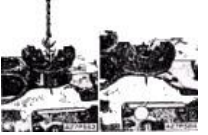
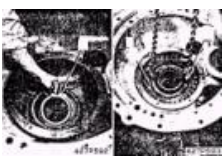
ASSEMBLY CHECK SHEET TRANSFER & TRANSMISSION WA800 - 3	PROJECT NUMBER		DOC.NO.	QR03-PT-035
	COMP. MODEL		PUB. DATE	01 /08/2015
	COMP. S/N		REV. NO	01
	MACHINE MODEL		PAGE	1 of 9

PROCESS	START		ASSEMBLY BY	
	FINISH			

TRANSFER


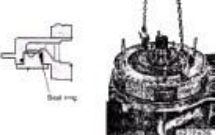
NO	PARTS	CHECK POINT	SPECIFICATION	SIGN			FIGURE OF PARTS TO BE CHECKED
				MEC	SPV	QA	
1	CAGE ASSY	- Careful press fit bearing, then lock with snap ring, then install oil seal to cage.	- Lip of oil seal grease (G2-LI)				
		- Install case assy, then torque bolt Act. : kgm	- Std torque bolt 11.5 ± 1.0 kgm				
2	COUPLING ASSY	- Raise coupling assy, install fit o-ring & holder then tighten bolts. Act. : kgm	- Std torque bolt 225 ± 15 kgm				
3	NO.2 GEAR ASSY	- Press fit inner race in gear, align holders with dowel pin of gear then install. - Tighten bolt, then check that the clearance & take average Act. : mm	- Clearance max. 0.04 mm - LT-2				
		- Careful install gear assy	- Check that position of gear.				
4	CAGE ASSY	- Fit o-ring then install cage assy, tighten bolts Act. : kgm	- Std Torque 11.5 ± 1.0 kgm				
5	STRAINER ASSY	- Install spring carefully then tighten bolts Act. : kgm	- Insert spring securely in the groove at the top of the strainer. - Std Torque 11.5 ± 1.0 kgm				

ASSEMBLY CHECK SHEET TRANSFER & TRANSMISSION WA800 - 3	PROJECT NUMBER		DOC.NO.	QR03-PT-035
	COMP. MODEL		PUB. DATE	01 /08/2015
	COMP. S/N		REV. NO	01
	MACHINE MODEL		PAGE	2 of 9

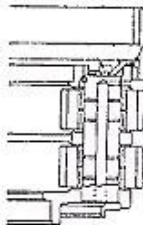
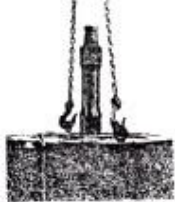
NO	PARTS	CHECK POINT	SPECIFICATION	SIGN			FIGURE OF PARTS TO BE CHECKED
				MEC	SPV	QA	
6	SHAFT ASSY	- Install collar, spacer to shaft, then install of them to gear.					
7	CAGE ASSY	- Install oil seal in cage - Press fit bearing to cage	- Lip of oil seal grease (G2-LI).				
8	NO.3 GEAR	- Install inner race to gear, align with dowel pin, install holder then lock with snap ring. - Install holder, then tighten bolt.	- LT-2				
		- Raise gear assy, then install carefully.	- Check position of gear				
9	COUPLING ASSY	- Raise coupling assy then torque bolt Act. : kgm	- Std Torque 225 ± 15 kgm - LT-2				
10	No.1 GEAR	- Install gear carefully	- Check that position of gear				
11	CAGE ASSY	- Press fit bearing to cage, then install cage assy to housing torque bolt Act. : kgm	- Std Torque 11.5 ± 1.0 kgm - LT-2				

ASSEMBLY CHECK SHEET TRANSFER & TRANSMISSION WA800 - 3	PROJECT NUMBER		DOC.NO.	QR03-PT-035
	COMP. MODEL		PUB. DATE	01 /08/2015
	COMP. S/N		REV. NO	01
	MACHINE MODEL		PAGE	3 of 9

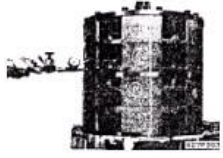
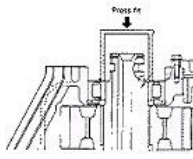
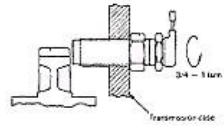
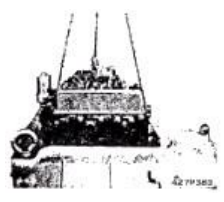
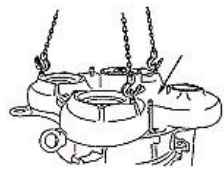
TRANSMISSION

NO	PARTS	CHECK POINT	SPECIFICATION	SIGN			FIGURE OF PARTS TO BE CHECKED
				MEC	SPV	QA	
1	PRESSURE PLATE, RETAINER	- Fit seal ring to pressure plate, then install to drum.	- Check position of seal ring.				
		- Fit retainer and tighten bolts. Act. : kgm	- Std Torque 6.75 ± 0.75 kgm - LT-2				
		- Install plate, disc & spring, raise carrier assy, install then tighten bolts. Act. : kgm	- Std Torque 11.25 ± 1.25 kgm - LT-2				
2	NO.4 RING GEAR, CARRIER ASSY	- Fit retainer, then tighten bolts Act. : kgm	- Check snap ring installed to the ring gear is seat securely between the retainer & carrier. - Std Torque 6.75 ± 0.75 kgm				
		- Install ring gear and carrier assy	- LT-2 - Install seal ring to the ring gear and carrier assy.				
3	SPRING	- Install spring carefully - Actual free height of spring Act. : mm	- Careful to distinguish it when installing - Free height of spring : 91 mm				
4	PISTON, HOUSING	- Fit seal ring, then install piston in housing.	- Install seal ring with the groove facing the housing, and not to damage the seal rings.				

ASSEMBLY CHECK SHEET TRANSFER & TRANSMISSION WA800 - 3	PROJECT NUMBER		DOC.NO.	QR03-PT-035
	COMP. MODEL		PUB. DATE	01 /08/2015
	COMP. S/N		REV. NO	01
	MACHINE MODEL		PAGE	4 of 9

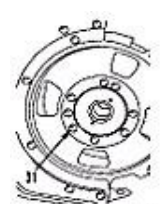
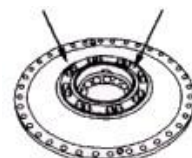
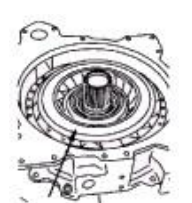
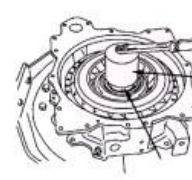
NO	PARTS	CHECK POINT	SPECIFICATION	SIGN			FIGURE OF PARTS TO BE CHECKED
				MEC	SPV	QA	
5	NO.2,3 CARRIER ASSY	- Fit retainer & tighten bolts Act. : kgm	- Std Torque 6.75 ± 0.75 kgm - LT-2				
6	NO.2 SPRING	- Careful install springs Act free height Act. : mm	- Free height of spring 108.5 mm				
7	NO.2 RING GEAR	- Fit snap ring to ring gear then install ring gear, fit plate then tighten bolts Act. : kgm	- Check that the snap ring installed to the ring gear is set securely between the plate and carrier. - Std Torque 6.75 ± 0.75 kgm - LT-2				
8	NO.1 CARRIER ASSY	- Raise shaft & no.1 carrier assy, & install carefully.					
9	PLATE	- Install plate	- Check through clearance between plate and piston, spring has not fallen over.				
10	TIE BOLTS	- Install bolts, then tighten Act. : kgm	- Std Torque 38 ± 2 kgm				

ASSEMBLY CHECK SHEET TRANSFER & TRANSMISSION WA800 - 3	PROJECT NUMBER		DOC.NO.	QR03-PT-035
	COMP. MODEL		PUB. DATE	01 /08/2015
	COMP. S/N		REV. NO	01
	MACHINE MODEL		PAGE	5 of 9

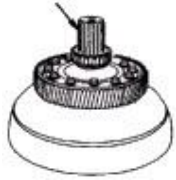
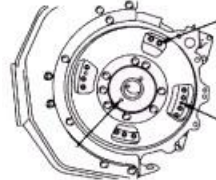
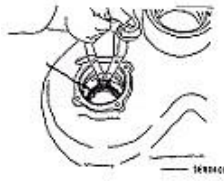
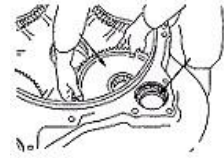
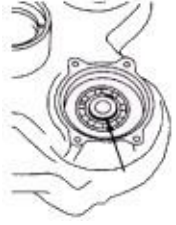
NO	PARTS	CHECK POINT	SPECIFICATION	SIGN			FIGURE OF PARTS TO BE CHECKED															
				MEC	SPV	QA																
11	PISTON OPERATION CHECK	- Check stroke of each piston <table><tr><td>PISTON</td><td>STD</td><td>ACT</td></tr><tr><td>NO.1</td><td>7.6</td><td></td></tr><tr><td>2</td><td>8.6</td><td></td></tr><tr><td>3</td><td>7.0</td><td></td></tr><tr><td>4</td><td>7.2</td><td></td></tr></table>	PISTON	STD	ACT	NO.1	7.6		2	8.6		3	7.0		4	7.2		- Air pressure 2.5 ~ 3.5 kg/cm²				
PISTON	STD	ACT																				
NO.1	7.6																					
2	8.6																					
3	7.0																					
4	7.2																					
12	ROTATING CLUTCH ASSY	- Install snap ring, flange of bearing, outer race bearing, then press fit bearing inner race to rotating clutch.	- Press fit inner race, and be extremely careful that the bearing roller doesn't fall over.																			
13	ADJUST SPEED SENSOR	- Install sensor carefully	- Screw in sensor until contact with gear, then turn it back 3/4-1 turn & secure with lock nut. - Adhesive LG-6																			
14	CONTROL VALVE	- Fit gasket, then install control valve assy, then tighten bolts. Act. : kgm	- Align hole position of gasket at the mating surface - Std Torque 5 ± 0.5 kgm - Tighten uniformly in turn so that there is no deformation of the valve.																			
15	TORQUE CONVERTER ASSY	- Install T/C assy to transmission then torque bolts Act. : kgm	- Std Torque 28 ± 3 kgm																			

ASSEMBLY CHECK SHEET TRANSFER & TRANSMISSION WA800 - 3	PROJECT NUMBER		DOC.NO.	QR03-PT-035
	COMP. MODEL		PUB. DATE	01 /08/2015
	COMP. S/N		REV. NO	01
	MACHINE MODEL		PAGE	6 of 9

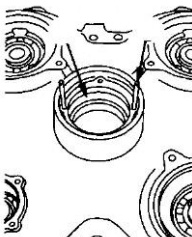
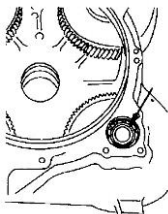
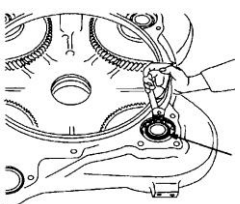
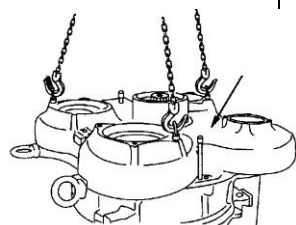
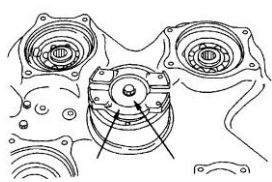
TORQUE CONVERTER & PTO

NO	PARTS	CHECK POINT	SPECIFICATION	SIGN			FIGURE OF PARTS TO BE CHECKED
				MEC	SPV	QA	
1	STATOR SHAFT	- Expand fit sleeve & install seal ring to shaft.	- Make protrusion of the seal ring from the shaft uniform.				
		- Install stator shaft then tighten bolts Act. : kgm	- Std Torque 28 ± 3.0 kgm - LT-2				
2	PUMP ASSY	- Install cage, collar to pump then tighten bolts Act. : kgm	- Std Torque 7 ± 0.5 kgm - LT-2				
		- Install inner race to stator shaft	- Careful to install inner race facing in the correct direction.				
		- Set pump assy in position	- Careful not to damage seal ring - Coat seal ring with grease (G2-LI)				
		- Install nut to stator shaft, then tighten Act. : kgm	- Std Torque 42.5 ± 2.5 kgm - LT-2				
NO	PARTS	CHECK POINT	SPECIFICATION	SIGN			FIGURE OF PARTS TO

ASSEMBLY CHECK SHEET TRANSFER & TRANSMISSION WA800 - 3	PROJECT NUMBER		DOC.NO.	QR03-PT-035
	COMP. MODEL		PUB. DATE	01 /08/2015
	COMP. S/N		REV. NO	01
	MACHINE MODEL		PAGE	7 of 9

				MEC	SPV	QA	BE CHECKED
3	STATOR	- Install stator, then lock with snap ring	- Align spline Carefully				
4	TURBINE CASE ASSY	- Install gear & pilot, then tighten bolts. Act. : kgm	- Std Torque 28 ± 3.0 kgm - LT-2				
		- Raise turbine case assy, then install to pump assy, tighten bolts Act. : kgm - Tighten drain plug Act. : kgm	- Align oil groove of case with drain hole of pump - Std Torque 5.5 ± 0.5 kgm - LT-2 - Std Torque 0.75 ± 0.25 kgm - LT-2				
5	BEARING, SNAP RING	- Install bearing inner race carefully, then lock with snap ring.	- Set in correct position.				
6	SPACER, GEAR	- Install spacer & set gear in position	- Careful to install gear facing in the correct position.				
7	SHAFT ASSY	- Carefully install bearings to shafts.	- Check that I, II, III & IV, shaft bearing & gear are different				
NO	PARTS	CHECK POINT	SPECIFICATION	SIGN			FIGURE OF PARTS TO BE CHECKED
				MEC	SPV	QA	

ASSEMBLY CHECK SHEET TRANSFER & TRANSMISSION WA800 - 3	PROJECT NUMBER		DOC.NO.	QR03-PT-035
	COMP. MODEL		PUB. DATE	01 /08/2015
	COMP. S/N		REV. NO	01
	MACHINE MODEL		PAGE	8 of 9

		- Install shaft to gear and case then lock with snap ring.	- Align spline carefully				
8	RETAINER	- Install oil seal to retainer	- Oil seal press fitting (LG-6) - Lip of oil seal grease (G2-LI)				
9	INNER RACE	- Press fit inner races.	- Check so that there is no play.				
		- Then install snap ring	- Check that the gears rotate smoothly.				
10	PTO ASSY	- Install PTO assy to torque converter assy, then tighten bolts. Act. : kgm	- Not to damage oil seal when installing - Std Torque 28 ± 3.0 kgm				
		- Install holder then torque bolt Act. : kgm	- Std Torque 28 ± 3.0 kgm - LT-2				
NO	PARTS	CHECK POINT	SPECIFICATION	SIGN			FIGURE OF PARTS TO BE CHECKED
				MEC	SPV	QA	

ASSEMBLY CHECK SHEET TRANSFER & TRANSMISSION WA800 - 3	PROJECT NUMBER		DOC.NO.	QR03-PT-035
	COMP. MODEL		PUB. DATE	01 /08/2015
	COMP. S/N		REV. NO	01
	MACHINE MODEL		PAGE	9 of 9

11	VALVE ASSY	- Install valve assy, then tighten bolts Act. : kgm	- Std Torque 6.75 ± 0.75 kgm				
----	------------	---	--	--	--	--	---

[illegible]

ASSEMBLY BY	INSPECTED BY	APPROVED BY
(MECHANIC)	(QA)	(SUPERVISOR)