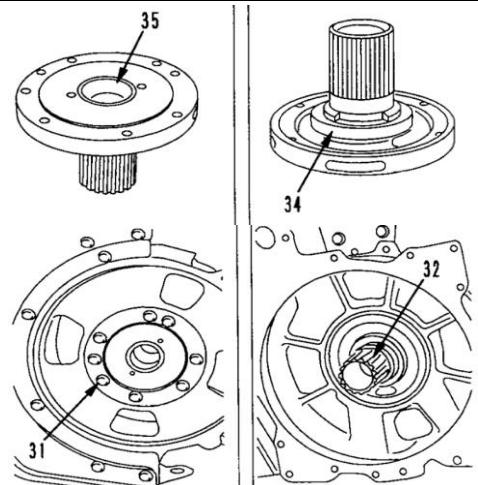
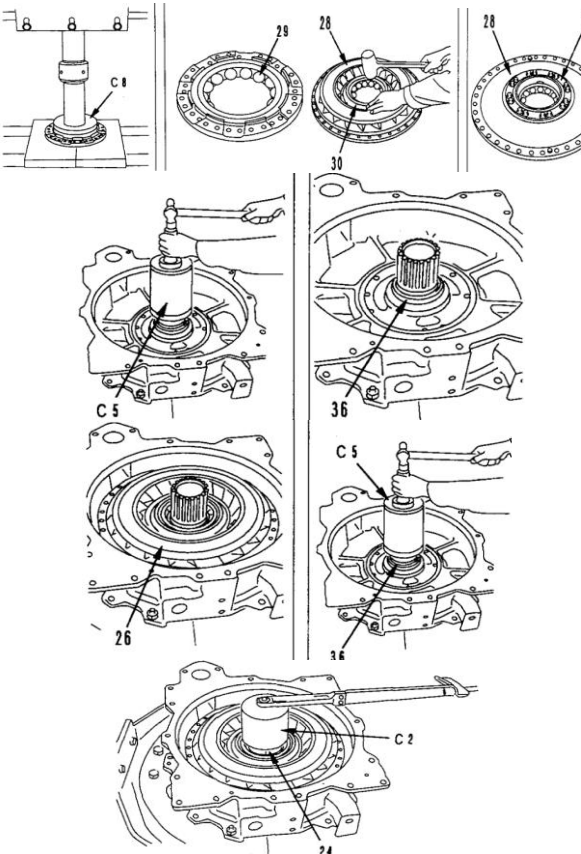
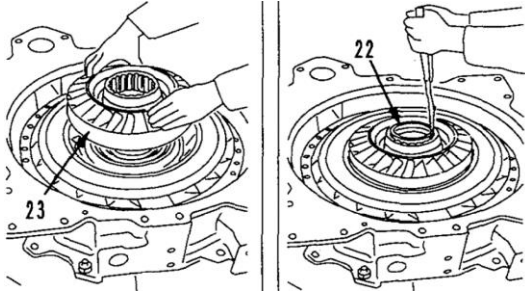

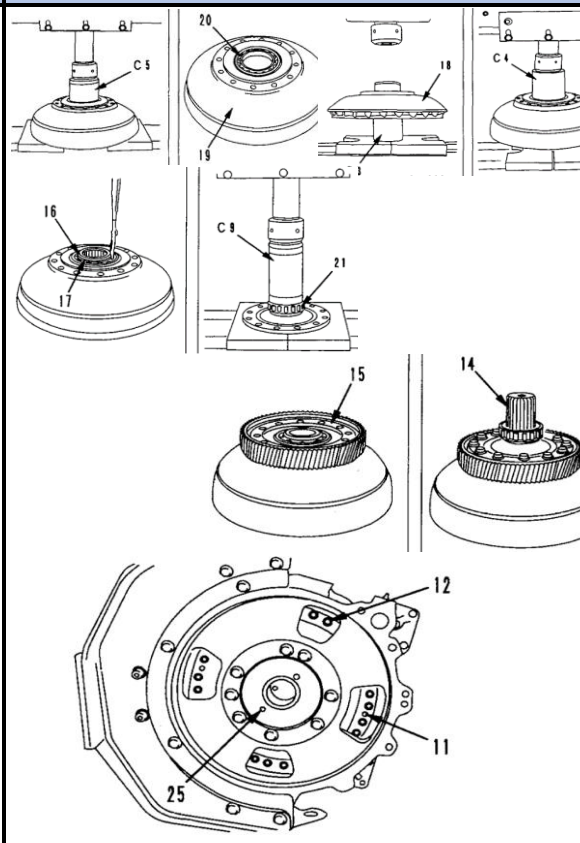

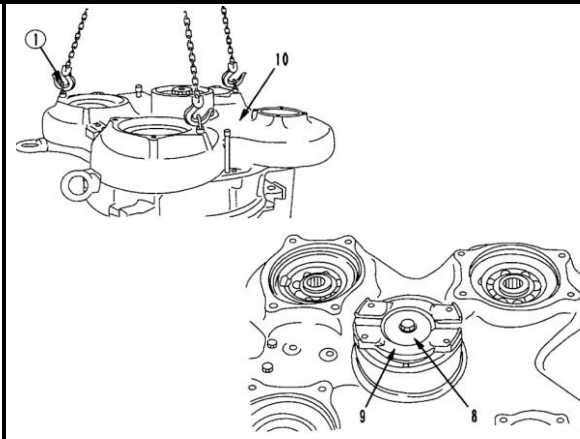


ASSEMBLY CHECK SHEET		WO NUMBER	DOCUMENT NO										
TORQUECONVERTER		COMP.MODEL	PUBLIC DATE										
WA 800 -3		COMP.S/N	REVISION NO										
		UNIT MODEL	PAGE										
PROCESS	START		ASSEMBLY BY										
	FINISH												
NO	PART TO INSTALL OR ASSEMBLY	CONDITION TOBE INSTALL	MECH	GL/QA	SKETCH DRAWING OR PHOTHOES								
1	Stator shaft	▲ IMPORTANT ▲ Clean all parts, and check for dirt or damage. Coat the sliding surfaces of all parts with engine oil before installing. Expand fit sleeve (35) to stator shaft. Install seal ring (34) to stator shaft. install stator shaft (32), then tighten 8 mounting bolts (31) from opposite side.  Adhesive (LT-2)  Tightening bolt <table border="1"> <tr> <th>Standard</th> <th>Actual</th> </tr> <tr> <td>28 ± 3 Kgm</td> <td></td> </tr> </table>	Standard	Actual	28 ± 3 Kgm								
Standard	Actual												
28 ± 3 Kgm													
2	Pump assembly	Using push tool C8 (outside diameter: 195 mm), press fit bearing (29) in guide. Install guide (30) and retainer (27) to pump (28).  Adhesive (LT-2)  Tightening bolt <table border="1"> <tr> <th>Standard</th> <th>Actual</th> </tr> <tr> <td>7 ± 0.5 Kgm</td> <td></td> </tr> </table> Using push tool C5, press fit inner race (36) to stator shaft. Set pump assembly (26) in position, be careful not to damage the seal ring.  Adhesive (G2-L1) Using push tool C5, press fit inner race (36) to stator shaft. Set pump. Be careful not to damage the seal ring while setting pump.  Adhesive (G2-L1) make the amount of protrusion from the shaft uniform, and fix in position. Using push tool C5, press fit inner race (36) to stator shaft. Using tool C2, install nut (24) to stator shaft.  Adhesive (LT-2)  Tightening Nut <table border="1"> <tr> <th>Standard</th> <th>Actual</th> </tr> <tr> <td>62.5 ± 2.5 Kgm</td> <td></td> </tr> </table>	Standard	Actual	7 ± 0.5 Kgm		Standard	Actual	62.5 ± 2.5 Kgm				
Standard	Actual												
7 ± 0.5 Kgm													
Standard	Actual												
62.5 ± 2.5 Kgm													
3	Stator	Align spline, and install stator (23). Install snap ring (22).											

ASSEMBLY CHECK SHEET TORQUECONVERTER WA 800 -3	WO NUMBER		DOCUMENT NO	
	COMP.MODEL		PUBLIC DATE	
	COMP.S/N		REVISION NO	
	UNIT MODEL		PAGE	

PROCESS	START		ASSEMBLY BY		
	FINISH				

NO	PART TO INSTALL OR ASSEMBLY	CONDITION TOBE INSTALL	MECH	GL/QA	SKETCH DRAWING OR PHOTHOES												
4	Turbine case assembly	Using push tool 6, press fit bearing (20) in case (19). Set turbine (18) in push tool C3 (outside diameter: 105 mm, height: 165 mm). Using push tool C4 (inside diameter: 110 mm), press fit case (19) to turbine (18). Fit plate (17) and install snap ring (16). Using push tool C9 (inside diameter: 90 mm), press fit bearing (21) in pilot. Install gear (15).  Adhesive (LT-2) Tightening bolt <table><tr><td>Standard</td><td>Actual</td></tr><tr><td>28 ± 3 Kgm</td><td></td></tr></table> Rotate repair stand 90° and tighten mounting bolts (12).  Adhesive (LT-2) Tightening bolt <table><tr><td>Standard</td><td>Actual</td></tr><tr><td>5.5 ± 0.5 Kgm</td><td></td></tr></table> Tighten 2 plugs (25).  Tightening bolt <table><tr><td>Standard</td><td>Actual</td></tr><tr><td>0.75 ± 0.25 Kgm</td><td></td></tr></table>	Standard	Actual	28 ± 3 Kgm		Standard	Actual	5.5 ± 0.5 Kgm		Standard	Actual	0.75 ± 0.25 Kgm				
Standard	Actual																
28 ± 3 Kgm																	
Standard	Actual																
5.5 ± 0.5 Kgm																	
Standard	Actual																
0.75 ± 0.25 Kgm																	
5	PTO assembly	install PTO assembly (10). Be careful not to damage the oil seal when installing. Mount PTO assembly after adjusting mounting position. If move PTO assembly after mounting, O-ring will be twisted and gone out of groove.  Tightening bolt <table><tr><td>Standard</td><td>Actual</td></tr><tr><td>28.5 ± 3 Kgm</td><td></td></tr></table> Install coupling (9). Fit O-ring and install holder (8).  Tightening bolt <table><tr><td>Standard</td><td>Actual</td></tr><tr><td>28.5 ± 3 Kgm</td><td></td></tr></table>	Standard	Actual	28.5 ± 3 Kgm		Standard	Actual	28.5 ± 3 Kgm								
Standard	Actual																
28.5 ± 3 Kgm																	
Standard	Actual																
28.5 ± 3 Kgm																	

NOTE

INSPECTION BY

APPROVE BY

