



PT SAPTAINDRA SEJATI

**SWING MACHINERY
RECEIVING INSPECTION
CHECKSHEET**

MACHINE MODEL

PC1250-8

RO NO :

POWERTRAIN SECTION

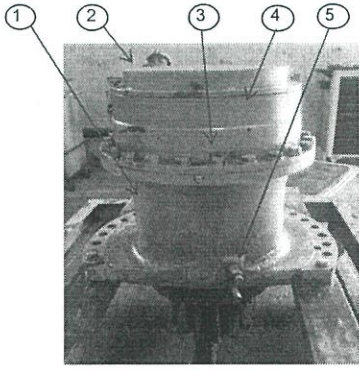
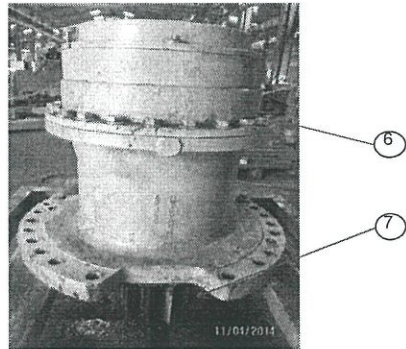
RECEIVING INSPECTION SHEET SWING MACHINERY	MACHINE MODEL		PART ASSY NO.		CUST.NAME	
	COMP. MODEL		COMP. S/N		PUBL. DATE	22/08/2009
	RECEIVING DATE		REPORT DATE		REVISION NO.	00
	HISTORICAL		WO NO.		PAGE	1 of 1

BELOW ARE THE ITEMS RELATED TO DELIVERY INSPECTION AND WHILE YOU DOING THIS INSPECTION JOB, PLEASE REFERRING
TO THE REMANUFACTURED COMPONENTS - STANDARD CONFIGURATION.

✓ : GOOD CONDITION

X : BAD CONDITION

⊗ : NONE

SKETCH DRAWING OR PHOTOES	NO.	ITEM	INSPECTION CONDITION	CHECK	
				IN	OUT
Front View 	1	Case			
	2	Cover			
	3	Bolt monting Gear			
	4	Gear			
	5	Drain valve			
	6	Cover			
	7	Shaft			
		Packing			
		Painting			
		Stand			
Rear View 					
NOTE : PLEASE MARK " " FOLLOWING TO THE ACTUAL CONDITION					
OIL LEVEL	EMPTY OR DRAINED	✓			
	PROPER LEVEL				

2014

Inspected by

Approved by

QA.Inspector

SPV/GL



PT SAPTAINDRA SEJATI

SWING MACHINERY

DISASSEMBLY

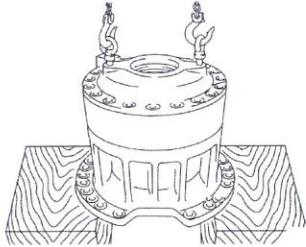
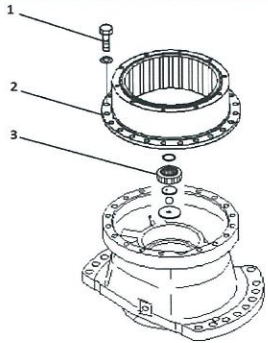
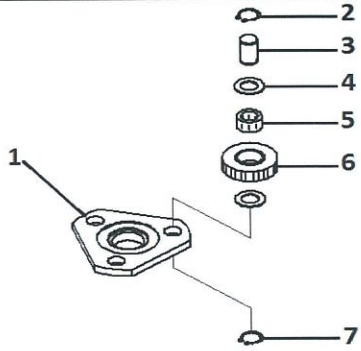
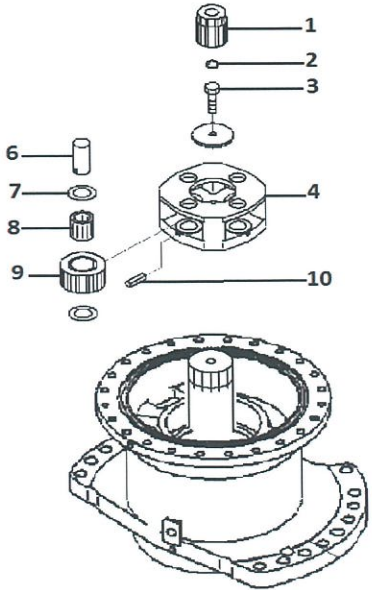
CHECKSHEET

MACHINE MODEL

PC1250-8

RO NO :

POWERTRAIN SECTION

DISASSEMBLY CHECK SHEET		WO NUMBER	DOCUMENT NO	
SWING MACHINERY		COMP.MODEL	PUBLIC DATE	
PC1250-8		COMP.S/N	REVISION NO	
		UNIT MODEL	PAGE	
PROCESS		START	DISASSEMBLY BY	
		FINISH		
NO	PART TO REMOVE OR INSPECT	CONDITION TOBE INSPECTED	REUSE SALVAGE REPAIR	SKETCH DRAWING OR PHOTHOES
1	SWING MACHINERY ASSEMBLY	- Setting Swing machinery to stand. ⚠ IMPORTANT ⚠ Prepare to stable stand that will prevent the swing machinery from falling over, the set the swing machinery assembly on the stand and secure it in position. - Loosen drain plug and drain oil from swing machinery case, Approx: 21,5 l		
	COVER, RING GEAR AND SUN GEAR 1 ASSEMBLY	- Remove mounting bolts, then lift off cover, check for damage and crack. - Remove mounting bolt ring gear (1), then lift off ring gear (2). <i>(check ring gear for damage, crack and wear)</i> - Remove Sun gear 1 assembly (3).		
3	CARRIER 1 ASSEMBLY	- Remove carrier 1 assembly (1). <i>(check carrier for damage, crack and wear)</i> - Dissassembly carrier 1 assy as follow: - Remove snapping (2), - Remove trust washer (4), and measure thicknes from wear. - Remove Gear (6) and bearing assembly (5) <i>(check gear form damage, chipped teeth and wear)</i> - Press shaft (3) until snapping not fitted from face of the carrier (1) and remove snapping (7). - Press back shaft (3), and remove shaft from housing carrier (1). <i>(check shaft form damage and wear)</i>		
4	SUN GEAR 2 AND CARRIER 2 ASSEMBLY	- Remove Sun gear 2 (1), and plate assembly (2). <i>(check form damage, chipped teeth and wear)</i> - Remove mounting bolt carrier 2 assembly (3) and plate. - Lift off Carrier 2 assembly. <i>(check for damage, crack and wear)</i> - Dissassembly carrier 2 as follow: - Push in pin (10), and knock out shaft (6) from carrier 2 assembly. <i>(check shaft form damage and wear)</i> - After remove the shaft (6), removing pin (10). <i>(check pin form damage and wear)</i> - Remove all trust washer, and measure thickness from wear. - Remove gear and bearing <i>(check form damage, chipped teeth and wear)</i>		

DISASSEMBLY CHECK SHEET SWING MACHINERY PC1250-8	WO NUMBER		DOCUMENT NO	
	COMP.MODEL		PUBLIC DATE	
	COMP.S/N		REVISION NO	
	UNIT MODEL		PAGE	

	PART TO REMOVE OR INSPECT	CONDITION TOBE INSPECTED	REUSE	SALVAGE	REPAIR	SKETCH DRAWING OR PHOTHOES
5	COVER AND PINION SHAFT ASSEMBLY	- Turn over case and pinion assembly(3),then remove mounting bolt(2) of cover assembly. - Turn over case and pinion assembly again and set on press stand. - Remove pinion shaft assembly(3) from the press. ⚠ IMPORTANT ⚠ Set a wooden block under the press,preparing for falling pinion shaft damage the pinion shaft assembly when removing it. <i>(check pinion shaft form damage,chipped teeth and wear)</i>				
6	COVER AND OIL SEAL ASSEMBLY	Remove oil seal(2) from cover assembly(1). <i>(check cover form damage,crack and wear)</i>				
7	CASE AND BEARING ASSEMBLY	Remove bearing big(3) and small bearing(1) from the case assembly(2). <i>(check case form damage,crack and wear)</i>				

NOTE:

ASSEMBLY BY

INSPECTED BY

APPROVED BY

MECHANIC

QA(QUALITY ASSURANCE)

GL/SPV PRODUCTION



PT SAPTAINDRA SEJATI

SWING MACHINERY

MEASUREMENT

CHECKSHEET

MACHINE MODEL

PC1250-8

RO NO :

POWERTRAIN SECTION

NOTE	
MECHANIC	GROUP LEADER (GL)



PT SAPTAINDRA SEJATI

SWING MACHINERY

ASSEMBLY

CHECKSHEET

MACHINE MODEL

PC1250-8

RO NO :

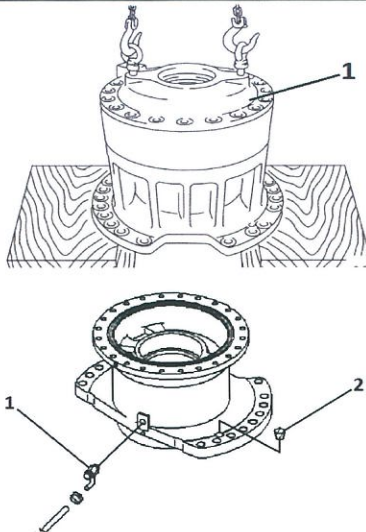
POWERTRAIN SECTION

ASSEMBLY CHECK SHEET		WO NUMBER		DOCUMENT NO		
SWING MACHINERY		COMP.MODEL		PUBLIC DATE		
PC 1250-8		COMP.S/N		REVISION NO		
		UNIT MODEL		PAGE		
PROCESS		START FINISH		ASSEMBLY BY		
NO	PART TO INSTALL OR FIT	CONDITION TO BE ASSEMBLY	SPECIFICATION	SIGNATURE		SKETCH DRAWING OR PHOTOES
				MECH	GL/QA	
1	BEARING 2 ASSEMBLY	⚠ IMPORTANT ⚠ Clean all parts, and check for dirt or damage.coat the bearing and surface of all parts with engine oil before installing. - Install bearing (1) to the case (2). - After install bearing,make sure No clearence between surface bearing and case lower side.	Press fit			
2	COVER AND OIL SEAL ASSEMBLY	- Install oil seal (3) to the cover (4). - Apply gasket sealant to outside premier of seal.	Using special tool for press (F2) LG - 6			
3	COVER AND PINION SHAFT ASSEMBLY	- Coat lip of oil seal with grease. - Install cover (2) to the Pinion shaft (1). ⚠ IMPORTANT ⚠ When setting the cover assembly to the shaft,be extremely careful not to damage the oil seal.	G2-L1 Using blow hammer			
4	PINION SHAFT AND CASE ASSEMBLY	- Install the case assembly (1) to pinion shaft(2),then using push tool (F3). ⚠ IMPORTANT ⚠ Press fit bearing inner race portion. - Force press the bearing inner race: Act: Ton	Press fit RANDOM ITEM CHECK Std:30 Ton			
5	BEARING 1 ASSEMBLY	- Install bearing 1(small)(2) to the case assembly. ⚠ IMPORTANT ⚠ Push the bearing inner race and outer race at the same time when press fitting.Do not push only the inner race when press fitting. - Force press the bearing inner and outer race: Act: Ton - After press fitting the bearing,check that the case rotates smothly.	Std:30 Ton			

Name : Name :
 QA INSPECTOR PROD. SUPERVISOR

ASSEMBLY CHECK SHEET						DOCUMENT NO	
SWING MACHINERY						PUBLIC DATE	
PC 1250-8						REVISION NO	
						PAGE	
NO	PART TO INSTALL OR FIT	CONDITION TO BE ASSEMBLY	SPECIFICATION	SIGNATURE		SKETCH DRAWING OR PHOTOES	
				MECH	GL/QA		
6	COVER ASSEMBLY	- Install cover assembly to the case. ⚠ IMPORTANT ⚠ <u>Port "A" should be meet with Port "B"</u> Port drain case should be meet with chamber oil line in cover lower side - Apply gasket sealant to the face of cover and tighten mounting bolt. Act: _____ Kgm	LG - 6 10 - 12,5 Kgm			 	
7	CARRIER 2 ASSEMBLY	- Install bearing (1) to the gear(2). - Install thrust washer on both side(3)&(4) of the gear(2). - Set Gear assembly to the carrier(6). - Align position of pin holes of shaft(5) and carrier(6), then tap with a plastic hammer to install shaft. ⚠ IMPORTANT ⚠ When installing the shaft(5), rotate the planetary gear, and be careful not to damage the thrust washer. - Install pin(7) to the shaft at 4 location Act : _____ Kgm	Using plastic hammer LT - 2 35- 43.5 Kgm			 	
8	CARRIER 1 ASSEMBLY	- Press fit shaft(2) to the carrier(3) until the snapping groove is seen. - Install snapping(1) to the carrier. ⚠ IMPORTANT ⚠ Make sure groove snapping seen and can be installed. - After installing snapping, press back the shaft from the opposite side until the snapping is fitted to face of the carrier.					

ASSEMBLY CHECK SHEET		WO NUMBER	DOCUMENT NO			
SWING MACHINERY		COMP.MODEL	PUBLIC DATE			
PC 1250-8		COMP.S/N	REVISION NO			
		UNIT MODEL	PAGE			
NO	PART TO INSTALL OR FIT	CONDITION TO BE ASSEMBLY	SPECIFICATION	SIGNATURE		SKETCH DRAWING OR PHOTOES
				MECH	GL/QA	
9	CARRIER 1 ASSEMBLY	- Install trust washer(4) to the carrier assembly(3). - Install bearing(6) to the carrier assembly(3). - install gear(5) to the carrier assembly(3). - Install trust washer(7) to the carrier assembly(3). - Install snapping(8)to the carrier assembly(3). - Install carrier (1) to the case.				
10	SUN GEAR 2 ASSEMBLY	- Install holder,ball and plate. - Install Sun gear 2 (1) to the carrier with position tooth (A) down side. - Install ring.				
11	RING GEAR ASSEMBLY	- Install Oring to the case - Install Ring gear to the case. - Apply gasket sealant to the face case assembly. ⚠ IMPORTANT ⚠ Set is match (d) and the projection of the case flange (c) as show in the follow figure. Mounting bolt : Act : Kgm	Using eye bolt RANDOM ITEM CHECK Name : 25/11/2015 Kgm Name : QA INSPECTOR PROD. SUPERVISOR			

ASSEMBLY CHECK SHEET		WO NUMBER	DOCUMENT NO			
SWING MACHINERY		COMP.MODEL	PUBLIC DATE			
PC 1250-8		COMP.S/N	REVISION NO			
		UNIT MODEL	PAGE			
NO	PART TO INSTALL OR FIT	CONDITION TO BE ASSAMBLY	SPECIFICATION	SIGNATURE		SKETCH DRAWING OR PHOTHOES
				MECH	GL/QA	
12	COVER AND OIL FILLER ASSEMBLY	- Install cover (1) to the case. - Apply gasket sealant to the face of cover. - Mounting bolt cover:  Act : Kgm	LG - 6 10 - 12,5 Kgm			
E :						
ASSEMBLY BY		INSPECTED BY		APPROVED BY		
MECHANIC		Quallity Assurance(QA)		GL/SPV PRODUCTION		