

DISASSEMBLY CHECK SHEET PTO MD6290

JOB NUMBER

COMPONENT MODEL

COMPONENT SN

MACHINE MODEL

DOCUMENT NO.

PUBL. DATE

REVISION NO.

PAGE

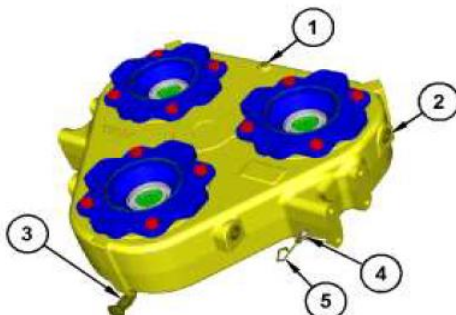
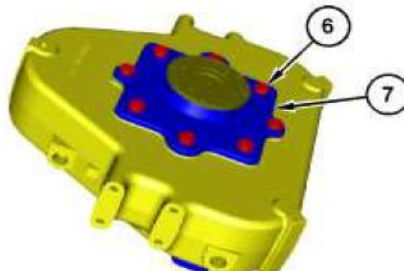
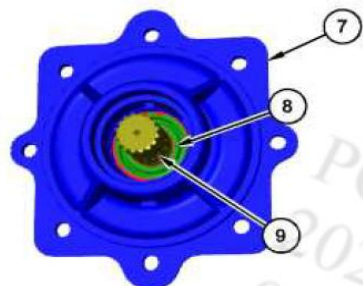
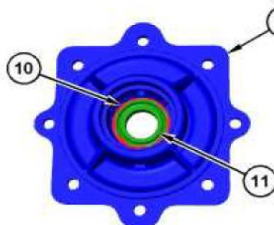
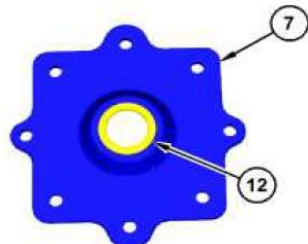
01

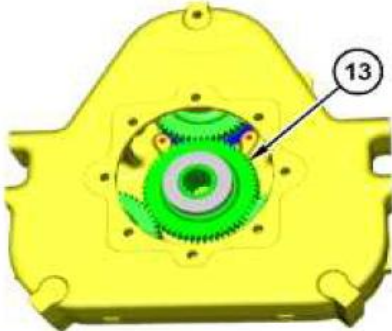
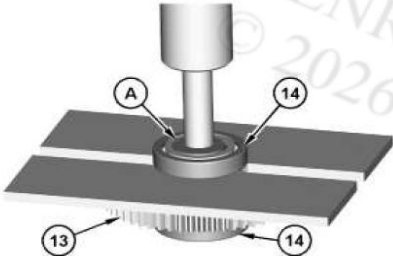
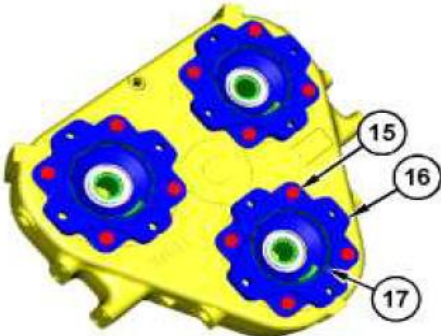
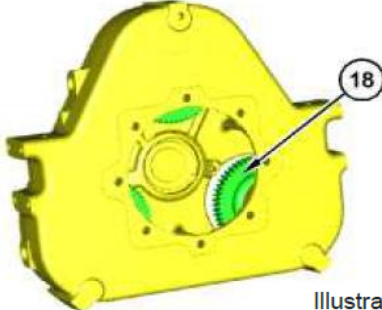
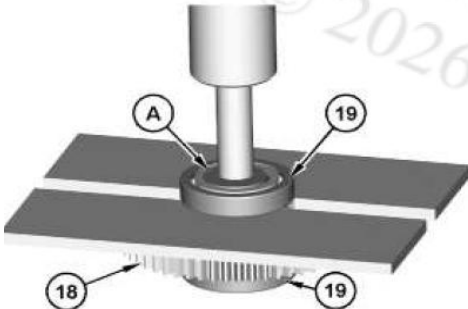
PROCESS

START

FINISH

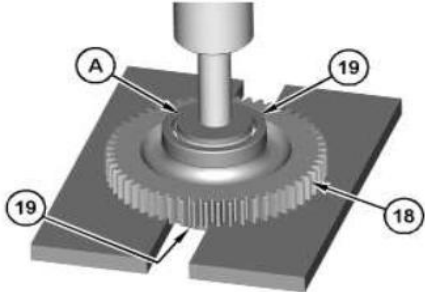
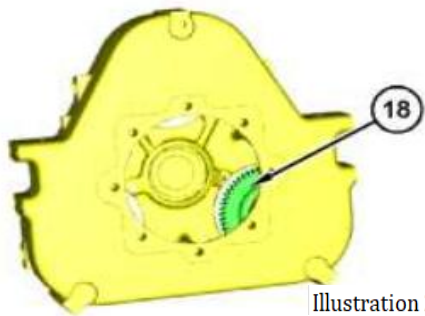
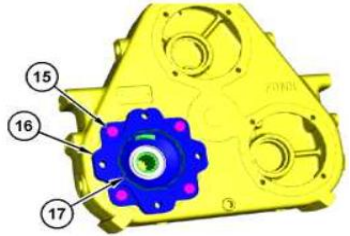
DISASSEMBLY BY

NO	PARTS TO REMOVE OR INSPECT	CONDITIONS TO BE INSPECTED	REUSE	SALVAGE	REPLACE	SKETCH DRAWING OR PHOTOES	REMARKS								
1	REMOVE CENTER COVER & SHAFT	Required Tools <table><tr><th>Tool</th><th>Part Number</th><th>Part Description</th><th>Qty</th></tr><tr><td>A</td><td>1P-0510</td><td>Driver Gp</td><td>1</td></tr></table> Lepas Pump Drive / PTO 1. Lepas (1), plugs (2), breather assembly (3), dipstick (5), dan dipstick tube (4).	Tool	Part Number	Part Description	Qty	A	1P-0510	Driver Gp	1					
Tool	Part Number	Part Description	Qty												
A	1P-0510	Driver Gp	1												
2	CENTER COVER REMOVE	Agkat dan balik Housing PTO menggunakan Over Head Crank Lepas bolts (6) and cover (7).													
3	CENTER COVER	Lepas retaining ring (8). Lepas shaft (9) dari cover (7).													
4	REMOVE BEARING	Lepas retaining ring (10) dan bearing (11) dari cover (7).													
5	REMOVE SEAL	Lepas seal (12) dari cover (7).													

6	CENTER BEARING	⊗ Lepas gear (13) bersamaan dengan bearingnya.				
7	REMOVE BEARING	⊗ Gunakan Tooling (A) dan Alat Press yang sesuai untuk melepas bearing (14) dari gear (13) , jika diperlukan Lepas bearing (14).				
8	REMOVE ADAPTER, SEAL & NUT	⊗ Lepas O-ring seal (17). Lepas four nut (15) dan adapter (16).				
9	CENTER HOUSING	⊗ Lepas gear (18) bersamaan dengan bearinnya. Note: Lepaskan roda gigi dari sisi bawah seperti yang ditunjukkan pada Ilustrasi 9.			 Illustration 9	
10	REMOVE BEARING	⊗ Gunakan Tooling (A) dan alat Press yang sesuai untuk Melepas bearing (19) dari gear (18), jika diperlukan. Lepas bearings (19). ⊗ Ulangi langkah 8 sampai Langkah 10 Untuk melepas Cover yang tersisa, gears, dan bearing.			 Illustration 10	

REMARKS :

INSPECTION BY	APPROVAL BY
(MECHANIC)	GL/SPV PRODUCTION

ASSEMBLY CHECK SHEET		WO NUMBER		DOCUMENT NO																				
P T O		COMP.MODEL		PUBLIC DATE																				
MD6290		COMP.S/N		REVISION NO																				
		UNIT MODEL		PAGE																				
PROCESS	START FINISH			ASSEMBLY BY																				
NO	PART TO INSTALL	CONDITION TOBE ASSAMBLY	SPECIFICATION	SIGNATURE MECH GL/QA		SKETCH DRAWING OR PHOTHOES																		
1	REQUIRED TOOL	Required Tools <table border="1"> <thead> <tr> <th>Tool</th> <th>Part Number</th> <th>Part Description</th> <th>Qty</th> </tr> </thead> <tbody> <tr> <td>A</td> <td>1P-0510</td> <td>Driver Gp</td> <td>1</td> </tr> <tr> <td rowspan="2">B</td> <td>1U-7502</td> <td>Rollover Stand</td> <td>1</td> </tr> <tr> <td>493-2018</td> <td>Adapters for Rollover Stand</td> <td>1</td> </tr> <tr> <td>C</td> <td>494-7013</td> <td>Dipstick Tube Driver</td> <td>1</td> </tr> </tbody> </table> PERHATIAN Jaga agar semua bagian tetap bersih dari kontaminan. Kontaminan dapat menyebabkan keausan cepat dan memperpendek masa pakai komponen.	Tool	Part Number	Part Description	Qty	A	1P-0510	Driver Gp	1	B	1U-7502	Rollover Stand	1	493-2018	Adapters for Rollover Stand	1	C	494-7013	Dipstick Tube Driver	1			
Tool	Part Number	Part Description	Qty																					
A	1P-0510	Driver Gp	1																					
B	1U-7502	Rollover Stand	1																					
	493-2018	Adapters for Rollover Stand	1																					
C	494-7013	Dipstick Tube Driver	1																					
2	INSTALL GEAR	Gunakan Tooling (A) dan alat Press yang sesuai untuk install bearing (19) pada gear (18), jika diperlukan. Install bearing (19)	min 0.5 ton - Max 1 ton																					
3	INSTAL GEAR TO HOUSING	Pasang gear (18) bersamaan dengan bearing. Note: Install the gear from the bottom side as shown in Illustration 2.				 Illustration 2.																		
4	INSTALL ADAPTER	Install adapter (16), nuts (15) dan O-ring seal (17). Ulangi Langkah 1 Sampai Step 3 untuk memasang Gear dan Cover yang tersisa.																						
5	PRTESS & INSTALL GFEAR	Gunakan Tooling (A) dan alat Press yang sesuai untuk install bearing (14) pada gear (13), jika diperlukan. Install bearing (14)				