

Pinout & Configuration

Clock Configuration

Project Manager

Tools

Software Packs

Pinout

Search



Categories

A->Z

System Core

DMA

GPIO

IWDG

NVIC

✓ RCC

⚠ SYS

WWDG

Analog

Timers

RTC

TIM1

⚠ TIM2

⚠ TIM3

TIM4

Connectivity

RCC Mode and Configuration

Mode

High Speed Clock (HSE) Crystal/Ceram...

Low Speed Clock (LSE) Disable

☐ Master Clock Output

Configuration

Reset Configuration

✓ NVIC Settings

✓ GPIO Settings

✓ Parameter Settings

✓ User Constants

Configure the below parameters :

Search (Ctrl+F)

System Parameters

VDD voltage... 3.3 V


Prefetch Buf... Enabled

Flash Laten... 2 WS (3 CPU cycle)

RCC Parameters

Pinout view

System view

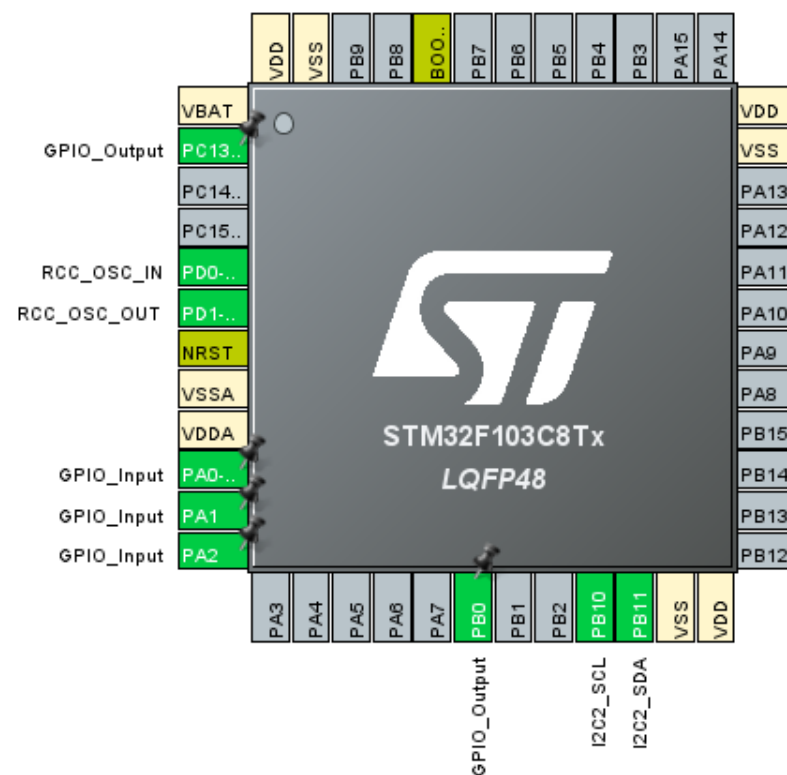

Pinout & Configuration


Clock Configuration

Project Manager

Tools



Resolve Clock Issues

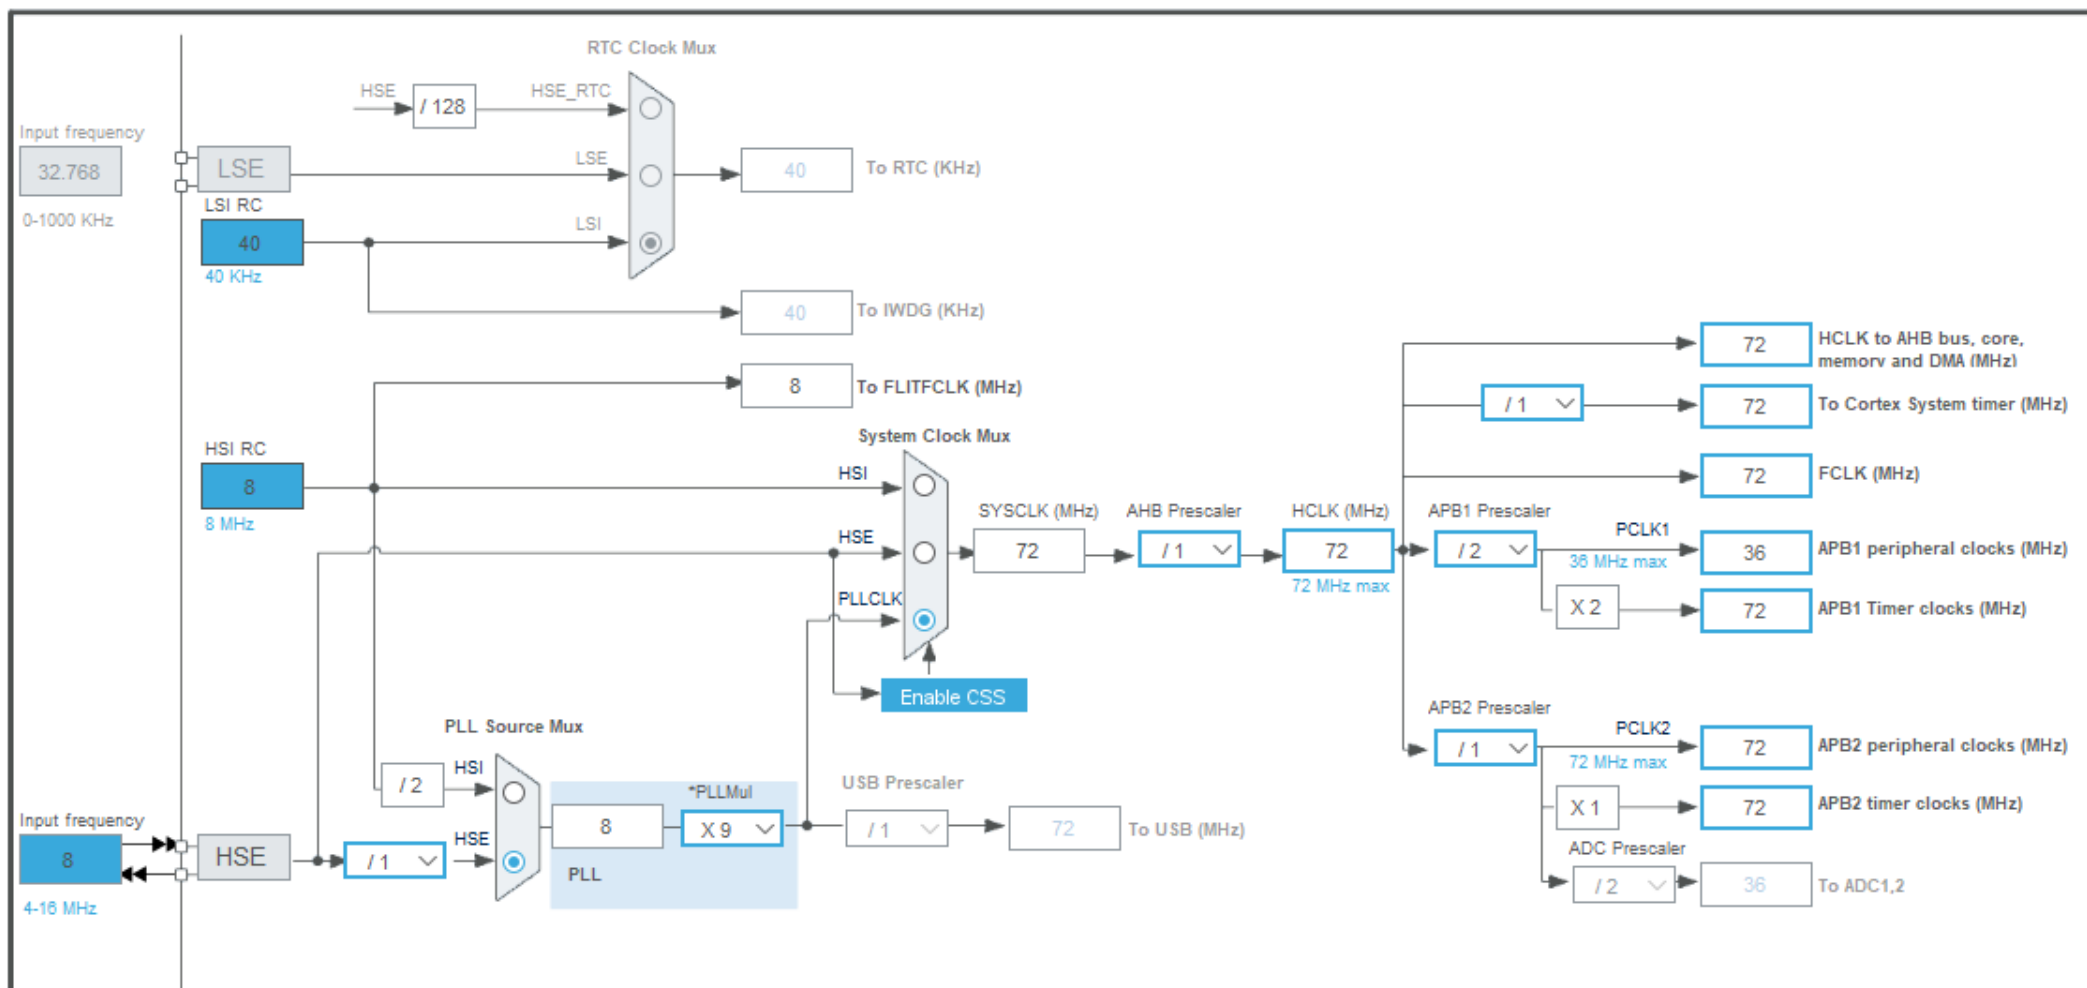

Pinout & Configuration

Clock Configuration

Project Manager

Tools

Software Packs

Pinout

TIM3 Mode and Configuration

Mode

Slave Mode	Disable
Trigger Source	Disable
☒ Internal Clock	
Channel1	Disable

Configuration

Reset Configuration

☒ Parameter Settings ☒ User Constants ☒ NVIC Settings ☒ DMA Settings

Configure the below parameters :

Search (Ctrl+F)		i
Counter Settings		
Prescaler (PSC - 16 bits value)	35999	⚙
Counter Mode	Up	
Counter Period (AutoReload Register - 16 bits value)	999	
Internal Clock Division (CKD)	No Division	
auto-reload preload	Enable	
Trigger Output (TRGO) Parameters		
Master/Slave Mode (MSM bit)	Disable (Trigger input effect not delayed)	
Trigger Event Selection	Reset (UG bit from TIMx_EGR)	

Q



Categories A->Z

SYS
WWDG

Analog

Timers

RTC
TIM1
TIM2
TIM3
TIM4

Connectivity

CAN
I2C1
I2C2
SPI1
SPI2
USART1
USART2
USART3

...

Sys



Pinout & Configuration

Clock Configuration

Project Manager

Tools

Software Packs

Pinout

TIM3 Mode and Configuration

Mode

Slave Mode

Trigger Source

☒ Internal Clock

Channel1

Channel2

Configuration

Reset Configuration

☒ Parameter Settings ☒ User Constants ☒ NVIC Settings ☒ DMA Settings

NVIC Interrupt Table	Enabled	Preemption Priority	Sub Priority
TIM3 global interrupt	☒	0	0



Categories A->Z

System Core

DMA

GPIO

IWDG

NVIC

✓ RCC

⚠ SYS

WWDG

Analog

Timers

RTC

TIM1

⚠ TIM2

⚠ TIM3

TIM4

Connectivity



Sys



Pinout & Configuration

Clock Configuration

Project Manager

Tools

Software Packs

Pinout

I2C2 Mode and Configuration

Mode

I2C I2C

Configuration

Reset Configuration

Parameter Settings

User Constants

NVIC Settings

DMA Settings

GPIO Settings

Configure the below parameters :

Search (Ctrl+F)

Master Features

I2C Speed Mode

Standard Mode

I2C Clock Speed (Hz)

100000

Slave Features

Clock No Stretch Mode

Disabled

Primary Address Length selection

7-bit

Dual Address Acknowledged

Disabled

Primary slave address

0

General Call address detection

Disabled

RTC

TIM1

TIM2

TIM3

TIM4

Connectivity

CAN

I2C1

I2C2

SPI1

SPI2

USART1

USART2

USART3

USB

Computing

Middleware and Sof...

Pinout & Configuration

Clock Configuration

Project Manager

Tools

Software Packs

Pinout

GPIO Mode and Configuration

Configuration

Group By Peripherals

GPIO

I2C

RCC

Search Signals

Search (Ctrl+F)

☐ Show only Modified Pins

Pin Name	Signal on Pin	GPIO output level	GPIO mode	GPIO Pull-up/Pull-d...	Maximum output s...	User Label	Modified
PA0-WKUP	n/a	n/a	Input mode	Pull-up	n/a		☒
PA1	n/a	n/a	Input mode	Pull-up	n/a		☒
PA2	n/a	n/a	Input mode	Pull-up	n/a		☒
PB0	n/a	Low	Output Push Pull	No pull-up and no p...	Low		☐
PC13-TAMPER-RTC	n/a	High	Output Push Pull	No pull-up and no p...	Low		☒

? Select Pins from table to configure them. **Multiple selection is Allowed.**

System Core

DMA

GPIO

IWDG

NVIC

RCC

SYS

WWDG

Analog

Timers

RTC

TIM1

TIM2

TIM3

TIM4

Connectivity

Pinout & Configuration

Clock Configuration

Project Manager

Tools

Project

Project Settings

Project Name

Assignment2

Project Location

C:\Users\nazer\Desktop

Browse

Application Structure

Basic

☐ Do not generate the main()

Toolchain Folder Location

C:\Users\nazer\Desktop\Assignment2\

Toolchain / IDE

STM32CubeIDE

☐ Generate Under Root

Advanced Settings

Linker Settings

Minimum Heap Size

0x200

Minimum Stack Size

0x400

Thread-safe Settings

Cortex-M3NS

☐ Enable multi-threaded support

Thread-safe Locking Strategy

Default – Mapping suitable strategy depending on RTOS selection.

Mcu and Firmware Package

Mcu Reference

STM32F103C8Tx

Firmware Package Name and Version

STM32Cube FW_F1 V1.8.5

☒ Use latest available version☒ Use Default Firmware Location

Firmware Relative Path

C:/Users/nazer/STM32Cube/Repository/STM32Cube_FW_F1_V1.8.5

Browse