


SENSOR INPUT (Vacuum ON)									
12	16/212	EXPRESSION 'DB000200' = 'SCT Stick Buffer Table Vacuum 1' DB000200 = IB011A2; // Unit 9 Vacuum 01 On (MB081840) /SBT Area1 Vacuum On 'DB000201' = 'SCT Stick Buffer Table Vacuum 2' DB000201 = IB011A3; // Unit 9 Vacuum 02 On (MB081841) /SBT Area2 Vacuum On 'DB000202' = 'SCT Stick Buffer Table Vacuum 3' DB000202 = IB011A4; // Unit 9 Vacuum 03 On (MB081842) /SBT Area3 Vacuum On 'DB000203' = 'SCT Stick Buffer Table Vacuum 4' DB000203 = IB011A5; // Unit 9 Vacuum 04 On (MB081843) /SBT Area4 Vacuum On 'DB000204' = 'SCT Stick Buffer Table Vacuum 5' DB000204 = IB011A6; // Unit 9 Vacuum 05 On (MB081844) /SBT Area5 Vacuum On 'DB000205' = 'SCT Stick Buffer Table Vacuum 6' DB000205 = IB011A7; // Unit 9 Vacuum 06 On (MB081845) /SBT Area6 Vacuum On 'DB000206' = 0 DB000206 = 0; // Unit 9 Vacuum 07 On (MB081846) 'DB000207' = 0 DB000207 = 0; // Unit 9 Vacuum 08 On (MB081847) 'DB000208' = 0 DB000208 = 0; // Unit 9 Vacuum 09 On (MB081848) 'DB000209' = 0 DB000209 = 0; // Unit 9 Vacuum 10 On (MB081849) 'DB00020A' = 0 DB00020A = 0; // Unit 9 Vacuum 11 On (MB08184A) 'DB00020B' = 0 DB00020B = 0; // Unit 9 Vacuum 12 On (MB08184B) 'DB00020C' = 0 DB00020C = 0; // Unit 9 Vacuum 13 On (MB08184C) 'DB00020D' = 0 DB00020D = 0; // Unit 9 Vacuum 14 On (MB08184D) 'DB00020E' = 0 DB00020E = 0; // Unit 9 Vacuum 15 On (MB08184E) 'DB00020F' = 0 DB00020F = 0; // Unit 9 Vacuum 16 On (MB08184F)							
13	17/254	FOR	[W]Var DW00040 ---	[W]Init 00000	[W]Max 00015	[W]Step 00001			
14	18/255	NL	2	EXPRESSION 'I' = 'DW00040' I = DW00040;					
15	19/260	NL	2	DB000200i ---	TON[10ms]	[W]Set C_Data_C W00201 ---	[W]Count DW00250i ---	MB081840i ○ (Sensor) SBT Area1 Vacuum On Sensor	[MB081840] H20.02/0293 H20.02/0307 L20.49/0000
16	22/263	END_FOR							H20.02/0298 H50.19/0035
SENSOR INPUT (Vacuum OFF)									
17	23/263	EXPRESSION 'DB000210' = '!SCT Stick Buffer Table Vacuum 1' DB000210 = IB011A2; // Unit 9 Vacuum 01 Off (MB081850) /SBT Area1 Vacuum Off 'DB000211' = '!SCT Stick Buffer Table Vacuum 2' DB000211 = IB011A3; // Unit 9 Vacuum 02 Off (MB081851) /SBT Area2 Vacuum Off 'DB000212' = '!SCT Stick Buffer Table Vacuum 3' DB000212 = IB011A4; // Unit 9 Vacuum 03 Off (MB081852) /SBT Area3 Vacuum Off 'DB000213' = '!SCT Stick Buffer Table Vacuum 4' DB000213 = IB011A5; // Unit 9 Vacuum 04 Off (MB081853) /SBT Area4 Vacuum Off 'DB000214' = '!SCT Stick Buffer Table Vacuum 5' DB000214 = IB011A6; // Unit 9 Vacuum 05 Off (MB081854) /SBT Area5 Vacuum Off 'DB000215' = '!SCT Stick Buffer Table Vacuum 6' DB000215 = IB011A7; // Unit 9 Vacuum 06 Off (MB081855) /SBT Area6 Vacuum Off 'DB000216' = 0 DB000216 = 0; // Unit 9 Vacuum 07 Off (MB081856) 'DB000217' = 0 DB000217 = 0; // Unit 9 Vacuum 08 Off (MB081857) 'DB000218' = 0 DB000218 = 0; // Unit 9 Vacuum 09 Off (MB081858) 'DB000219' = 0 DB000219 = 0; // Unit 9 Vacuum 10 Off (MB081859) 'DB00021A' = 0 DB00021A = 0; // Unit 9 Vacuum 11 Off (MB08185A) 'DB00021B' = 0 DB00021B = 0; // Unit 9 Vacuum 12 Off (MB08185B) 'DB00021C' = 0 DB00021C = 0; // Unit 9 Vacuum 13 Off (MB08185C) 'DB00021D' = 0 DB00021D = 0; // Unit 9 Vacuum 14 Off (MB08185D) 'DB00021E' = 0 DB00021E = 0; // Unit 9 Vacuum 15 Off (MB08185E) 'DB00021F' = 0 DB00021F = 0; // Unit 9 Vacuum 16 Off (MB08185F)							
18	24/307	FOR	[W]Var DW00040 ---	[W]Init 00000	[W]Max 00015	[W]Step 00001			
19	25/311	NL	2	EXPRESSION 'I' = 'DW00040' I = DW00040;					
20	26/313	NL	2	DB000210i ---	TON[10ms]	[W]Set C_Data_C W00201 ---	[W]Count DW00266i ---	MB081850i ○ (Sensor) SBT Area1 Vacuum Off Sensor	[MB081850] H50.19/0048
21	28/317	END_FOR							H50.49/0811 L20.49/0004

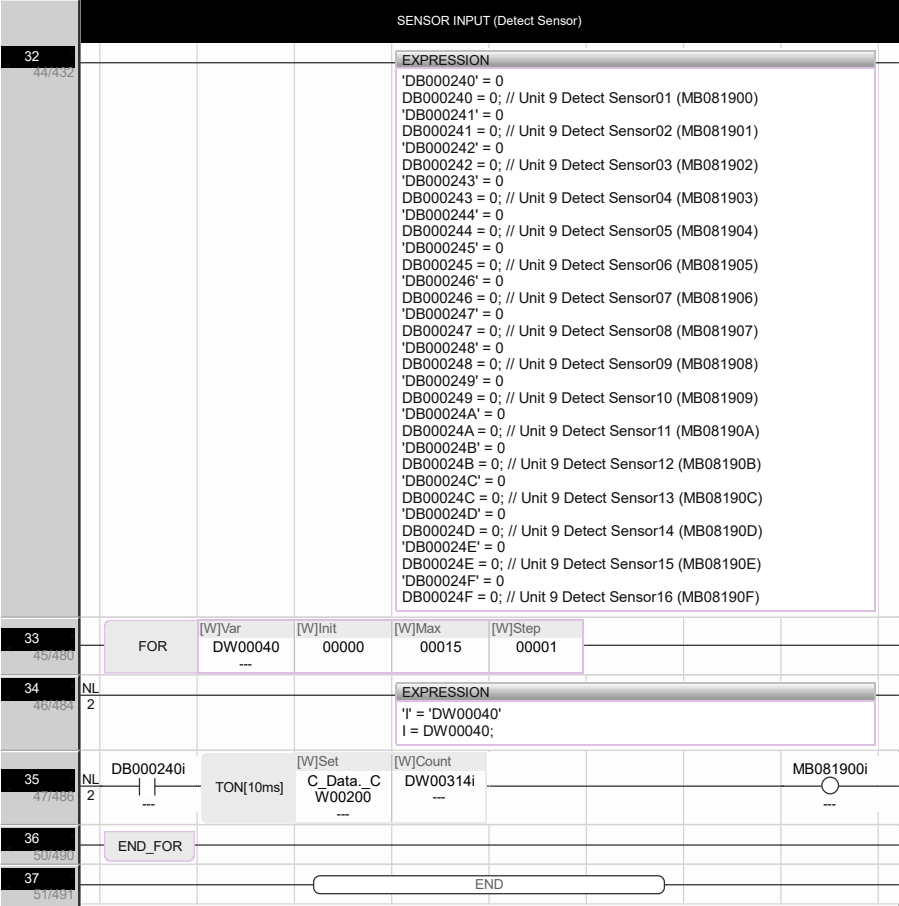

[MB081900]
H50.59/0000