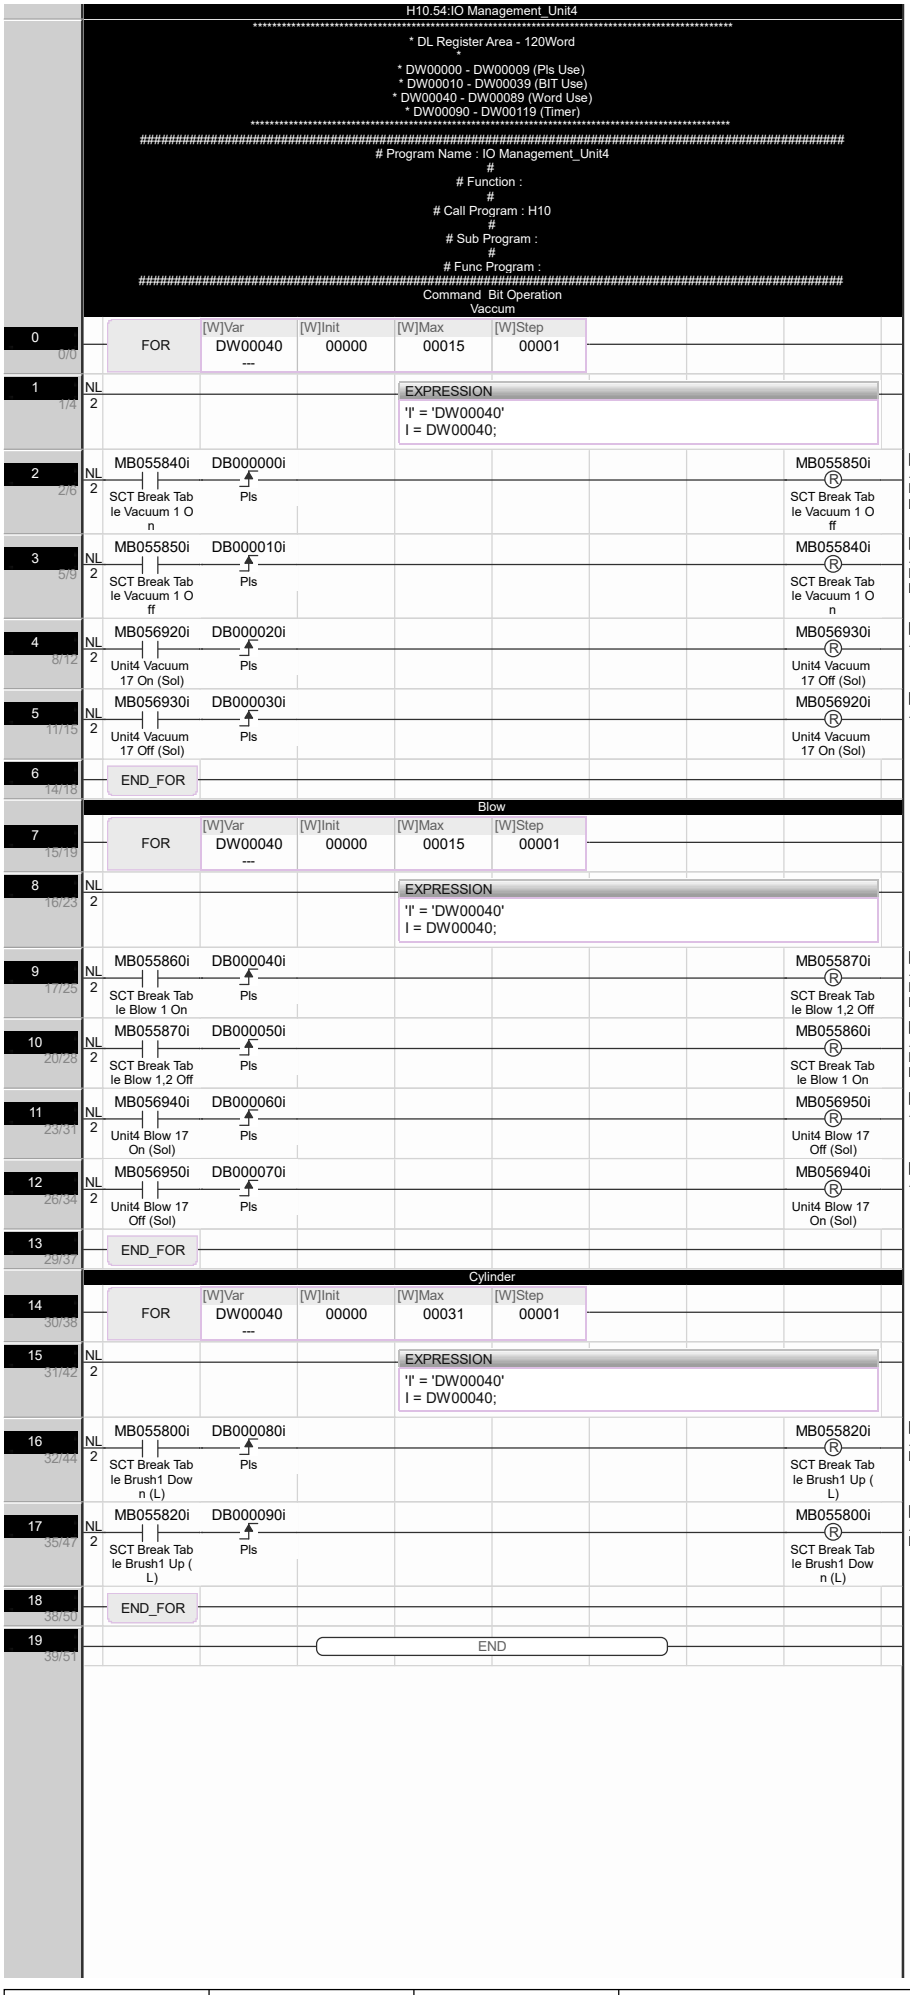
H10.54:IO Management_Unit4
* DL Register Area - 120Word
* DW00000 - DW00009 (Pls Use)
* DW00010 - DW00039 (BIT Use)
* DW00040 - DW00089 (Word Use)
* DW00090 - DW00119 (Timer)
# Program Name : IO Management_Unit4
# Function :
# Call Program : H10
# Sub Program :
# Func Program :
Command Bit Operation
Vaccum
0 0/0 FOR [W]Var DW00040 --- [W]Init 00000 [W]Max 00015 [W]Step 00001
1 1/4 NL 2 EXPRESSION 'I' = 'DW00040' I = DW00040;
2 2/6 MB055840i SCT Break Table Vacuum 1 On DB000000i Pls MB055850i R SCT Break Table Vacuum 1 Off
3 5/9 MB055850i SCT Break Table Vacuum 1 Off DB000010i Pls MB055840i R SCT Break Table Vacuum 1 On
4 8/12 MB056920i Unit4 Vacuum 17 On (Sol) DB000020i Pls MB056930i R Unit4 Vacuum 17 Off (Sol)
5 11/15 MB056930i Unit4 Vacuum 17 Off (Sol) DB000030i Pls MB056920i R Unit4 Vacuum 17 On (Sol)
6 14/18 END_FOR
Blow
7 15/19 FOR [W]Var DW00040 --- [W]Init 00000 [W]Max 00015 [W]Step 00001
8 16/23 NL 2 EXPRESSION 'I' = 'DW00040' I = DW00040;
9 17/25 MB055860i SCT Break Table Blow 1 On DB000040i Pls MB055870i R SCT Break Table Blow 1,2 Off
10 20/28 MB055870i SCT Break Table Blow 1,2 Off DB000050i Pls MB055860i R SCT Break Table Blow 1 On
11 23/31 MB056940i Unit4 Blow 17 On (Sol) DB000060i Pls MB056950i R Unit4 Blow 17 Off (Sol)
12 26/34 MB056950i Unit4 Blow 17 Off (Sol) DB000070i Pls MB056940i R Unit4 Blow 17 On (Sol)
13 29/37 END_FOR
Cylinder
14 30/38 FOR [W]Var DW00040 --- [W]Init 00000 [W]Max 00031 [W]Step 00001
15 31/42 NL 2 EXPRESSION 'I' = 'DW00040' I = DW00040;
16 32/44 MB055800i SCT Break Table Brush1 Down (L) DB000080i Pls MB055820i R SCT Break Table Brush1 Up (L)
17 35/47 MB055820i SCT Break Table Brush1 Up (L) DB000090i Pls MB055800i R SCT Break Table Brush1 Down (L)
18 38/50 END_FOR
19 39/51 END
[MB055850] .../0009i H50.14/0207w L10.64/0209i H30.50/0388w H50.44/0816 L20.44/0005 H50.14/0166w L10.64/0162i
[MB055840] .../0006i H50.44/0640 L20.44/0001 H50.14/0163w L10.64/0160i H50.14/0210w L10.64/0211i
[MB056930] .../0015i L20.44/0133
[MB056920] .../0012i L20.44/0129
[MB055870] .../0028i H50.44/1155 L10.64/0347i H50.14/0260w L10.14/0420i L20.44/0264 H50.14/0334w L10.64/0254i
[MB055860] .../0025i H50.44/0994 L20.44/0258 H50.14/0257w L10.64/0252i H50.14/0331w L10.64/0349i
[MB056950] .../0034i
[MB056940] .../0031i
[MB055820] .../0047i L10.64/0008i H50.14/0372w L10.64/0083i H50.44/0352 L20.44/0529
[MB055800] .../0044i L10.64/0006i H50.14/0368w L10.64/0085i H50.44/0063 L20.44/0525