

HATCH COVER Hose Water test or Chalk test result

Ship Name		H/cover informaiton	
H/cover No.		Q'ty of Cover per Hold	1
Test method		Operation type	Sliding type
Test date		Others	

A. Instruction

- 1) Refer to PR-OPR-BCP Ch. 2.2.11 Chalk test and Hose water test procedures
- 2) Hoes test or Chalk test should be carried out **at least 3 M**
- 3) Take a Photos during test as a evidence

B. Record or Fill out procedure

Fill the color in the cells as shown

Hose test	Whether chalk marked on the rubber or not.
Water Sealed	Chalk Marked
Water ingressed	No Marked

FWD

AFT

Duty Officer

Master

MEASURING TABLE FOR HATCH COVER
Slide Acting Cleat Type
(Intervals : 6 months)

VESSEL **xxxxxxx**




DATE&TIME **xxxxxxxxx**







DATE OF RENEWAL OF RUBBER PACKING
 xxxxxxxxx





Remark If doubling plate was added on self auto cleat, Please remark how much
 thicknees for doubling plate on attached report.

Inspection and Maintenance Guidance		
PARTS TO BE CHECKED	CHECKS AND MAINTENANCE	INTERVAL
Rubber Packing	표면의 찢어짐, 영구변형량 점검 Check for wear and mechanical damage. Check the shape and elasticity.	1 M
	Tightness Test	1 Y
Drain Pipe & Non Return Drain Valve	Drain Pipe & Valve 막힘 여부 확인 Float Ball 고착 상태 Check that the drain pipes and drain valves are not colged and that the float (ball inside) moves freely. Remove blocking items, if any.	2 M
Bearing Pads	물리적 데미지, 영구 변형량 점검 Check the bearing pads for mechanical damage	3M
	Tightening Bolt 점검 Check the tightening of bolts.	6M
Quick-Acting Cleats	각부 점검 및 Grease 시행 Check the functioning of the quick-acting cleats. Lubrication of the cleats ; Apply a thin layer of grease to contact surfaces and the thread of the quick-acting cleats	3M
Fx-Stopper	접촉면 상태 점검 및 Grease 시행 Check the shape of the contact surfaces. Lubrication of the Fx-stoppers ; Apply a thin layer of grease to the contact surfaces.	3M
Chain Drive & Wheel	Chain 마모도 및 부식상태 점검 Check the chains and chain wheels for wear and corrosion. Pay Attention to leakage of the hydraulic motors.	6 M
	Chain Length and Tension 상태 점검 Confirm equivalent length of chains at both sides	Every Voyage
	Chain Wheel Grease 시행 Lubrication of the chain wheels ; Apply grease to the chain wheels and the wheel pins.	3M
Wheel Lifter	Wheel Lifter 마모도 및 부식상태 점검 Check the wheel lifters for wear and corrosion. Pay attention to leakages of the cylinder	6 M
	Wheel Lifter & Cylinder Grease 시행 Lubrication of the wheel lifter	3 M
Wheel	작동부 상태 및 Wheel Bearing Clearance 점검 Check the functioning of the wheels	6 M
	Grease 시행 Lubrication of the wheel bearing ; Apply grease to the wheel Pins/Brg	3M
Steel Construction	Corrosion , Deformation, Cracks 점검 Check the steel structures of the hatch covers and the coaming for corrosion, deformations and cracks.	6M
Control Stand & Confirmation Buttons	Directional and shutoff Valve 작동상태 점검 Check the operation valves and the shutoff valves, Pay attention to oil leakage.	Continuously
	Confirmation Buttons 작동 상태 점검 Check the opeation of the confirmation buttons.	Continuously
	Pressure Gauge 작동 상태 점검 및 파손 여부 확인 Check the operating condition of the pressure gauge and verify for any damage.	Continuously

High Lifter Cylinders	Cylinder Piston rod, Pin, Bearing 상태 점검 Check the condition of the cylinders. Pay attention to bearing, pins, piston rod and oil leakage.	2M
	Lubrication & Cylinder Grease 시행 Lubrication of the cylinder and bearings	2M
Hyd. Pump Unit	Oil Level, Condition & Filter 점검 Check the oil level and filters of the pump unit. Check the operation condition of the pump unit.	1M
Starter	Circuit Breaker & Indicating Lamp 점검 Check the starter and electrical components	6M
Auxiliary Pump Unit Portable Hyd.Jack	Oil Level and Filter 점검 Check the oil level and filters of the pump unit. 작동 상태 점검 Check the operation of the pump unit.	6M
Hyd.Hose & Pipe	Hose, Pipe, Coupling 누유상태 점검 Check the hydraulic hoses, pipes and couplings.	1M

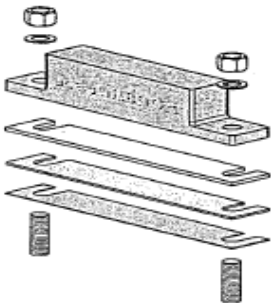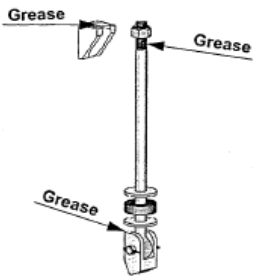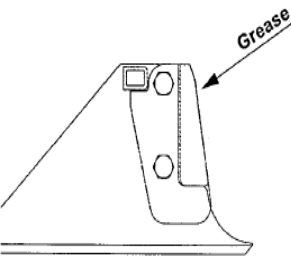Reference DWG & Photos		
DRAIN VALVES		To prevent the cargo or the ballast water from leaking out the cargo hold the drain valves must be closed with shut-off caps. Normally the valves are kept open. Further detailed information of the maintenance instruction please see maker's maintenance instruction.
Bearing Pads		The function of hatch cover bearing pads is to transmit the vertical forces from the cover into the coaming structure. When replacing the bearing pads it's important to check/replace the seals as well ; in case the seal has lost its original elasticity (Permanent set of 5mm or more) there will not be enough compression of the seal to achieve a proper weathertightness of the hatch cover. Further detailed information of the maintenance instruction please see maker's maintenance instruction.
Quick-Acting Cleats		The function of quick-acting cleats is to prevent the hatch cover panels from being lifted up even in a rough seaways and thus the condition of the quick-acting cleats has a direct effect on the safety of the vessel. Further detailed information of the maintenance instruction please see maker's maintenance instruction.
Fx-Stopper		The correct longitudinal positions of the closed weather deck hatch covers and the weathertightness of the panel joints are achieved by correct adjustment of Fx-Stoppers. Further detailed information of the maintenance instruction please see maker's maintenance instruction.

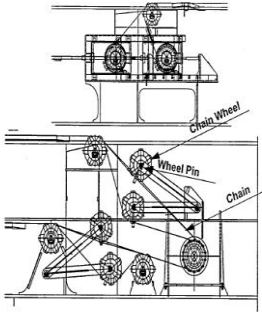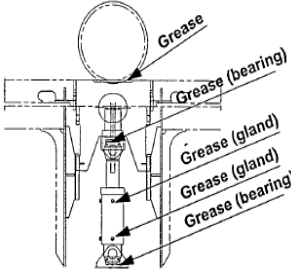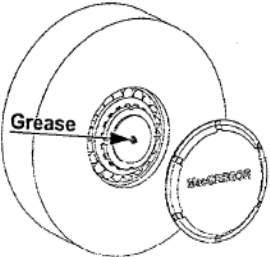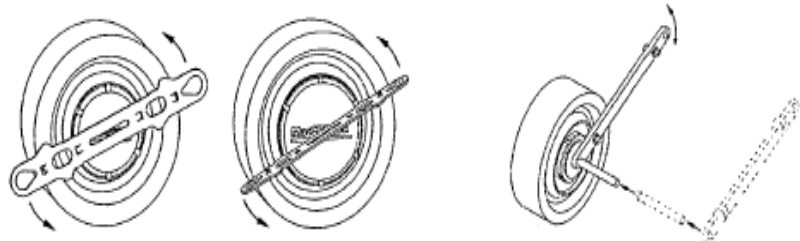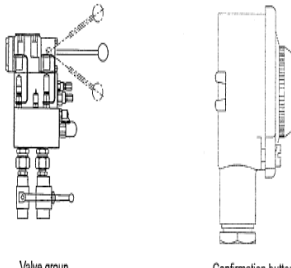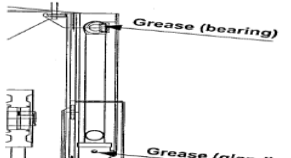Chain Drive & Wheel		The hatches are operated to fore/aft end of hold pair by driving the hatch covers by means of a chain drive at port and starboard side of hold. The chains-fixed to both hatch cover panels are actuated by a hydraulic motor and guided by chain wheels. The chains need to be tight and have an even tension for smooth operation of hatch covers. The length and tension of the chains can be adjusted by the rigging screw. Further detailed information of the maintenance instruction please see maker's maintenance instruction.
Wheel Lifter		The hatch covers are raised into the rolling position by means of hydraulic wheel lifters. Further detailed information of the maintenance instruction please see maker's maintenance instruction.
Wheel		The hatch covers are rolling on the wheels when the hatches are opened and closed. Further detailed information of the maintenance instruction please see maker's maintenance instruction.
	 The hub cap wrench fits to all hub cap sizes How to use the wheel nut wrench	
Control Stand & Confirmation Buttons	 Valve group Confirmation button	The folding hatch covers are operated at the control stands. A control stand comprises operating valves installed in a raintight protection box on the deck by each hatch. The confirmation buttons are mounted for each control stand (on the opposite of hatch when seen from the control stand) Further detailed information of the maintenance instruction please see maker's maintenance instruction.
High Lifter Cylinders		The hatch covers are raised to stacking position by hydraulic cylinders. The high lifting cylinders are operated at control stands.

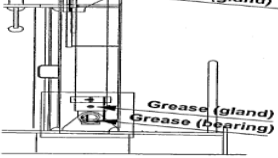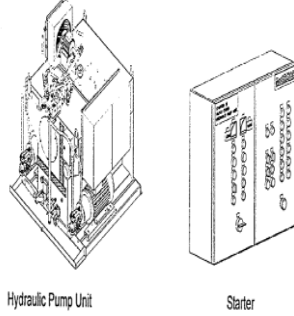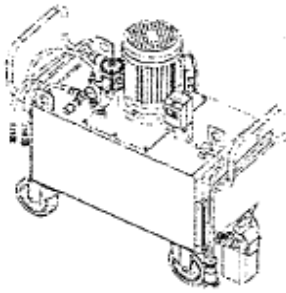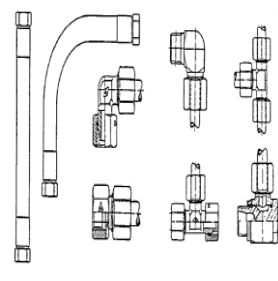High Pressure Cylinders		Further detailed information of the maintenance instruction please see maker's maintenance instruction.
Hyd. Pump Unit	 Hydraulic Pump Unit Starter	A hydraulic pump unit supplies the oil pressure for the hydraulic motors & cylinders required to operate the hatch covers. The pump unit is controlled by a starter containing necessary switches and indicating lamps. There is one unit to operate the hatch covers. Further detailed information of the maintenance instruction please see maker's maintenance instruction.
Auxiliary Pump Unit Portable Hyd. Jack		In case the main pump unit is out of order the hydraulic power to operate the hatch covers can be generated with an auxiliary pump unit. Further detailed information of the maintenance instruction please see maker's maintenance instruction.
Hyd. Hose & Pipe		The hydraulic power is supplied to the control valves and actuators via hydraulic hoses and pipes. To avoid oil leakage and system breakdowns the piping components have to be inspected and maintained properly. Further detailed information of the maintenance instruction please see maker's maintenance instruction.

HATCH COVER CHECK SHEET (SILDING ACTING CLEAT TYPE)

Vessel Name


Hold No

Check date

A. Input date in the white cells after measuring


H/COVER CLEARENCE between Mating plate&Steel pad(SCALE : mm)

Under 0.9mm : White, 1.0mm ~ 1.9mm : Blue, Over 2.0mm : Red

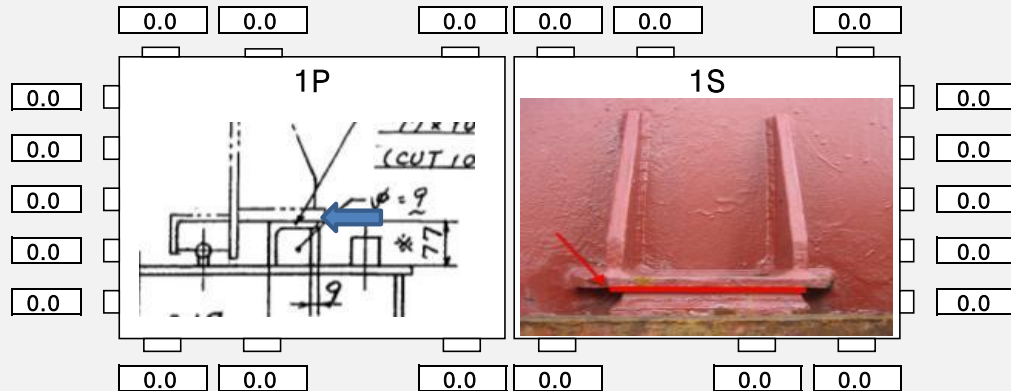


SIDE SKIRT AND H/COAMING TOP PLATE CLEARENCE (SCALE : mm)

8-12.0mm : Black, 5.0-8.0mm/12-15mm : Blue, 20-4mm/Over15mm: RED

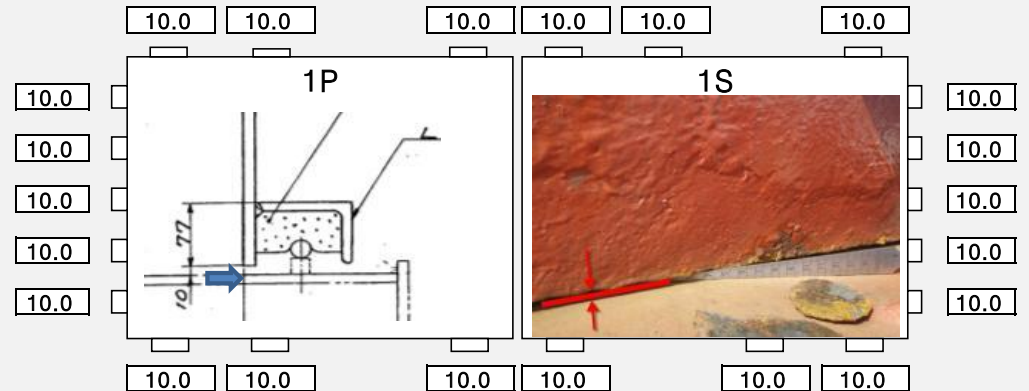


MEETING JOINT CLEARENCE (SCALE : mm)

Under 12mm : Black, 12.1mm~15.0mm : Blue, Over 15.1mm : Red

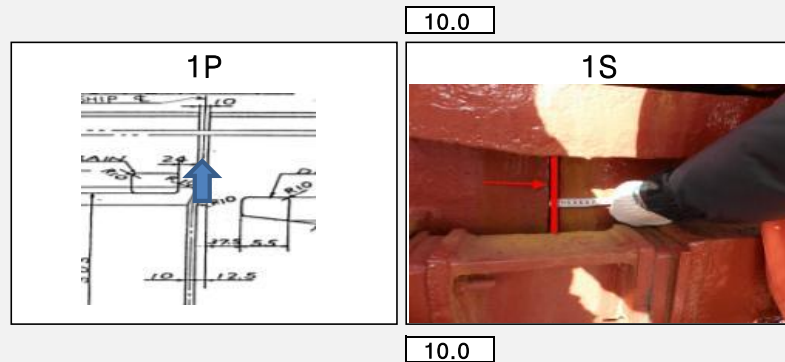



CENTER STOPPER AND STOPPER PLATE CLEARENCE (SCALE : mm)

*** 0-1mm : BLACK, 1.1mm ~ 3.0mm : BLUE, OVER 3.1mm : RED

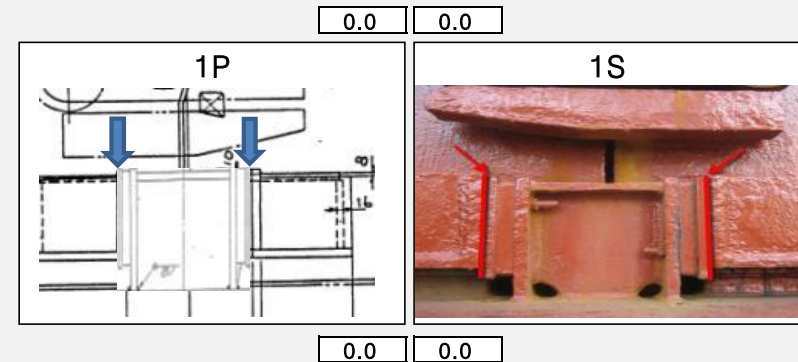

H/COVER GUIDE(END) CLEARANCE (SCALE : mm)



3mm~4mm : BLACK, 4.1mm ~ 5.0mm : BLUE, OVER 5.1mm : RED

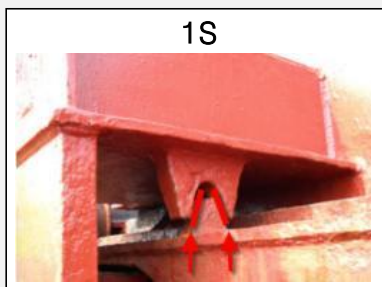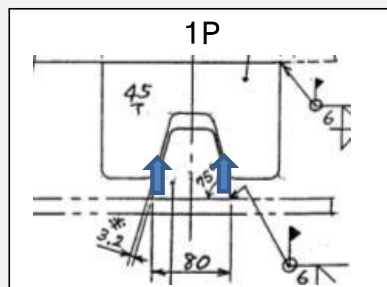

0.0

SELF AUTO CLEAT(SIDE) CLEARANCE(SCALE MM)

0mm : BLACK, 0.1mm ~ 3.0mm : BLUE, OVER 3.1mm : RED

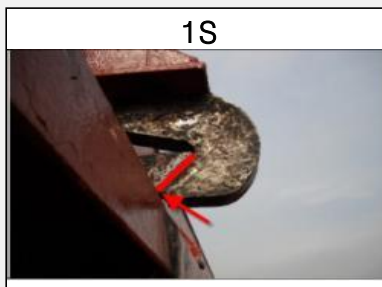
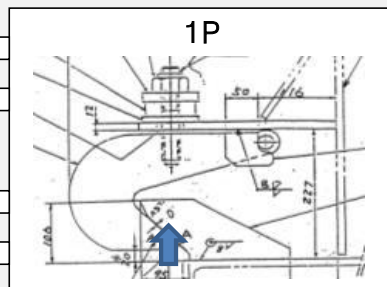


0.0

0.0

H/COVER GUIDE(SIDE) CLEARANCE (SCALE : mm)





3mm ~4mm : BLACK, 4.1m ~ 5.0mm : BLUE, OVER 5.1mm : RED

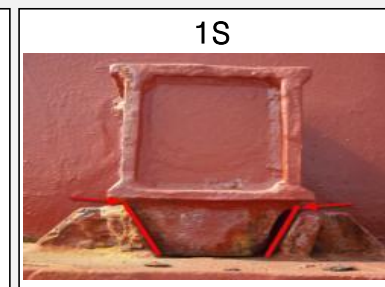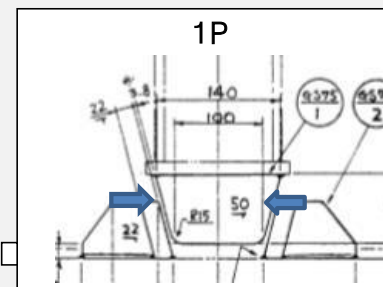

3.8

SELF AUTO CLEAT(END) CLEARANCE(SCALE MM)

0mm : BLACK, 0.1mm ~ 3.0mm : BLUE, OVER 3.1mm : RED

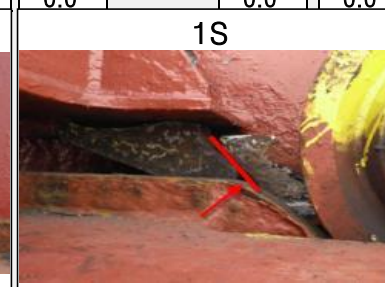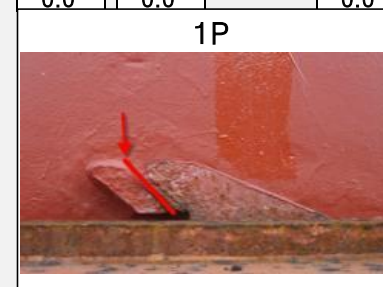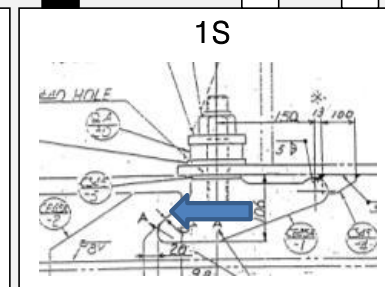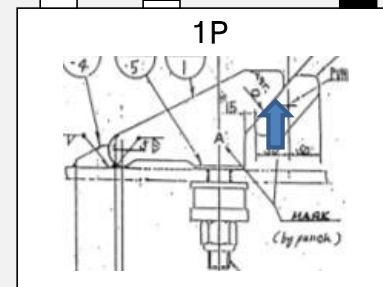

0.

1S