




INSTRUMENT PANEL

QUICKSTART

1. LANDING GEAR ALTERNATE RELEASE HANDLE
2. LANDING GEAR LEVER & WARNING SILENCE BUTTON
3. DRAG CHUTE T-HANDLE
4. FLAP INDICATOR
5. PITCH TRIM INDICATOR

9. RADAR WARNING RECEIVER
10. HYDRAULIC PRESSURE INDICATORS
11. ENGINE TACHOMETERS
12. AUX INTAKE DOORS INDICATOR
13. EGT INDICATORS
14. NOZZLE POSITION & OIL PRESSURE INDICATORS

15. FUEL FLOW & FUEL QTY INDICATORS, CABIN PRESSURE
16. MASTER CAUTION
17. ACCELEROMETER
18. ALTIMETER
19. STANDBY ATTITUDE INDICATOR
20. AOA INDICATOR
21. ARRESTING HOOK

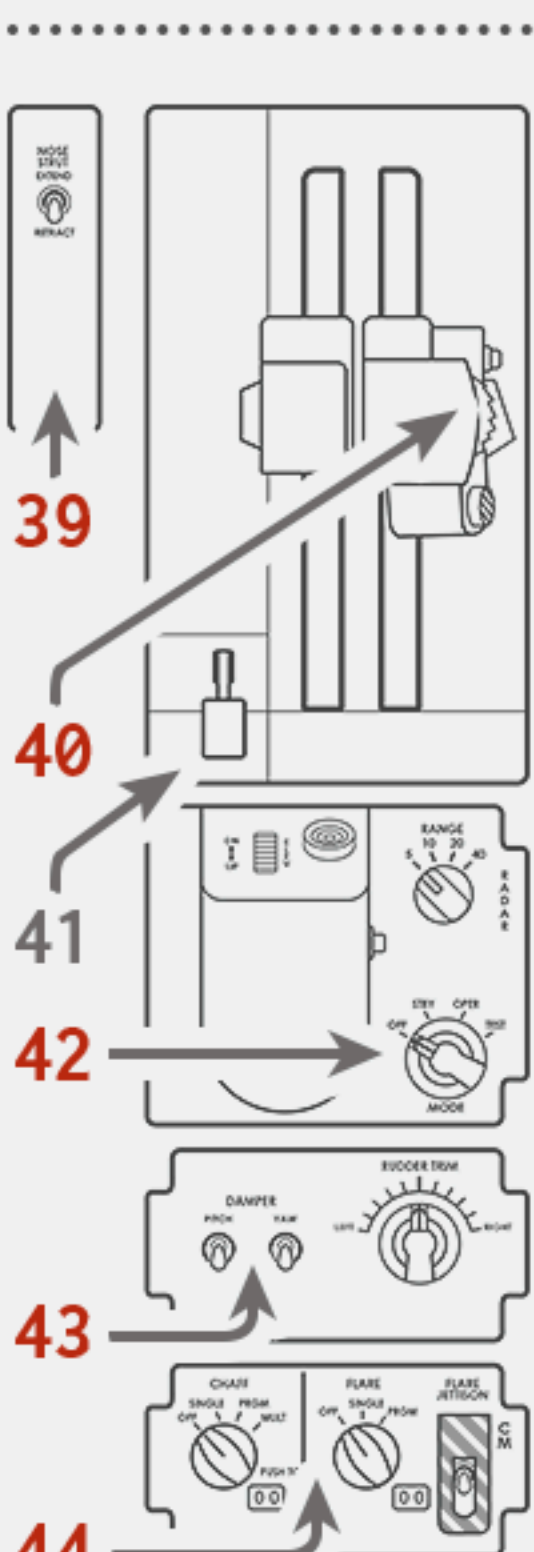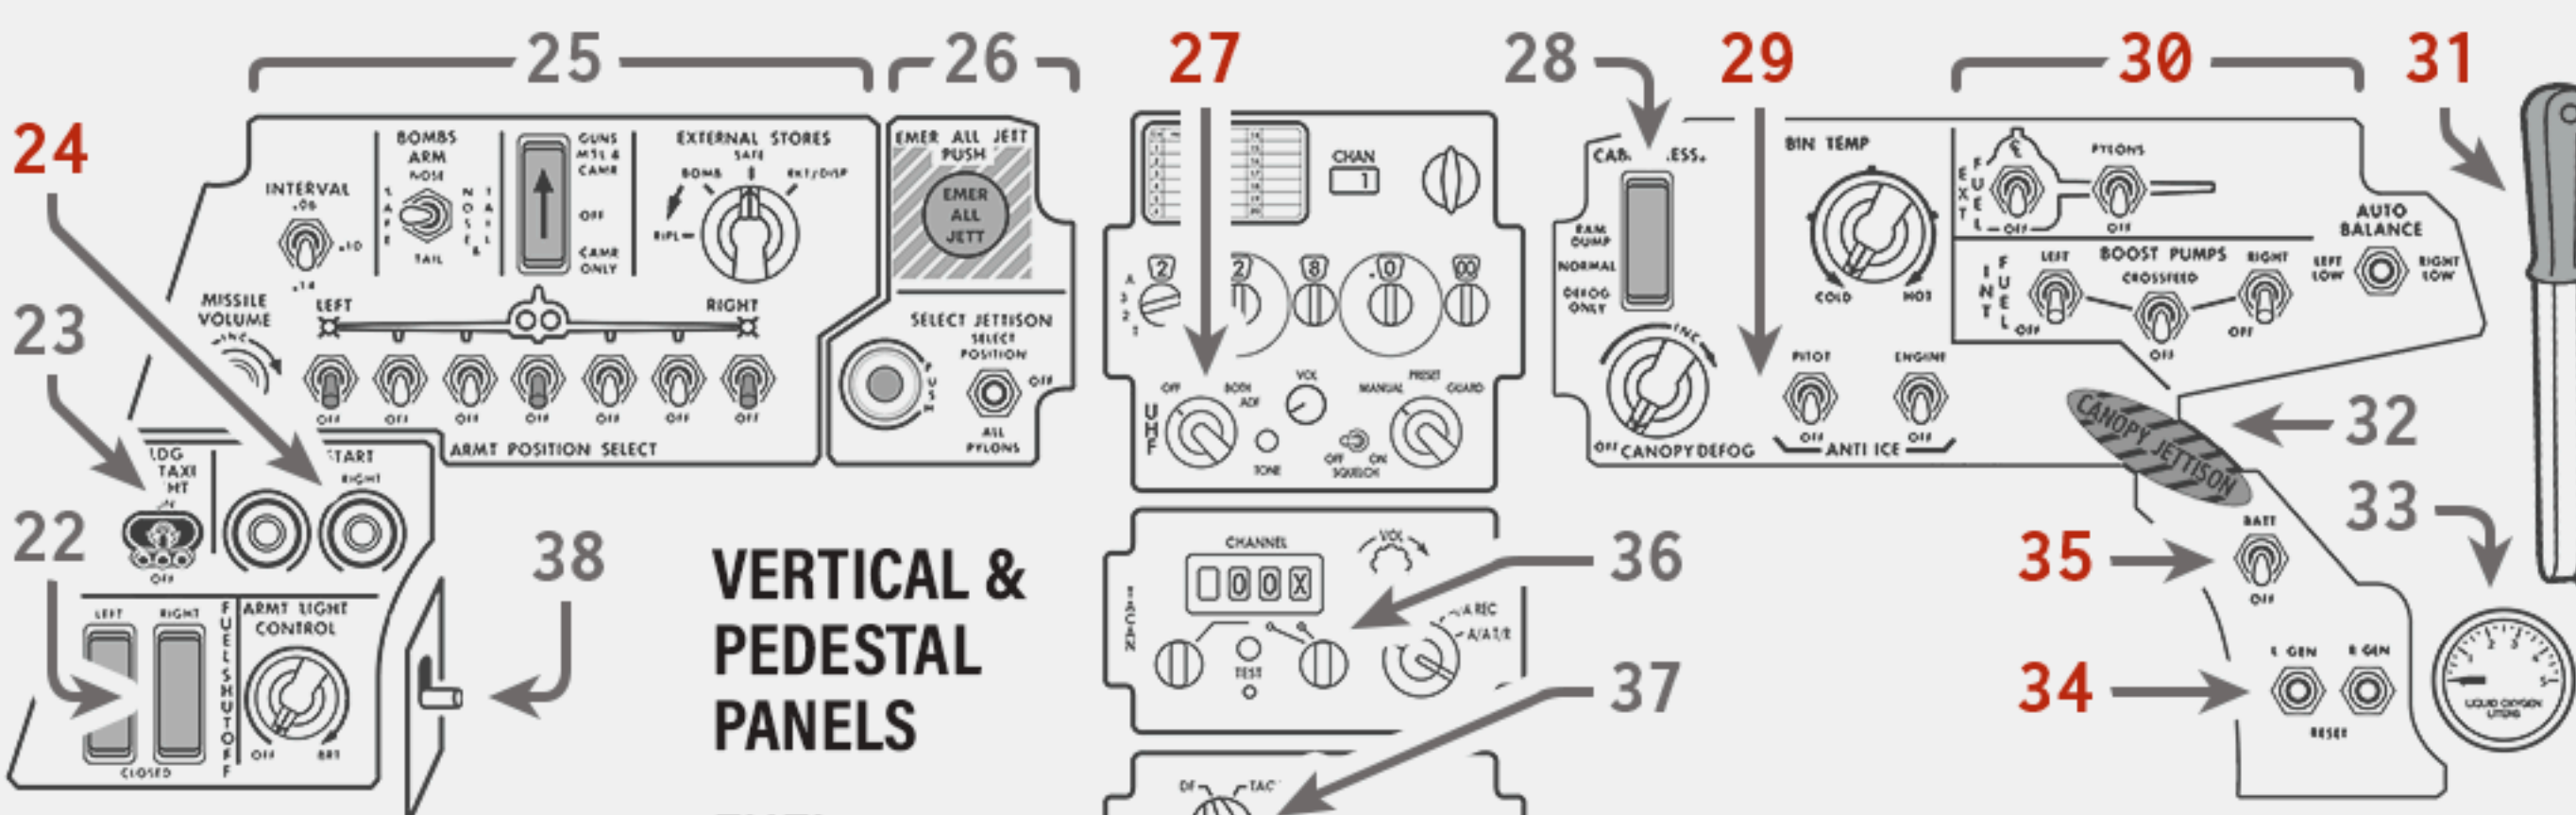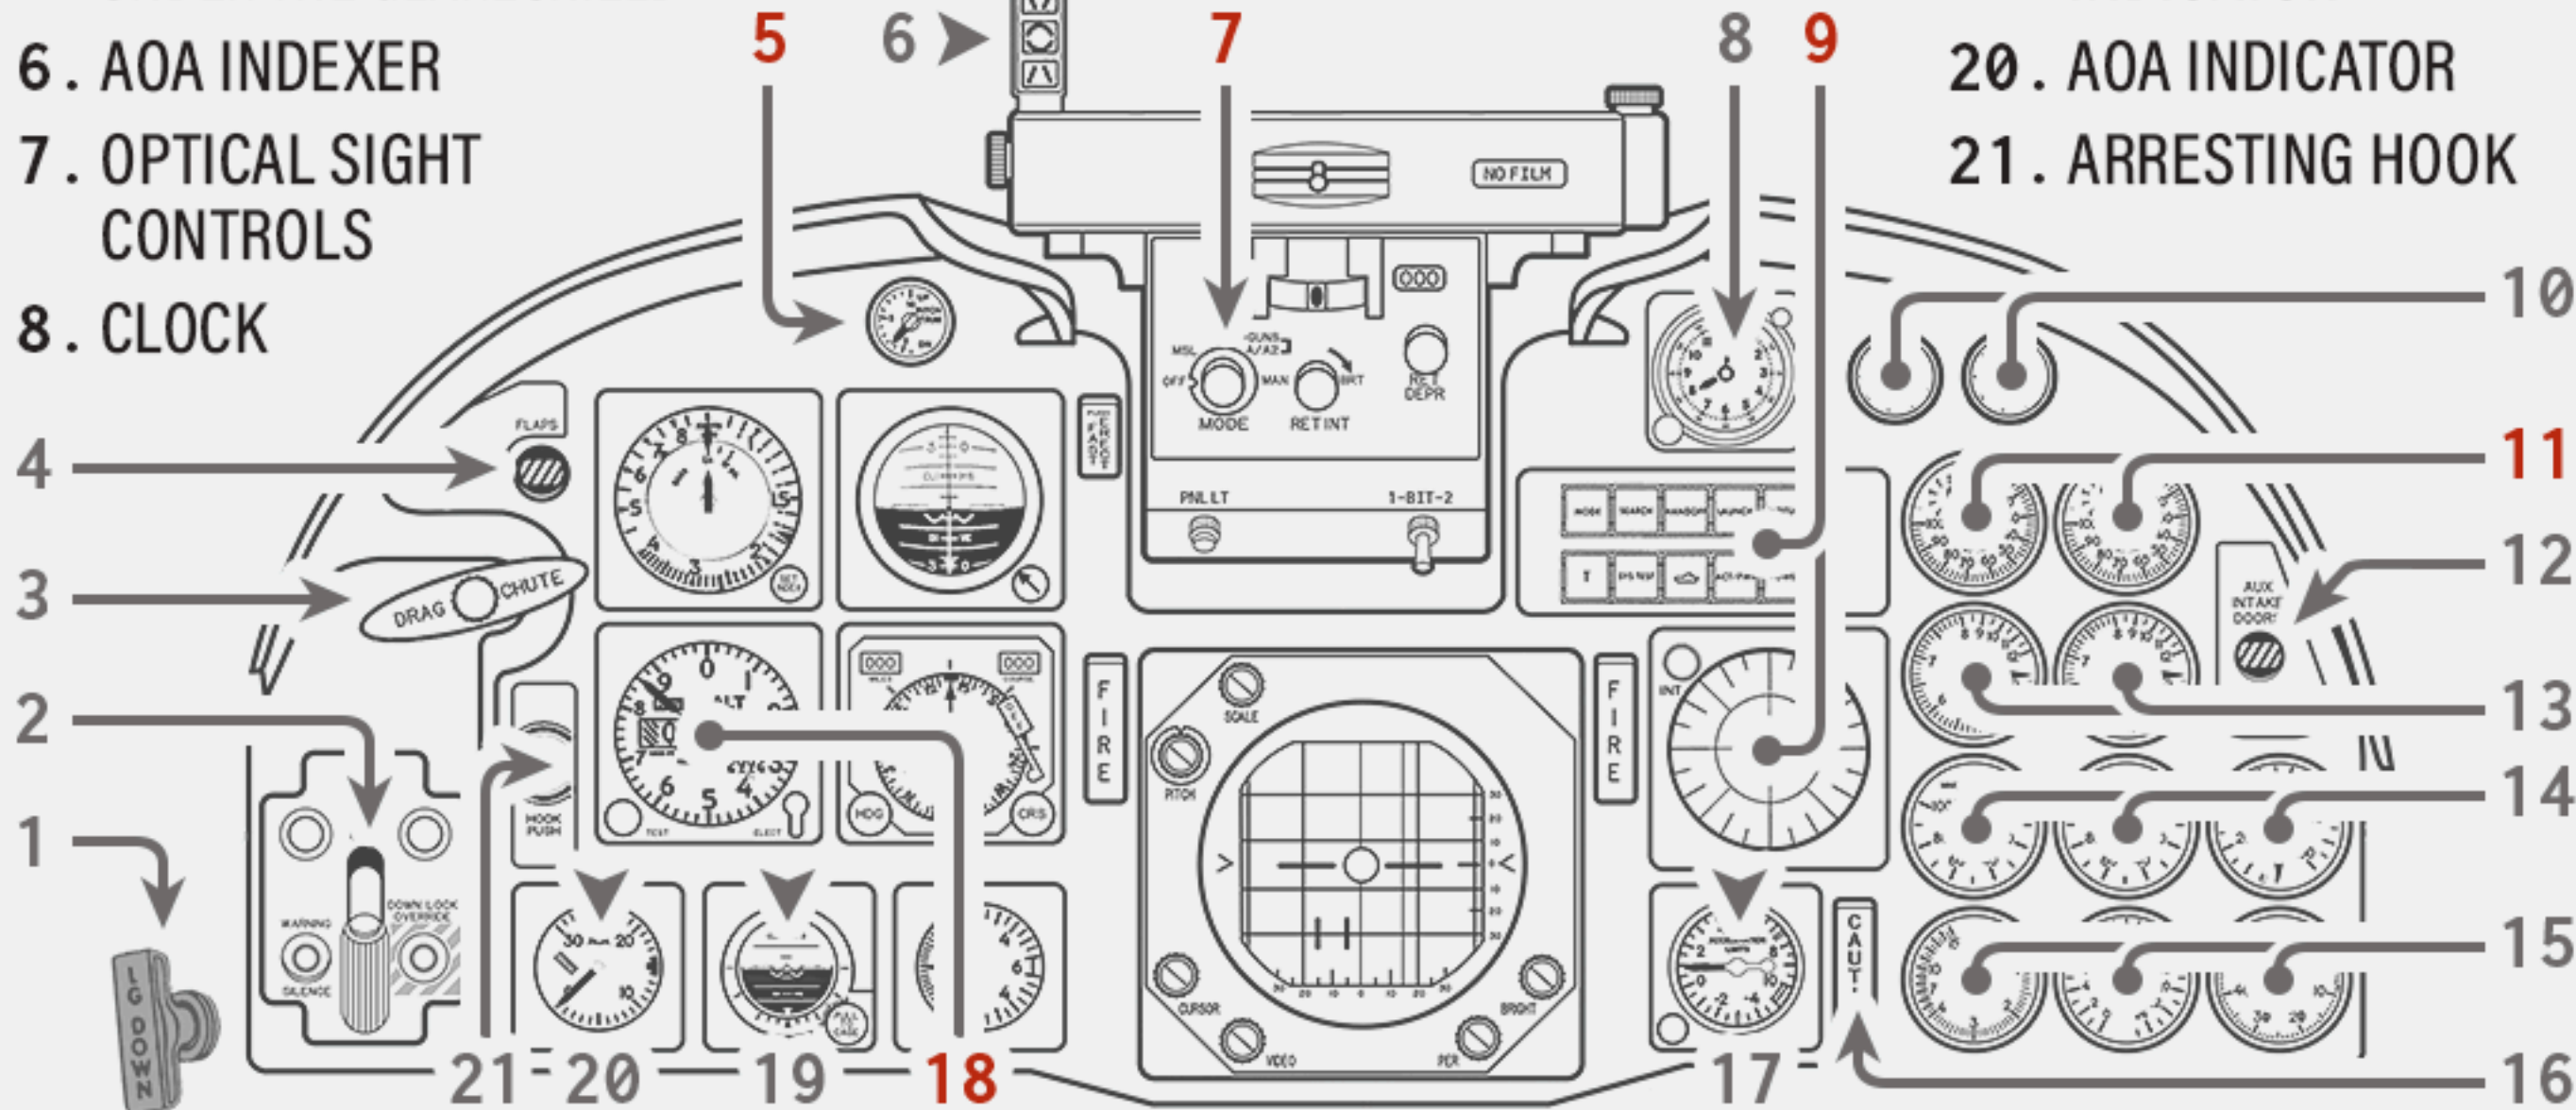

22. FUEL SHUTOFF SWITCHES
23. LANDING & TAXI LIGHT SWITCH
24. ENGINE START BUTTONS
25. ARMAMENT PANEL: MISSILE VOLUME
26. JETTISON CONTROLS
27. UHF RADIO/ADF CONTROLS
28. COCKPIT PRESSURIZATION SWITCH
29. PITOT & ENGINE ANTI-ICE SWITCHES, CANOPY DEFOG

30. BOOST PUMP, CROSSFEED, FUEL TRANSFER & AUTO BALANCE SWITCHES
31. CANOPY HANDLE
32. CANOPY JETTISON
33. OXYGEN QUANTITY
34. GENERATOR SWITCHES
35. BATTERY SWITCH
36. TACAN CONTROLS
37. NAVIGATION MODE
38. GEAR ALTERNATE RELEASE RESET

LEFT & RIGHT CONSOLES

39. NOSE STRUT SWITCH
40. RIGHT THROTTLE: FLAP THUMB & SPEED BRAKE SWITCHES
41. FLAP LEVER
42. RADAR MODE SWITCH

43. STABILITY AUGMENTER CONTROLS: PITCH & YAW DAMPER SWITCHES
44. COUNTER-MEASURES DISPENSER CONTROLS: CHAFF & FLARES
45. OXYGEN REGULATOR

46. CAUTION LIGHTS
47. IFF/SIF CONTROLS
48. FUEL & OXY GAGE TEST / QUANTITY CHECK SWITCH
49. LIGHTING CONTROLS: BEACON & WARNING LIGHTS TEST SWITCHES

- 27 UHF BOTH (*rmb*)
 - 30 BOOST PUMPS LEFT & RIGHT
 - 35 BATT
 - 34 L GEN & R GEN (*rmb*)
- Ground Air Supply: Connect & Apply
- 11 At >10% Left RPM:
 - 24 ENGINE START LEFT
- Left Throttle: IDLE (*RAIt + Home*)
- 11 Wait for Left RPM to stabilize at ~50% (in about 30 sec)
- Ground Air Supply: Apply
- 11 At >10% Right RPM:
 - 24 ENGINE START RIGHT
- Right Throttle: IDLE (*RShift + Home*)
- 11 Wait for Right RPM to stabilize at ~50%
- Ground Air Supply: Disconnect

- 31 Close (*LCtrl+C*)
- 40 Speed Brake IN (fwd) (*rmb*)
- 40 Flap Thumb Switch AUTO (aft)
- 43 PITCH & YAW
- 18 Set QNH
- 5 Set Pitch Trim based on loadout and note rotation speed for takeoff:

BEFORE TAKEOFF:

- 39 Extend Strut (fwd)
- 7 Sight as desired
- 9 RWR POWER
- 42 Radar OPER
- 44 CMs as desired
- 29 PITOT

CLEAN: 7 / 150 kts
MEDIUM: 8 / 165 kts
HEAVY: 9 / 180 kts