Updated: 3 September 2020

Requiem's Air Combat Tutorial Library

Cockpit Workflows: F-5E Tiger

THANK YOU TO MY PATREON SUPPORTERS!

"Commercial Pilots" - D Drake, SmellyFella

"Private Pilots" - C Lavid, Colin, Creep, Donik, J Welch, PhunkaeG, B McDermott M Jaspers, M Freeman,Boslandschap, M Screng,R Moore, Ben, M Smith, C Rocchio, C Bailey 12th OIAE Gosling, Heinrich, Sigma, Albatross

"Student Pilots" - Roger Meatball, Peregryn, Utopioneer, P Angelopoulos, ShamrockOneFive, A Bullock, J Conant, B Livingston Snowy, X, Tom, Greeny, Snowy, Nadelbaum, T Anderson, F Estevez, J Witkowski, RasterOps98

A special thanks to “Busdriver” for reviewing my content so thoroughly!

If you would like to support my content you can do so here:

BECOME A PATRON SUBSCRIBE FOLLOW

DCS F-5E COCKPIT WORKFLOWS

(Click the flow)

1. Practice Page
2. Before Start
3. L Engine Start
4. R Engine Start
5. Crossbleed Start
6. After Start
7. Taxi
8. Before Takeoff
9. After Takeoff
10. Climb
11. Fence IN Check
12. AIM-9 Search/Acquisition
13. AIM-9 Launch
14. Air-Air Guns
15. Bombing Attacks
16. Rocket Attacks
17. Air-Ground Guns
18. Fence OUT Check
19. Descent
20. Before Landing
21. Go Around
22. After Landing
23. Shutdown

F-5E FLOW PRACTICE PAGE

This page is intentionally blank so you can practice visualising your flows on a blank cockpit

BACK TO COCKPIT FLOWS LIST

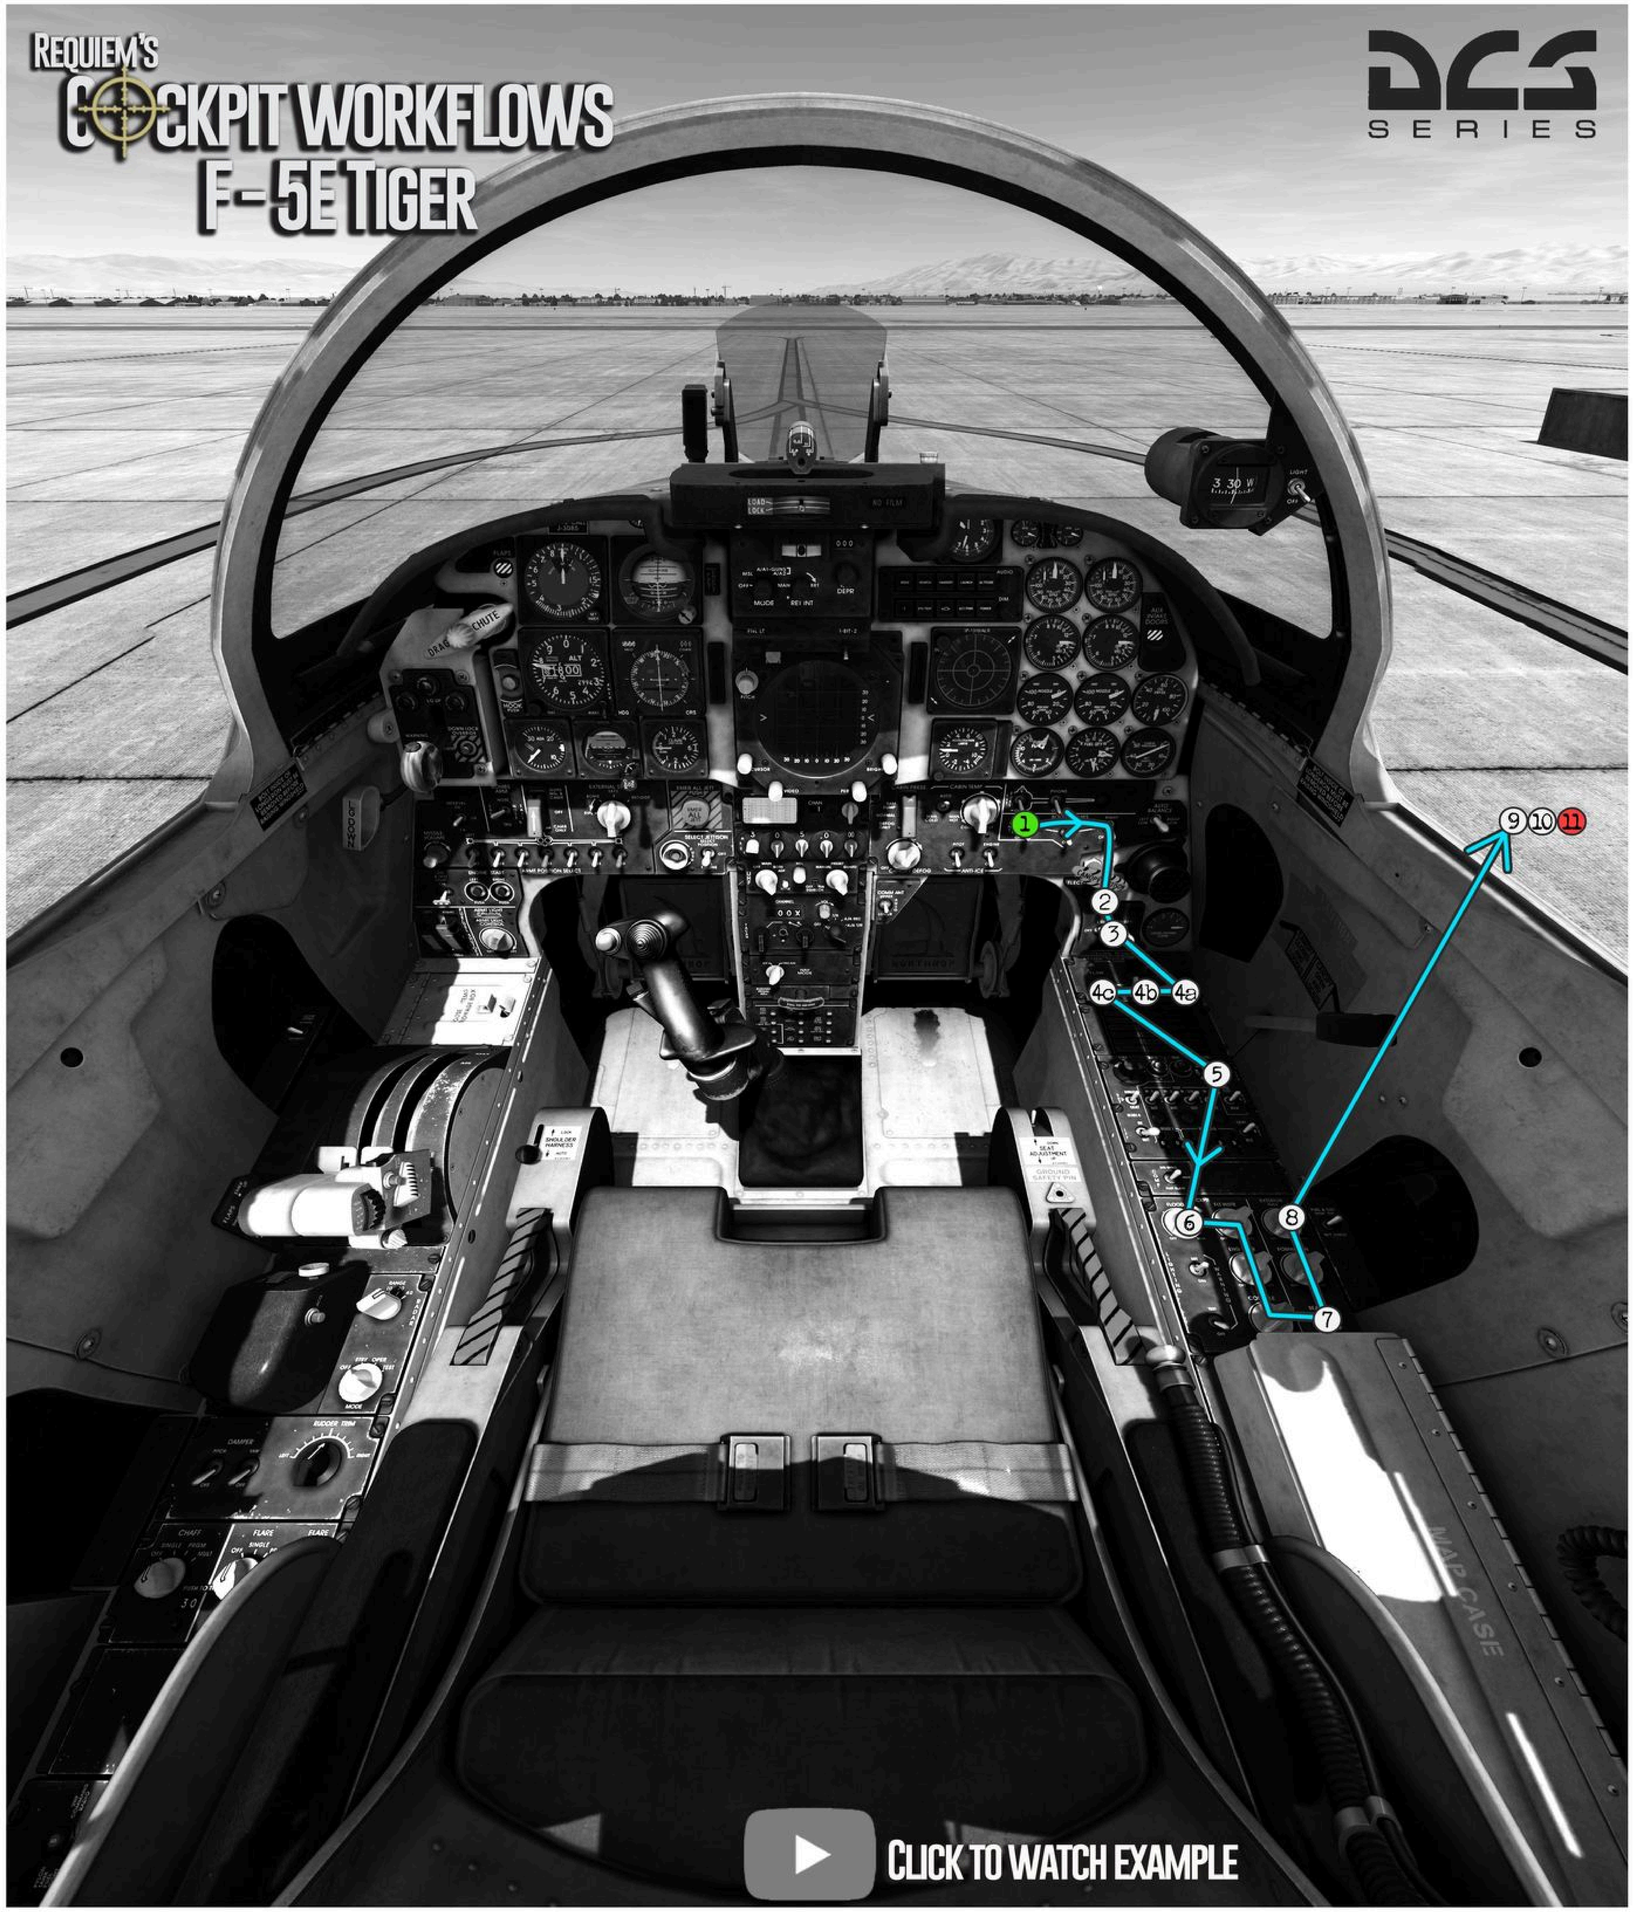

F-5E BEFORE START FLOW

TRIGGER: SPAWNED INTO AIRPLANE

1. Fuel Boost Pumps L/R - ON
2. Battery Switch - ON

   (Aux Intake Doors - CLOSE)
3. Generators L/R - ON
4. Oxygen System - Set

   a. Supply Lever - ON

   b. Diluter Lever - NORMAL

   c. Emergency Lever - NORMAL
5. IFF/SIF - Standby
6. Internal Lights - As required
7. Beacon - ON
8. Formation/Exterior Nav Lights

   - As required
9. External Power - Connect
10. Wheel Chocks - Place
11. External Air - Connect

*Access Ground Crew menu for steps 9-11 using "\" key

BACK TO COCKPIT FLOWS LIST

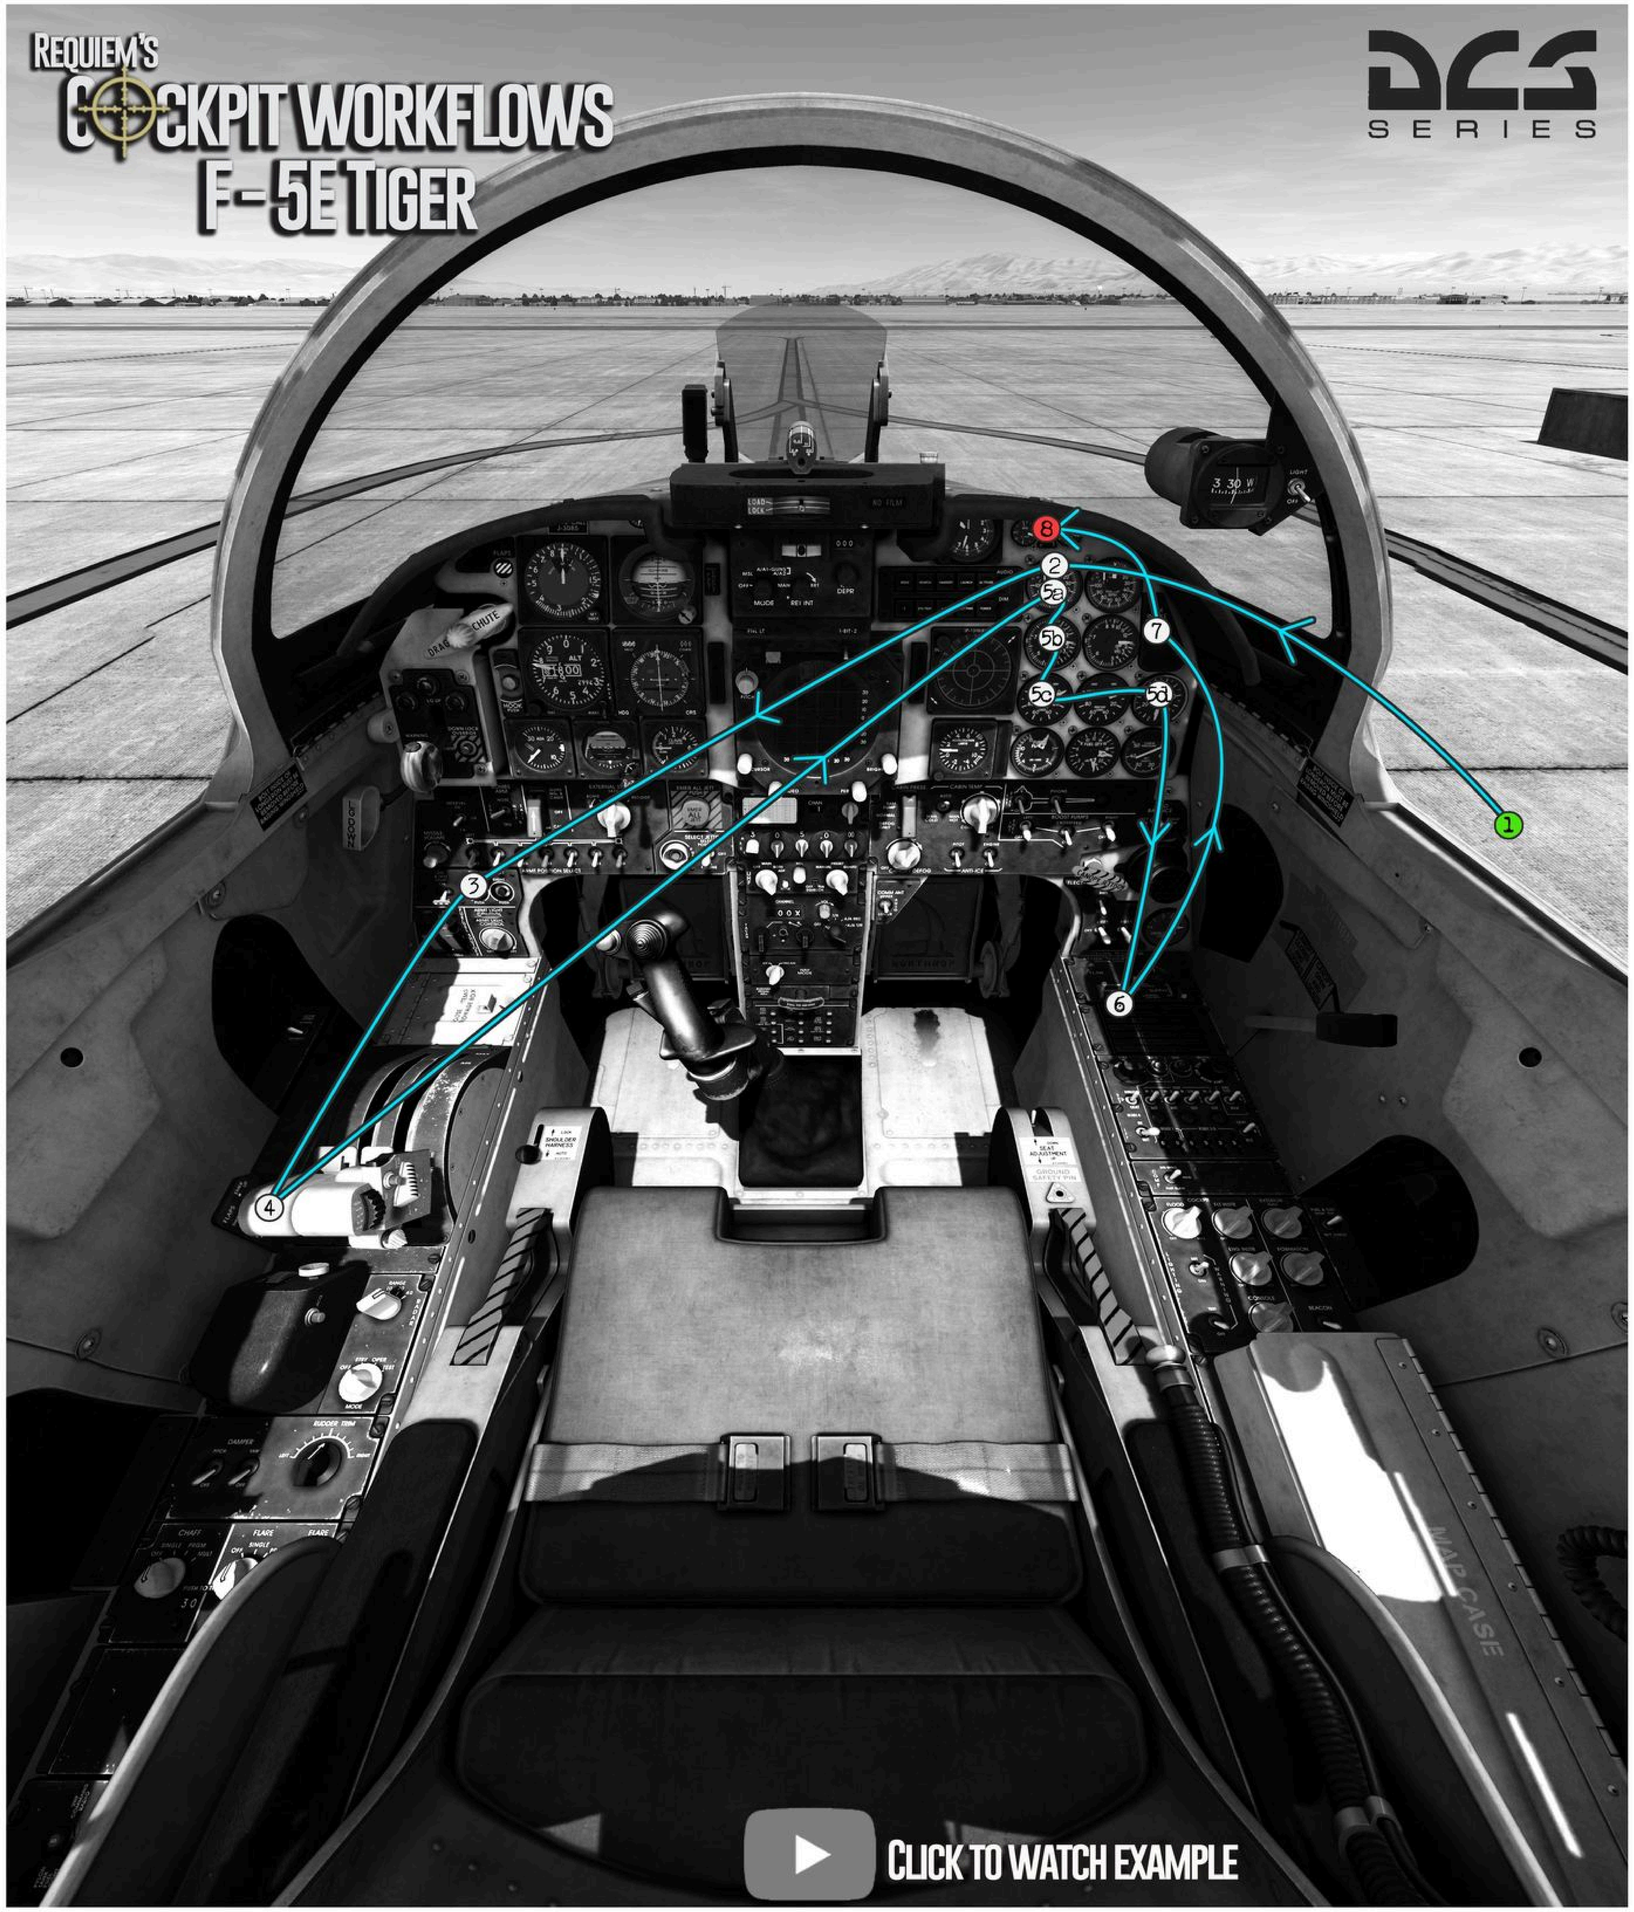

F-5E LEFT ENGINE START FLOW

TRIGGER: CLEARED TO START ENGINES

1. External Air - Call for Air Supply
2. L Tachometer - Confirm RPM > 10%
3. L ENG START - Push
4. L Throttle - IDLE
5. L Engine Instruments - Check
   a. Tachometer 49-52%
   b. EGT > 140°C
   c. Nozzle 70-80%
   d. Oil Pressure 5-20 psi
6. Generator Caution Light - Out
7. Aux Intake Doors - Barber Pole
8. Hydraulic Pressure - 2800-3200 psi

BACK TO COCKPIT FLOWS LIST

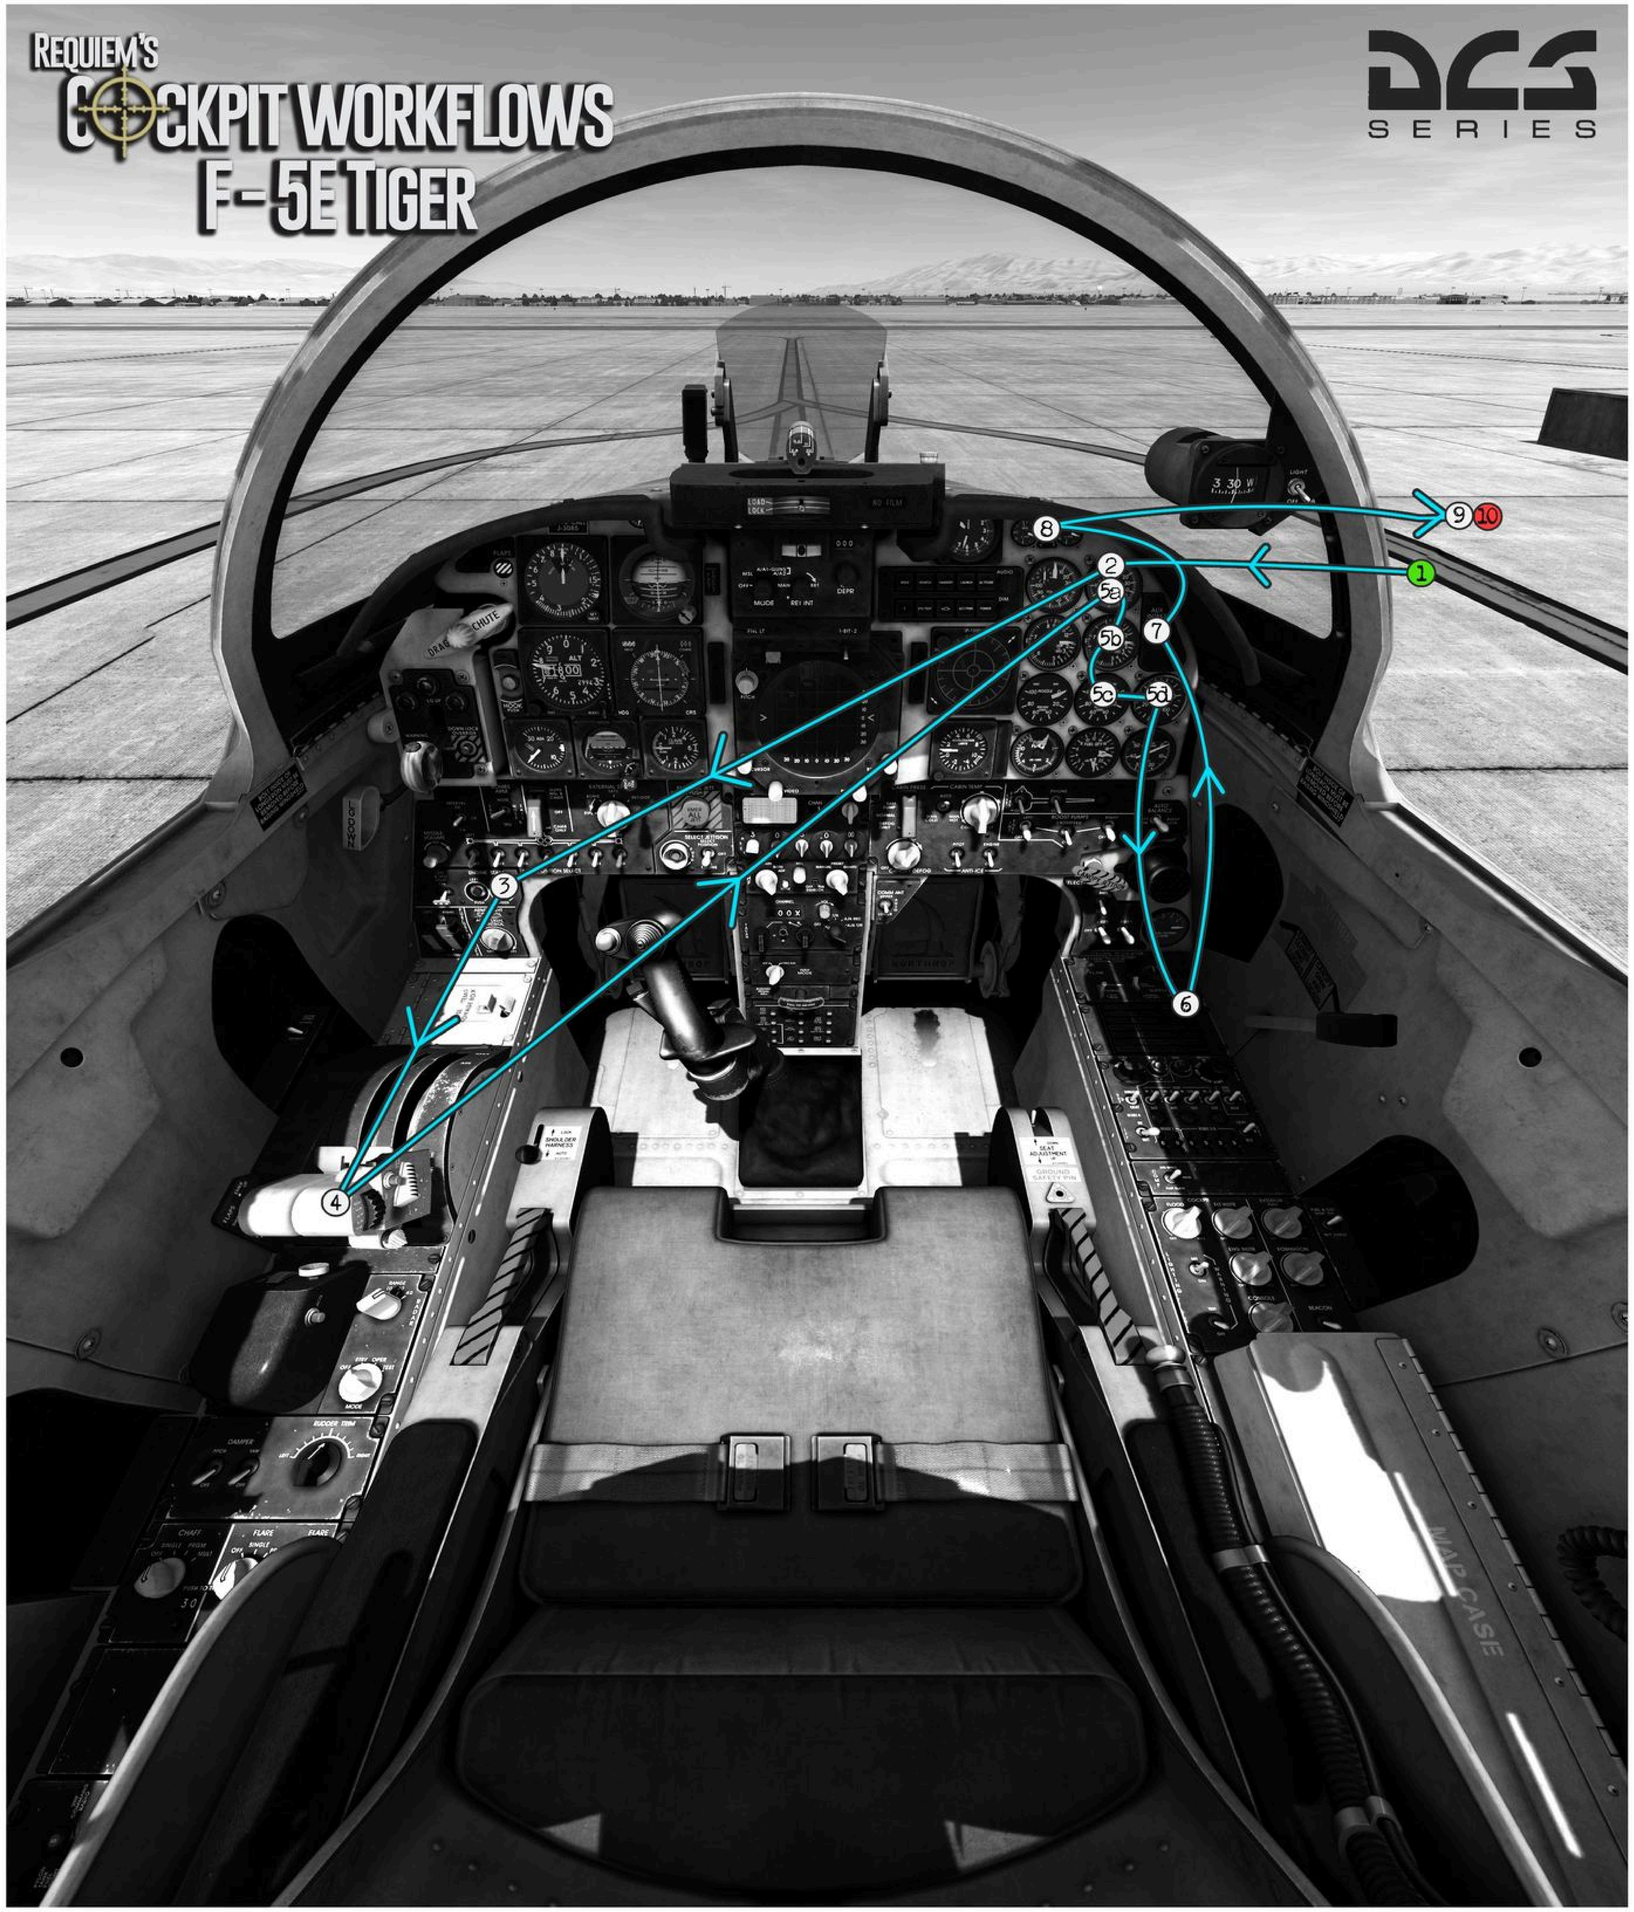

F-5E RIGHT ENGINE START FLOW

TRIGGER: LEFT ENGINE START COMPLETE

1. External Air - Call for Air Supply
2. R Tachometer - Confirm RPM > 10%
3. R ENG START - Push
4. R Throttle - IDLE
5. R Engine Instruments - Check
    a. Tachometer 49-52%
    b. EGT > 140°C
    c. Nozzle 70-80%
    d. Oil Pressure 5-20 psi
6. Generator Caution Light - Out
7. Aux Intake Doors - Open
8. Hydraulic Pressure - 2800-3200 psi
9. External Air - Disconnect
10. External Power - Disconnect

BACK TO COCKPIT FLOWS LIST

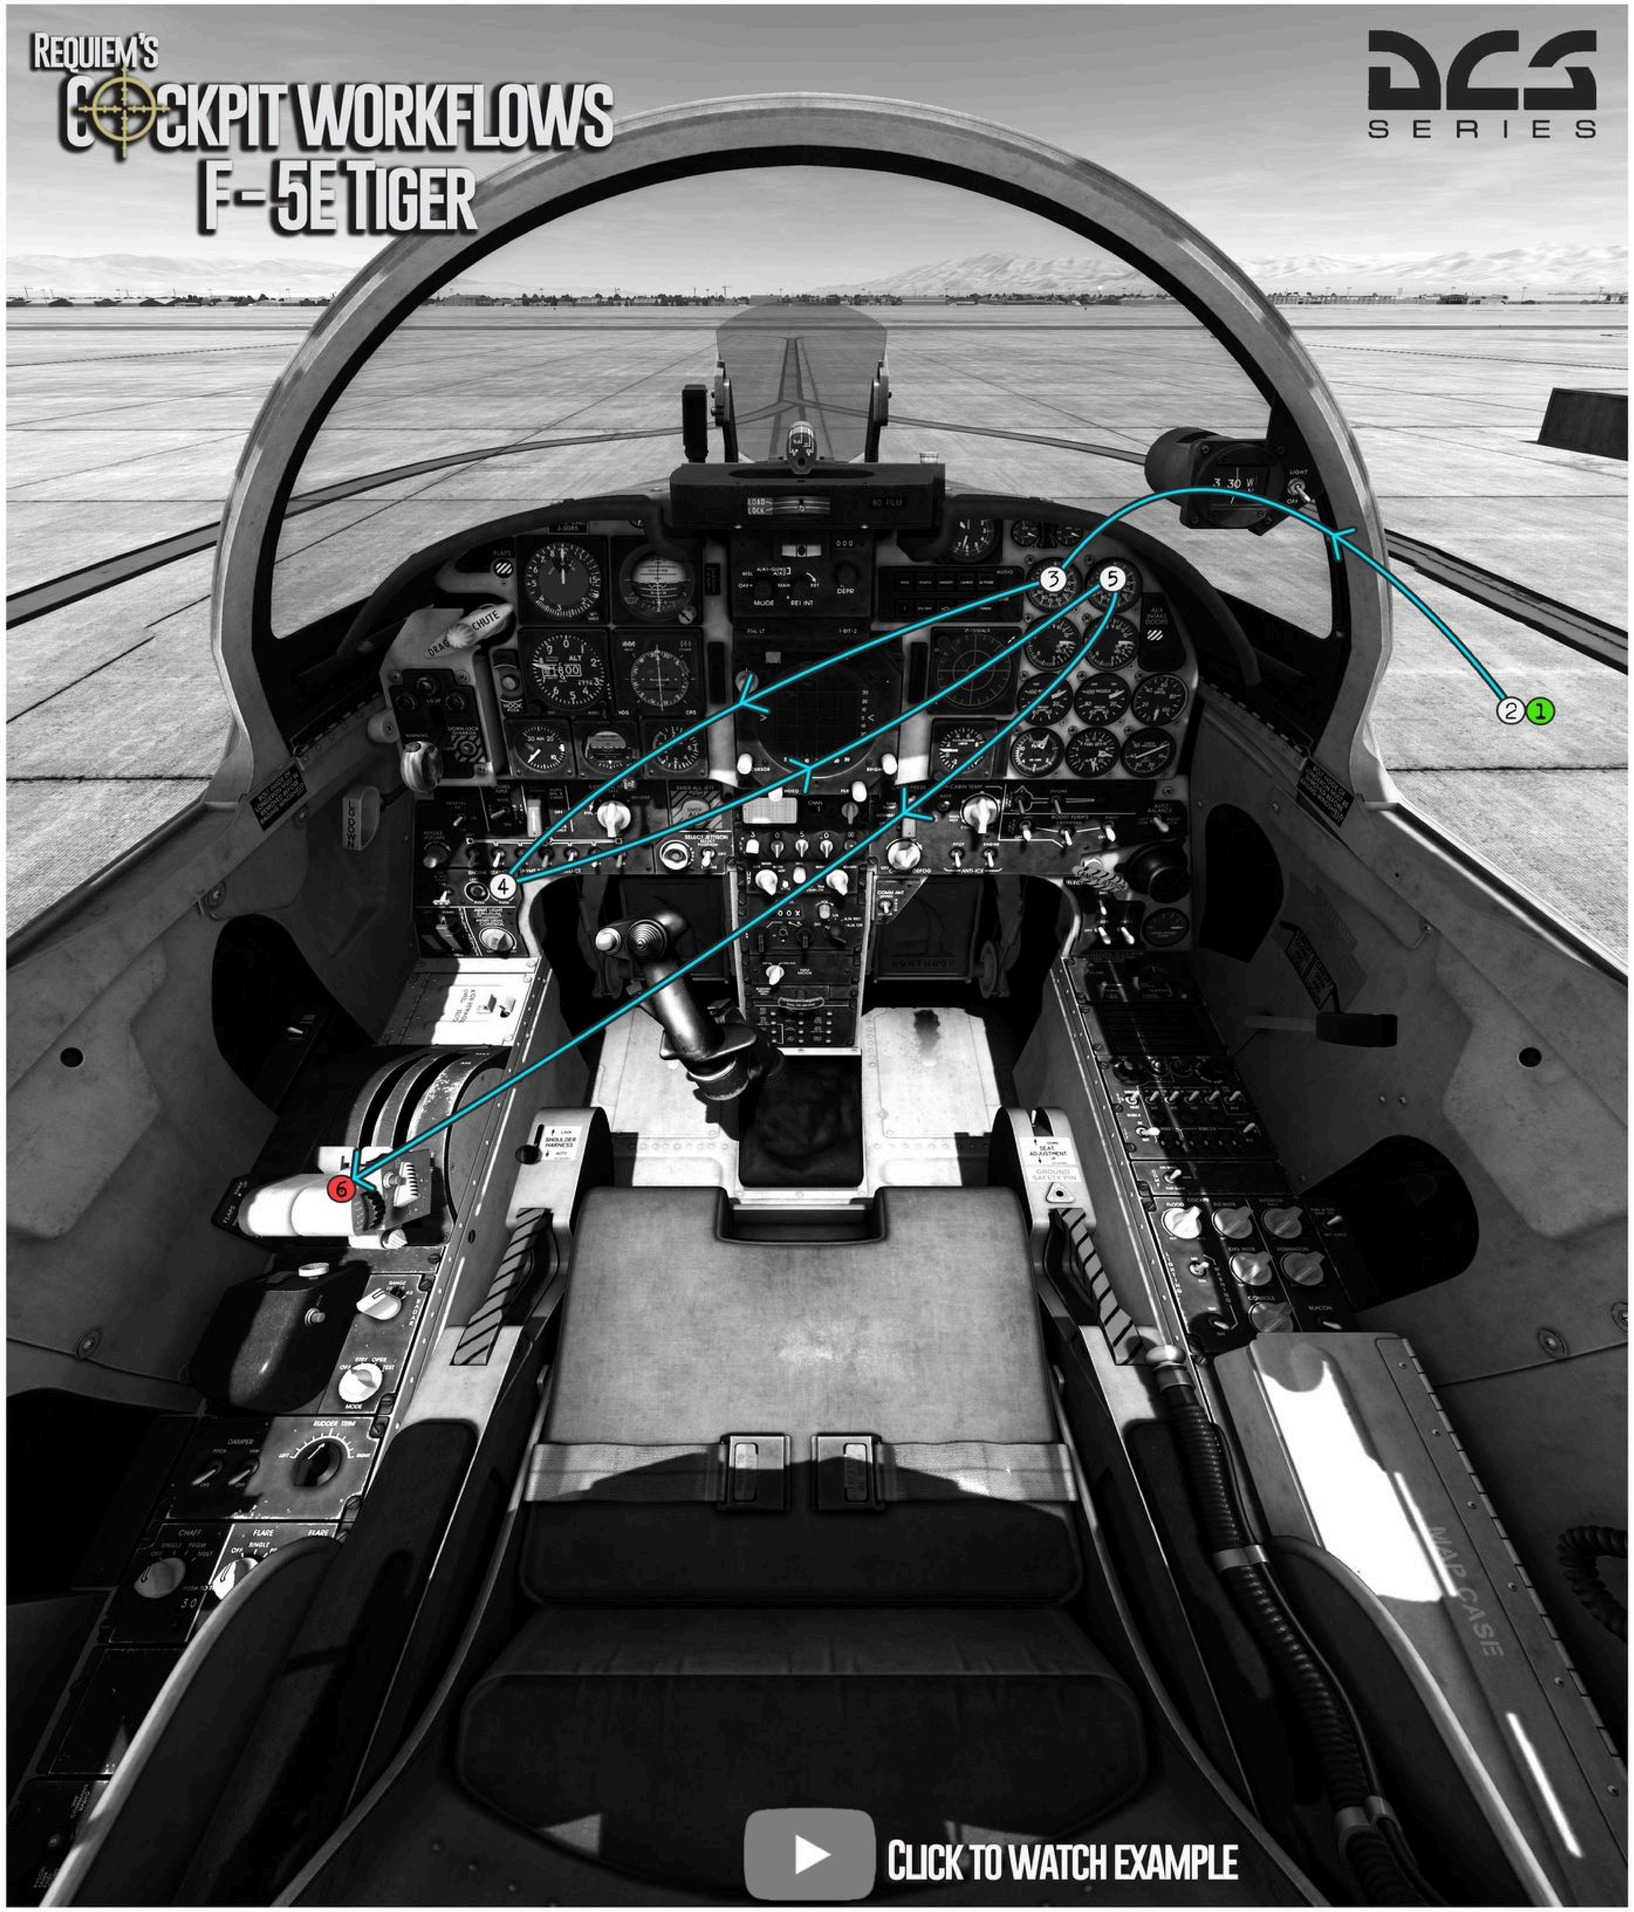

F-5E CROSSBLEED START FLOW

TRIGGER: LEFT ENGINE START COMPLETE

1. External Air - Disconnect
2. External Power - Disconnect
3. L Tachometer - RPM > 95%
4. R ENG START - Push
5. R Tachometer - Confirm RPM > 10%
6. R Throttle - IDLE

THEN FOLLOW R ENG START FLOW

*L Throttle to IDLE when R ENG indications are normal

BACK TO COCKPIT FLOWS LIST

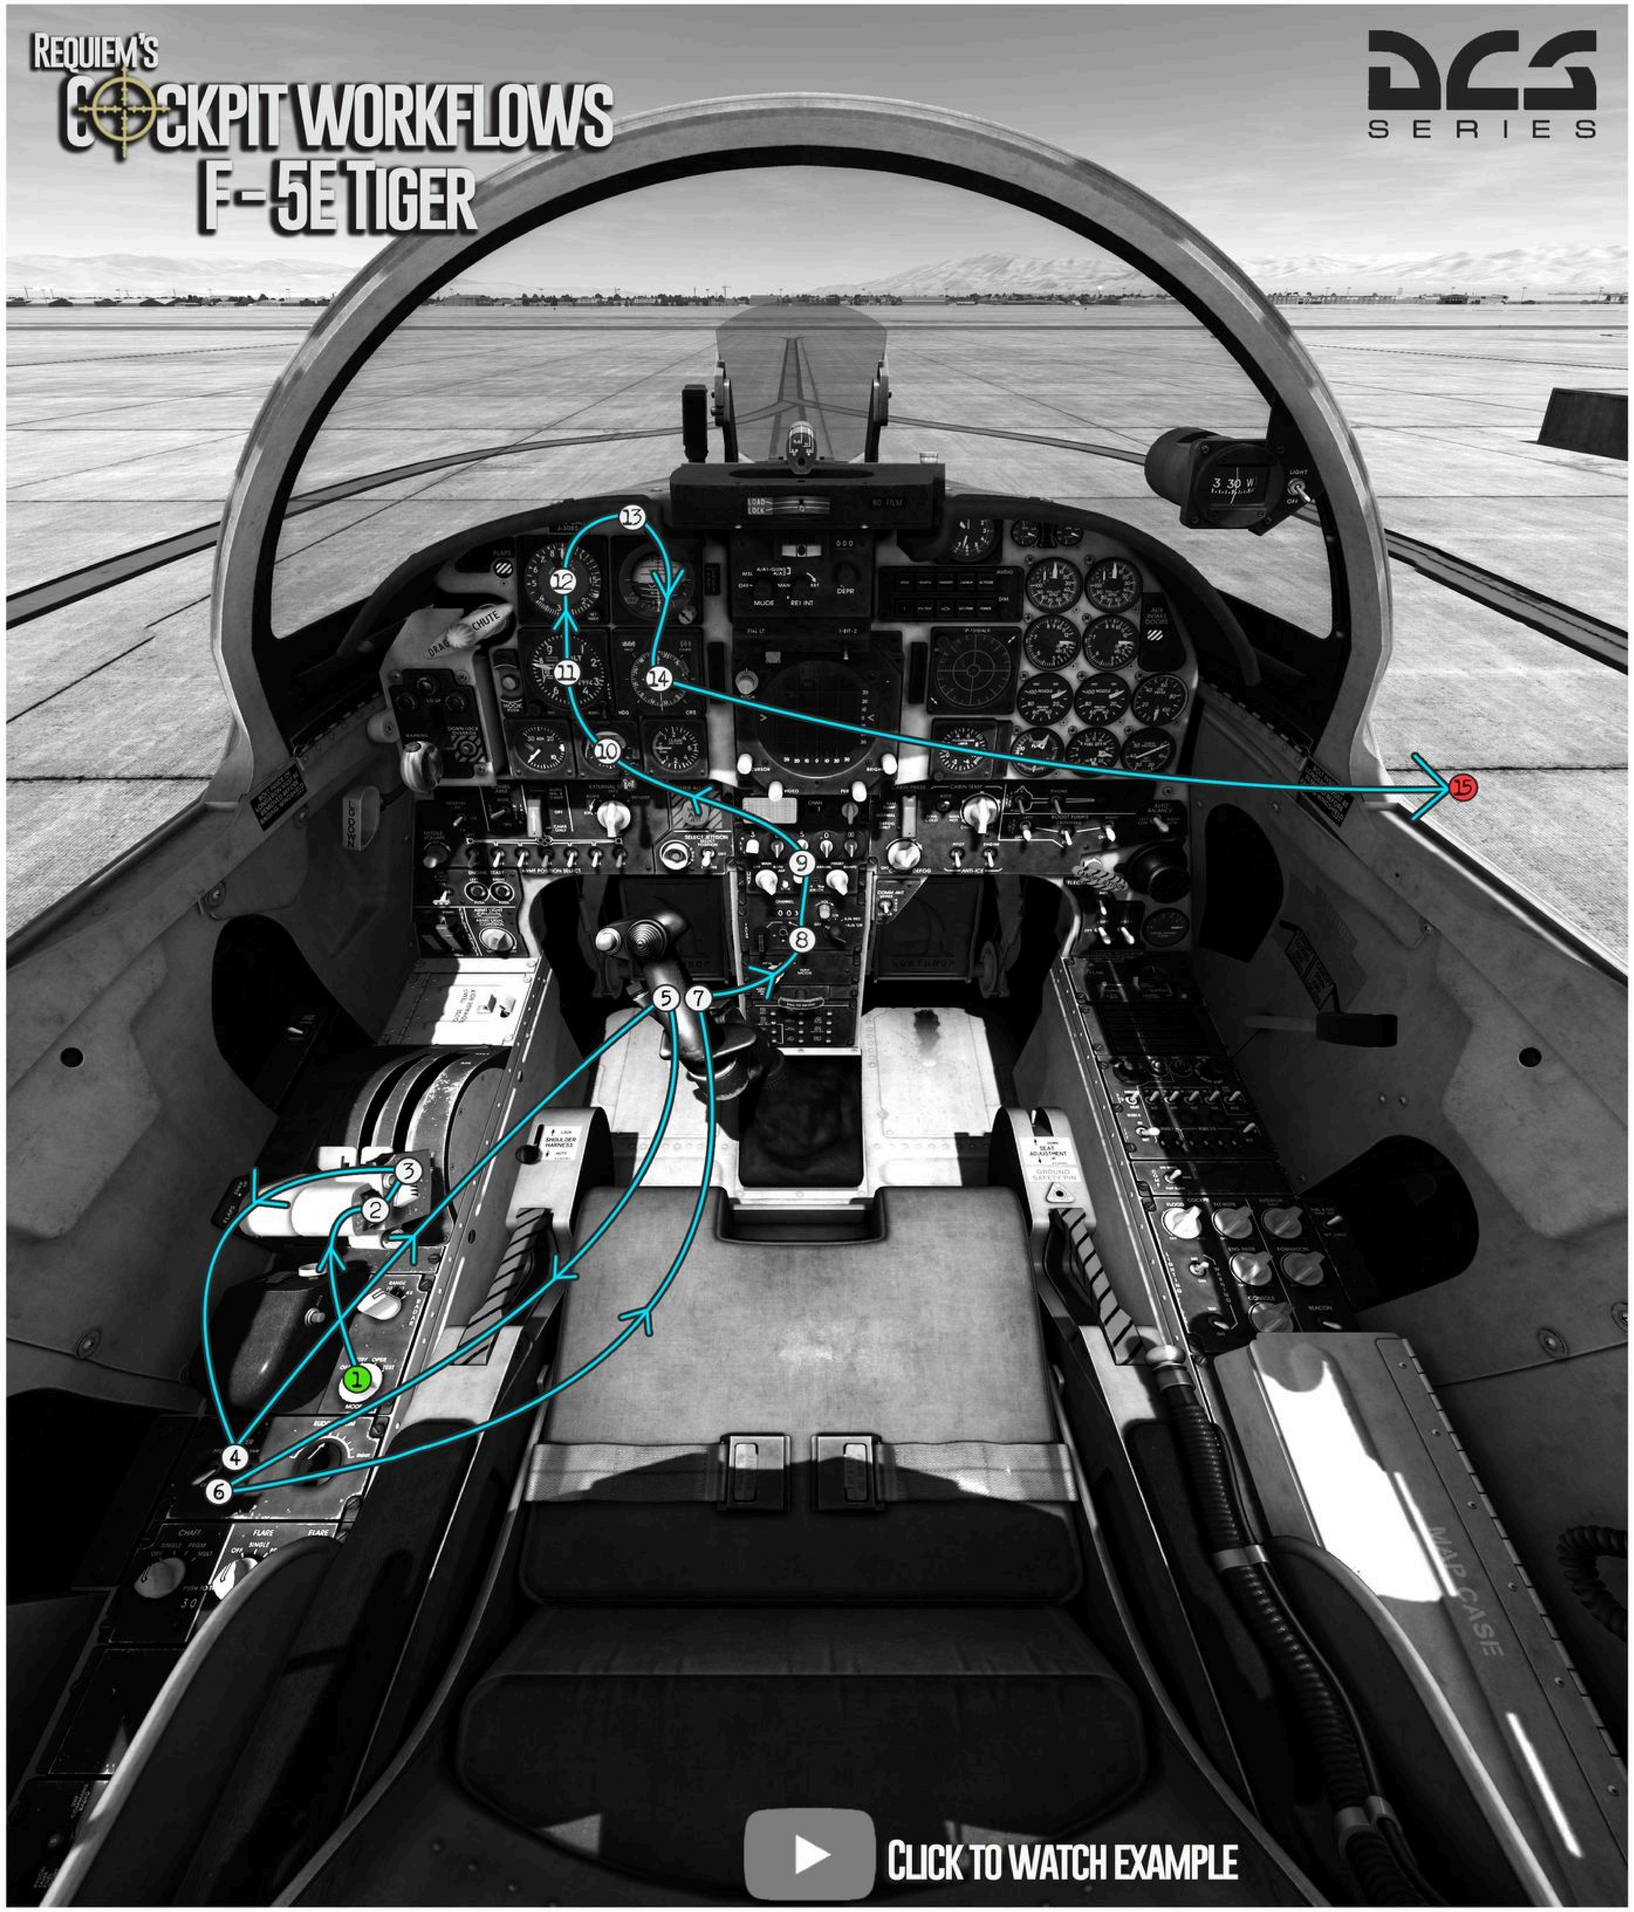

F-5E AFTER START FLOW

TRIGGER: BOTH ENGINE STARTS COMPLETE

1. Radar - OFF or STBY
2. Speed Brake - IN
3. Flap Thumb Switch - AUTO
4. Damper Switches - YAW and PITCH
5. Pitch Damper Cutoff - Check
6. Pitch Damper Switch - PITCH
7. Flight Controls - Check
8. TACAN - Tune, set to T/R
9. Radio - Verify set correctly
10. Standby Attitude Indicator
    - Check, Set, and Uncage
11. Altimeter - Set and Check
    *PNEU, set ELECT, within 75ft
12. Airspeed Index - Set 300 knots
13. Pitch Trim - Set

Configuration	Pitch Trim	Rotate
Clean	+6	135 KIAS
Gun ammo, 2x AIM-9	+8	145 KIAS
Gun ammo, 2x AIM-9, CL Fuel Tank	+8	158 KIAS
Gun ammo, 2x AIM-9, 3x 150gal Fuel Tanks	+7	158 KIAS
Gun ammo, 2x AIM-9, CL Fuel Tank, Bombs, Rockets	+7	165 KIAS
Gun ammo, 2x AIM-9, CL Fuel pods, Bombs, Rockets	+8	165 KIAS
Gun ammo, 2x AIM-9, 3x 275gal Fuel Tanks	+8	170 KIAS
Gun ammo, 2x AIM-9, Bombs, Rockets	+8	180 KIAS

14. HSI - Check CDI & TACAN working
15. Wheel Chocks - Remove

BACK TO COCKPIT FLOWS LIST

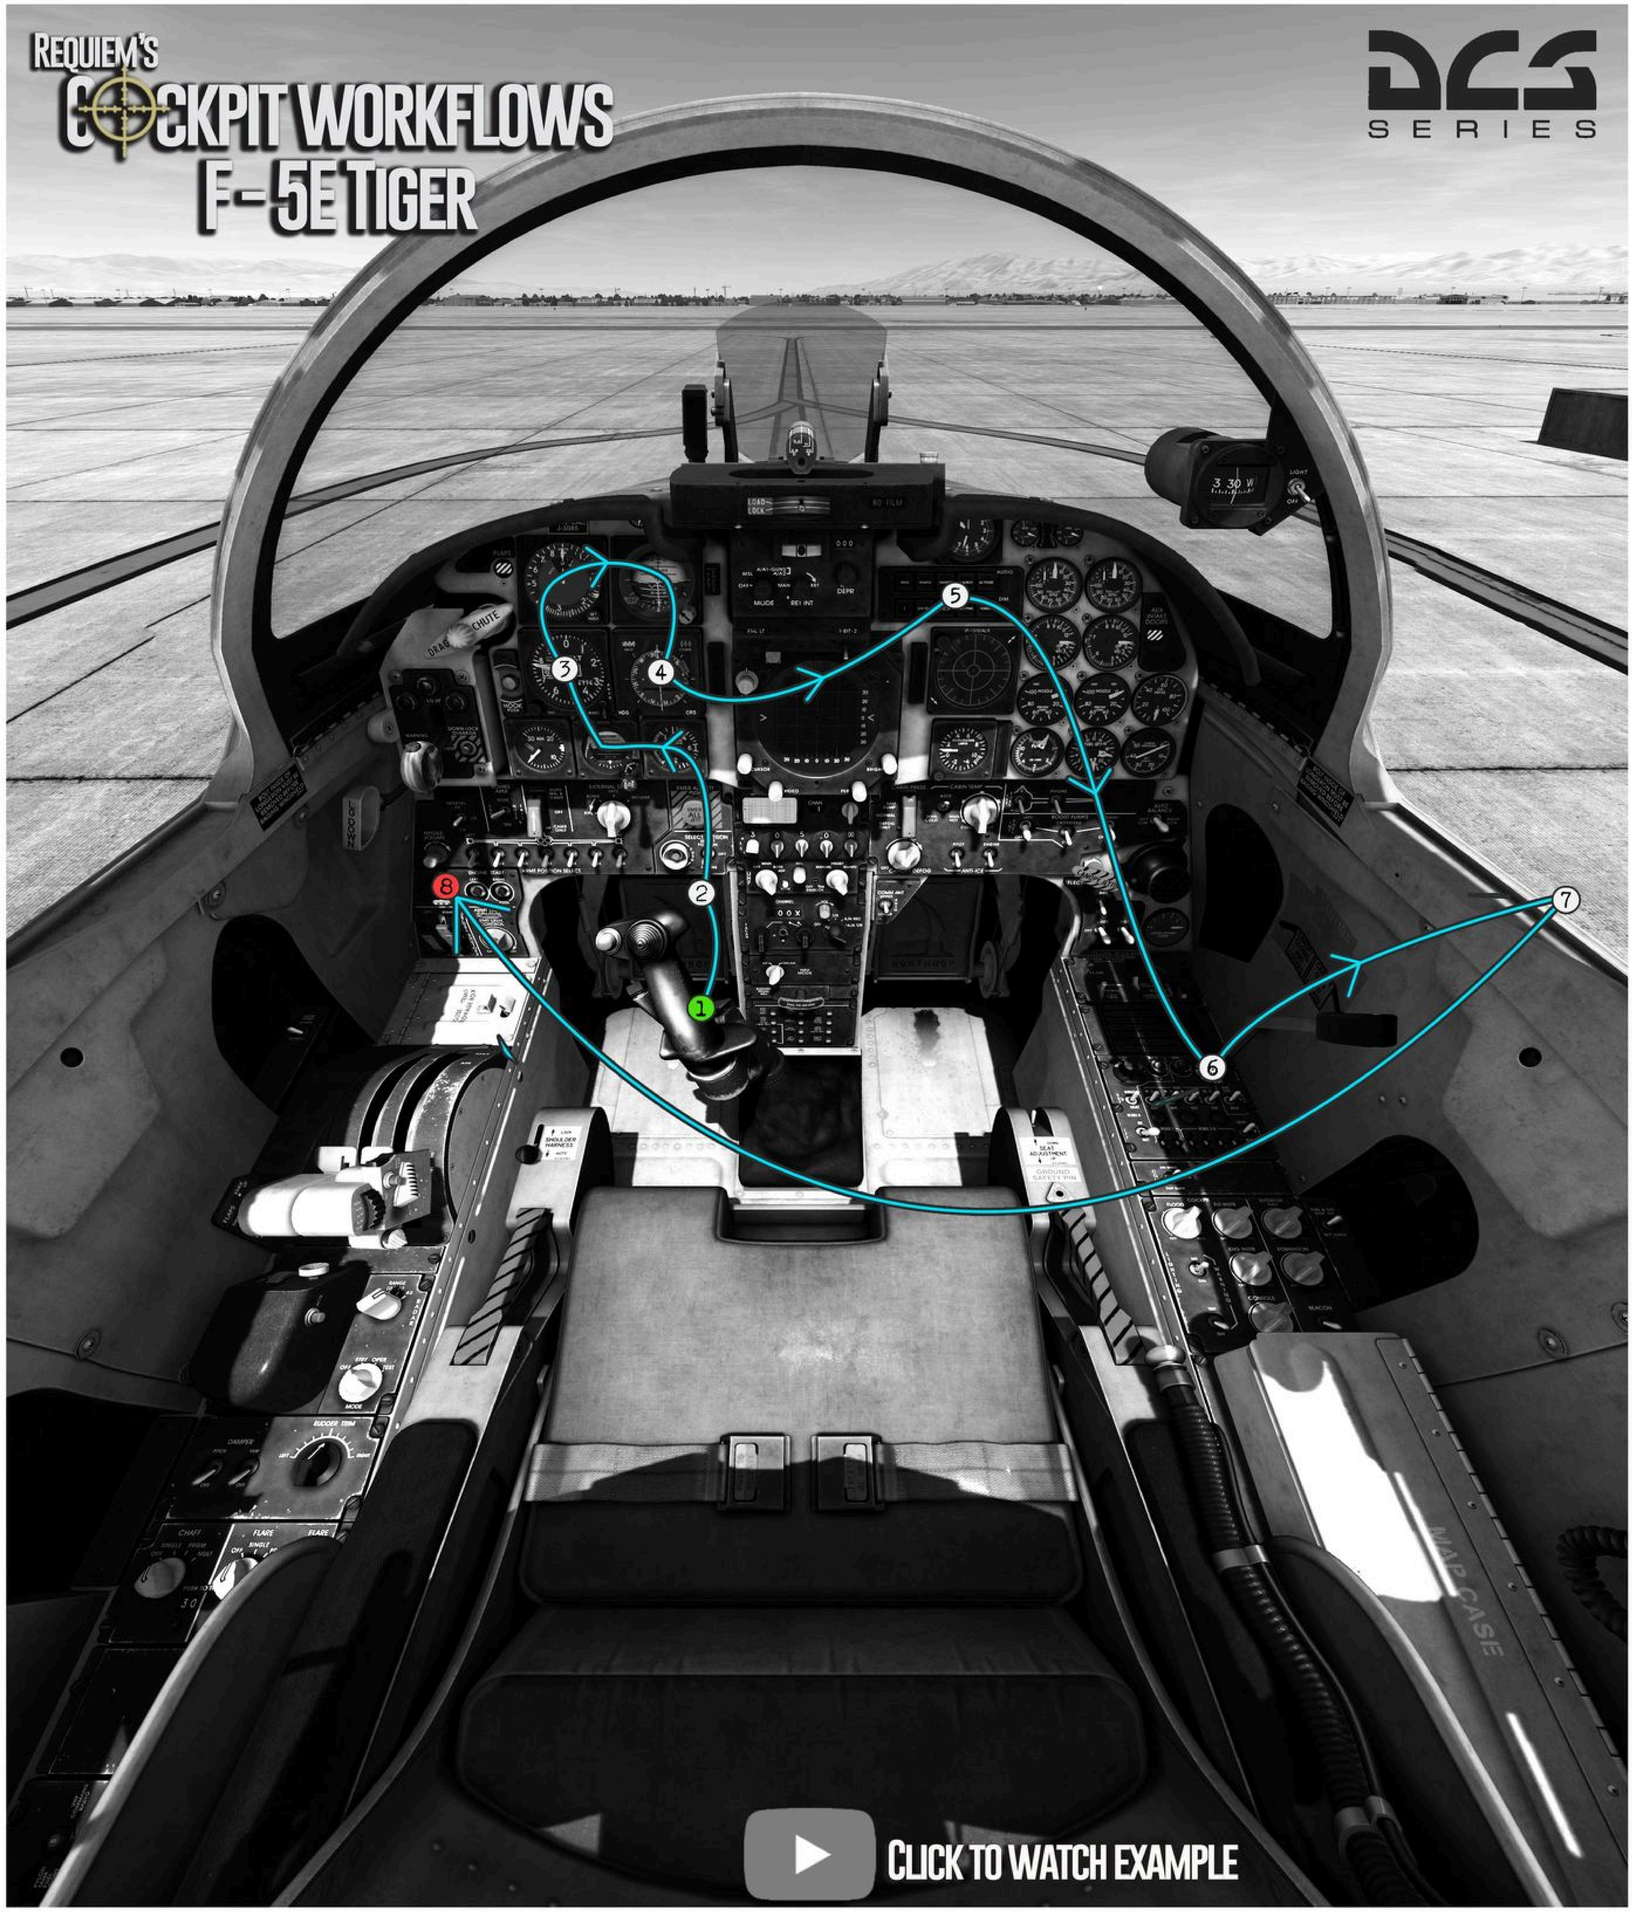

F-5E TAXI FLOW

TRIGGER: WHEEL CHOCKS REMOVED

1. Nosewheel Steering - Engage
2. Nosewheel Steering - Check
3. Flight Instruments - Check
4. HSI (CDI/Bug to Runway Heading)
5. Radar Warn. Recvr - POWER/SEARCH
6. IFF/SIF - Set squawk, NORM
7. Request Taxi from ATC
8. Taxi/Landing Light - On (nighttime)

*Check wheel brakes and nosewheel steering while taxiing to the Runway

BACK TO COCKPIT FLOWS LIST

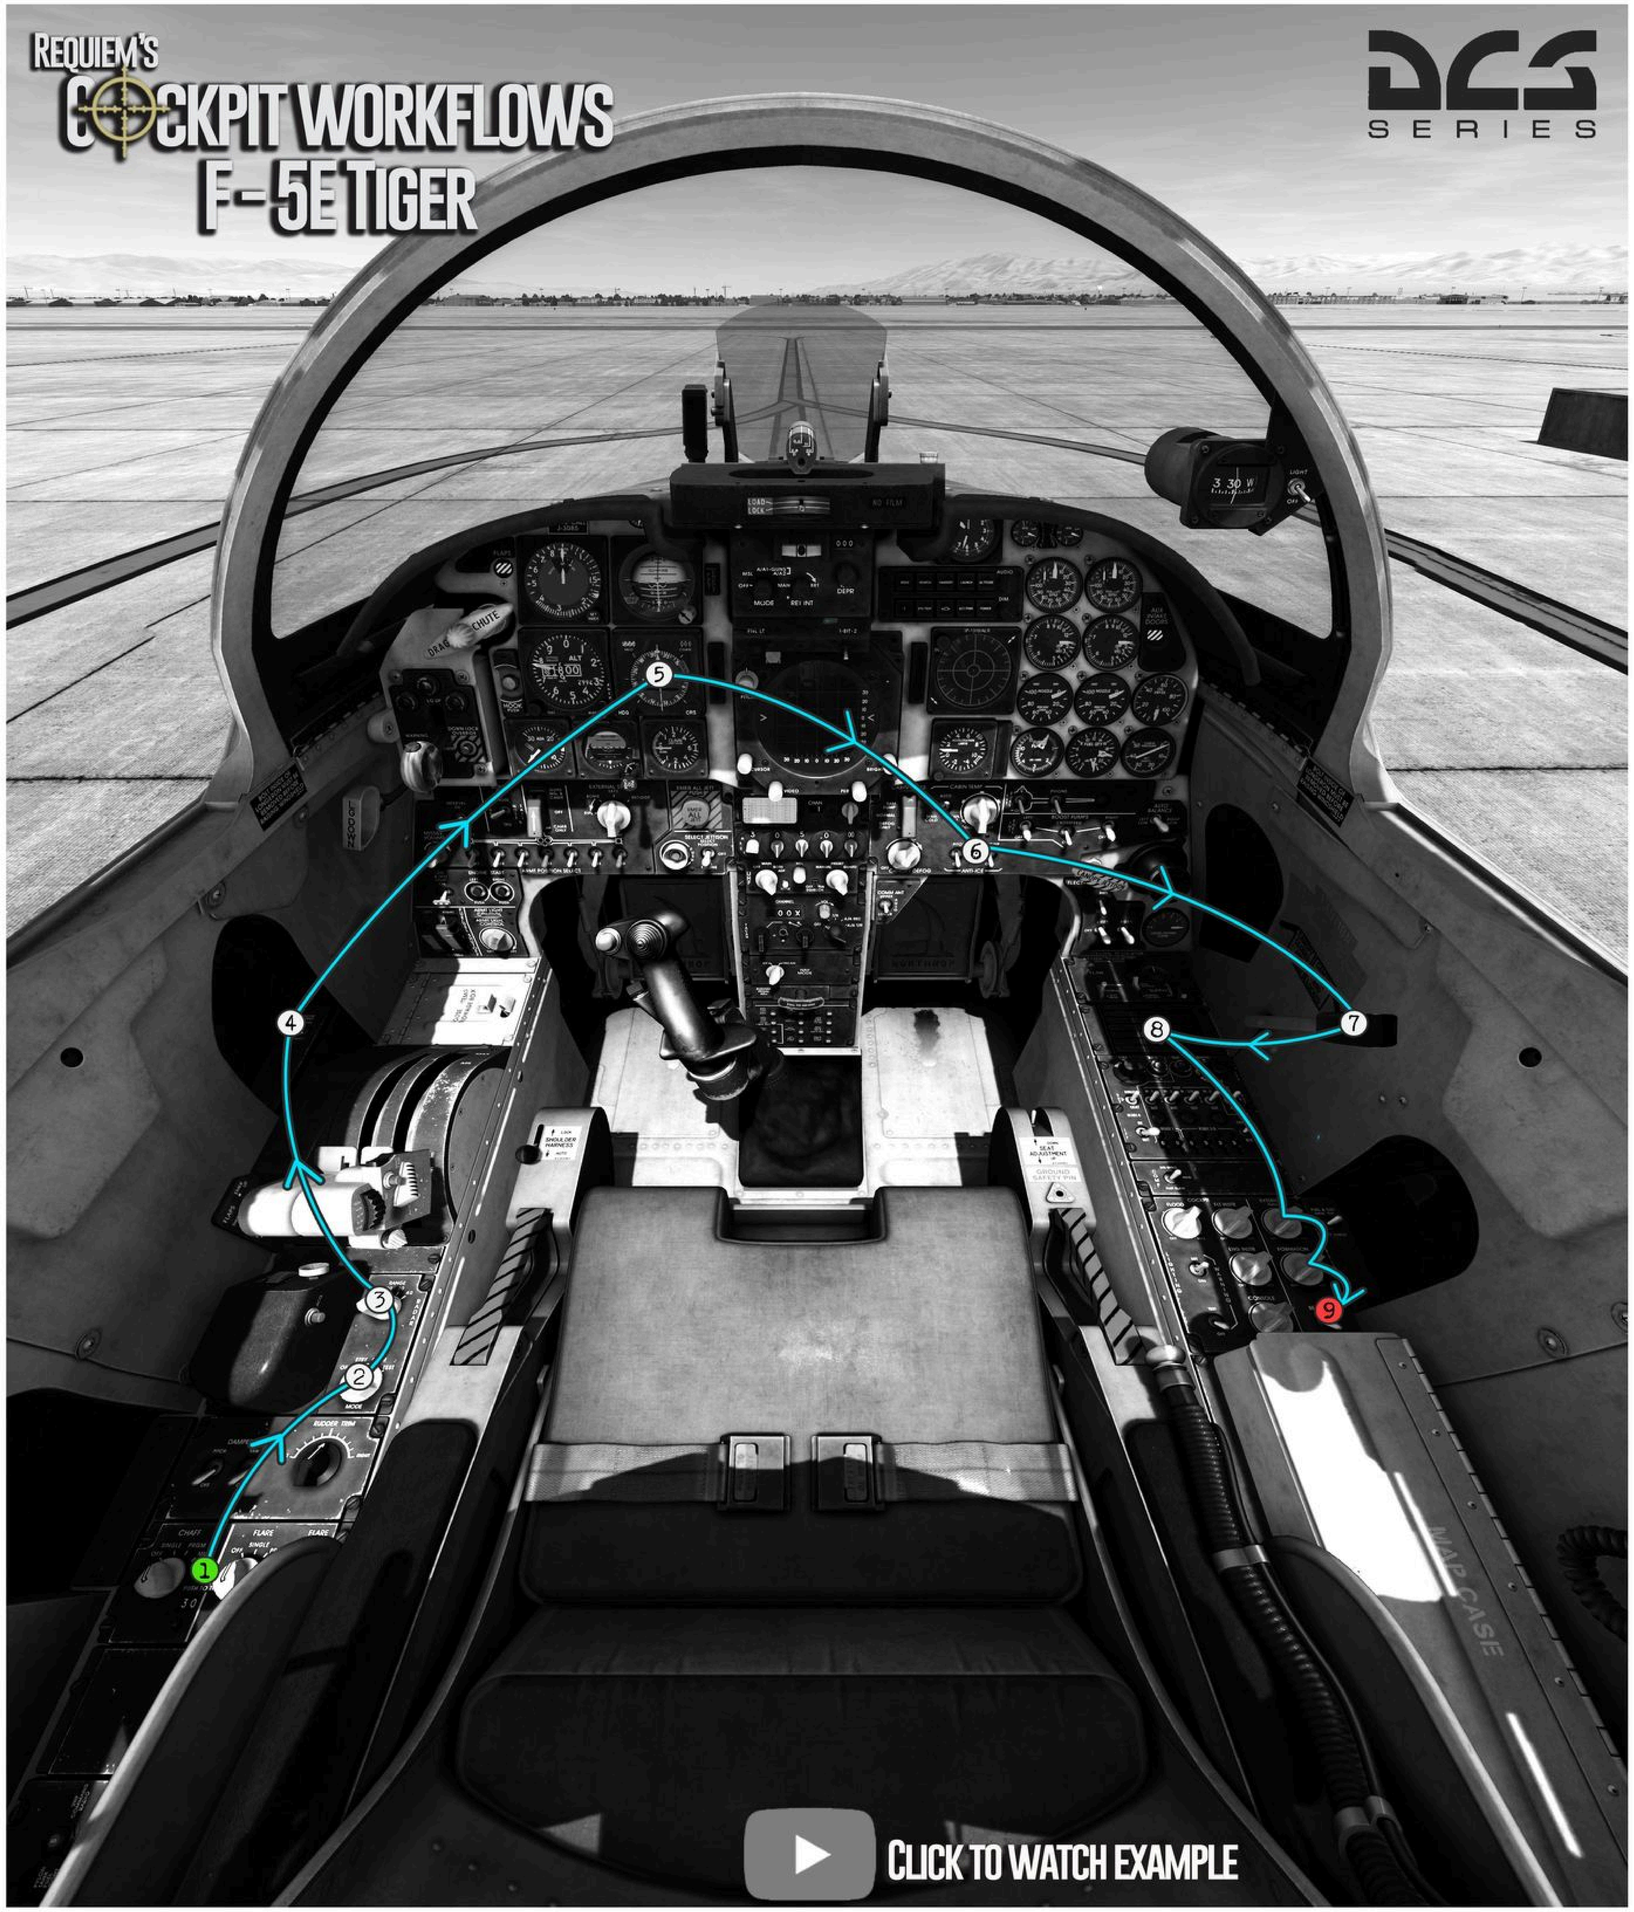

F-5E BEFORE TAKEOFF FLOW

TRIGGER: APPROACHING RUNWAY

1. Countermeasures- Set as desired
2. Radar Mode - As required
3. Radar Range - 40 nm
4. Nose strut - Extend
5. HSI - Set runway heading (CDI/Bug)
6. Anti-Ice Switches - As required
7. Canopy - Closed
8. Caution and Warning Lights - Out
9. Exterior Lights - As desired

BACK TO COCKPIT FLOWS LIST

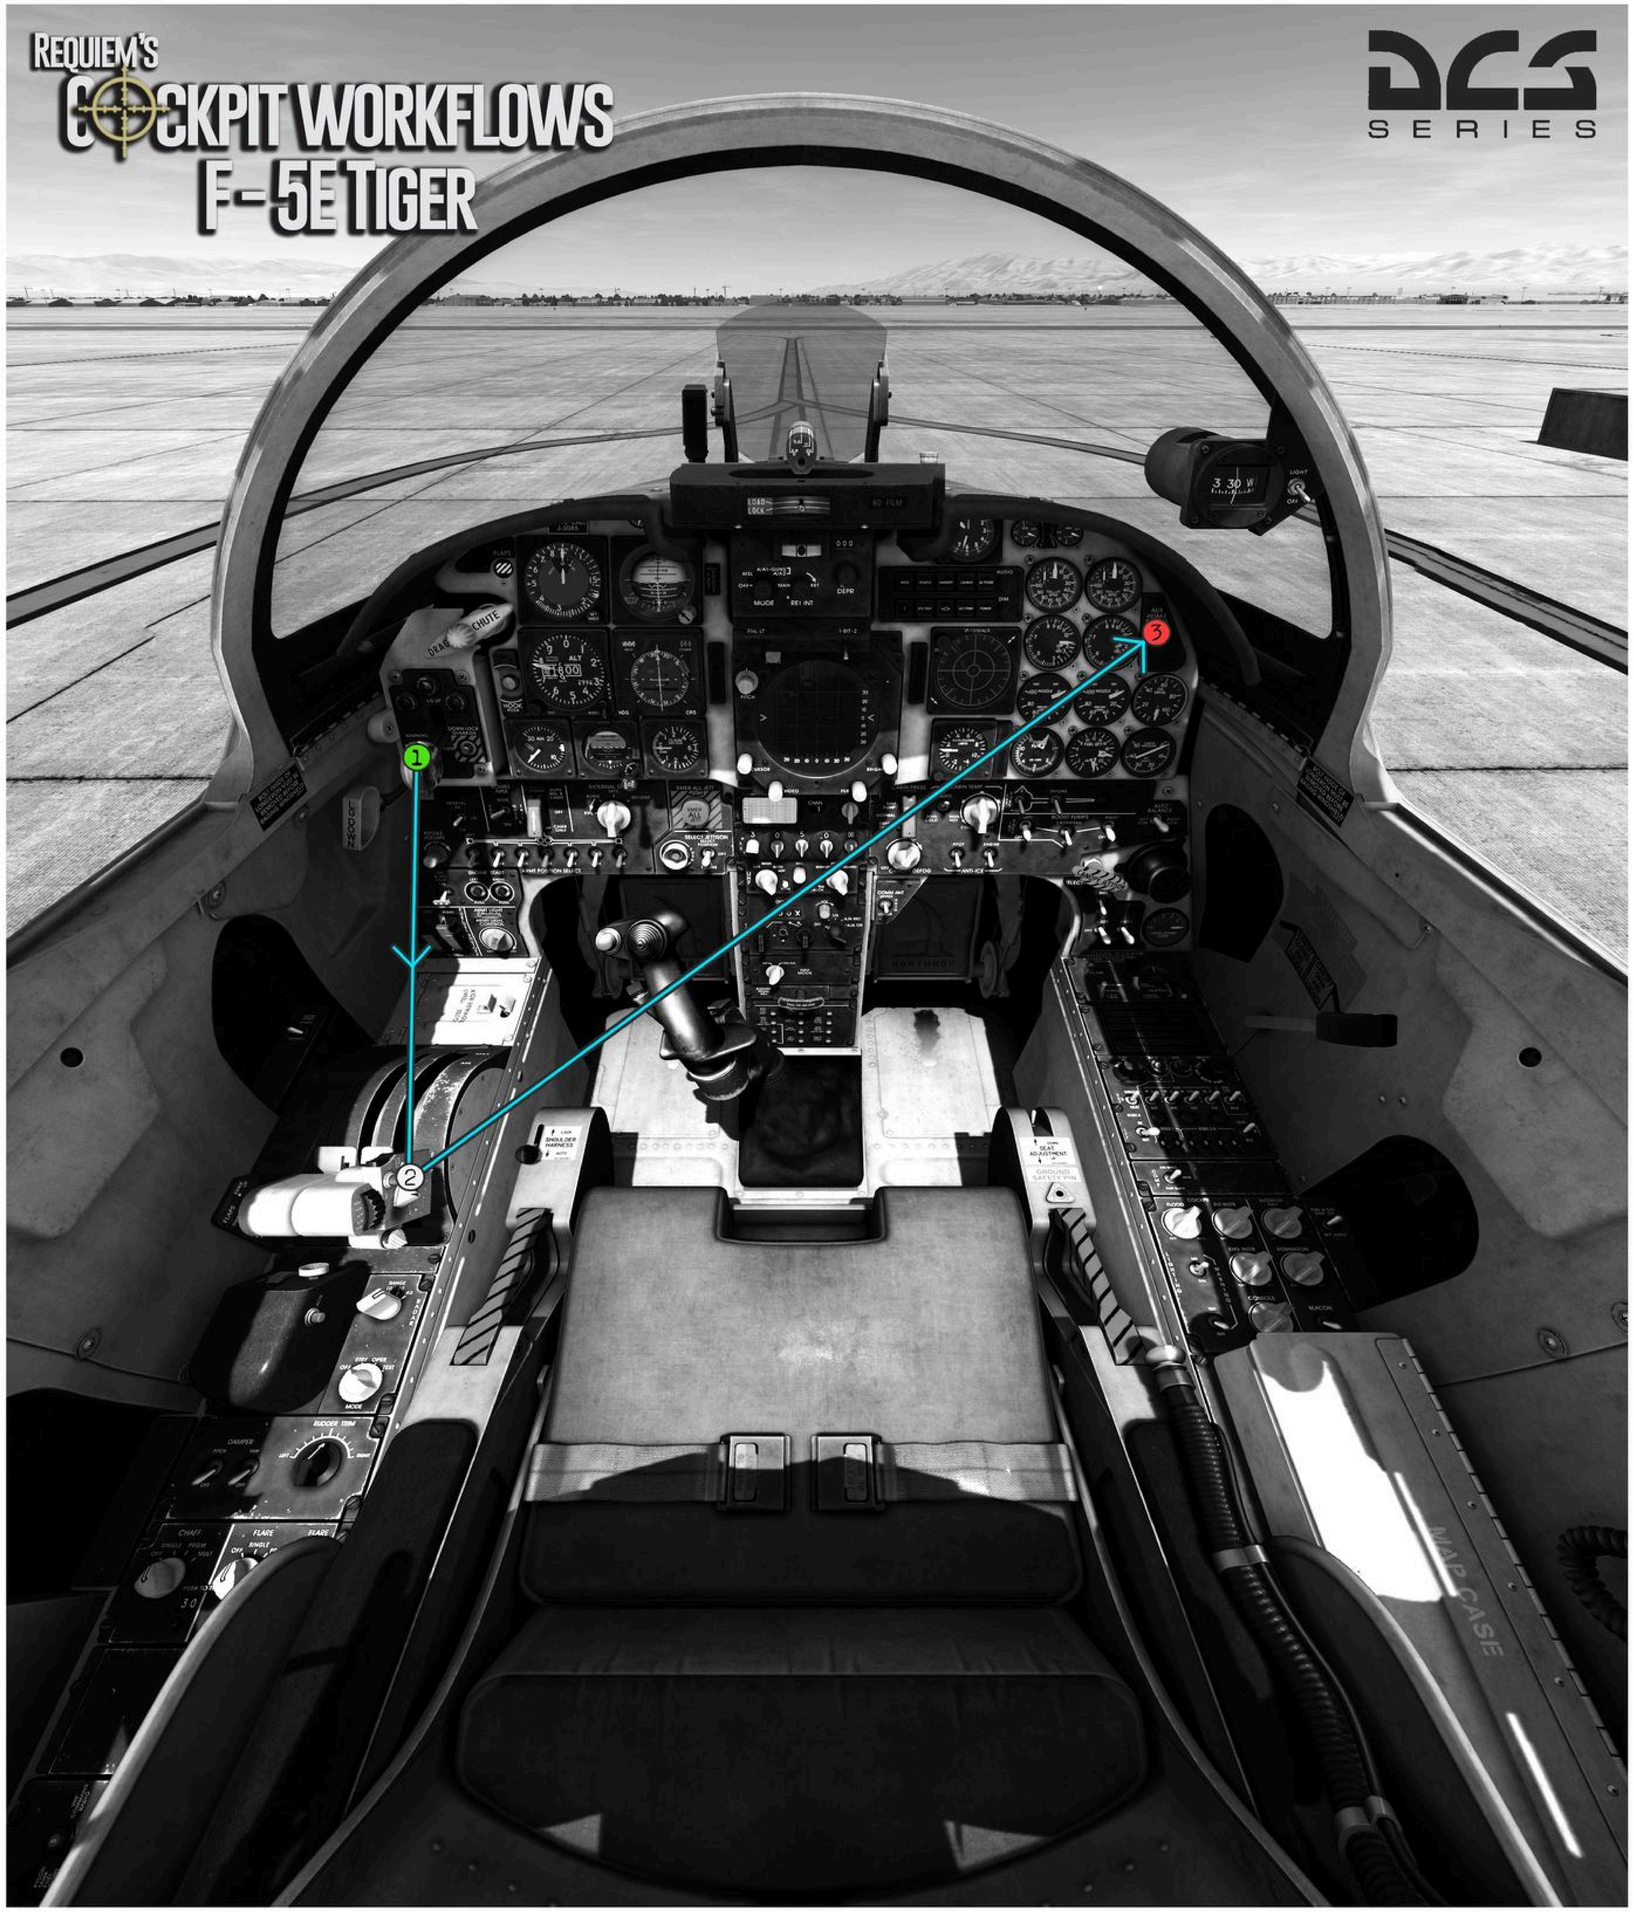

F-5E AFTER TAKEOFF FLOW

TRIGGER: POSITIVE RATE OF CLIMB

1. Landing Gear - Up
2. Flap Thumb Switch - As required
3. Above 250 kts (0.4M)
   - Check Aux Intake Doors closed

BACK TO COCKPIT FLOWS LIST

F-5E CLIMB FLOW

TRIGGER: ON INITIAL CLIMB TO ALTITUDE

1. Oxygen - NORMAL
2. External Fuel - As required
3. Fuel Autobalance - As required
4. Cockpit Pressurisation - Check
5. Altimeter - As required

   *29.92 Climbing above FL180

BACK TO COCKPIT FLOWS LIST

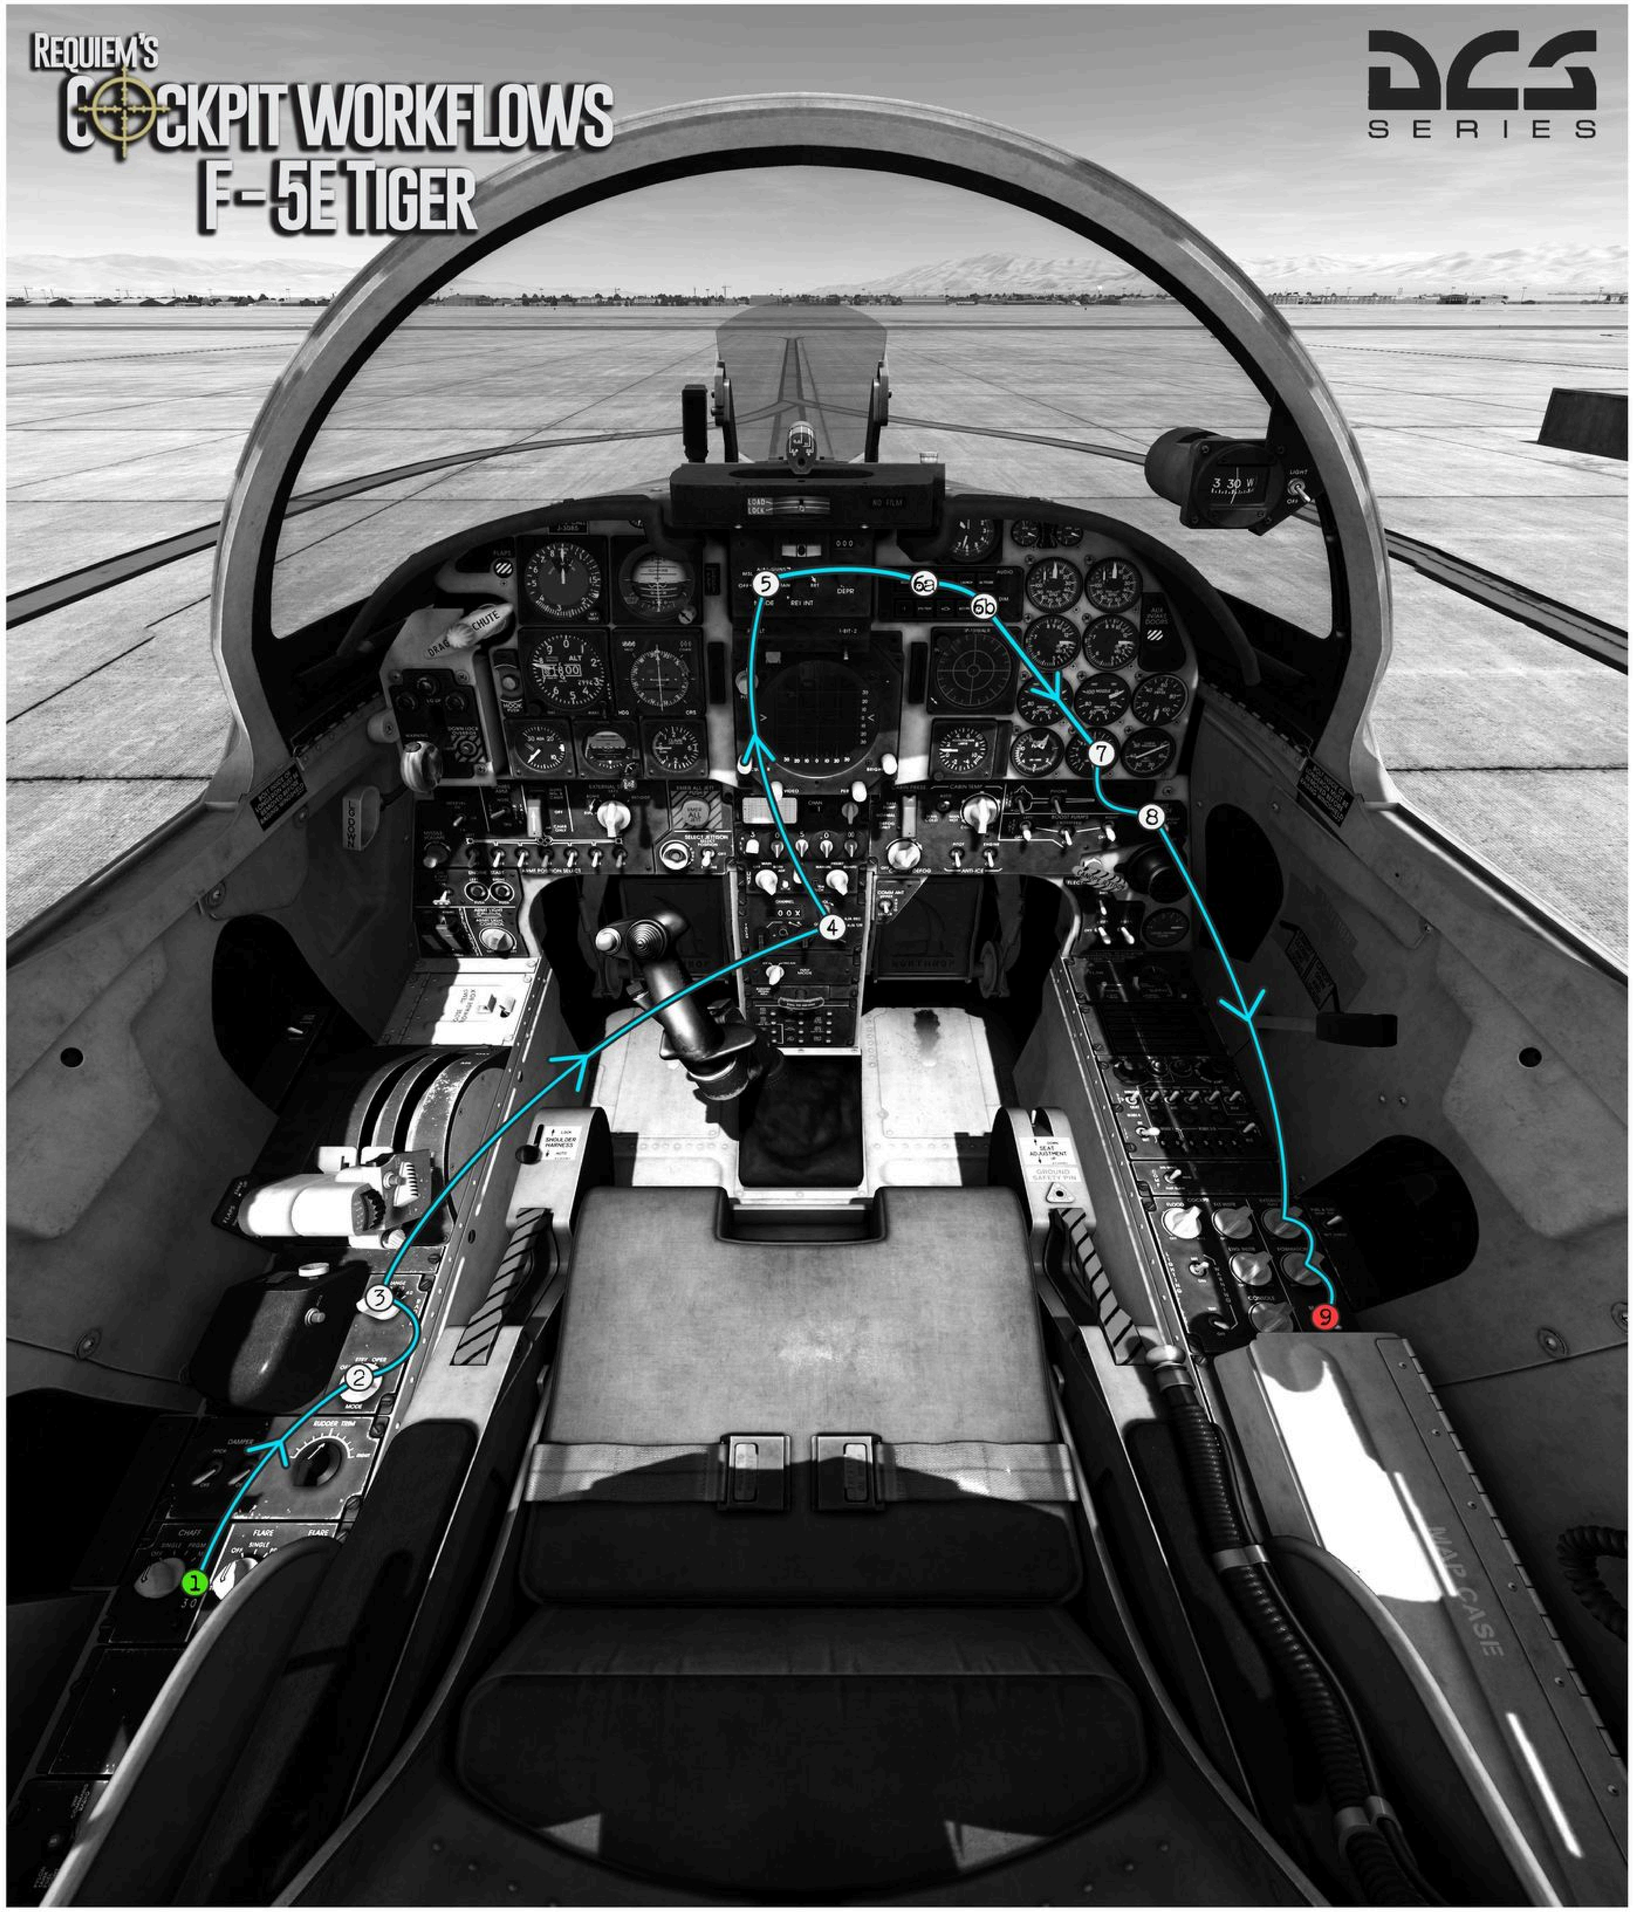

F-5E FENCE IN CHECK

TRIGGER: ENTERING CONFLICT AREA

1. Countermeasures - Set
2. Radar Mode - OPER
3. Radar Range - 40nm
4. TACAN - OFF
5. Sight Mode Selector - As desired
6. Radar Warning Reciever
   a. SEARCH
   b. POWER
7. Fuel Balance - Check
8. Fuel Autobalance - As required
9. Exterior Lights - OFF

BACK TO COCKPIT FLOWS LIST

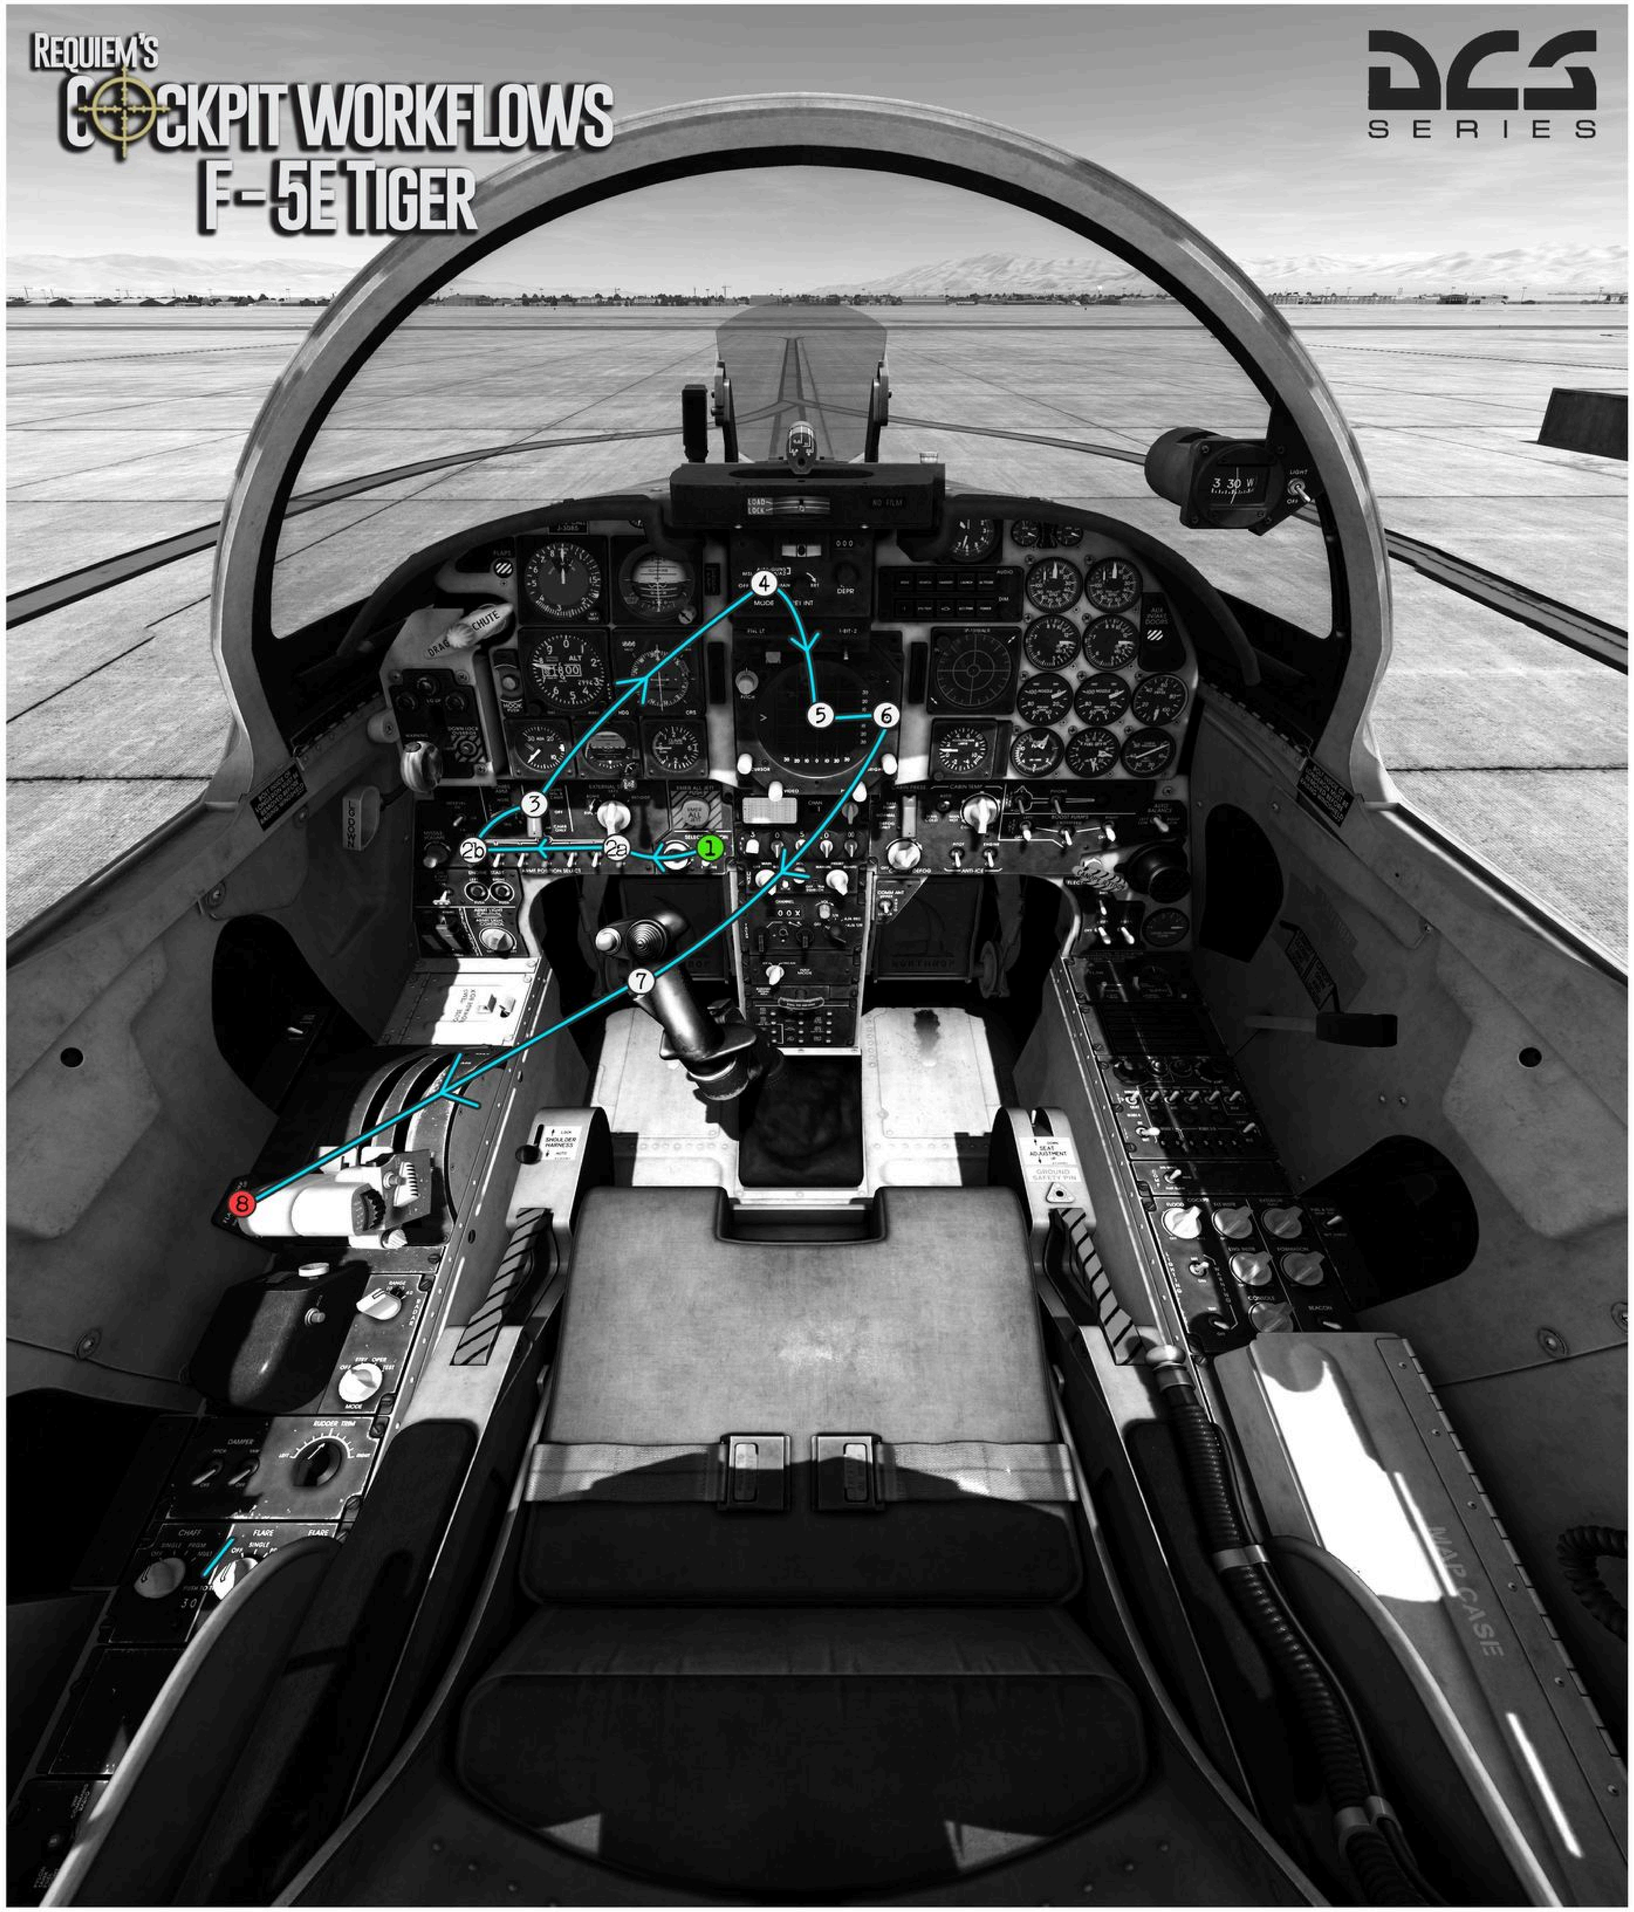

F-5E AIM-9 SEARCH/LOCK FLOW

TRIGGER: ATTACKING ENEMY AIRPLANES

1. SELECT JETTISON - Check OFF
2. AIM-9 Armament Positions - Select
   a. Left Wingtip
   b. Right Wingtip
3. GUNS/MSL & CAMERA Switch
   - Unguarded, set to top position
4. Sight Mode Selector - MSL
5. TDC - Place symbol on target
6. ACQ button - Press momentarily
   - Check LK Light ON
7. DM Mode - Set if required
8. Uncage Missile - As desired

BACK TO COCKPIT FLOWS LIST

F-5E AIM-9 LAUNCH FLOW

TRIGGER: BANDIT LOCKED

1. SELECT JETTISON - Check OFF
2. In-Range Light - ON

LISTEN FOR MISSILE TONE CONTRAST

3. Excess-G Light - OUT
4. Missile Uncage Switch - As desired
5. Bomb-Rocket Button - Press

HOLD BOMB-ROCKET BUTTON UNTIL THE MISSILE DEPARTS THE LAUNCHER RAIL

BACK TO COCKPIT FLOWS LIST

F-5E AIR-AIR GUNS FLOW

TRIGGER: AS DESIRED AGAINST BANDIT

1. Sight Mode Selector - A/A1 or A/A2
2. ACQ button - Press momentarily
3. DG Mode - Set if required
4. GUNS/MSL & CAMERA Switch
   - Unguarded, set to top position

PULL TRIGGER TO SECOND DETENT TO FIRE

BACK TO COCKPIT FLOWS LIST

F-5E BOMBS ATTACK FLOW

TRIGGER: WHEN TARGET IS FOUND

1. Sight Mode Selector - MAN
2. Reticule Depression - As required
   (depends on planned weapon)
3. External Stores - BOMB
4. BOMBS ARM switch - As required
5. Armament Position Select
   - Desired Weapon Station(s)
6. Jettison Select Switch - Check OFF

BEGIN ATTACK

7. Bomb-Rocket Button - Press

BACK TO COCKPIT FLOWS LIST

F-5E ROCKET ATTACK FLOW

TRIGGER: WHEN TARGET IS FOUND

1. Sight Mode Selector - MAN
2. Reticule Depression - As required
   (depends on planned weapon)
3. External Stores - RKT/DISP
4. Armament Position Select
   - Desired Weapon Station(s)
5. Jettison Select Switch - Check OFF

BEGIN ATTACK

6. Bomb-Rocket Button - Press

BACK TO COCKPIT FLOWS LIST

F-5E AIR-GROUND GUNS FLOW

TRIGGER: AS DESIRED AGAINST TARGET

1. Sight Mode Selector - MAN
2. Reticule Depression - As required
3. GUNS/MSL & CAMERA Switch
   - Unguarded, set to top position

PULL TRIGGER TO SECOND DETENT TO FIRE

BACK TO COCKPIT FLOWS LIST

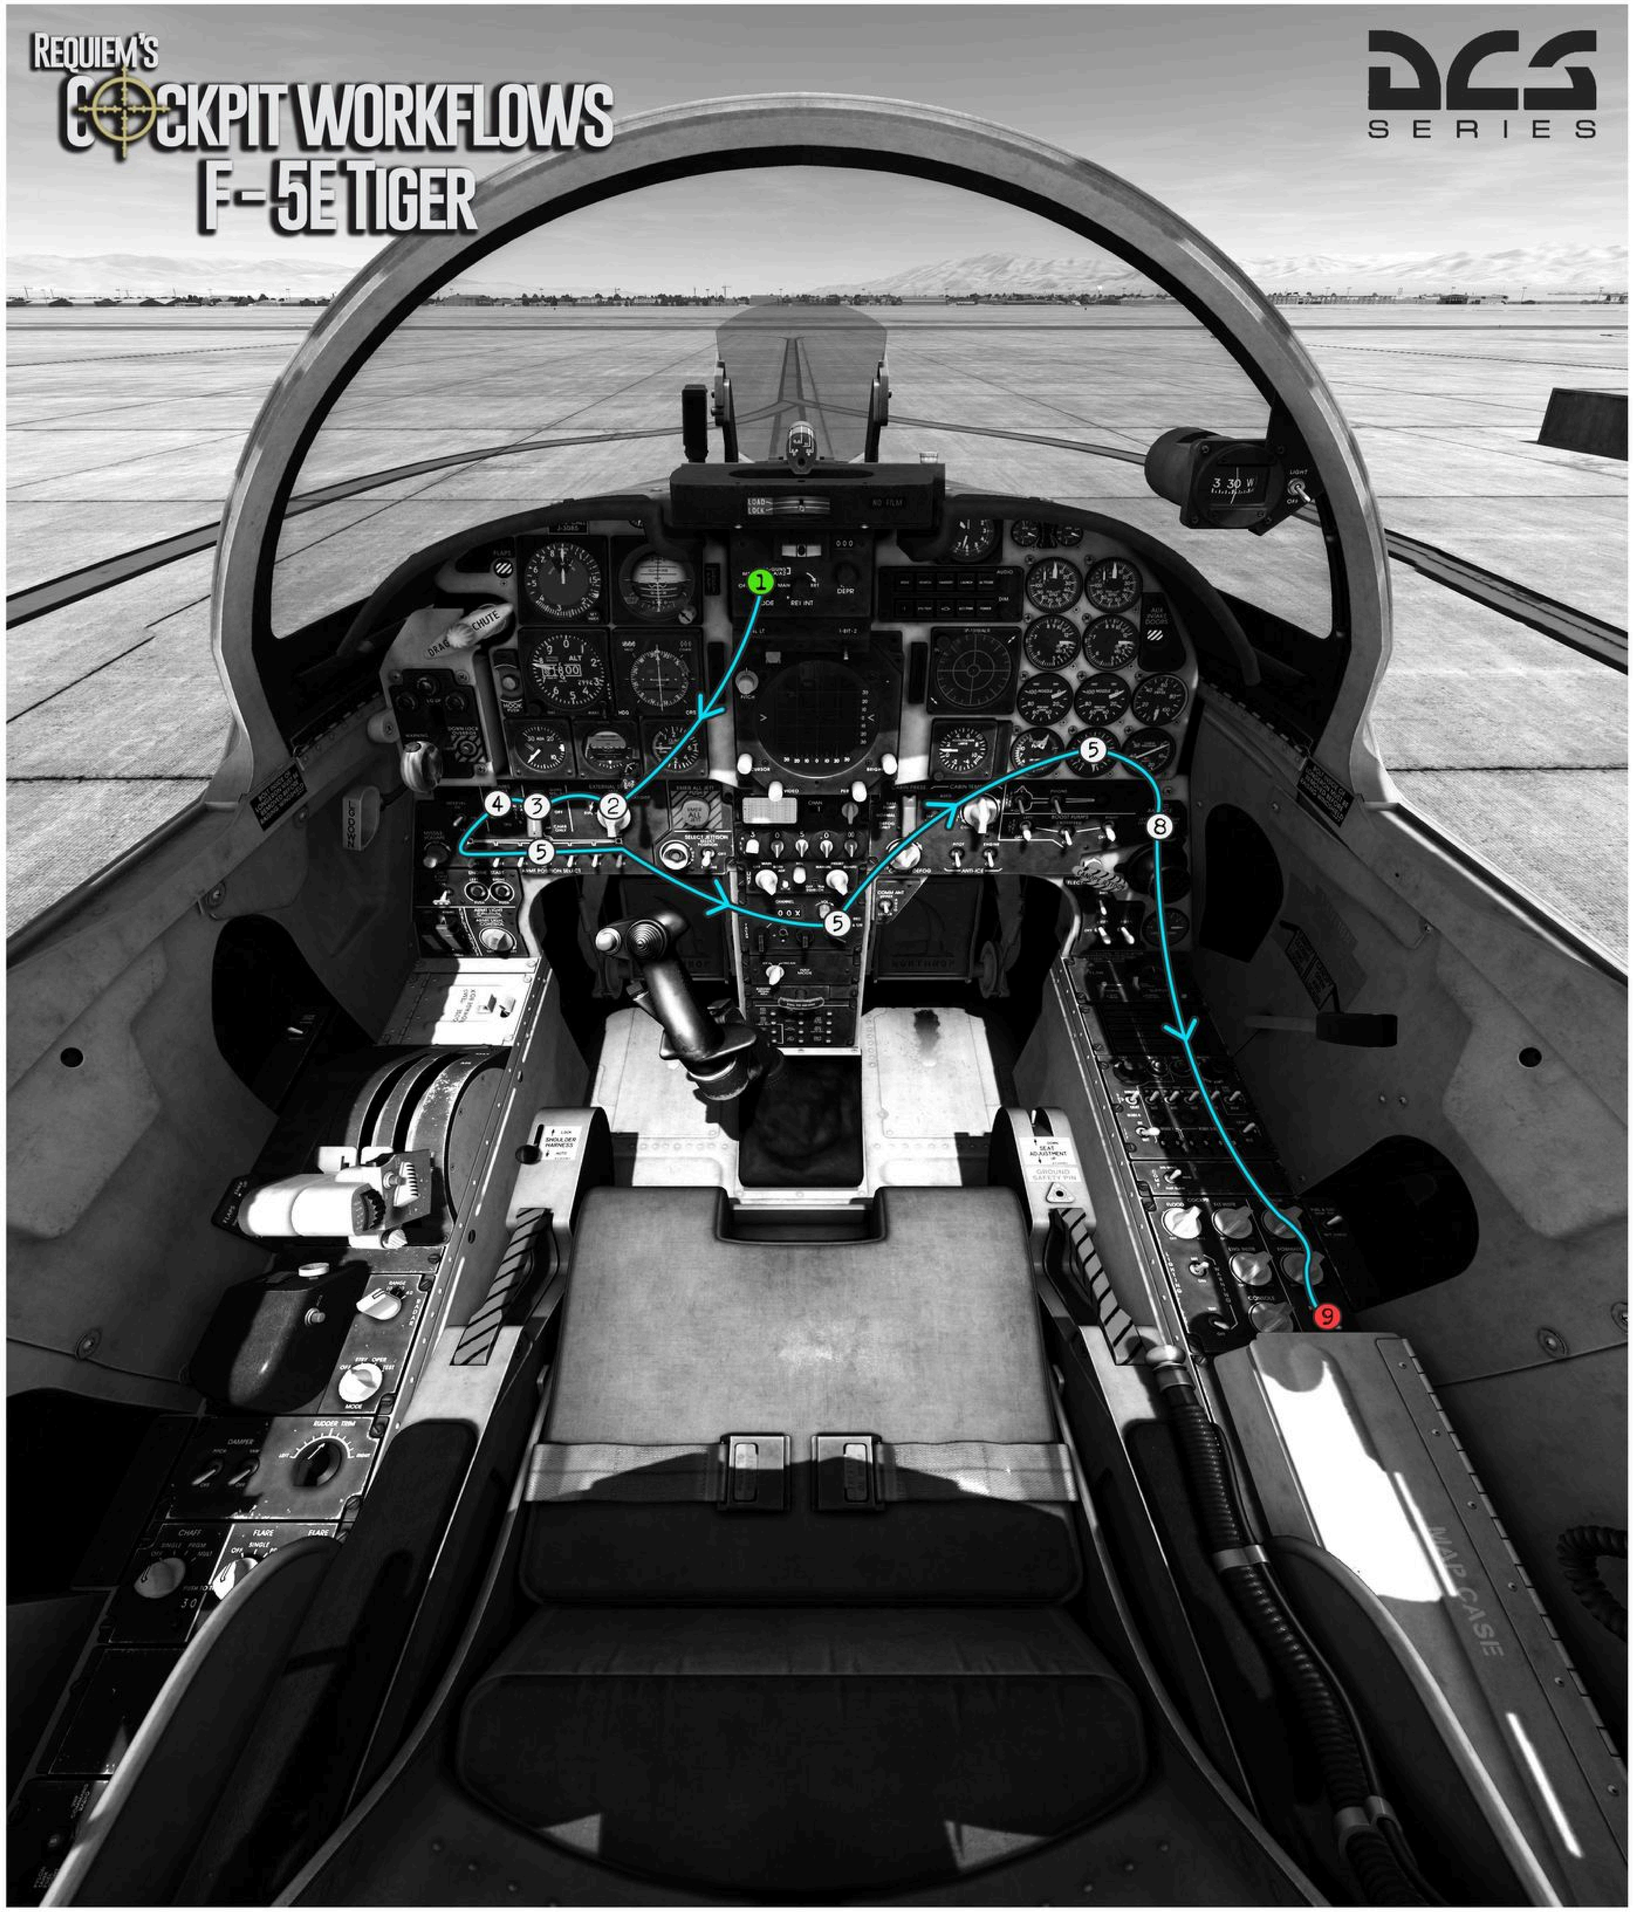

F-5E FENCE OUT CHECK

TRIGGER: EXITING CONFLICT AREA

1. Sight Mode Selector - OFF
2. External Stores - SAFE
3. Guns & Camera Switch - OFF
4. Bombs Arm Switch - SAFE
5. Armament Position Select - OFF
6. TACAN - ON
7. Fuel Balance - Check
8. Fuel Autobalance - As required
9. Exterior Lights - ON

BACK TO COCKPIT FLOWS LIST

F-5E DESCENT FLOW

TRIGGER: DESCENDING TOWARDS AIRFIELD

1. Armament Safety Check - Complete
2. Anti-Ice Switches - As required
3. Canopy Defog - As required
4. Oxygen - Check
    a. Flow and Supply
    b. Quantity
5. Altimeter - Check and Set
    *when passing FL180

BACK TO COCKPIT FLOWS LIST

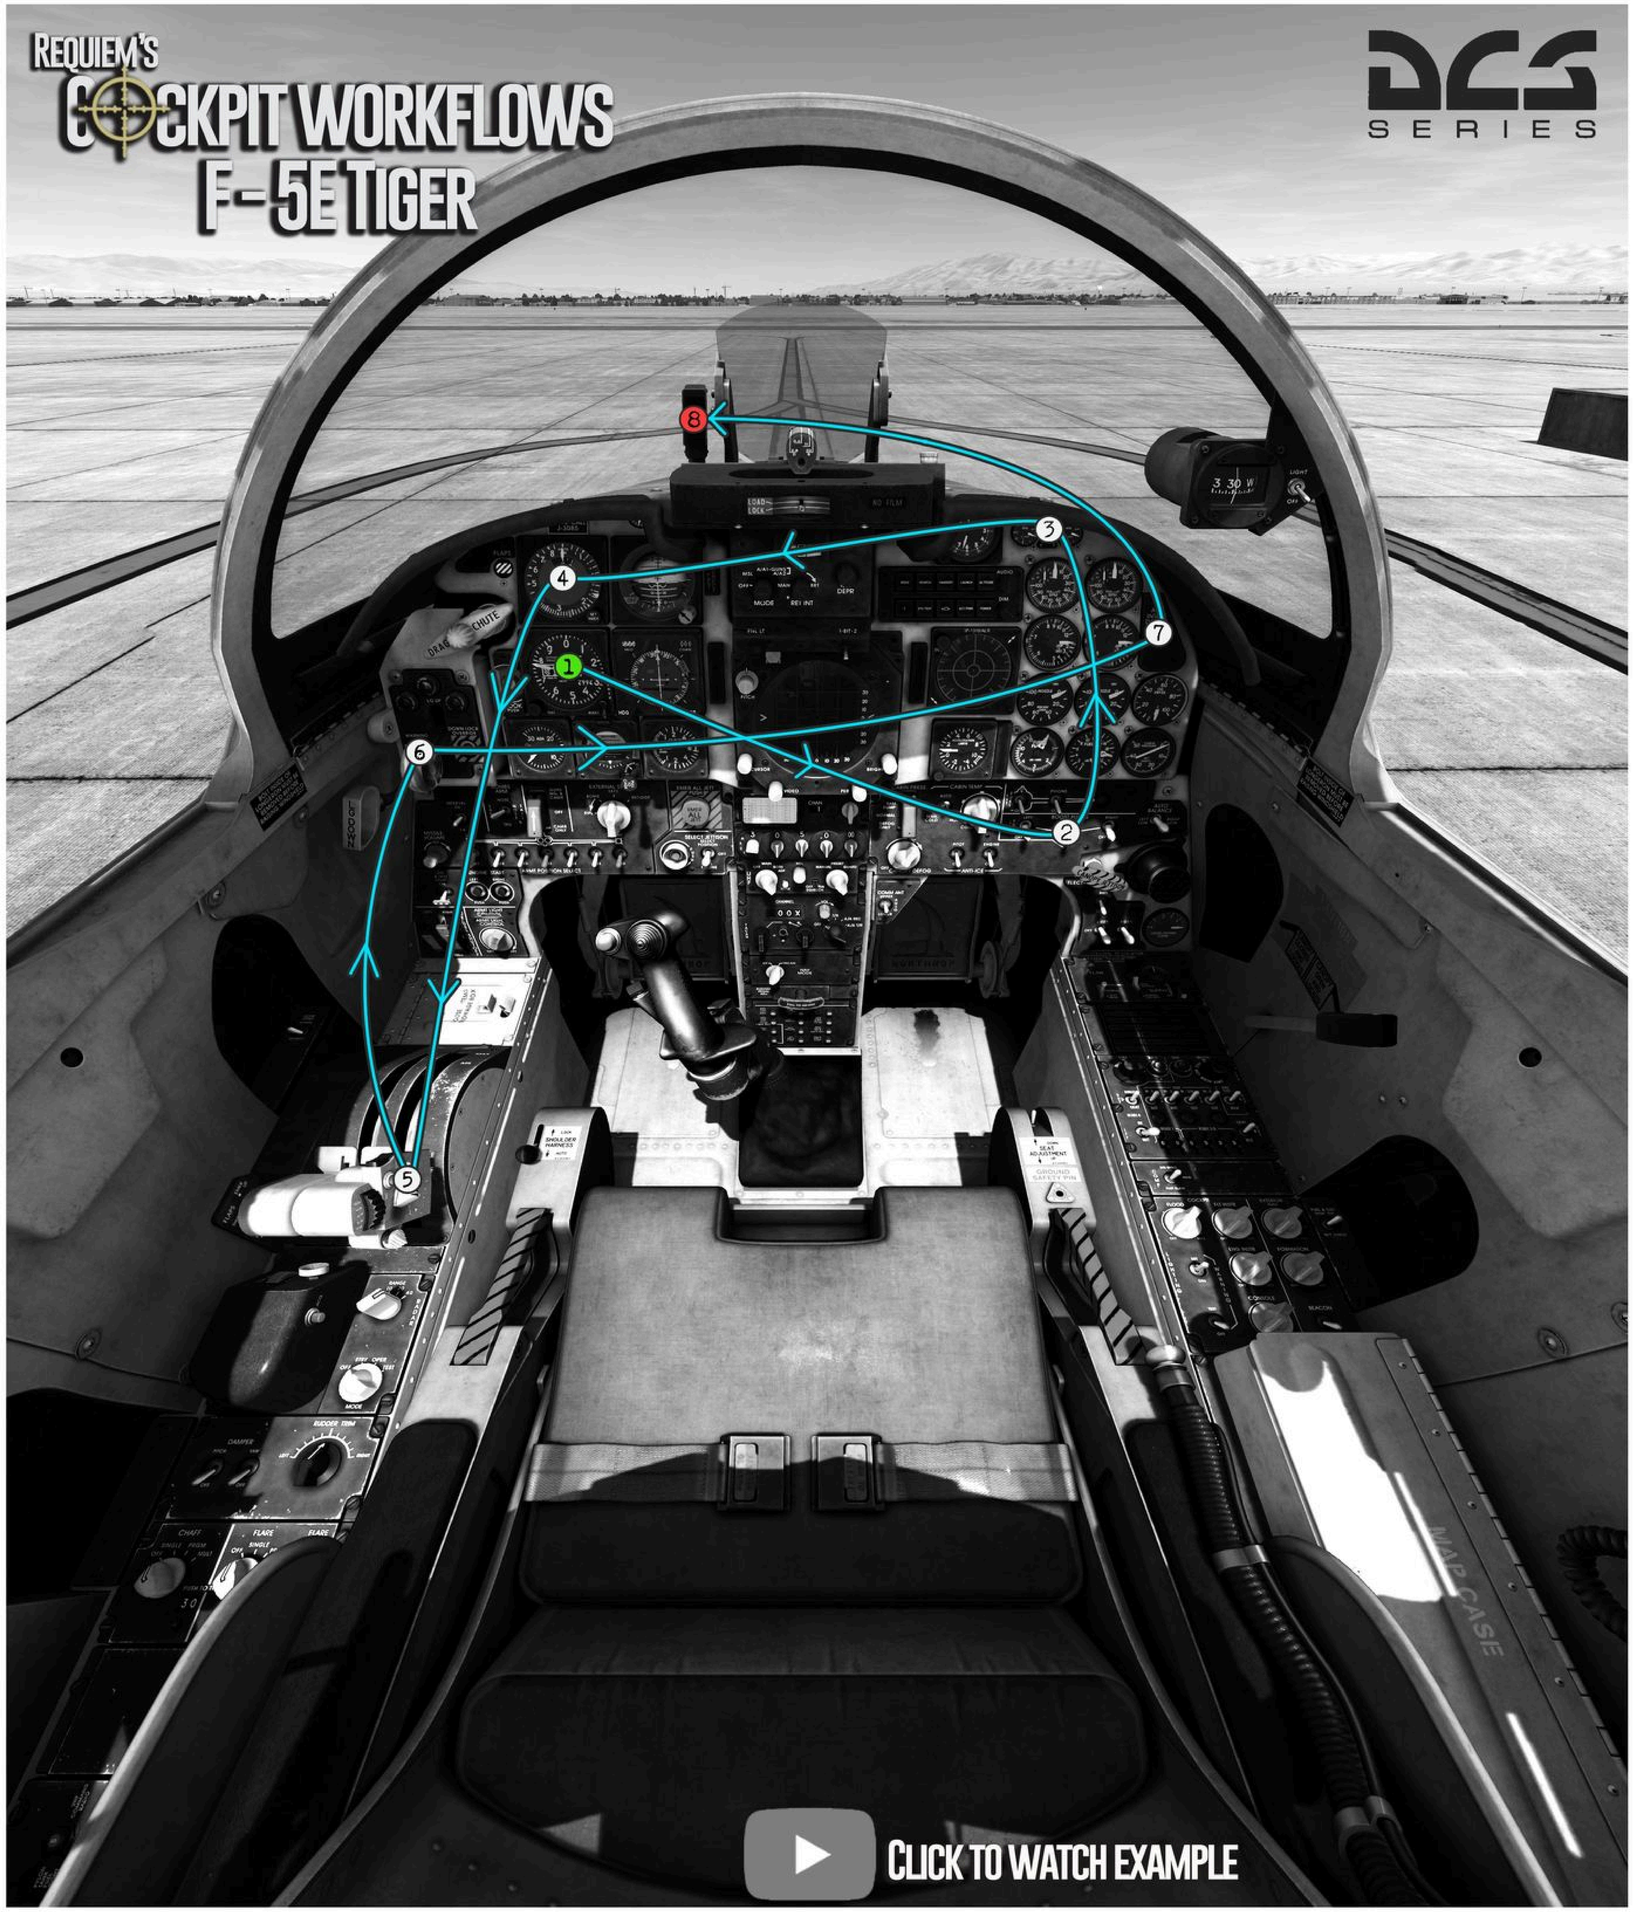

F-5E BEFORE LANDING FLOW

TRIGGER: 5NM AWAY FROM RUNWAY

1. Altimeter - Check and Set
2. Crossfeed - Discontinue
3. Hydraulics - Check Pressures
4. Airspeed - 300 KIAS
   Height - 1500 FT AGL

-LEVEL BREAK OVER RUNWAY NUMBERS-

5. Flap Thumb Switch - Auto
6. Landing Gear - Down
   *260 KIAS maximium
7. Aux Intake Door - Check Open
8. AOA Indexer - On Speed

Fly a curved base to final turn:
- Airspeed 165 KIAS minimum

When established on final:
- Check Flaps are full
- Airspeed 145 KIAS minimum

Touchdown:
- Airspeed 135 KIAS minimum

BACK TO COCKPIT FLOWS LIST

F-5E GO AROUND FLOW

TRIGGERS: UNSTABLE APPROACH

RUNWAY UNSAFE

1. Throttles - MIL/MAX Power
2. Speed Brake - IN

    *Positive Rate of Climb
3. Landing Gear - UP
4. Flaps - As Required

BACK TO COCKPIT FLOWS LIST

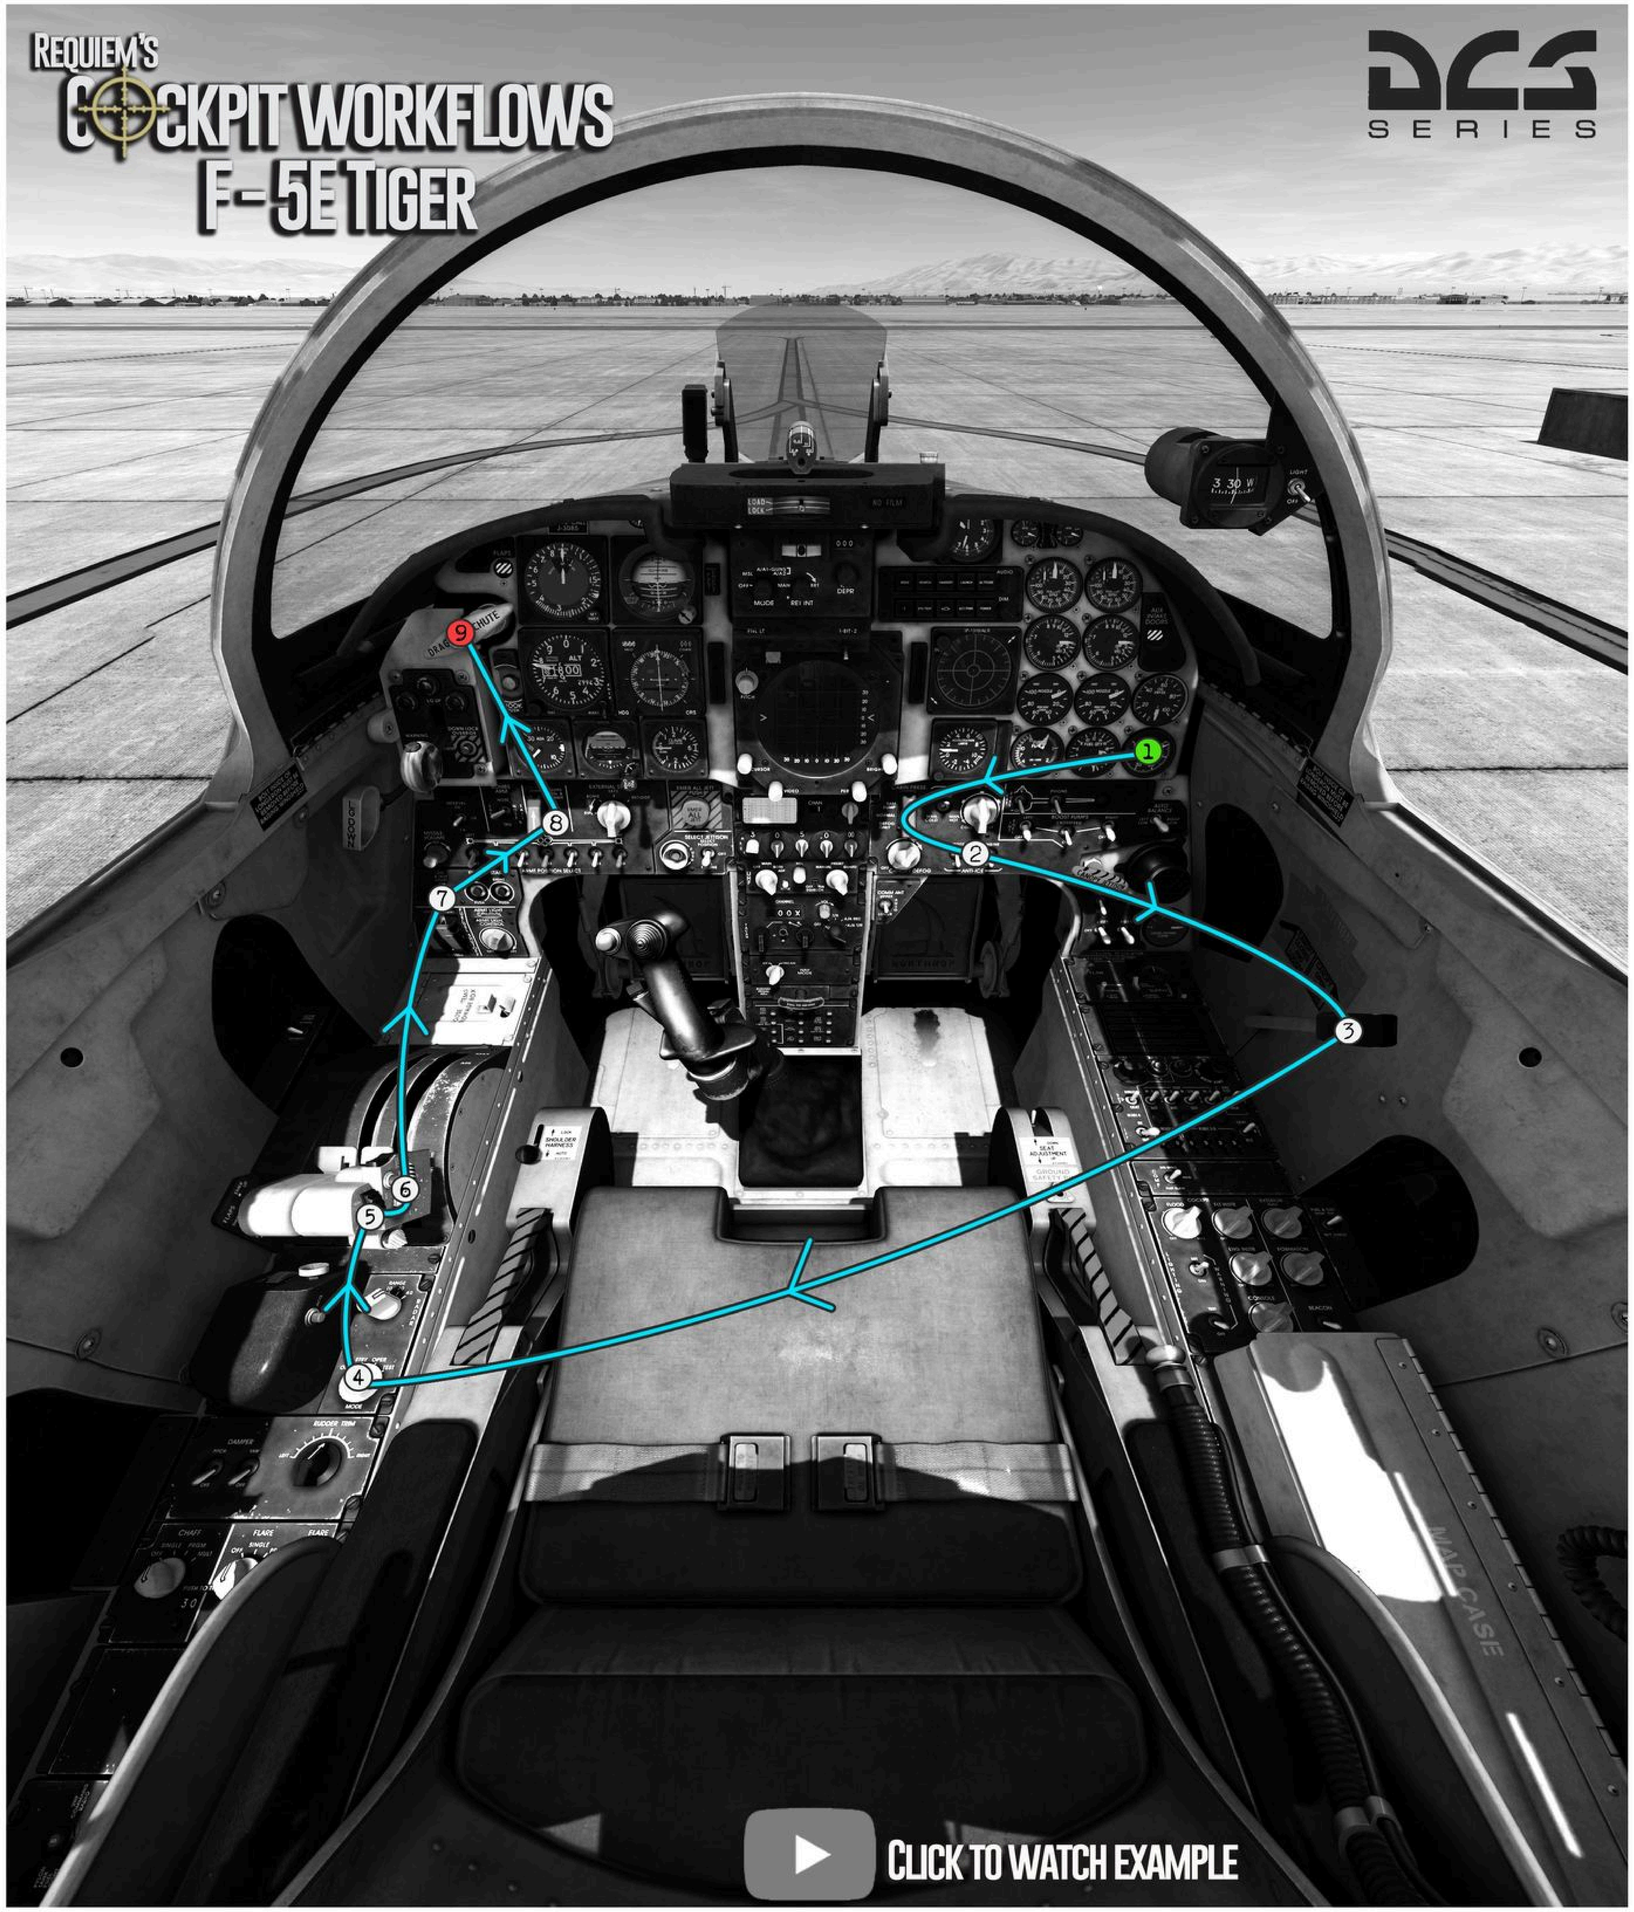

F-5E AFTER LANDING FLOW

TRIGGER: WHEN CLEAR OF THE RUWWAY

1. Cabin Pressure - Check

   *Use RAM DUMP if below field elev.
2. Anti-Ice Switches - As required
3. Canopy - Open (if desired)
4. Radar Mode - Off
5. Speed Brake - Out
6. Flap Thumb Switch - Up
7. Taxi/Landing Light - Off (daytime)
8. Armaments - All SAFE and OFF
9. Drag Chute - Taxi to appropriate spot near ramp to jettison the chute

BACK TO COCKPIT FLOWS LIST

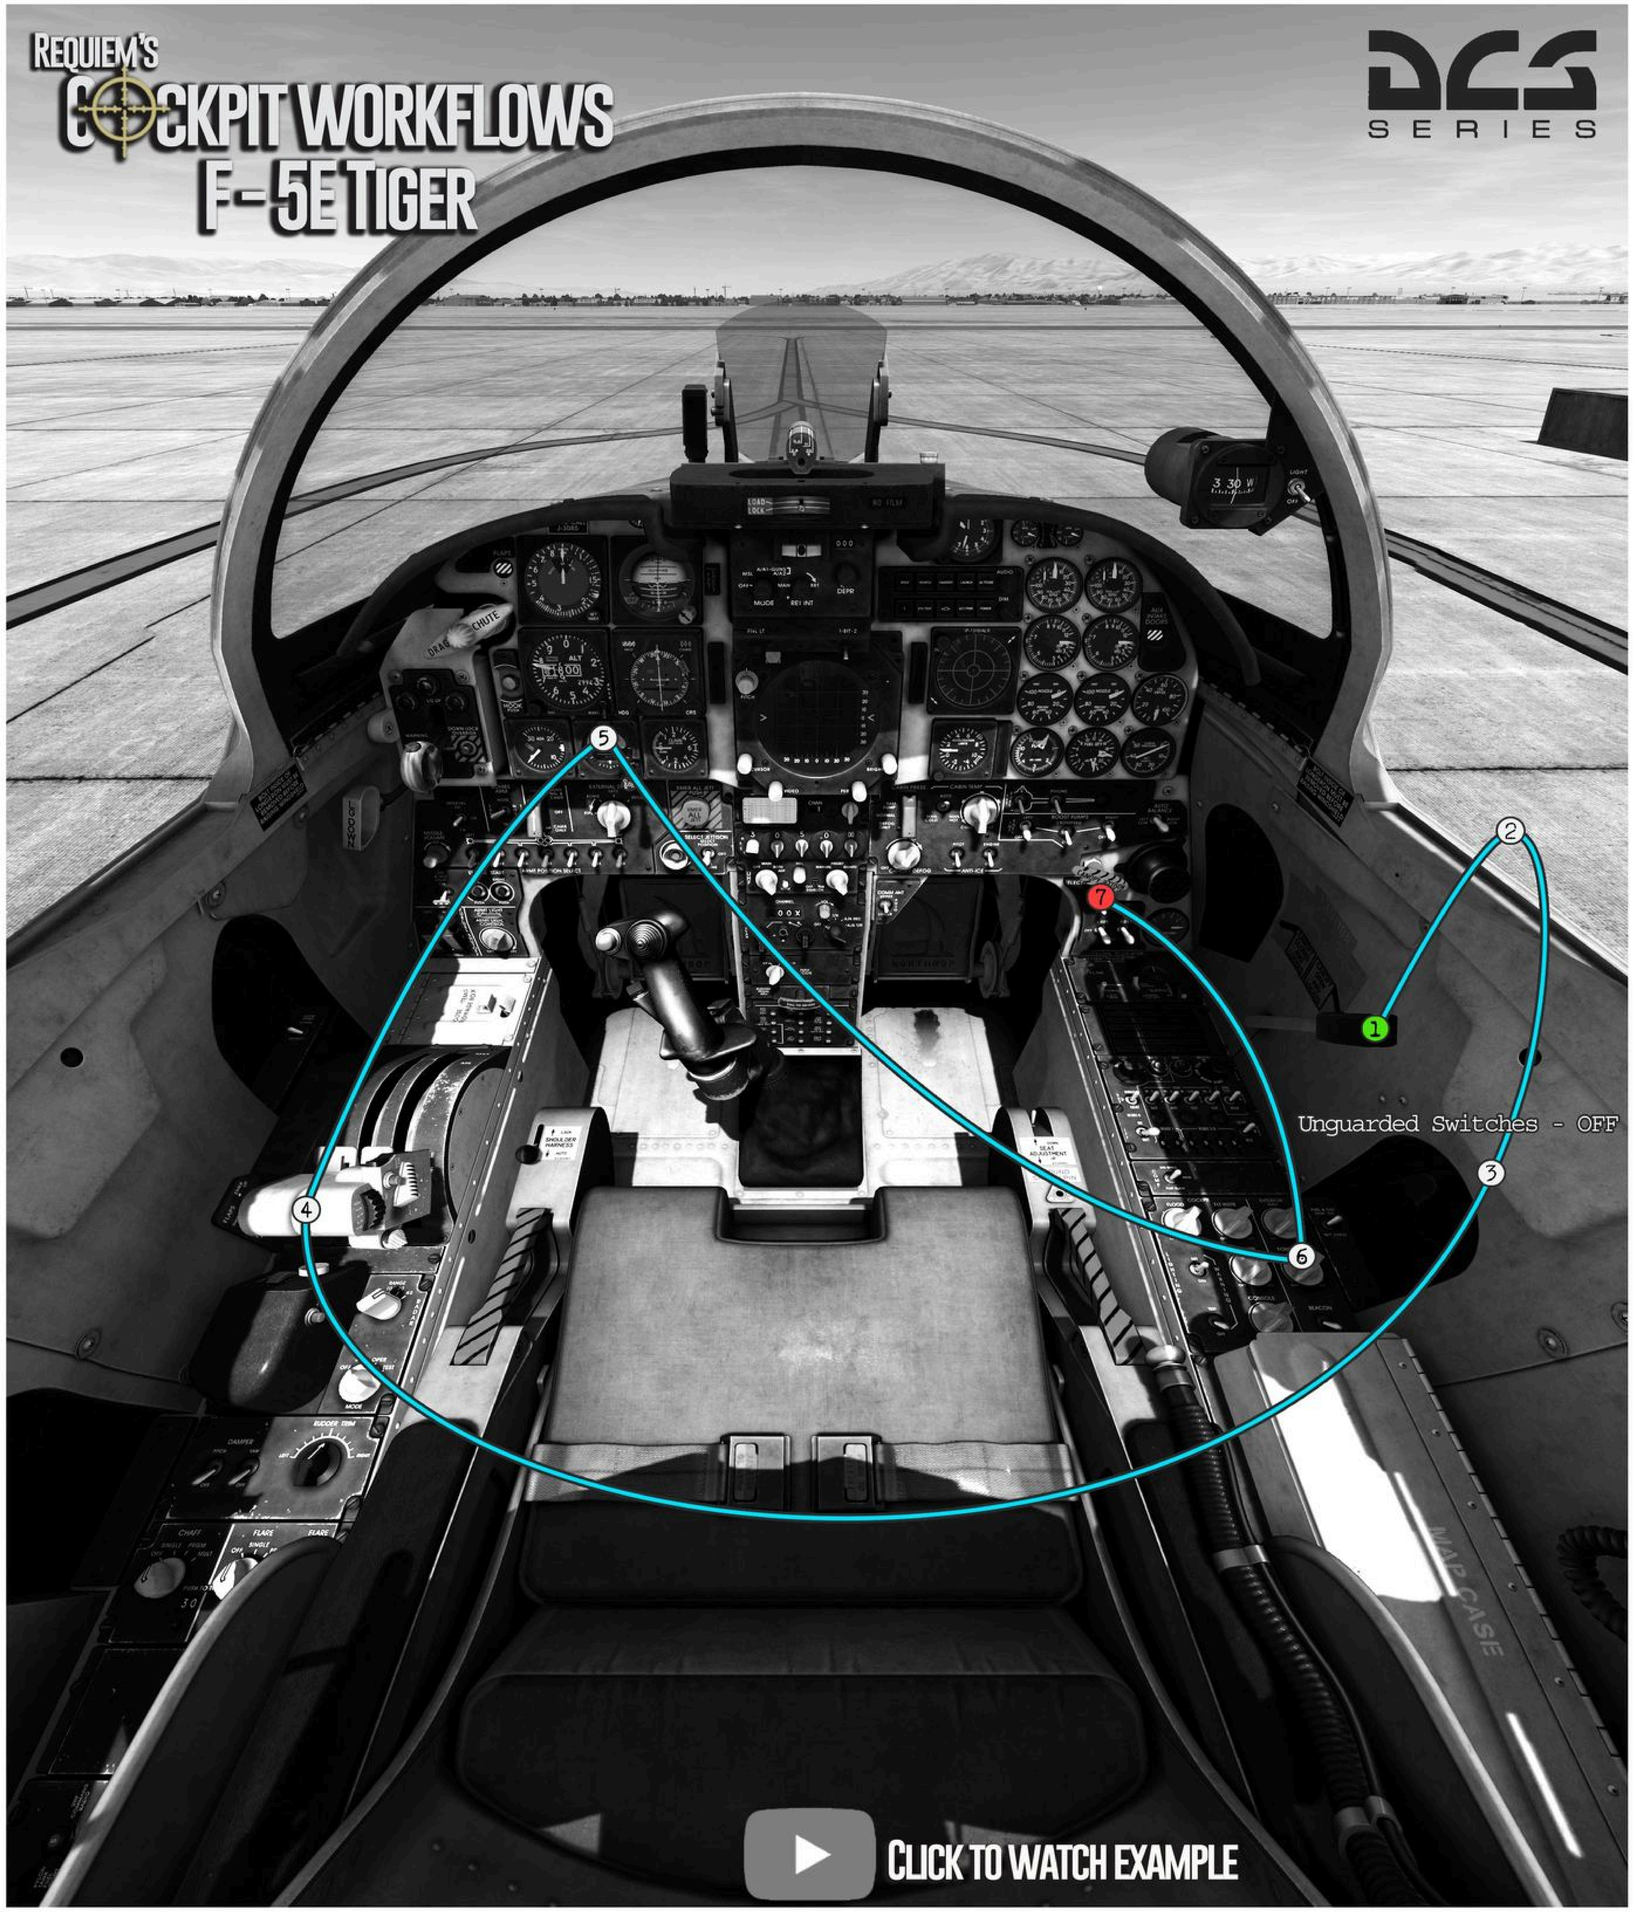

F-5E SHUTDOWN FLOW

TRIGGER: TAXI INTO PARKING SPOT

1. Canopy - Open (if not already)
2. Call for wheel chocks
   - Hold brakes until chocks in
3. All unguarded switches - OFF
   (except Battery, GENS, Boost Pumps)
4. Throttles - OFF
5. Standby Attitude Indicator
   - Caged & Locked
6. External/Internal Lights - OFF
7. Battery Switch - OFF

*At night turn off Taxi/Landing Light before turning in to park

BACK TO COCKPIT FLOWS LIST