


HR1500



From <https://steamcommunity.com/sharedfiles/filedetails/?id=1948213106>

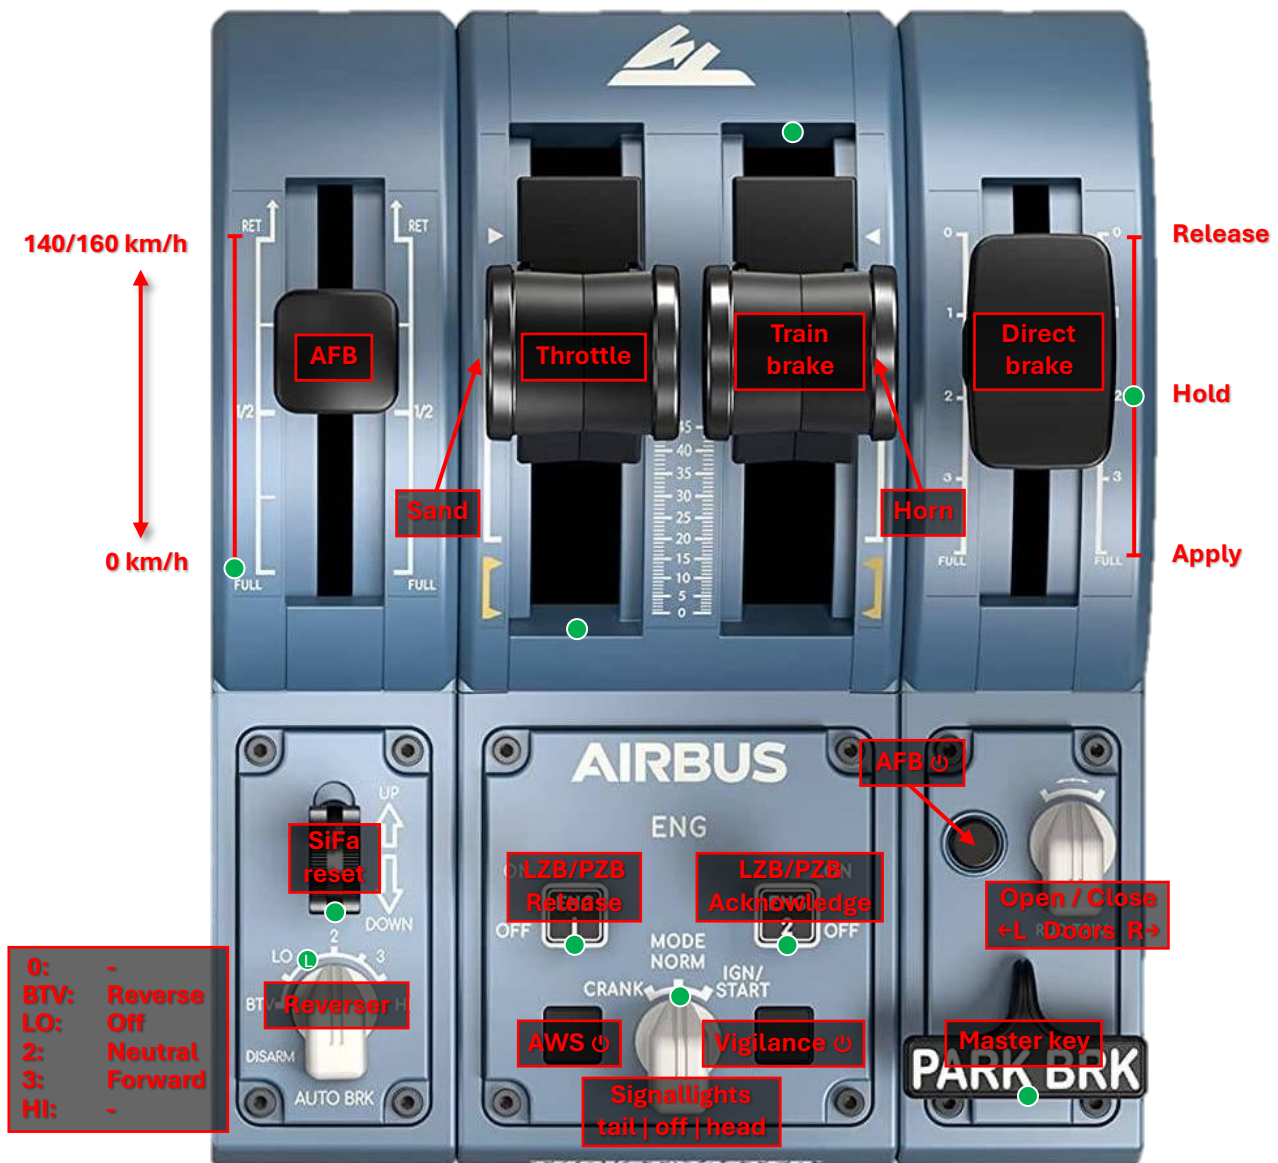

- Recommended initial position of lever / knob

Cab setup

- **Insert master key**
- **Set reverser to neutral**
- **Open doors**
- **Turn on safety system (AWS)**
- **Turn on vigilance system**
- **Set headlights and taillights**

Cleared to depart

- **Check signal**
- **Set reverser to forward**
- **Release brakes**
- **Apply power**

Cold and dark

- | | |
|--|--|
| <ol style="list-style-type: none"> 1. Ensure the locomotive is under overhead wires. 2. Ensure at least one brake is applied. This is indicated by a red square with a black dot. 3. Enter the locomotive through Cab 1 and enable the battery. 4. Ensure that all circuit breakers on this backwall are closed. 5. Check the normal position of all the switches on the backwall. 6. Set headlights as required. 7. Set brake mode as required (<u>R</u> for passengers/light, <u>P/G</u> for freight depending on weight). 8. Check that the Auxiliary Controls are off (side of cab for shunting / auxiliary operation). 9. Insert the reverser and set it to V (Forward). 10. Set Signal & Instrument Lights to on. 11. Ensure AFB is off. 12. Release the brakes until C-pressure is at 0.5 bar or lower. |  <ol style="list-style-type: none"> 13. Ensure the Parking Brake is on (light illuminated). 14. In the engine room, ensure every circuit breaker is closed. 15. Ensure PZB, LZB and Sifa are in their normal position. 16. Open the Sifa Cut-Off Valve. 17. Ensure the Pantograph Cut-Off Valve is open. 18. Ensure the Driver's Brake Cut-Off Valve is closed. 19. Walk to Cab 2 and check that all circuit breakers are closed. 20. Check the normal position of all the switches on the backwall. 21. Set headlights as required. 22. Ensure the Direct Brake is set to the "Hold" position. 23. Test the Horn Pedal. 24. Ensure that the Air Compressor Switch is on. 25. Set Signal & Instrument Lights to on. 26. Return to Cab 1. 27. Raise the Pantograph and close the Main Circuit Breaker. 28. Enable the Air Compressor |
|--|--|

Brake System Preparation

- | | |
|--|--|
| <ol style="list-style-type: none"> 1. Ensure that the Brake Pipe stays at 5 bar. 2. Move the Reverser to M (Neutral) 3. Ensure that the Brake Pipe stays at 5 bar. 4. Move the Reverser to V. 5. Decouple the Dynamic Brake. 6. Reduce Brake Pipe Pressure by 0.8 bar with the Train Brake and monitor the Brake Pipe gauge. 7. Release the brakes. 8. Go to the "Prüfen" page. [W → Prüfen] 9. Press SoftKey 5 "BrR 2 Ein" and await the HSM change. 10. Decouple the Dynamic Brake. 11. Reduce Brake Pipe Pressure by 0.8 bar with the Train Brake and monitor the Brake Pipe gauge. 12. Release the brakes. | <ol style="list-style-type: none"> 13. Apply the Direct Brake and monitor the C-pressure gauge. 14. Release the Direct Brake and monitor the C-pressure gauge. 15. Perform a PZB/LZB test and a Sifa test. 16. Apply the Direct Brake. 17. Release the Parking Brake. 18. Turn the Machine Room Lights and Cabin Lighting off if necessary. 19. Test the Horn Pedal. 20. Perform a rolling test: <ul style="list-style-type: none"> ○ Release all brakes. ○ Apply a small amount of power. ○ Roll for a few metres. ○ Reduce power to 0. ○ Apply a medium amount of Direct Brake force and stop. |
|--|--|

