

A.1.1. CHECKLIST - PALLET PUSHING SYSTEM TM-101

• Equipment: M.02540
 • Frequency: Daily
 • Inspector: _____
 • Date: // _____

Main Checklist Table:

Section	Item	Verification		Frequency	✓ Complies	✗ Fails	Observations/Measurement
A. KEEP - Cleanliness & Visual Inspection	1	General Cleanliness of the Pushing Unit		Daily			
		Air gun.	TROLLEY 1				
			TROLLEY 2				
			TROLLEY 3				
			TROLLEY 4				
			TROLLEY 5				
			TROLLEY 6				
			TROLLEY 7				
			TROLLEY 8				
			TROLLEY 9				
			CHAINS 1 / 9				
			PLAQUES 1 / 9				
			BEARINGS 1 / 9				
			GUIDES				
			FRAME				
			DUROGLIS				


Note:

Before starting the surface cleaning with the air gun, check for aluminum mold residue on top of the chain and on the surface or sides of the trolley plaques.

1. Air Cleaning:

Criteria:

Blow top surfaces of plaques and chain of 9 Trolleys. No accumulation of thick dust/grease.
 Blow around the central bearing. No compacted residue.

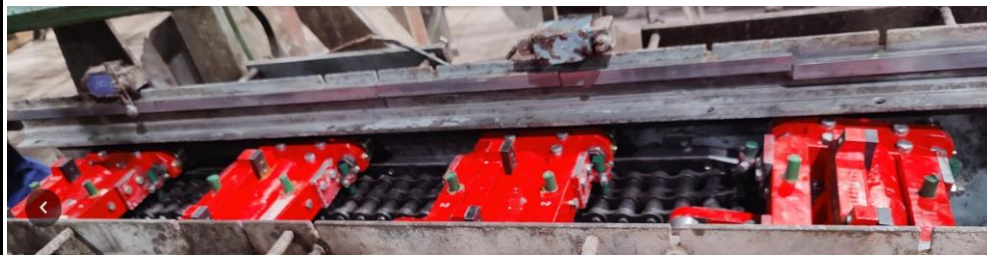

AIR GUN:

• Material: AISI 316 stainless steel, PEEK plastic.
 o Nozzles: Flat Venturi (Low Contamination)

o Flow rate: 10-15 liters per minute
 o Precise angulation (15°-25°)

Observations & Corrective Actions:

3. Quick Visual Inspection after cleaning:

Criteria:

- Condition of trolley plaques. No visible cracks or deformations.
 - Central bearing. Rotates freely, no abnormal noises.
 - Lateral scoring on plates or structure. No deep marks or exposed metal.
 - Aluminum residue (white/silver dust). Absence of chips or metallic powder.

3. Immediate Actions:

If aluminum residue, severe scoring, or a locked bearing is detected:
 1. Record in detail the affected trolley and issue in the checklist.
 2. Immediately report to the Production/Maintenance Manager before the end of the shift.
 3. Photograph the defect (if possible) for attached documentation.
 4. Jointly assess urgency for the next day:
 o High Priority: Schedule preventive maintenance before restarting production.
 o Medium Priority: Plan repair in the next maintenance window.

Notes:

• The inspection is performed with the line stopped at the end of production.
 • No disassembly is required, but agile communication between shifts is essential for traceability.
 • The goal is to prevent mold damage and accelerated wear through planned actions.

