


Automatic Valve controller logic

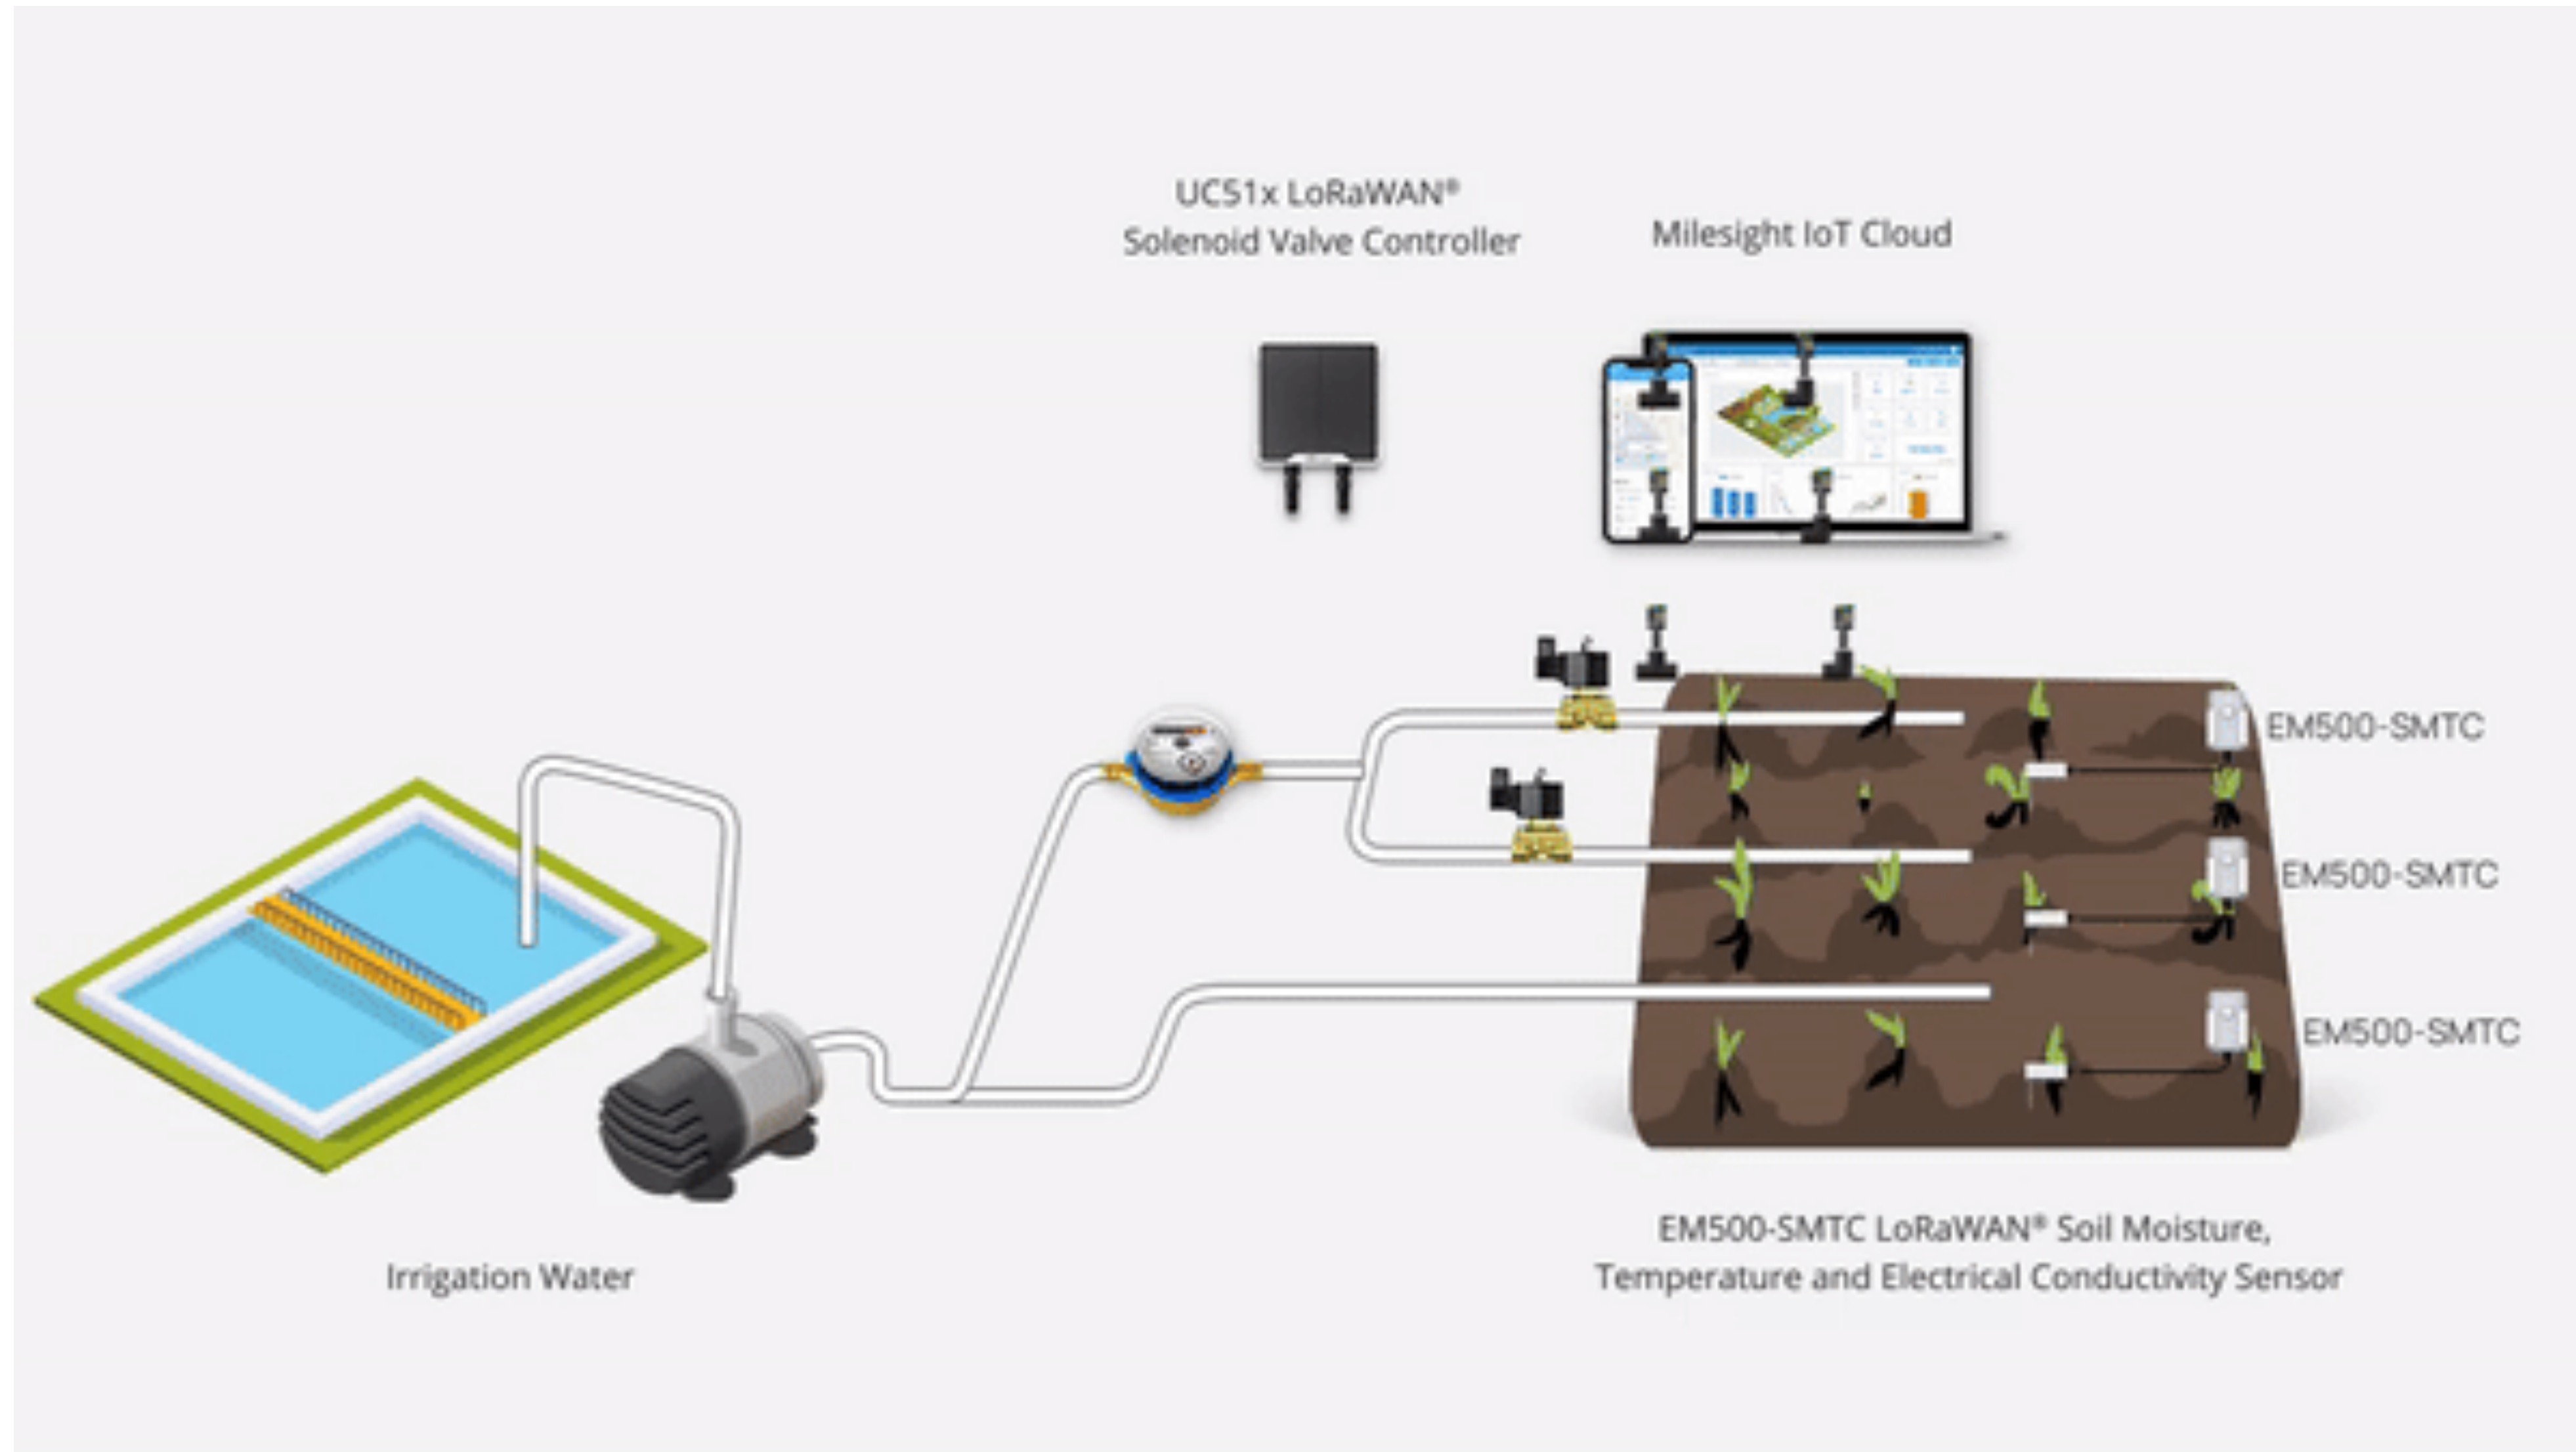

Soil moisture and humidity sensor

Fleet > Soil sensor 02

● **Soil sensor 02**

Location
ART Farm

Serial Number
24E124126F350840

Last update
Tue May 5, 2026 10:00:39 GMT+02:00

[Dashboard](#) [History](#) [Downlinks](#) [Configuration](#) [LoRaWAN](#) [Debug](#) [Rules](#) [Permissions](#)


[Share](#) [<>](#)

● Live data

Milesight EM500-SMTC Soil Moisture, Temperature and Electrical Conductivity Sensor



Soil Temperature
7 minutes ago

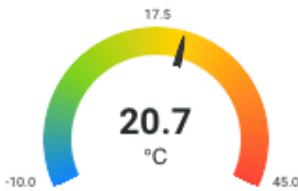

Soil Moisture
7 minutes ago




Soil EC
7 minutes ago




Soil Moisture Trend
7 minutes ago

[Default](#) [1H](#) [1D](#) [1W](#) [1M](#) [Custom](#)

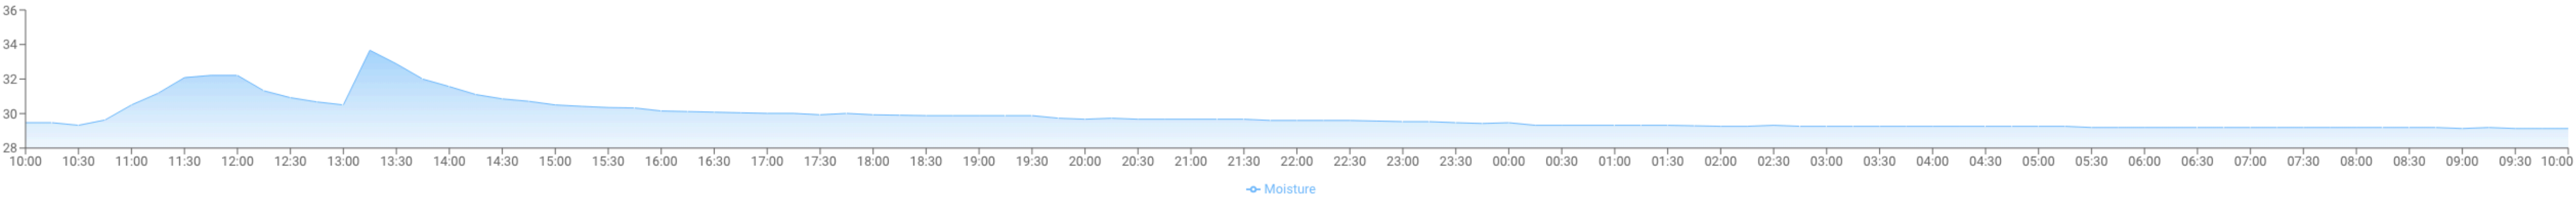


Soil Temperature Trend
7 minutes ago

[Default](#) [1H](#) [1D](#) [1W](#) [1M](#) [Custom](#)

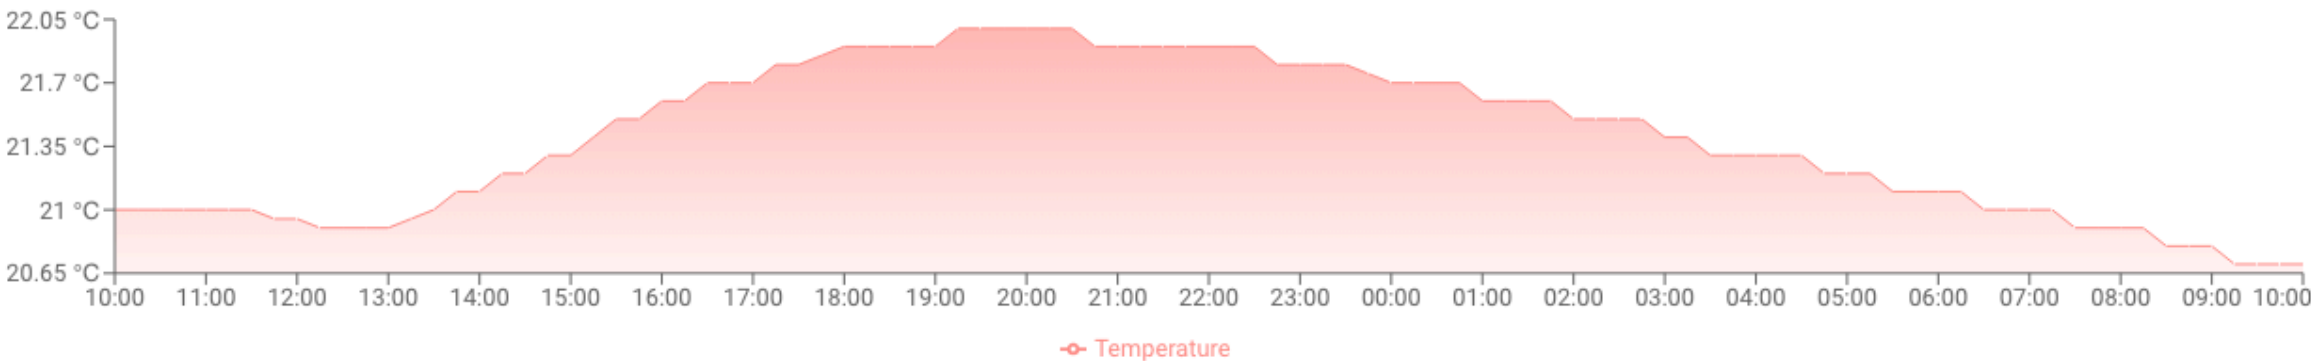

Soil EC Trend
7 minutes ago

[Default](#) [1H](#) [1D](#) [1W](#) [1M](#) [Custom](#)

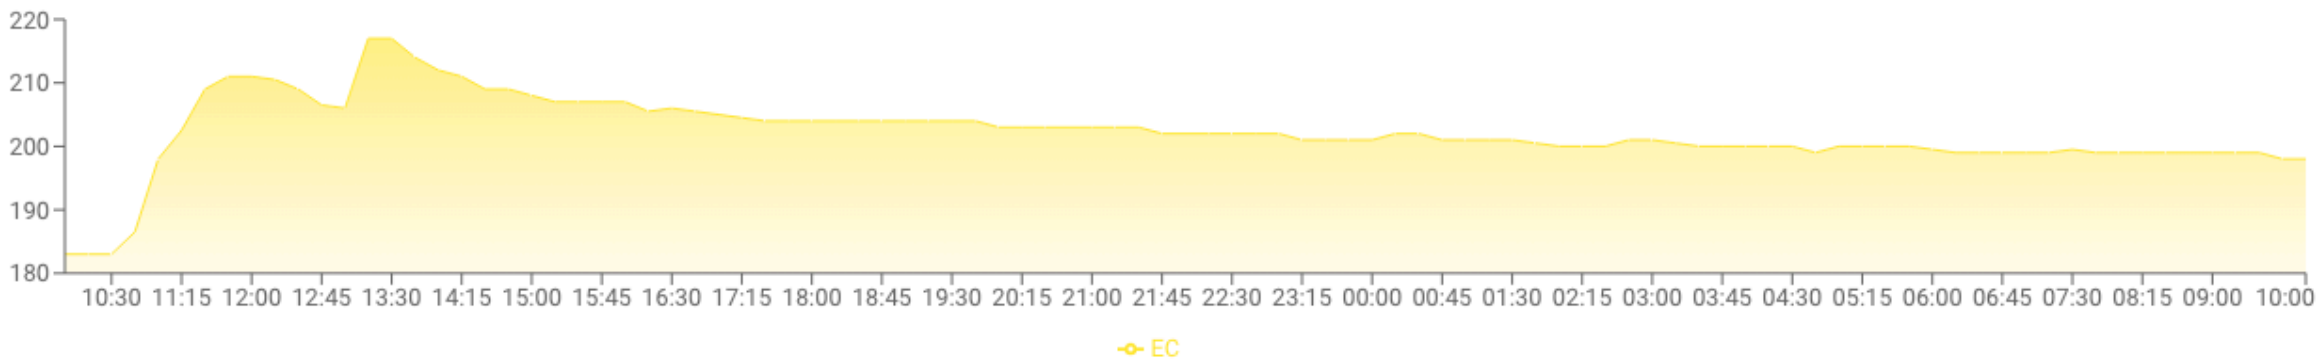

Sensor Transmission



Battery Charge
22 hours ago

95.00 %



LoRa RSSI
7 minutes ago

-110.00 dBm



LoRa SNR
7 minutes ago

1.2 dB



LoRa Datarate
7 minutes ago

SF7BW125.0 dB

<

DATA CAKE

Fleet > Valve controller 01

●

Valve controller 01

Location

Serial Number

Last update

ART farm

24E124460F171671

Tue May 5, 2026 10:05:30 GMT+02:00

Dashboard

History

Downlinks

Configuration

LoRaWAN

Debug

Rules

Permissions

Cloud Rules

Add Rule

Rule	Actions	
● OPEN VALVE 1	Send Downlink	More ▾
● CLOSE VALVE 2	Send Downlink	More ▾
● CLOSE VALVE 1	Send Downlink	More ▾
● OPEN VALVE 2	Send Downlink	More ▾

Edit Rule

Name

OPEN VALVE 1

Conditions

If

VALVE1 CONTROL is equal to True

+

Then

Send Downlink

+

Device

Valve controller 01 ▾

Downlink

Valve control ▾

Perform these actions at most once every

60

seconds.

☐

Allow retriggering

Update Rule

Cancel

Configure downlink

Configure Downlink

Name

open valve 1

Description

open valve 1

Downlink UUID

a9396651-9fbc-411e-ba74-587c970e7dfa

Copy

Fields used

If your encoder function takes input from the device's fields, you can specify them here. They will be used to create the form for the downlink generator.

VALVE_1_OPEN

☒ Trigger on measurements

If activated, each time the device records a measurement in one of the fields used, the downlink will be sent automatically.

Port

1

Payload Encoder

1

function Encoder(measurements, port) {

2

return [0xff, 0x1d, 0x20, 0x00];

3

}

Output

console.log Output

Port

Test

Base64 encoded

☐ Confirmed Downlink

If activated, your device will be requested to send a confirmation upon its downlink reception.

Save Downlink