
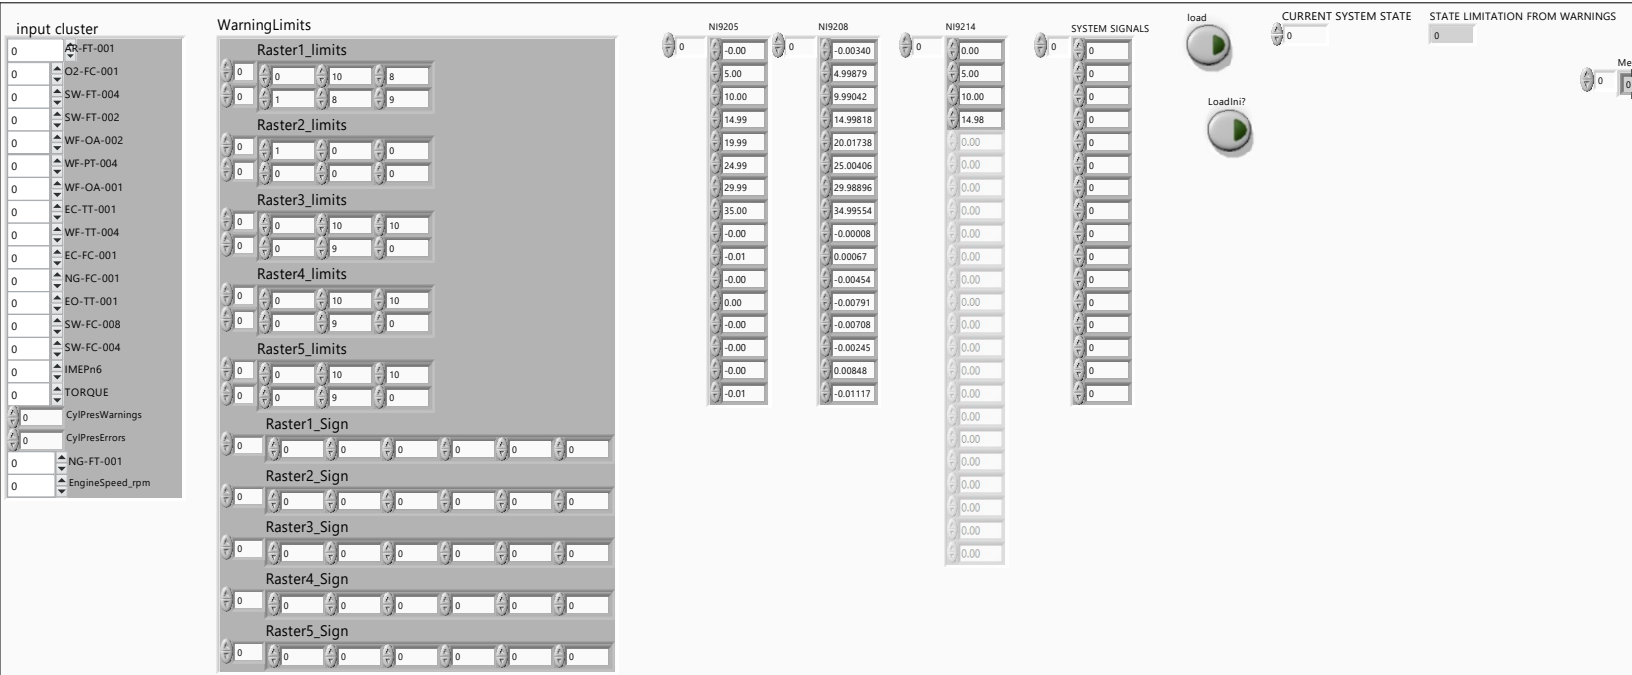


APC_9056_WarningIntegration.vi (4822)

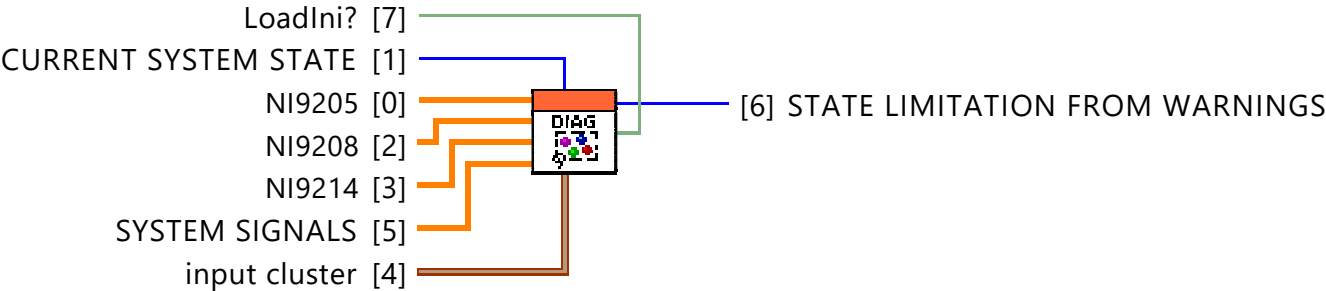

CURRENT SYSTEM STATE

NI9214

mean

NI9208

mean

NI9205

mean

SYSTEM SIGNALS

Raster1_limits

LoadIni?

input cluster

AR-FT-001

O2-FC-001

SW-FT-004

SW-FT-002

WF-OA-002


WF-PT-004

WF-OA-001

EC-TT-001

ergedCylinderErrors

MaxPress	Knock	9049 not responding
0	0	
Misfire	LateComb	9056 FPGA not responding
0	0	
CyclicVar		
0		

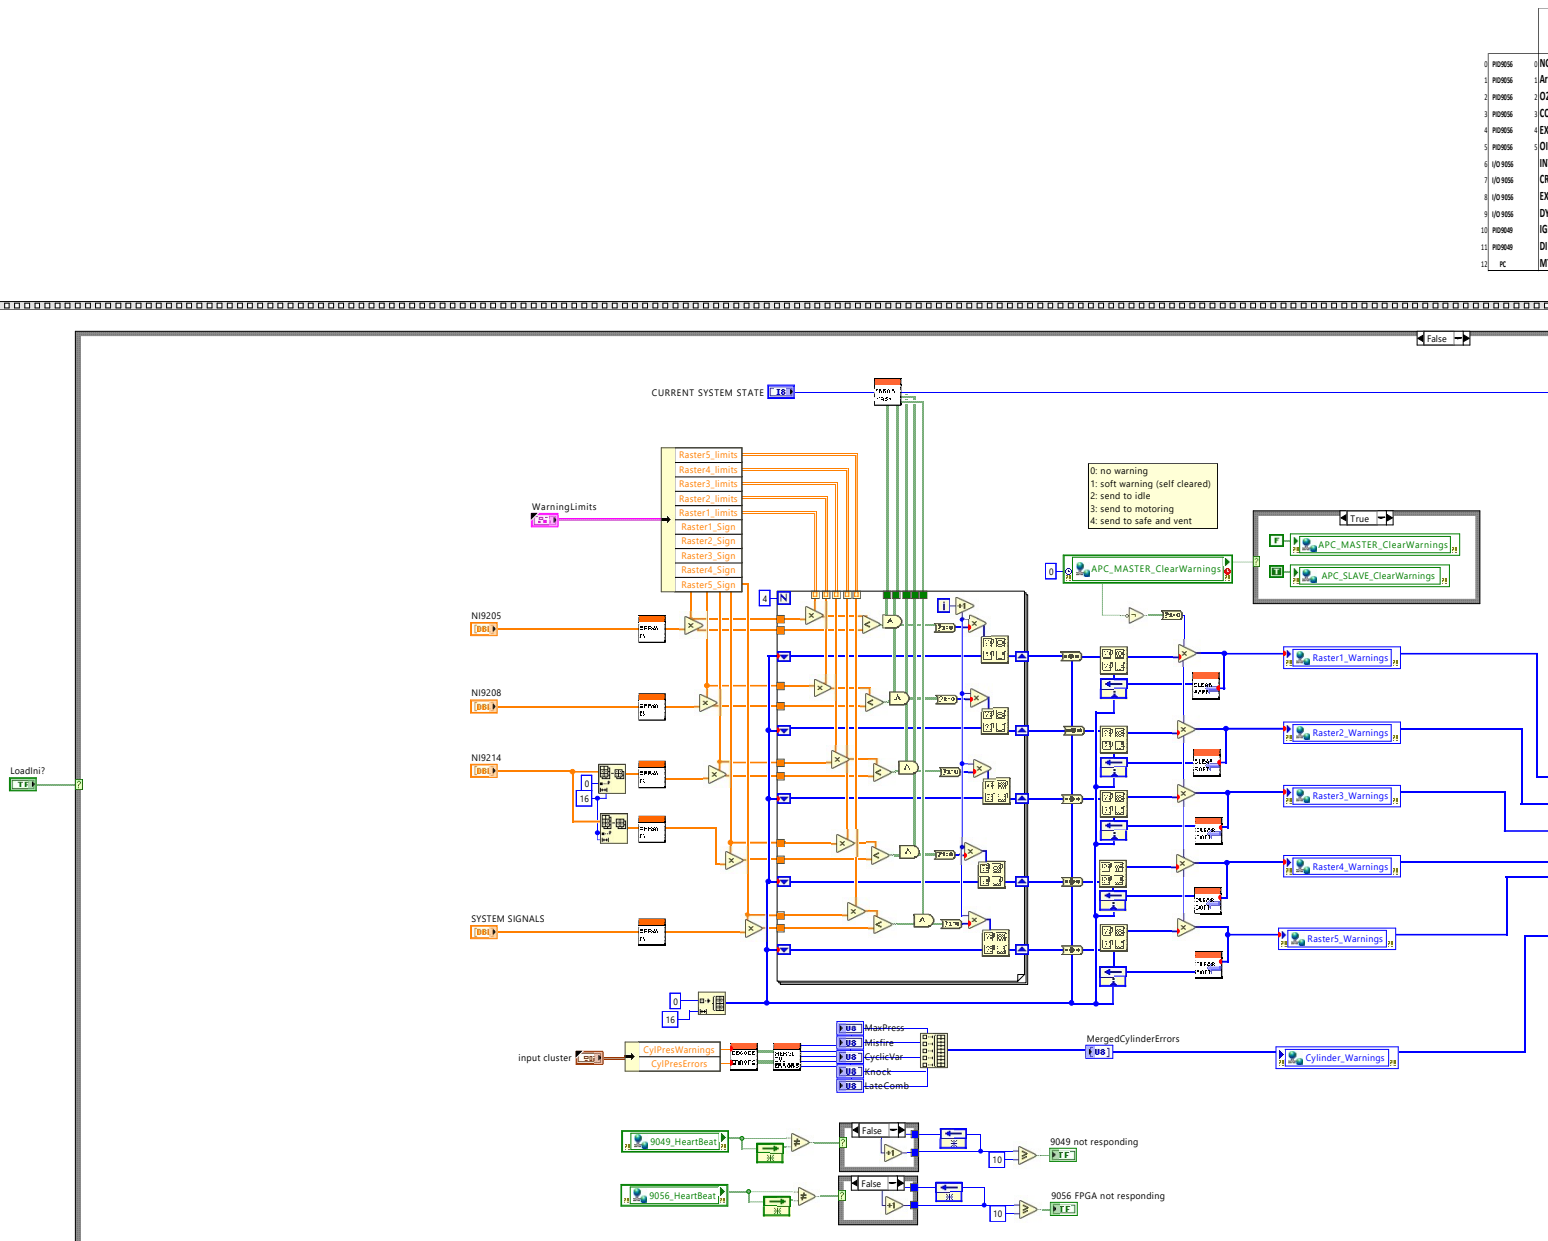

MAX LEVEL OF CONTROL	-1	0	1	2	3
SAFE	SAFE	STAND BY	MOTURING	IDLING	FIRING
SAFE	0	0	0	0	6
SAFE	0	0	2	2	2
SAFE	0	0	2	2	2
SAFE	1	2	2	2	2
SAFE	1	3	3	3	3
SAFE	1	3	3	3	3
SAFE	0	1	1	1	1
SAFE	0	1	1	1	1
SAFE	0	1	1	1	1
SAFE	0	0	2	2	2
SAFE	0	0	0	1	1
SAFE	0	0	0	1	1
SAFE	0	0	2	2	2

SAFE LEVEL

closed

closed

closed

max flow

max flow

open

open

open

open

stopped

deactivated

deactivated

TBD

0	0	0	0	6
0	0	3	3	3
0	0	2	2	2
1	2	2	2	2
1	3	3	3	3
1	3	3	3	3
0	1	1	1	1
0	1	1	1	1
0	1	1	0	1
0	0	2	2	2
0	0	0	1	1
0	0	0	1	1
0	0	2	2	2

MODES:

-1: SAFE

0: Default: STAND BY

1: MOTURING

2: IDLING

3: FIRING

Global control variables are defined as follows:

0: safe state

1: open loop control action (or alternate state if binary)

2 or above: closed loop control possible

The different controllers may be overruled manually or by a given condition. Hence the specified number is the maximum control abstraction in the phase.

NOTE: venting valves are defined as 1-closed and 0=open. This is for allowing min/max criterion

