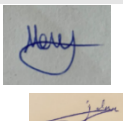
Roboteam

HUMAN DRIVEN

ATP For Gun System

Approvals				
	Title	Name	Date	Signature
Written by	QA Engineer	May Swisa	25.11.2025	
	NPI Engineer	Idan Kabesa		
Approved By	Engineering Team Leader	Roi Akva	25.11.2025	

List of changes				
Rev	Description	Name	Role	Date
000	First release	May Swisa Idan Kabesa	QA Engineer NPI Engineer	25.11.2025

1. Goal:

To verify that the pitbull meets all the requirements before installation on the Argo.

2. Relevant Documents:

3. Products:

- Pitbull

4. Procedure:

Procedure			
Name			
Date			
Argo S/N			
Step	Description	P/F	Note
PERFORM A VISUAL INSPECTION			
1	**Verify** there are no cracks, scratches, or paint issues.		
2	**Verify** ID label at the bottom.		
3	**Verify** that all screws and nuts are not loose.		
	Verify the existence of all connectors, and that they are properly connected.		
	Verify the presence of all connector caps.		
	Verify that the desiccant humidity indicator is blue.		
	Verify that all lenses are clean and have no cracks or damage.		
	Verify the presence of a mechanical stopper on the elevation axis.		Ensure it locks manually. Leave it free on the axis after the check.
	Verify that all components have no freedom.		
	Verify that both mechanical stoppers on the axis are present, can be manually locked, and move freely along the axis.		Leave it free on the axis after the check.
	Verify the presence of one stop pin attached to the base and another one in the control kit case.		
	Verify the existence of the EMO button.		

	Verify that the ammunition box opens and closes freely.		
	Verify that the trigger levers and safety move freely, and that the trigger wheels move smoothly.		
CONTROL BOX CHECK			
	Connect the Pitbull and the control unit to the control box.		
	Connect the control box to power.		
	Verify that both sides of the connector are fully connected.		Ensure there is no damage to the pins.
TURN THE SYSTEM ON			
	Verify that the charge status indicator on the control unit is lit.		
	Verify that the blue LED at the bottom of the electronic drawer flashes.		Once the system is connected, it will stop flashing.
	Verify that the Pitbull startup screen is displayed clearly.		
	Verify the communication between the control unit and Pitbull is functioning properly.		Ensure the communication icon on the control unit is green and doesn't take more than a minute.
	Verify that various actions cannot be performed when switching to ENABLE.		The system should not allow any of those actions.
	Press START and verify proper streaming from day and night cameras.		
	Verify the zoom on the day camera.		
	Press each of the buttons on the control unit for 10 seconds.		Verify that a "Button is pressed" message is displayed.
	Move the toggles rapidly and verify the system responds.		Do this several times.
	Switch the movement enable toggle to ENABLE and verify that the movement status indicator turns green.		
	Perform a full rotation of the system ($0° - 360°$) at slow speed.		Verify the freedom of movement.
	Verify full elevation axis movement ($-30° - 60°$) at slow speed.		Verify the freedom of movement.
	Select a target and verify that it remains in the center of the cross with the zoom.		
	Release the safety mechanism and repeat the procedure with the firing reticle.		
	Select a target and verify that it remains in the center of the cross with the thermal camera.		

	Release the safety mechanism and repeat the procedure with the firing reticle.		
	Lock the mechanical stoppers in azimuth and tilt, drive into the stoppers at max speed, and continue for 10 seconds.		Perform this 5 times for each axis and in different directions.
	Set the system to **0°** in the azimuth axis and press "Return to park".		Arrival time should be less than 2 seconds.
	Enter a range manually into the system and verify that the reticle moves accordingly.		**Verify** that the entered range is saved in the top bar.
	Perform a quick charge, stop it, and continue operating the handle manually back and forth.		
	Release the safety and verify that it automatically locks after 60 seconds.		
	Release the safety and press both firing buttons.		
	Verify that fire occurs.		Repeat 10 times in each firing mode.
	Enter a no movement zone and verify that the system "skips" over it.		Make sure that a notification appears on the screen when a collision occurs.
	Verify that after completing the charging actions, the safety locks.		
	Verify the system automatically stops tracking when the target disappears.		
	Verify that during tracking, when moving the system with the joystick, manual corrections can be made, and tracking doesn't stop.		
	Switch to the day camera screen and select targets in the 4 corners of the display.		
	Verify that the system's reticle reaches inside the blue square boundaries.		
	Switch to the day camera screen, select a moving target, and verify that the Pitbull tracks the target.		
CONNECT THE PITBULL TO THE VEHICLE			
	Activate stabilization and drive with the Pitbull on the vehicle for 5 minutes.		Verify that the stabilization operates correctly. System drift remains within a 3x3 cm area on the display.
	Select a static point on the screen and verify the system remains on it.		
	Perform point & shoot at least 10 times.		
	Verify that the system reaches the desired point and remains on that point.		
	Perform optical tracking with the day camera while stabilization is active.		

	Perform optical tracking with the thermal camera while stabilization is active.		
	Perform a safety release and firing in each test!		

Results Mentions Comments