
Roboteam

ATP For
Control Container
RTCC-V01-00001

Approvals				
	Title	Name	Date	Signature
Written by	NPI Engineer	Idan Kabesa	01/03/2026	
Approved By	Engineering Team Leader	Roi Akva	01/03/2026	
List of changes				
Rev	Description	Name	Role	Date
000	First release	Idan Kabesa	NPI Engineer	01/03/2026

1. Goal:

To verify the control container quality (mechanical and operational)

2. Relevant Documents:

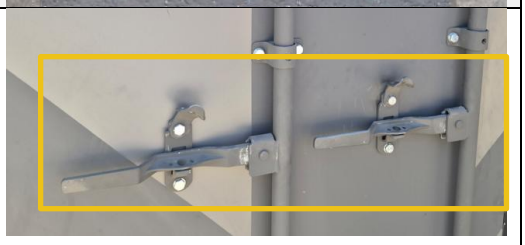
QC docs for RAMSA, electricity, and container welding

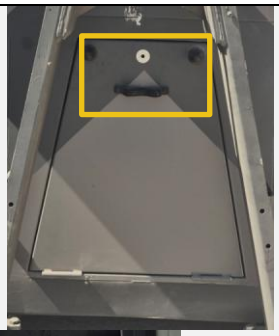
3. Tools:

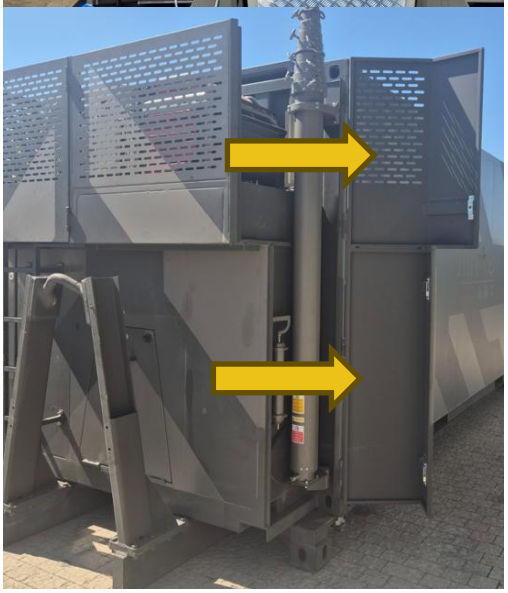
Tools	Description
TOL00947	Socket Tester
CBL01436	HDMI MALE TO MALE, 4K,60HZ, 1M
JIG00301-A	TACTICAL OPERATION CENTER RF TEST JIG
JIG00299-A	Power & ETH jig
Laptop	Computer
RJ45 Cable	ETH Cable

4. Procedure:

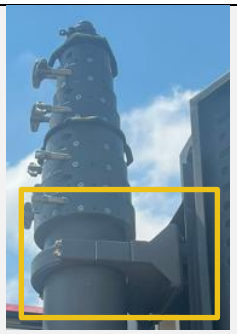
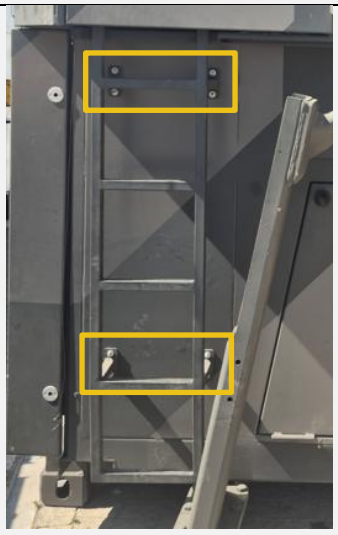
Step	Description	P/F	Note
PERFORM A VISUAL AND MECHANICAL INSPECTION – External			
1	**Verify** QC documents for RAMSA, electricity and welding are exsit		
2	**Verify** there are no dents, cracks, corrosion, or paint peeling on exterior walls. **Verify** the LOGO is clear.		
3	**Make** sure ramps are fixed and secured **Verify** that the loading ramps move up and down smoothly. **Verify** the locking mechanism. Note: To open the lock, push the red button.		

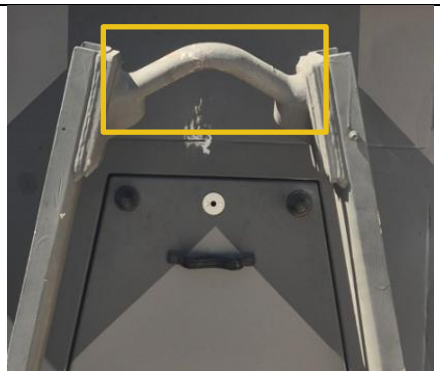
	Leave the ramps down for the next step.		
4	**Verify** the locking mechanism. (Do it for the main door and vehicle entrance doors.) **Verify** the back two doors open and close smoothly.		

			 
5	**Verify** the locking mechanism. (Use the key). **Verify** the small back door opens and closes smoothly.		  

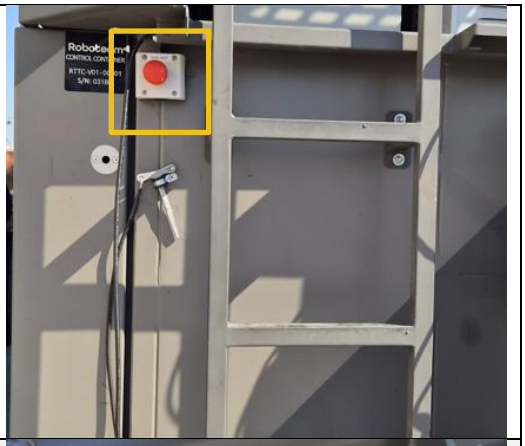
6	**Verify** the locking mechanism. (Use the key). **Verify** four sheet metal covers in the back open and close smoothly.		 
7	**Verify** the external AC unit is securely mounted, fixed, and undamaged.		

8	**Verify** the generator is mounted, fixed in four points, and undamaged. **Verify** the cable is connected, secured, and undamaged. **Make** sure the generator key is present.		 
9	**Verify** the Differential transformer is securely mounted, fixed, and undamaged. **Verify** the input and output transformer cables are protected, connected, and undamaged.		
10	**Verify** the compressor is securely mounted, fixed, and undamaged. **Verify** cables are connected, secured, and undamaged (yellow) **Make** sure the compressor controller is present and undamaged. **Verify** the air pipe is connected and secured (blue). **Verify** air connectors are mounted and fixed.		
11	**Verify** the external mast is secured, and all clamps and bolts are fixed.		

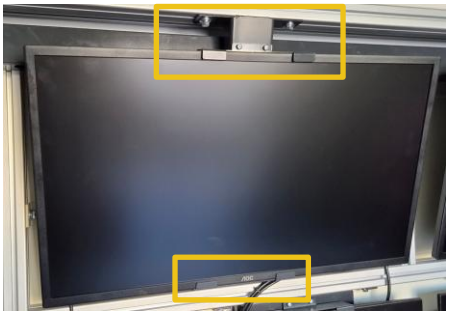
12	**Verify the** MAST hand pump is mounted and secured, and clamps and bolts are fixed.		 
13	**Verify** the ladder is mounted and secured with 8 bolts.		

14	Verify that there are no cracks in the hook lift		
15	Verify the RF antenna panel is fixed with four bolts, and eight RF connectors are fixed to the panel. (Bracket on the roof). Make sure RF cups are present and secured		 

16	**Verify** IO panel is connected with eight RF cables (panel is located in the back right wall of the container). **Make** sure IO panel is mounted with six bolts and the connectors and cables are undamaged.		
17	**Verify** Label existence		

18	**Verify** the presence of EMO switch (next to the leader).		
19	**Verify** the two container wheels are mounted and secured with 4 bolts.		
PERFORM A VISUAL AND MECHANICAL INSPECTION – Internal			
1	**Verify** there are no dents, cracks, corrosion, or paint peeling on the walls.		
2	**Verify** Label existence (next to the main power box).		
3	**Verify** the window opens and closes smoothly for both sides.		

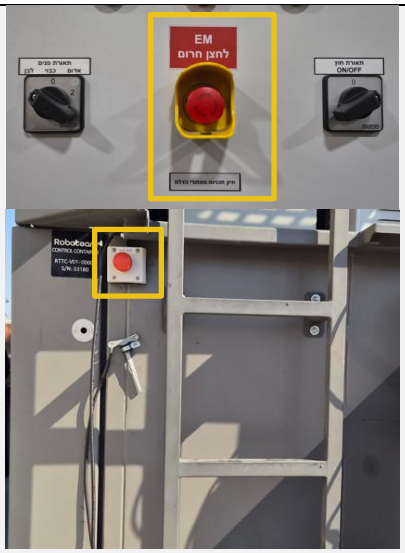
4	Verify floor integrity (BLACK PAINT). Check for any cracks or structural deformation.		
5	Verify the top storage - klapa mechanism opens and closes smoothly Verify the existence of a hand rope mount to the klapa Check all three panels		
6	Verify the Lower storage under the tables opens and closes smoothly Verify the Lower storage on the right side (whiteboard side) opens and closes smoothly Check also the upper door storage of this section (on top of lower storage)		  

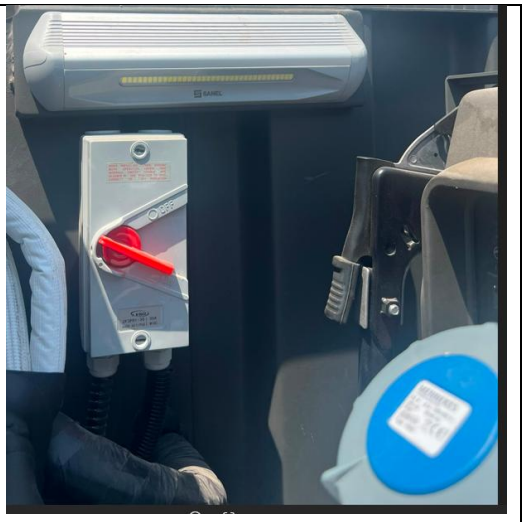
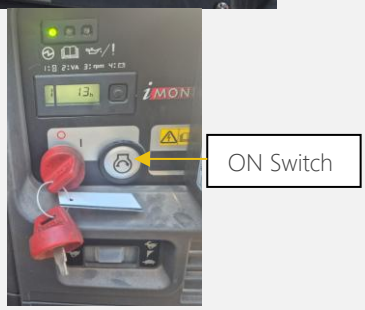
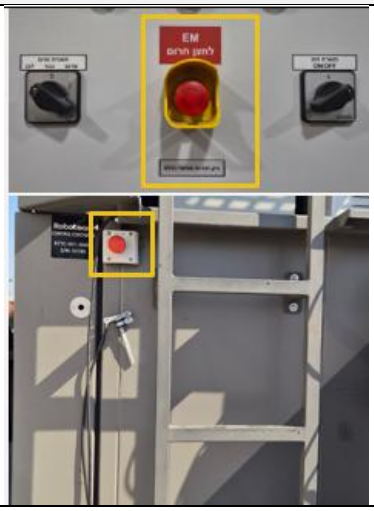
7	**Verify** that a fire extinguisher is present. **Verify** the extinguisher's expiry date and that its pressure gauge is in the green zone.		
8	**Verify** that nine 24″ screens and six 32″ screens are mounted and fixed to brackets, and screens are not damaged.		 
9	**Check** the table lock mechanism. **Verify** mounted brackets are fixed to the table (two bolts each). **Verify** the table mechanism moves up and down smoothly.		  

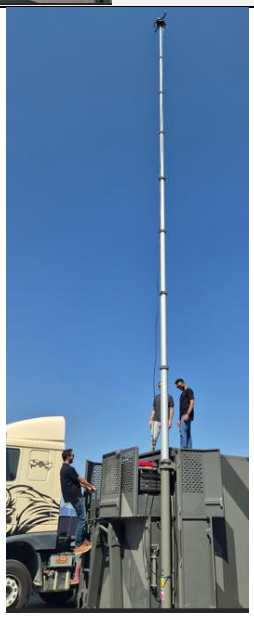
			 
10	**Verify** nine communication/power panels integrity. **Make** sure Power/ETH/HDMI connectors are not damaged. **Make** sure the RF cups are present		 
11	**Verify** the communication box and power cables are connected. **Verify** ground cables (yellow/green) are connected and fixed to the panel.		 
12	**Verify** AC is present and mounted to the wall. **Make** sure the power cable is connected. **Verify** the AC controller is mounted to the wall (next to the main door).		 

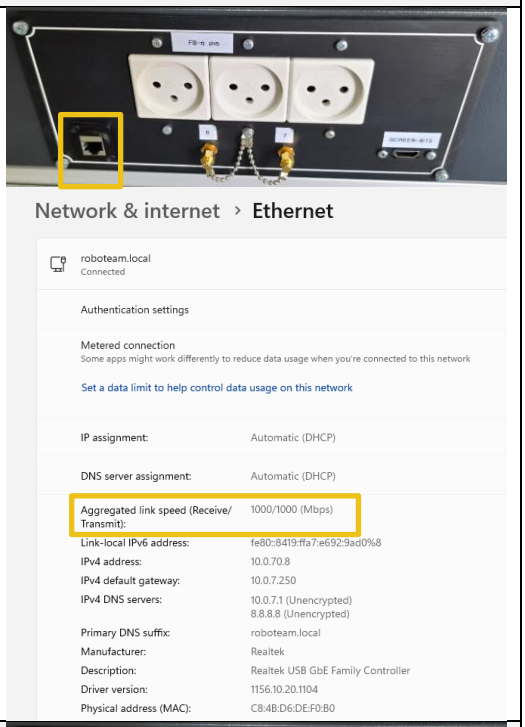
13	**Verify** the electrical box is mounted to the wall (next to the main door). **Verify** the integrity of the door lock. **Make** sure the door key is present.		
14	**Verify** the whiteboard is mounted to the wall.		
15	**Verify** the presence of: Nine folding chairs Power extension cord Six ratchets for vehicle mounts to the floor. Located in the left upper storage.		
16	**Verify** the presence of HDMI cables CBL01434 X2 CBL01435 X2 CBL01363 X2 CBL1436 X6		Can be in the communication shelf box

17	**Verify** the presence of a grounding rod		
18	**Verify** a smoke detector is present and mounted		
FUNCTIONAL CHECK (POWER/COMMUNICATION/OPERATIONAL)			
1	**Make** sure the generator oil level is full **Make** sure the generator gas level is full		

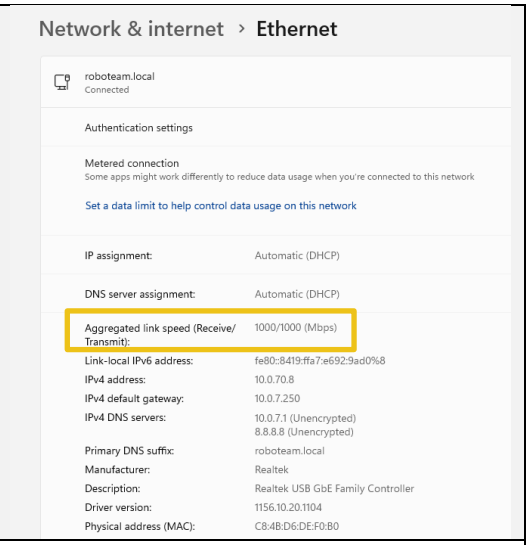
2	**Verify the two** EMO switches (outside and inside) are released (not pushed in).		
3	**Verify** that all main outside electrical panel breakers are up. **Verify** that the main switch is turned to "גנרטור" side.		
4	**Verify** that all the main interior electrical panel breakers are up.		

5	**Verify** the main AC electrical switch is ON		
6	**Turn on the generator:** **Verify** the main breakers are on **Turn** the main switch to **I** **Push** on the ON switch and make sure the generator turns on; the green Led in ON and the screen is on. **Make** sure the RED LED is off (malfunction), and the generator is stable.		 
7	**Test** the two EMO switches by pressing each one, and make sure container power is off. **Verify the** EMO switch is released, and power is back on before next steps		

8	Check the MAST operation using the handle pump (disconnect MAST hose if needed): Connect the handle pump hose instead of the compressor, pump the MAST and make sure its going up; do it for 5m Make sure there is no air leak while operating the handle pump		
9	Check the MAST operation using the compressor and its controller pump: Turn on the compressor by moving the controller button UP, and make sure MAST is going up all the way (air pressure should be stable and not dropping) Move the controller to HOLD and leave it for 30 min; check that the MAST is holding and not falling and make sure there is no air leak. Move the controller button to DOWN and make sure the MAST is back to the home position (down position) Move the controller button back to HOLD (compressor is off)		  
10	AC operation check: Turn on the AC using the controller Check the AC cooling operation Leave the AC on for 30 min. Verify the AC does not drip water.		
11	Check container lights: Verify that all five white lights turn on. Verify that all five red lights turn on. Verify that all four outside lights turn on.		
12	Check the power socket using TOL00947.		

	(9 panels→27 outlets)		
13	**Check** the ETH socket in each panel (9 panels) by: connecting an RJ45 cable (CBL01436) to the computer and making sure the signal is 1G [Click on ETH icon→Network & Internet settings→Ethernet→ SPEED=1Gbps]		
14	**Check** the HDMI socket and screens by: Connect the HDMI cable to each HDMI socket on the panel and to the computer, then turn on the computer and all 15 screens. **Make** sure each connector is connected to the right screen number (See label on the panel & screen). **Make** sure each screen view is ok; the view is clear and without color issues (15 screens).		
15	**Check** the eight RF socket wiring from inside panel to outside top roof panel by: Connect the jig (JIG00301-A) to RF connector on both sides and **make** sure the jig LED is turned ON and each connector is connected to the		

	right connector on the roof panel (1-8). Check one by one. Use the label numbering for each socket on both sides.		 
16	**Check** the MAST cable output (ETH & Voltage): Connect the CBL01346-A (MAST edge side) to the jig box (JIG00299-A) and check: **ETH**: connect an RJ45 cable (CBL01436) to the computer and make sure the signal is 1G [Click on the ETH icon→Network & Internet settings→Ethernet→ SPEED=1Gbps] **Amps and Voltage**: Turn on LOAD (jig button up). Voltage output should be-		

	Voltage: TBD Note: Make sure the cable is connected to the IO panel outside the container		
17	**Turn** off the generator		
18	**Lift the container twice and make sure:** Wheels are turning and not stuck All internal parts are not damaged after lowering the container		 
19	**Make** sure the container is ready for delivery by: Ramps up and locked, doors locked, keys in place, mast down.		

Results Mentions Comments