
Arcade cabinet

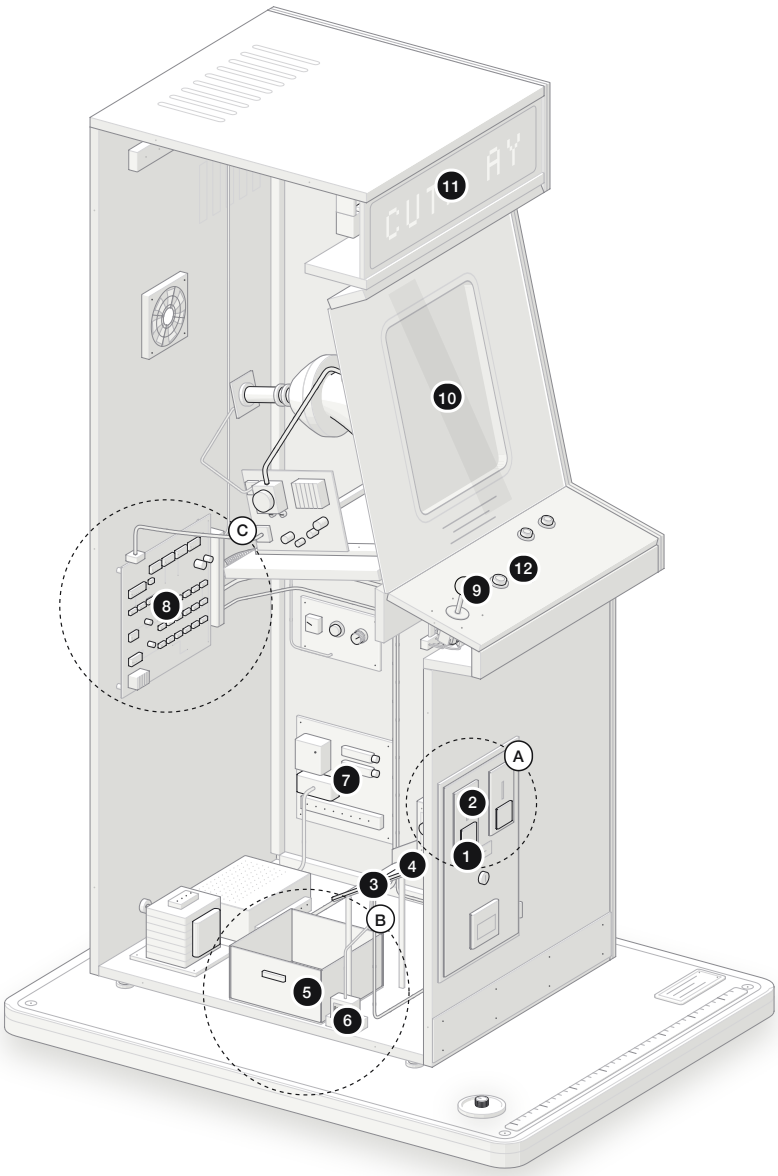

What happens when you drop in a coin?

The quarter rolls through a mech that checks it, then falls past a thin switch wire into the cash box. That one pulse counts the coin, latches the power on, warms the picture tube, tests the board and starts attract mode.

178 cm
CABINET HEIGHT

24.26 mm
A US QUARTER

27 cm
DROP INTO THE CASH BOX

224 × 288 px
PICTURE, ON ITS SIDE

15.734 kHz
LINE RATE

PARTS

01 **Coin door and slot**
The quarter goes in here; a reject comes back out of the return.

02 **Coin mech**
Checks the coin's size and metal before letting it through.

03 **Coin switch**
A thin wire the falling coin brushes: one pulse per coin.

04 **Coin chute**
A 30° slope that carries the coin past the switch.

05 **Cash box**
An open box 27 cm below the chute that catches every coin.

06 **Coin meter**
Counts each coin, pulsed by the switch.

07 **Relay, transformer and supply**
The first coin latches the relay and wakes the cabinet.

08 **Game board**
CPU, RAM and ROMs: it tests itself, then runs the game.


09 **Harness and edge connector**
Carries the coin line, the controls and the video to the board.

10 **Monitor, CRT and chassis**
On its side for a vertical game; it warms up in about 2 s.


11 **Marquee lamp**
A fluorescent tube that strikes at power-on.

12 **Control panel**
The stick closes a microswitch underneath; the buttons fire and start.


CLOSE-UPS

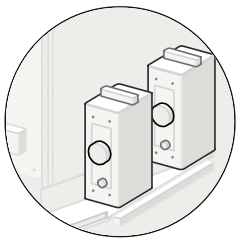

(A) **The coin mech**
Checks each coin before it reaches the chute.

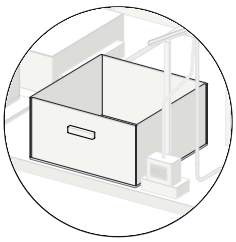


(B) **The cash box**
Open at the top, so the coins can be seen landing.

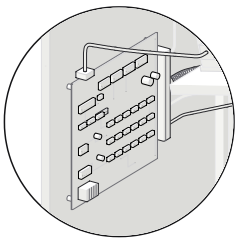

(C) **The game board**
Its edge connector on the left carries every wire.


How it works

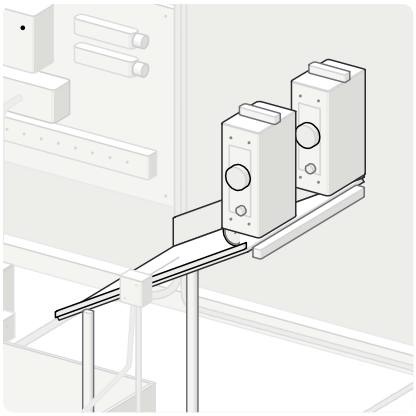

01

The mech checks it


The mech checks the quarter's size and metal and lets it roll on into the chute.

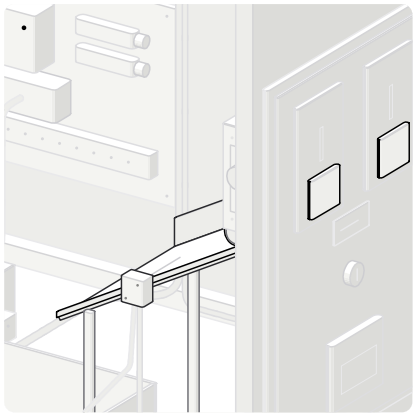

02

One pulse, one coin


Rolling down the 30° chute, the coin brushes the thin switch wire: one pulse for one coin.

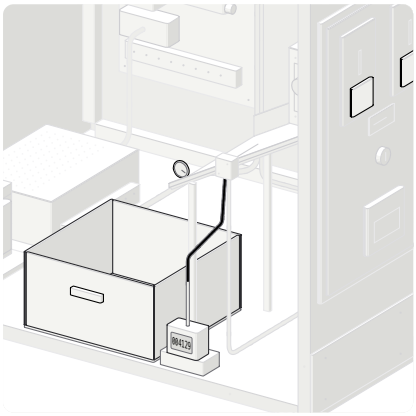

03

Into the cash box


The coin drops 27 cm into the open cash box, and the meter counts it.

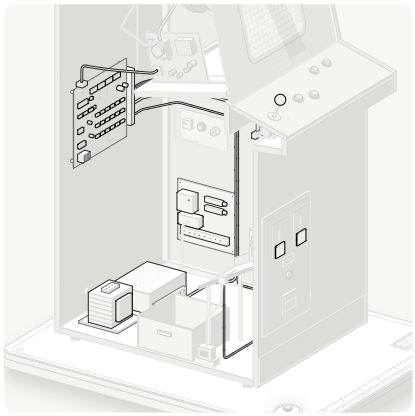

04

Power and self-test

The same pulse latches the power relay. The marquee strikes, the tube heats and the board tests its RAM and ROMs.

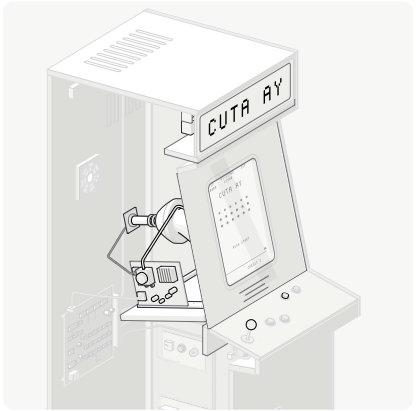

05

Attract mode

After about 2 s the picture appears, drawn up and down the glass, and the game shows itself off until someone presses start.

WHY IS THE SCREEN ON ITS SIDE?

The game is taller than it is wide, so the monitor is mounted on its side. Its scan lines run up and down the glass, and at power-off the picture collapses to a vertical line.

SPECIFICATION

Style	Upright, 1981	Picture	224 × 288, on its side
Height	178 cm	Line rate	15.734 kHz
Coin	US quarter, 24.26 mm	Warm-up	About 2 s
Drop	27 cm into the cash box		