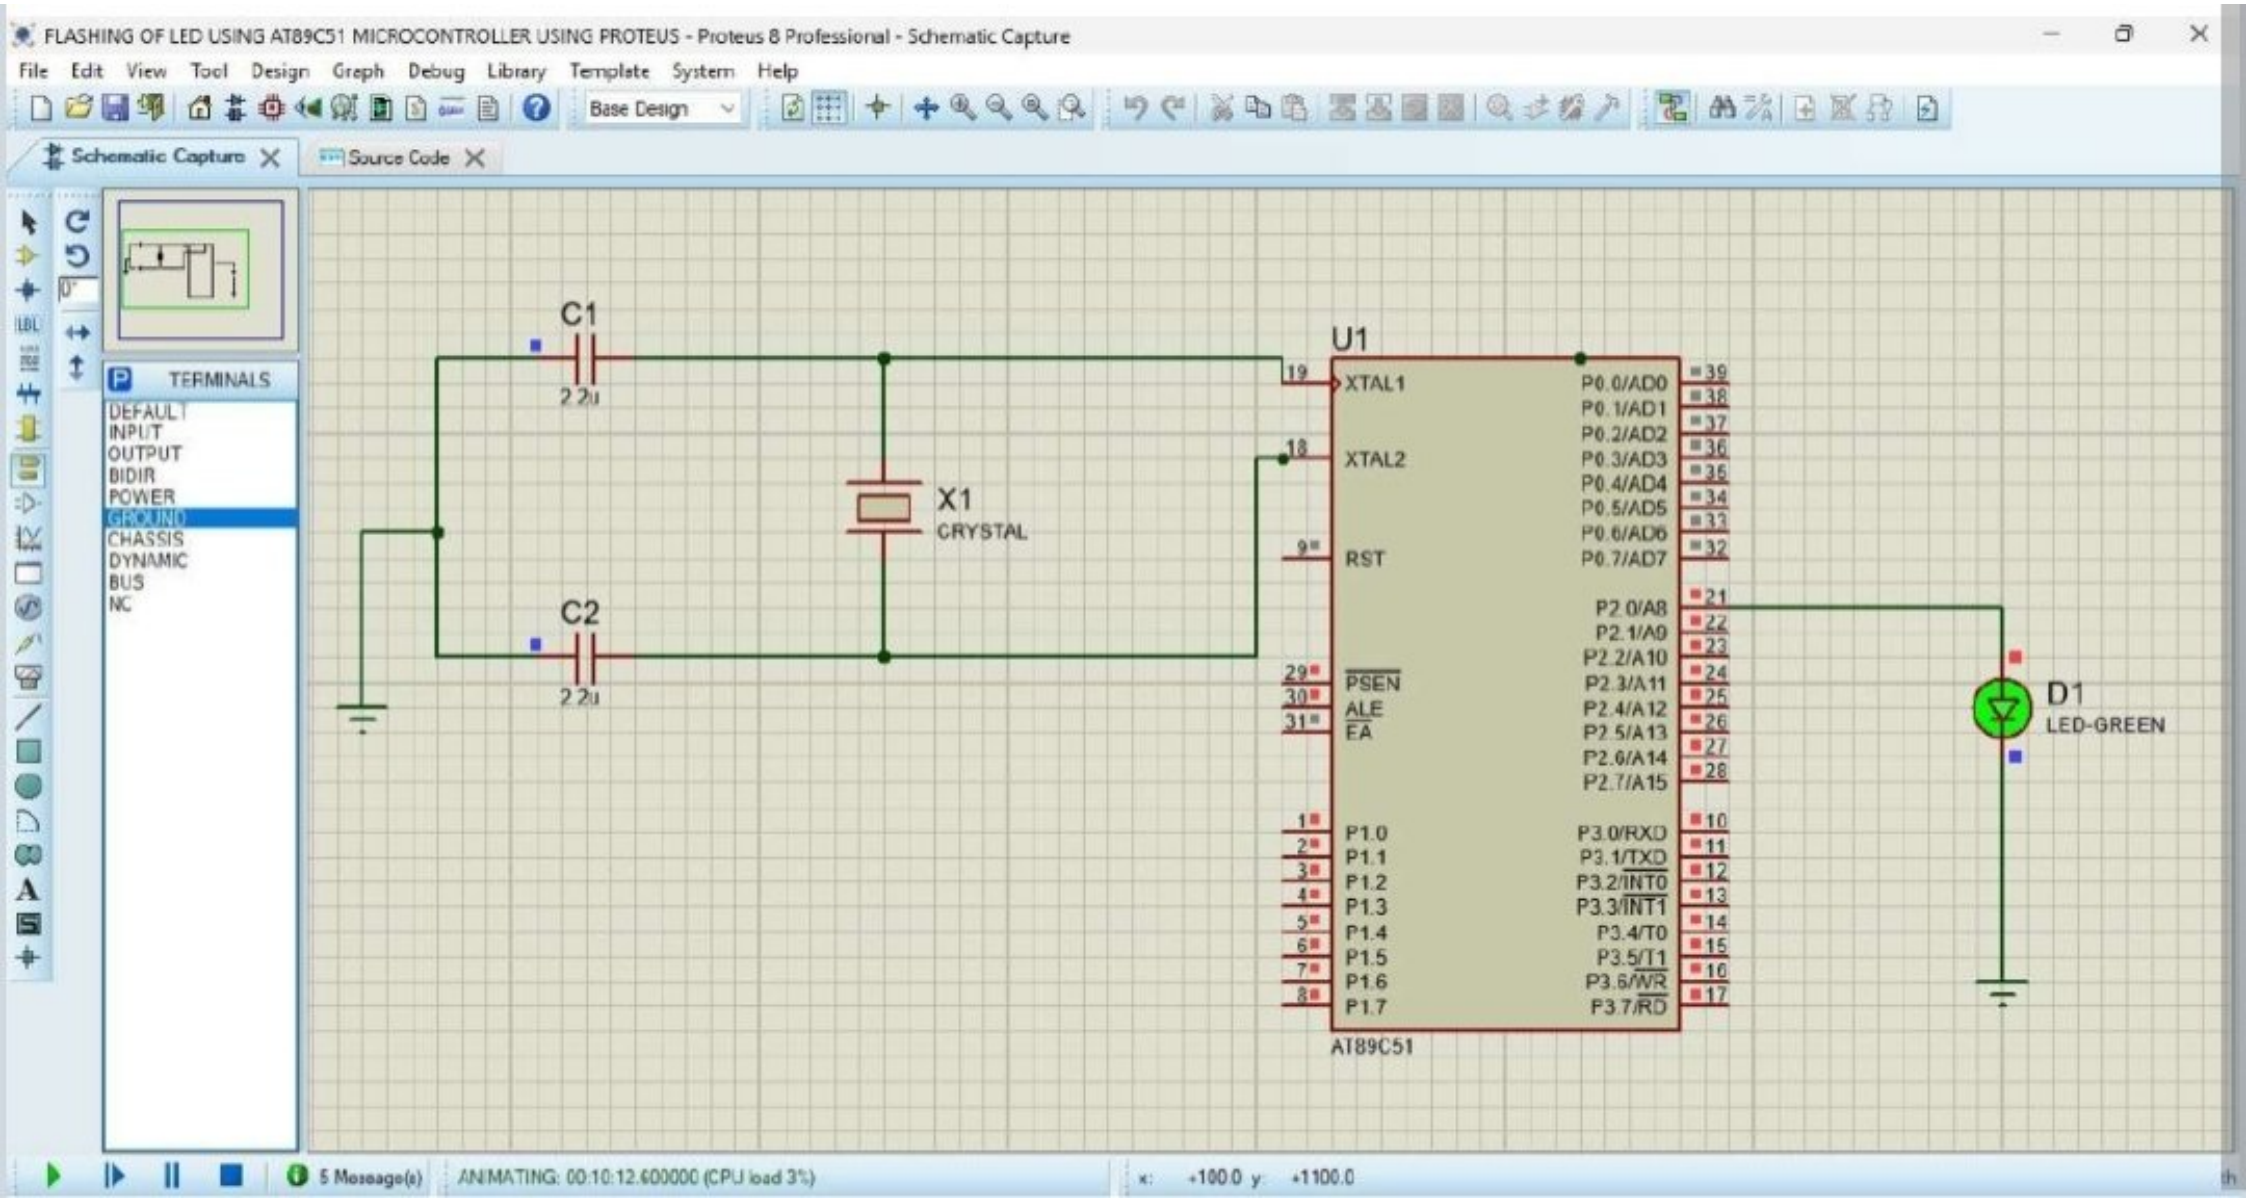

FLASHING OF LED USING AT89C51 MICROCONTROLLER USING PROTEUS - Proteus 8 Professional - Schematic Capture
File Edit View Tool Design Graph Debug Library Template System Help
Base Design
Schematic Capture
Source Code
TERMINALS
DEFAULT
INPUT
OUTPUT
BIDIR
POWER
GROUND
CHASSIS
DYNAMIC
BUS
NC
C1
22u
C2
22u
X1
CRYSTAL
U1
XTAL1
XTAL2
RST
PSEN
ALE
EA
P1.0
P1.1
P1.2
P1.3
P1.4
P1.5
P1.6
P1.7
P0.0/AD0
P0.1/AD1
P0.2/AD2
P0.3/AD3
P0.4/AD4
P0.5/AD5
P0.6/AD6
P0.7/AD7
P2.0/A8
P2.1/A9
P2.2/A10
P2.3/A11
P2.4/A12
P2.5/A13
P2.6/A14
P2.7/A15
P3.0/RXD
P3.1/TXD
P3.2/INT0
P3.3/INT1
P3.4/T0
P3.5/T1
P3.6/WR
P3.7/RD
AT89C51
D1
LED-GREEN
5 Message(s)
ANIMATING: 00:10:12.600000 (CPU load 3%)
x: +100.0 y: +1100.0

EXP 1 - Proteus 8 Professional - Source Code

File Project Build Edit Debug System Help

Schematic Capture | Source Code

Projects

AT89C51(U1)
Source Files
main.asm

main.asm

```
;=================================================================
;ORG 0000H

UP:   SETB P2.0
      ACALL DELAY

      CLR P2.0
      ACALL DELAY

      SJMP UP

DELAY:  MOV R5,#10
L1:     MOV R4,#255
L2:     MOV R3,#255
L3:     DJNZ R3,L3
        DJNZ R4,L2
        DJNZ R5,L1
        RET
        END
```

VSM Studio Output

Activate Windows
Go to Settings to activate Windows.

11 Messag...

Ready