

Measurement sheet - lower bulkhead v1 - page 1: top and bottom view

Top view: part standing on its bottom face, looking at the parting face. Bottom view: part upside down, looking at the face that sits on the chassis plate.

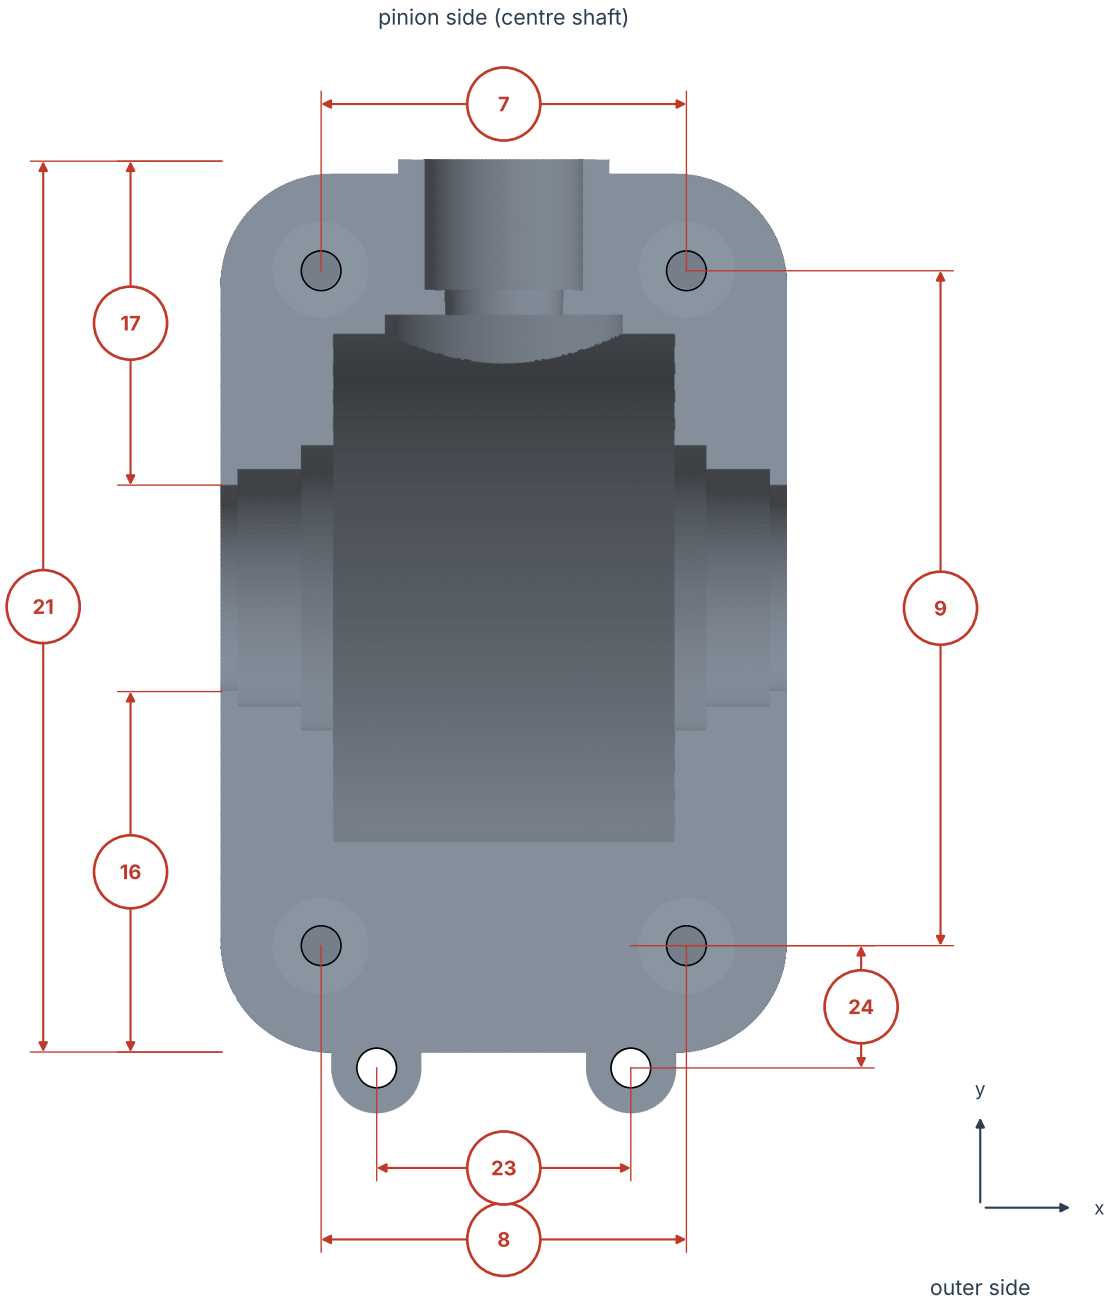


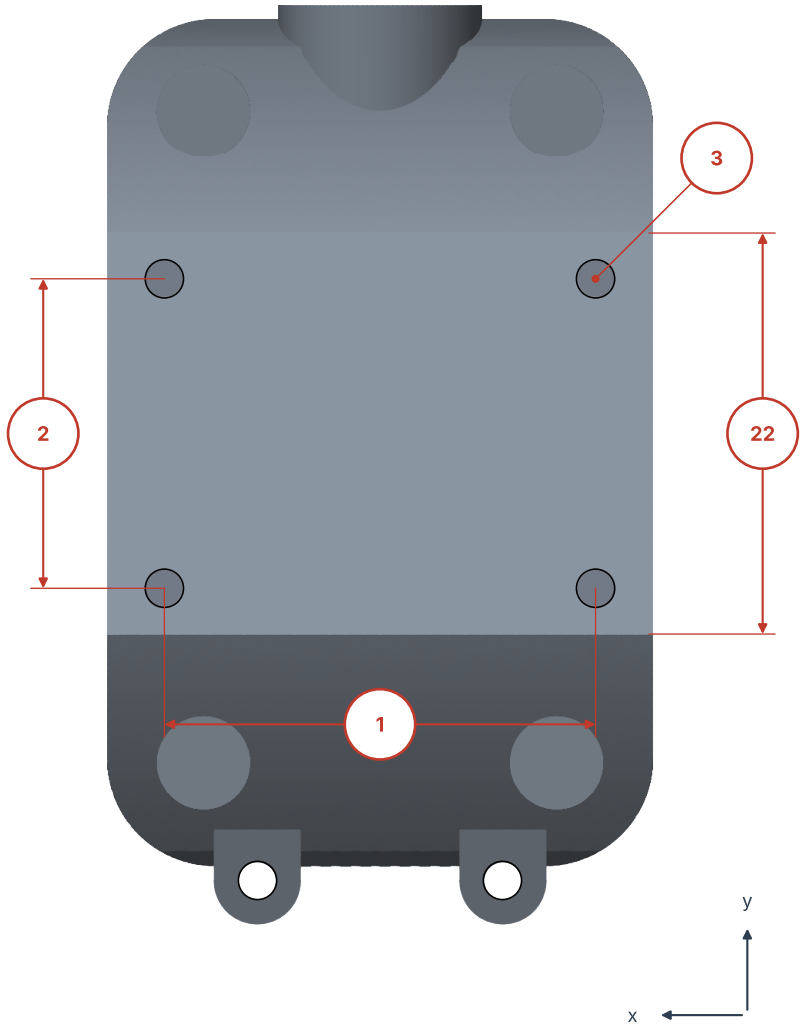


Measurement sheet - lower bulkhead v1 - page 2: sections

Section A-A along the pinion axis (x = 0), seen from the side. Section B-B through the diff axis, seen from the pinion side.

Section A-A (x = 0)

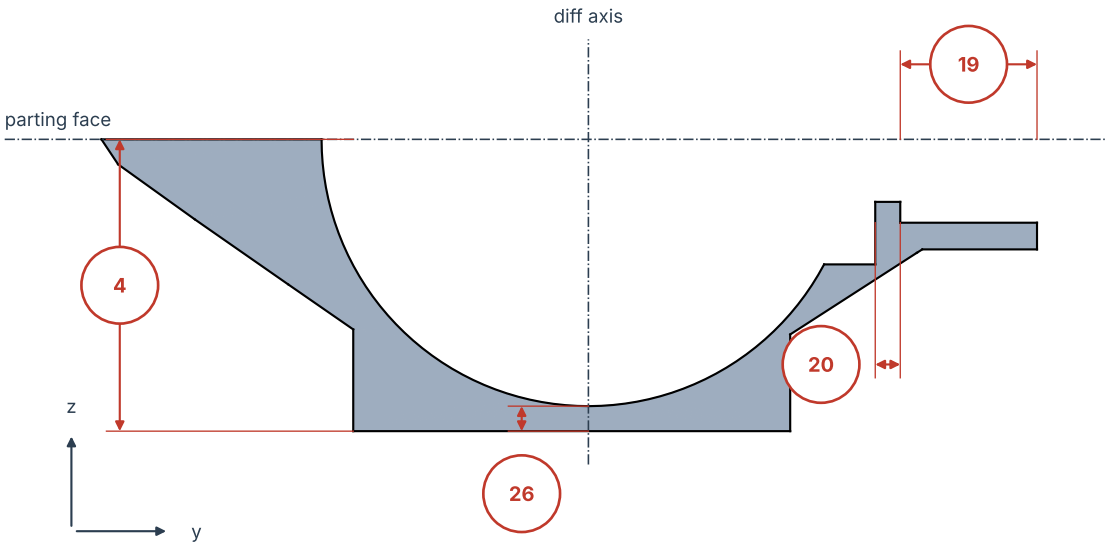


Section B-B (diff axis)

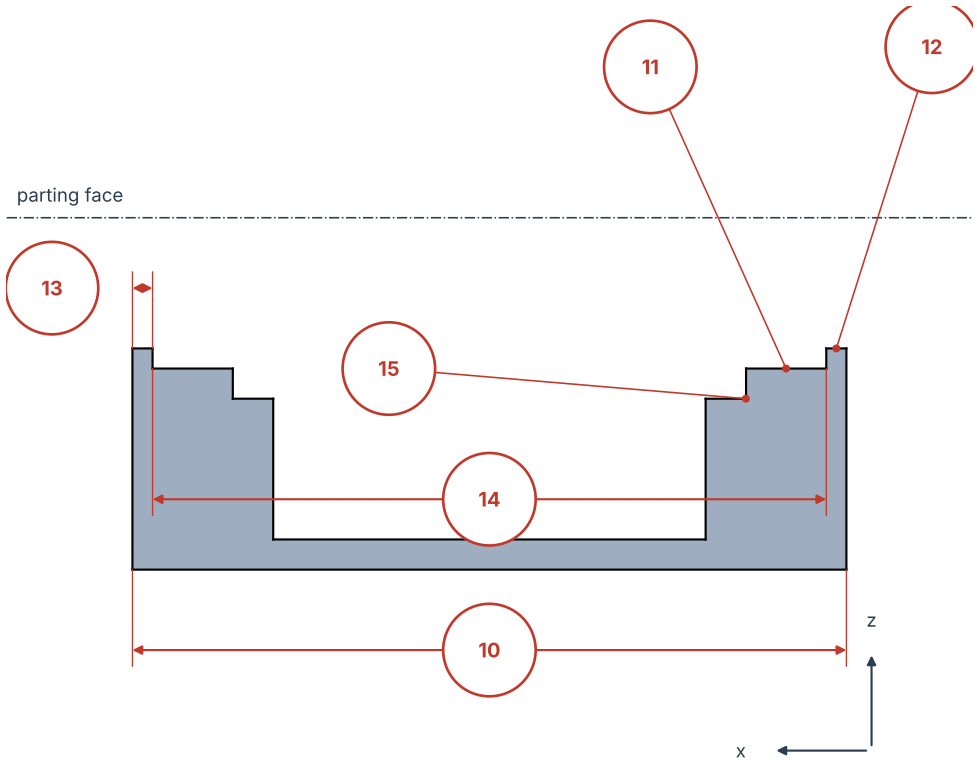


Measurement sheet - lower bulkhead v1 - page 3: side and end view

Side view: looking at a diff bearing wall. End view: looking at the pinion housing.

Side view

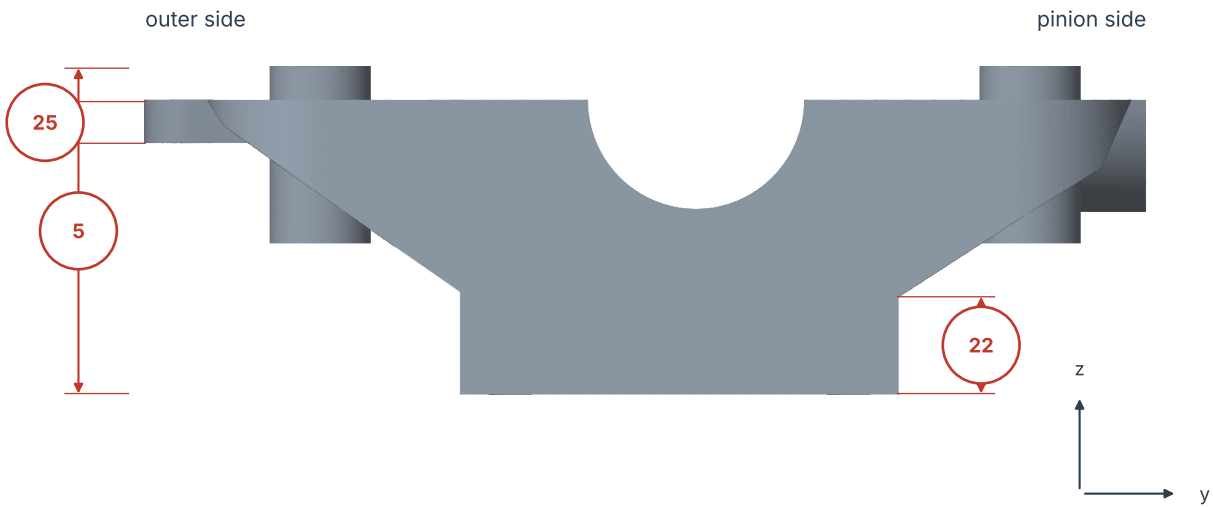

End view (pinion side)

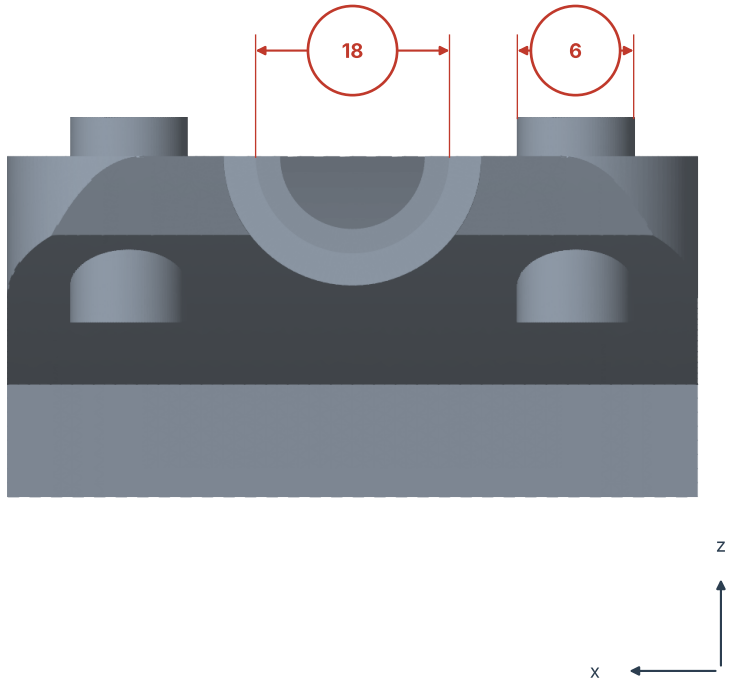

Measurement sheet - lower bulkhead v1 - page 4: values

Priority A: interfaces (holes, bearing seats, screw bosses). Priority B: shape. Model values are estimates from photos unless the parameter file states otherwise. All values in mm.

No.	Prio	Feature	How to measure	Model v1	Measured
1	A	Bottom holes: spacing across (x)	inside jaws, far edge to far edge, minus hole diameter	28.17	
2	A	Bottom holes: spacing along (y)	as no. 1	20.22	
3	B	Bottom holes: diameter / depth	inside jaws / depth rod	2.5 / 8.0	
4	A	Height: bottom face to parting face	part on a flat surface, depth rod or outside jaws	17.5	
5	A	Height: bottom face to top of the bosses (pinion side / outer side)	as no. 4	19.5 / 19.5	
6	B	Top bosses: outer diameter	outside jaws	6.0	
7	A	Top boss holes: spacing across, pinion side (M3×10)	as no. 1	23.0	
8	A	Top boss holes: spacing across, outer side (M3×8)	as no. 1	23.0	
9	A	Top boss holes: spacing along (y)	as no. 1	42.5	
10	B	Width over the outer faces of the diff bearing walls	outside jaws	35.5	
11	A	Diff bearing seat: diameter (width of the half bore at the parting face)	inside jaws	15.0	
12	A	Diff bearing lip: opening diameter	inside jaws at the outer face	13.0	
13	A	Diff bearing lip: thickness	outside jaws or depth rod	1.0	
14	A	Spacing of the inner faces of the two lips (= outer faces of the diff bearings)	inside jaws across the cavity	33.5	
15	B	Inner shoulder of the diff seats: present? If yes, spacing of the shoulders	inside jaws	none	
16	A	Outer end face to the near edge of the diff half bore (lip opening)	depth rod along the parting face	22.7	
17	A	Pinion housing end face to the near edge of the diff half bore (lip opening)	as no. 16	20.4	
18	A	Pinion bearing seat: diameter	inside jaws at the parting face	10.0	
19	A	Pinion bearing seat: length (shoulder face to housing end face)	depth rod	8.2	
20	A	Pinion shoulder: thickness / opening diameter	outside / inside jaws	1.5 / 7.5	
21	B	Overall length at the parting face (outer end to pinion housing end)	outside jaws	56.1	
22	B	Narrow lower section: length (y) / height	outside jaws	26.2 / 5.8	
23	A	Sway bar holes: spacing	as no. 1	16.0	
24	A	Sway bar hole to the outer top boss hole, along (y)	inside jaws, far edges, minus diameters / 2	7.7	
25	B	Sway bar tabs: thickness / top face below the parting face	outside jaws / depth rod	2.5 / 0	
26	B	Floor thickness of the cavity (no. 4 minus depth from the parting face to the floor)	depth rod	1.5	
27	A	Diff: outer diameter of the ring gear	outside jaws on the diff	max. 30.0	
28	A	Diff with both bearings: distance over the outer faces of the bearings (compare no. 14)	outside jaws on the diff	33.5	
29	B	Pinion gear (17T): outer diameter	outside jaws	max. 13.0	
30	B	4 small holes on the outer end face: function, diameter, positions	photo with ruler	not modelled	