

Process Manager Configuration Forms

PM88-600

Implementation
Process Manager – 1

Process Manager
Configuration Forms

PM88-600

Release 681

09/08

**This document was last updated for R681.
For information about those parameters introduced post R681,
refer to the PM Family Parameter Reference Dictionary.**

Notices and Trademarks

**Copyright 2002 –2008 by Honeywell Inc.
September 2008**

While this information is presented in good faith and believed to be accurate, Honeywell disclaims the implied warranties of merchantability and fitness for a particular purpose and makes no express warranties except as may be stated in its written agreement with and for its customers.

In no event is Honeywell liable to anyone for any indirect, special or consequential damages. The information and specifications in this document are subject to change without notice.

Other brand or product names are trademarks of their respective owners.

Honeywell International
Process Solutions
2500 West Union Hills Drive
Phoenix, AZ 85027
1-800 343-0228

About This Publication

This publication supports TPS System network Release 681. TPS is the evolution of TDC 3000.

This manual consists of configuration forms. These forms are designed to facilitate the collection and organization of data for subsequent entry into the TPS system through the Universal Station.

Support and Other Contacts

Location	Organization	Address	Phone/Facsimile
United States and Canada	Honeywell Solution Support Center	Honeywell TAC, MS P13, 2500 West Union Hills Drive, Phoenix, AZ, 85027	Phone: 1-800 822-7673 602- 313-5558 (In Arizona) Facsimile: (602) 313-3293
Note: Calls are answered by dispatcher between 6:00 A.M. and 4:00 P.M. Mountain Standard Time. Emergency calls outside normal working hours are received by an answering service and returned within one hour.			
Europe	Honeywell TAC-EMEA	TAC-BE02 Hermes Plaza Hermeslaan, 1HB-1831 Diegem, Belgium	Phone: +32-2-728-2732 Facsimile: +32-2-728-2696
Pacific	Honeywell Global TAC – Pacific	Honeywell Limited Australia 5 Kitchener Way Burswood 6100, Western Australia Email: GTAC@honeywell.com	Phone: 1300-300-4822 (toll free within Australia) +61-8-9362-9559 (outside Australia) Facsimile: +61-8-9362-9564
India	Honeywell Global TAC – India	Honeywell Automation India Ltd. 56 and 57, Hadapsar Industrial Estate Hadapsar, Pune –411 013, India Email: Global-TAC- India@honeywell.com	Phone: +91-20- 66039400 Facsimile: +91-20- 66039800
Korea	Honeywell Global TAC – Korea	Honeywell Co., Ltd 17F, Kikje Center B/D, 191, Hangangro-2Ga Yongsan-gu, Seoul, 140- 702, Korea Email: Global-TAC- Korea@honeywell.com	Phone: +82-2-799-6317 +82-11-9227-6324 Facsimile: +82-2-792-9015

Location	Organization	Address	Phone/Facsimile
People's Republic of China	Honeywell Global TAC – China	Honeywell (China) Co., Ltd 33/F, Tower A, City Center, 100 Zunyi Rd., Shanghai 200051, People's Republic of China Email: Global-TAC-China@honeywell.com	Phone: +86- 21-52574568
Singapore	Global TAC – South East Asia	Honeywell Private Limited Honeywell Building 17, Changi Business Park Central 1, Singapore 486073 Email: GTAC-SEA@honeywell.com	Phone: +65-6580-3500 Facsimile: +65-6580-3501 +65-6445-3033
Taiwan	Global TAC – Taiwan	Honeywell Taiwan Ltd. 17F-1, No. 260, Jhongshan 2nd Road. Cianjhen District Kaohsiung, Taiwan, ROC Email: Global-TAC-Taiwan@honeywell.com	Phone: +886- 7- 536 2567 Facsimile: +886-7-536 2039
Japan	Global TAC – Japan	Honeywell Japan Inc. New Pier Takeshiba, South Tower Building, 20th Floor, 1-16-1 Kaigan, Minato-ku, Tokyo 105-0022, Japan Email: Global-TAC-JapanJA25@honeywell.com	Phone: +81-3-6730-7160 Facsimile: +81-3-6730-7228
Elsewhere	Call your nearest Honeywell office.		
World Wide Web	Honeywell Solution Support Online: http://www.honeywell.com/ps		
Training Classes	Honeywell Automation College: http://www.automationcollege.com		

Table of Contents

PROCESS MANAGER CONFIGURATION FORMS

PM CONFIGURATION FORM INSTRUCTIONS

FILLING OUT PAPER FORMS

ENTERING DATA FROM THE FORMS INTO THE SYSTEM

<u>Form Name</u>	<u>Form ID</u>
UCN Node Configuration	PM88-601A
PM Node Specific Configuration	PM88-601B

This publication also contains the following point forms in numerical sequence. They are listed here in alphabetical order for convenience.

Analog Input Data Point	PM88-602
Analog Output Data Point	PM88-603
Auto Manual Regulatory Control Algorithm	PM88-604
Calculator Regulatory PV Algorithm	PM88-605
Data Acquisition Regulatory PV Algorithm	PM88-606
Digital Composite Data Point	PM88-607
Digital Input Status Point	PM88-608A
Digital Input Latched Point	PM88-608B
Digital Input Accum Point	PM88-608C
Digital Output Data Point	PM88-609
Flag	PM88-628
Flow Compensation Regulatory PV Algorithm	PM88-610
General Linearization Regulatory PV Algorithm	PM88-611
High Low Average Regulatory PV Algorithm	PM88-612
Incremental Summer Regulatory Control Algorithm	PM88-613
Library	PM88-640
Logic Data Point	PM88-614
Middle of Three Regulatory PV Algorithm	PM88-615
Numeric	PM88-630
Override Selector Regulatory Control	PM88-616
PID External Reset Feedback Reg. Control Algorithm	PM88-618
PID Feedforward Regulatory Control Algorithm	PM88-619
PID Regulatory Control Algorithm	PM88-617
Position Proportional Regulatory Control Algorithm	PM88-620
Process Module	PM88-627
Rampsoak Regulatory Control Algorithm	PM88-621
Ratio Control Regulatory Control Algorithm	PM88-622
Summer Regulatory Control Algorithm	PM88-635
Summer Regulatory PV Algorithm	PM88-623
Switch Regulatory Control Algorithm	PM88-624
Timer	PM88-629
Totalizer Regulatory PV Algorithm	PM88-625
Variable Deadtime with Leadlag Reg. PV Algorithm	PM88-626

PM Configuration Form Instructions

FILLING OUT PAPER FORMS

Where to Find Process Manager Parameter and Data Point Help Information

Refer to the PM Control Functions and Algorithms and to the PM Parameter Reference Dictionary Publications in the Implementation/ Process Manager binders 1 and 2.

PM88-602
Page 1 of 6
05/01

Universal Station's configuration display where values that have been written on the form and parameter options that have been circled on the form will be keyed in and selected, respectively.

PM Analog Input Point

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Point Assignment Display

NAME Tag Name	_____	range = Not applicable default = Blank
PNTFORM Point Form	FULL Component	Point is fully displayed and alarmed Pt. Is partially displayed but not alarmed

If the point is of the form **Component**, parameters within boxes that have **thick, bold borders** do not apply.

Lines indicate **what parameter/s or parameter-option/s** apply when an option is selected for a previous parameter.

PVSRCOPT PV Source Option	Only Auto	N/A if PNTFORM = Component.
	All	PV Source selection is not available and Field wiring or memory fetch supplies PV. Selection from PVSOURCE is available. And Operator/CL-program may supply PV.
PVSOURCE PV Source	Auto Man Sub	Field wiring or memory fetch supplies PV. PV is supplied by Operator or program. A value is substituted by a CL program.

If parameters within a box do not Apply when some other parameter Option is selected, that box is Indicated by

NMODATTR Normal Mode Attribute	None Operator Program	N/A if NMODE = None Parameter NMODE sets "normal" mode Operator sets "normal" operating mode Program sets "normal" operating mode
-----------------------------------	-----------------------------	--

Lower-level alarm trip points must Have a value specified before Higher-level alarm trips points apply. The lines show the scheme.

Alarming Display N/A if PNTFORM = Component

PVHITP PV High Alarm Trip Point	_____	range = PVLOTP - PVHHTP, & NaN default = NaN
PVHIPR PV High Alarm Priority	NoAction Journal Low	High Emergency Printer JnlPrint
PVLOTP PV Low Alarm Trip Point	_____	range = PVLLTP - PVHITP, & NaN default = NaN
PVLOPR PV Low Alarm Priority	NoAction Journal Low	High Emergency Printer JnlPrint
PVHHTP PV Hi Hi Alarm Trip Point	_____	range = PVHITP to PVEUHI, & NaN default = NaN
PVHHPR PV High High Alarm Priority	NoAction Journal Low	High Emergency Printer JnlPrint
PVLLTP PV Low Low Alarm Trip Point	_____	range = PVEULO - PVLOTP, & NaN default = NaN

ENTERING DATA FROM THE FORMS INTO THE SYSTEM

Select **NETWORK INTERFACE MODULE** from Engr's Main Menu to get NIM BUILD TYPE SELECT MENU

UCN NODE CONFIGURATION Form PM88-601A	PM NODE SPECIFIC CONFIGURATION Form PM88-601B	PROCESS POINT BUILDING Forms PM88-602-630	NIM LIBRARY CONFIGURATION Form PM88-640
--	---	--	---

Select a point type from this POINT BUILD SELECT MENU

Reg Ctl	Anal in/out	Dig in/out	Pulse In	Logic	Numeric	Proc Mod	Flag	Timer	Reg PV
---------	-------------	------------	----------	-------	---------	----------	------	-------	--------

Select an algorithm type depending upon what is circled on the form for parameter CTLALGID

Pid	PidFf	PidErfb	RatioCtl	IncrSum	Switch	PosProp	AutoMan	RampSoak	ORSeL
-----	-------	---------	----------	---------	--------	---------	---------	----------	-------

Select an algorithm type depending upon what is circled on the form for parameter PVALGID

DataAcq	FlowComp	MidOf3	HiLoAvg	Summer	VdtLdLag	Totalizr	GenLin	CalcuLtr
---------	----------	--------	---------	--------	----------	----------	--------	----------

PM UCN NODE Configuration

PM88-601A

Page 1 of 2

12/01

	Engineer:	Date:
--	-----------	-------

UCN Node Configuration Display

NOTE

This form is intended primarily for use in configuring each PM on your system by selecting PM for NODETYP below. This same form can be used to configure each NIM on your system by selecting NIM for NODETYP (some different targets will appear as shown). If your system has other UCN devices (PMS, APMs, HPMs, LMs, SMs), the NIMs can also be configured using the forms contained in the documentation for those devices.

NTWKNUM Network Number Of The NIM Being Configured		range = 1 to 20 default = Not applicable
NODENUM UCN Address Of The Node Being Configured		range = 1 to 64 default = Not applicable
NODETYP Type Of Node On The UCN	☐ NotConfig ☐ Nim ☒ PM ☐ APM ☐ HPM ☐ LM ☐ SM ☐ PM ☐ APM ☐ HPM ☐ LM ☐ SM	No UCN item configured at this address Network Interface Module Process Manager Network Advanced Process Manager Network High-Performance Process Manager Network Logic Manager Network Safety Manager Network
LOADSCOP Load Scope	☐ NimOnly ☒ NimAndPm	Configured data will go to the NIM only Configured data goes to NIM and HPM, PM, APM, LM, or SM
NMSGTXT Number of Message Text Items (Not Applicable for PM)		range = 15 default = 0
TIMESYNC Soe Time Synchronization (Not Applicable for PM)	☐ Disable ☒ Enable	range = Not applicable default = Disable
NODEASSN Node Assignment	☒ ThisNim ☐ RemotNim	NIM assigned to report alarms and perform checkpointing for networking specified in NTWKNUM Additional NIM on a network that already has "This NIM" defined

PV State Text for all DigComp type points

MOVSVTXT PV-Moving Text For All DigComp Points		range = Not applicable default = "MOVING"
BADSVTXT Bad-PV Text For All DigComp Points		range = Not applicable default = "BAD"

PM UCN Node Configuration

Status Message Text Configuration Display

N/A for PM; N/A if NMSGTXT =0

MSGTXT(1) Status Message Text #1	_ _ _ _ _ _ _	<i>range = Eight Character String</i> <i>default = Blank</i>
MSGTXT(2) Status Message Text #2	_ _ _ _ _ _ _	<i>range = Eight Character String</i> <i>default = Blank</i>
MSGTXT(3) Status Message Text #3	_ _ _ _ _ _ _	<i>range = Eight Character String</i> <i>default = Blank</i>
MSGTXT(4) Status Message Text #4	_ _ _ _ _ _ _	<i>range = Eight Character String</i> <i>default = Blank</i>
MSGTXT(5) Status Message Text #5	_ _ _ _ _ _ _	<i>range = Eight Character String</i> <i>default = Blank</i>
MSGTXT(6) Status Message Text #6	_ _ _ _ _ _ _	<i>range = Eight Character String</i> <i>default = Blank</i>
MSGTXT(7) Status Message Text #7	_ _ _ _ _ _ _	<i>range = Eight Character String</i> <i>default = Blank</i>
MSGTXT(8) Status Message Text #8	_ _ _ _ _ _ _	<i>range = Eight Character String</i> <i>default = Blank</i>
MSGTXT(9) Status Message Text #9	_ _ _ _ _ _ _	<i>range = Eight Character String</i> <i>default = Blank</i>
MSGTXT(10) Status Message Text #10	_ _ _ _ _ _ _	<i>range = Eight Character String</i> <i>default = Blank</i>
MSGTXT(11) Status Message Text #11	_ _ _ _ _ _ _	<i>range = Eight Character String</i> <i>default = Blank</i>
MSGTXT(12) Status Message Text #12	_ _ _ _ _ _ _	<i>range = Eight Character String</i> <i>default = Blank</i>
MSGTXT(13) Status Message Text #13	_ _ _ _ _ _ _	<i>range = Eight Character String</i> <i>default = Blank</i>
MSGTXT(14) Status Message Text #14	_ _ _ _ _ _ _	<i>range = Eight Character String</i> <i>default = Blank</i>
MSGTXT(15) Status Message Text #15	_ _ _ _ _ _ _	<i>range = Eight Character String</i> <i>default = Blank</i>

PM Node Specific Configuration

PM88-601B

Page 1 of 9

12/01

	Engineer:	Date:
--	-----------	-------

Node Specific Configuration Display

NTWKNUM Network Number Currently Being Configured		<i>range = 1 to 20</i> <i>default = Not applicable</i>
NODENUM APMM, PMM, or LMM		<i>range = 1 to 64</i> <i>default = Not applicable</i>
NODETYP Node Type	PM APM, HPM, LM or SM	An Process Manager Is Being Configured If an APM, HPM, LM or SM is being configured, go to the appropriate forms for those devices.

CTLOPT PMM Control Processor Option	On Off	On – All point types can be configured Off – No DigComp, Logic, RegCtl. RegPV, or Sequence Applications
---	-----------	--

NCTLSL # Of Regulatory Control Slots		<i>range = 0 to 160</i> <i>default = 100</i>
NFASTCTL # Of Fast Reg. Control Slots		<i>range = 0 to 40 but ≤ NCTLSLOT</i> <i>default = 0</i>
NPV SLOT # Of Regulatory PV Slots		<i>range = 0 to 80</i> <i>default = 20</i>
NFASTPV # Of Fast Reg. PV Slots		<i>range = 0 to 40 but ≤ NPVSLOT</i> <i>default = 0</i>
NLOGSLOT # Of Logic Slots		<i>range = 0 to 80</i> <i>default = 25</i>
NFASTLOG # Of Fast Logic Slots		<i>range = 0 to 40 but ≤ NLOGSLOT</i> <i>default = 0</i>
NDCSLOT # Of Fast Digital Composite Slots		<i>range = 0 to 255</i> <i>default = 150</i>
NFASTDC # Of Fast Digital Composite Slots		<i>range = 0 to 255 but ≤ NDCSLOT</i> <i>default = 0</i>
SEQPROC Processing Units/Proc. Mod. Data Point/Scan	1_PU 2_PU	<i>Up to 40 PMDP's per 1/4 Sec.Cycle</i> <i>Up to 20 PMDP's per 1/4 Sec.Cycle</i>
NPMSLOT # Of Process Module Slots		<i>range = 0 to 160</i> <i>default = 0</i>
NNUMERIC # Of Numerics		<i>range = 0 to 2047 (multiple of 16 or 2047)</i> <i>default = 256</i>
SCANRATE PMM'S Scan Rate in Times Per Second	<u>Null</u> Reg1Log1 Reg1Log2 Reg1Log4 Reg2Log2 Reg2Log4 Reg4Log4	RegCtl & <u>RegPV</u> Logic & <u>DigComp</u> 1 per sec. 1 per sec. 1 per sec. 2 per sec. 1 per sec. 4 per sec. 2 per sec. 2 per sec. 2 per sec. 4 per sec. 4 per sec. 4 per sec.

PM Node Specific Configuration

	Engineer:	Date:
--	-----------	-------

Node Specific Configuration Display (Contd.)

PKGOPT	Nonredun	No redundant PMMs; No redundant IOMs
PMM Hardware Packaging Option	Redun	Redundant PMMs in same file; No redund. IOMs
	Redun_2F	Redundant PMMs in separate files; No redund. IOMS
	Redun_IO	Redundant PMMs (sep. files) & redund.I/O Modules
	Nodefault	No defaults for I/O Module/Card Positions

IO Module Configuration Display - N/A if NTWKNUM = 0

The parameters listed below make up one entry or line in the IO Module Configuration Tables. The IO Module Numbers (Modnum) are predefined on the Data Entry Displays. Fill in a table (on the following pages) appropriate for the selected packaging option. Refer to the parameters below for descriptions/defaults.

MODNUM I/O Module Number		<i>range</i> = 1 to 40 <i>default</i> = Not applicable	
IOMFILEA(#) IOM -A File Number		<i>range</i> = 0 – 8 <i>default</i> = 1(0 = not connected)	
IOMCARDA(#) IOM-A Card Number		<i>range</i> = 0 – 15 (0=not connected) <i>default</i> = Varies with PKGOPT and MODNUM	
IOMTYPE(#) Module Type	PI Pulse Input HLAI High Level Analog Input SI IO Module Components AO Analog Output DO Digital Output AO_16 16 Pt. Analog Output DO_32 32 Pt. Digital Output	None LLAI Low Level Analog Input DI Digital Input LLMUX Low Level Multiplexer (also includes RHMUX) STIM. Smart Xmitter Intf. Modl DISOE Digital Input for SOE	
FAILOPT Analog/Digital Output Option		Hold Unpower	The hardware output is maintained at Its current setting The hardware output is unpowered
FREQ6050 AC Line Period		FiftyHZ SixtyHZ	Line Frequency is 50 Hz Line Frequency is 60 Hz

When Pkgopt = **Redun_IO** or **Nodefault**, each redundant IO Module also has the following options

IOREDOP(#) I/O Module Redundancy Option	Nonredun Redun	Not redundant Redundant
IOMFILEB(#) Corresponding IOM-B File Number	<i>range</i> = 0 - 8 (0 = not connected) <i>default</i> = Blank for Nodefault, 2-6 for Redun_IO	
IOMCARDB(#) Corresponding IOM-BCard Number	<i>range</i> = 0 -15 (0 = not connected) <i>default</i> = Blank for Nodefault, See Pg 6-7 for Redun_IO	

PM Node Specific Configuration

PM88-601B

Page 3 of 9

12/01

IO Module Configuration Table

	Engineer:	Date:
--	-----------	-------

IO Module Configuration Display – N/A if NTWKNUM = 0

For each IO Module, select the IO Module type (IOMTYPE) that applies. If the type selected is AO or DO, Select a failure option (FAILOPT). If the type is STIM OR LLMUX, select an ac Line Frequency (FREQ6050).

****CAUTION – Use this part of the form only if PKGOPT on page 2 = Nonredun. ****

NOTE: IOMTYPE LLMUX also includes RHMUX.

MOD NUM	IOM-A FILE	IOM-A CARD		IOM TYPE				FAILOPT				IOMTYPE		FREQ6050			
1	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
2	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
3	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
4	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
5	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
6	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
7	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
8	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
9	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
10	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
11	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
12	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
13	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
14	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
15	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
16	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
17	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
18	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
19	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
20	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
21	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
22	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
23	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
24	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
25	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
26	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
27	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
28	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
29	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
30	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
31	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
32	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
33	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
34	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
35	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
36	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
37	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
38	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
39	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
40	LI	1	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ

PM Node Specific Configuration

IO Module Configuration Table

	Engineer:	Date:
--	------------------	--------------

IO Module Configuration Display – N/A if NTWKNUM = 0 For each IO Module, select the IO Module type (IOMTYPE) that applies. If the type selected is AO or DO, select a failure option (FAILOPT). If the type is STIM OR LLMUX, select an ac Line Frequency (FREQ6050).

****CAUTION – Use this part of the form only if PKGOPT on page 2 = Redun ****

NOTE: IOMTYPE LLMUX also includes RHMUX.

MOD NUM	IOM-A FILE	IOM-A CARD	IOM TYPE							FAILOPT				IOMTYPE		FREQ6050	
1.	<u>11</u>	<u>111</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
2.	<u>11</u>	<u>112</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
3.	<u>11</u>	<u>113</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
4.	<u>11</u>	<u>114</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
5.	<u>11</u>	<u>115</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
6.	<u>12</u>	<u>101</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
7.	<u>12</u>	<u>102</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
8.	<u>12</u>	<u>103</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
9.	<u>12</u>	<u>104</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
10.	<u>12</u>	<u>105</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
11.	<u>12</u>	<u>106</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
12.	<u>12</u>	<u>107</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
13.	<u>12</u>	<u>108</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
14.	<u>12</u>	<u>109</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
15.	<u>12</u>	<u>110</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
16.	<u>12</u>	<u>111</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
17.	<u>12</u>	<u>112</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
18.	<u>12</u>	<u>113</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
19.	<u>12</u>	<u>114</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
20.	<u>12</u>	<u>115</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
21.	<u>13</u>	<u>101</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
22.	<u>13</u>	<u>102</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
23.	<u>13</u>	<u>103</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
24.	<u>13</u>	<u>104</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
25.	<u>13</u>	<u>105</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
26.	<u>13</u>	<u>106</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
27.	<u>13</u>	<u>107</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
28.	<u>13</u>	<u>108</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
29.	<u>13</u>	<u>109</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
30.	<u>13</u>	<u>110</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
31.	<u>13</u>	<u>111</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
32.	<u>13</u>	<u>112</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
33.	<u>13</u>	<u>113</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
34.	<u>13</u>	<u>114</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
35.	<u>13</u>	<u>115</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
36.	<u>14</u>	<u>101</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
37.	<u>14</u>	<u>102</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
38.	<u>14</u>	<u>103</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
39.	<u>14</u>	<u>104</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
40.	<u>14</u>	<u>105</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ

PM Node Specific Configuration

IO Module Configuration Table

PM88-601B
Page 5 of 9
12/01

	Engineer:	Date:
--	-----------	-------

IO Module Configuration Display – N/A if NTWKNUM = 0 For each IO Module, select the IO Module type (IOMTYPE) that applies. If the type selected is AO or DO, select a failure option (FAILOPT). If the type is STIM OR LLMUX, select an ac Line Frequency (FREQ6050).

****CAUTION – Use this part of the form only if PKGOPT on page 2 = Redun ****

NOTE: IOMTYPE LLMUX also includes RHMUX.

MOD NUM	IOM-A FILE	IOM-A CARD	IOM TYPE								FAILOPT		IOMTYPE		FREQ6050		
1	<u>11</u>	<u>111</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
2	<u>11</u>	<u>112</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
3	<u>11</u>	<u>113</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
4	<u>11</u>	<u>114</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
5	<u>11</u>	<u>115</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
6	<u>12</u>	<u>101</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
7	<u>12</u>	<u>102</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
8	<u>12</u>	<u>103</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
9	<u>12</u>	<u>104</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
10	<u>12</u>	<u>105</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
11	<u>12</u>	<u>106</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
12	<u>12</u>	<u>107</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
13	<u>12</u>	<u>108</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
14	<u>12</u>	<u>109</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
15	<u>12</u>	<u>110</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
16	<u>12</u>	<u>111</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
17	<u>12</u>	<u>112</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
18	<u>12</u>	<u>113</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
19	<u>12</u>	<u>114</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
20	<u>12</u>	<u>115</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
21	<u>12</u>	<u>101</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
22	<u>12</u>	<u>102</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
23	<u>12</u>	<u>103</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
24	<u>12</u>	<u>104</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
25	<u>12</u>	<u>105</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
26	<u>12</u>	<u>106</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
27	<u>13</u>	<u>107</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
28	<u>13</u>	<u>108</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
29	<u>13</u>	<u>109</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
30	<u>13</u>	<u>110</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
31	<u>13</u>	<u>111</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
32	<u>13</u>	<u>112</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
33	<u>13</u>	<u>113</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
34	<u>13</u>	<u>114</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
35	<u>13</u>	<u>115</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
36	<u>13</u>	<u>101</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
37	<u>13</u>	<u>102</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
38	<u>13</u>	<u>103</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
39	<u>13</u>	<u>104</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
40	<u>13</u>	<u>105</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ

PM Node Specific Configuration

IO Module Configuration Table

	Engineer:	Date:
--	-----------	-------

IO Module Configuration Display – N/A if NTKWNUM = 0

For each IO Module, select the IO Module type (IOMTYPE) that applies. If there is a redundant IOM, check the Redun blank. If the type selected is AO or DO, select a failure option (FAILOPT). If the type is STIM OR LLMUX, select an ac Line Frequency (FREQ6050).

****CAUTION – Use this part of the form only if PKGOPT on page 2 = Redun_IO****

NOTE: IOMTYPE LLMUX also includes RHMUX.

MOD NUM	IOM-A FILE	IOM-A CARD	Redun √	IOM-B FILE	IOM-B CARD																
						IOMTYPE				FAILOPT				IOMTYPE		FREQ6050					
						REDUN															
						↓	↓							↓	↓	↓	↓	↓			
1.	<u>I1</u>	<u>I06</u>	-	<u>I2</u>	<u>I06</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ	
2.	<u>I1</u>	<u>I07</u>	-	<u>I2</u>	<u>I07</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ	
3.	<u>I1</u>	<u>I08</u>	-	<u>I2</u>	<u>I08</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ	
4.	<u>I1</u>	<u>I09</u>	-	<u>I2</u>	<u>I09</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ	
5.	<u>I1</u>	<u>I10</u>	-	<u>I2</u>	<u>I10</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ	
6.	<u>I1</u>	<u>I11</u>	-	<u>I2</u>	<u>I11</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ	
7.	<u>I1</u>	<u>I12</u>	-	<u>I2</u>	<u>I12</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ	
8.	<u>I1</u>	<u>I13</u>	-	<u>I2</u>	<u>I13</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ	
9.	<u>I1</u>	<u>I14</u>	-	<u>I2</u>	<u>I14</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ	
10.	<u>I1</u>	<u>I15</u>	-	<u>I2</u>	<u>I15</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ	
11.	<u>I3</u>	<u>I01</u>	-	<u>I4</u>	<u>I01</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ	
12.	<u>I3</u>	<u>I12</u>	-	<u>I4</u>	<u>I02</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ	
13.	<u>I3</u>	<u>I13</u>	-	<u>I4</u>	<u>03</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ	
14.	<u>I3</u>	<u>I04</u>	-	<u>I4</u>	<u>I04</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ	
15.	<u>I3</u>	<u>I05</u>	-	<u>I4</u>	<u>I05</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ	
16.	<u>I3</u>	<u>I06</u>	-	<u>I4</u>	<u>I06</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ	
17.	<u>I3</u>	<u>I07</u>	-	<u>I4</u>	<u>I07</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ	
18.	<u>I3</u>	<u>I08</u>	-	<u>I4</u>	<u>I08</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ	
19.	<u>I3</u>	<u>I09</u>	-	<u>I4</u>	<u>I0</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ	
20.	<u>I3</u>	<u>I10</u>	-	<u>I4</u>	<u>I07</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ	

PM Node Specific Configuration

IO Module Configuration Table

PM88-601B
Page 7 of 9
12/01

	Engineer:	Date:
--	-----------	-------

IO Module Configuration Display – N/A if NTWKNUM = 0

For each IO Module, select the IO Module type (IOMTYPE) that applies. If there is a redundant IOM, check the Redun blank. Fill in the file and card locations(s). If the type selected is AO or DO, select a failure option (FAILOPT). If the type is STIM OR LLMUX, select an ac Line Frequency (FREQ6050).

****CAUTION – Use this part of the form only if PKGOPT on page 2 = Redun_IO (Continued)****
NOTE: IOMTYPE LLMUX also includes RHMUX.

MOD NUM	IOM-A FILE	IOM-A CARD	Redun ✓	IOM-B FILE	IOM-B CARD	IOMTYPE										FAILOPT				IOMTYPE		FREQ6050	
						REDUN																	
1.	<u>13</u>	<u>111</u>	—	<u>14</u>	<u>111</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ			
2.	<u>13</u>	<u>112</u>	--	<u>14</u>	<u>112</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ			
3.	<u>13</u>	<u>113</u>	-	<u>14</u>	<u>113</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ			
4.	<u>13</u>	<u>114</u>	-	<u>14</u>	<u>114</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ			
5.	<u>13</u>	<u>115</u>	-	<u>14</u>	<u>115</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ			
6.	<u>15</u>	<u>101</u>	-	<u>14</u>	<u>101</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ			
7.	<u>15</u>	<u>102</u>	-	<u>16</u>	<u>102</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ			
8.	<u>15</u>	<u>103</u>	-	<u>16</u>	<u>103</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ			
9.	<u>15</u>	<u>104</u>	-	<u>16</u>	<u>104</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ			
10.	<u>15</u>	<u>105</u>	-	<u>16</u>	<u>105</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ			
11.	<u>15</u>	<u>106</u>	-	<u>16</u>	<u>106</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ			
12.	<u>15</u>	<u>107</u>	-	<u>16</u>	<u>107</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ			
13.	<u>15</u>	<u>108</u>	-	<u>16</u>	<u>108</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ			
14.	<u>15</u>	<u>109</u>	-	<u>16</u>	<u>109</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ			
15.	<u>15</u>	<u>110</u>	-	<u>16</u>	<u>110</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ			
16.	<u>15</u>	<u>111</u>	-	<u>16</u>	<u>111</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ			
17.	<u>15</u>	<u>112</u>	-	<u>16</u>	<u>112</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ			
18.	<u>15</u>	<u>113</u>	-	<u>16</u>	<u>113</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ			
19.	<u>15</u>	<u>114</u>	-	<u>16</u>	<u>114</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ			
20.	<u>15</u>	<u>115</u>	-	<u>16</u>	<u>115</u>	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ			

PM Node Specific Configuration

IO Module Configuration Table

	Engineer:	Date:
--	-----------	-------

IO Module Configuration Display – N/A if NTKNUM = 0

For each IO Module, select the IO Module type (IOMTYPE) that applies. If there is a redundant IOM, check the Redun blank. If the type selected is AO or DO, select a failure option (FAILOPT). If the type is STIM OR LLMUX, select an ac Line Frequency (FREQ6050).

****CAUTION – Use this part of the form only if PKGOPT on page 2 = Redun_IO (Continued)****

NOTE: IOMTYPE LLMUX also includes RHMUX.

MOD NUM	IOM-A FILE	IOM-A CARD	Redun ✓	IOM-B FILE	IOM-B CARD		IOMTYPE				FAILOPT				IOMTYPE		FREQ6050			
						REDUN														
						↓														
						↓														
1.	⌋	⌋	—	⌋	⌋	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
2.	⌋	⌋	--	⌋	⌋	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
3.	⌋	⌋	-	⌋	⌋	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
4.	⌋	⌋	-	⌋	⌋	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
5.	⌋	⌋	-	⌋	⌋	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
6.	⌋	⌋	-	⌋	⌋	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
7.	⌋	⌋	-	⌋	⌋	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
8.	⌋	⌋	-	⌋	⌋	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
9.	⌋	⌋	-	⌋	⌋	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
10.	⌋	⌋	-	⌋	⌋	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
11.	⌋	⌋	-	⌋	⌋	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
12.	⌋	⌋	-	⌋	⌋	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
13.	⌋	⌋	-	⌋	⌋	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
14.	⌋	⌋	-	⌋	⌋	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
15.	⌋	⌋	-	⌋	⌋	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
16.	⌋	⌋	-	⌋	⌋	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
17.	⌋	⌋	-	⌋	⌋	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
18.	⌋	⌋	-	⌋	⌋	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
19.	⌋	⌋	-	⌋	⌋	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
20.	⌋	⌋	-	⌋	⌋	None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ

PM Node Specific Configuration

IO Module Configuration Table

PM88-601B

Page 9 of 9

12/01

	Engineer:	Date:
--	-----------	-------

IO Module Configuration Display – N/A if NTKNUM = 0

For each IO Module, select the IO Module type (IOMTYPE) that applies. If there is a redundant IOM, check the Redun blank. Fill in the file and card location(s). If the type selected is AO or DO, select a failure option (FAILOPT). If the type is STIM OR LLMUX, select an ac Line Frequency (FREQ6050).

****CAUTION – Use this part of the form only if PKGOPT on page 2 = Redun_IO (Continued)****

NOTE: IOMTYPE LLMUX also includes RHMUX.

MOD NUM	IOM-A FILE	IOM-A CARD	Redun ✓	IOM-B FILE	IOM-B CARD		IOMTYPE				FAILOPT				IOMTYPE				FREQ6050	
						REDUN														
						↓														
21.			—			None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
22.			--			None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
23.			-			None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
24.			-			None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
25.			-			None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
26.			-			None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
27.			-			None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
28.			-			None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
29.			-			None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
30.			-			None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
31.			-			None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
32.			-			None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
33.			-			None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
34.			-			None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
35.			-			None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
36.			-			None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
37.			-			None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
38.			-			None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
39.			-			None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ
40.			-			None	HLAI	LLAI	DI	PI	AO	AO16	DO	DO32	Unpower	Hold	STIM	LLMUX	60HZ	50HZ

PM Analog Input Point

PM88-602
Page 1 of 8
09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Point Assignment Display

NAME Tag Name	_____	<i>range = Not applicable</i> <i>default = Blank</i>
NODETYP Node Type	PM APM, HPM, LM or SM	A PM Point Is Being Configured If an APM, HPM, LM or SM is being configured, go to the appropriate forms for those devices.
PNTFORM Point Form	FuLL Componnt	Point is fully displayed and alarmed Pt. is partially displayed but not alarmed

PTDESC Point Descriptor	_____	<i>range = Not applicable</i> <i>default = Blank</i>
EUDESC Engineering Units Descriptor	_____	<i>range = Not applicable</i> <i>default = Blank</i>
KEYWORD Keyword Descriptor	_____	<i>range = Not applicable</i> <i>default = Blank</i>
ASSOCDSP Associated Display	_____	<i>range = Not applicable</i> <i>default = Blank</i>
\$CDETAIL (R620 and later) Point Custom Display	_____	<i>range = Not applicable</i> <i>default = Blank</i>
UNIT Process Unit Point Is Assigned To	____	<i>range = Two Alphanumeric Characters</i> <i>default = Not applicable</i>
NTWKNUM NIM's UCN That This Point Is In	____	<i>range = 1 to 20</i> <i>default = Not applicable</i>
NODENUM PMM's Address On The UCN	____	<i>range = 1 to 64</i> <i>default = Not applicable</i>
MODNUM I/O Module Number	____	<i>range = 1 to 40</i> <i>default = Not applicable</i>
SLOTNUM Slot Number	____	1-16 (For HLAI or STIM module) 1-8 (For LLAI or PI module) 1-32 (For LLMUX and RHMUX modules)

N/A if PNTFORM = Componnt.

PRIMMOD Primary Module ID	_____	<i>range = Not Applicable</i> <i>default = Null</i>
-------------------------------------	-------	--

PNTMODTY Point's IO Module Type	HLAI -> pg 2-A STIM -> pg 3-B PI -> pg 5-C LLMUX -> pg 2-D LLAI -> pg 4-E	High Level Analog Input Smart Transmitter Intf. Module Pulse Input Module Low Level Multiplexer; also applies to RHMUX, except that RHMUX does not Support SENSRTYP of RTD Low Level Analog Input
---	--	---

PM Analog Input Point

Unit:

Tagname:

Engineer:

Date:

A

HLAI Only

PV Configuration Display

SENSRTYP Sensor Type	1_5_V	+1 to +5 volts
	P4_2_V	.4 to 2 volts
	0_5_V	0 to 5 volts
	Slidwire	Slidewire Resistance Device
PVCHAR PV Characterization	Linear	Linear
	SqrRoot	Squareroot
Btherm	Etherm	Jtherm
Rtherm	RPtherm	Stherm
		Ktherm
		Ttherm
DinRtd	JisRtd	NicklRtd
		CopprRtd
PVTEMP Thermal EUS For PV	DegreesC	DegreesF
	DegreesR	DegreesK
SLWSRCID Slidwire Voltage Slot ID (number)	_ _	range = 1 – 16 default = 1

Thermocouple Type:
B, E, J, K, R, RP, S, or T

Resistance Temperature Device Type:
Din, Jis, Nickel, or Copper

C = Celcius; F = Farenheit
R = Rankin; K = Kelvin

D

LLMUX Only

PV Configuration Display (continued)

NOTE : PV configuration display for LLMUX also applies to RHMUX IOP, except that RTD is not supported by RHMUX IOP.

SENSRTYP Sensor Type	Thermcpl	Thermocouple
	RTD	Resistance Temp. Device
	0_100_MV	0 to 100 millivolts
PVCHAR PV Characterization	Linear	Linear
Btherm	Etherm	Jtherm
Rtherm	RPtherm	Stherm
		Ktherm
		Ttherm
DinRtd	JisRtd	NicklRtd
		CopprRtd
PIUOTDCF Open T/C Detect	Enable Option	Off
		On
PVTEMP Thermal EUS For PV	DegreesC	DegreesF
	DegreesR	DegreesK
TCRNGOPT Thermocouple Range Option	Normal	Use PVEXEULO's normal range table
	Extended	Use PVEXEULO's extended range table

Thermocouple Type:
B, E, J, K, R, RP, S, or T

Resistance Temperature Device Type:
Din, Jis, Nickel, or Copper

Open Thermocouple Detection (LLMUX-Thermcpl only)

C = Celcius; F = Farenheit
R = Rankin; K = Kelvin

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

B

This page - STIM Only

PV Configuration Display

STITAG Transmitter Tag ID	_____	Device name stored in the Smart Xmtr. <i>default</i> = Blank
SENSRTYP Smart Transmitter Sensor Type	SPT_DP SPT_GP SPT_AP SFM STT Linear SqrRoot	Differential Pressure Xmtr. Gauge Pressure Xmtr. Absolute Pressure Xmtr. Magnetic Flow Xmtr. Temperature Xmtr. Linear Squareroot
PVCHAR PV Characterization Option		

Btherm	B type thermocouple	NickIRtd	Nickel type Res. Temp. Device
Etherm	E type thermocouple	PT200Rtd	Point 200 Resistance Temp. Dev
Jtherm	J type thermocouple	PT500Rtd	Point 500 Resistance Temp. Dev.
Ktherm	D type thermocouple	CU10Rtd	Copper 10 Resistance Temp. Dev.
Rtherm	R type thermocouple	CU25Rtd	Copper 25 Resistance Temp. Dev.
Stherm	S type thermocouple	RTD_OHMS	Ohms Resistance Temp. Dev.
Ttherm	T type thermocouple	RHRAD	RH Radiomatic
Ntherm	N type thermocouple	W5W26TC	C type thermocouple
DinRtd	Din type Rs. Temp. Device	W3W25TC	D type thermocouple
JisRtd	Jis type Res. Temp. Device	NINIMOTC	Nickle/nickle/Mol. thermocouple

STI_EU STI Engineering Units			Applies if – <u>SENSRTYP = SFM</u>			<u>SENSRTYP = STT AND</u>	
<u>SENSRTYP = SPT</u>			CM_HR	BRL_DAY	CLUB_M	<u>PV CHAR =</u>	
	= DP		GAL_HR	CM_SEC	LITRES	Linear ———— { MV V	
	= GP		LIT_HR	PRCNT	MLITRES		
	= AP		CC_HR	BLANK	FL_OZ		
INH20	MBAR		CM_MIN	LBS	FEET		
MMHG	BAR		GAL_MIN	KG	METERS	RTD_OHMS ———— OHMS	
PSI	G_SQCM		LIT_MIN	TONS	MM		
KPA	KG_SQCM		CC_MIN	GRAMS	INCHES	All Other ———— { DEG_C DEG_F DEG_K DEG_R	
MPA	MMH20		CM_DAY	OZ	KG_CUM		
	INHG		GAL_DAY	GAL	G_CUM		
			KGAL_DAY	BRL	LBS_CUFT		
					LBS_CUIN		

DECONF	PV	Broadcast PV 3.6 time/sec.
DE Configuration Mode	PV_SV	Broadcast PV 3.2 times/sec., SV .46 X/Sec.
	PV_DB	Broadcast PV 2.7 times/sec. Plus data base
	PV_SV_DB	B/cast PV 2.4 X/Sec., SV .34 X/Sec+ d/base
URL		<i>range</i> = See Parameter Ref. Guide
Upper Range Limit	_.	<i>default</i> = NaN
URV		<i>range</i> = See Parameter Ref. Guide
Upper Range Value	_.	<i>default</i> = NaN
LRV		<i>range</i> = See Parameter Ref. Guide
Lower Range Value	_.	<i>default</i> = NaN
DAMPING		SPT=0-32, STT=0-102.3, SFM=0-100
Xmtr Filter Lag Time		(discrete increments); <i>default</i> = 0.0

PM Analog Input Point

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Applies if SENS RTP=STT

PIUOTDCF Open TC Detection Enable Option	Off On	Thermocouple fault detection Range = Off or On.
CJTACT Int. Colt Jct. Compensation	On Off	On = Internal cold Jct. compensation active Off = External cold Jct. compensation active

PV Configuration Display (continued) – Applies To All Point Types Except As Noted

E

LLAI Only

PV Configuration Display

SENSRTP Sensor Type	1_5_V 0_5_V RTD Thermcpl 0_100_MV	+1 to +5 volts .0 to 5 volts Resistance Temp. Device Thermocouple 0 to 100 millivolts
PVCHAR PV Characterization	Linear SqrRoot	Linear Squareroot
	Btherm Rtherm Etherm Rptherm Jtherm Stherm Ktherm Ttherm	Thermocouple Type: B, E, J, K, R, RP, S, or T
	DinRtd JisRtd NicklRtd CopprRtd	Resistance Temp. Device Type: Din, Jis, Nickel, or Copper
PVTEMP Thermal EUS For PV	DegreesC DegreesR DegreesF DegreesK	C = Celcius; F = Farenheit R = Rankin; K = Kelvin
TCRNGOPT Thermocouple Range Option	Normal Extended	Use PVEXEULO's normal range table Use PVEXEULO's extended range table

Applies if SENS RTP = Slidwire or 0-100 mV

PVRAWHI PV Raw High Limit	_ _ _ _	range = 0 to 100 mv default = 0 – 100 units = millivolts	Slidewire 0.0 - 1 1.0 Ratio
PVRAWLO PV Raw Low Limit	_ _ _ _	range = 0 to 100 mv default = 0 units = millivolts	Slidewire 0.0 - 1 0 Ratio

N/A if PNTMODTY = PI, N/A if SENS RTP = Thermcpl or RTD.

INPTDIR Analog Input Direction	Direct Reverse	PV CALC increases as PVRAW increases = 100% PV PV CALC decreases as PVRAW increases = 100% PV
--	--------------------------	---

PM Analog Input Point

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

PVEUHI PV High Range In EUs	_ _ _ _ _ _ _	<i>range = PVEULO to PVEXEUHI</i> <i>default = 100.0</i>
PVEULO PV Low Range In EUs	_ _ _ _ _ _ _	<i>range = PVEXEULO to PVEUHI</i> <i>default = 0.0</i>
PVFORMAT PV Decimal Point Format	DO D1	D2 D3 D0 = 9999. D1 = 999.9 D2 = 99.99 D3 = 9.999

N/A if SENSRTYP = Thermcpl or RTD.

PVEXEUHI PV Extended Hi Range in EUs	_ _ _ _ _ _ _	<i>range = >=PVEUHI</i> <i>default = 102.9</i>
PVEXEULO PV Extended Lo Range in EUs	_ _ _ _ _ _ _	<i>range = <=PVEULO</i> <i>default = -2.9</i>

PV Configuration Display (continued) – Applies To All Point Types Except As Noted

PVCLAMP PV Clamping Option	NoClamp Clamp	No clamping of the PV value Clamp PV value at range extension limit
--------------------------------------	-------------------------	--

N/A if SENSRTYP = Thermcpl or RTD.

LOCUTOFF Low Signal CO For Flow Inputs	_ _ _ _ _ _ _	<i>range = PVEULO – PVEUHI and NaN</i> <i>default = NaN</i>
--	---------------	--

C

PI Only

C1 Scaling Constant 1	_ _ _ _ _ _ _	<i>range = Real Number ≥0.0</i> <i>default = 1.0</i>
C2 Scaling Constant 2	_ _ _ _ _ _ _	<i>range = Real Number ≥0.0</i> <i>default = 1.0</i>
TIMEBASE Input Time Base	Seconds Minutes Hours	PV & Setpoint Eng. Units per Second, Minute, or Hour

N/A if PNTFORM = Componnt.

PVSRCOPT PV Source Option	Only Auto	PV Source selection is not available and field wiring or memory fetch supplies PV. Selection from PVSOURCE is available & Operator/CL-program may supply PV.
PVSOURCE PV Source	All Auto Man Sub	Field wiring/memory -fetch supplies PV PV is supplied by Operator or program A value is substituted by a CL program

TF PV Filter Lag Time in Minutes	_ _ _ _	<i>range = 0.0 to 60.0 (minutes)</i> <i>default = 0.0 (PV will not be delayed)</i>
--	---------	---

PVTV PV Target Value in EUs	_ _ _ _ _ _ _	<i>range = PVEXEULO-PVEXEUHI, & NaN</i> <i>default = NaN</i>
OVERVAL Overview Display Value	_ _ _	<i>range = 0 to 100</i> <i>default = 25</i>

PM Analog Input Point

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Alarming Display – N/A if PNTFORM = Componnt

As you enter alarm trip points and alarm priorities in the next section please refer to the following alarm Priority definitions and the note.

NoAction	Alarm is not reported to the system and not annunciated (R670 & later)
Journal	Alarm is historized, not reported to US, not annunciated
Low	Alarm is historized, reported to US, and annunciated
High	Alarm is historized, reported to US, and annunciated
Emergency	Alarm is historized, reported to US, and annunciated
Printer	Not historized, reported to the printer, not annunciated
JnlPrint	Alarm historized, reported to the printer, not annunciated

Note: If you do not enter a trip point value for a given pair of trip-points and alarm-priorities, do not Circle an alarm priority option for that pair (that is, no trip point, no alarm priority).

Alarming Display – N/A if PNTFORM = Componnt.

\$AUXUNIT (R620 and later)		<i>range</i> = Any configured LCN Unit ID
Auxiliary Unit	_.	<i>default</i> = NaN
\$ALDLOPT	None	
Alarm Delay Option	OffDlyLo OffDlyHi OffDlyEm OnDlyLo OnDlyHi OnDlyEm	Off Delay Lo Off Delay Hi Off Delay Emergency On Delay Lo On Delay Hi On Delay Emergency
\$DLBADAL (R681 and later)	None	<i>range</i> = Offdelay, None
Delay for BADPV	Offdelay	<i>default</i> = None
\$DLTIME (R620 and later)	_.	<i>range</i> = 0 to 9999 seconds
Delay Time		<i>default</i> = 0 seconds
\$REALARM (R660 and later)	_.	<i>range</i> = 0 to 9999 minutes
Re-alarming Interval in minutes		<i>default</i> = 0 minutes
PVALDB		
PV Alarm Deadband In %	Half One Two Three Four Five EU	
PVALDBEU		<i>range</i> >= 0.0
PV Alarm Deadband in EU	_.	<i>default</i> = 1.0
PVHITP		<i>range</i> = PVLOTP - PVHHTP, & NaN
PV High Alarm Trip Point	_.	<i>default</i> = NaN
PVHIPR	NoAction Journal Low High Emergency Printer JnlPrint	
PV High Alarm Priority	(R670 and later)	
\$HISELCT (R681 and later)	Cutout	<i>range</i> = Cutout, Allow
PV High Selective Cutout	Allow	<i>default</i> = Cutout
PVLOTP		<i>range</i> = PVLLOTP - PVHITP, & NaN
PV Low Alarm Trip Point	_.	<i>default</i> = NaN
PVLOPR	NoAction Journal Low High Emergency Printer JnlPrint	
PV Low Alarm Priority	(R670 and later)	

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

\$LOSELCT (R681 and later) PV Low Selective Cutout	Cutout Allow	<i>range</i> = Cutout, Allow <i>default</i> = Cutout					
PVHHTP PV Hi Hi Alarm Trip Point	_ . _ . _ . _ . _ _	<i>range</i> = PVHITP to PVEUHI, & NaN <i>default</i> = NaN					
PVHHPR PV High High Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$HHSELCT (R681 and later) PV High High Selective Cutout	Cutout Allow	<i>range</i> = Cutout, Allow <i>default</i> = Cutout					
PVLLTP PV Low Low Alarm Trip Point	_ . _ . _ . _ . _ _	<i>range</i> =PVEXEULO – PVLOTP, & NaN <i>default</i> = NaN					
PVLLPR PV Low Low Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$LLSELCT (R681 and later) PV Low Low Selective Cutout	Cutout Allow	<i>range</i> = Cutout, Allow <i>default</i> = Cutout					
PVROCTPT PV Pos Rate Of Chg Trip Point	_ . _ . _ . _ . _ _	<i>range</i> = >=0.0, and NaN <i>default</i> = NaN					
PVROCPPR PV Pos Rate Of Chg Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$RPSELCT (R681 and later) PV Positive Rate of Change Selective Cutout	Cutout Allow	<i>range</i> = Cutout, Allow <i>default</i> = Cutout					
PVROCNTPT PV Neg Rate Of Chg Trip Point	_ . _ . _ . _ . _ _	<i>range</i> = >=0.0, andNaN <i>default</i> = NaN					
PVROCNPRT PV Neg Rate Of Chg Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$RNSELCT (R681 and later) PV Negative Rate of Change Selective Cutout	Cutout Allow	<i>range</i> = Cutout, Allow <i>default</i> = Cutout					
BADPVPR Bad-PV Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
ALENBST Point Alarm Enable Status		Enable Disable Inhibit		<u>Displayed</u> Yes No No	<u>Logged</u> Yes Yes No	<u>Reported to EIP</u> Yes Yes No	

PM Analog Input Point

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Applies if PNTMODTY = LLAI or LLMUX and if the SENSRTYP = THERMCPL or RTD.

\$OLDEVDS		
Open-Line Detect Event Disable	<i>Enable</i>	Allows BADPV alarms when open line detected.
	Disable	Disables BADPV alarms when open line detected.

Applies if PNTMODTY = HLAI, STIM, PI, or if SENSRTYP not THERMCPL or if SENSRTYP not RTD.

\$OLDEVDS		
Open-Line Detect Event Disable	<i>NOOTDETC</i>	Value must be selected. Point operation is not affected by this function.

PM Analog Output Point

PM88-603
Page 1 of 3
12/02

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Point Assignment Display

NAME Tag Name	_____	<i>range</i> = Not applicable <i>default</i> = Blank
NODETYP Node Type	PM APM, HPM LM or SM	A PM Point Is Being Configured If an APM, HPM, LM or SM is being configured, go to the appropriate forms for those devices.
PNTFORM Point Form	FuLL Componnt	Point is fully displayed and alarmed Pt. is partially displayed but not alarmed

PTDESC Point Descriptor	_____	<i>range</i> = Not applicable <i>default</i> = Blank
EUDESC Engineering Units Descriptor	_____	<i>range</i> = Not applicable <i>default</i> = Blank
KEYWORD Keyword Descriptor	_____	<i>range</i> = Not applicable <i>default</i> = Blank
ASSOCDSP (R610 and later) Associated Display	_____	<i>range</i> = Not applicable <i>default</i> = Blank
\$CDETAIL (R620 and later) Point Custom Display	_____	<i>range</i> = Not applicable <i>default</i> = Blank
UNIT Process Unit Point Is Assigned To	____	<i>range</i> = Two Alphanumeric Characters <i>default</i> = Not applicable
NTWKNUM NIM's UCN That This Point Is In	____	<i>range</i> = 1 to 20 <i>default</i> = Not applicable
NODENUM PMM's Address On The UCN	____	<i>range</i> = 1 to 64 <i>default</i> = Not applicable
MODNUM I/O Module Number	____	<i>range</i> = 1 to 40 <i>default</i> = Not applicable
SLOTNUM Slot Number	____	<i>range</i> = 1 – 16 <i>default</i> = Not applicable

N/A if PNTFORM = Componnt.

PRIMMOD Primary Module ID	_____	<i>range</i> = Not Applicable <i>default</i> = Null
-------------------------------------	-------	--

PM Analog Output Point

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Operating Configuration Display (continued)

PNTMODTY Point Module Type	AO (AO has 8 outputs) AO_16 (AO has 16 outputs)
--------------------------------------	---

Operating Configuration Display


OPTDIR(AnalOut) AO Direct/Reverse Action	Direct Reverse	For final OP:0% =>4ma; 100% =>20ma For final OP:0% =>20ma; 100% =>4ma
OPCHAR Output Characterization Option	On Off	I/O coordinates define OP char. curve I/O coordinates do not apply
\$OLDEVDS Open-Line Detect Event Disable	Enable Disable	Allows OUTPUTFL soft failure event when open line detected in output. Disables OUTPUTFL soft failure event when open line detected in output.
\$OPTOL Output Tolerance in %		range = 0.0 to 106.9 default = 0.0
OUTIND (R620 and later)	Direct Reverse	4 – 20mA = 0 – 100% 20 – 4mA = 0 – 100%

OPIN0 Input Coordinate # 0	-6.9	range = Fixed at -6.9 percent default = Not applicable
OPIN1 Input Coordinate # 1		range = >prev. coord, < next coord default = Not applicable
OPIN2 Input Coordinate # 2		range = >prev. coord, < next coord default = Not applicable
OPIN3 Input Coordinate # 3		range = >prev. coord, < next coord default = Not applicable
OPIN4 Input Coordinate # 4		range = >prev.coord, < next coord default = Not applicable
OPIN5 Input Coordinate # 5	106.9	range = Fixed at 106.9 percent default = Not applicable
OPOUT0 Output Coordinate # 0	-6.9	range = Fixed at -6.percent default = Not applicable
OPOUT1 Output Coordinate # 1		range = >prev. coord, < next coord default = Not applicable
OPOUT2 Output Coordinate # 2		range = >prev. coord, < next coord default = Not applicable
OPOUT3 Output Coordinate # 3		range = >prev. coord, < next coord default = Not applicable

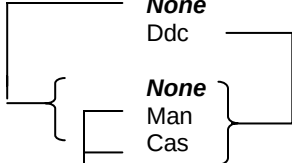
PM Analog Output Point

PM88-603
Page 3 of 3
12/02

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

OPOUT4 Output Coordinate # 4		range = >prev. coord, < next coord default = Not applicable
OPOUT5 Output Coordinate # 5	106.9	range = Fixed at 106.9 percent default = Not applicable

Mode Configuration Display – N/A if PNTFORM = Componnt.

RCASOPT Remote Cascade Option		None Ddc None Man Cas	No cascade mode of any type is allowed In Cas, AM point controls this point's OP No configured "normal" operating mode Manual is the configured "normal" mode If RCASOPT equals Ddc, Cascade may be configured as the "normal" mode.
N/A if NMODE = None			
NMODATTR Normal Mode Attribute		None Operator Program	Parameter NMODE sets "normal" mode Operator sets "normal" operating mode Program sets "normal" operating mode
MODEPERM Mode Permissive	Permit NotPerm		Operator can change this point's mode Optr. cannot change this point's mode
\$MODESEL (R630 and later) Mode Selection List	Man Cas Prog		Man and Cas mode, and Prog mode attribute are allowed for this data point.

PM88-604
Page 1 of 5
09/08

[illegible]

PM Auto Manual CTL Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

CTLALGID Control Algorithm Identifier	NULL AutoMan	No affect Auto Manual
---	---	--------------------------

PV Configuration Display – N/A if PNTFORM = Componnt

OVERVAL Overview Display Value	. . .	<i>range = 0 to 100</i> <i>default = 25</i>
--	-------	--

Mode Configuration Display

RCASOPT (AutoMan) Remote Cascade Option	None Ddc	Local cascade is the only valid cascade AM strategy stores to OP. No OP limits.
SHEDTIME Remote Cascade Shed Time		<i>range = 0 to 1000 (seconds)</i> <i>default = 0 (mode shed disabled)</i>
SHEDMODE Shed Mode	Man Bcas	Supervisory point will shed to Manual, Supervisory point will shed to BackupCas
NMODE (RegCtl) RegCtl Point's Normal Mode	None Man Cas Bcas	No configured "normal" operating mode Manual is the "normal" operating mode Cascade is "normal" operating mode Backup Cas is "normal" operating mode
NMODATTR (N/A if NMODE = None) Normal Mode Attribute	None Operator Program	Parameter NMODE sets "normal" mode Operator sets "normal" operating mode Program sets "normal" operating mode
MODEPERM Mode Permissive	Permit NotPerm	Operator can change this point's mode Optr. cannot change this point's mode
\$MODESEL (R630 and later) Mode Selection List	Man Prog Cas Bcas	Man, Cas and Bcas mode, and Prog mode attribute are allowed for this data point.
EXTSWOPT External Mode Switching	None Ems	No external mode switching is allowed Ext. source can change point's mode

Reg Control Auto/Man Algo Display

CTLEQN Control Equation Type	EqA EqB	$CV = X1 + B + BI$ $CV = X1 + (K \cdot X2) + BI$
B Output Bias		<i>range = Any Real number</i> <i>default = 0.0</i>
K Gain Constant For X2 Input		<i>range = Not applicable</i> <i>default = 1.0</i>
RATE1 Rate At Which Bias Ramps Down		<i>range = ≥ 0.0, NaN</i> <i>default = 0.0</i>
XEUHI X Input High Range in Eus		<i>range = $\geq XEULO$</i> <i>default = 100.0</i>

PM88-604
Page 3 of 5
09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Reg Control Auto/Man Algo Display (Continued)

XEULO X Input Low Range In Eus		<i>range</i> = <= XEUHI <i>default</i> = 0.0
NOCINPTS #Of Control Input Connections	_	<i>range</i> = 0 – 1 for EqA; 1-2 for EqB <i>default</i> = 0 for EqA; 1 for EqB
CISRC (Control-Input-Connection Source) <u>Input#</u> (if NOCINPTS>0)	<u>CISRC</u> (point.parameter)	<u>Destination Parameter (CIDSTN)</u>
1		X1 (EqA);X2(EqB)
2		X1(EqB)

Output Configuration Display

NOCOPTS	_	<i>range = 0 to 4 default = 1</i>
# Of Control Output Connections		
CODSTN (Control-Output-Connection Destination)		
<u>Output #</u>	<u>CODSTN (point.parameter)</u>	
1	_____.	
2	_____.	
3	_____.	
4	_____.	
OPHILM	_____	<i>range = OPLOLM - 106.9 & NaN default = 105.0</i>
Output High Limit In Percent		
OPLOLM	_____	<i>range = -6.9 - OPHILM, & NaN default = -5.0</i>
Output Low Limit In Percent		

PM Auto Manual CTL Algorithm

Unit:	Tagname:	Engineer:	Date:
SAFEOP Safe Output Limit In Percent	_.	<i>range</i> = -6.9 to 106.9 & NaN <i>default</i> = NaN	
OPMCHLM Output Minimum Change In %	_.	<i>range</i> = >=0.0, and NaN <i>default</i> = 0.0	
OPROCLM OP Rate Of Change Limit In %	_.	<i>range</i> = >=0.0, and NaN <i>default</i> = NaN	
\$OPTOL Output Tolerance in %	_.	<i>range</i> = 0.0 to 106.9 <i>default</i> = 0.0	
OUTIND (R620 and later) Reverse Output Indicator	Direct Reverse	4 - 20mA = 0 – 100% 20 - 4mA = 0 – 100% Note: With R670 and later, when this parameter is set to Reverse, the values of the displayed output and the related output parameters are changed. Refer to the definition of the OUTIND parameter in the PM Family Parameter Dictionary, XPM09.	

PM Auto Manual CTL Algorithm

PM88-604
Page 5 of 5
09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Alarming Display - N/A if PNTFORM = Componnt

As you enter alarm trip priorities in the next section please refer to the following:

NoAction	Alarm is not reported to the system and not annunciated (R670 & later)
Journal	Alarm is historized, not reported to US, not annunciated
Low	Alarm is historized, reported to US, and annunciated
High	Alarm is historized, reported to US, and annunciated
Emergency	Alarm is historized, reported to US, and annunciated
Printer	Not historized, reported to the printer, not annunciated
JnlPrint	Alarm historized, reported to the printer, not annunciated

\$AUXUNIT Auxiliary Unit		<i>range</i> = Any configured LCN Unit ID <i>default</i> = NaN
\$DLBADAL (R681 and later) Delay for BADCTL	None Offdelay	<i>Range</i> = Offdelay, None <i>Default</i> = None
\$DLTIME (R620 and later) Delay Time		<i>range</i> = 0 to 9999 seconds <i>default</i> = 0 seconds
\$REALARM Re-alarming Interval		<i>range</i> = 0 to 9999 minutes <i>default</i> = 0 minutes
BADOCOPT BAD OP Conn Alarm Option	Off On	Bad Output Connection Alarm is not initially permitted Bad Output Connection Alarm is Initially permitted
BADOCPR BADOC Alarm Priority	NoAction Journal Low High Emergency Printer JnlPrint (R670 and later)	

OPALDB Output Alarm Deadband		<i>range</i> = 0 - 25.0 but < (OPHITP-OPLOTP)/2 <i>default</i> = 5.0 Output Units
OPHITP Output High Alarm Trip Point		<i>range</i> = OPLOTP TO OPHILM and NaN <i>default</i> = NaN
OPHIPR Output High Alarm Alarm Priority	NoAction Journal Low High Emergency Printer JnlPrint (R670 and later)	
OPLOTP Output Low Alarm Trip Point		<i>range</i> = OPLOLM TO OPHITP and NaN <i>default</i> = NaN
OPLOPR Output Low Alarm Alarm Priority	NoAction Journal Low High Emergency Printer JnlPrint (R670 and later)	

BADCTLPR Bad-control Alarm Priority	NoAction Journal Low High Emergency Printer JnlPrint (R670 and later)	
ALENBST Point Alarm Enable Status	Enable Disable Inhibit	<u>Displayed</u> Yes No No <u>Logged</u> Yes Yes No <u>Reported To EIP</u> Yes Yes No

Unit:	Tagname:	Engineer:	Date:		
<i>Point Assignment Display</i>					
NAME Tag Name _____		<i>range</i> = Not applicable <i>default</i> = Blank			
NODETYP Node Type		PM APM HPM FuLL Componnt		A PM Point Is Being Configured An APM Point Is Being Configured An HPM Point Is Being Configured	
PNTFORM Point Form		Point is fully displayed and alarmed Pt. is partially displayed but not alarmed			
PTDESC Point Descriptor _____		<i>range</i> = Not applicable <i>default</i> = Blank			
EUDESC Engineering Units Descriptor _____		<i>range</i> = Not applicable <i>default</i> = Blank			
KEYWORD Keyword Descriptor _____		<i>range</i> = Not applicable <i>default</i> = Blank			
ASSOCDSP (R610 and later) Associated Display _____		<i>range</i> = Not applicable <i>default</i> = Blank			
\$CDETAIL (R620 and later) Point Custom Display _____		<i>range</i> = Not applicable <i>default</i> = Blank			
UNIT Process Unit Point Is Assigned To __		<i>range</i> =Two Alphanumeric Characters <i>default</i> = Not applicable			
NTWKNUM NIM's UCN That This Point Is In __		<i>range</i> = 1 to 20 <i>default</i> = Not applicable			
NODENUM PMM's Address On The UCN __		<i>range</i> = 1 to 64 <i>default</i> = Not applicable			
SLOTNUM Slot Number __		<i>range</i> = 1-80 (But <=NPVSLLOT) <i>default</i> = Not applicable			
		N/A if PNTFORM = Componnt.			
PRIMMOD Primary Module ID _____		<i>range</i> = Not Applicable <i>default</i> = Null			
PVALGID PV Algorithm Identifier		Null CalcuLtr		No affect Calculator	

PM Calculator PV Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

PV Configuration Display

PVEUHI PV High Range In Engr Units	_ _ _ _ _ _ _	<i>range = PVEULO to PVEXEUHI</i> <i>default = 100.0</i>
PVEULO PV Low Range In Engr Units	_ _ _ _ _ _ _	<i>range = PVEXEULO to PVEUHI</i> <i>default = 0.0</i>
PVFORMAT PV Decimal Point Format	DO D2 D1 D3	D0=9999. D2=99.99 D1=999.9 D3 = 9.999
PVEXEUHI PV Extended Hi Range in Eus	_ _ _ _ _ _ _ _ _	<i>range = >=PVEUHI</i> <i>default = 102.9</i>
PVEXEULO PV Extended Lo Range in Eus	_ _ _ _ _ _ _ _ _	<i>range = <=PVEULO</i> <i>default = -2.9</i>
PVCLAMP PV Clamping Option	NoClamp Clamp	No clamping of the PV value Clamp PV value at range extension limit

N/A if PNTFORM = Componnt.

PVSRCOPT PV Source Option	Only Auto All	PV Source selection is not available Selection from PVSOURCE is available
PVSOURCE PV Source	Auto Man Sub	Field wiring /memory -fetch supplies PV PV is supplied by Operator or program A value is substituted by a CL program

PV Configuration Display

TF PV Filter Lag Time in Minutes	_ _ _ _	<i>range = 0.0 to 60.0 (minutes)</i> <i>default = 0.0 (PV will not be delayed)</i>
PVTV PV Target Value in EUs	_ _ _ _ _ _ _ _ _	<i>range = PVEXEULO-PVEXEUHI, & NaN</i> <i>default = NaN</i>
OVERVAL Overview Display Value	_ _ _ _	<i>range = 0 to 100</i> <i>default = 25</i>

Reg PV Calculator Algo Display

N # Inputs To Calcultr Algo	_	<i>range = 1 to 6</i> <i>default = 2</i>
C1 Calculator Constant # 1	_ _ _ _ _ _ _ _ _	<i>range = N/A</i> <i>default = 0.0</i>
C2 Calculator Constant # 2	_ _ _ _ _ _ _ _ _	<i>range = N/A</i> <i>default = 0.0</i>
C3 Calculator Constant # 3	_ _ _ _ _ _ _ _ _	<i>range = N/A</i> <i>default = 0.0</i>

PM88-605
Page 3 of 5
09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

As you enter alarm trip points and alarm priorities in the next section please refer to the following alarm priority definitions and the note.

NoAction	Alarm is not reported to the system and not annunciated (R670 & later)
Journal	Alarm is historized, not reported to US, not annunciated
Low	Alarm is historized, reported to US, and annunciated
High	Alarm is historized, reported to US, and annunciated
Emergency	Alarm is historized, reported to US, and annunciated
Printer	Not historized, reported to the printer, not annunciated
JnlPrint	Alarm historized, reported to the printer, not annunciated

Note: If you do not enter a trip point value for a given pair of trip-points and alarm-priorities, do not circle an alarm priority option for that pair (that is, no trip point, no alarm priority).

\$AUXUNIT Auxiliary Unit	_. _	<i>range</i> = Any configured LCN Unit ID <i>default</i> = NaN
\$ALDLOPT (R620 and later) Alarm Delay Option	None OffDlyLo OffDlyHi OffDlyEm OnDlyLo OnDlyHi OnDlyEm	Off Delay Lo Off Delay Hi Off Delay Emergency On Delay Lo On Delay Hi On Delay Emergency
\$DLBADAL (R681 and later) Delay for BADPV	None Offdelay	<i>range</i> = Offdelay, None <i>default</i> = None
\$DLYTIME (R620 and later) Delay Time	_. _ . _ . _	<i>range</i> = 0 to 9999 seconds <i>default</i> = 0 seconds
\$REALARM (R660 and later) Re-arming Interval in minutes	_. _ . _ . _	<i>range</i> = 0 to 9999 minutes <i>default</i> = 0 minutes

C4		range = N/A
Calculator Constant # 4		default = 0.0
CALCEXP		range = Up to 40 Characters
Calculator Expression		default = "blank"
		

PISRC (PV-Input-Connection Source)	<u>PISRC (point.parameter)</u>	<u>Destination Para-</u> <u>-meter (PIDSTN)</u>
<u>Input#</u>		
1		P1
2		P2
3		P3
4		P4
5		P5
6		P6

PM Calculator PV Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Alarming Display (Continued)

PVALDB PV Alarm Deadband In %	Half	One	Two	Three	Four	Five	EU
PVALDBEU PV Alarm Deadband In EU	_ _ _ _ _ _ _		range > = 0.0 default = 1.0				
PVHITP PV High Alarm Trip Point	_ _ _ _ _ _ _		range = PVLOTP - PVHITP, & NaN default = NaN				
PVHIPR PV High Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$HISELCT (R681 and later) PV High Selective Cutout	Cutout Allow			range = Cutout, Allow default = Cutout			
PVLOTP PV Low Alarm Trip Point	_ _ _ _ _ _ _		range = PVLLTP - PVHITP, & NaN default = NaN				
PVLOPR PV Low Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$LOSELCT (R681 and later) PV Low Selective Cutout	Cutout Allow			range = Cutout, Allow default = Cutout			
PVHHTP PV Hi Hi Alarm Trip Point	_ _ _ _ _ _ _		range = PVHITP to PVEUHI, & NaN default = NaN				
PVHHPR PV High High Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$HHSELCT (R681 and later) PV High High Selective Cutout	Cutout Allow			range = Cutout, Allow default = Cutout			
PVLLTP PV Low Low Alarm Trip Point	_ _ _ _ _ _ _		range = PVEULO - PVLOTP, & NaN default = NaN				
PVLLPR PV Low Low Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$LLSELCT (R681 and later) PV Low Low Selective Cutout	Cutout Allow			range = Cutout, Allow default = Cutout			
PVSGCHTP PV Significant Change Alarm Trip Point	_ _ _ _ _ _ _		range = >=0.0, and NaN default = NaN				

PM Calculator PV Algorithm

PM88-605
Page 5 of 5
09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Alarming Display – N/A if PNTFORM = Componnt

PVROCPTP PV Pos Rate Of Change Trip Point		<i>range = >=0.0, and NaN default = NaN</i>					
PVROCPPR PV Pos Rate Of Chg Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$RPSELCT (R681 and later) PV Positive Rate of Change Selective Cutout	Cutout Allow	<i>range = Cutout, Allow default = Cutout</i>					
PVROCNTP PV Neg Rate Of Change Trip Point		<i>range = >=0.0, and NaN default = NaN</i>					
PVROCNPR PV Neg Rate Of Chg Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$RNSELCT (R681 and later) PV Negative Rate of Change Selective Cutout	Cutout Allow	<i>range = Cutout, Allow default = Cutout</i>					
BADPVPR Bad-PV Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
ALENBST Point Alarm Enable Status				<u>Displayed</u>	<u>Logged</u>	<u>Reported To EIP</u>	
	Enable			Yes	Yes	Yes	
	Disable			No	Yes	Yes	
	Inhibit			No	No	No	

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

NAME Tag Name		<i>range</i> = Not applicable <i>default</i> = Blank
NODETYPE Node Type	PM APM HPM	A PM Point Is Being Configured An APM Point Is Being Configured An HPM Point Is Being Configured
PNTFORM Point Form	<i>FuLL</i> Componentt	Point is fully displayed and alarmed Pt. is partially displayed but not alarmed

[illegible]

PRIMMOD		<i>range</i> = Not Applicable
Primary Module ID		<i>default</i> = Null

PVALGID PV Algorithm Identifier	<i>Null</i> 	No affect Data Acquisition
---	---	-------------------------------

PM Data Acquisition PV Algorithm

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

PV Configuration Display

PVEUHI PV High Range In Engr Units	_ _ _ _ _ _ _	range = PVEULO to PVEXEUHI default = 100.0	
PVEULO PV Low Range In Engr Units	_ _ _ _ _ _ _	range = PVEXEULO to PVEUHI default = 0.0	
PVFORMAT PV Decimal Point Format	DO D2 D1 D3	D0 = 9999. D1 = 999.9	D2 = 99.99 D3 = 9.999
PVEXEUHI PV Extended Hi Range in EUs	_ _ _ _ _ _ _	range = >=PVEUHI default = 102.9	
PVEXEULO PV Extended Lo Range in EUs	_ _ _ _ _ _ _	range = <=PVEULO default = -2.9	
PV CLAMP PV Clamping Option	NoClamp Clamp	No clamping of the PV value Clamp PV value at range extension limit	

PV Configuration Display (continued)

PVSRCOPT PV Source Option	Only Auto All	PV Source selection is not available Selection from PVSOURCE is available
PVSOURCE PV Source		Field wiring /memory -fetch supplies PV PV is supplied by Operator or program A value is substituted by a CL program

TF PV Filter Lag Time in Minutes	_ _ _ _ _ _ _	range = 0.0 to 60.0 (minutes) default = 0.0 (PV will not be delayed)
--	---------------	---

PVTV PV Target Value in EUs	_ _ _ _ _ _ _	range = PVEXEULO-PVEXEUHI, & NaN default = NaN
OVERVAL Overview Display Value	_ _ _ _ _ _ _	range = 0 to 100 default = 25

Reg PV Data Acq. Algo Display

PISRC (PV-Input-Connection Source) Input#	PISRC (point.parameter)	Destination Para -meter (PIDSTN)
1	_ _ _ _ _ _ _	P1

PM Data Acquisition PV Algorithm

PM88-606
Page 3 of 4
09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Alarming Display - N/A if PNTFORM = Componnt
As you enter alarm trip points and alarm priorities in the next section please refer to the following alarm priority definitions and the note.

NoAction	Alarm is not reported to the system and not annunciated (R670 & later)
Journal	Alarm is historized, not reported to US, not annunciated
Low	Alarm is historized, reported to US, and annunciated
High	Alarm is historized, reported to US, and annunciated
Emergency	Alarm is historized, reported to US, and annunciated
Printer	Not historized, reported to the printer, not annunciated
JnlPrint	Alarm historized, reported to the printer, not annunciated

Note: If you do not enter a trip point value for a given pair of trip-points and alarm-priorities, do not circle an alarm priority option for that pair (that is, no trip point, no alarm priority).

Alarming Display - N/A if PNTFORM = Componnt

\$AUXUNIT Auxiliary Unit (R520 and later)	_ _ _	<i>range = Any configured LCN Unit ID default = NaN</i>
\$ALDLOPT Alarm Delay Option (R620 and later)	None OffDlyLo OffDlyHi OffDlyEm OnDlyLo OnDlyHi OnDlyEm	Off Delay Lo Off Delay Hi Off Delay Emergency On Delay Lo On Delay Hi On Delay Emergency
\$DLBADAL Delay for BADPV (R681 and later)	None Offdelay	<i>range = Offdelay, None default = None</i>
\$DLTIME Delay Time (R620 and later)	_ _ _ _	<i>range = 0 to 9999 seconds default = 0 seconds</i>
\$REALARM Re-alarming Interval (R660 and later)	_ _ _ _	<i>range = 0 to 9999 minutes default = 0 minutes</i>
PVALDB PV Alarm Deadband In %	Half One Two Three Four Five EU	<i>range > = 0.0 default = 1.0</i>
PVALDBEU PV Alarm Deadband In EU	_ _ _ _	
PVHITP PV High Alarm Trip Point	_ _ _ _ _ _ _	<i>range = PVLOTP - PVHHTP, & NaN default = NaN</i>
PVHIPR PV High Alarm Priority	NoAction Journal Low High Emergency Printer JnlPrint (R670 and later)	
\$HISELCT (R681 and later) PV High Selective Cutout	Cutout Allow	<i>range = Cutout, Allow default = Cutout</i>
PVLOTP PV Low Alarm Trip Point	_ _ _ _ _ _ _	<i>range = PVLLTP - PVHITP, & NaN default = NaN</i>
PVLOPR PV Low Alarm Priority	NoAction Journal Low High Emergency Printer JnlPrint (R670 and later)	

PM Data Acquisition PV Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Alarming Display – N/A if PNTFORM = Component

[illegible]

PM88-607
Page 1 of 6
09/08

PRIMMOD		<i>range</i> = Not Applicable
Primary Module ID		<i>default</i> = Null

PM88-607

Page 2 of 6
09/08

PM Digital Composite Point

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Point Assignment Display

NOSTATES	2	<i>default = Not applicable</i>
Number Of Digital States	3	2 digital switch states can be configured 3 digital switch states can be configured
NODINPTS	0	0 digin connections can be configured
# Of Digital Input Connections	1	1 digin connections can be configured
	2	2 digin connections can be configured
NODOPTS	0	0 digout connections can be configured
# Of Digital Output Connections	1	1 digout connections can be configured
	2	2 digout connections can be configured
	3	3 digout connections can be configured

State Configuration Display

STATETXT					
State - Descriptor Text	(1)	_ . _ . _ . _ . _ .	<i>range = Not applicable</i>		
	(0)	_ . _ . _ . _ . _ .	<i>default = "On"</i>		
	(2)	_ . _ . _ . _ . _ .	<i>default = "Off"</i>		
			<i>default = "State2"</i>		
BOXCLR (1)	Red	Green (Top box default)	White	Black	
State 1 Box Color	Cyan	Yellow	Blue	Magenta	
BOXCLR (0)	Red	Green	White	Black	
State 0 Box Color	Cyan	Yellow (Middle box default)	Blue	Magenta	
BOXCLR (2)	Red (Lower box default)	Green	White	Black	
State 2 Box Color	Cyan	Yellow	Blue	Magenta	

PM Digital Composite Point

PM88-607
Page 3 of 6
09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

State Configuration Display (Continued)

MOMSTATE (N/A if NODOPTS = 0) Momentary Output States	None Mom_0 Mom_1 Mom_2 Mom_1_2	No momentary output states State 0 is valid if (NOSTATES = 2) State 1 is valid if (NOSTATES = 2 or 3) State 2 is valid if (NOSTATES = 3) State 1 or 2 is valid if (NOSTATES = 3)
LOGICSRC Logic Source		Logic Point driving the interlock to this Digital Composite Point
DISRC (Digital-Input-Connection Source)		
Input # (N/A if NODINPTS = 0)	DISRC (point.parameter)	Destination
1		D1
2		D2

PV / Input Configuration Display -Only if NODINPTS = 1

D1_1 D1_One PV State	PVState0 PVState1	Use & display contents of STATETXT0 Use & display contents of STATETXT1
D2D1_00 D2_D1 Zero_Zero PV State D2 = Off, D1 = Off	PVState1 PVState0 PVState2 BadPV MovPV	Use & display contents of STATETXT1 Use & display contents of STATETXT0 Use & display contents of STATETXT2* Use & display contents of BADPVTXT Use & display contents of MOV PVTXT
D2D1_01 D2D1 Zero_One PV State D2 = Off, D1 = On	PVState1 PVState0 PVState2 MovPV BadPV	Use & display contents of STATETXT1 Use & display contents of STATETXT0 Use & display contents of STATETXT2* Use & display contents of MOV PVTXT Use & display contents of BADPVTXT
D2D1_10 D2D1 One_Zero PV State D2 = On, D1 = Off	PVState1 PVState0 PVState2 MovPV BadPV	Use & display contents of STATETXT1 Use & display contents of STATETXT0 Use & display contents of STATETXT2* Use & display contents of MOV PVTXT Use & display contents of BADPVTXT
D2D1_11 D2D1 One_One PV State D2 = On, D1 = On	PVState1 PVState0 PVState2 MovPV BadPV	Use & display contents of STATETXT1 Use & display contents of STATETXT0 Use & display contents of STATETXT2* Use & display contents of MOV PVTXT Use & display contents of BADPVTXT

*Only applies if NOSTATES = 3

PV / Input Configuration Display (Continued) - N/A if NODINPTS = 0

PVSRCOPT PV Source Option	Only Auto All	PV Source selection is not available and Field wiring or memory fetch supplies PV. Selection from PVSOURCE is available & Operator/CL-program may supply PV.
PVSOURCE PV Source	Auto Man Sub Track	Field wiring /memory -fetch supplies PV PV is supplied by Operator or program A value is substituted by a CL program PV tracks the output

PM Digital Composite Point

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Output Configuration Display – N/A if NODOPTS = 0

		<u>NOSTATES</u>	<u>NODOPTS</u>
ST1_OP1	Off	2 - 3	1 - 3
State 1 - Output 1	On		
ST1_OP2	Off	2 - 3	2 - 3
State 1 - Output 2	On		
ST1_OP3	Off	2 - 3	3
State 1 - Output 3	On		
ST0_OP1	Off	1 - 3	1 - 3
State 0 - Output 1	On		
ST0_OP2	Off	1 - 3	2 - 3
State 0 - Output 2	On		
ST0_OP3	Off	1 - 3	3
State 0 - Output3	On		
ST2_OP1	Off	3	1 - 3
State 2 - Output 1	On		
ST2_OP2	Off	3	2 - 3
State 2 - Output 2	On		
ST2_OP3	Off	3	3
State 2 - Output 3	On		
DODSTN (Digital Output Connection Destination)			
<u>Output#</u>	<u>DODSTN (point.parameter)</u>	<u>NODOPTS</u>	
1		1	
2		2	
3		3	
PULSEWTH			<i>range = 0.0 to 60.0</i>
Pulse Width For DigComp Point Outputs			<i>default = 1.0</i>

PM Digital Composite Point

PM88-607
Page 5 of 6
09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Mode Configuration Display - N/A if NODOPTS = 0

NMODATTR Normal Mode Attribute	None Operator Program	Parameter NMODE sets "normal" mode Operator sets "normal" operating mode Program sets "normal" operating mode
MODEPERM Mode Permissive	Permit NotPerm	Operator can change this point's mode Optr. cannot change this point's mode
\$MODESEL (R630 and later) Mode Selection List	Man Prog	Man mode and Prog mode attribute are allowed for this data point.
OROPT Interlock Bypass Option	Off On	Optr. Cannot by pass this point's interlocks Operator can bypass this point's interlocks If BYPASS = ON
BYPASS Interlock Bypass State	Off On	Outputs not allowed to ignore interlocks Stores to OP & SO are allowed to ignore the interlocks

Alarming Display - N/A if PNTFORM = Componnt or if NODINPTS = 0

As you enter alarm trip points and alarm priorities in the next section please refer to the following alarm priority definitions.

NoAction	Alarm is not reported to the system and not annunciated (R670 & later)
Journal	Alarm is historized, not reported to US, not annunciated
Low	Alarm is historized, reported to US, and annunciated
High	Alarm is historized, reported to US, and annunciated
Emergency	Alarm is historized, reported to US, and annunciated
Printer	Not historized, reported to the printer, not annunciated
JnlPrint	Alarm historized, reported to the printer, not annunciated

[illegible]

PRIMMOD Primary Module ID	_._._._._._._._._._._._._._._.__	<i>range</i> = Not Applicable <i>default</i> = Null
-------------------------------------	----------------------------------	--

PM Digital Input, Status Type Point

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

DITYPE Digital Input Type	Status Latched Accum	Status input (open/closed contacts) Steady-state input Pulsed input
-------------------------------------	-----------------------------------	---

Operating Configuration Display - N/A if PNTFORM = Componnt.

STATETXT (1) State 1-Description Text		<i>range</i> = Not applicable <i>default</i> => "On"		
STATETXT (0) State 0-Description Text		<i>default</i> = Not applicable <i>default</i> => "Off"		
BOXCLR (1) State 1 Box Color	Red Cyan	Green (Upper box default) Yellow	White Blue	Black Magenta
BOXCLR (0) State 0 Box Color	Red Cyan	Green Yellow (Lower box default)	White Blue	Black Magenta
INPTDIR Digital Input Direction		Direct Reverse	Open=>pvraw=off; Closed=>pvaw=on Closed=>pvraw=off; Open=>pvraw=on	
PVSRCOPT PV Source Option		Only Auto	PV Source selection is not available and field wiring or memory fetch supplies PV. Selection from PVSOURCE is available & Operator/CL-program may supply PV.	
		All		
PVSOURCE PV Source		Auto Man Sub	Field wiring or memory fetch supplies PV PV is supplied by Operator or program A value is substituted by a CL program	

PM88-608A

Page 3 of 3
09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Alarming Display – N/A if PNTFORM = Component.

As you enter alarm trip points and alarm priorities in the next section please refer to the following.

NoAction	Alarm is not reported to the system and not annunciated
Journal	Alarm is historized, not reported to US, not annunciated
Low	Alarm is historized, reported to US, and annunciated
High	Alarm is historized, reported to US, and annunciated
Emergency	Alarm is historized, reported to US, and annunciated
Printer	Not historized, reported to the printer, not annunciated
JnlPrint	Alarm historized, reported to the printer, not annunciated

\$AUXUNIT (R 620 and later) Auxiliary Unit		<i>range</i> = Any configured LCN Unit ID <i>default</i> = NaN												
\$REALARM (R660 and later) Re-arming Interval In Minutes		<i>range</i> = 0 to 9999 minutes <i>default</i> = 0 in minutes												
ALMOPT Alarming Option		No affect Alarm if PV and PVNORMAL differs Change Of State Reporting (option)												
PVNORMAL PV Value's Normal State Text		<i>range</i> = STATETXT(0) – STATETX(1) <i>default</i> = Text equal to "Off"												
\$DLYOPT (R660 and later) Alarm Delay Option		No alarms are to be delayed Suppress alarm events for period of configured DLYTIME after first alarm Delay RTN for configured DLYTIME Delay Alarm for configured DLYTIME												
DLY TIME Alarm Delay In Seconds		<i>range</i> = 0 to 60 <i>default</i> = 5 (seconds)												
OFFNRMPR Offnormal Alarm Priority		Printer JnlPrint												
\$OFSELCT (R681 and later) Off Normal Selective Cutout		<i>range</i> = Cutout, Allow <i>default</i> = Cutout												
ALENBST Point Alarm Enable Status		<table border="0"> <tr> <td><u>Displayed</u></td> <td><u>Logged</u></td> <td><u>Reported to EIP</u></td> </tr> <tr> <td>Yes</td> <td>Yes</td> <td>Yes</td> </tr> <tr> <td>No</td> <td>Yes</td> <td>Yes</td> </tr> <tr> <td>No</td> <td>No</td> <td>No</td> </tr> </table>	<u>Displayed</u>	<u>Logged</u>	<u>Reported to EIP</u>	Yes	Yes	Yes	No	Yes	Yes	No	No	No
<u>Displayed</u>	<u>Logged</u>	<u>Reported to EIP</u>												
Yes	Yes	Yes												
No	Yes	Yes												
No	No	No												
EVTOPT Event Reporting Option		Neither Eip or Soe is allowed Process special is triggered in AM/CG Point will notify Seq. Of Events process Eip and Soe are both allowed												
EIPPCODE Event Init Proc Destination		<i>range</i> = Not applicable <i>default</i> = Null												

PM Digital Input, Latched Type Point

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Point Assignment Display – Begin DI Status Type configuration

NAME Tag Name		<i>range</i> = Not applicable <i>default</i> = Blank
NODETYP Node Type	PM APM, HPM, LM or SM	An HPM Point Is Being Configured If a PM, APM, LM or SM is being configured, go to the appropriate forms for those devices.
PNTFORM Point Form	FULL Componnt	Point is fully displayed and alarmed Pt. is partially displayed but not alarmed

PTDESC		<i>range = Not applicable</i>
Point Descriptor		<i>default = Blank</i>
EUDESC		<i>range = Not applicable</i>
Engineering Units Descriptor		<i>default = Blank</i>
KEYWORD		<i>range = Not applicable</i>
Keyword Descriptor		<i>default = Blank</i>
ASSOCDSP(R610 and later)		<i>range = Not applicable</i>
Associated Display		<i>default = Blank</i>
\$CDETAIL(R620 and later)		<i>range = Not applicable</i>
Point Custom Display		<i>default = Blank</i>
UNIT		<i>range =Two Alphanumeric Characters</i>
Process Unit Point Is Assigned To	. .	<i>default = Not applicable</i>
NTWKNUM		<i>range = 1 to 20</i>
NIM's UCN That This Point Is In	. .	<i>default = Not applicable</i>
NODENUM		<i>range = 1 to 64</i>
PMM's Address On The UCN	. .	<i>default = Not applicable</i>
MODNUM		<i>range = 1 to 40</i>
I/O Module Number	. .	<i>default =Not applicable</i>
SLOTNUM		<i>range = 1-32</i>
Slot Number	. . .	<i>default = Not applicable</i>

N/A if PNTFORM = Componnt.

PRIMMOD		<i>range</i> =Not Applicable
Primary Module ID		<i>default</i> = Null

DITYPE Digital Input Type	<i>Status</i>	Status input (open/closed contacts)
	Latche	Steady-state input
	Accum	Pulsed input

PTDESC		<i>range = Not applicable default = Blank</i>
Point Descriptor		
EUDESC		<i>range = Not applicable default = Blank</i>
Engineering Units Descriptor		
KEYWORD		<i>range = Not applicable default = Blank</i>
Keyword Descriptor		
ASSOCDSP(R610 and later)		<i>range = Not applicable default = Blank</i>
Associated Display		
\$CDETAIL (R620 and later)		<i>range = Not applicable default = Blank</i>
Point Custom Display		
UNIT		<i>range = Two Alphanumeric Characters default = Not applicable</i>
Process Unit Point Is Assigned To	_ . _	
NTWKNUM		<i>range = 1 to 20 default = Not applicable</i>
NIM's UCN That This Point Is In	_ . _	
NODENUM		<i>range = 1 to 64 default = Not applicable</i>
PMM's Address On The UCN	_ . _	
MODNUM		<i>range = 1 to 40 default = Not applicable</i>
I/O Module Number	_ . _	
SLOTNUM		<i>range = 1-32 default = Not applicable</i>
Slot Number	_ . _	

PM Digital Input, Accum Type Point

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

N/A if PNTFORM = Componnt.

PRIMMOD Primary Module ID		<i>range</i> = Not Applicable <i>default</i> = Null
-------------------------------------	-----------	--

DITYPE Digital Input Type	Status Latched Accum	Status input (open/closed contacts) Steady-state input Pulsed input
-------------------------------------	-----------------------------------	---

Operating Configuration Display - N/A if PNTFORM = Component

INPTDIR Digital Input Direction	Direct Reverse	Open=>pvraw=off; Closed=>pvraw=on Closed=>pvraw=off; Open=>pvraw=on
COUNTDOWN Accumulator Count Down Flag	Off On	<i>range</i> = Off-On <i>default</i> = Off
AVTV Accumulated Value Target Value	_ _ _ _ _ _ _	<i>range</i> => = 0.0 and NaN <i>default</i> =0
RESETVAL Accumulator Reset Value	_ _ _ _ _ _ _	<i>range</i> => = 0 <i>default</i> =0
OVERVAL Overview Display Value	_ _ _	<i>range</i> = 0 to 100 <i>default</i> =25

PM Digital Output Points

PM88-609
Page 1 of 1
12/01

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

1 of 2 DigOut Points - Point Assignment Display

NAME Tag Name		<i>range</i> = Not applicable <i>default</i> = Blank
NODETYP Node Type	PM APM, HPM, LM	A PM Point Is Being Configured An APM Point Is Being Configured An HPM Point Is Being Configured An LM Point Is Being Configured Component Point Form only
PNTFORM Point Form	COMPONENT	
PTDESC Point Descriptor		<i>range</i> = Not applicable <i>default</i> = Blank
EUDESC Engineering Units Descriptor		<i>range</i> = Not applicable <i>default</i> = Blank
KEYWORD Keyword Descriptor		<i>range</i> = Not applicable <i>default</i> = Blank
ASSOCDSP (R610 and later) Associated Display		<i>range</i> = Not applicable <i>default</i> = Blank
\$CDETAIL (R620 and later) Point Custom Display		<i>range</i> = Not applicable <i>default</i> = Blank
UNIT Process Unit Point Is Assigned To		<i>range</i> =Two Alphanumeric Characters <i>default</i> = Not applicable
NTWKNUM NIM's UCN That This Point Is In		<i>range</i> = 1 to 20 <i>default</i> = Not applicable
NODENUM PMM's Address On The UCN		<i>range</i> = 1 to 64 <i>default</i> = Not applicable
MODNUM I/O Module Number		<i>range</i> = 1 to 40 <i>default</i> =Not applicable
SLOTNUM Slot Number		<i>range</i> = 1 - 32 <i>default</i> =Not applicable
PNTMODTY Point Module Type	D0 D0_16	(DO modules has 16 outputs) (DO modules has 32 outputs)
DOTYPE Digital Output Type	Status Pwm	Status type output Pulse Width Modulated type output

Operating Configuration Display

OPTDIR DO Direct/Reverse Action	Direct Reverse	For OP pulse = "On", OP = "On" signal For OP pulse = "Off", OP = "Off" signal
PERIOD Pulse Width Modulation Cycle Time		<i>range</i> = 1.0 to 120.0 <i>default</i> =10.0 (Seconds)

PM88-610
Page 1 of 6
09/08

PV Algorithm Display		
PVALGID PV Algorithm Identifier	<i>NuLL</i> 	No affect Flow Compensation

PM Flow Compensation PV Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

PV Configuration Display

PVEUHI PV High Range In Engr Units	_ _ _ _ _ _ _	<i>range</i> =PVEULO to PVEXEUHI <i>default</i> = 100.0
PVEULO PV Low Range In Engr Units	_ _ _ _ _ _ _	<i>range</i> = PVEXEULO to PVEUHI <i>default</i> = 0.0
PVFORMAT PV Decimal Point Format	DO D1	D2 D3 D0=9999. D1=999.9 D2=99.99 D3 = 9.999
PVEXEUHI PV Extended Hi Range in Eus	_ _ _ _ _ _ _	<i>range</i> = >=PVEUHI <i>default</i> = 102.9
PVEXEULO PV Extended Lo Range in Eus	_ _ _ _ _ _ _	<i>range</i> = <=PVEULO <i>default</i> = -2.9
PVCLAMP PV Clamping Option	NoClamp Clamp	No clamping of the PV value Clamp PV value at range extension limit

N/A if PNTFORM = Componnt.

PVSRCOPT PV Source Option		Only Auto All	PV Source selection is not available Selection from PVSOURCE is available
PVSOURCE PV Source		Auto Man Sub	Field wiring /memory -fetch supplies PV PV is supplied by Operator or program A value is substituted by a CL program

PV Configuration Display (Continued)

TF PV Filter Lag Time in Minutes	_ _ _ _ _	<i>range</i> = 0.0 to 60.0 (minutes) <i>default</i> = 0.0 (PV will not be delayed)
--	-----------	---

PVTV PV Target Value in EUs	_ _ _ _ _ _ _	<i>range</i> = PVEXEULO-PVEXEUHI, & NaN <i>default</i> = NaN
OVERVAL Overview Display Value	_ _ _	<i>range</i> = 0 to 100 <i>default</i> = 25

PM Flow Compensation PV Algorithm

PM88-610
Page 3 of 6
09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Reg PV Flow Comp Algo Display

		Inputs	Type of compensation
PVEQN(FlowComp)	EqA	F and G	Mass/vol. flow of liquid
PV Equation Type	EqB	F, P, and T	Mass flow of gas
	EqC	F, G, P, and T	Mass flow of gas
	EqD	F, G, P, and T	Volumetric flow of gas
	EqE	F, P, T, X, and Q	Mass flow of steam
PVCHAR	Linear		Linear PV Characterization
PV Characterization	SqrRoot		Square Root PV Characterization
C		range = N/A	
Scaling Constant		default = 1.0	
C1(FlowComp)		range = N/A	
Correction Factor		default = 1.0	
C2(FlowComp)		range $\geq$ 0.1	
Correction Factor		default = 1.0	
COMPHILM		range = COMPLOLM to 10.0, & NaN	
Compensation Term High Limit		default = 1.25	
COMPLOLM		range = 0.0 to COMPHILM, and NaN	
Compensation Term Low Limit		default = 0.8	

Reference Constants			PV Equation				
			A	B	C	D	E
RG		range = Real #	✓		✓	✓	
Reference Specific Gravity		default = 1.0					
RP		range = Real #		✓	✓	✓	✓
Reference Pressure		default = 1.0					
RT		range = Real #		✓	✓	✓	✓
Reference Temperature		default = 1.0					
RX		range = Real #					✓
Reference Steam Compressability		default = 1.0					
RQ		range = Real #					✓
Reference Steam Quality Factor		default = 1.0					
P0 (Flow Comp)		range = Real #		✓	✓	✓	✓
Zero Reference For Pressure		default = 0.0					
T0		range = Real #		✓	✓	✓	✓
Zero Reference for Temperature		default = 0.0					

PM Flow Compensation PV Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Reg PV Flow Comp Algo Display (Continued)

PISRC(n) <u>Input#</u>	(PV-Input-Con- nection Source)	PISRC (point.parameter)	<u>Destination</u> (PIDSTN)
Equation =	A B C D E		
n =	1 1 1 1 1		F
n =	2 2 2		G
n =	2 3 3 2		P
n =	3 4 4 3		T
n =	4		X
n =	5		Q

Alarming Display – N/A if PNTFORM = Comppnt

As you enter alarm trip points and alarm priorities in the next section please refer to the following alarm Priority definitions and the note.

NoAction	Alarm is not reported to the system and not annunciated (R670 & later)
Journal	Alarm is historized, not reported to US, not annunciated
Low	Alarm is historized, reported to US, and annunciated
High	Alarm is historized, reported to US, and annunciated
Emergency	Alarm is historized, reported to US, and annunciated
Printer	Not historized, reported to the printer, not annunciated
JnlPrint	Alarm historized, reported to the printer, not annunciated

Note: If you do not enter a trip point value for a given pair of trip-points and alarm-priorities, do not Circle an alarm priority option for that pair (that is, no trip point, no alarm priority).

Alarming Display - N/A if PNTFORM = Comppnt

\$AUXUNIT Auxiliary Unit (R620 and later)	.	range = Any configured LCN Unit ID default = NaN
\$ALDLOPT Alarm Delay Option (R620 and later)	None OffDlyLo OffDlyHi OffDlyEm OnDlyLo OnDlyHi OnDlyEm	Off Delay Lo Off Delay Hi Off Delay Emergency On Delay Lo On Delay Hi On Delay Emergency
\$DLBADAL Delay for BADPV (R681 and later)	None Offdelay	range = Offdelay, None default = None
DLTIME Delay Time(R620 and later)	. . .	range = 0 to 9999 seconds default = 0 seconds
\$REALARM Re-alarming Interval (R660 and later)	. . .	range = 0 to 9999 minutes default = 0 minutes
PVALDB PV Alarm Deadband In %	Half One Two Three Four Five EU	
PVALDBEU PV Alarm Deadband In EU	. . .	range > = 0.0 default = 1.0
PVHTP PV High Alarm Trip Point		range = PVLOTP - PVHHTP, & NaN default = NaN

PM Flow Compensation PV Algorithm

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Alarming Display - N/A if PNTFORM = Componnt

PVHIPR PV High Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$HISELCT (R681 and later) PV High Selective Cutout	Cutout Allow				<i>range = Cutout, Allow default = Cutout</i>		
PVLOTP PV Low Alarm Trip Point	_ _ _ _ _ _ _				<i>range = PVLLTP - PVHITP, & NaN default = NaN</i>		
PVLOPR PV Low Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$LOSELCT (R681 and later) PV Low Selective Cutout	Cutout Allow				<i>range = Cutout, Allow default = Cutout</i>		
PVHHTP (RegCtl) PV Hi Hi Alarm Trip Point	_ _ _ _ _ _ _				<i>range = PVHITP to PVEUHI, & NaN default = NaN</i>		
PVHHPR PV High High Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$HHSELCT (R681 and later) PV High High Selective Cutout	Cutout Allow				<i>range = Cutout, Allow default = Cutout</i>		
PVLLTP (RegCtl) PV Low Low Alarm Trip Point	_ _ _ _ _ _ _				<i>range = PVEULO - PVLOTP, & NaN default = NaN</i>		
PVLLPR PV Low Low Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$LLSELCT (R681 and later) PV Low Low Selective Cutout	Cutout Allow				<i>range = Cutout, Allow default = Cutout</i>		
PVSGCHTP PV Significant Change Alarm Trip Point	_ _ _ _ _ _ _				<i>range = >=0.0, and NaN default = NaN</i>		
PVROCTP PV Pos Rate Of Change Trip Point	_ _ _ _ _ _ _				<i>range = >=0.0, and NaN default = NaN</i>		
PVROCPPR PV Pos Rate Of Chg Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$RPSELCT (R681 and later) PV Positive Rate of Change Selective Cutout	Cutout Allow				<i>range = Cutout, Allow default = Cutout</i>		
PVROCNTP PV Neg Rate Of Change Trip Point	_ _ _ _ _ _ _				<i>range = >=0.0, and NaN default = NaN</i>		

PM Flow Compensation PV Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Alarming Display - N/A if PNTFORM = Componnt

PVROCNPR PV Neg Rate Of Chg Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$RNSLECT (R681 and later) PV Negative Rate of Change Selective Cutout	Cutout Allow				<i>range</i> = Cutout, Allow <i>default</i> = Cutout		
BADPVPR Bad-PV Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
ALENBST Point Alarm Enable Status	Enable			<u>Displayed</u>	<u>Logged</u>	<u>Reported To EIP</u>	
	Disable			Yes	Yes	Yes	
	Inhibit			No	Yes	Yes	
				No	No	No	

[illegible]

PM General Linearization PV Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

PV Algorithm Display

PVALGID PV Algorithm Identifier	Null GenLi	No affect General Linearity
---	---------------------------------	--------------------------------

PV Configuration Display

PVEUHI PV High Range In Engr Units	_ _ _ _ _ _ _	<i>range</i> = PVEULO to PVEXEUHI <i>default</i> = 100.0
PVEULO PV Low Range In Engr Units	_ _ _ _ _ _ _	<i>range</i> = PVEXEULO to PVEUHI <i>default</i> = 0.0
PVFORMAT PV Decimal Point Format	DO D1	D2 D3
		D0 = 9999. D2 = 99.99 D1 = 999.9 D3 = 9.999
PVEXEUHI PV Extended Hi Range in EUs	_ _ _ _ _ _ _ _ _ _ _ _ _	<i>range</i> = >=PVEUHI <i>default</i> = 102.9
PVEXEULO PV Extended Lo Range in EUs	_ _ _ _ _ _ _ _ _ _ _ _ _	<i>range</i> = <=PVEULO <i>default</i> = -2.9
PV CLAMP PV Clamping Option	NoClamp Clamp	No clamping of the PV value Clamp PV value at range extension limit

N/A if PNTFORM = Componnt

PVSRCOPT PV Source Option	Only Auto All	PV Source selection is not available Selection from PVSOURCE is available
PVSOURCE PV Source	Auto Man Sub	Field wiring /memory -fetch supplies PV PV is supplied by Operator or program A value is substituted by a CL program

PV Configuration Display (continued)

TF PV Filter Lag Time in Minutes	_ _ _ _ _	<i>range</i> = 0.0 to 60.0 (minutes) <i>default</i> = 0.0 (PV will not be delayed)
--	-----------	---

N/A if PNTFORM = Componnt.

PVTV PV Target Value in EUs	_ _ _ _ _ _ _ _ _ _ _ _ _	<i>range</i> = PVEXEULO-PVEXEUHI, & NaN <i>default</i> = NaN
OVERVAL Overview Display Value	_ _ _ _	<i>range</i> = 0 to 100 <i>default</i> = 25

PM General Linearization PV Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Alarming Display - N/A if PNTFORM = Componnt

\$AUXUNIT (R620 and later) Auxiliary Unit	_ _	<i>range</i> = Any configured LCN Unit ID <i>default</i> = NaN
\$ALDLOPT (R620 and later) Alarm Delay Option	None OffDlyLo OffDlyHi OffDlyEm OnDlyLo OnDlyHi OnDlyEm	Off Delay Lo Off Delay Hi Off Delay Emergency On Delay Lo On Delay Hi On Delay Emergency
\$DLBADAL (R681 and later) Delay for BADPV	None Offdelay	<i>range</i> = Offdelay, None <i>default</i> = None
\$DLTIME (R620 and later) Delay Time	_ _ _	<i>range</i> = 0 to 9999 seconds <i>default</i> = 0 seconds
\$REALARM (R660 and later) Re-alarming Interval	_ _ _	<i>range</i> = 0 to 9999 minutes <i>default</i> = 0 minutes
PVALDB PV Alarm Deadband In %	Half One Two Three Four Five EU	
PVALDBEU PV Alarm Deadband In EU	_ _ _	<i>range</i> > = 0.0 <i>default</i> = 1.0
PVHITP PV High Alarm Trip Point	_ _ _ _	<i>range</i> = PVLOTP - PVHHTP, & NaN <i>default</i> = NaN
PVHIPR PV High Alarm Priority	NoAction Journal Low	High Emergency Printer JnlPrint
\$HISELCT (R681 and later) PV High Selective Cutout	Cutout Allow	<i>range</i> = Cutout, Allow <i>default</i> = Cutout
PVLOTP PV Low Alarm Trip Point	_ _ _ _	<i>range</i> = PVLLTP - PVHITP, & NaN <i>default</i> = NaN
PVLOPR PV Low Alarm Priority	NoAction Journal Low	High Emergency Printer JnlPrint
\$LOSELCT (R681 and later) PV Low Selective Cutout	Cutout Allow	<i>range</i> = Cutout, Allow <i>default</i> = Cutout
PVHHTP(RegCtl) PV Hi Hi Alarm Trip Point	_ _ _ _	<i>range</i> = PVHITP to PVEUHI, & NaN <i>default</i> = NaN
PVHHPR PV High High Alarm Priority	NoAction Journal Low	High Emergency Printer JnlPrint
\$HHSELCT (R681 and later) PV High High Selective Cutout	Cutout Allow	<i>range</i> = Cutout, Allow <i>default</i> = Cutout
PVLLTP(RegCtl) PV Low Low Alarm Trip Point	_ _ _ _	<i>range</i> = PVEULO - PVLOTP, & NaN <i>default</i> = NaN

PVLLPR PV Low Low Alarm Priority	NoAction (R670)	Journal	Low	High	Emergency	Printer	JnlPrint
\$LLSELECT (R681 and later) PV Low Low Selective Cutout	Cutout Allow				<i>range</i> = Cutout, Allow <i>default</i> = Cutout		
PVSGCHTP PV Significant Change Alarm Trip Point					<i>range</i> = >=0.0, and NaN <i>default</i> = NaN		
PVROCPTP PV Pos Rate Of Change Trip Point					<i>range</i> = >=0.0, and NaN <i>default</i> = NaN		
PVROCPPR PV Pos Rate Of Chg Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$RPSELECT (R681 and later) PV Positive Rate of Change Selective Cutout	Cutout Allow				<i>range</i> = Cutout, Allow <i>default</i> = Cutout		
PVROCNTP PV Neg Rate Of Change Trip Point					<i>range</i> = >=0.0, and NaN <i>default</i> = NaN		
PVROCNPR PV Neg Rate Of Chg Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$RNSELECT (R681 and later) PV Negative Rate of Change Selective Cutout	Cutout Allow				<i>range</i> = Cutout, Allow <i>default</i> = Cutout		
BADPVPR Bad-PV Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
ALENBST Point Alarm Enable Status				<u>Displayed</u>	<u>Logged</u>	<u>Reported To EIP</u>	
	Enable			Yes	Yes		Yes
	Disable			No	Yes		Yes
	Inhibit			No	No		No

PVALGID PV Algorithm Identifier	Null HiLoAv	No affect High Low Average Selector
---	----------------------------------	--

PM High Low Average PV Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

PV Configuration Display

PVEUHI PV High Range In Engr Units	_ _ _ _	<i>range = PVEULO to PVEXEUHI</i> <i>default = 100.0</i>
PVEULO PV Low Range In Engr Units	_ _ _ _	<i>range = PVEXEULO to PVEUHI</i> <i>default = 0.0</i>
PVFORMAT PV Decimal Point Format	DO D1	D2 D3 D0 = 9999. D1 = 999.9 D2 = 99.99 D3 = 9.999
PVEXEUHI PV Extended Hi Range in EUs	_ _ _ _ _ _ _	<i>range = >=PVEUHI</i> <i>default = 102.9</i>
PVEXEULO PV Extended Lo Range in Eus	_ _ _ _ _ _ _	<i>range = <=PVEULO</i> <i>default = -2.9</i>
PVCLAMP PV Clamping Option	NoClamp Clamp	No clamping of the PV value Clamp PV value at range extension limit

N/A if PNTFORM = Componnt.

PVSRCOPT PV Source Option	Only Auto All { Auto Man Sub	PV Source selection is not available Selection from PVSOURCE is available
PVSOURCE PV Source		Field wiring or memory fetch supplies PV PV is supplied by Operator or program A value is substituted by a CL program

PV Configuration Display (Continued)

TF PV Filter Lag Time in Minutes	_ _ _ _	<i>range = 0.0 to 60.0 (minutes)</i> <i>default = 0.0 (PV will not be delayed)</i>
--	---------	---

N/A if PNTFORM = Componnt.

PVTV PV Target Value in EUs	_ _ _ _ _ _ _	<i>range = PVEXEULO-PVEXEUHI, & NaN</i> <i>default = NaN</i>
OVERVAL Overview Display Value	_ _ _	<i>range = 0 to 100</i> <i>default = 25</i>

PM High Low Average PV Algorithm

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Reg PV High/Low Avg Algo Display

PVEQN (HiLoAvg) PV Equation Type	EqA EqB EqC	Select & identify highest of up to 6 inputs Select & identify lowest of up to 6 inputs Calculate the average of up to 6 inputs <i>range</i> = 2 to 6 default = 2
N (HiLoAvg) # Inputs To HiLoAvg Algo		
NMIN Minimum No. Of Good Inputs		<i>range</i> = 1 to N (# Inputs parameter) default = 1
FRCPERM Forced Input Permissive	Off On	Oprr. Cannot select input to HiLoAvg Operator can select input to HiLoAvg
FSELIN Input To Be Force Selected	SelectP1 SelectP2 SelectP3 SelectP4 SelectP5 SelectP6	Input P1 is the forced input Input P2 is the forced input Input P3 is the forced input Input P4 is the forced input Input P5 is the forced input Input P6 is the forced input
PISRC (PV-Input-Connection Source)		<u>Destination Para</u> <u>-meter (PIDSTN)</u>
<u>Input#</u>	<u>PISRC (point.parameter)</u>	
1		P1
2		P2
3		P3
4		P4
5		P5
6		P6

Alarming Display – N/A if PNTFORM = Component

As you enter alarm trip points and alarm priorities in the next section please refer to the following alarm Priority definitions and the note.

NoAction	Alarm is not reported to the system and not annunciated (R670 & later)
Journal	Alarm is historized, not reported to US, not annunciated
Low	Alarm is historized, reported to US, and annunciated
High	Alarm is historized, reported to US, and annunciated
Emergency	Alarm is historized, reported to US, and annunciated
Printer	Not historized, reported to the printer, not annunciated
JnlPrint	Alarm historized, reported to the printer, not annunciated

Note: If you do not enter a trip point value for a given pair of trip-points and alarm-priorities, do not Circle an alarm priority option for that pair (that is, no trip point, no alarm priority).

\$AUXUNIT Auxiliary Unit(R620 and later)		<i>range</i> = Any configured LCN Unit ID default = NaN
\$ALDLOPT Alarm Delay Option (R620 and later)	None OffDlyLo OffDlyHi OffDlyEm OnDlyLo OnDlyHi OnDlyEm	Off Delay Lo Off Delay Hi Off Delay Emergency On Delay Lo On Delay Hi On Delay Emergency

PM High Low Average PV Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Alarming Display - N/A if PNTFORM = Componnt

\$DLBADAL Delay for BADPV (R681 and later)	None Offdelay	<i>range = Offdelay, None</i> <i>default = None</i>
DLTIME Delay Time(R620 and later)	_ _ _ _	<i>range = 0 to 9999 seconds</i> <i>default = 0 seconds</i>
\$REALARM Re-alarming Interval (R660 and later)	_ _ _ _	<i>range = 0 to 9999 minutes</i> <i>default = 0 minutes</i>
PVALDB PV Alarm Deadband In %	Half One Two Three Four Five EU	
PVALDBEU PV Alarm Deadband In EU	_ _ _ _	<i>range > = 0.0</i> <i>default = 1.0</i>
PVHITP PV High Alarm Trip Point	_ _ _ _ _ _ _	<i>range = PVLOTP - PVHHTP, & NaN</i> <i>default = NaN</i>
PVHIPR PV High Alarm Priority	NoAction Journal Low High Emergency Printer JnlPrint	(R670)
\$HISELCT (681 and later) PV High Selective Cutout	Cutout Allow	<i>range = Cutout, Allow</i> <i>default = Cutout</i>
PVLOTP PV Low Alarm Trip Point	_ _ _ _ _ _ _	<i>range = PVLLTP - PVHITP, & NaN</i> <i>default = NaN</i>
PVLOPR PV Low Alarm Priority	NoAction Journal Low High Emergency Printer JnlPrint	(R670 and later)
\$LOSELCT (681 and later) PV Low Selective Cutout	Cutout Allow	<i>range = Cutout, Allow</i> <i>default = Cutout</i>
PVHHTP(RegCtl) PV Hi Hi Alarm Trip Point	_ _ _ _ _ _ _	<i>range = PVHITP to PVEUHI, & NaN</i> <i>default = NaN</i>
PVHHPR PV High High Alarm Priority	NoAction Journal Low High Emergency Printer JnlPrint	(R670 and later)
\$HHSELCT (681 and later) PV High High Selective Cutout	Cutout Allow	<i>range = Cutout, Allow</i> <i>default = Cutout</i>
PVLLTP(RegCtl) PV Low Low Alarm Trip Point	_ _ _ _ _ _ _	<i>range = PVEULO - PVLOTP, & NaN</i> <i>default = NaN</i>
PVLLPR PV Low Low Alarm Priority	NoAction Journal Low High Emergency Printer JnlPrint	(R670 and later)
\$LLSELCT (681 and later) PV Low Low Selective Cutout	Cutout Allow	<i>range = Cutout, Allow</i> <i>default = Cutout</i>
PVSGCHTP PV Significant Change Alarm Trip Point	_ _ _ _ _ _ _	<i>range = >=0.0, and NaN</i> <i>default = NaN</i>
PVROCTP PV Pos Rate Of Change Trip Point	_ _ _ _ _ _ _	<i>range = >=0.0, and NaN</i> <i>default = NaN</i>

PM High Low Average PV Algorithm

PM88-612

Page 5 of 5

09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Alarming Display - N/A if PNTFORM = Componnt

PVROCPPR PV Pos Rate Of Chg Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$RPSELCT (R681 and later) PV Positive Rate of Change Selective Cutout	Cutout Allow				<i>range = Cutout, Allow</i> <i>default = Cutout</i>		
PVROCNTP PV Neg Rate Of Change Trip Point					<i>range = >=0.0, and NaN</i> <i>default = NaN</i>		
PVROCNPR PV Neg Rate Of Chg Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$RNSELCT (R681 and later) PV Negative Rate of Change Selective Cutout	Cutout Allow				<i>range = Cutout, Allow</i> <i>default = Cutout</i>		
BADPVPR Bad-PV Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
ALENBST Point Alarm Enable Status				<u>Displayed</u>	<u>Logged</u>	<u>Reported To EIP</u>	
	Enable			Yes	Yes	Yes	
	Disable			No	Yes	Yes	
	Inhibit			No	No	No	

PM88-613
Page 1 of 4
06/06

OVERVAL	__._. __	<i>range = 0 to 100</i>
Overview Display Value		<i>default = 25</i>

PM Incremental Summer CTL Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

<i>Mode Configuration Display</i>		
RCASOPT Remote Cascade Option	None Ddc	Local cascade is the only valid cascade AM strategy stores to OP. No OP limits.
SHEDTIME Remote Cascade Shed Time	_ _ _ _	<i>range</i> = 0 to 1000 (seconds) <i>default</i> = 0 (mode shed disabled)
SHEDMODE Shed Mode	Man Bcas	Supervisory point will shed to Manual Supervisory point will shed to BackupCas
NMODE RegCtl Point's Normal Mode	None Man Cas Bcas	No configured "normal" operating mode Manual is the "normal" operating mode Cascade is "normal" operating mode Backup Cas is "normal" operating mode
NMODATTR Normal Mode Attribute	None Operator Program	Parameter NMODE sets "normal" mode Operator sets "normal" operating mode Program sets "normal" operating mode
MODEPERM Mode Permissive	Permit NotPerm	Operator can change this point's mode Optr. cannot change this point's mode
\$MODESEL (R630 and later) Mode Selection List	Man Prog Cas Bcas	Man, Cas, and Bcas mode, and Prog mode attribute are allowed for this data point.
EXTSWOPT External Mode Switching	None Ems	No external mode switching is allowed Ext. source can change point's mode

<i>Reg Control Incr/Sum Algo Display</i>		
M # Of Initializable Control Algorithm Inputs	_	<i>range</i> = 2 to 4 <i>default</i> = 2
XEUHI X Input High Range In EUs	_ _ _ _ _ _ _	<i>range</i> = >= XEULO <i>default</i> = 100.0
XEULO X Input Low Range in EUs	_ _ _ _ _ _ _	<i>range</i> = <= XEUHI <i>default</i> = 0.0
K1 (IncrSum) Gain Constant For X1 Input	_ _ _ _ _ _ _	<i>range</i> = >=0.0 <i>default</i> = 1.0
K2 (IncrSum) Gain Constant For X2 Input	_ _ _ _ _ _ _	<i>range</i> = >=0.0 <i>default</i> = 1.0
K3 (IncrSum) Gain Constant For X3 Input	_ _ _ _ _ _ _	<i>range</i> = >=0.0 <i>default</i> = 1.0
K4 (IncrSum) Gain Constant For X4 Input	_ _ _ _ _ _ _	<i>range</i> = >=0.0 <i>default</i> = 1.0
NOCINPTS # Of Control Input Connections	_	<i>range</i> = 0 to 4 <i>default</i> = 0

PM Incremental Summer CTL Algorithm

PM88-613
Page 3 of 4
06/06

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Reg Control Incr/Sum Algo Display (Continued)

<u>CISRC</u> (Control-Input-Connection Source)	<u>CISRC</u> (point.parameter)	<u>Destination Para</u> <u>-meter (CIDSTN)</u>
<u>Input #</u>		
1		
2		
3		
4		

Output Configuration Display

NOCOPTS # Of Control Output Connections	_	range = 0 to 4 default = 1
CODSTN (Control-Output-Connection Destination)		
<u>Output #</u>	<u>CODSTN</u> (point.parameter)	
1		
2		
3		
4		
OPHILM Output High Limit In Percent		range = OPLOLM – 106.9 & NaN default = 105.0
OPLOLM Output Low Limit In Percent		range = -6.9 – OPHILM, & NaN default = -5.0
SAFEOP Safe Output Limit In Percent		range = -6.9 to to 106.9 & NaN default = NaN
OPMCHLM Output Minimum Change In %		range = >=0.0, and NaN default = 0.0
OPROCLM OP Rate Of Change Limit In %		range = >=0.0, and NaN default = NaN
\$OPTOL Output Tolerance in %		range = 0.0 to 106.9 default = 0.0
OUTIND (R620 and later) Reverse Output Indicator	Direct Reverse	4 - 20mA = 0 – 100% 20 - 4mA = 0 – 100% Note: With R670 and later, when this parameter is set to Reverse, the values of the displayed output and the related output parameters are changed. Refer to the definition of the OUTIND parameter in the PM Family Parameter Dictionary, XPM09.

PM Incremental Summer CTL Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Alarming Display - N/A if PNTFORM = Componnt (Continued)

As you enter alarm priorities in the next section please refer to the following.

NoAction	Alarm is not reported to the system and not annunciated (R670 & later)
Journal	Alarm is historized, not reported to US, not annunciated
Low	Alarm is historized, reported to US, and annunciated
High	Alarm is historized, reported to US, and annunciated
Emergency	Alarm is historized, reported to US, and annunciated
Printer	Not historized, reported to the printer, not annunciated
JnlPrint	Alarm historized, reported to the printer, not annunciated

Alarming Display - N/A if PNTFORM = Componnt

\$AUXUNIT (R620 and Later) Auxiliary Unit		<i>range</i> = Any configured LCN Unit ID <i>default</i> = NaN
\$REALARM (R660 and Later) Re-alarming Interval		<i>range</i> = 0 to 9999 minutes <i>default</i> = 0 minutes
BADOCOPT BADOC Alarm Option	Off On	Bad Output Connection Alarm is not initially permitted Bad Output Connection Alarm is initially permitted
BADOCPR BADOC Alarm Priority	NoAction Journal Low High Emergency Printer JnlPrint (R670 and Later)	

OPALDB Output Alarm Deadband		<i>range</i> = 0 - 25.0 but $\leq$ (OPHITP-OPLOTP)/2 <i>default</i> = 5.0 Output Units
OPHITP Output High Alarm Trip Point		<i>range</i> = OPLOTP to OPHILM and NaN <i>default</i> = NaN
OPHIPR Output High Alarm Priority	NoAction Journal Low High Emergency Printer JnlPrint (R670 and Later)	
OPLOTP Output Low Alarm Trip Point		<i>range</i> = OPLOLM to OPHITP and NaN <i>default</i> = NaN
OPLOPR Output Low Alarm Priority	NoAction Journal Low High Emergency Printer JnlPrint (R670 and Later)	

ALENBST Point Alarm Enable Status	Enable Disable Inhibit	<u>Displayed</u> Yes No No	<u>Logged</u> Yes Yes No	<u>Reported To EIP</u> Yes Yes No
---	-------------------------------------	-------------------------------------	-----------------------------------	--

PM Logic Point

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Point Assignment Display

NAME Tag Name		<i>range</i> = Not applicable <i>default</i> = Blank
NODETYP Node Type	PM	A PM point is being configured If an HPM, APM, LM or SM is being configured, go to the appropriate forms for those devices.
PNTFORM Point Form	Full Componnt	Point is fully displayed and alarmed Pt. is partially displayed but not alarmed
PTDESC Point Descriptor		<i>range</i> = Not applicable <i>default</i> = Blank
ASSOCDSP (R610 and later) Associated Display		<i>range</i> = Not applicable <i>default</i> = Blank
\$CDETAIL (R620 and later) Point Custom Display		<i>range</i> = Not applicable <i>default</i> = Blank
UNIT Process Unit Point Is Assigned To		<i>range</i> = Two Alphanumeric Characters <i>default</i> = Not applicable
NTWKNUM NIM's UCN That This Point Is In		<i>range</i> = 1 to 20 <i>default</i> = Not applicable
NODENUM PMM's Address On The UCN		<i>range</i> = 1 to 64 <i>default</i> = Not applicable
SLOTNUM Slot Number		<i>range</i> = 1-80 (but<= NLOGSLOT) <i>default</i> = Not applicable

N/A if PNTFORM = Componnt.

PRIMMOD Primary Module ID		<i>range</i> = Not Applicable <i>default</i> = Null
-------------------------------------	----------------------	--

Point Assignment Display

LOGMIX Logic Mix	12_16_4	12 inputs	16 logic blocks	4 outputs
	12_8_8	12 inputs	8 logic blocks	8 outputs
	12_0_12	12 inputs	0 logic blocks	12 outputs

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

LISRC (Logic Point Inputs)

Input	Source Point	Parameter
L1		
L2		
L3		
L4		
L5		
L6		
L7		
L8		
L9		
L10		
L11		
L12		

Off
On
Hold

- "Off" state is substituted for bad input
- "On" state is substituted for bad input
- Last good value is subed. for bad input

Logic Flags And Numerics - Initial Values

NN1 | | **NN2** | |
NN3 | | **NN4** | |

Flags 7-12 are used as local variables

FL7	Off	On	FL8	Off	On
FL9	Off	On	FL10	Off	On
FL11	Off	On	FL12	Off	On

PM Logic Point

PM88-614
Page 3 of 7
12/01

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Logic Output Connections Display

The following 2 parameters are not to be configured but are to be used for making choice when filling out the output-connections table below:

LOSRC Logic-Output-Conn Source	L1...L12 FL1...FL12 NN1...NN4 SO1..SO16	L(external input) = a logical or a real value FL(flag) = either a 1(On) or a 0(Off) NN(numeric) = data type of Real SO(Status Output) = Boolean (0 or 1)
LOENBL Logic Output Enable	L1...L12 FL1...FL12 SO1..SO16	L(external input) = a logical or a real value FL(flag) = either a 1(On) or a 0(Off) SO(Status Output) = Boolean (0 or 1)

Logic Output Destination Table **LODSTN** (Logic-Output-Connection Destination)

<u>LOSRC</u> defaults = FL1	<u>Destination Point.Parameter</u> defaults = Null.Null	<u>LOENBL</u> defaults = FL2
01 _ _ _ .	_ _ _ _ _	_ _ _ .
02 _ _ _ .	_ _ _ _ _	_ _ _ .
03 _ _ _ .	_ _ _ _ _	_ _ _ .
04 _ _ _ .	_ _ _ _ _	_ _ _ .
Enter data in lines 5 through 8 if LOGMIX = 12_8_8 or 12_0_12		
05 _ _ _ .	_ _ _ _ _	_ _ _ .
06 _ _ _ .	_ _ _ _ _	_ _ _ .
07 _ _ _ .	_ _ _ _ _	_ _ _ .
08 _ _ _ .	_ _ _ _ _	_ _ _ .
Enter data in lines 9 through 12 if LOGMIX = 12_0_12		
09 _ _ _ .	_ _ _ _ _	_ _ _ .
10 _ _ _ .	_ _ _ _ _	_ _ _ .
11 _ _ _ .	_ _ _ _ _	_ _ _ .
12 _ _ _ .	_ _ _ _ _	_ _ _ .

PM Logic Point

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Logic Descriptors Display – N/A if PNTFORM = Componnt.

NODESC

Number of Generic Descriptors

|_|

range = 0 to 12

default = 0

The following parameter is not to be configured but is to be used for making choices when filling out the logic descriptors table below:

PRMDESC(1-12)

Parameter Descriptor Assignment

L1...L12

FL1..FL12

NN1..NN4

SO1..SO16

Logic point inputs

Flags

Numerics

Status Outputs

Logic Descriptors Table

<u>Descr#</u>	<u>Generic Descriptors</u> (defaults = blanks)	<u>Descr.Assign</u> (defaults = SO1)
1	GENDESC (1) _.	PRMDESC (1) _.
2	GENDESC (2) _.	PRMDESC (2) _.
3	GENDESC (3) _.	PRMDESC (3) _.
4	GENDESC (4) _.	PRMDESC (4) _.
5	GENDESC (5) _.	PRMDESC (5) _.
6	GENDESC (6) _.	PRMDESC (6) _.
7	GENDESC (7) _.	PRMDESC (7) _.
8	GENDESC (8) _.	PRMDESC (8) _.
9	GENDESC (9) _.	PRMDESC (9) _.
10	GENDESC (10) _.	PRMDESC (10) _.
11	GENDESC (11) _.	PRMDESC (11) _.
12	GENDESC (12) _.	PRMDESC (12) _.

PM Logic Point

PM88-614
Page 5 of 7
12/01

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Use the appropriate section of this form for each Logic Block (n) required. Circle the Algorithm type (for example, AND, OR, etc.) and enter/select the parameters that apply for that algorithm.

In the following tables, valid entries for S1, S2, S3, S4, are: L1 - L12, SO1 - SO24, or FL1 - FL12. Valid entries for R1, or R2 are: L1 - L12, and NN1 - NN8. The Logic Block outputs are SO1 through SO16 or SO1 through SO24.

LOGALGID (n) Logic Block n = _____ Enter 1-24 for LOGMIX 12-24-4; Enter 1-16 for LOGMIX 12-16-8

NULL	AND	OR	NAND	NOR		
S1(n)		_ _ _ _		Default = L1	S1Rev(n)	OFF ON
S2(n)		_ _ _ _		Default = L1	S2Rev(n)	OFF ON
S3(n)		_ _ _ _		Default = L1	S3Rev(n)	OFF ON

LOGALGID (n) Logic Block n = _____ Enter 1-24 for LOGMIX 12-24-4; Enter 1-16 for LOGMIX 12-16-8

NULL	NOT	
S1(n)		_ _ _ _ Default = L1

LOGALGID (n) Logic Block n = _____ Enter 1-24 for LOGMIX 12-24-4; Enter 1-16 for LOGMIX 12-16-8

NULL	XOR	
S1(n)		_ _ _ _ Default = L1
S2(n)		_ _ _ _ Default = L1

PM Logic Point

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

LOGALGID (n) Logic Block n = ____ Enter 1-24 for LOGMIX 12-24-4; Enter 1-16 for LOGMIX 12-16-8

NULL	QOR2	QOR3	
S1(n)	_ . _ . _ . _		Default = L1
S2(n)	_ . _ . _ . _		Default = L1
S3(n)	_ . _ . _ . _		Default = L1
S4(n)	_ . _ . _ . _		Default = L1

LOGALGID (n) Logic Block n = ____ Enter 1-24 for LOGMIX 12-24-4; Enter 1-16 for LOGMIX 12-16-8

NULL	SWITCH	FLIPFLOP	CHDETECT
S1(n)	_ . _ . _ . _		Default = L1
S2(n)	_ . _ . _ . _		Default = L1
S3(n)	_ . _ . _ . _		Default = L1

LOGALGID (n) Logic Block n = ____ Enter 1-24 for LOGMIX 12-24-4; Enter 1-16 for LOGMIX 12-16-8

NULL	EQ	NE	GT	GE	LT	LE
R1(n)		_ . _ . _ . _				Default = L1
R2(n)		_ . _ . _ . _				Default = L1
Deadband (n)		_ . _ . _ . _				Range = >=0 Default = 1.0

LOGALGID (n) Logic Block n = ____ Enter 1-24 for LOGMIX 12-24-4; Enter 1-16 for LOGMIX 12-16-8

NULL	CHECKBAD	
R1(n)	_ . _ . _ . _	Default = L1

PM Logic Point

PM88-614
Page 7 of 7
12/01

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

LOGALGID (n) Logic Block n = _____ Enter 1-24 for LOGMIX 12-24-4; Enter 1-16 for LOGMIX 12-16-8			
NULL	PULSE	MINPULSE	MAXPULSE
S1(n)	_. _ . _ . _	Default = L1	
Dlytime(n)	_. _ . _ . _	Range = 0-8000 Default = 1.0	

LOGALGID (n) Logic Block n = _____ Enter 1-24 for LOGMIX 12-24-4; Enter 1-16 for LOGMIX 12-16-8		
NULL	DELAY	
S1(n)	_. _ . _ . _	Default = L1

LOGALGID (n) Logic Block n = _____ Enter 1-24 for LOGMIX 12-24-4; Enter 1-16 for LOGMIX 12-16-8		
NULL	ONLY	OFFDLY
S1(n)	_. _ . _ . _	Default = L1
Dlytime(n)	_. _ . _ . _	Range = 0-8000 Default = 1.0

LOGALGID (n) Logic Block n = _____ Enter 1-24 for LOGMIX 12-24-4; Enter 1-16 for LOGMIX 12-16-8		
NULL	WATCHDOG	
Dlytime(n)	_. _ . _ . _	Range = 0-8000 Default = 1.0

PM88-615
Page 1 of 4
09/08

PRIMMOD Primary Module ID		N/A if PNTFORM = Componnt. <i>range</i> = Not Applicable <i>default</i> = Null
		

PM Middle of 3 PV Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

PV Algorithm Display

PVALGID PV Algorithm Identifier	NULL MidOf3	No affect Middle of Three
---	-----------------------	------------------------------

PV Configuration Display

PVEUHI PV High Range In Engr Units	_ _ _ _	<i>range</i> = PVEULO to PVEXEUHI <i>default</i> = 100.0
PVEULO PV Low Range In Engr Units	_ _ _ _	<i>range</i> = PVEXEULO to PVEUHI <i>default</i> = 0.0
PVFORMAT PV Decimal Point Format	DO D2 D1 D3	D0=9999. D2=99.99 D1=999.9 D3 = 9.999
PVEXEUHI PV Extended Hi Range in EUs	_ _ _ _ _ _ _	<i>range</i> = >=PVEUHI <i>default</i> = 102.9
PVEXEULO PV Extended Lo Range in EUs	_ _ _ _ _ _ _	<i>range</i> = <=PVEULO <i>default</i> = -2.9
PV CLAMP PV Clamping Option	NoClamp Clamp	No clamping of the PV value Clamp PV value at range extension limit

PVSRCOPT PV Source Option	Only Auto All	PV Source selection is not available Selection from PVSOURCE is available
PVSOURCE PV Source	Auto Man Sub	Field-wiring /memory-fetch supplies PV PV is supplied by Operator or program A value is substituted by a CL program

TF PV Filter Lag Time in Minutes	_ _ _ _	<i>range</i> = 0.0 to 60.0 (minutes) <i>default</i> = 0.0 (PV will not be delayed)
--	---------	---

N/A if PNTFORM = Compnnt.

PVTV PV Target Value in EUs	_ _ _ _ _ _ _	<i>range</i> = PVEXEULO-PVEXEUHI, & NaN <i>default</i> = NaN
OVERVAL Overview Display Value	_ _ _ _	<i>range</i> = 0 to 100 <i>default</i> = 25

Reg PV Middle Of 3 Algo Display

PVEQN(MidOf3) PV Equation Type	EqA EqB EqC	Highest good input when 1 or 2 are bad Lowest good input when 1 or 2 are bad Average of any and all good inputs
--	--------------------------	---

PM Middle of 3 PV Algorithm

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Reg PV Middle Of 3 Algo Display

PISRC (PV-Input-Connection Source) <u>Input#</u>	PISRC (point.parameter)	<u>Destination Para</u> <u>-meter (PIDSTN)</u>
1		P1
2		P2
3		P3

Alarming Display – N/A if PNTFORM = Componnt

As you enter alarm trip points and alarm priorities in the next section please refer to the following alarm Priority definitions and the note.

NoAction	Alarm is not reported to the system and not annunciated (R670 & later)
Journal	Alarm is historized, not reported to US, not annunciated
Low	Alarm is historized, reported to US, and annunciated
High	Alarm is historized, reported to US, and annunciated
Emergency	Alarm is historized, reported to US, and annunciated
Printer	Not historized, reported to the printer, not annunciated
JnlPrint	Alarm historized, reported to the printer, not annunciated

Note: If you do not enter a trip point value for a given pair of trip-points and alarm-priorities, do not Circle an alarm priority option for that pair (that is, no trip point, no alarm priority).

Alarming Display - N/A if PNTFORM = Componnt

\$AUXUNIT Auxiliary Unit	.	range = Any configured LCN Unit ID default = NaN
\$ALDLOPT (R620 and later) Alarm Delay Option	None OffDlyLo OffDlyHi OffDlyEm OnDlyLo OnDlyHi OnDlyEm	Off Delay Lo Off Delay Hi Off Delay Emergency On Delay Lo On Delay Hi On Delay Emergency
\$DLBADAL (R681 and later) Delay for BADPV	None Offdelay	range = Offdelay, None default = None
DLTIME Delay Time(R620 and later)	. . .	range = 0 to 9999 seconds default = 0 seconds
\$REALARM Re-alarming Interval (R660 and later)	. . .	range = 0 to 9999 minutes default = 0 minutes
PVALDB PV Alarm Deadband In %	Half One Two Three Four Five EU	
PVALDBEU PV Alarm Deadband In EU		range > = 0.0 default = 1.0
PVHITP PV High Alarm Trip Point		range = PVLOTP - PVHHTP, & NaN default = NaN
PVHIPR PV High Alarm Priority	NoAction Journal Low High Emergency Printer JnlPrint (R670 and later)	
\$HISELCT (R681 and later) PV High Selective Cutout	Cutout Allow	range = Cutout, Allow default = Cutout

PM Middle of 3 PV Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Alarming Display - N/A if PNTFORM = Component (Continued)

PVLOTP PV Low Alarm Trip Point	_ _ _ _ _ _ _	<i>range</i> = PVLLTP - PVHITP, & NaN <i>default</i> = NaN					
PVLOPR PV Low Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$LOSELCT (R681 and later) PV Low Selective Cutout	Cutout Allow	<i>range</i> = Cutout, Allow <i>default</i> = Cutout					
PVHHTP(RegCtl) PV Hi Hi Alarm Trip Point	_ _ _ _ _ _ _	<i>range</i> = PVHITP to PVEUHI, & NaN <i>default</i> = NaN					
PVHHPR PV High High Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$HHSELCT (R681 and later) PV High High Selective Cutout	Cutout Allow	<i>range</i> = Cutout, Allow <i>default</i> = Cutout					
PVLLTP(RegCtl) PV Low Low Alarm Trip Point	_ _ _ _ _ _ _	<i>range</i> = PVEULO - PVLOTP, & NaN <i>default</i> = NaN					
PVLLPR PV Low Low Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$LLSELCT (R681 and later) PV Low Low Selective Cutout	Cutout Allow	<i>range</i> = Cutout, Allow <i>default</i> = Cutout					
PVSGCHTP PV Significant Change Alarm Trip Point	_ _ _ _ _ _ _	<i>range</i> = >=0.0, and NaN <i>default</i> = NaN					
PVROCTP PV Pos Rate Of Change Trip Point	_ _ _ _ _ _ _	<i>range</i> = >=0.0, and NaN <i>default</i> = NaN					
PVROCPPR PV Pos Rate Of Chg Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$RPSELCT (R681 and later) PV Positive Rate of Change Selective Cutout	Cutout Allow	<i>range</i> = Cutout, Allow <i>default</i> = Cutout					
PVROCNTP PV Neg Rate Of Change Trip Point	_ _ _ _ _ _ _	<i>range</i> = >=0.0, and NaN <i>default</i> = NaN					
PVROCNPR PV Neg Rate Of Chg Alarm Priority	NoAction (R670)	Journal	Low	High	Emergency	Printer	JnlPrint
\$RNSELCT (R681 and later) PV Negative Rate of Change Selective Cutout	Cutout Allow	<i>range</i> = Cutout, Allow <i>default</i> = Cutout					
BADPVPR Bad-PV Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
ALENBST Point Alarm Enable Status	Enable	<u>Displayed</u>		<u>Logged</u>		<u>Reported To EIP</u>	
	Disable	Yes		Yes		Yes	
	Inhibit	No		No		No	

PRIMMOD		range = Not Applicable
Primary Module ID		default = Null

PM Override Selector CTL Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Control Algorithm Display

CTLALGID Control Algorithm Identifier	NULL OrSel	No affect Override Selector
---	---------------------------------	--------------------------------

PV Configuration Display

N/A if PNTFORM = Componnt.

OVERVAL Overview Display Value		range = 0 to 100 default = 25
--	---------------------------	----------------------------------

Mode Configuration Display

RCASOPT Remote Cascade Option	None Ddc	Local cascade is the only valid cascade AM strategy stores to OP. No OP limits.
SHEDTIME Remote Cascade Shed Time		range = 0 to 1000 (seconds) default = 0 (mode shed disabled)
SHEDMODE Shed Mode	Man BCas	Supervisory point will shed to Manual Supervisory point will shed to BackupCas
NMODE (RegCtl) RegCtl Point's Normal Mode	None Man Cas Bcas	No configured "normal" operating mode Manual is the "normal" operating mode Cascade is "normal" operating mode Backup Cas is "normal" operating mode
NMODATTR Normal Mode Attribute	None Operator Program	Parameter NMODE sets "normal" mode Operator sets "normal" operating mode Program sets "normal" operating mode
MODEPERM Mode Permissive	Permit NotPerm	Operator can change this point's mode Optr. cannot change this point's mode
\$MODESEL (R630 and later) Mode Selection List	Man Prog Cas Bcas	Man, Cas, and Bcas mode, and Prog mode attribute are allowed for this data point.
EXTSWOPT External Mode Switching	None Ems	No external mode switching is allowed Ext. source can change point's mode

Reg Control OrSel Algo Display

CTLEQN Control Equation Type	EqA EqB	Selects the highest input Selects the lowest input
OROPT Override Feedback Option	Off On	Hi Lo selector without override feedback Hi Lo selector with override feedback
OROFFSET Override Offset	Off On	No override offset is applied Offset of Gain times Error is applied
M # Of Initializable Control Algorithm Inputs		range = 2 to 4 default = 2

PM88-616
Page 3 of 5
09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

XEUHI	_ _ _ _ _ _ _ _ _	<i>range = >= XEULO default = 100.0</i>
X Input High Range in EUs		
XEULO	_ _ _ _ _ _ _ _ _	<i>range = <= XEUHI default = 0.0</i>
X Input Low Range In EUs		
NOCINPTS	_	<i>range = 0 to 4 default = 0</i>
# Of Control Input Connections		
CISRC (Control-Input-Connection Source)		<u>Destination Parameter (CIDSTN)</u>
<u>Input#</u>	<u>CISRC (point.parameter)</u>	
1	_ _ _ _ _ _ _ _ _	_ _ _ _ _ _ _ _ _
2	_ _ _ _ _ _ _ _ _	_ _ _ _ _ _ _ _ _
3	_ _ _ _ _ _ _ _ _	_ _ _ _ _ _ _ _ _
4		

NCOPTS *range = 0 to 4*
default = 1
 # Of Control Output Connections |_|

CODSTN (Control-Output-Connection Destination)
Output # **CODSTN** (point.parameter)

1	
2	
3	
4	

OPHILM Output High Limit In Percent	_._._._._	<i>range</i> = OPLOLM – 106.9 & NaN <i>default</i> = 105.0
OPLOLM Output Low Limit In Percent	_._._._._	<i>range</i> = -6.9 – OPHILM, & NaN <i>default</i> = -5.0
SAFEOP Safe Output Limit In Percent	_._._._._	<i>range</i> = -6.9 to 106.9 & NaN <i>default</i> = NaN
OPMCHLM Output Minimum Change In %	_._._._._	<i>range</i> = >=0.0, and NaN <i>default</i> = 0.0
OPROCLM OP Rate Of Change Limit In %	_._._._._	<i>range</i> = >=0.0, and NaN <i>default</i> = NaN
\$OPTOL Output Tolerance in %	_._._._._	<i>range</i> = 0.0 to 106.9 <i>default</i> = 0.0

PM Override Selector CTL Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

OUTIND (R620 and later) Reverse Output Indicator	Direct Reverse	4 - 20mA = 0 – 100% 20 - 4mA = 0 – 100% Note: With R670 and later, when this parameter is set to Reverse, the values of the displayed output and the related output parameters are changed. Refer to the definition of the OUTIND parameter in the PM Family Parameter Dictionary, XPM09.
--	--------------------------	---

Alarming Display - N/A if PNTFORM = Componnt

As you enter alarm priorities in the next section please refer to the following.

NoAction	Alarm is not reported to the system and not annunciated (R670 & later)
Journal	Alarm is historized, not reported to US, not annunciated
Low	Alarm is historized, reported to US, and annunciated
High	Alarm is historized, reported to US, and annunciated
Emergency	Alarm is historized, reported to US, and annunciated
Printer	Not historized, reported to the printer, not annunciated
JnlPrint	Alarm historized, reported to the printer, not annunciated

Alarming Display - N/A if PNTFORM = Componnt

\$AUXUNIT Auxiliary Unit	_ _	<i>range</i> = Any configured LCN Unit ID <i>default</i> = NaN
\$DLBADAL (R681 and later) Delay for BADCTL	None Offdelay	<i>range</i> = Offdelay, None <i>default</i> = None
DLTIME Delay Time(R620 and later)	_ _ _	<i>range</i> = 0 to 9999 seconds <i>default</i> = 0 seconds
\$REALARM Re-alarming Interval	_ _ _	<i>range</i> = 0 to 9999 minutes <i>default</i> = 0 minutes
BADOCOPT BADOC Alarm Option	Off On	Bad Output Connection Alarm is not initially permitted Bad Output Connection Alarm is initially permitted
BADOCPR BADOC Alarm Priority	NoAction Journal Low High Emergency Printer JnlPrint (R670 and later)	

OPALDB Output Alarm Deadband	_ _ _ _	<i>range</i> = 0 - 25.0 but $\leq$ (OPHITP-OPLOTP)/2 <i>default</i> = 5.0 Output Units
OPHITP Output High Alarm Trip Point	_ _ _ _	<i>range</i> = OPLOTP TO OPHILM and NaN <i>default</i> = NaN
OPHIPR Output High Alarm Priority	NoAction Journal Low High Emergency Printer JnlPrint (R670)	
OPLOTP Output Low Alarm Trip Point	_ _ _ _	<i>range</i> = OPLOLM TO OPHITP and NaN <i>default</i> = NaN
OPLOPR Output Low Alarm Priority	NoAction Journal Low High Emergency Printer JnlPrint (R670)	

PM Override Selector CTL Algorithm

PM88-616
Page 5 of 5
09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

BADCTLPR Bad-control Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
ALENBST Point Alarm Enable Status			<u>Displayed</u>		<u>Logged</u>	<u>Reported To EIP</u>	
	Enable		Yes		Yes	Yes	
	Disable		No		Yes	Yes	
	Inhibit		No		No	No	

CTLALGID Control Algorithm Identifier	<i>Null</i> Pid	No affect Proportional, Integral and Derivative
---	--------------------	--

PM PID CTL Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

PV Configuration Display

PVEUHI PV High Range In Engr Units	_ _ _ _	<i>range =</i> >=PVEULO <i>default =</i> 100.0
PVEULO PV Low Range In Engr Units	_ _ _ _	<i>range =</i> < = PVEUHI <i>default =</i> 0.0
PVFORMAT PV Decimal Point Format	DO D1	D2 D3 D0=9999. D1=999.9 D2=99.99 D3 = 9.999

PVSRCOPT PV Source Option	Only Auto All	PV Source selection is not available Selection from PVSOURCE is available
PVSOURCE PV Source	Auto Man Sub	Field-wiring/memory -fetch supplies PV PV is supplied by Operator or program A value is substituted by a CL program
OVERVAL Overview Display Value	_ _ _	<i>range =</i> 0 to 100 <i>default =</i> 25

Mode Configuration Display

RCASOPT Remote Cascade Option	None Spc Ddc DdcRsp Rsp	Local cascade is the only valid cascade AM strategy stores to SP within SP limits AM Strategy stores to OP. No OP limits. AM strategy does Ddc and Rsp functions AM strategy stores to SP when this Point is in Auto and is being initialized By its secondary. SP limits are applied.
SHEDTIME Remote Cascade Shed Time	_ _ _ _	<i>range =</i> 0 to 1000 (seconds) <i>default =</i> 0 (mode shed disabled)
SHEDMODE (If Shedtime ≥ 1) Shed Mode	Man Auto BCas	Supervisory point will shed to Manual, Automatic, or Backup Cascade mode.
NMODE RegCtl Point's Normal Mode	None Man Auto Cas Bcas	No configured "normal" operating mode Manual is the "normal" operating mode Automatic is "normal" operating mode Cascade is "normal" operating mode Backup Cascade is "normal" operating mode
		N/A if NMODE = None
NMODATTR Normal Mode Attribute	None Operator Program	Parameter NMODE sets "normal" mode Operator sets "normal" operating mode Program sets "normal" operating mode

PM PID CTL Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

MODEPERM Mode Permissive	Permit NotPerm	Operator can change this point's mode Optr. cannot change this point's mode
\$MODESEL (R630 and later) Mode Selection List	Man Prog Auto Cas Bcas	Man, Auto, Cas, Bcas mode, and Prog mode attribute are allowed for this data point.
EXTSWOPT External Mode Switching	None Ems	No external mode switching is allowed Ext. source can change point's mode

Setpoint Display

SPHILM SP High Limit		<i>range</i> = SPLOLM – SPEUHI, and NaN <i>default</i> = NaN
SPLOLM SP Low Limit		<i>range</i> = SPEULO – SPHILM, and NaN <i>default</i> = NaN
\$SPTOL Set Point Tolerance		<i>range</i> = ≥ 0.0 <i>default</i> = 0.0
SP Set Point In Engineering Units Of The PV		<i>range</i> = SPLOLM to SPHILM <i>default</i> = 0.0
SPOPT Set Point Option Asp is invalid if PNTFORM=Componnt.	None Tv Asp	No specialized options are available Target value processing Advisory deviation alarming
RBOPT Ratio Bias Option	NoRatBi FixRatBi AutoRat AutoBi	No ratio/bias is used to calculate the SP Fixed ratio (R) and fixed bias(B) are used R is back calculated during initialization B is back calculated during initialization
RTHILM Ratio High Limit		<i>range</i> = RTLOLM – 100.0, & NaN <i>default</i> = 100.0
RTLOLM Ratio Low Limit		<i>range</i> = 0.01 - RTHILM, & NaN <i>default</i> = 0.01
BSHILM Bias High Limit		<i>range</i> = $\geq$ BSLOLM, & NaN <i>default</i> = 50.0
BSLOLM Bias Low Limit		<i>range</i> = $\leq$ BSHILM, & NaN <i>default</i> = -50.0
RATIO Ratio		<i>range</i> = RTLOLM to RTHILM <i>default</i> = 1.0
BIAS Bias Parameter		<i>range</i> = BSLOLM to BSHILM <i>default</i> = 0.0

Reg Control Pid Algo Display

PIDFORM PID Controller Form	Interact Ideal	(Proportional + Integral) x (Derivative) (Proportional) + (Integral) + (Derivative)
CTLEQN Control Equation Type	EqA EqB EqC EqD	P, I & D act on Error P & I act on Error, D acts on PV I acts on Error, P & D act on PV Integral-only control

PM **PID** CTL Algorithm

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

PVTRACK PV Tracking Option	No Track Track	SP will never be set equal to PV Man mode or init. causes SP to track PV
CTLACTN Control Action	Reverse Direct	As PV increases, Output decreases As PV increases, Output increases

Reg Control Pid Algo Display (continued)

N/A if CTLEQN = EqD.

Parameter	Units	Range	Default
GAINOPT Gain (K) Option	Ext NonLin Gap Lin	$K = KLIN * KEXT$ (gain from external source) $K = KLIN * ((NLFM) + (NLGAIN * [PVP - SPP] / [100]))$ $K = KLIN * KGAP$ if $PV > (SP - GAPLO)$ or if $PV < (SP + GAPHI)$, else $K = KLIN$. K = the value entered by the user	
K (Pid) Overall Gain In % Per %	_____	range = 0.0 – 240.0 default = Not applicable	
KLIN Linear Gain Factor	{ _____ }	range = 0.0 – 240.0 default = 1.0	
KGAP Gap Gain Factor	_____	range = 0.0 to 1.0 default = 1.0	
GAPHI Gap High Limit	_____	range = ≥ 0.0 default = 0.0	
GAPLO Gap Low Limit	_____	range = ≥ 0.0 default = 0.0	
NLGAIN Non Linear Gain	_____	range = 0.0 – 240.0 default = 0.0	
NLFM Non Linearity Form	NLFM = 0 NLFM = 1	K can go to zero K cannot go to < 1	
KEXT External Gain Modifier	_____	range = 0.0 to 240.0 default = 1.0	
T1 Integral Time In Minutes	T1 _____	range = 0.0 – 1440.0 default = 0.0 (minutes)	
T2 Derivative Time In Minutes	T2 _____	range = 0.0 – 1440.0 default = 0.0 (minutes)	

NOCINPTS		<i>range = 0 to 2</i>
# Of Control Input Connections		<i>default = 1</i>
CISRC (Control-Input-Connection Source)		
<u>Input#</u>	<u>CISRC (point.parameter)</u>	<u>Destination Parameter (CIDSTN)</u>
1		PVAUTO
2		SP

PM PID CTL Algorithm

PM88-617
Page 5 of 9
09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Output Configuration Display

NOCOPTS		range = 0 to 4 default = 1
# Of Control Output Connections		
CODSTN (Control-Output-Connection Destination)		
Output # (N/A if NOCOPTS = 0) <u>CODSTN (point.parameter)</u>		
1		
2		
3		
4		

(N/A if NOCOPTS > 0)

CVEUHI		range = > = CVEULO default = 100.0
Output Engineering Unit High Range		
CVEULO		range = > = CVEUHI default = 0.0
Output Engineering Unit Low Range		

OPHILM		range = OPLOLM - 106.9 & NaN default = 105.0
Output High Limit In Percent		
OPLOLM		range = -6.9 - OPHILM, & NaN default = -5.0
Output Low Limit In Percent		
SAFEOP		range = -6.9 to 106.9, & NaN default = NaN
Safe Output Limit In Percent		
OPMCHLM		range = > = 0.0, and NaN default = 0.0
Output Minimum Change In %		
OPROCLM		range = > = 0.0, and NaN default = NaN
OP Rate Of Change Limit In %		
\$OPTOL		range = 0.0 to 106.9 default = 0.0.
Output Tolerance in %		
OUTIND (R620 and later)	Direct	4 - 20mA = 0 – 100%
Reverse Output Indicator	Reverse	20 – 4mA = 0 – 100%
Note: With R670 and later, when this parameter is set to Reverse, the values of the displayed output and the related output parameters are changed. Refer to the definition of the OUTIND parameter in the PM Family Parameter Dictionary, XPM09.		

PM PID CTL Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Alarming Display - N/A if PNTFORM = Componnt

As you enter alarm trip points and alarm priorities in the next section please refer to the following alarm priority definitions and the note.

NoAction	Alarm is not reported to the system and not annunciated (R670 & later)
Journal	Alarm is historized, not reported to US, not annunciated
Low	Alarm is historized, reported to US, and annunciated
High	Alarm is historized, reported to US, and annunciated
Emergency	Alarm is historized, reported to US, and annunciated
Printer	Not historized, reported to the printer, not annunciated
JnlPrint	Alarm historized, reported to the printer, not annunciated

Note: If you do not enter a trip point value for a given pair of trip-points and alarm-priorities, do not circle an alarm priority option for that pair (that is, no trip point, no alarm priority).

\$AUXUNIT Auxiliary Unit	_ _ _	<i>range = Any configured LCN Unit ID default = NaN</i>
\$ALDLOPT (R620 and later) Alarm Delay Option	None OffDlyLo OffDlyHi OffDlyEm OnDlyLo OnDlyHi OnDlyEm	Off Delay Lo Off Delay Hi Off Delay Emergency On Delay Lo On Delay Hi On Delay Emergency
\$DLBADAL (R681 and later) Delay for BADPV	None Offdelay	<i>range = Offdelay, None default = None</i>
\$DLTIME (R620 and later) Delay Time	_ _ _	<i>range = 0 to 9999 seconds default = 0 seconds</i>
\$REALARM (R660 and later) Re-alarming Interval	_ _ _	<i>range = 0 to 9999 minutes default = 0 minutes</i>
BADOCOPT BADOC Alarm Option	Off On	Bad Output Connection Alarm is not initially permitted Bad Output Connection Alarm is Initially permitted
BADOCPR BADOC Alarm Priority	NoAction Journal Low High Emergency Printer JnlPrint (R670 and later)	

PM PID CTL Algorithm

PM88-617

Page 7 of 9

09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Alarming Display - N/A if PNTFORM = Component

OPALDB Output Alarm Deadband	_ _ _ _ _ _ _	range = 0 - 25.0 but $\leq$ (OPHITP-OPLOTP)/2 default = 5.0 Output Units					
OPHITP Output High Alarm Trip Point	_ _ _ _ _ _ _	range = OPLOTP TO OPHILM and NaN default = NaN					
OPHIPR Output High Alarm Priority	NoAction (R670)	Journal	Low	High	Emergency	Printer	JnlPrint
OPLOTP Output Low Alarm Trip Point	_ _ _ _ _ _ _	range = OPLOLM TO OPHITP and NaN default = NaN					
OPLOPR Output Low Alarm Priority	NoAction (R670)	Journal	Low	High	Emergency	Printer	JnlPrint

PVALDB PV Alarm Deadband In %	Half	One	Two	Three	Four	Five	EU
PVALDBEU PV Alarm Deadband In EU	_ _ _ _	range $\geq$ 0.0 default = 1.0					
PVHITP PV High Alarm Trip Point	_ _ _ _ _ _ _	range = PVLOTP - PVHHTP, & NaN default = NaN					
PVHIPR PV High Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$HISELCT (R681 and later) PV High Selective Cutout	Cutout Allow	range = Cutout, Allow default = Cutout					
PVLOTP PV Low Alarm Trip Point	_ _ _ _ _ _ _	range = PVLLTP - PVHITP, & NaN default = NaN					
PVLOPR PV Low Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$LOSELCT (R681 and later) PV Low Selective Cutout	Cutout Allow	range = Cutout, Allow default = Cutout					

Alarming Display – N/A if PNTFORM = Component

PVHHTP(RegCtl) PV Hi Hi Alarm Trip Point		<i>range</i> = PVHITP to PVEUHI, & NaN <i>default</i> = NaN					
PVHHPR PV High High Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$HHSELCT (R681 and later) PV High High Selective Cutout	Cutout Allow	<i>range</i> = Cutout, Allow <i>default</i> = Cutout					
PVLLTP(RegCtl) PV Low Low Alarm Trip Point		<i>range</i> = PVEULO – PVLOTP, & NaN <i>default</i> = NaN					
PVLLPR PV Low Low Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$LLSELCT (R681 and later) PV Low Low Selective Cutout	Cutout Allow	<i>range</i> = Cutout, Allow <i>default</i> = Cutout					
PVSGCHTP PV Signif Chg Alarm Trip Point		<i>range</i> = >=0.0, and NaN <i>default</i> = NaN					
PVROCPTP PV Pos Rate Of Chg Trip Point		<i>range</i> = >=0.0, and NaN <i>default</i> = NaN					
PVROCPPR PV Pos Rate Of Chg Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$RPSELCT (R681 and later) PV Positive Rate of Change Selective Cutout	Cutout Allow	<i>range</i> = Cutout, Allow <i>default</i> = Cutout					
PVROCNTP PV Neg Rate Of Chg Trip Point		<i>range</i> = >=0.0, and NaN <i>default</i> = NaN					
PVROCNP PV Neg Rate Of Chg Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$RNSELCT (R681 and later) PV Negative Rate of Change Selective Cutout	Cutout Allow	<i>range</i> = Cutout, Allow <i>default</i> = Cutout					
BADPVPR Bad-PV Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
DEVHITP Deviation High Alarm Trip Point		<i>range</i> = >=0.0, and NaN <i>default</i> = NaN					
DEVHIPR Deviation High Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint

Alarming Display – N/A if PNTFORM = Component

[illegible]

PM PID with External Reset Feedback CTL Algorithm

PM88-618
Page 1 of 9
09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Point Assignment Display

NAME Tag Name		<i>range = Not applicable</i> <i>default = Blank</i>
NODETYP Node Type	PM APM HPM	A PM Point Is Being Configured An APM Point Is Being Configured An HPM Point Is Being Configured
PNTFORM Point Form	FuLL Componnt	Point is fully displayed and alarmed Pt. is partially displayed but not alarmed

PTDESC Point Descriptor		<i>range = Not applicable</i> <i>default = Blank</i>
EUDESC Engineering Units Descriptor		<i>range = Not applicable</i> <i>default = Blank</i>
KEYWORD Keyword Descriptor		<i>range = Not applicable</i> <i>default = Blank</i>
ASSOCDSP (R510 and later) Associated Display		<i>range = Not applicable</i> <i>default = Blank</i>
\$CDETAIL (R620 and later) Point Custom Display		<i>range = Not applicable</i> <i>default = Blank</i>
UNIT Process Unit Point Is Assigned To		<i>range = Two Alphanumeric Characters</i> <i>default = Not applicable</i>
NTWKNUM NIM's UCN That This Point Is In		<i>range = 1 to 20</i> <i>default = Not applicable</i>
NODENUM PMM's Address On The UCN		<i>range = 1 to 64</i> <i>default = Not applicable</i>
SLOTNUM Slot Number		<i>range = 1-160 (But <=NCTLSLOT)</i> <i>default = Not applicable</i>

N/A if PNTFORM = Componnt.

PRIMMOD Primary Module ID		<i>Range = Not Applicable</i> <i>Default = Null</i>
-------------------------------------	----------------------	--

Control Algorithm Display

CTLALGID Control Algorithm Identifier	Null PidErfb	No affect PID with External Reset Feedback
---	---	---

PV Configuration Display

PVEUHI PV High Range In Engr Units		<i>range = >=PVEULO</i> <i>default = 100.0</i>
PVEULO PV Low Range In Engr Units		<i>range = <= PVEUHI</i> <i>default = 0.0</i>
PVFORMAT PV Decimal Point Format	DO D1	D2 D3 D0=9999. D1=999.9 D2=99.99 D3 = 9.999

PM PID with External Reset Feedback CTL Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

PVSRCOPT PV Source Option	Only Auto All	PV Source selection is not available Selection from PVSOURCE is available
PVSOURCE PV Source	Auto Man Sub	Field-wiring /memory -fetch supplies PV PV is supplied by Operator or program A value is substituted by a CL program
OVERVAL Overview Display Value	_ _ _ _	range = 0 to 100 default = 25

Mode Configuration Display		
RCASOPT Remote Cascade Option	None Spc Ddc DdcRsp Rsp	Local cascade is the only valid cascade AM strategy stores to SP within SP limits AM Strategy stores to OP. No OP limits. AM strategy does Ddc and Rsp functions AM strategy stores to SP when this point is in Auto and is being initialized by its secondary. SP limits are applied.
SHEDTIME Remote Cascade Shed Time	_ _ _ _	range = 0 to 1000 (seconds) default = 0 (mode shed disabled)
SHEDMODE Shed Mode	Man Auto BCas	Supervisory point will shed to Manual, Automatic, or Backup Cascade mode.
NMODE RegCtl Point's Normal Mode	None Man Auto Cas Bcas	No configured "normal" operating mode Manual is the "normal" operating mode Automatic is "normal" operating mode Cascade is "normal" operating mode Backup Cascade is "normal" operating mode

N/A if NMODE =None

NMODATTR Normal Mode Attribute	None Operator Program	Parameter NMODE sets "normal" mode Operator sets "normal" operating mode Program sets "normal" operating mode
--	------------------------------------	---

MODEPERM Mode Permissive	Permit NotPerm	Operator can change this point's mode Optr. cannot change this point's mode
\$MODESEL (R630 and later) Mode Selection List	Man Prog Auto Cas Bcas	Man, Auto, Cas, and Bcas mode, and Prog mode attribute are allowed for this data point.
EXTSWOPT External Mode Switching	None Ems	No external mode switching is allowed Ext. source can change point's mode

PM PID with External Reset Feedback CTL Algorithm

PM88-618
Page 3 of 9
09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Setpoint Display

SPHILM SP High Limit		<i>range = SPLOLM – SPEUHI, and NaN default = NaN</i>
SPLOLM SP Low Limit		<i>range = SPEULO – SPHILM, and NaN default = NaN</i>
\$SPTOL Set Point Tolerance		<i>range = >=0.0 default = 0.0</i>
SP Set Point In Engineering Units Of The PV		<i>range = SPLOLM to SPHILM default = 0.0</i>
SPOPT Set Point Option Asp is invalid if PNTFORM=Componnt.	None Tv Asp	No specialized options are available Target value processing Advisory deviation alarming
RBOPT Ratio Bias Option	NoRatBi FixRatBi AutoRat AutoBi	No ratio/bias is used to calculate the SP Fixed ratio (R) and fixed bias(B) are used R is back calculated during initialization B is back calculated during initialization
RTHILM Ratio High Limit		<i>range = RTLOLM – 100.0, & NaN default = 100.0</i>
RTLOLM Ratio Low Limit		<i>range = 0.01 - RTHILM, & NaN default = 0.01</i>
BSHILM Bias High Limit		<i>range = >=BSLOLM, & NaN default = 50.0</i>
BSLOLM Bias Low Limit		<i>range = <=BSHILM, & NaN default = -50.0</i>
RATIO Ratio		<i>range = RTLOLM to RTHILM default = 1.0</i>
BIAS Bias Parameter		<i>range = BSLOLM to BSHILM default = 0.0</i>

Reg Control PidErFb Algo Display

PIDFORM PID Controller Form	Interact Ideal	(Proportional + Integral) x (Derivative) (Proportional) +(Integral) + (Derivative)
CTLEQN(Pid) Control Equation Type	EqA EqB EqC EqD	P, I & D act on Error P & I act on Error, D acts on PV I acts on Error, P & D act on PV Integral-only control
PVTRACK PV Tracking Option	No Track Track	SP will never be set equal to PV Man mode or init. Causes SP to track PV
CTLACTN Control Action	Reverse Direct	As PV increases, Output decreases As PV increases, Output increases

PM PID with External Reset Feedback CTL Algorithm

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Reg Control PidErfb Algo Display (continued)

N/A if CTLEQN = EqD.

GAINOPT	Ext	K = K1*KEXT (gain from external source)
Gain (K) Option	NonLin	$K = K1 * ((NLFM) + (NLGAIN * [PVP - SPP] / [100]))$
	Gap	$K = KLIN * KGAP$ if $PV > (SP - GAPLO)$ or if $PV < (SP + GAPHI)$, else $K = KLIN$.
	Lin	$K = \text{the value entered by the user}$
K (Pid)	_ _ _ _ _ _ _	range = 0.0 – 240.0 default = Not applicable
Overall Gain In % Per %		
KLIN	_ _ _ _ _ _ _	range = 0.0 – 240.0 default = 1.0
Linear Gain Factor		
KGAP	_ _ _ _	range = 0.0 to 1.0 default = 1.0
Gap Gain Factor		
GAPHI	_ _ _ _ _ _ _	range = >=0.0 default = 0.0
Gap High Limit		
GAPLO	_ _ _ _ _ _ _	range = >=0.0 default = 0.0
Gap Low Limit		
NLGAIN	_ _ _ _ _ _ _	range = 0.0 – 240.0 default = 0.0
Non Linear Gain		
NLFM	NLFM = 0	K can go to zero
Non Linearity Form	NLFM = 1	K cannot go to < 1
KEXT	_ _ _ _ _ _ _	range = 0.0 to 240.0 default = 1.0
External Gain Modifier		
T1	T1 _ _ _ _ _ _ _	range = 0.0 to 1440.0 default = 0.0 (minutes)
Integral Time In Minutes		
T2	T2 _ _ _ _ _ _ _	range = 0.0 to 1440.0 default = 0.0 (minutes)
Derivative Time In Minutes		
K1 (PidErfb)	_ _ _ _	range = 0.0 to 1.0 default = 1.0
External Reset Feedback Gain Factor		

NOCINPTS	_	<i>range = 0 to 3</i>
#Of Control Input Connections		<i>default = 3</i>
CISRC (Control-Input-Connection Source)		<u>Destination Parameter (CISTN)</u>
<u>Input#</u>	<u>CISRC (point.parameter)</u>	
1	_.....	PVAUTO
2	_.....	RFB
3	_.....	TRFB

PM88-618
Page 5 of 9
09/08

NOCOPTS		range = 0 to 4 default = 1
# Of Control Output Connections		
CODSTN (Control-Output-Connection Destination)		
Output #	CODSTN (point.parameter)	
1		
2		
3		
4		
CVEUHI		range = ≥ 0.0 default = 100.00
CV High Limit In EUs		
CVEULO		range = ≥ 0.0 default = 0.0
CV Low Limit In EUs		
OPHILM		range = OPLOLM – 106.9 & NaN default = 105.0
Output High Limit In Percent		
OPLOLM		range = -6.9 – OPHILM, & NaN default = -5.0
Output Low Limit In Percent		
SAFEOP		range = -6.9 to to 106.9 & NaN default = NaN
Safe Output Limit In Percent		
OPMCHLM		range = ≥ 0.0 , and NaN default = 0.0
Output Minimum Change In %		
OPROCLM		range = ≥ 0.0 , and NaN default = NaN
OP Rate Of Change Limit In %		
\$OPTOL		range = 0.0 to 106.9 default = 0.0
Output Tolerance in %		
OUTIND (R620 and later)	Direct	4 - 20mA = 0 – 100%
Reverse Output Indicator	Reverse	20 – 4mA = 0 – 100%
		Note: With R670 and later, when this parameter is set to Reverse, the values of the displayed output and the related output parameters are changed. Refer to the definition of the OUTIND parameter in the PM Family Parameter Dictionary, XPM09.

PM PID with External Reset Feedback CTL Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Alarming Display - N/A if PNTFORM = Componnt

As you enter alarm trip points and alarm priorities in the next section please refer to the following alarm priority definitions and the note.

NoAction	Alarm is not reported to the system and not annunciated (R670 & later)
Journal	Alarm is historized, not reported to US, not annunciated
Low	Alarm is historized, reported to US, and annunciated
High	Alarm is historized, reported to US, and annunciated
Emergency	Alarm is historized, reported to US, and annunciated
Printer	Not historized, reported to the printer, not annunciated
JnlPrint	Alarm historized, reported to the printer, not annunciated

Note: If you do not enter a trip point value for a given pair of trip-points and alarm-priorities, do not circle an alarm priority option for that pair (that is, no trip point, no alarm priority).

\$AUXUNIT (R520 and later)	<u> </u> . <u> </u>	<i>range</i> = Any configured LCN Unit ID
Auxiliary Unit		<i>default</i> = NaN
\$ALDLOPT (R620 and later)	None	
Alarm Delay Option	OffDlyLo	Off Delay Lo
	OffDlyHi	Off Delay Hi
	OffDlyEm	Off Delay Emergency
	OnDlyLo	On Delay Lo
	OnDlyHi	On Delay Hi
	OnDlyEm	On Delay Emergency

PM PID with External Reset Feedback CTL Algorithm

PM88-618
Page 7 of 9
09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Alarming Display - N/A if PNTFORM = Componnt

\$DLBADAL (R681 and later) Delay for BADPV	None Offdelay	<i>range = Offdelay, None default = None</i>					
DLTIME (R620 and later) Delay Time	_ _ _ _	<i>range = 0 to 9999 seconds default = 0 seconds</i>					
\$REALARM (R660 and later) Re-alarming Interval	_ _ _ _	<i>range = 0 to 9999 minutes default = 0 minutes</i>					
BADOCPT BADOC Alarm Option	Off On	Bad Output Connection Alarm is not initially permitted Bad Output Connection Alarm is Initially permitted					
BADOCPR BADOC Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint

OPALDB Output Alarm Deadband	_ _ _ _	<i>range = 0 - 25.0 but ≤ (OPHITP-OPLOTP)/2 default = 5.0 Output Units</i>					
OPHITP Output High Alarm Trip Point	_ _ _ _	<i>range = OPLOTP TO OPHILM and NaN default = NaN</i>					
OPHIPR Output High Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
OPLOTP Output Low Alarm Trip Point	_ _ _ _	<i>range = OPLOLM TO OPHITP and NaN default = NaN</i>					
OPLOPR Output Low Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint

PVALDB PV Alarm Deadband In %	Half	One	Two	Three	Four	Five	EU
PVALDBEU PV Alarm Deadband In EU	_ _ _ _	<i>range > = 0.0 default = 1.0</i>					
PVHITP PV High Alarm Trip Point	_ _ _ _	<i>range = PVLOTP - PVHHTP, & NaN default = NaN</i>					
PVHIPR PV High Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$HISELCT (R681 and later) PV High Selective Cutout	Cutout Allow	<i>range = Cutout, Allow default = Cutout</i>					
PVLOTP PV Low Alarm Trip Point	_ _ _ _	<i>range = PVLLTP - PVHITP, & NaN default = NaN</i>					
PVLOPR PV Low Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$LOSELCT (R681 and later) PV Low Selective Cutout	Cutout Allow	<i>range = Cutout, Allow default = Cutout</i>					

PM PID with External Reset Feedback CTL Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Alarming Display – N/A if PNTFORM = Componnt

PVHHTP (RegCtl) PV Hi Hi Alarm Trip Point	_ _ _ _ _ _ _ _ _								<i>range = PVHITP to PVEUHI, & NaN default = NaN</i>
PVHHPR PV High High Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint		
\$HHSELCT (R681 and later) PV High High Selective Cutout	Cutout Allow								<i>range = Cutout, Allow default = Cutout</i>
PVLLTP PV Low Low Alarm Trip Point	_ _ _ _ _ _ _ _ _								<i>range = PVEULO – PVLOTP, & NaN default = NaN</i>
PVLLPR PV Low Low Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint		
\$LLSELCT (R681 and later) PV Low Low Selective Cutout	Cutout Allow								<i>range = Cutout, Allow default = Cutout</i>
PVSGCHTP PV Signif Chg Alarm Trip Point	_ _ _ _ _ _ _ _ _								<i>range = >=0.0, and NaN default = NaN</i>
PVROCTP PV Pos Rate Of Chg Trip Point	_ _ _ _ _ _ _ _ _								<i>range = >=0.0, and NaN default = NaN</i>
PVROCPPR PV Pos Rate Of Chg Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint		
\$RPSELCT (R681 and later) PV Positive Rate of Change Selective Cutout	Cutout Allow								<i>range = Cutout, Allow default = Cutout</i>
PVROCNTP PV Neg Rate Of Chg Trip Point	_ _ _ _ _ _ _ _ _								<i>range = >=0.0, and NaN default = NaN</i>
PVROCNPR PV Neg Rate Of Chg Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint		
\$RNSELCT (R681 and later) PV Negative Rate of Change Selective Cutout	Cutout Allow								<i>range = Cutout, Allow default = Cutout</i>
BADPVPR Bad-PV Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint		
DEVHITP Deviation High Alarm Trip Point	_ _ _ _ _ _ _ _ _								<i>range = >=0.0, and NaN default = NaN</i>
DEVHIPR Deviation High Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint		

PM PID With External Reset Feedback CTL Algorithm

PM88-618
Page 9 of 9
09/08

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Alarming Display – N/A if PNTFORM = Componnt

\$DHSELCT (R681 and later) Deviation High Selective Cutout	Cutout Allow							<i>range = Cutout, Allow default = Cutout</i>
DEVLOTP Deviation Low Alarm Trip Point								<i>range = >=0.0, and NaN default = NaN</i>
DEVLOPR Deviation Low Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint	
\$DLSELCT (R681 and later) Deviation Low Selective Cutout	Cutout Allow							<i>range = Cutout, Allow default = Cutout</i>
ADVDEVTP Advisory Deviation Alarm Trip Point (When SPOPT = ASP)								<i>range = >=0.0, and NaN default = NaN</i>
ADVDEVPR Advisory Deviation Alarm Priority (When SPOPT = ASP)	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint	
ALENBST Point Alarm Enable Status				<u>Displayed</u>	<u>Logged</u>	<u>Reported To EIP</u>		
	Enable			Yes	Yes	Yes		
	Disable			No	Yes	Yes		
	Inhibit			No	No	No		

PM88-619
Page 1 of 10
09/08

Control Algorithm Display		
CTLALGID Control Algorithm Identifier	<i>NuLL</i> 	No affect PID with Feedforward

PM PID with Feedforward CTL Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

PV Configuration Display

PVEUHI PV High Range In Engr Units	_ _ _ _	<i>range = >= PVEULO</i> <i>default = 100.0</i>
PVEULO PV Low Range In Engr Units	_ _ _ _	<i>range = <= PVEUHI</i> <i>default = 0.0</i>
PVFORMAT PV Decimal Point Format	D0 D2 D1 D3	D0 = 9999. D2 = 99.99 D1 = 999.9 D3 = 9.999

PVSRCOPT PV Source Option	OnlyAuto All	PV source selection is not available Selection from PVSOURCE is available
PVSOURCE PV Source	Auto Man Sub	Field-wiring/memory-fetch supplies PV PV is supplied by Operator or program A value is substituted by a CL program
OVERVAL Overview Display Value	_ _ _	<i>range = 0 to 100</i> <i>default = 25</i>

Mode Configuration Display

RCASOPT Remote Cascade Option	None Spc Ddc DdcRsp Rsp	Local cascade is the only valid cascade AM strategy stores to SP within SP limits AM strategy stores to OP. No OP limits. AM strategy does Ddc and Rsp functions AM strategy stores to SP when this point is in Auto and is being initialized by its secondary. SP limits are applied.
SHEDTIME Remote Cascade Shed Time	_ _ _	<i>range = 0 to 1000 (seconds)</i> <i>default = 0 (mode shed disabled)</i>
SHEDMODE (If Shedtime >1) Shed Mode	Man Auto Bcas	Supervisory point will shed to Manual, Automatic, or Backup Cascade mode.
NMODE(RegCtl) RegCtl Point's Normal Mode	None Man Auto Cas Bcas	No configured "normal" operating mode Manual is the "normal" operating mode Automatic is "normal" operating mode Cascade is "normal" operating mode Backup cascade is "normal" operating mode

PM PID with Feedforward CTL Algorithm

PM88-619
Page 3 of 10
09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

N/A if NMODE = None

NMODATTR Normal Mode Attribute	None Operator Program	Parameter NMODE sets "normal" mode Operator sets "normal" operating mode Program sets "normal" operating mode
--	------------------------------------	---

MODEPERM Mode Permissive	Permit NotPerm	Operator can change this point's mode Optr. cannot change this point's mode
\$MODESEL (R630 and later) Mode Selection List	Man Prog Auto Cas Bcas	Man, Auto, Cas and Bcas mode, and Prog mode attribute are allowed for this data point.
EXTSWOPT External Mode Switching	None Ems	No external mode switching is allowed Ext. source can change point's mode

Setpoint Display

SPHILM SP High Limit		<i>range</i> = SPLOLM – SPEUHI, and NaN <i>default</i> = NaN
SPLOLM SP Low Limit		<i>range</i> = SPEULO – SPHILM, and NaN <i>default</i> = NaN
\$SPTOL Set Point Tolerance		<i>range</i> = ≥ 0.0 <i>default</i> = 0.0
SP Set Point In Engineering Units Of The PV		<i>range</i> = SPLOLM to SPHILM <i>default</i> = 0.0
SPOPT Set Point Option Asp is invalid if PNTFORM=Componnt.	None Tv Asp	No specialized option are available Target value processing Advisory deviation alarming
RBOPT Ratio Bias Option	NoRatBi FixRatBi AutoRat AutoBi	No ratio/bias is used to calculate the SP Fixed ratio (R) and fixed bias (B) are used R is back calculated during initialization B is back calculated during initialization
RTHILM Ratio High Limit		<i>range</i> = RTLOLM – 100.0, & NaN <i>default</i> = 100.0
RTLOLM Ratio Low Limit		<i>range</i> = 0.01 - RTHILM, & NaN <i>default</i> = 0.01
BSHILM Bias High Limit		<i>range</i> = $\geq$ BSLOLM, & NaN <i>default</i> = -50.0
BSLOLM Bias Low Limit		<i>range</i> = $\leq$ BSHILM, & NaN <i>default</i> = 50.0
RATIO Ratio		<i>range</i> = RTLOLM to RTHILM <i>default</i> = 0.0
BIAS Bias Parameter		<i>range</i> = BSLOLM to BSHILM <i>default</i> = 0.0

PM PID with Feedforward CTL Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Reg Control PidFf Algo Display

PIDFORM PID Controller Form	Interact Ideal	(Proportional + Integral) x (Derivative) (Proportional) + (Integral) + (Derivative)
CTLEQN(Pid) Control Equation Type	EqA EqB EqC EqD	P, I & D act on Error P & I act on Error, D acts on PV I acts on Error, P & D act on PV Integral-only control
PVTRACK PV Tracking Option	No Track Track	SP will never be set equal to PV Man mode or init. Causes SP to track PV
CTLACTN Control Action	Reverse Direct	As PV increases, Output decreases As PV increases, Output increases

Reg Control Pid Algo Display (continued)

N/A if CTLEQN = EqD.

GAINOPT Gain (K) Option	Ext NonLin Gap Lin	K = KFF*KEXT (gain from external source) K = KFF*((NLFM)+(NLGAIN*[PVP-SPP]/[100])) K = KLIN*KGAP if PV>(SP-GAPLO) or if PV<(SP+GAPHI), else K = KLIN. K = the value entered by the user	
K(Pid) Overall Gain In % Per %	_ _ _ _ _ _ _	range = 0.0 - 240.0 default = Not applicable	
KLIN Linear Gain Factor	_ _ _ _ _ _ _	range = 0.0 - 240.0 default = 1.0	
KGAP Gap Gain Factor	_ _ _ _	range = 0.0 to 1.0 default = 1.0	
GAPHI Gap High Limit	_ _ _ _ _ _ _	range = >=0.0 default = 0.0	
GAPLO Gap Low Limit	_ _ _ _ _ _ _	range = >=0.0 default = 0.0	
NLGAIN Non Linear Gain	_ _ _ _ _ _ _	range = 0.0 - 240.0 default = 0.0	
NLFM Non Linearity Form	0 1	K can go to zero K cannot go to < 1	
KEXT External Gain Modifier	_ _ _ _ _ _ _	range = 0.0 to 240.0 default = 1.0	
T1 Integral Time In Minutes	_ _ _ _ _ _ _	range = 0.0 to 1440.0 default = 0.0 (minutes)	
T2 Derivative Time In Minutes	_ _ _ _ _ _ _	range = 0.0 to 1440.0 default = 0.0 (minutes)	

PM88-619
Page 5 of 10
09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Reg Control PidFf Algo Display (continued)

[illegible]

Output Configuration Display

NOCOPTS #Of Control Output Connections |__| range = 0 to 4
default = 1

CODSTN (Control-Output-Connection Destination)
Output# (N/A if NOCOPTS = 0) CODSTN (point.parameter)

1	_____.
2	_____.
3	_____.
4	_____.

(N/A if NOCOPTS>0)

CVEUHI		<i>range = >=CVEULO</i>
Output Engineering Unit High Range	_ _ _ _	<i>default = 100.0</i>
CVEULO		<i>range = >=CVEUHI</i>
Output Engineering Unit Low Range	_ _ _ _	<i>default = 0.0</i>

PM PID with Feedforward CTL Algorithm

Unit:	Tagname:	Engineer:	Date:
OPHILM Output High Limit In Percent	_ _ _ _ _ _ _	<i>range</i> = OPLOLM – 106.9 & NaN <i>default</i> = 105.0	
OPLOLM Output Low Limit In Percent	_ _ _ _ _ _ _	<i>range</i> = -6.9 – OPHILM, & NaN <i>default</i> = -5.0	
SAFEOP Safe Output Limit In Percent	_ _ _ _ _ _ _	<i>range</i> = -6.9 to 106.9, & NaN <i>default</i> = NaN	
OPMCHLM Output Minimum Change In %	_ _ _ _ _ _ _	<i>range</i> = >=0.0, and NaN <i>default</i> = 0.0	
OPROCLM OP Rate Of Change Limit In %	_ _ _ _ _ _ _	<i>range</i> = >=0.0, and NaN <i>default</i> = NaN	
\$OPTOL Output Tolerance in %	_ _ _ _ _ _ _	<i>range</i> = 0.0 to 106.9 <i>default</i> = 0.0	
OUTIND (R620 and later) Reverse Output Indicator	Direct Reverse	4 - 20mA = 0 - 100% 20 - 4mA = 0 - 100% Note: With R670 and later, when this parameter is set to Reverse, the values of the displayed output and the related output parameters are changed. Refer to the definition of the OUTIND parameter in the PM Family Parameter Dictionary, XPM09.	

PM PID with Feedforward CTL Algorithm

PM88-619
Page 7 of 10
09/08

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Alarming Display – N/A if PNTFORM = Componnt

As you enter alarm trip points and alarm priorities in the next section please refer to the following alarm Priority definitions and the note.

NoAction	Alarm is not reported to the system and not annunciated (R670 & later)
Journal	Alarm is historized, not reported to US, not annunciated
Low	Alarm is historized, reported to US, and annunciated
High	Alarm is historized, reported to US, and annunciated
Emergency	Alarm is historized, reported to US, and annunciated
Printer	Not historized, reported to the printer, not annunciated
JnlPrint	Alarm historized, reported to the printer, not annunciated

Note: If you do not enter a trip point value for a given pair of trip-points and alarm-priorities, do not Circle an alarm priority option for that pair (that is, no trip point, no alarm priority).

Alarming Display – N/A if PNTFORM = Componnt

\$AUXUNIT (R620 and later) Auxiliary Unit	_.	<i>range = Any configured LCN Unit ID default = NaN</i>
\$ALDLOPT (R620 and later) Alarm Delay Option	None OffDlyLo OffDlyHi OffDlyEm OnDlyLo OnDlyHi OnDlyEm	Off Delay Lo Off Delay Hi Off Delay Emergency On Delay Lo On Delay Hi On Delay Emergency
\$DLBADAL (R681 and later) Delay for BADPV	None Offdelay	<i>range = Offdelay, None default = None</i>
DLYTIME (R620 and later) Delay Time	_._._.	<i>range = 0 to 9999 seconds default = 0 seconds</i>
\$REALARM (R660 and later) Re-alarms Interval	_ _ _	<i>range = 0 to 9999 minutes default = 0 minutes</i>
BADOCOPT BADOC Alarm Option	Off On	Bad Output Connection Alarm is not initially permitted Bad Output Connection Alarm is initially permitted
BADOCPR BADOC Alarm Priority	NoAction (R670 and later)	Journal Low High Emergency Printer JnlPrint

Unit:	Tagname:	Engineer:	Date:
OPALDB Output Alarm Deadband	_ _ _ _ _ _ _	<i>range = 0 - 25.0 but ≤ (OPHITP-OPLOTP)/2 default = 5.0 Output Units</i>	
OPHITP Output High Alarm Trip Point	_ _ _ _ _ _ _	<i>range = OPLOTP TO OPHILM and NaN default = NaN</i>	
OPHIPR Output High Alarm Priority	NoAction (R670 and later)	Journal	Low High Emergency Printer JnlPrint
OPLOTP Output Low Alarm Trip Point	_ _ _ _ _ _ _	<i>range = OPLOLM TO OPHITP and NaN default = NaN</i>	
OPLOPR Output Low Alarm Priority	NoAction (R670 and later)	Journal	Low High Emergency Printer JnlPrint
PVALDB PV Alarm Deadband In %	Half One Two Three Four Five EU		
PVALDBEU PV Alarm Deadband in EU	_ _ _ _	<i>range ≥ 0.0 default = 1.0</i> }	
PVHITP PV High Alarm Trip Point	_ _ _ _ _ _ _	<i>range = PVLOTP - PVHHTP, & NaN default = NaN</i>	
PVHIPR PV High Alarm Priority	NoAction (R670 and later)	Journal	Low High Emergency Printer JnlPrint
\$HISELCT (R681 and later) PV High Selective Cutout	Cutout Allow	<i>range = Cutout, Allow default = Cutout</i>	

PM PID with Feedforward CTL Algorithm

PM88-619
Page 9 of 10
09/08

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Alarming Display – N/A if PNTFORM = Componnt. (Continued)

PVLOTP PV Low Alarm Trip Point								<i>range = PVLLTP - PVHITP, & NaN default = NaN</i>
PVLOPR PV Low Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint	
\$LOSELCT (R681 and later) PV Low Selective Cutout	Cutout Allow							<i>range = Cutout, Allow default = Cutout</i>
PVHHTP (RegCtl) PV Hi Hi Alarm Trip Point								<i>range = PVHITP to PVEUHI, & NaN default = NaN</i>
PVHHPR PV High High Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint	
\$HHSELCT (R681 and later) PV High High Selective Cutout	Cutout Allow							<i>range = Cutout, Allow default = Cutout</i>
PVLLTP (RegCtl) PV Low Low Alarm Trip Point								<i>range = PVEULO – PVLOTP, & NaN default = NaN</i>
PVLLPR PV Low Low Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint	
\$LLSELCT (R681 and later) PV Low Low Selective Cutout	Cutout Allow							<i>range = Cutout, Allow default = Cutout</i>
PVSGCHTP PV Significant Chg Alarm Trip Point								<i>range = >=0.0, and NaN default = NaN</i>
PVROCPTP PV Pos Rate Of Chg Trip Point								<i>range = >=0.0, and NaN default = NaN</i>
PVROCPPR PV Pos Rate Of Chg Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint	
\$RPSELCT (R681 and later) PV Positive Rate of Change Selective Cutout	Cutout Allow							<i>range = Cutout, Allow default = Cutout</i>
PVROCNTP PV Neg Rate Of Chg Trip Point								<i>range = >=0.0, and NaN default = NaN</i>
PVROCNPR PV Neg Rate Of Chg Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint	
\$RNSELCT (R681 and later) PV Negative Rate of Change Selective Cutout	Cutout Allow							<i>range = Cutout, Allow default = Cutout</i>
BADPVPR Bad-PV Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint	
DEVHITP Deviation High Alarm Trip Point								<i>range = >=0.0, and NaN default = NaN</i>

PM PID with Feedforward CTL Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Alarming Display – N/A if PNTFORM = Componnt. (Continued)

DEVHIPR Deviation High Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$DHSELCT (R681 and later) Deviation High Selective Cutout	Cutout Allow				<i>range = Cutout, Allow default = Cutout</i>		
DEVLOTP Deviation Low Alarm Trip Point					<i>range = >=0.0, and NaN default = NaN</i>		
DEVLOPR Deviation Low Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$DLSELCT (R681 and later) Deviation Low Selective Cutout	Cutout Allow				<i>range = Cutout, Allow default = Cutout</i>		
ADVDEVTP Advisory Deviation Alarm Trip Point (When SPOPT = ASP)					<i>range = >=0.0, and NaN default = NaN</i>		
ADVDEVPR Advisory Deviation Alarm Priority (When SPOPT = ASP)	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
ALENBST Point Alarm Enable Status	Enable Disable Inhibit			<u>Displayed</u> Yes No No	<u>Logged</u> Yes Yes No	<u>Reported to EIP</u> Yes Yes No	

PM88-620
Page 1 of 7
09/08

Control Algorithm Display		
CTLALGID Control Algorithm Identifier	<i>Null</i> 	No affect Position Proportional

PM Position Proportional CTL Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

PV Configuration Display

PVEUHI PV High Range In Engr Units	_ _ _ _ _	<i>range = > = PVEULO</i> <i>default = 100.0</i>	
PVEULO PV Low Range In Engr Units	_ _ _ _ _	<i>range = < = to PVEUHI</i> <i>default = 0.0</i>	
PVFORMAT PV Decimal Point Format	D0 D2 D1 D3	D0 = 9999. D2 = 99.99 D1 = 999.9 D3 = 9.999	

N/A if PNTFORM = Compnnt.

PVSRCOPT PV Source Option	OnlyAuto All	PV source selection is not available Selection from PVSOURCE is available
PVSOURCE PV Source	Auto Man Sub	Field-wiring/memory-fetch supplies PV PV is supplied by Operator or program A value is substituted by a CL program
OVERVAL Overview Display Value	_ _ _ _	<i>range = 0 to 100</i> <i>default = 25</i>

Mode Configuration Display

RCASOPT Remote Cascade Option	None Spc	Local cascade is the only valid cascade AM strategy stores to SP within SP limits
SHEDTIME Remote Cascade Shed Time	_ _ _ _	<i>range = 0 to 1000 (seconds)</i> <i>default = 0 (mode shed disabled)</i>
SHEDMODE Shed Mode	Man Auto Bcas	Supervisory point will shed to Manual Supervisory point will shed to Automatic Supervisory point will shed to BackupCas
NMODE (RegCtl) RegCtl Point's Normal Mode	None Man Auto Cas Bcas	No configured "normal" operating mode Manual is the "normal" operating mode Automatic is "normal" operating mode Cascade is "normal" operating mode Backup Cascade is "normal" operating mode

PM Position Proportional CTL Algorithm

PM88-620
Page 3 of 7
09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

N/A if NMODE = None

NMODATTR Normal Mode Attribute	None Operator Program	Parameter NMODE sets "normal" mode Operator sets "normal" operating mode Program sets "normal" operating mode
--	------------------------------------	---

MODEPERM Mode Permissive	Permit NotPerm	Operator can change this point's mode Optr. cannot change this point's mode
\$MODESEL (R630 and later) Mode Selection List	Man Prog Auto Cas Bcas	Man, Auto, Cas and Bcas mode, and Prog mode attribute are allowed for this data point.
EXTSWOPT External Mode Switching	None Ems	No external mode switching is allowed Ext. source can change point's mode

Setpoint Display

SPHILM SP High Limit		<i>range</i> = SPLOLM - SPEUHI, and NaN <i>default</i> = NaN
SPLOLM SP Low Limit		<i>range</i> = SPEULO -SPHILM, and NaN <i>default</i> = NaN
\$SPTOL Set Point Tolerance		<i>range</i> = >=0.0 <i>default</i> = 0.0
SP Set Point In Engineering Units Of The PV		<i>range</i> = SPLOLM to SPHILM <i>default</i> = 0.0
SPOPT Set Point Option	None Tv Asp	No specialized options are available Target value processing Advisory deviation alarming

Reg Control Posn/Prop Algo Display

DEADBAND(PosProp) Dead Band In % Of Full Scale		<i>range</i> = 0.0 to 100.0 <i>default</i> = 5.0%
CYCLETIM PosProp Output Cycle Time In Seconds		<i>range</i> = 0.25 to 1000.0 <i>default</i> = 10.0 (seconds)
K Gain Value		<i>range</i> = 0.0 to 10.0 <i>default</i> = 1.0
RAISRATE Raise OP Stroke Rate In %/Sec		<i>range</i> = >0.0 <i>default</i> = 100.0

PM Position Proportional CTL Algorithm

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Reg Control Posn/Prop Algo Display (Continued)

[illegible]

PM Position Proportional CTL Algorithm

PM88-620
Page 5 of 7
09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Alarming Display - N/A if PNTFORM = Componnt

As you enter alarm trip points and alarm priorities in the next section please refer to the following alarm priority definitions and the note.

NoAction	Alarm is not reported to the system and not annunciated (R670 & later)
Journal	Alarm is historized, not reported to US, not annunciated
Low	Alarm is historized, reported to US, and annunciated
High	Alarm is historized, reported to US, and annunciated
Emergency	Alarm is historized, reported to US, and annunciated
Printer	Not historized, reported to the printer, not annunciated
JnlPrint	Alarm historized, reported to the printer, not annunciated

Note: If you do not enter a trip point value for a given pair of trip-points and alarm-priorities, do not circle an alarm priority option for that pair (that is, no trip point, no alarm priority).

Alarming Display - N/A if PNTFORM = Componnt

\$AUXUNIT Auxiliary Unit(R610 and later)		<i>range = Any configured LCN Unit ID default = NaN</i>
\$ALDLOPT (R620 and later) Alarm Delay Option	None OffDlyLo OffDlyHi OffDlyEm OnDlyLo OnDlyHi OnDlyEm	Off Delay Lo Off Delay Hi Off Delay Emergency On Delay Lo On Delay Hi On Delay Emergency
\$DLBADAL (R681 and later) Delay for BADPV	None Offdelay	<i>range = Offdelay, None default = None</i>
DLTIME Delay Time(R620 and later)		<i>range = 0 to 9999 seconds default = 0 seconds</i>
\$REALARM (R660 and later) Re-alarming Interval		<i>range = 0 to 9999 minutes default = 0 minutes</i>
BADOCOPT BADOC Alarm Option	Off On	Bad Output Connection Alarm is not initially permitted Bad Output Connection Alarm is initially permitted
BADOCPR BADOC Alarm Priority	NoAction Journal Low High Emergency Printer JnlPrint (R670 and later)	
PVALDB PV Alarm Deadband In %	Half One Two Three Four Five EU	
PVALDBEU PV Alarm Deadband In EU		<i>range > = 0.0 default = 1.0</i>
PVHITP PV High Alarm Trip Point		<i>range = PVLOTP - PVHHTP, & NaN default = NaN</i>
PVHIPR PV High Alarm Priority	NoAction Journal Low High Emergency Printer JnlPrint (R670 and later)	
\$HISELCT (R681 and later) PV High Selective Cutout	Cutout Allow	<i>range = Cutout, Allow default = Cutout</i>

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Alarming Display – N/A if PNTFORM = Componnt. (Continued)

Parameter	Default	Range	Unit	Alarm	Priority	Event	Printer	Journal
PVLOTP PV Low Alarm Trip Point	_____	range = PVLLTP - PVHITP, & NaN default = NaN						
PVLOPR PV Low Alarm Priority	NoAction (R670 and later)			Journal	Low	High	Emergency	Printer JnlPrint
\$LOSELCT (R681 and later) PV Low Selective Cutout	Cutout Allow	range = Cutout, Allow default = Cutout						
PVHHTP (RegCtl) PV Hi Hi Alarm Trip Point	_____	range = PVHITP to PVEUHI, & NaN default = NaN						
PVHHPR PV High High Alarm Priority	NoAction (R670 and later)			Journal	Low	Emergency	Printer	JnlPrint
\$HHSELCT (R681 and later) PV High High Selective Cutout	Cutout Allow	range = Cutout, Allow default = Cutout						
PVLLTP (RegCtl) PV Low Low Alarm Trip Point	_____	range = PVEULO - PVLOTP, & NaN default = NaN						
PVLLPR PV Low Low Alarm Priority	NoAction (R670 and later)			Journal	Low	High	Emergency	Printer JnlPrint
\$LLSELCT (R681 and later) PV Low Low Selective Cutout	Cutout Allow	range = Cutout, Allow default = Cutout						
PVSGCHTP PV Significant Change Alarm Trip Point	_____	range = >=0.0, and NaN default = NaN						
PVROCPPT PV Pos Rate Of Chg Trip Point	_____	range = >=0.0, and NaN default = NaN						
PVROCPPR PV Pos Rate Of Chg Alarm Priority	NoAction (R670 and later)			Journal	Low	High	Emergency	Printer JnlPrint
\$RPSELCT (R681 and later) PV Positive Rate of Change Selective Cutout	Cutout Allow	range = Cutout, Allow default = Cutout						
PVROCNTPT PV Neg Rate Of Chg Trip Point	_____	range = >=0.0, and NaN default = NaN						
PVROCNPRT PV Neg Rate Of Chg Alarm Priority	NoAction (R670 and later)			Journal	Low	High	Emergency	Printer JnlPrint
\$RNSELCT (R681 and later) PV Negative Rate of Change Selective Cutout	Cutout Allow	range = Cutout, Allow default = Cutout						
BADPVPR Bad-PV Alarm Priority	NoAction (R670 and later)			Journal	Low	High	Emergency	Printer JnlPrint
DEVHITP Deviation High Alarm Trip Point	_____	range = >=0.0, and NaN default = NaN						

PM Position Proportional CTL Algorithm

PM88-620
Page 7 of 7
09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Alarming Display – N/A if PNTFORM = Componnt. (Continued)

DEVHIPR Deviation High Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$DHSELCT (R681 and later) Deviation High Selective Cutout	Cutout Allow				<i>range = Cutout, Allow default = Cutout</i>		
DEVLOTP Deviation Low Alarm Trip Point					<i>range = >=0.0, and NaN default = NaN</i>		
DEVLOPR Deviation Low Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
\$DLSELCT (R681 and later) Deviation Low Selective Cutout	Cutout Allow				<i>range = Cutout, Allow default = Cutout</i>		
ADVDEVTP (When SPOPT = ASP) Advisory Deviation Alarm Trip Point					<i>range = >=0.0, and NaN default = NaN</i>		
ADVDEVPR Advisory Deviation Alarm Priority (When SPOPT = ASP)	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
ALENBST Point Alarm Enable Status	Enable Disable Inhibit			<u>Displayed</u> Yes No No	<u>Logged</u> Yes Yes No	<u>Reported to EIP</u> Yes Yes No	

PM Ramp Soak CTL Algorithm

PM88-621
Page 1 of 5
09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Point Assignment Display

NAME Tag Name		<i>range = Not applicable</i> <i>default = Blank</i>
NODETYP Node Type	PM APM HPM	A PM Point Is Being Configured An APM Point is Being Configured An HPM Point Is Being Configured
PNTFORM Point Form	FuLL Componnt	Point is fully displayed and alarmed Pt.is partially displayed but not alarmed

PTDESC Point Descriptor		<i>range = Not applicable</i> <i>default = Blank</i>
EUDESC Engineering Units Descriptor		<i>range = Not applicable</i> <i>default = Blank</i>
KEYWORD Keyword Descriptor		<i>range = Not applicable</i> <i>default = Blank</i>
ASSOCDSP (R610 and later) Associated Display		<i>range = Not applicable</i> <i>default = Blank</i>
\$CDETAIL (R620 and later) Point Custom Display		<i>range = Not applicable</i> <i>default = Blank</i>
UNIT Process Unit Point Is Assigned To		<i>range = Two Alphanumeric Characters</i> <i>default = Not applicable</i>
NTWKNUM NIM's UCN That This Point Is In		<i>range = 1 to 20</i> <i>default = Not applicable</i>
NODENUM PMM's Address On The UCN		<i>range = 1 to 64</i> <i>default = Not applicable</i>
SLOTNUM Slot Number		<i>range = 1-160 (but <= NCTLSLOT)</i> <i>default = Not applicable</i>

N/A if PNTFORM = Componnt.

PRIMMOD Primary Module ID		<i>range = Not Applicable</i> <i>default = Null</i>
-------------------------------------	----------------------	--

Control Algorithm Display

CTLALGID Control Algorithm Identifier	Null RampSoak	No affect Ramp Soak Algorithm
---	--	----------------------------------

PV Configuration Display

PVEUHI PV High Range In Engr Units		<i>range = >= PVEULO</i> <i>default = 100.0</i>
PVEULO PV Low Range In Engr Units		<i>range = <= PVEUHI</i> <i>default = 0.0</i>
PVFORMAT PV Decimal Point Format	DO D2 D1 D3	D0=9999. D2=99.99 D1=999.9 D3 = 9.999

PM Ramp Soak CTL Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

OVERVAL	_._._	<i>range = 0 to 100</i>
Overview Display Value		<i>default = 25</i>

Mode Configuration Display

NMODE (RegCtl) RegCtl Point's Normal Mode	None Man Auto	No configured "normal" operating mode Manual is the "normal" operating mode Automatic is "normal" operating mode
NMODATTR Normal Mode Attribute	None Operator Program	Parameter NMODE sets "normal" mode Operator sets "normal" operating mode Program sets "normal" operating mode
MODEPERM Mode Permissive	Permit NotPerm	Operator can change this point's mode Opr. cannot change this point's mode
\$MODESEL (R630 and later) Mode Selection List	Man Prog Auto	Man and Auto mode, and Prog mode attribute are allowed for this data point.
EXTSWOPT External Mode Switching	None Ems	No external mode switching is allowed Ext. source can change point's mode

Reg Control Ramp/Soak Algo Display

CYCLOPT Ramp Soak Cycle Option	Cyclic Single	Repeat complete cycles over and over Stop after completing 1 complete cycle
MXRMPDEV Maximum Ramp Deviation	_._	<i>range</i> = >=0.0, and NaN <i>default</i> = NaN
MXSOKDEV Maximum Soak Deviation	_._	<i>range</i> = >=0.0, and NaN <i>default</i> = NaN
NORSSEQ #Of Ramp/Soak Pairs In The Seq.	_. _	<i>range</i> = 2 to 12 <i>default</i> = 2

Ramp Rates, Soak Times, and Mark Functions require full page width for writing down configuration data. Go to page 4 of this form, fill it out or enter data from it, and then return here and continue at NOCINPTS.

NOCINPTS	_	<i>range = 0 to 1</i>
# Of Control Input Connections		<i>default = 1</i>
CISRC (Control-Input-Connection Source)		<u>Destination Para-</u>
<u>Input #</u>	<u>CISRC (point.parameter)</u>	<u>-meter (CIDSTN)</u>
1	_.	PV

PM Ramp Soak CTL Algorithm

PM88-621
Page 3 of 5
09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Output Configuration Display

NOCOPTS		range = 0 to 4
#Of Control Output Connections	_	default = 1
CODSTN (Control-Output-Connection Destination)		
<u>Output#</u>	<u>CODSTN (point.parameter)</u>	
1		
2		
3		
4		
CVEUHI		range = >=CVEULO
Output Engineering Unit High Range		default = 100.0
CVEULO		range = >=CVEUHI
Output Engineering Unit Low Range		default = 0.0
SAFEOP		range = >=-6.9 to 106.9, NaN
Safe Output Value		default = NaN
\$OPTOL		range = 0.0 to 106.9
Output Tolerance in %		default = 0.0
OUTIND (R620 or later)	Direct	4 - 20mA = 0 – 100%
Reverse Output Indicator	Reverse	20 – 4mA = 0 – 100%
Note: With R670 and later, when this parameter is set to Reverse, the values of the displayed output and the related output parameters are changed. Refer to the definition of the OUTIND parameter in the PM Family Parameter Dictionary, XPM09.		

Alarming Display – N/A if PNTFORM = Component

As you enter alarm trip points and alarm priorities in the next section please refer to the following alarm Priority definitions and the note.

NoAction	Alarm is not reported to the system and not annunciated (R670 & later)
Journal	Alarm is historized, not reported to US, not annunciated
Low	Alarm is historized, reported to US, and annunciated
High	Alarm is historized, reported to US, and annunciated
Emergency	Alarm is historized, reported to US, and annunciated
Printer	Not historized, reported to the printer, not annunciated
JnlPrint	Alarm historized, reported to the printer, not annunciated

Note: If you do not enter a trip point value for a given pair of trip-points and alarm-priorities, do not circle an alarm priority option for that pair (that is, no trip point, no alarm priority).

\$AUXUNIT		range = Any configured LCN Unit ID
Auxiliary Unit	_	default = NaN
\$ALDLOPT (R620 or later)		
Alarm Delay Option	None	
	OffDlyLo	Off Delay Lo
	OffDlyHi	Off Delay Hi
	OffDlyEm	Off Delay Emergency
	OnDlyLo	On Delay Lo
	OnDlyHi	On Delay Hi
	OnDlyEm	On Delay Emergency

PM Ramp Soak CTL Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

DLTIME (R620 or later)	_ _ _ _	<i>range = 0 to 9999 seconds</i>					
Delay Time		<i>default = 0 seconds</i>					
\$REALARM (R660 or later)	_ _ _ _	<i>range = 0 to 9999 minutes</i>					
Re-alarms Interval		<i>default = 0 minutes</i>					
BADOCOPT	Off	Bad Output Connection Alarm is not initially permitted					
BADOC Alarm Option	On	Bad Output Connection Alarm is initially permitted					
BADOCPR	NoAction	Journal	Low	High	Emergency	Printer	JnlPrint
BADOC Alarm Priority	(R670 and later)						
DEVVHITP	_ _ _ _	<i>range = >=0.0, and NaN</i>					
Deviation High Alarm Trip Point		<i>default = NaN</i>					
DEVHIPR	NoAction	Journal	Low	High	Emergency	Printer	JnlPrint
Deviation High Alarm Priority	(R670 and later)						
\$DHSELCT (R681 and later)	Cutout	<i>range = Cutout, Allow</i>					
Deviation High Selective Cutout	Allow	<i>default = Cutout</i>					
DEVLOTP	_ _ _ _	<i>range = >=0.0, and NaN</i>					
Deviation Low Alarm Trip Point		<i>default = NaN</i>					
DEVLOPR	NoAction	Journal	Low	High	Emergency	Printer	JnlPrint
Deviation Low Alarm Priority	(R670 and later)						
\$DLSELCT (R681 and later)	Cutout	<i>range = Cutout, Allow</i>					
Deviation Low Selective Cutout	Allow	<i>default = Cutout</i>					
ALENBST	Enable	<u>Displayed</u>	<u>Logged</u>	<u>Reported to EIP</u>			
Point Alarm Enable Status	Disable	Yes	Yes	Yes			
	Inhibit	No	Yes	Yes			
		No	No	No			

Reg Control Ramp/Soak Algo Display (continued from Page 2)

Ramp Rates and Soak Times/Values

Pair Number	Ramp Rate (RATEX) <i>range = >0.0(EUs); default = NaN</i>	Soak Time (SOAKTX) <i>range = 0.0 – 120.0; default = 0.0</i>	Soak Value (SOAKVX) <i>range = >0.0 (EUs); default = NaN</i>
1	_ _ _ _	_ _ _ _	_ _ _ _
2	_ _ _ _	_ _ _ _	_ _ _ _
3	_ _ _ _	_ _ _ _	_ _ _ _
4	_ _ _ _	_ _ _ _	_ _ _ _
5	_ _ _ _	_ _ _ _	_ _ _ _
6	_ _ _ _	_ _ _ _	_ _ _ _
7	_ _ _ _	_ _ _ _	_ _ _ _
8	_ _ _ _	_ _ _ _	_ _ _ _
9	_ _ _ _	_ _ _ _	_ _ _ _
10	_ _ _ _	_ _ _ _	_ _ _ _
11	_ _ _ _	_ _ _ _	_ _ _ _
12	_ _ _ _	_ _ _ _	_ _ _ _

PM88-621
Page 5 of 5
09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Mark Functions							
Segment Number 1				Segment Number 2			
Begin Time (S1BGNTM)		End Time (S1ENDTM)		Begin Time (S2BGNTM)		End Time (S2ENDTM)	
range = 0.0 – 120 (Mins)		range = 0.0 – 120 (Mins)		range = 0.0 – 120 (Mins)		range = 0.0 – 120 (Mins)	
default = 0.0		default = 0.0		default = 0.0		default = 0.0	
_ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _		_ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _		_ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _		_ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _ _	
Segment ID (S1SEGID)				Segment ID (S2SEGID)			
RAMP1	SOAK1			RAMP 1	SOAK1		
RAMP2	SOAK2			RAMP2	SOAK2		
RAMP3	SOAK3			RAMP3	SOAK3		
RAMP4	SOAK4			RAMP4	SOAK4		
RAMP5	SOAK5			RAMP5	SOAK5		
RAMP6	SOAK6			RAMP6	SOAK6		
RAMP7	SOAK7			RAMP7	SOAK7		
RAMP8	SOAK8			RAMP8	SOAK8		
RAMP9	SOAK9			RAMP9	SOAK9		
RAMP10	SOAK10			RAMP10	SOAK10		
RAMP11	SOAK11			RAMP11	SOAK11		
RAMP12	SOAK12			RAMP12	SOAK12		

NOTE: Return to page 2 of this form and continue configuration at parameter **NOCINPTS**.

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

NAME		
Tag Name		<i>range</i> = Not applicable <i>default</i> = Blank
NODETYPE Node Type	<i>PM</i> APM HPM	A PM Point is being configured An APM Point is being configured An HPM Point is being configured
PNTFORM Point Form	<i>Full</i> Componnt	Point is fully displayed and alarmed Pt. is partially displayed but not alarmed

PTDESC Point Descriptor		<i>range</i> = Not applicable <i>default</i> = Blank
EUDESC Engineering Units Descriptor		<i>range</i> = Not applicable <i>default</i> = Blank
KEYWORD Keyword Descriptor		<i>range</i> = Not applicable <i>default</i> = Blank
ASSOCDSP (R610 and later) Associated Display		<i>range</i> = Not applicable <i>default</i> = Blank
\$CDETAIL (R620 and later) Point Custom Display		<i>range</i> = Not applicable <i>default</i> = Blank
UNIT Process Unit Point Is Assigned To	. .	<i>range</i> = Two Alphanumeric Characters <i>default</i> = Not applicable
NTWKNUM NIM's UCN That This Point Is In	. .	<i>range</i> = 1 to 20 <i>default</i> = Not applicable
NODENUM HPMM's Address On The UCN	. .	<i>range</i> = 1 to 64 <i>default</i> = Not applicable
SLOTNUM Slot Number	. . .	<i>range</i> = 1-160 (but <=NCTLSLOT) <i>default</i> = Not applicable

PRIMMOD Primary Module ID		<i>range</i> = Not Applicable <i>default</i> = Null
-------------------------------------	-----------	--


CTLALGID Control Algorithm Identifier	<i>NuLL</i> RatioCtl	No affect Ratio Control
---	--------------------------------	----------------------------

PM Ratio Control CTL Algorithm

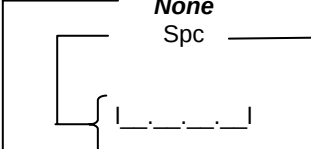
Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

PV Configuration Display

PVEUHI PV High Range In Engr Units	_ _ _ _ _ _ _	<i>range =</i> >=PVEULO <i>default =</i> 100.0
PVEULO PV Low Range In Engr Units	_ _ _ _ _ _ _	<i>range =</i> <=PVEUHI <i>default =</i> 0.0
PVFORMAT PV Decimal Point Format	DO D1	D2 D3
		D0=9999. D2=99.99 D1=999.9 D3 = 9.999

PVSRCOPT PV Source Option		Only Auto All	PV Source selection is not available Selection from PVSOURCE is available
PVSOURCE PV Source		Auto Man Sub	Field-wiring /memory -fetch supplies PV PV is supplied by Operator or program A value is substituted by a CL program
OVERVAL Overview Display Value	_ _ _ _		<i>range =</i> 0 to 100 <i>default =</i> 25

Mode Configuration Display

RCASOPT Remote Cascade Option		None Spc	Local cascade is the only valid cascade AM strategy stores to SP within SP limits
SHEDTIME Remote Cascade Shed Time	_ _ _ _		<i>range =</i> 0 to 1000 (seconds) <i>default =</i> 0 (mode shed disabled)
SHEDMODE Shed Mode		Man Auto Bcas	Supervisory point will shed to Manual, Supervisory point will shed to Automatic, Supervisory point will shed to BackupCas
NMODE (RegCtl) RegCtl Point's Normal Mode		None Man Auto Cas Bcas	No configured "normal" operating mode Manual is the "normal" operating mode Automatic is "normal" operating mode Cascade is "normal" operating mode Backup Cas is "normal" operating mode

N/A if NMODE =None

NMODATTR Normal Mode Attribute	None Operator Program	Parameter NMODE sets "normal" mode Operator sets "normal" operating mode Program sets "normal" operating mode
--	------------------------------------	---

MODEPERM Mode Permissive	Permit NotPerm	Operator can change this point's mode Optr. cannot change this point's mode
\$MODESEL (R630 and later) Mode Selection List	Man Prog Auto Cas Bcas	Man, Auto, Cas, and Bcas mode, and Prog mode attribute are allowed for this data point.
EXTSWOPT External Mode Switching	None Ems	No external mode switching is allowed Ext. source can change point's mode

NOCINPTS		range = 0 to 3
#Of Control Input Connections		default = 2
CISRC (Control-Input-Connection Source)		
<u>Input#</u>	<u>CISRC (point.parameter)</u>	<u>Destination Parameter (CIDSTN)</u>
1		PVAUTO
2		X2
3		SP

PM Ratio Control CTL Algorithm

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Output Configuration Display

NOCOPTS	_	<i>range = 0 to 4</i>
#Of Control Output Connections		<i>default = 1</i>
CODSTN (Control-Output-Connection Destination)		
<u>Output#</u> (N/A if NOCOPTS = 0)	<u>CODSTN (point.parameter)</u>	
1	_.	
2	_.	
3	_.	
4	_.	

(N/A if NOCOPTS > 0)

CVEUHI Output Engineering Unit High Range	_ _ _ _ _	<i>range</i> = >=CVEULO <i>default</i> = 100.0
CVEULO Output Engineering Unit Low Range	_ _ _ _ _	<i>range</i> = >=CVEUHI <i>default</i> = 0.0
OPHILM Output High Limit In Percent	_ _ _ _ _	<i>range</i> = OPLOLM – 106.9 & NaN <i>default</i> = 105.0
OPLOLM Output Low Limit In Percent	_ _ _ _ _	<i>range</i> = -6.9 – OPHILM,& NaN <i>default</i> = -5.0
SAFEOP Safe Output Limit In Percent	_ _ _ _ _	<i>range</i> = -6.9 to 106.9, & NaN <i>default</i> = NaN
OPMCHLM Output Minimum Change In %	_ _ _ _ _	<i>range</i> = >=0.0, and NaN <i>default</i> = 0.0
OPROCLM OP Rate Of Change Limit In %	_ _ _ _ _	<i>range</i> = >=0.0, and NaN <i>default</i> = 0.0
\$OPTOL Output Tolerance in %	_ _ _ _ _	<i>range</i> = 0.0 to 106.9 <i>default</i> = 0.0
OUTIND (R620 or later) Reverse Output Indicator	Direct Reverse	4 - 20mA = 0 – 100% 20 – 4mA = 0 – 100% Note: With R670 and later, when this parameter is set to Reverse, the values of the displayed output and the related output parameters are changed. Refer to the definition of the OUTIND parameter in the PM Family Parameter Dictionary, XPM09.

PM Ratio Control CTL Algorithm

PM88-622
Page 5 of 7
09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Alarming Display – N/A if PNTFORM = Component

As you enter alarm trip points and alarm priorities in the next section please refer to the following alarm Priority definitions and the note.

NoAction	Alarm is not reported to the system and not annunciated (R670 & later)
Journal	Alarm is historized, not reported to US, not annunciated
Low	Alarm is historized, reported to US, and annunciated
High	Alarm is historized, reported to US, and annunciated
Emergency	Alarm is historized, reported to US, and annunciated
Printer	Not historized, reported to the printer, not annunciated
JnlPrint	Alarm historized, reported to the printer, not annunciated

Note: If you do not enter a trip point value for a given pair of trip-points and alarm-priorities, do not Circle an alarm priority option for that pair (that is, no trip point, no alarm priority).

\$AUXUNIT (R620 and later) Auxiliary Unit	_ _ _	range = Any configured LCN Unit ID default = NaN
\$ALDLOPT (R620 or later) Alarm Delay Option	None OffDlyLo OffDlyHi OffDlyEm OnDlyLo OnDlyHi OnDlyEm	Off Delay Lo Off Delay Hi Off Delay Emergency On Delay Lo On Delay Hi On Delay Emergency
\$DLBADAL (R681 and later) Delay for BADPV and BADCTL	None Offdelay	range = Offdelay, None default = None
DLYTIME (R620 or later) Delay Time	_ _ _ _	range = 0 to 9999 seconds default = 0 seconds
\$REALARM (R660 or later) Re-alarms Interval	_ _ _ _	range = 0 to 9999 minutes default = 0 minutes
BADCOPT BAD Op Conn Alarm Option	Off On	Bad Output Connection Alarm is not initially permitted Bad Output Connection Alarm is initially permitted
BADOCPR BAD OC Alarm Priority	NoAction (R670 and later)	Journal Low High Emergency Printer JnlPrint

OPALDB Output Alarm Deadband	_ _ _ _	range = 0 – 25.0 but $\leq$ (OPHITP-OPLOTP)/2 default = 5.0 Output Units
OPHITP Output High Alarm Trip Point	_ _ _ _	range = OPLOTP TO OPHILM and NaN default = NaN
OPHIPR Output High Alarm Priority	NoAction (R670 and later)	Journal Low High Emergency Printer JnlPrint
OPLOTP Output Low Alarm Trip Point	_ _ _ _	range = OPLOLM TO OPHITP and NaN default = NaN
OPLOPR Output Low Alarm Priority	NoAction (R670 and later)	Journal Low High Emergency Printer JnlPrint

PM Ratio Control CTL Algorithm

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

PVALDB PV Alarm Deadband In %	Half One Two Three Four Five EU	
PVALDBEU PV Alarm Deadband in EU		range >= 0.0 default = 1.0
PVHITP PV High Alarm Trip Point		range = PVLOTP - PVHHTP, & NaN default = NaN
PVHIPR PV High Alarm Priority	NoAction Journal Low	High Emergency Printer JnlPrint
\$HISELCT (R681 and later) PV High Selective Cutout	Cutout Allow	range = Cutout, Allow default = Cutout
PVLOTP PV Low Alarm Trip Point		range = PVLLTP - PVHITP, & NaN default = NaN
PVLOPR PV Low Alarm Priority	NoAction Journal Low	High Emergency Printer JnlPrint
\$LOSELCT (R681 and later) PV Low Selective Cutout	Cutout Allow	range = Cutout, Allow default = Cutout
PVHHTP(RegCtl) PV Hi Hi Alarm Trip Point		range = PVHITP to PVEUHI, & NaN default = NaN
PVHHPR PV High High Alarm Priority	NoAction Journal Low	High Emergency Printer JnlPrint
\$HHSELCT (R681 and later) PV High High Selective Cutout	Cutout Allow	range = Cutout, Allow default = Cutout
PVLLTP(RegCtl) PV Low Low Alarm Trip Point		range = PVEULO – PVLOTP, & NaN default = NaN
PVLLPR PV Low Low Alarm Priority	NoAction Journal Low	High Emergency Printer JnlPrint
\$LLSELCT (R681 and later) PV Low Low Selective Cutout	Cutout Allow	range = Cutout, Allow default = Cutout
PVSGCHTP PV Significant Change Alarm Trip Point		range = >=0.0, and NaN default = NaN
PVROCTP PV Pos Rate Of Chg Trip Point		range = >=0.0, and NaN default = NaN
PVROCPPR PV Pos Rate Of Chg Alarm Priority	NoAction Journal Low	High Emergency Printer JnlPrint
\$RPSELCT (R681 and later) PV Positive Rate of Change Selective Cutout	Cutout Allow	range = Cutout, Allow default = Cutout

PM88-622
Page 7 of 7
09/08

Unit:	Tagname:	Engineer:	Date:
PVROCNTP PV Neg Rate Of Chg Trip Point	_ . _ . _ .		range = >=0.0, and NaN default = NaN
PVROCNPB PV Neg Rate Of Chg Alarm Priority	NoAction (R670 and later)	Journal Low High Emergency Printer JnlPrint	
\$RNSELCT (R681 and later) PV Negative Rate of Change Selective Cutout	Cutout Allow		range = Cutout, Allow default = Cutout
BADPVPR Bad-PV Alarm Priority	NoAction (R670 and later)	Journal Low High Emergency Printer JnlPrint	
DEVHITP Deviation High Alarm Trip Point	_ . _ . _ .		range = >=0.0, and NaN default = NaN
DEVIHPR Deviation High Alarm Priority	NoAction (R670 and later)	Journal Low High Emergency Printer JnlPrint	
\$DHSELCT (R681 and later) Deviation High Selective Cutout	Cutout Allow		range = Cutout, Allow default = Cutout
DEVLOTP Deviation Low Alarm Trip Point	_ . _ . _ .		range = >=0.0, and NaN default = NaN
DEVLOPB Deviation Low Alarm Priority	NoAction (R670 and later)	Journal Low High Emergency Printer JnlPrint	
\$DLSELCT (R681 and later) Deviation Low Selective Cutout	Cutout Allow		range = Cutout, Allow default = Cutout
ADVDEVTP (When SPOPT = ASP) Advisory Deviation Alarm Trip Point	_ . _ . _ Inhibit _ .		range = >=0.0, and NaN default = NaN
ADVDEVPB (When SPOPT = ASP) Advisory Deviation Alarm Priority	NoAction (R670 and later)	Journal Low High Emergency Printer JnlPrint	
BADCTLPR Bad-control Alarm Priority	NoAction (R670 and later)	Journal Low High Emergency Printer JnlPrint	
ALENBST Point Alarm Enable Status	Enable Disable Inhibit	Displayed No Yes Logged No Yes Yes No	

PM Summer PV Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Point Assignment Display

NAME Tag Name		<i>range</i> = Not applicable <i>default</i> = Blank
NODETYP Node Type	PM APM HPM	A PM Point Is Being Configured An APM Point Is Being Configured An HPM Point Is Being Configured
PNTFORM Point Form	Full Componnt	Point is fully displayed and alarmed Pt. is partially displayed but not alarmed

PTDESC Point Descriptor		<i>range</i> = Not applicable <i>default</i> = Blank
EUDESC Engineering Units Descriptor		<i>range</i> = Not applicable <i>default</i> = Blank
KEYWORD Keyword Descriptor		<i>range</i> = Not applicable <i>default</i> = Blank
ASSOCDSP (R610 and later) Associated Display		<i>range</i> = Not applicable <i>default</i> = Blank
\$CDETAIL (R620 and later) Point Custom Display		<i>range</i> = Not applicable <i>default</i> = Blank
UNIT Process Unit Point Is Assigned To	..	<i>range</i> = Two Alphanumeric Characters <i>default</i> = Not applicable
NTWKNUM NIM's UCN That This Point Is In	..	<i>range</i> = 1 to 20 <i>default</i> = Not applicable
NODENUM PMM's Address On The UCN	..	<i>range</i> = 1 to 64 <i>default</i> = Not applicable
SLOTNUM Slot Number	..	<i>range</i> = 1-160 (but <= NCTLSLOT) <i>default</i> = Not applicable

N/A if PNTFORM = Componnt.

PRIMMOD Primary Module ID		<i>range</i> = Not Applicable <i>default</i> = Null
-------------------------------------	-------	--

PM Summer PV Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

PV Algorithm Display

PVALGID PV Algorithm Identifier	NULL Summer	No affect Summer
---	----------------------------------	---------------------

PV Configuration Display

PVEUHI PV High Range In Engr Units	_ _ _ _	<i>range</i> = PVEULO to PVEXEUHI <i>default</i> = 100.0
PVEULO PV Low Range In Engr Units	_ _ _ _	<i>range</i> = PVEXEULO to PVEUHI <i>default</i> = 0.0
PVFORMAT PV Decimal Point Format	DO D1	D2 D3 D0 = 9999. D1 = 999.9 D2 = 99.99 D3 = 9.999
PVEXEUHI PV Extended Hi Range in EUs	_ _ _ _ _ _ _	<i>range</i> = >=PVEUHI <i>default</i> = 102.9
PVEXEULO PV Extended Lo Range in EUs	_ _ _ _ _ _ _	<i>range</i> = <=PVEULO <i>default</i> = -2.9
PV CLAMP PV Clamping Option	NoClamp Clamp	No clamping of the PV value Clamp PV value at range extension limit

PV Algorithm Display (Continued)

PVSRCOPT PV Source Option	Only Auto All	PV Source selection is not available Selection from PVSOURCE is available
PVSOURCE PV Source	Auto Man Sub	Field wiring/ memory fetch supplies PV PV is supplied by Operator or program A value is substituted by a CL program

TF PV Filter Lag Time in Minutes	_ _ _	<i>range</i> = 0.0 to 60.0 (minutes) <i>default</i> = 0.0 (PV will not be delayed)
--	-------	---

PVTV PV Target Value in EUs	_ _ _ _ _ _ _	<i>range</i> = PVEXEULO-PVEXEUHI, & NaN <i>default</i> = NaN
OVERVAL Overview Display Value	_ _	<i>range</i> = 0 to 100 <i>default</i> = 25

PM88-623
Page 3 of 5
09/08

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

PVEQN PV Equation Type	EqA EqB	P1 input is scaled and biased Up to 6 inputs are scaled and summed
C Scaling Constant		<i>range</i> = Not Applicable <i>default</i> = 1.0
D Overall Bias		<i>range</i> = Not Applicable <i>default</i> = 0.0
N (EqB only) # Inputs To Summer Algo		<i>range</i> = 1 to 6 <i>default</i> = 2
C1 Scaling Constant for Input P1		<i>range</i> = Not Applicable <i>default</i> = 1.0
C2 Scaling Constant for Input P2		<i>range</i> = Not Applicable <i>default</i> = 1.0
C3 Scaling Constant for Input P3		<i>range</i> = Not Applicable <i>default</i> = 1.0
C4 Scaling Constant for Input P4		<i>range</i> = Not Applicable <i>default</i> = 1.0
C5 Scaling Constant for Input P5		<i>range</i> = Not Applicable <i>default</i> = 1.0
C6 Scaling Constant for Input P6		<i>range</i> = Not Applicable <i>default</i> = 1.0

PISRC (PV-Input-Connection Source) <u>Input#</u>	<u>PISRC (point.parameter)</u>	<u>Destination Parameter (PIDSTN)</u>
1		P1
2		P2
3		P3
4		P4
5		P5
6		P6

PM Summer PV Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Alarming Display – N/A if PNTFORM = Componnt

As you enter alarm trip points and alarm priorities in the next section please refer to the following alarm Priority definitions and the note.

NoAction	Alarm is not reported to the system and not annunciated (R670 & later)
Journal	Alarm is historized, not reported to US, not annunciated
Low	Alarm is historized, reported to US, and annunciated
High	Alarm is historized, reported to US, and annunciated
Emergency	Alarm is historized, reported to US, and annunciated
Printer	Not historized, reported to the printer, not annunciated
JnlPrint	Alarm historized, reported to the printer, not annunciated

Note: If you do not enter a trip point value for a given pair of trip-points and alarm-priorities, do not Circle an alarm priority option for that pair (that is, no trip point, no alarm priority).

Alarming Display - N/A if PNTFORM = Componnt

\$AUXUNIT (R620 and later) Auxiliary Unit	_ _ _	<i>range</i> = Any configured LCN Unit ID <i>default</i> = NaN
\$ALDLOPT (R620 and later) Alarm Delay Option	None OffDlyLo OffDlyHi OffDlyEm OnDlyLo OnDlyHi OnDlyEm	Off Delay Lo Off Delay Hi Off Delay Emergency On Delay Lo On Delay Hi On Delay Emergency
\$DLBADAL (R681 and later) Delay for BADPV	None Offdelay	<i>range</i> = Offdelay, None <i>default</i> = None
\$DLTIME (R620 and later) Delay Time	_ _ _ _	<i>range</i> = 0 to 9999 seconds <i>default</i> = 0 seconds
\$REALARM (R660 and later) Re-alarming Interval	_ _ _ _	<i>range</i> = 0 to 9999 minutes <i>default</i> = 0 minutes
PVALDB PV Alarm Deadband In %	Half One Two Three Four Five EU	
PVALDBEU PV Alarm Deadband In EU	_ _ _ _	<i>range</i> > = 0.0 <i>default</i> = 1.0
PVHITP PV High Alarm Trip Point	_ _ _ _ _ _ _	<i>range</i> = PVLOTP - PVHHTP, & NaN <i>default</i> = NaN
PVHIPR PV High Alarm Priority	NoAction Journal Low High Emergency Printer JnlPrint (R670 and later)	
\$HISELCT (R681 and later) PV High Selective Cutout	Cutout Allow	<i>range</i> = Cutout, Allow <i>default</i> = Cutout
PVLOTP PV Low Alarm Trip Point	_ _ _ _ _ _ _	<i>range</i> = PVLLTP - PVHITP, & NaN <i>default</i> = NaN
PVLOPR PV Low Alarm Priority	NoAction Journal Low High Emergency Printer JnlPrint (R670 and later)	

PM Summer PV Algorithm

PM88-623

Page 5 of 5

09/08

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Alarming Display - N/A if PNTFORM = Component

\$LOSELCT (R681 and later) PV Low Selective Cutout	Cutout Allow	<i>range = Cutout, Allow default = Cutout</i>					
PVHHTP(RegCtl) PV Hi Hi Alarm Trip Point	_ _ _ _ _ _ _	<i>range = PVHITP to PVEUHI, & NaN default = NaN</i>					
PVHHPR PV High High Alarm Priority	NoAction (R670)	Journal	Low	High	Emergency	Printer	JnlPrint
\$HHSELCT (R681 and later) PV High High Selective Cutout	Cutout Allow	<i>range = Cutout, Allow default = Cutout</i>					
PVLLTP(RegCtl) PV Low Low Alarm Trip Point	_ _ _ _ _ _ _	<i>range = PVEULO - PVLOTP, & NaN default = NaN</i>					
PVLLPR PV Low Low Alarm Priority	NoAction (R670)	Journal	Low	High	Emergency	Printer	JnlPrint
\$LLSELCT (R681 and later) PV Low Low Selective Cutout	Cutout Allow	<i>range = Cutout, Allow default = Cutout</i>					
PVSGCHTP PV Significant Change Alarm Trip Point	_ _ _ _ _ _ _	<i>range = >=0.0, and NaN default = NaN</i>					
PVROCTP PV Pos Rate Of Change Trip Point	_ _ _ _ _ _ _	<i>range = >=0.0, and NaN default = NaN</i>					
PVROCPPR PV Pos Rate Of Chg Alarm Priority	NoAction (R670)	Journal	Low	High	Emergency	Printer	JnlPrint
\$RPSELCT (R681 and later) PV Positive Rate of Change Selective Cutout	Cutout Allow	<i>range = Cutout, Allow default = Cutout</i>					
PVROCNTP PV Neg Rate Of Change Trip Point	_ _ _ _ _ _ _	<i>range = >=0.0, and NaN default = NaN</i>					
PVROCNPR PV Neg Rate Of Chg Alarm Priority	NoAction (R670)	Journal	Low	High	Emergency	Printer	JnlPrint
\$RNSELCT (R681 and later) PV Negative Rate of Change Selective Cutout	Cutout Allow	<i>range = Cutout, Allow default = Cutout</i>					
BADPVPR Bad-PV Alarm Priority	NoAction (R670)	Journal	Low	High	Emergency	Printer	JnlPrint
ALENBST Point Alarm Enable Status	Enable Disable Inhibit	<u>Displayed</u> Yes No No		<u>Logged</u> Yes Yes No		<u>Reported To EIP</u> Yes Yes No	

PM88-624
Page 1 of 5
09/08

OVERVAL	_.._._	range = 0 to 100
Overview Display Value		default = 25

PM Switch CTL Algorithm

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Mode Configuration Display

RCASOPT Remote Cascade Option	None Ddc	Local cascade is the only valid cascade AM strategy stores to OP. No OP limits.
SHEDTIME Remote Cascade Shed Time		range = 0 to 1000 (seconds) default = 0 (mode shed disabled)
SHEDMODE (If Shedtime ≥ 1) Shed Mode	Man Bcas	Supervisory point will shed to Manual Supervisory point will shed to BackupCas
NMODE (RegCtl) RegCtl Point's Normal Mode	None Man Cas Bcas	No configured "normal" operating mode Manual is the "normal" operating mode Cascade is "normal" operating mode Backup Cas is "normal" operating mode

Mode Configuration Display (Continued) N/A if NMODE = None.

NMODATTR Normal Mode Attribute	None Operator Program	Parameter NMODE sets "normal" mode Operator sets "normal" operating mode Program sets "normal" operating mode
MODEPERM Mode Permissive	Permit NotPerm	Operator can change this point's mode Optr. cannot change this point's mode
\$MODESEL (R630 and later) Mode Selection List	Man Prog Cas Bcas	Man, Cas and Bcas mode, and Prog mode attribute are allowed for this data point.
EXTSWOPT External Mode Switching	None Ems	No external mode switching is allowed Ext. source can change point's mode

Reg Control Switch Algo Display

CTLEQN Control Equation Type	EqA EqB	Operator controls switch position Pgm. Or logic controls sw. position
TRACKING Selected Input Tracking	Off On	range = Off-On default = Off (Tracking disabled)
M # Of Initializable Control Algorithm Inputs		range = 2 to 4 default = 2
XEUHI X Input High Range in EUs		range = $\geq$ XEULO default = 100.0
XEULO X Input Low Range in EUs		range = $\leq$ XEUHI default = 0.0

N/A if CTLEQN = EqB, or if M < 2

SELXINP Selected X Input	SelectX1	SelectX2	SelectX3	SelectX4
------------------------------------	-----------------	----------	----------	----------

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

NOCINPTS		<u> </u>	<i>range = 0 to 4</i> <i>default = 0</i>
#Of Control Input Connections			
CISRC (Control-Input-Connection Source)			<u>Destination Parameter (CIDSTN)</u>
<u>Input#</u>	<u>CISRC (point.parameter)</u>		
1			
2			
3			
4			

Output Configuration Display

NOCOPTS		<i>range = 0 to 4</i>
# Of Control Output Connections	_	<i>default = 1</i>
CODSTN (Control-Output-Connection Destination)		
<u>Output #</u>	<u>CODSTN (point.parameter)</u>	
1	_._._._._._._._._._._._._._._._._.	
2	_._._._._._._._._._._._._._._._._.	
3	_._._._._._._._._._._._._._._._._.	
4	_._._._._._._._._._._._._._._._._.	
OPHILM		<i>range = OPLOLM - 106.9 & NaN</i>
Output High Limit In Percent	_._._._._	<i>default = 105.0</i>
OPLOLM		<i>range = -6.9 - OPHILM, & NaN</i>
Output Low Limit In Percent	_._._._._	<i>default = -5.0</i>
SAFEOP		<i>range = -6.9 to 106.9 & NaN</i>
Safe Output Limit In Percent	_._._._._	<i>default = NaN</i>
OPMCHLM		<i>range = >=0.0, and NaN</i>
Output Minimum Change In %	_._._._._	<i>default = 0.0</i>
OPROCLM		<i>range = >=0.0, and NaN</i>
OP Rate Of Change Limit In %	_._._._._	<i>default = NaN</i>
\$OPTOL		<i>range = 0.0 to 106.9</i>
Output Tolerance in %	_._._._._	<i>default = 0.0</i>
OUTIND (R620 and later)	Direct	4 - 20mA = 0 – 100%
Reverse Output Indicator	Reverse	20 - 4mA = 0 – 100%
		Note: With R670 and later, when this parameter is set to Reverse, the values of the displayed output and the related output parameters are changed. Refer to the definition of the OUTIND parameter in the PM Family Parameter Dictionary, XPM09.

PM Switch CTL Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Alarming Display - N/A if PNTFORM = Componnt

As you enter alarm trip points and alarm priorities in the next section please refer to the following alarm priority definitions and the note.

NoAction	Alarm is not reported to the system and not annunciated (R670 & later)
Journal	Alarm is historized, not reported to US, not annunciated
Low	Alarm is historized, reported to US, and annunciated
High	Alarm is historized, reported to US, and annunciated
Emergncy	Alarm is historized, reported to US, and annunciated
Printer	Not historized, reported to the printer, not annunciated
JnlPrint	Alarm historized, reported to the printer, not annunciated

Note: If you do not enter a trip point value for a given pair of trip-points and alarm-priorities, do not circle an alarm priority option for that pair (that is, no trip point, no alarm priority).

Alarming Display - N/A if PNTFORM = Componnt

\$AUXUNIT Auxiliary Unit(R620 and later)	_ ._	<i>range = Any configured LCN Unit ID</i> <i>default = NaN</i>
\$DLBADAL (R681 and later) Delay for BADCTL	None Offdelay	<i>range = Offdelay, None</i> <i>default = None</i>
DLTIME (R620 and later) Delay Time	_ . _ . _ . _	<i>range = 0 to 9999 seconds</i> <i>default = 0 seconds</i>
\$REALARM (R660 and later) Re-alarming Interval	_ . _ _	<i>range = 0 to 9999 minutes</i> <i>default = 0 minutes</i>
BADOCOPT BADOC Alarm Option	Off On	Bad Output Connection Alarm is not initially permitted Bad Output Connection Alarm is Initially permitted
BADOCPR BADOP Conn Alarm Priority	NoAction Journal Low High Emergncy JnlPrint Printer (R670 and later)	

OPALDB Output Alarm Deadband	_ . _ . _ . _ . _ . _ . _	<i>range =0 - 25.0 but ≤ (OPHITP-OPLOTP)/2</i> <i>default = 5.0 Output Units</i>
OPHITP Output High Alarm Trip Point	_ . _ . _ . _ . _ . _ . _	<i>range = OPLOTP to OPHILM and NaN</i> <i>default = NaN</i>
OPHIPR Output High Alarm Priority	NoAction Journal Low High Emergncy Printer JnlPrint (R670 and later)	

PM Switch CTL Algorithm

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Alarming Display - N/A if PNTFORM = Componnt

OPLOTP Output Low Alarm Trip Point	<u> </u>	<i>range = OPLOLM to OPHITP and NaN default = NaN</i>					
OPLOPR Output Low Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
BADCTLPR Bad-control Alarm Priority	NoAction (R670 and later)	Journal	Low	High	Emergency	Printer	JnlPrint
ALENBST Point Alarm Enable Status	Enable	<u>Displayed</u>		<u>Logged</u>		<u>Reported To EIP</u>	
	Disable	Yes		Yes		Yes	
	Inhibit	No		Yes		Yes	
		No		No		No	

PM Totalizer PV Algorithm

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Point Assignment Display

Point Assignment Display		
NAME Tag Name		range = Not applicable default = Blank
NODETYP Node Type	PM APM HPM	A PM Point Is Being Configured An APM Point Is Being Configured An HPM Point Is Being Configured
PNTFORM Point Form	FuLL Componnt	Point is fully displayed and alarmed Pt. is partially displayed but not alarmed

PTDESC Point Descriptor	_____	<i>range</i> = Not applicable <i>default</i> = Blank
EUDESC Engineering Units Descriptor	_____	<i>range</i> = Not applicable <i>default</i> = Blank
KEYWORD Keyword Descriptor	_____	<i>range</i> = Not applicable <i>default</i> = Blank
ASSOCDSP (R610 and later) Associated Display	_____	<i>range</i> = Not applicable <i>default</i> = Blank
\$CDETAIL (R620 and later) Point Custom Display	_____	<i>range</i> = Not applicable <i>default</i> = Blank
UNIT Process Unit Point Is Assigned To	____	<i>range</i> = Two Alphanumeric Characters <i>default</i> = Not applicable
NTWKNUM NIM's UCN That This Point Is In	____	<i>range</i> = 1 to 20 <i>default</i> = Not applicable
NODENUM PMM's Address On The UCN	____	<i>range</i> = 1 to 64 <i>default</i> = Not applicable
SLOTNUM Slot Number	____	<i>range</i> = 1-125 (but <= NPVSLOT) <i>default</i> = Not applicable

PRIMMOD Primary Module ID _____		N/A if PNTFORM = Component. <i>range</i> = Not Applicable <i>default</i> = Null
---	--	---

PM Totalizer PV Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

PV Algorithm Display

PVALGID PV Algorithm Identifier	NULL Totalizr	No affect Totalizer
---	--	------------------------

PV Configuration Display

PVEUHI PV High Range In Engr Units	_ _ _ _	<i>range</i> = PVEULO to PVEXEUHI <i>default</i> = 100.0
PVEULO PV Low Range In Engr Units	_ _ _ _	<i>range</i> = PVEXEULO to PVEUHI <i>default</i> = 0.0
PVFORMAT PV Decimal Point Format	D0 D2 D1 D3	D0 = 9999. D2 = 99.99 D1 = 999.9 D3 = 9.999
PVEXEUHI PV Extended Hi Range In EUs	_ _ _ _ _ _ _	<i>range</i> = >=PVEUHI <i>default</i> = 102.9
PVEXEULO PV Extended Lo Range In EUs	_ _ _ _ _ _ _	<i>range</i> = <=PVEULO <i>default</i> = -2.9
PVCLAMP PV Clamping Option	NoClamp Clamp	No clamping of the PV value Clamp PV value at range extension limit

N/A if PNTFORM = Componnt.

PVSRCOPT PV Source Option	OnlyAuto All	PV source selection is not available Selection from PVSOURCE is available
PVSOURCE PV Source	Auto Man Sub	Field-wiring/memory-fetch supplies PV PV is supplied by Operator or program A value is substituted by a CL program

TF PV Filter Lag Time In Minutes	_ _ _ _	<i>range</i> = 0.0 to 60.0 (minutes) <i>default</i> = 0.0 (PV will not be delayed)
--	---------	---

PM Totalizer PV Algorithm

PM88-625
Page 3 of 5
09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Reg PV Totalizer Algo Display

PVEQN PV Equation Type	<u>Option</u> EqA EqB EqC EqD EqE EqF	<u>Warm Restart Action</u> Continue Continue Continue Set Bad, and stop Set Bad, and stop Set Bad, and stop	<u>Bad Input Handling</u> Use zero Use last good value Set Bad, and stop Use zero Use last good value Set Bad, and stop
ACCTYPE Operation Mode	Analog Pulse	Use Analog except when using pulse inputs	
TIMEBASE Totalizer Time Base	Seconds Minutes Hours	PV & SP EUs (Gallons, etc.) per Second PV & SP EUs (Gallons, etc.) per Minute PV & SP EUs (Gallons, etc.) per Hour range = >= 0.0 default = 1.0	
C Scaling Constant		range = Not applicable default = 0.0	
RESETVAL Totalizer Reset Value		range = >= 0.0 and NaN default = NaN (bypasses limit check)	
CUTOFFLM Zero-flow/Belt-speed cut Off Limit		range = Not applicable, & NaN default = NaN	
AVTV Accum Value Target Value		range = >= 0.0 and NaN default = NaN	
AVDEV1TP Accum Value – 1st Dev Trip Pt		range = >= 0.0 and NaN default = NaN	
AVDEV2TP Accum Value – 2nd Dev Trip Pt		range = >= 0.0 and NaN default = NaN	
PISRC (PV-Input-Connection Source) <u>Input#</u>	<u>PISRC</u> (point.parameter)	<u>Destination Para</u> <u>-meter (PIDSTN)</u>	
1		P1	

Alarming Display – N/A if PNTFORM = Comppnt

As you enter alarm trip points and alarm priorities in the next section please refer to the following alarm Priority definitions and the note.

NoAction	Alarm is not reported to the system and not annunciated (R670 & later)
Journal	Alarm is historized, not reported to US, not annunciated
Low	Alarm is historized, reported to US, and annunciated
High	Alarm is historized, reported to US, and annunciated
Emergency	Alarm is historized, reported to US, and annunciated
Printer	Not historized, reported to the printer, not annunciated
JnlPrint	Alarm historized, reported to the printer, not annunciated

Note: If you do not enter a trip point value for a given pair of trip-points and alarm-priorities, do not circle an alarm priority option for that pair (that is, no trip point, no alarm priority).

PM Totalizer PV Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Alarming Display - N/A if PNTFORM = Componnt

\$AUXUNIT Auxiliary Unit (R620 and later)	_ _	<i>range</i> = Any configured LCN Unit ID <i>default</i> = NaN
\$ALDLOPT (R620 and later) Alarm Delay Option	None OffDlyLo OffDlyHi OffDlyEm OnDlyLo OnDlyHi OnDlyEm	Off Delay Lo Off Delay Hi Off Delay Emergency On Delay Lo On Delay Hi On Delay Emergency
\$DLBADAL (R681 and later) Delay for BADPV	None Offdelay	<i>range</i> = Offdelay, None <i>default</i> = None
\$DLTIME (R620 and later) Delay Time	_ _ _	<i>range</i> = 0 to 9999 seconds <i>default</i> = 0 seconds
\$REALARM (R660 and later) Re-alarming Interval	_ _ _	<i>range</i> = 0 to 9999 minutes <i>default</i> = 0 minutes
PVALDB PV Alarm Deadband In %	Half One Two Three Four Five EU	
PVALDBEU PV Alarm Deadband In EU	_ _ _	<i>range</i> >= 0.0 <i>default</i> = 1.0
PVHITP PV High Alarm Trip Point	_ _ _ _ _ _	<i>range</i> = PVLOTP - PVHHTP, & NaN <i>default</i> = NaN
PVHIPR PV High Alarm Priority	NoAction Journal Low	High Emergency Printer JnlPrint
\$HISELCT (R681 and later) PV High Selective Cutout	Cutout Allow	<i>range</i> = Cutout, Allow <i>default</i> = Cutout
PVLOTP PV Low Alarm Trip Point	_ _ _ _ _ _	<i>range</i> = PVLLTP - PVHITP, & NaN <i>default</i> = NaN
PVLOPR PV Low Alarm Priority	NoAction Journal Low	High Emergency Printer JnlPrint
\$LOSELCT (R681 and later) PV Low Selective Cutout	Cutout Allow	<i>range</i> = Cutout, Allow <i>default</i> = Cutout
PVHHTP(RegCtl) PV Hi Hi Alarm Trip Point	_ _ _ _ _ _	<i>range</i> = PVHITP to PVEUHI, & NaN <i>default</i> = NaN
PVHHPR PV High High Alarm Priority	NoAction Journal Low	High Emergency Printer JnlPrint
\$HHSELCT (R681 and later) PV High High Selective Cutout	Cutout Allow	<i>range</i> = Cutout, Allow <i>default</i> = Cutout
PVLLTP(RegCtl) PV Low Low Alarm Trip Point	_ _ _ _ _ _	<i>range</i> = PVEULO - PVLOTP, & NaN <i>default</i> = NaN

PM88-625
Page 5 of 5
09/08

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Alarming Display - N/A if PNTFORM = Component

[illegible]

PM Variable Dead Time with Lead Lag PV Algorithm

PM88-626
Page 1 of 5
09/08

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Point Assignment Display

NAME Tag Name		<i>range</i> = Not applicable <i>default</i> = Blank
NODETYP Node Type	PM APM HPM	A PM Point Is Being Configured An APM Point Is Being Configured An HPM Point Is Being Configured
PNTFORM Point Form	FuLL Componnt	Point is fully displayed and alarmed Pt. is partially displayed but not alarmed

PTDESC Point Descriptor		<i>range</i> = Not applicable <i>default</i> = Blank
EUDESC Engineering Units Descriptor		<i>range</i> = Not applicable <i>default</i> = Blank
KEYWORD Keyword Descriptor		<i>range</i> = Not applicable <i>default</i> = Blank
ASSOCDSP (R510 and later) Associated Display		<i>range</i> = Not applicable <i>default</i> = Blank
\$CDETAIL (R620 and later) Point Custom Display		<i>range</i> = Not applicable <i>default</i> = Blank
UNIT Process Unit Point Is Assigned To		<i>range</i> = Two Alphanumeric Characters <i>default</i> = Not applicable
NTWKNUM NIM's UCN That This Point Is In		<i>range</i> = 1 to 20 <i>default</i> = Not applicable
NODENUM PMM's Address On The UCN		<i>range</i> = 1 to 64 <i>default</i> = Not applicable
SLOTNUM Slot Number		<i>range</i> = 1-80(but <= NPVSLOT) <i>default</i> = Not applicable

N/A if PNTFORM = Componnt.

PRIMMOD Primary Module ID		<i>range</i> = Not Applicable <i>default</i> = Null
-------------------------------------	--	--

PM88-626

Page 2 of 5

09/08

PM Variable Dead Time with Lead Lag PV Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

PV Algorithm Display

PVALGID PV Algorithm Identifier	NULL VdtLdLag	No affect Variable Dead Time with Lead Lag
---	-------------------------	---

PV Configuration Display

PVEUHI PV High Range In Engr Units	_ _ _ _ _ _ _	<i>range</i> = PVEULO to PVEXEUHI <i>default</i> = 100.0
PVEULO PV Low Range In Engr Units	_ _ _ _ _ _ _	<i>range</i> = PVEXEULO to PVEUHI <i>default</i> = 0.0
PVFORMAT PV Decimal Point Format	D0 D2 D1 D3	D0 = 9999. D2 = 99.99 D1 = 999.9 D3 = 9.999
PVEXEUHI PV Extended Hi Range In EUs	_ _ _ _ _ _ _ _ _ _ _ _ _	<i>range</i> = >=PVEUHI <i>default</i> = 102.9
PVEXEULO PV Extended Lo Range In EUs	_ _ _ _ _ _ _ _ _ _ _ _ _	<i>range</i> = <=PVEULO <i>default</i> = -2.9
PVCLAMP PV Clamping Option	NoClamp Clamp	No clamping of the PV value Clamp PV value at range extension limit

PV Configuration Display (Continued)

N/A if PNTFORM = Componnt.

PVSRCOPT PV Source Option	OnlyAuto All	PV source selection is not available Selection from PVSOURCE is available
PVSOURCE PV Source	Auto Man Sub	Field-wiring/memory-fetch supplies PV PV is supplied by Operator or program A value is substituted by a CL program

TF PV Filter Lag Time In Minutes	_ _ _ _ _ _ _	<i>range</i> = 0.0 to 60.0 (minutes) <i>default</i> = 0.0 (PV will not be delayed)
--	---------------	---

N/A if PNTFORM = Componnt.

PVTV PV Target Value In EUs	_ _ _ _ _ _ _ _ _ _ _ _ _	<i>range</i> = PVEXEULO-PVEXEUHI, & NaN <i>default</i> = NaN
OVERVAL Overview Display Value	_ _ _ _ _ _ _	<i>range</i> = 0 to 100 <i>default</i> = 25

PM88-626
Page 3 of 5
09/08

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

PVEQN	PV Equation Type	EqA EqB EqC EqD	One lead and two lags Fixed dead time Variable dead time Variable dead time and then two lags	PVEQN			
				<u>A</u>	<u>B</u>	<u>C</u>	<u>D</u>
C		_ _ _ _ _ _ _ _ _	<i>range = Not applicable</i> <i>default = 1.0</i>	A	B	C	D
Scaling Constant							
D		_ _ _ _ _ _ _ _ _	<i>range = Not applicable</i> <i>default = 0.0</i>	A	B	C	D
Overall Scaling Constant							
TD		_ _ _ _ _ _ _ _ _	<i>range = >=0.0</i> <i>default = 0.0</i>		B		
Total Dead Time In Minutes							
TLG1		_ _ _ _ _ _ _ _ _	<i>range = 0.0 – 1440.0</i> <i>default = 0.0</i>	A			D
Lag Time Constant #1 Time In Minutes							
TLG2		_ _ _ _ _ _ _ _ _	<i>range = 0.0 – 1440.0</i> <i>default = 0.0</i>	A			D
Lag Time Constant #2 Time In Minutes							
TLD		_ _ _ _ _ _ _ _ _	<i>range = - 1440.0 to + 1440.0</i> <i>default = 0.0</i>	A			
Lead Time Constant In Minutes							
CUTOFFLM		_ _ _ _ _ _ _ _ _	<i>range = >=0, & NaN</i> <i>default = NaN</i>			C	D
Zero-flow/Belt-speed Cut Off Limit							
C1		_ _ _ _ _ _ _ _ _	<i>range = >=0.0</i> <i>default = 1.0</i>			C	D
Scaling Constant for Input P1							
C2		_ _ _ _ _ _ _ _ _	<i>range = >=0.0</i> <i>default = 1.0</i>			C	D
Scaling Constant for Input P2							
D1		_ _ _ _ _ _ _ _ _	<i>range = 0.0 –400.0</i> <i>default = 0.0</i>			C	D
Fixed Dead Time In Minutes							
D2		_ _ _ _ _ _ _ _ _	<i>range = >=0.0</i> <i>default = 0.0</i>			C	D
Bias Constant for Input P2							
NLOC		_ _ _ _ _ _ _ _ _	<i>range = 2 to 30</i> <i>default = 30</i>			C	D
# Locations In Delay Table							
PISRC (PV-Input-Connection Source)				<u>Destination</u>		<u>Equation</u>	
<u>Input</u>		<u>PISRC (point.parameter)</u>		<u>(PIDSTN)</u>		<u>(PVEQN)</u>	
1	_ _ _ _ _ _ _ _ _			P1	A	B C D	
2	_ _ _ _ _ _ _ _ _			P2		C D	

PM Variable Dead Time with Lead Lag PV Algorithm

Unit:	Tagname:	Engineer:	Date:
--------------	-----------------	------------------	--------------

Alarming Display – N/A if PNTFORM = Componnt

As you enter alarm trip points and alarm priorities in the next section please refer to the following alarm Priority definitions and the note.

NoAction	Alarm is not reported to the system and not annunciated (R670 & later)
Journal	Alarm is historized, not reported to US, not annunciated
Low	Alarm is historized, reported to US, and annunciated
High	Alarm is historized, reported to US, and annunciated
Emergency	Alarm is historized, reported to US, and annunciated
Printer	Not historized, reported to the printer, not annunciated
JnlPrint	Alarm historized, reported to the printer, not annunciated

Note: If you do not enter a trip point value for a given pair of trip-points and alarm-priorities, do not circle an alarm priority option for that pair (that is, no trip point, no alarm priority).

\$AUXUNIT Auxiliary Unit (R620 and later)	_ _	<i>range = Any configured LCN Unit ID default = NaN</i>
\$ALDLOPT (R620 and later) Alarm Delay Option	None OffDlyLo OffDlyHi OffDlyEm OnDlyLo OnDlyHi OnDlyEm	Off Delay Lo Off Delay Hi Off Delay Emergency On Delay Lo On Delay Hi On Delay Emergency
\$DLBADAL (R681 and later) Delay for BADPV	None Offdelay	<i>range = Offdelay, None default = None</i>
DLTIME (R620 and later) Delay Time	_ _ _ _	<i>range = 0 to 9999 seconds default = 0 seconds</i>
\$REALARM (R660 and later) Re-alarming Interval	_ _ _ _	<i>range = 0 to 9999 minutes default = 0 minutes</i>
PVALDB PV Alarm Deadband In %	Half One Two Three	Four Five EU
PVALDBEU PV Alarm Deadband in EU	_ _ _ _	<i>range >= 0.0 default = 1.0</i>
PVHITP PV High Alarm Trip Point	_ _ _ _ _ _ _	<i>range = PVLOTP - PVHHTP, & NaN default = NaN</i>
PVHIPR PV High Alarm Priority	NoAction Journal Low	High Emergency Printer JnlPrint
\$HISELCT (R681 and later) PV High Selective Cutout	Cutout Allow	<i>range = Cutout, Allow default = Cutout</i>
PVLOTP PV Low Alarm Trip Point	_ _ _ _ _ _ _	<i>range = PVLLTP - PVHITP, & NaN default = NaN</i>
PVLOPR PV Low Alarm Priority	NoAction Journal Low	High Emergency Printer JnlPrint
\$LOSELCT (R681 and later) PV Low Selective Cutout	Cutout Allow	<i>range = Cutout, Allow default = Cutout</i>

PM88-626
Page 5 of 5
09/08

Unit:	Tagname:	Engineer:	Date:
PVHHTP(RegCtl) PV Hi Hi Alarm Trip Point	_ _ _ _ _ _ _	<i>range</i> = PVHITP to PVEUHI, & NaN <i>default</i> = NaN	
PVHHPR PV High High Alarm Priority	NoAction (R670 and later)	Journal	Low High Emergency Printer JnlPrint
\$HHSELCT (R681 and later) PV High High Selective Cutout	Cutout Allow	<i>range</i> = Cutout, Allow <i>default</i> = Cutout	
PVLLTP(RegCtl) PV Low Low Alarm Trip Point	_ _ _ _ _ _ _	<i>range</i> = PVEULO – PVLOTP, & NaN <i>default</i> = NaN	
PVLLPR PV Low Low Alarm Priority	NoAction (R670 and later)	Journal	Low High Emergency Printer JnlPrint
\$LLSELCT (R681 and later) PV Low Low Selective Cutout	Cutout Allow	<i>range</i> = Cutout, Allow <i>default</i> = Cutout	
PVSGCHTP PV Significant Change Alarm Trip Point	_ _ _ _ _ _ _	<i>range</i> = >=0.0, and NaN <i>default</i> = NaN	
PVROCPTP PV Pos Rate Of Chg Trip Point	_ _ _ _ _ _ _	<i>range</i> = >=0.0, and NaN <i>default</i> = NaN	
PVROCPPR PV Pos Rate Of Chg Alarm Priority	NoAction (R670 and later)	Journal	Low High Emergency Printer JnlPrint
\$RPSELCT (R681 and later) PV Positive Rate of Change Selective Cutout	Cutout Allow	<i>range</i> = Cutout, Allow <i>default</i> = Cutout	
PVROCNTP PV Neg Rate Of Chg Trip Point	_ _ _ _ _ _ _	<i>range</i> = >=0.0, and NaN <i>default</i> = NaN	
PVROCNP PV Neg Rate Of Chg Alarm Priority	NoAction (R670 and later)	Journal	Low High Emergency Printer JnlPrint
\$RNSELCT (R681 and later) PV Negative Rate of Change Selective Cutout	Cutout Allow	<i>range</i> = Cutout, Allow <i>default</i> = Cutout	
BADPVPR Bad-PV Alarm Priority	NoAction (R670 and later)	Journal	Low High Emergency Printer JnlPrint
ALENBST Point Alarm Enable Status	Enable Disable Inhibit	<u>Displayed</u> Yes No No	<u>Logged</u> Yes Yes No <u>Reported To EIP</u> Yes Yes No

PM88-627
Page 1 of 2
12/01

Operating Configuration Display			
SEQSLTSZ			
Sequence Slot Size	_ _ _ _	range = >=0	
		default = 0	
CNTLOCK	Operator	Engineer	Lowest access lock that
Control Lock	Supervis	Program	permits certain stores

PM Process Module Point

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

Operating Configuration Display

SPLOCK		<i>Operator</i>	Engineer	Lowest access lock that
Setpoint Lock		Supervis	Program	Permits stores to FL & NNs
RSTROPT		<i>Off</i>		
Restart Option		Restart	<i>default = Off</i>	
ACP				<i>range = Not applicable</i>
Advance Control Point	_._._._._._._._._._._._._._.__			<i>default = NaN</i>

Alarming Display

SEQPR	NoAction	Alarm is not reported to the system and not annunciated
Sequence Alarm Priority	Journal	Alarm is historized, not reported to US, not annunciated
	Low	Alarm is historized, reported to US, and annunciated
	High	Alarm is historized, reported to US, and annunciated
	Emergency	Alarm is historized, reported to US, and annunciated
	Printer	Not historized, reported to the printer, not annunciated
	JnlPrint	Alarm historized, reported to the printer, not annunciated

PM88-628
Page 1 of 2
09/08

PRIMMOD Primary Module ID	_._._._._._._._._._._._._._._.__	<i>range</i> = Not Applicable <i>default</i> = Null
-------------------------------------	----------------------------------	--

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

default = ON

default = OFF

default = OFF

MAGENTA

MAGENTA

default = NaN

Re-alarms Interval

Off Normal Selective Cutout

default = Cutout

default = Enable

```
default = Null
```

TIMEBASE	SECONDS	<i>range = Seconds/Minutes</i>
Timer Base Period	MINUTES	<i>default = Seconds</i>
SP		<i>range = 0 – 32000</i>
Set Time	_ _ _ _ _ _ _	<i>default = 0</i>

Unit:	Tagname:	Engineer:	Date:
-------	----------	-----------	-------

[illegible]

default = Null

Operating Configuration Display		
PV		<i>range</i> = Not applicable
Numeric PV value	_ _ _ _ _ _ _	<i>default</i> = 0.0
PVFORMAT	D0	D1 <i>range</i> = D0 – D3
PV Decimal Format	D2	<i>default</i> = D1

