



USBasp

Home

USBasp - USB programmer for Atmel AVR controllers

USBasp is a USB in-circuit programmer for Atmel AVR controllers. It simply consists of an ATMega48 or an ATMega8 and a couple of passive components. The programmer uses a firmware-only USB driver, no special USB controller is needed.



Features

- Works under multiple platforms. Linux, Mac OS X and Windows are tested.
- No special controllers or smd components are needed.
- Programming speed is up to 5kBytes/sec.
- SCK option to support targets with low clock speed (< 1,5MHz).
- Planned: serial interface to target (e.g. for debugging).

Download

Firmware and circuit

The following packages include circuit and firmware.

[usbasp.2007-07-23.tar.gz](#) (176 kB)

[usbasp.2006-12-29.tar.gz](#) (118 kB) Supports programmers with ATMega48 and ATMega8.

[usbasp.2006-09-16.tar.gz](#) (116 kB) New VID/PID!

[usbasp.2005-11-14.tar.gz](#) (175 kB)

[usbasp.2005-07-03.tar.gz](#) (166 kB)

[usbasp.2005-04-21.tar.gz](#) (169 kB)

Please refer to [Readme.txt](#) for details on building, installing and using USBasp.

Software

AVRDUDE supports USBasp since version 5.2! [Get AVRDUDE](#).

Hardware

Schematic



**USBasp_CH.zip**

by Christian Heigemeyr

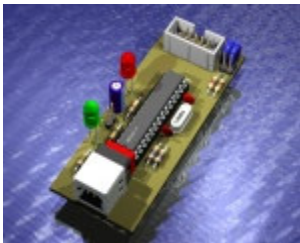
Single-Side PCB, with some SMD 0805 components, PDF-files
With additional buttons for reset and disconnection of the target**USBasp.sch, USBasp.pcb****ComponentSide.pdf, TopSide.pdf, Schematics.pdf**

by Zhurov Pavel

Single-Side PCB, P-CAD 2002 format and PDF files
Crosspiece TXD and RXD are added for the ISP connector**usbasp_gr.rar**

by J.A. de Groot

The board is single sided (EAGLE format), measures 3 by 8 cm and uses only regular components.

**USBasp Howto** (in Dutch). There is also a pdf file with 6 devices on one euro-card.**usbaspb_mg.zip**

by Matthias Görner

Single-Side PCB, eagle-format, with PS/PDF-files
integrated sockets for target chips ATmega8 and ATmega32**Tarball with layout**

by Hannes Östlund

Doubleside-Side PCB, SMD components, very small



Links

 <http://www.obdev.at/products/avrusb/> Firmware-only AVR USB driver <http://libusb.sourceforge.net/> libusb <http://libusb-win32.sourceforge.net/> LibUsb-Win32 <http://www.nongnu.org/avrdude/> AVRDUDE - AVR Downloader/UploaDEr